

Use & Care Guide



This guide contains useful information, read it carefully.

APPLY FOR THE FOLLOWING MODELS:
NWR2001Q, NWR2001G, NWR0001Q, NWR0001G,
NWR20001D, NWR0001D

Nominal Technical Specifications

Nominal Current	6,0 A
Frequency	60 Hz
Voltage	110-127V~

Manufactured by Industrias Acros Whirlpool S.A. de C.V.
Antigua carretera a Roma km 9
Col. Milagro
Apodaca N.L.
México, 66600
Phone (01-81) 83 29 21 00

Important safety instructions

WARNING

To reduce the risk of fire, electrical shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the refrigerator.
- Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous ... even if they will "just sit in the garage a few days".
- If you are getting rid of your old refrigerator, do it safely.
- Never allow children to operate, play with, or crawl inside the refrigerator.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.
- We suggest to remove the door or thigh it with a resistant cord.
- FOR YOUR SAFETY•
- DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.
- IF THE ELECTRICAL CORD IS DAMAGED, OUR SERVICE DEPARTMENT OR A QUALIFIED ELECTRICIAN SHOULD CHANGE IT.
- SAVE THESE INSTRUCTIONS.

Install in correct way

WARNING

Electrical shock hazard

The refrigerator must be properly grounded.

 
Do not modify the electrical cord
Do not use an extension cord with this appliance, consult with a qualify technician any doubts about the proper grounding of this appliance.

If your wall outlet is not proper one have a qualify technician install it.

Not complying with the above precautions may result in high risk of injury and even death

Before using your refrigerator


- Do not use the refrigerator in an area where the room temperature will fall below 13 °C (55 °F).
- Keep the refrigerator out of the weather.
- Connect the refrigerator only to the proper kind of outlet, with the correct electrical supply and grounding.
- Do not load the refrigerator with food before it has time to get properly cold.
- Use the refrigerator only for the uses described in this manual.
- Properly maintain the refrigerator.
- Be sure the refrigerator is not used by anyone unable to operate it properly.
- The refrigerator is only for domestic use.

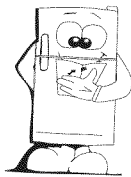

How to install the refrigerator


Before connecting the new refrigerator follow these steps:

 1. Remove all packing material and the wood bases.
2. Install your refrigerator under the following conditions:
 - Allow 7,5 cm (3 inches) between overhead cabinets and refrigerator top.
 - Allow at least 5 cm (2 inches) between the refrigerator condenser on the back and the wall.
 - Allow 1,25 cm (1/2") on each side of the refrigerator for ease of installation.
- If the hinge side of the refrigerator is to be against the wall, you might want to leave extra space so the door can be opened wider.

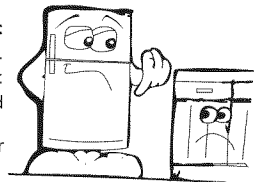

3. Levelling the refrigerator

 - Remove the wooden supports.
- To raise or lower the front of the refrigerator, turn each screw in a clockwise or counterclockwise direction (figure 1).
- For greater levelling accuracy you should place a spirit level on the upper surface of the refrigerator.
- It is recommended to incline lightly back the refrigerator in order to let the door close by itself.

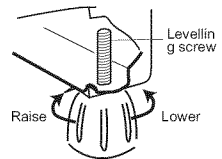

4. Before starting the refrigeration process allow the refrigerator to rest from 2 to 3 hours in order to let the gas and oil be settled.

Connecting your refrigerator

A 110-127 V~, 60 Hz AC only 15 or 20 A fused and properly grounded electrical supply is required.


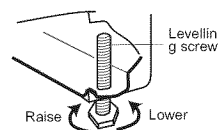 


Figure 1.

Grounding method

Your refrigerator has an electrical cord provided with 3 prong grounding plug. To minimize the possibility of electrical shock, the cord must be plugged into a mating 3 prong grounding type wall outlet according to national electrical code and all local codes.

 If plug will not fit the outlet, is your responsibility to have a proper outlet installed by a qualified electrician.

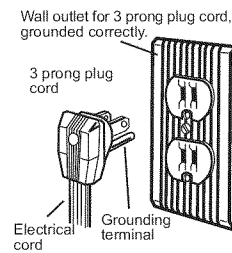


How to use the refrigerator

Controls

Your refrigerator has two controls that let you regulate the temperature in the freezer and refrigerator compartments.

When you plug in the refrigerator for the first time:

 
- Set the temperature control at MED (normal). Temperature control adjustments range from MIN (warmest) to MAX (coldest).
- Turning the temperature control to Apagado (Off) stops cooling in both the refrigerator and freezer compartments. But it does not disconnect the refrigerator from the power supply.
- Give the refrigerator time to cool down completely before adding food. This could take several hours.
- Adjust the temperature control to have food as cold as you like. The settings indicated above should be correct for normal, household refrigerator usage.

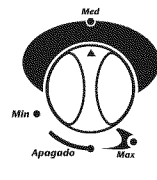

To change the refrigerator light

1. Disconnect refrigerator from power supply.
2. Remove the light cover. (Use 1/4" hexagonal box screwdriver).
3. Replace with a 40 watts appliance bulb.
4. Replace light cover.
5. Reconnect refrigerator to power supply.

 
NOTE: Not all appliance bulbs will fit your refrigerator. Be sure to replace a bulb with one of the same size and shape.

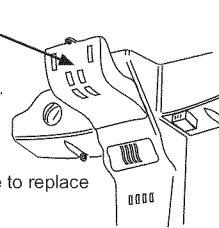

Deodorizer (some models)

Your refrigerator is provided with a deodorizer that acts as a filter, absorbing unpleasant odors that circulate inside the refrigerator.

 The deodorizer is built in the cold air circulation duct and it does not require any special attention.

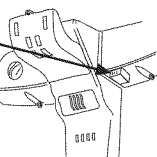

How to clean your refrigerator

Before cleaning, disconnect your refrigerator to prevent electrical shock hazard.

- Use a tablespoon with baking soda mixed in a liter of water to clean the interior (it absorb odors).
- Clean refrigerator interior with soft cloth and a mild detergent. Never use fibers or sharp objects.
- Clean the condenser coils at least every six months. Use a soft cloth or a sponge to eliminate accumulated dust.

How to rearrange your glass or wire shelves

 
Adjust the refrigerator shelves to match the way you use your refrigerator.

To remove the shelves:

1. Remove items from the shelf.
2. Lift back of shelf over stop.
3. Slide shelf straight out.

To replace the shelves:


1. Slide back of shelf into shelf track in wall of cabinet.
2. Guide front of shelf into shelf track.
3. Slide shelf in the rest of the way.

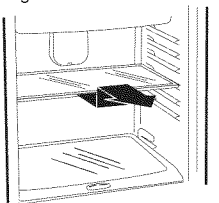

How to remove the multipurpose drawer (some models)


In the indicated positions, this drawer reaches temperatures up to 0 °C; allowing you to have fresh food for a longer period of time. To get the extra cold position, introduce the shelf on positions one and five indicated by arrows on the side wall of your refrigerator. It is also possible to use it as an additional crisper when you place it in the last position.

 1. Slide the drawer outwards until it stops.
2. Lift the front and slide outwards.
3. Place it again inserting the rear of the crisper in the slots and slide toward inside until it reaches de boundary.

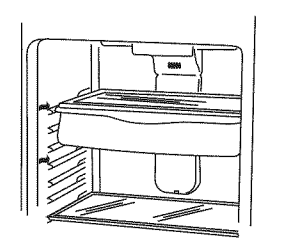


How to use the adjustable multipositions shelf (some models)

 1. Remove all the items from the shelf.
2. Hold the lower part of the shelf with both hands and pull the tabs upwards as indicated by the arrow of the shelf, hold them in this way until they reach the desired position and release the tabs in order to fix the shelf.

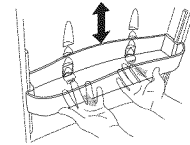


Crisper divider (some models)

 This item allows to have two divisions in the crisper, the upper part is specially designed for vegetables and small or delicate fruits.

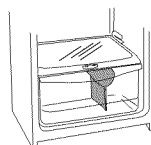

Humidity control of the crisper (Variation between models)

 For the best preservation of fruits and vegetables, we include this control that regulates the entrance of cold air into the crisper. Fig. 1 slide the control up to down. Fig. 2 slide the control side to side. Both controls permit the air control.

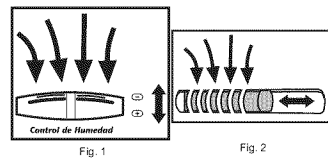


How to change the swinging of the doors (some models)

Reversing the door swing should be performed by a qualified person.

Important Information

- Before you begin, turn refrigerator OFF, unplug it, and remove any food from door shelves.
- When removing hinges, keep doors closed until ready to lift free from cabinet.
- To remove doors, start at the top hinge and work your way down.
- To replace doors, start at the bottom hinge and work your way up.
- Line up doors so they are centered between the sides of the cabinet and parallel with each other.
- Seal all unused openings with screws or plastic plugs. Moisture will enter any openings.

 NOTE: After the doors are reversed, reinstall the handles. If the doors are not shutting on their own, see the "How to install the refrigerator" section.

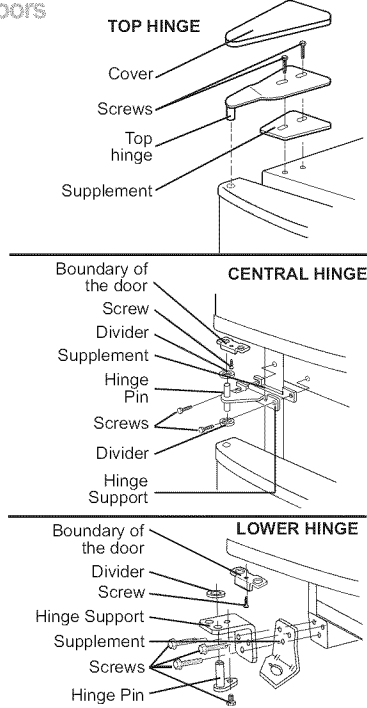

Before calling the technician

IMPORTANT

BEFORE CALLING THE TECHNICIAN IT IS VERY IMPORTANT TO VERIFY THE FOLLOWING INFORMATION:

IF AFTER READING THE USE AND REFERENCE GUIDE YOU HAVE QUESTIONS, THIS GUIDE MAY OFFER YOU SOME SOLUTIONS TO PROBLEMS YOU CAN DETECT AND CORRECT YOURSELF IN YOUR HOME.

IF THE REFRIGERATOR IS NOT WORKING

 
- Plug firmly into a live circuit. Do not use an extension cord.
- Check the power supply. It could be damaged. Connect another appliance and see if it works normally.
- Do not connect various appliances at the same time, the electrical installation will over load.
- Verify that the temperature control is in the ON position.
- Avoid placing the appliance close to a hot source.
- Close the doors completely. Check to see if the gaskets are dirty or sticky.
- Level the refrigerator. Remove wood supports and adjust the roller levels (FIGURE 1).
- Do not overload the refrigerator. The air circulation will be deficient.
- Set the temperature control in MED (middle position) and wait at least 24 hours before making another change of temperature.

THE REFRIGERATOR SEEMS TO RUN TOO MUCH

- Verify if the condenser has lint or is dirty (FIGURE 1).
- Avoid opening the doors constantly or for long periods.
- Do not introduce warm food and keep them covered.

IS THE REFRIGERATOR MAKING UNFAMILIAR SOUNDS

- Verify there is nothing on top or behind.
- The compressor does not work properly, check if you are using the right voltage
- Verify the light intensity. If it is low, consult with an qualified technician (FIGURE 1).

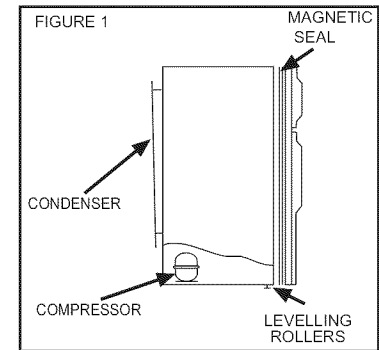

IF AFTER FOLLOWING THE INSTRUCTIONS THE REFRIGERATOR STILL WITH PROBLEMS CALL AN AUTHORIZED SERVICE CENTER

WARRANTY

WHIRLPOOL MÉXICO S.A. DE C.V.

Antigua carretera a Roma km 9, Col. Milagro, Apodaca, N.L., México, 66600 Phone (01-81) 83-29-21-00, in the terms of this policy, we guarantee to the buyer and the consumer the WHIRLPOOL refrigerator identified in this following policy:

PROTECT THE FOLLOWING MODELS:
NWR2001Q, NWR2001G, NWR0001Q, NWR0001G,
NWR20001D, NWR0001D

COVERED CONCEPTS:

Manufacturing defects that prevent the partial or total product functioning according to the terms of this policy. In this case the repair will be made at no charge for the buyer or consumer, in case that parts and/or components replacement is required will at manufacturer expenses, so are the shipping and handling costs with in the service and labor guarantee network.

WHIRLPOOL MÉXICO S.A. DE C.V. WILL NOT PAY:

- When the refrigerator is used in other than normal, single family household use.
- When the refrigerator was not used according with the use and care guide attached.
- When the refrigerator would have been repaired by any unauthorized service.

PROCEDURE TO MAKE EFFECTIVE THE WARRANTY:

The procedure to use the warranty if the consumer considers that one of the events cited above occurred. He or She should contact one of the authorized service centers.

TERMS:

This is a 12 MONTHS warranty in all refrigerator parts beginning the day the buyer or consumer receives the refrigerator to his satisfaction.

Identify format

CONSUMER NAME: _____
ADDRESS: _____ PHONE: _____
DEALER NAME: _____
ADDRESS: _____ PHONE: _____
PRODUCT: _____ MODEL: _____
SERIAL NUMBER: _____ DELIVERY DATE: _____

DEALER SIGNATURE AND STAMP
(Indicate precise street, col. State and zip code.)

IMPORTANT NOTE

This document must be shown in any transaction related with this warranty

THE CONSUMER CAN REQUEST THE DEALER WHERE THE PURCHASE WAS DONE THE WARRANTY COVERED BY THIS POLICY.

In case of loss of policy, the dealer will issue a new one, when required with the proper bill of sale or invoice.

To buy accessories, call the consumer assistance center toll free:

01 800 8 300 400