 


**VIORE**<sup>TM</sup> TECHNOLOGY & INNOVATION

# OPERATING INSTRUCTIONS

## **32" 1080p/120Hz LCD Television with LED Backlight**

**LED32VFZ61**

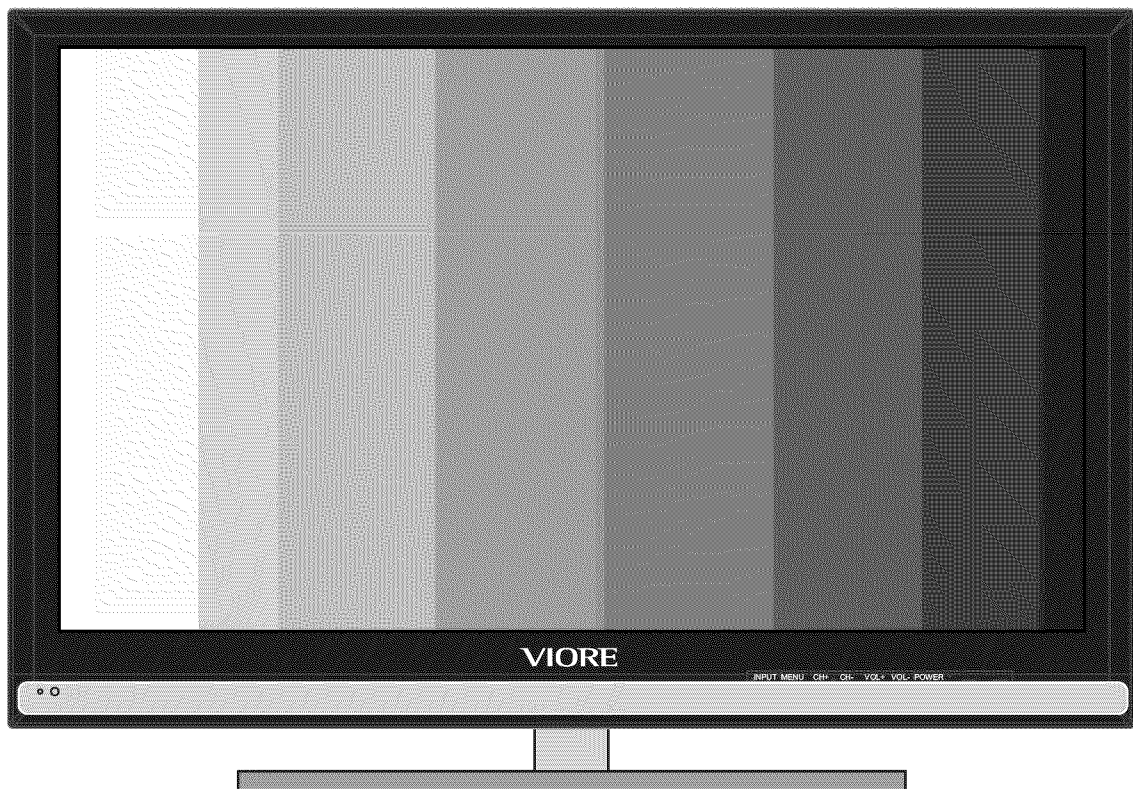

### **AIR (TV)/CABLE MODE SELECTION**

The Air/CABLE menu option is set to the "CABLE" (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the "Air" mode. Please refer to page 16 of the owner's manual for the details of this menu.

**STOP**

FOR QUESTIONS OR TECHNICAL SUPPORT  
Please call:  
**1-877-777-1428** (USA / PUERTO RICO)  
**1-877-777-1429** (CANADA)  
Please do not return this TV to the store.

# CONTENTS

## Safety Precautions

- Caution ..... 1
- Safety Information ..... 2

## User Guidance Information

- Names of each part(Front View) / Accessories ..... 3
- Names of each part(Back View) ..... 4
- Mounting on a Desktop / Installation Precautions ..... 5
- Installing an Antenna ..... 6
- Remote control ..... 7
- Precautions / How to use remote control ..... 8

## Basic Use

- Powering the LCD TV / Selecting input source ..... 9

## Application

- Operating the Menu ..... 10
- Customizing the PICTURE Settings ..... 11
- Customizing the SOUND Settings ..... 12
- Customizing the TIMER Settings ..... 13
- Customizing the SETUP Settings ..... 14
- Customizing the LOCK Settings ..... 15
- Customizing the CHANNEL Settings ..... 16

## Maintenance and Service

- Trouble shooting ..... 18
- Specifications ..... 19

## Caution



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### **Correct disposal of this Product**

Waste Electrical & Electronic Equipment (WEEE)

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre.

## Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

### **Electrical safety**

- The TV set should only be connected to a mains supply which matches that stated on the label.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Do not place any connecting wires where: they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm or while leaving the TV for long periods, set the switch off.
- Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas, such as Bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if: the mains plug or cable is damaged, liquid is spilt onto the set, or if it is accidentally exposed to water or moisture, anything accidentally penetrates the ventilation slots, the set doesn't work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. This apparatus must only be serviced by qualified personnel.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for a long period.
- Do not break open or throw exhausted batteries on a fire.

### **Physical safety**

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petrol based fluids.
- Do not install near any heat sources such as radiators, heat registers stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally or has been dropped.
- Please always connect an apparatus with Class I structure to a main socket with protective earthing connection.
- Please make sure both main plug and appliance coupler work properly.

## Names of each part

### Front View



○ Led Indicator

○ Remote Control window  
(Keep clear)

INPUT MENU CH+ CH- VOL+ VOL- POWER

 
1. (IR) Infrared Receiver: Receives IR signals from the remote control.  
(Power on/Standby)LED Indicator: Press **POWER** to turn on and off.

Indicator on(Red)  
Indicator on(Green)

Standby mode  
Power on mode


## Accessories

- The configuration of the components may look different from the following illustration.

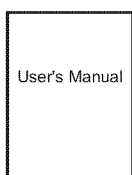


User's Manual

 User's Guide




Remote Control

 


Batteries for  
Remote Control  
(Size AAA x 2 pcs)

## Names of each part

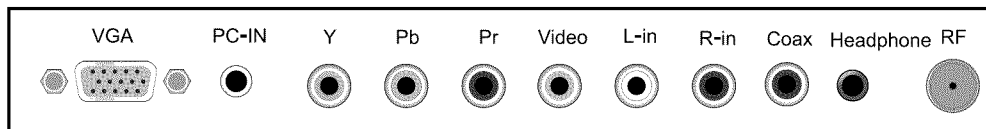 

- VGA:** For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.
- PC IN:** Connect it to the audio output terminal of PC.
- YPbPr:** Connect them to the YPbPr video output terminal of DVD.(used in YPbPr source)
- VIDEO:** Connect it to video output terminal of DVD.
- L/R in:** Connect them to the audio output terminal of DVD
- Coax:** Digital audio output.
- Headphone :**Headphone output.
- RF:** Connect antenna or cable 75 Ohm coaxial to receive TV signal.
- Service:** USB port for service(not for playing digital media files).
- HDMI1/2/3 :** Connect it to the HDMI of DVD or other equipment.

## Placing on a Desktop

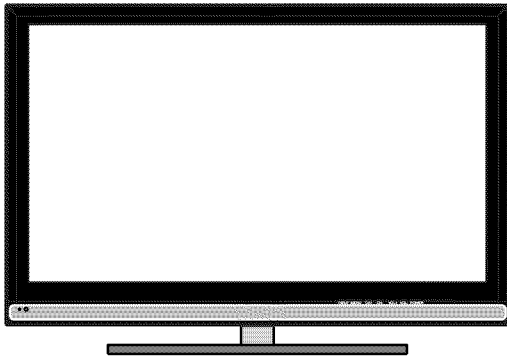 



- Your LCD TV can be placed on a Desktop as shown in the figure above.
- Please refer to the following precautions "Using the Stand".

## Installation Precautions
  
### Wall Mounting

- Please secure enough space for safe use. (Please refer to A and B.)
- Installation of the LCD TV in an improperly ventilated location can cause a fire or damage to the LCD TV due to increased temperature.

A →  
(Mounting on a wall)

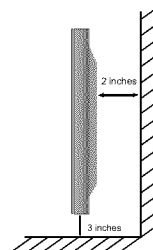
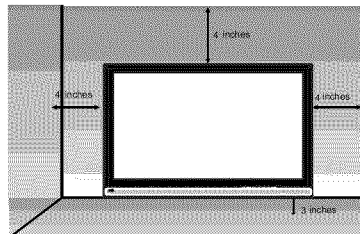


※ Contact your dealer to purchase the "Adjustable-angle wall mount" required for wall-mounted installation.

### Using the Stand

  
- Do not install on an unstable location with support area smaller than the LCD TV.

B →  
(Using the Stand)

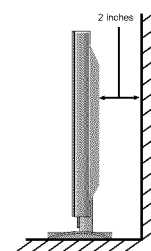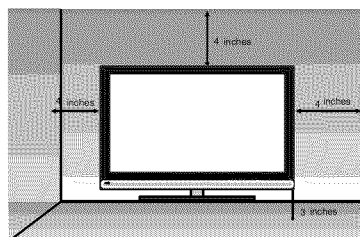

## Installing an Antenna

 - For connecting to ATSC or NTSC broadcasts

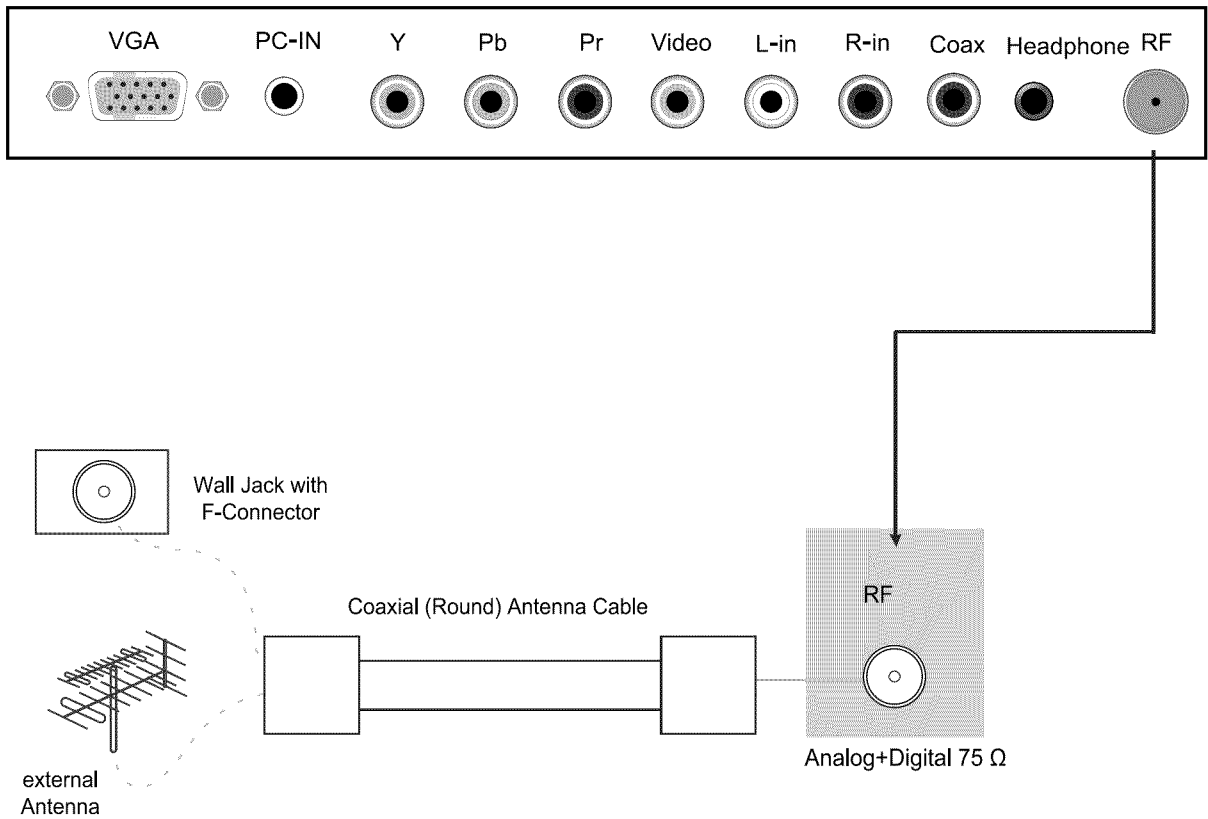


Press INPUT button on the remote control to select TV, then press OK button to confirm. Then you can receive the ATSC/NTSC signal.



## 3. Remote Control

 The remote control is using Infra-Red(IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.

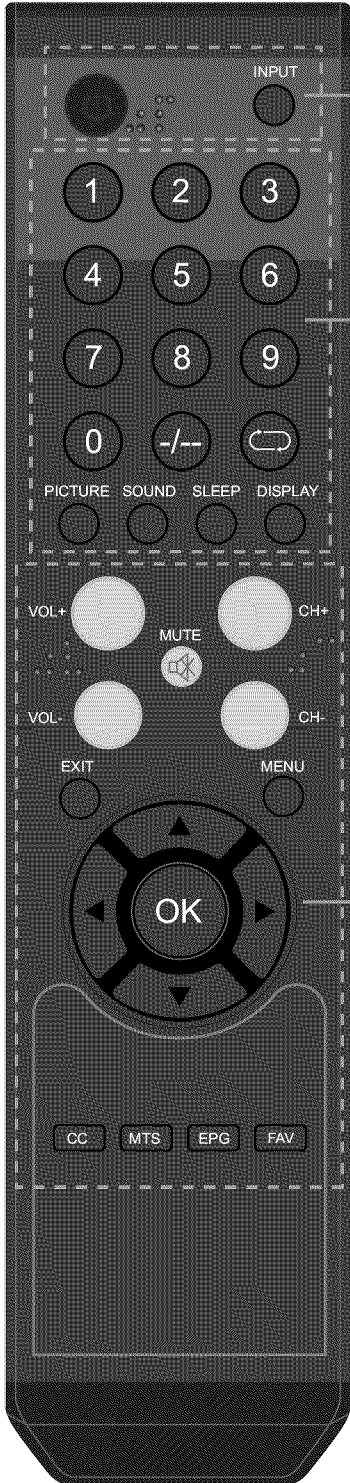

**POWER**(red button): Turn the TV on/standby.  
**INPUT**: Press to display the input source menu.

**Number Buttons**: Choose channel directly.  
 Select channel 5, Press button "5";  
 Select channel 62, Press button "6", then press button "2" in 2 seconds;  
 Select channel 151, Press button "1", and press button "5" in 2 seconds, and press button "1" in 2 seconds;  
 Select channel 5-1, Press button "5", and press button "- / - -" in 2 seconds, and press button "1" in 2 seconds;  
**(RETURN)**: Return to the previous channel viewed.  
**PICTURE**: Press repeatedly to cycle through the available video picture modes.  
**SOUND**: Press to cycle through the different sound settings.  
**SLEEP**: Shutdown timer.  
**DISPLAY**: Display the information of current mode.

**VOL+/-**: Press to adjust the volume.  
**CH+/-**: Press to scan through channels.  
**MUTE**: Press to mute the sound, press again or press VOL+ to unmute.  
**MENU**: Press to display the OSD menu.  
**EXIT**: Press to exit the OSD menu.  
**Thumbstick**(< > ^ v ): Allows you to navigate the on-screen menus and adjust the system settings to your preference.  
**OK**: CONFIRM button.  
**CC**: Press to display the closed caption.  
**MTS**: Press to select the audio channels.  
**EPG**: Press to enter the EPG menu directly.  
**FAV**: Press to add or remove favorite channel.


## Precautions
 
### Avoiding Remote Control Problems

1. Check the polarity (+,-) of the batteries in the remote control.
2. Check that the batteries have power.
3. Check that the LCD TV is powered and that it is properly plugged in.
4. Check if any three-wavelength lamp, special fluorescent or neon sign is turned on near the LCD TV.

### Inserting Batteries in the Remote Control

1. Open the cover completely.
2. Insert the two supplied batteries. Ensure that the polarities (+ and -) of the batteries are aligned correctly.
3. Slide back the cover.

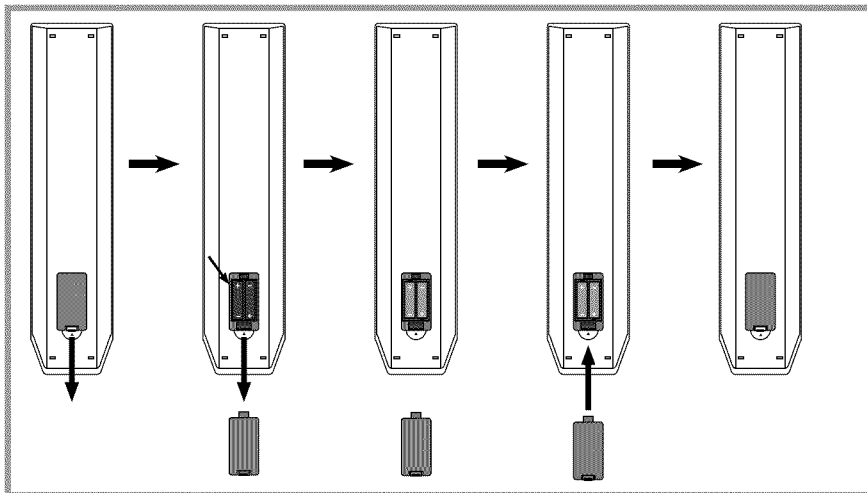


⚠ CAUTION : Risk of explosion if battery is replaced by an incorrect type.  
Dispose of used batteries according to the national code (Recycling program).


## How to use remote control

- The remote control should be operated within 30feet (7m) and 30° to the left and the right of the IR receiver at the front of the LCD TV.
- Used batteries should be disposed properly.

 
## Selecting Input Source

- You can select between the TV signal and the input signal of other equipments connected to the TV.
- Use this function to switch to the input source you wish to view.

Press  button on the remote control.

Use  to move to the desired input source.

Press  to select.

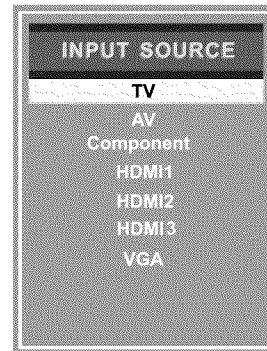

## Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

The diagram illustrates the OSD menu structure. At the top, there is a **Main menu** with six icons: Picture, Audio, Time, Setup, Lock, and Channel. Below this is a **Submenu** (labeled as the Picture menu for example) containing the following items: Picture Mode (Standard), Contrast (50), Brightness (50), Color (50), Sharpness (50), Color Temp. (Normal), and MEMC Level (1 Level). At the bottom is a **Hint** bar with three buttons: Move (with left and right arrows), Select (with a central arrow), and Exit (with the MENU button icon).

**Main menu**  
Picture, Audio, Time, Setup, Lock, Channel

**Submenu**  
(Picture menu for example)

**Hint**  
you should operate the OSD menu according to the hint.

Use < / > button to select the main menu, and press √ button to enter the submenu.

In the submenu, use ^ / v button to select the function item, and you could:

adjust ("Contrast" item in **Picture** menu for example) with < / > button;

select ("Picture Mode" item in **Picture** menu for example) with < / > button;

enter the submenu ("Close Caption" item in **Setup** menu for example) with > button.

\* (Press MENU button to return to the upper menu.)


\* (Press EXIT button to exit the menu display.)

**Note1: Only when you input the suitable signal, the relevant items can be activated**

**Note2: Please operating the OSD menu according to hint on the bottom of the banner.**

## OSD Menu
 
### 1. Picture menu

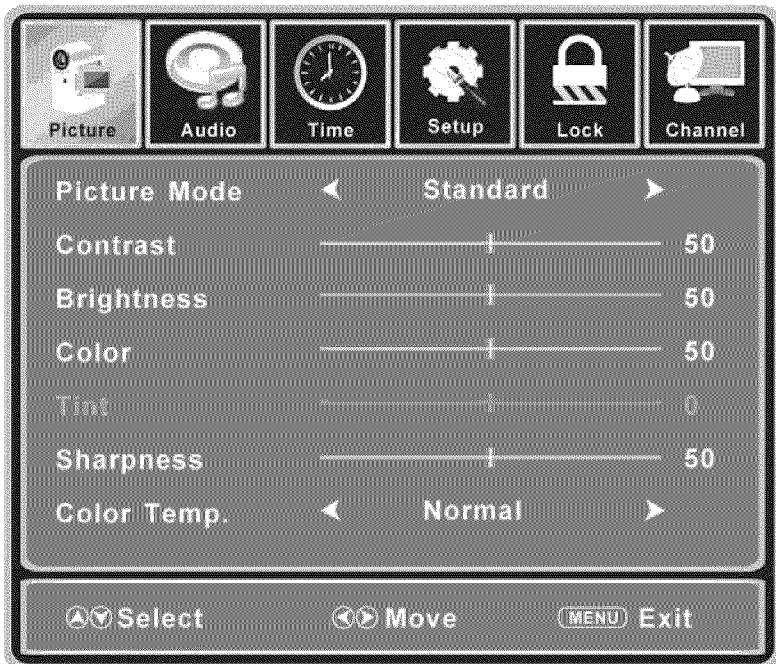

#### Description

**Picture mode:** Select between Standard, Dynamic, Mild, Sports and User.

You may select the picture mode directly by pressing the **PICTURE** button on the remote control.

**Contrast:** Control the difference between the bright and dark regions of the screen picture.

**Brightness:** Adjust brightness of the picture.

 
**Color:** Adjust color of the picture.

**Tint:** Control the fresh tones to make them appear natural.

**Sharpness:** Set the amount of fine detail in the picture.

**Color Temp.:** select between Normal, Cool and Warm.

## 2. Audio menu

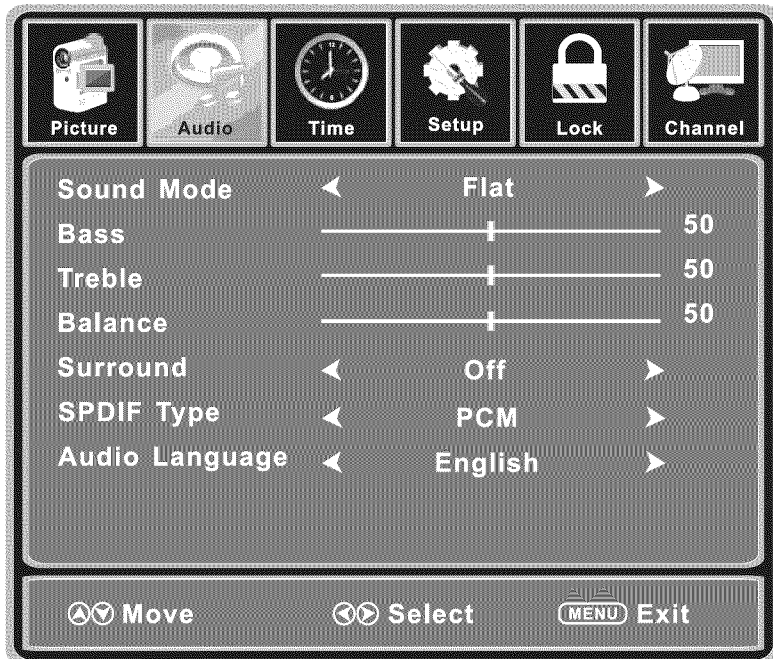

### Description

**Sound Mode:** Select your desired picture mode as follow: Flat, Music, Movie, Sports and User  
You may select the sound mode directly by pressing the **SOUND** button on the remote control.

**Bass:** Low frequencies intensity.

**Treble:** High frequencies intensity.

**Balance:** Left and right stereo audio channels balance.

**Surround:** Activate or deactivate the Surround function.

**SPDIFType:** Allows you to select between PCM and RAW.

**Audio Language:** Select audio language.

### 3. Time menu



#### *Description*

 
**Sleep timer:** You may set the automatic shutdown timer choosing from 5 to 240 minutes, or deactivate this function.

**Time zone:** Select between Pacific, Alaska, Hawaii, Eastern, Central and Mountain.

**Daylight Saving Time:** Select between On and Off.

**Clock:** Display the Date/Time according to the DTV program.

## 4. Setup menu

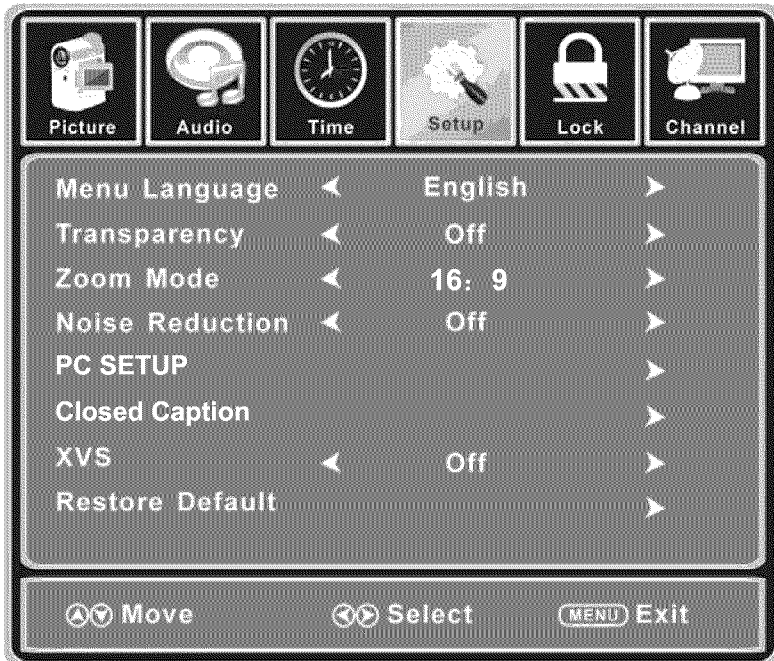

### Description

 
**Menu Language:** Select OSD menu language.

**Transparency:** Turn on or off the transparency menu function.

**Zoom Mode:** Select the zoom mode between 16:9, 16:9 zoom, 4:3, 4:3 zoom.

**Noise reduction:** Select the noise reduction mode between Strong, Off, Weak and Middle.

**PC SETUP:** If the video input signal comes from your PC, you may adjust the V-Position, H-Position, Frequency, Phase or even perform an Auto adjustment.

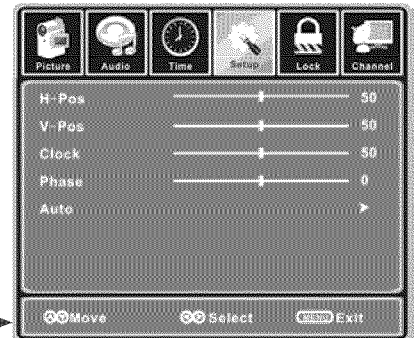



**Closed Caption:**

**CC Mode:** Allow you to select the CC Mode among: On, Off and CC on Mute.

**Basic Selection:** Allow you to select the basic selection among: CC1, CC2, CC3, CC4, Text1, Text2, Text3 and Text4.

**Advanced Selection:** Allow you to select the advanced selection among: Service1, Service2, Service3, Service4, Service 5 and Service 6.

  **Option:** Use thumbstick buttons to operating in option menu as your desire.

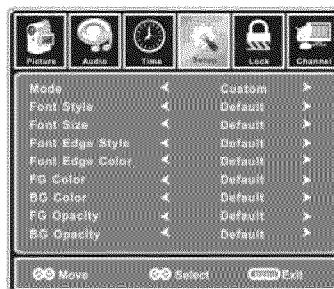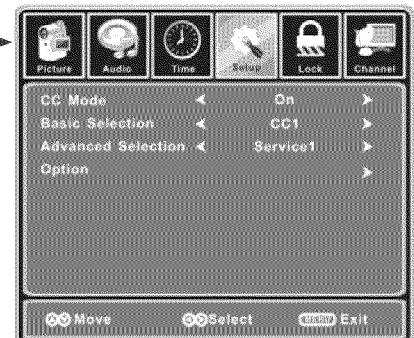


**XVS:** Activate / deactivate the automatic dynamic brightness function.

**Restore Default:** Restore all settings in SETUP menu to factory settings.



## 5. Lock menu

 You must enter the password to gain access to the Lock menu. The default password is 0000. You may modify the following options:

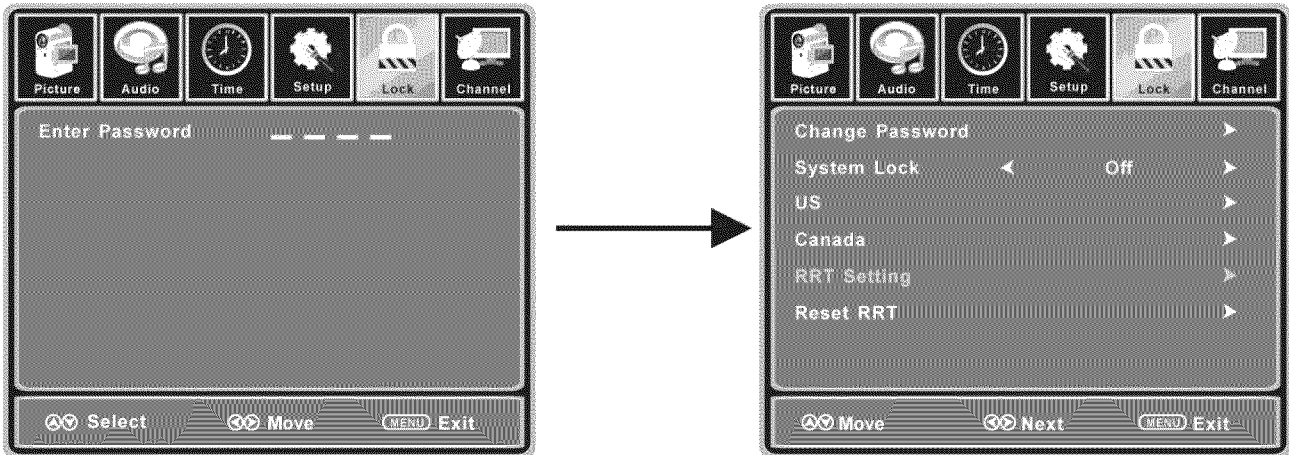

### Description

 
 
**Change password:** Change the password, you must enter the new password twice to confirm it. Note: Do not forget the password.

**Lock:** Allow you to turn on or off the system lock. If deactivated, the functions described below don't work.

This option menu allows you to lock any TV channel or adjust the Movie rating filter.

**US:** \_\_\_\_\_ →

**TV:** Use  $\wedge$  /  $\vee$  buttons to select the desired rating and press  $\>$  button to block or unblock rating.

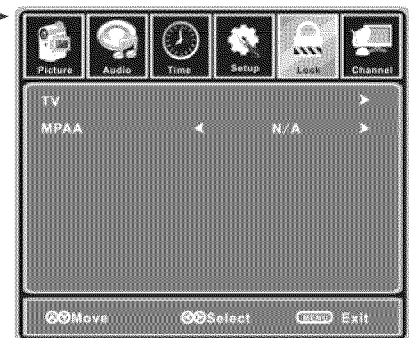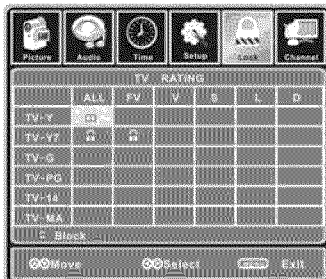

**MPAA:** The Movie rating (MPAA) is used for original movies rated by the Motion Picture Association of America (MPAA) as broadcasted on cable TV and not edited for television.


Use  $\wedge$  /  $\vee$  button to select N/A, G, PG, PG-13, R, NC-17 or X.

RATING	DESCRIPTION
G	General Audiences. Movie is appropriate for all ages.
PG	Parental Guidance Suggested. May contain material not suited for younger viewers.
PG-13	Contains content that may not be appropriate for viewers under the age of 13.
R	Restricted. Contains adult content, no one under 17 admitted without parent.
NC-17	No one 17 and under admitted.
X	Adults only.

**Canada:** \_\_\_\_\_ →

**Canada English:** Select among: E, C, C8+, G, PG, 14+ and 18+.

 **Canada French:** Select among: E, G, 8ans+, 13ans+, 16ans+ and 18ans+.

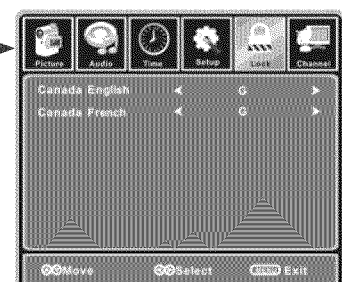

**Reset RRT:** Allow you to reset the RRT setting.

## 6. Channel menu



 
### Description

**Air/Cable:** Allow you to select antenna between Air and Cable.


If you select "Cable", the following items(Favorite, Show/Hide, Channel NO, Channel Label and DTV Signal) are unable to use.

**Auto Scan:** Enter the Auto Scan menu to start auto scan.

- ★ If you select "Cable" as input signal in Antenna item, allows you to select Cable System among: Auto, STD, IRC and HRC. Use  $\nabla$  button to highlight the "Start to Scan", then press  $\triangleright$  button to search the channels automatically. The receivable channels will be stored automatically. When searching channels, press **MENU** to stop.

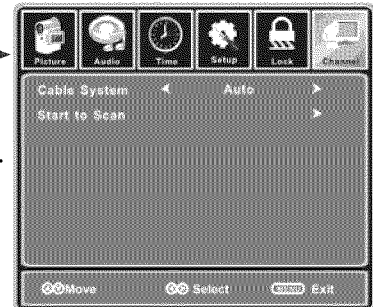


 - ★ If you select "Air" as input signal in Antenna item, you can press  $\triangleright$  button to search the channels automatically. The receivable channels will be stored automatically. When searching channels, press **MENU** to stop.  
NOTE: It will take a while to auto scan in NTSC or ATSC mode, please wait patiently.

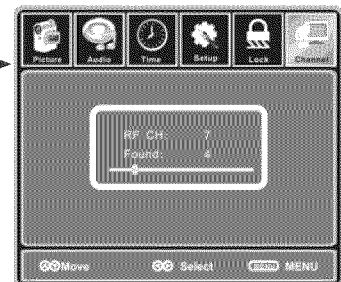

**Favorite:** Allow you to add these channels which you desired as the favorite channels.

 Use  $\wedge$  /  $\nabla$  button to highlight the desired item, then press **OK** button to add or remove the highlighted channel as favorite.

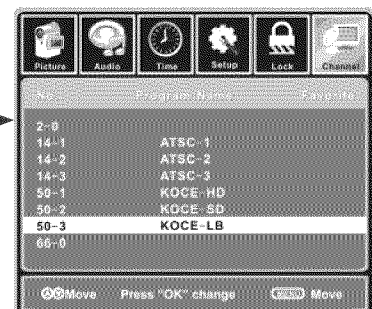

**Show/Hide:** Allow you to show or hide the channels.

Use  $\wedge$  /  $\vee$  button to highlight the desired item, then press **OK** button to show or hide the highlighted channel.



**Channel No.:** Show and select the channel.

**Channel Label:** Allow you to setup a label for the channel.

Press  $<$  /  $>$  button to select the position of the table, and press  $\wedge$  /  $\vee$  button to select the words.

**DTV Signal:** Show the quality of digital signal: good, Normal, Bad.

## Trouble shooting

- Do not use other functions that are not mentioned in this user's manual.
- In case a problem occurs with your LCD TV, please take the following steps first.
- If you still have the problem, turn the power off and contact your dealer or an authorized service center.

Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug. Press the power button of the remote control.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. But if the screen does not come after 1 minute contact your dealer or an authorized service center.
Screen is too bright or too dark.	Perform brightness adjustment or Contrast adjustment.
Screen is too large or too small.	Adjust the screen size.
Stripes appear on the screen and it shakes.	Stop using wireless telephones, hair driers and electric drills.
Screen appears, Voice is not heard	<ol style="list-style-type: none"> <li>1. Press the "MUTE"button.</li> <li>2. Increase the sound level by pressing volume adjustment button.</li> <li>3. Check if sound terminal of external input is connected properly.</li> <li>4. Check if audio cables are connected properly.</li> <li>5. Select and check the other input.</li> </ol> <p>If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or an authorized service center.</p>
Remote control does not work	<ol style="list-style-type: none"> <li>1. Check if main power is On.</li> <li>2. Check that the batteries of the remote controller were loaded properly.</li> <li>3. Check to see if any obstacle exists between the LCD TV and the remote control , then remove it, if any.</li> <li>4. If the batteries have no power, replace them with two new batteries.</li> </ol>

- This LCD TV is for household use and registered as harmless on electromagnetic waves.
- Therefore, you can use it in every location as well as residential areas.

## Specifications

LCD Panel	Panel Size	32" (measured diagonally) TFT LCD
	Brightness	450cd/m <sup>2</sup>
	Contrast Ratio	3000:1
BROADCAST SIGNAL SYSTEM		NTSC M + ATSC
ANTENNA INPUT IMPEDANCE		75 ohms
SOUND OUTPUT		8W x 2
Max. Resolution		1920 x1080
Input Connector	VIDEO	1
	YPbPr	2
	AUDIO (L/R)	3
	PC IN	1
	HDMI	3
	RF	1
Output Connector	SPDIF	1
Power Source		AC 100-240V, 50/60HZ
Power Consumption		110W

- The cabinet design and electronics specifications will be modified without prior notice for improving the performance.

# **VIORE™ LIMITED WARRANTY**

## **FLAT PANEL TELEVISION**

This **VIORE** brand Product, as supplied and distributed by **VIORE** and delivered new in the original carton to the original purchaser is warranted by **VIORE** against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year on parts and labor. However, there will be only a 90 day parts and labor limited warranty for commercial use.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, no fault found or damaged at time of delivery to **Viore**.

Proof of purchase within one year from date of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through **VIORE** authorized dealers and used in the United States, Canada, and Puerto Rico by the original purchaser. To receive warranty service, the purchaser must contact **VIORE** for problem determination and service procedures. Warranty service may only be performed by a duly authorized **VIORE** service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase to **VIORE** or **VIORE's** authorized service center.

**VIORE** will repair or if repairs cannot be made, **VIORE** will replace this Product at no charge with the same, like or similar Product if the Product is defective as specified in this limited warranty during the limited warranty period. **VIORE** may use new or remanufactured parts or products to repair or replace the Product at its sole discretion. All replaced parts and Products become the property of **VIORE** and must be returned to **VIORE**. Replacement parts and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight needs to be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. **VIORE** shall not be responsible for or obligated to replace damaged goods. If you reside in California and you cannot transport the television due to the size, weight, and method of attachment, **VIORE** will provide transportation for the television to the repair facility. If you reside in a state other than California, you are responsible for the costs of transporting the television to a repair facility.

If the product is received damaged by **VIORE**, it is the responsibility of the consumer to file a claim against the carrier. **VIORE** will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer's expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by **VIORE** which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. **VIORE** does not warrant uninterrupted or error-free operation of the product.

**THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON VIORE. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VIORE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact **VIORE** at:

**Phone: 1-877-777-1428 (USA / Puerto Rico)**  
**1-877-777-1429 (Canada)**  
**www.viore.com**

