

**VIORE™** TECHNOLOGY & INNOVATION

# OPERATING INSTRUCTIONS

**40" Commercial Grade 1080p LCD Television**

**LC40VF5HTL**



## **AIR (TV)/CABLE MODE SELECTION**

The Air/CABLE menu option is set to the "CABLE" (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the "Air" mode. Please refer to page 17 of the owner's manual for the details of this menu.

**STOP**

FOR QUESTIONS OR TECHNICAL SUPPORT

Please call:

**1-877-777-1428** (USA / PUERTO RICO)

**1-877-777-1429** (CANADA)

Please do not return this TV to the store.

## Contents

---

<b>Caution</b>	<b>2</b>
<b>Safety Information</b>	<b>3</b>
<hr/>	
<b>Instructions for fixing stand</b>	<b>4</b>
<hr/>	
<b>Unit and Accessories</b>	<b>5</b>
<b>Product Feature</b>	<b>5</b>
<hr/>	
<b>Introduction</b>	<b>6-9</b>
1. Front View	6
2. Rear View	7
3. Remote Control	8-9
<hr/>	
<b>Basic Operation</b>	<b>10-11</b>
<hr/>	
<b>OSD Menu</b>	<b>12-20</b>
1. Picture menu	12
2. Audio menu	13
3. Time menu	14
4. Setup menu	15
5. Lock menu	16
6. Channel menu	17-18
<hr/>	
<b>Specialty Hotel and Commercial Features</b>	<b>19-24</b>
<hr/>	
<b>Simple Troubleshooting</b>	<b>25</b>
<hr/>	
<b>Technical Specifications</b>	<b>26</b>
<hr/>	


## Caution



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

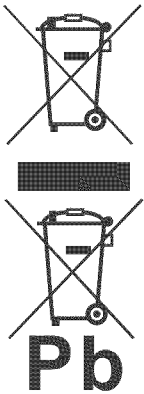

### Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/ recycling centre.

In the USA there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!



3124140  
CONFORMS TO UL STD. 60065

This unit complies with America Safety directives.



This unit complies with FCC directives.

## **Safety Information**

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

### **Electrical safety**

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
  - Do not place any connecting wires where they may be stepped on or tripped over.
  - Do not place heavy items on the leads, which may damage them.
  - Hold the Mains plug, not the wires, when removing from a socket.
  - During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
  - Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if:
  - the mains plug or cable is damaged
  - liquid is spilt onto the set, or if it is accidentally exposed to water or moisture
  - anything accidentally penetrates the ventilation slots
  - the set does not work normally.
  - Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.
  - To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for along period.
  - Do NOT break open or throw exhausted batteries on a fire.


### **Physical safety**

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.




# Instructions for fixing stand

Note: the pictures below are only for reference

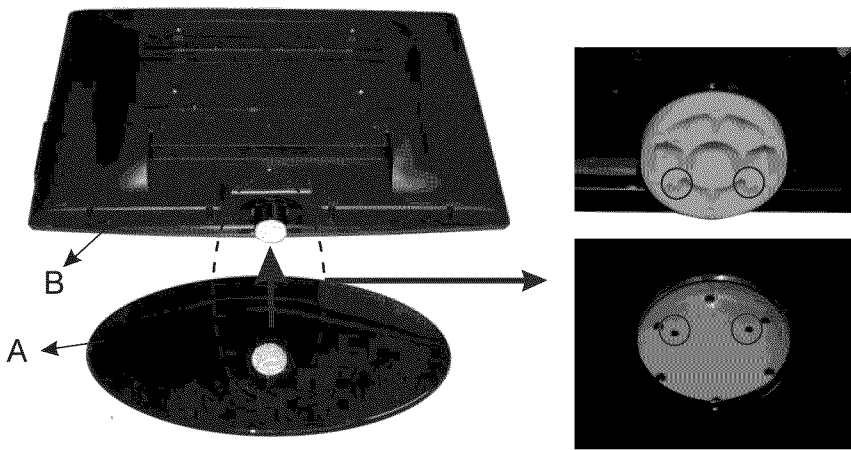

The diagram illustrates the first step of installation. On the left, a television set (labeled B) is shown with a stand (labeled A) being inserted into its rear. On the right, two circular inset images show the alignment of the stand's mounting holes with the TV's rear panel.


1. Insert stand(part A) into unit(part B).

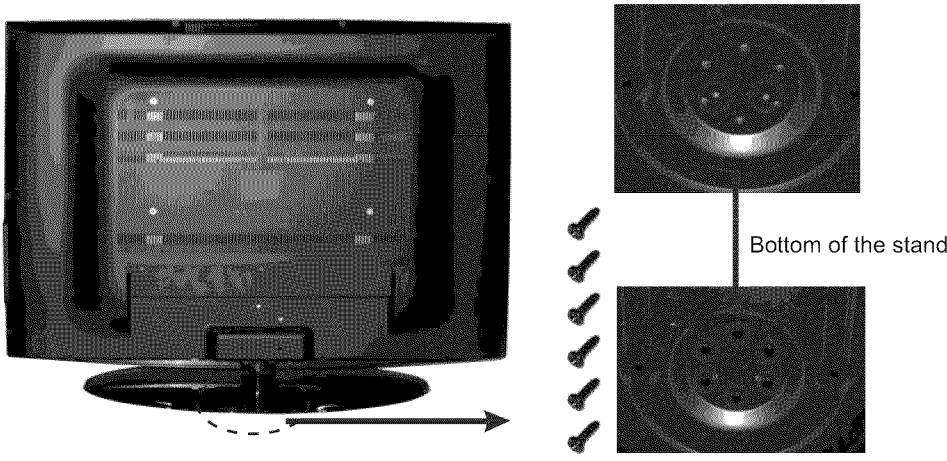


The diagram illustrates the second step of installation. On the left, the television set is shown with the stand attached to its rear. On the right, two circular inset images show the bottom of the stand being secured to the TV's rear panel with screws. A label 'Bottom of the stand' points to the lower inset. A vertical line of six screws is shown between the two insets.

2. Screw the stand in the position as the picture shows.  
Screws (6 x ST4 x 12F) are provided with stand.


## Unit and Accessories

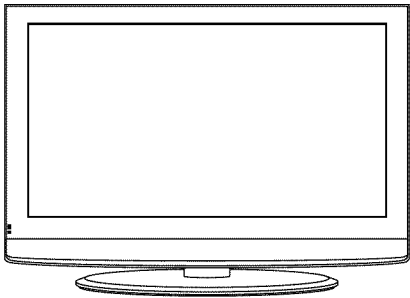


TV set

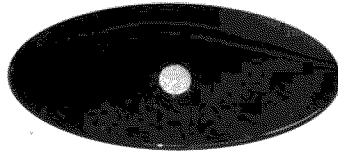


Stand

 

Security Cover

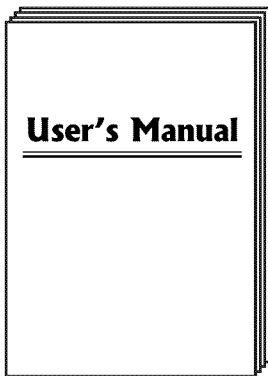


User's manual

 


Remote control  
Batteries: 2xAAA



Mains cable

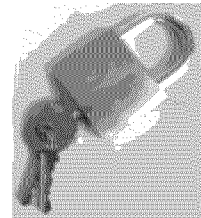

Lock

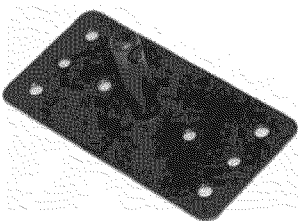

Security Plate



Screws for security plate(6xST4x20C)



(3xM3x10) (3xST3x10C)

Screws for security cover



Screws for stand  
(6 x ST4 x 12F)



Screw driver: T20




Screw driver: T15

## Product Feature

- Integrated ATSC TV tuner for HDTV broadcast reception
- Dual HDMI input for true digital connections
- VGA port for connection to PC
- Cloning Support
- Swivel Stand
- Lockable Base

# Introduction

## 1. Front View

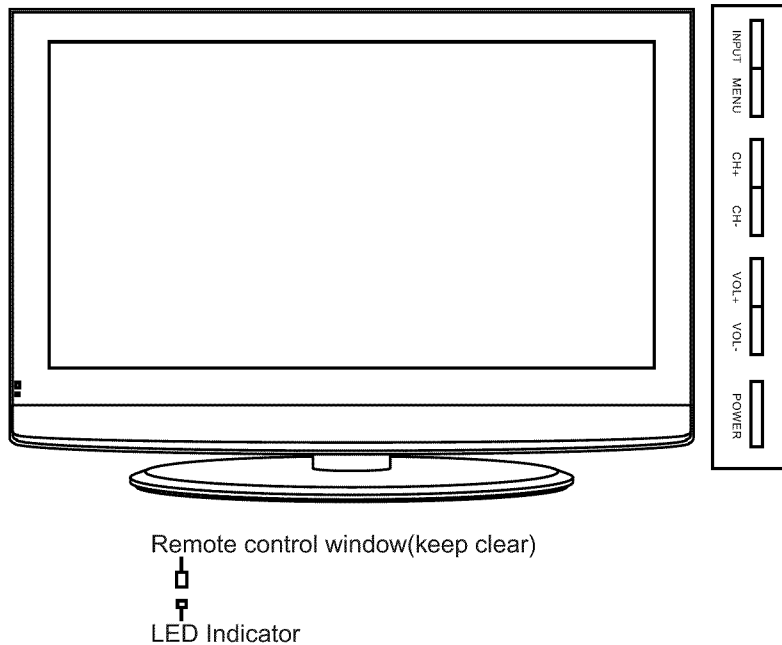


- 1. (IR) Infrared Receiver: Receives IR signals from the remote control.  
(Power on/Standby)LED Indicator: Press **Power Button** to turn on and off.

Indicator on(Red)                      Standby mode  
Indicator on(Green)                    Power on mode

**The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30° to the left or right side and 20° above or below the remote control window.**

- 2. The functions of the buttons:


**INPUT:** Press to display the input source menu. →  
**MENU:** Press to display the OSD menu,  
press again to exit the menu.  
**CH+/-:** Press to scan through channels.  
**VOL+/-:** Press to adjust the volume.  
**POWER:** Turn on/standby the TV set.

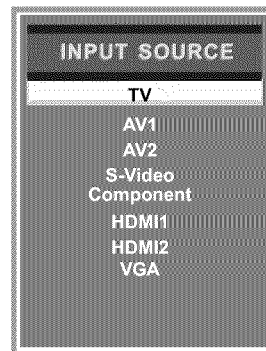

Press **INPUT** button on the TV set or remote control to display the input source menu, and use **CH+/-** button on the TV set or **^ / v** button on remote control to select the input source, press **OK** button on the remote control to enter.



Note: Before you select the input source, make sure the connections are prepared.

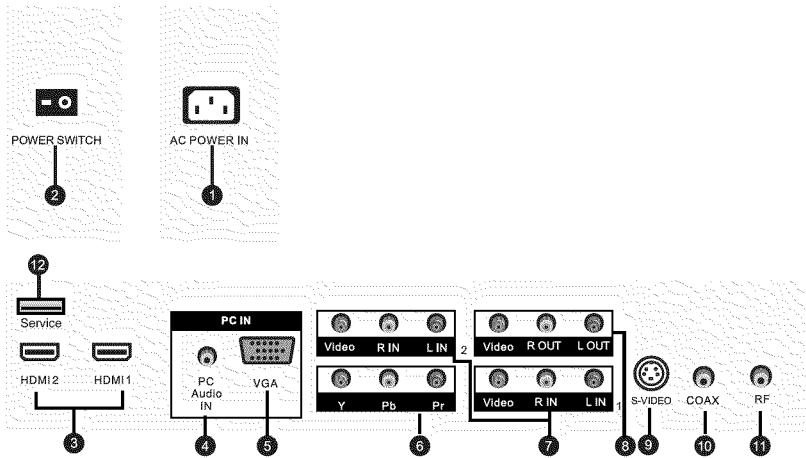
## 2. Rear View



1. **AC POWER IN:** Connect to an earth 100-240V, 50/60Hz AC outlet with the PowerCable.
2. **POWER SWITCH:** Switch on or off the power supply.
3. **HDMI1/2:** Connect them to the video output terminal of DVD.(used in HDTV1 mode)
4. **PC AUDIO IN:** Connect it to the audio output terminal of PC.
5. **VGA:** For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.
6. **YPbPr :** Connect them to the video output terminal of DVD.(used in HDTV mode).
7. **VIDEO IN 1/2:** Connect it to video output terminal of DVD.  
**VIDEO L/R in 1/2:** Connect them to audio output terminal of DVD.
8. **VIDEO out:** Connect it to other TV'S video input .  
**VIDEO L/R out:** Connect them to other TV'S audio input.
9. **S-VIDEO:** S-Video signal input.
10. **COAX:** Digital coaxial output.
11. **RF:** Connect antenna or cable 75 Ohm coaxial to receive TV signal.
12. **Service:** USB port for service.

- To turn on the LCD TV

Press  on the LCD TV to  first.

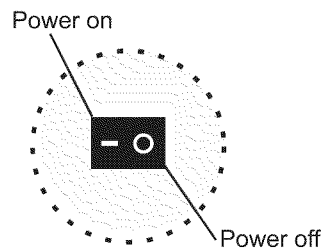

- Be sure to turn off the power and unplug both units from the wall outlet before making any connections.

### 3. Remote Control

The remote control is using Infra-Red(IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.



**POWER**(red button): Turn the TV on/standby.  
**INPUT**: Press to display the input source menu.

**Number Buttons**: Choose channel directly.  
Select channel 5, Press button "5";  
Select channel 62, Press button "6", then press button "2" in 2 seconds;  
Select channel 151, Press button "1", and press button "5" in 2 seconds, and press button "1" in 2 seconds;  
Select channel 5-1, Press button "5", and press button "- / - -" in 2 seconds, and press button "1" in 2 seconds;  
**(RETURN)**: Return to the previous channel viewed.  
**PICTURE**: Press repeatedly to cycle through the available video picture modes.  
**SOUND**: Press to cycle through the different sound settings.  
**SLEEP**: Shutdown timer.  
**DISPLAY**: Display the information of current mode.

**VOL+/-**: Press to adjust the volume.  
**CH+/-**: Press to scan through channels.  
**MUTE**: Press to mute the sound, press again or press VOL+ to unmute.  
**MENU**: Press to display the OSD menu.  
**EXIT**: Press to exit the OSD menu.  
**Thumbstick**( $\leftarrow$   $\rightarrow$   $\wedge$   $\vee$ ): Allows you to navigate the on-screen menus and adjust the system settings to your preference.  
**OK**: CONFIRM button.  
**CC**: Press to display the closed caption.  
**MTS**: Press to select the audio channels.  
**EPG**: Press to enter the EPG menu directly.  
**FAV**: Press to add or remove favorite channel.


### Installing Batteries

1. Open the battery compartment cover on the back of the remote control.
2. Insert two 1.5V AAA size batteries observing the polarity markings inside the battery compartment. Don't mix different types or used batteries with new ones.
3. Close the cover.



Batteries shall not be exposed to excessive heat such as sunshine or fire.

- The remote control should be operated within 30 feet(7m) and 30° to the left and right of the IR receive at the front of the LCD TV.
- Used batteries should be disposed properly.

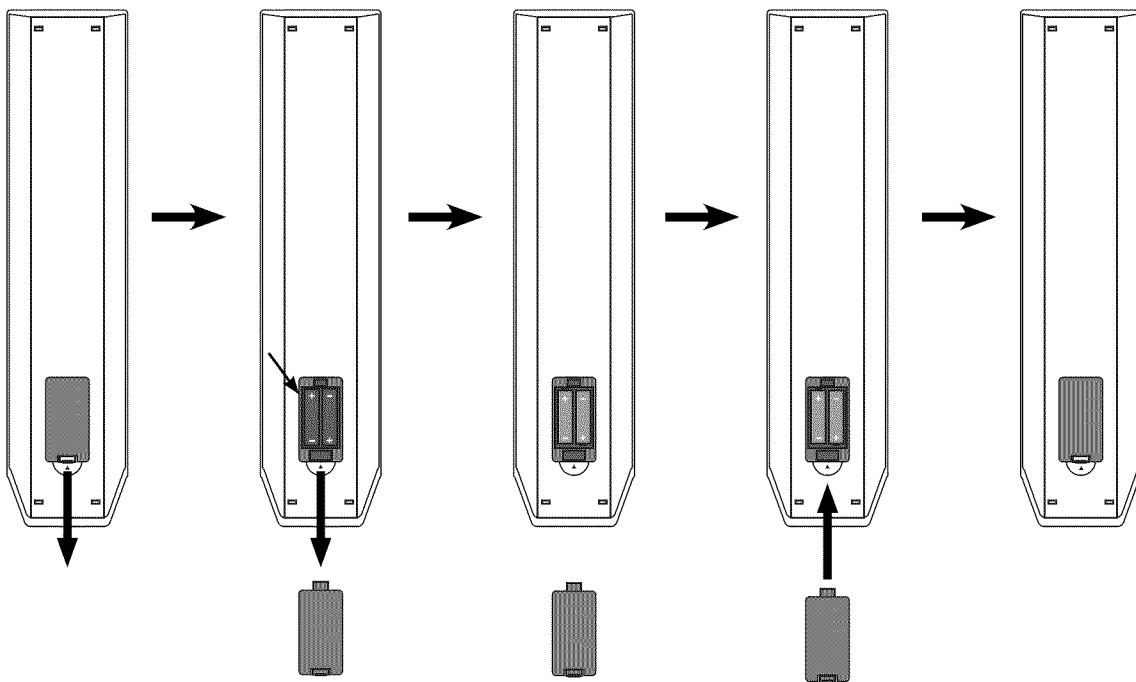

## Basic Operation


### Power on/off

1. Connect to the power with a mains cable and an adaptor (page9).
- 2.-To turn on the TV  
Press **POWER** button on the TV or remote control.
- To turn off the TV  
Press **POWER** button on the TV or remote control.

### Input Source select

Press **INPUT** button on the TV set or remote control to display the input source menu, and use **CH+/-** button on the TV set or  $\wedge / \vee$  button on remote control to select the input source, press **OK** button on the remote control to enter.

**Note: Before you select the input source, make sure the connections are prepared.**

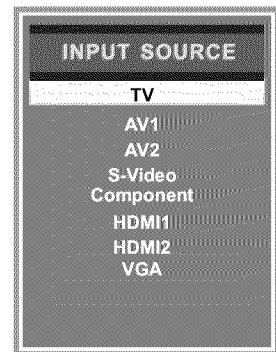

### Basic buttons on the remote control

**POWER**(red button): Turn the TV on/standby.

**INPUT**: Press to display the input source menu.

**Number Buttons**: Choose channel directly.

Select channel 5, Press button "5";

Select channel 62, Press button "6", then press button "2" in 2 seconds;

Select channel 151, Press button "1", and press button "5" in 2 seconds, and press button "1" in 2 seconds;

Select channel 5-1, Press button "5", and press button "- / -" in 2 seconds, and press button "1" in 2 seconds;

$\curvearrowright$  (**RETURN**): Return to the previous channel viewed.

**PICTURE**: Press repeatedly to cycle through the available video picture modes.

**SOUND**: Press to cycle through the different sound settings.

**SLEEP**: Shutdown timer.

**DISPLAY**: Display the information of current mode.

**VOL+/-**: Press to adjust the volume.

**CH+/-**: Press to scan through channels.

**MUTE**: Press to mute the sound, press again or press VOL+ to unmute.

**MENU**: Press to display the OSD menu.


**EXIT**: Press to exit the OSD menu.

**Thumbstick**( $\leftarrow \rightarrow \wedge \vee$ ): Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**OK**: CONFIRM button.

## Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

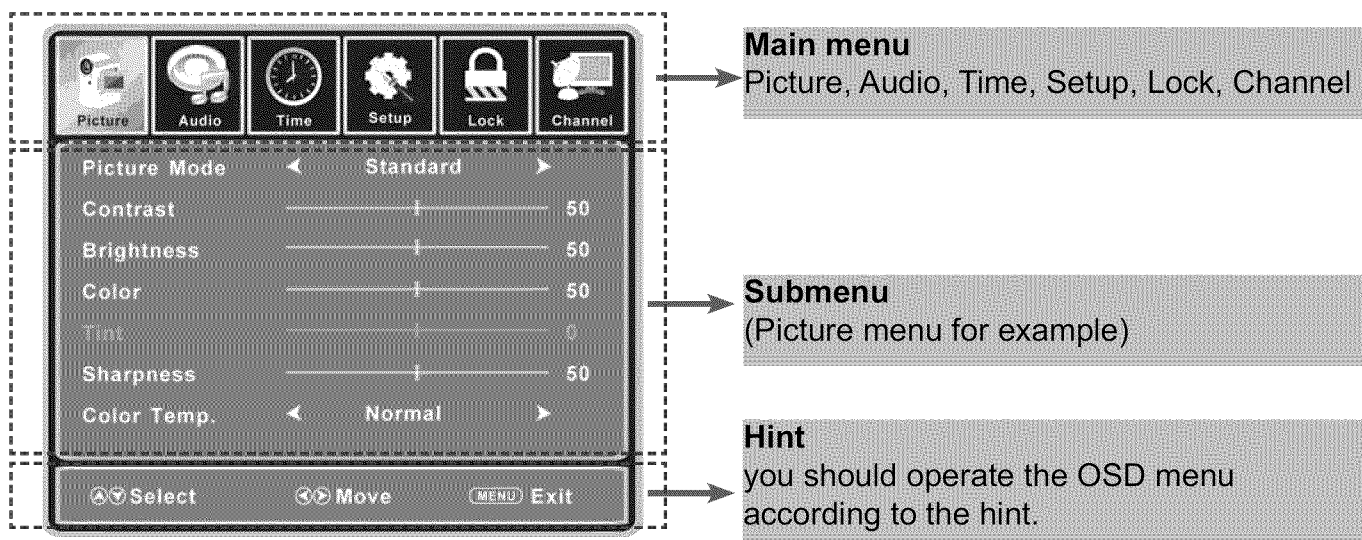

Use < / > button to select the main menu, and press √ button to enter the submenu.

In the submenu, use ^ / v button to select the function item, and you could:

adjust ("Contrast" item in **Picture** menu for example) with < / > button;

select ("Picture Mode" item in **Picture** menu for example) with < / > button;

enter the submenu ("Close Caption" item in **Setup** menu for example) with > button.

\* (Press MENU button to return to the upper menu.)

\* (Press EXIT button to exit the menu display.)


**Note1: Only when you input the suitable signal, the relevant items can be activated**

**Note2: Please operating the OSD menu according to hint on the bottom of the banner.**



## OSD Menu

### 1. Picture menu

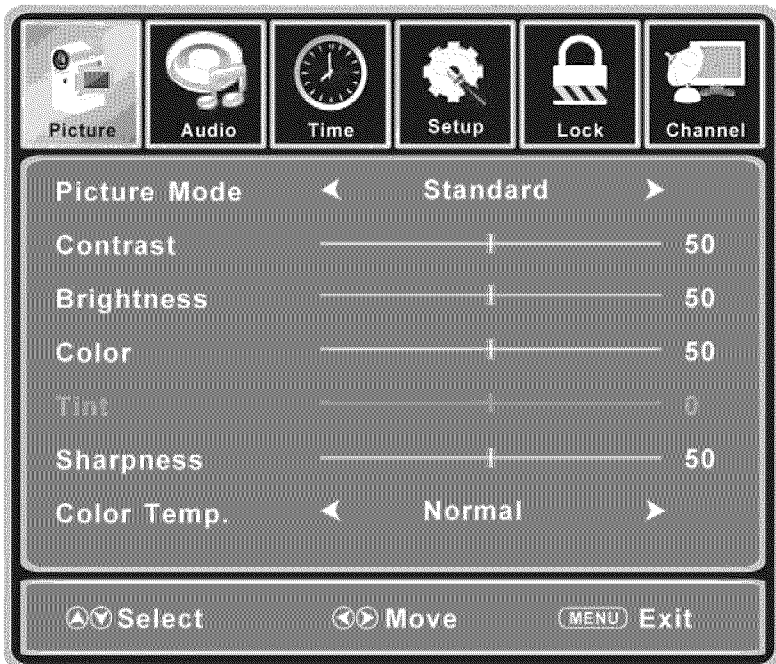

#### Description

**Picture mode:** Select between Standard, Dynamic, Mild, Sports and User.

You may select the picture mode directly by pressing the **PICTURE** button on the remote control.

**Contrast:** Control the difference between the bright and dark regions of the screen picture.

**Brightness:** Adjust brightness of the picture.


**Color:** Adjust color of the picture.

**Tint:** Control the fresh tones to make them appear natural.

**Sharpness:** Set the amount of fine detail in the picture.

**Color Temp.:** Select between Normal, Cool and Warm.

## 2. Audio menu

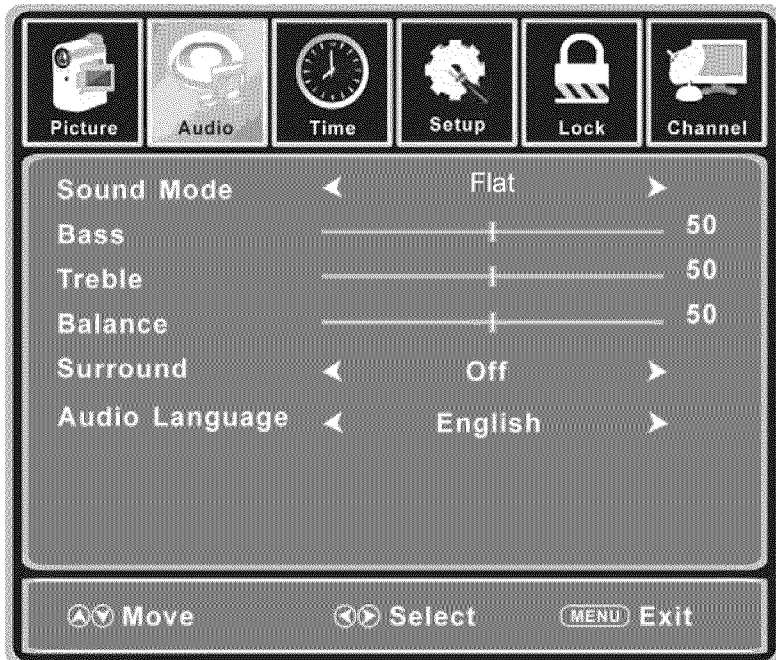

### Description

**Sound Mode:** Select your desired picture mode as follow: Flat, Music, Movie, Sports and User  
You may select the sound mode directly by pressing the **SOUND** button on the remote control.

**Bass:** Low frequencies intensity.

**Treble:** High frequencies intensity.

**Balance:** Left and right stereo audio channels balance.

**Surround:** Activate or deactivate the Surround function.

**Audio Language:** Select audio language.

3. Time menu



*Description*


**Sleep timer:** You may set the automatic shutdown timer choosing from 5 to 240 minutes, or deactivate this function.

**Time zone:** Select between Pacific, Alaska, Hawaii, Eastern, Central and Mountain.

**Daylight Saving Time:** Select between On and Off.

**Clock:** User can not change time manually during DTV mode, for time is from signal source directly.

4. Setup menu

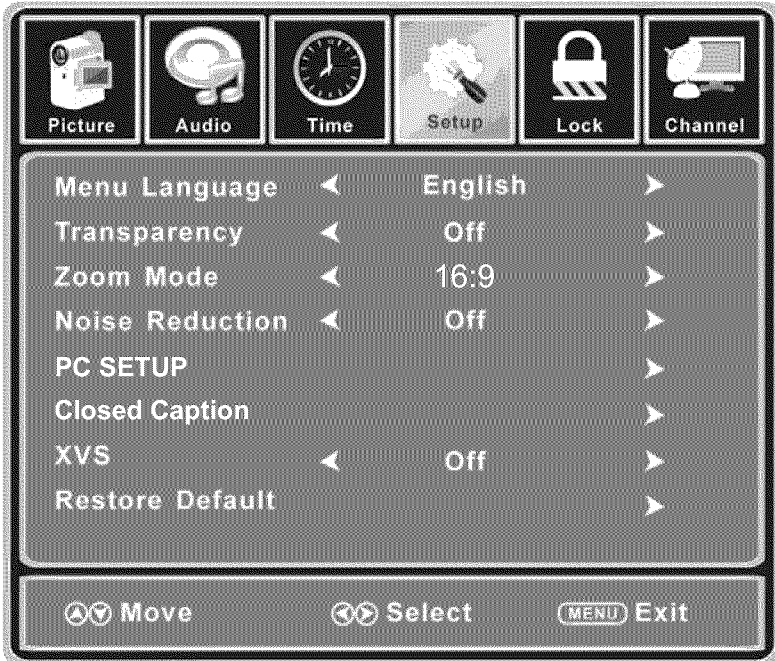

Description


**Menu Language:** Select OSD menu language.

**Transparency:** Turn on or off the transparency menu function.

**Zoom Mode:** Select the zoom mode between 16:9, 16:9 zoom, 4:3, 4:3 zoom.

**Noise reduction:** Select the noise reduction mode between Strong, Off, Weak and Middle.

**PC SETUP:** If the video input signal comes from your PC, you may adjust the V-Position, H-Position, Frequency, Phase or even perform an Auto adjustment.

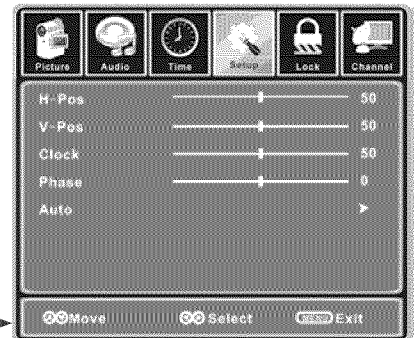


**Closed Caption:**

**CC Mode:** Allow you to select the CC Mode among: On, Off and CC on Mute.

**Basic Selection:** Allow you to select the basic selection among: CC1, CC2, CC3, CC4, Text1, Text2, Text3 and Text4.

**Advanced Selection:** Allow you to select the advanced selection among: Service1, Service2, Service3, Service4, Service 5 and Service 6.

**Option:** Use thumbstick buttons to operating in option menu as your desire.

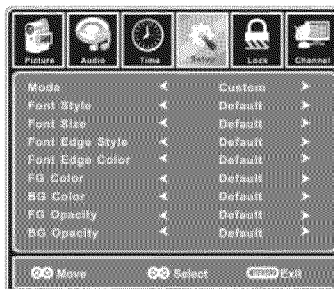


**XVS:** Activate / deactivate the automatic dynamic brightness function.

**Restore Default:** Restore all settings in SETUP menu to factory settings.

**5. Lock menu**

You must enter the password to gain access to the Lock menu. The default password is 0000. You may modify the following options:

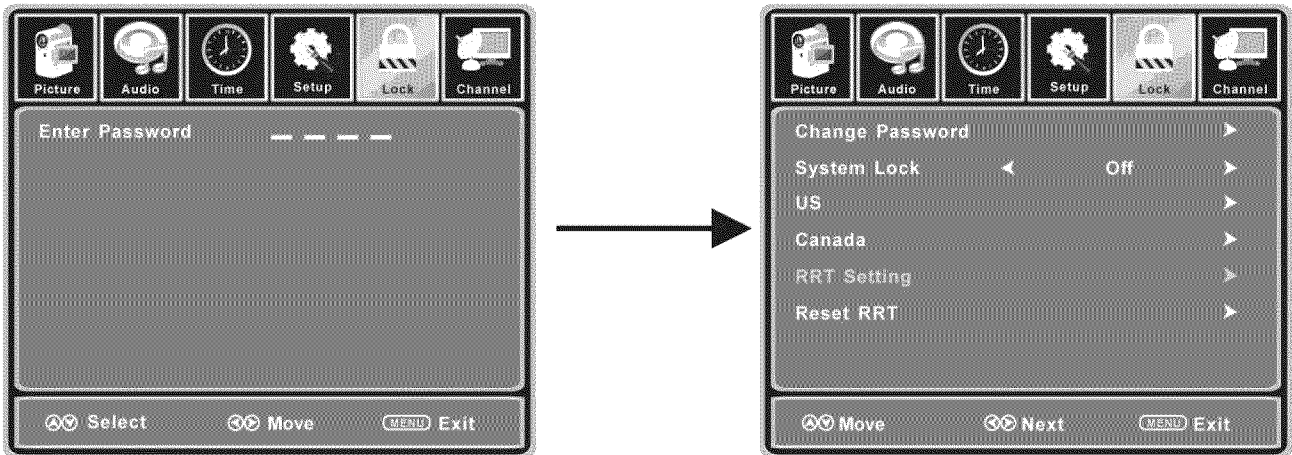

**Description**


**Change password:** Change the password, you must enter the new password twice to confirm it. Note: Do not forget the password.

**Lock:** Allow you to turn on or off the system lock. If deactivated, the functions described below don't work.

This option menu allows you to lock any TV channel or adjust the Movie rating filter.

**US:** \_\_\_\_\_

**TV:** Use ^ / v buttons to select the desired rating and press > button to block or unblock rating.

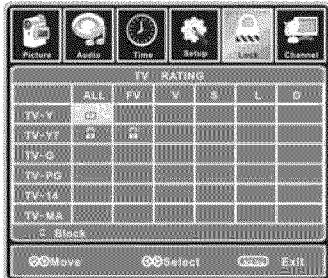

**MPAA:** The Movie rating (MPAA) is used for original movies rated by the Motion Picture Association of America (MPAA) as broadcasted on cable TV and not edited for television.

Use ^ / v button to select N/A, G, PG, PG-13, R, NC-17 or X.

RATING	DESCRIPTION
G	General Audiences. Movie is appropriate for all ages.
PG	Parental Guidance Suggested. May contain material not suited for younger viewers.
PG-13	Contains content that may not be appropriate for viewers under the age of 13.
R	Restricted. Contains adult content, no one under 17 admitted without parent.
NC-17	No one 17 and under admitted.
X	Adults only.

**Canada:** \_\_\_\_\_


**Canada English:** Select among: E, C, C8+, G, PG, 14+ and 18+.

**Canada French:** Select among: E, G, 8ans+, 13ans+, 16ans+ and 18ans+.



**Reset RRT:** Allow you to reset the RRT setting.

6. Channel menu

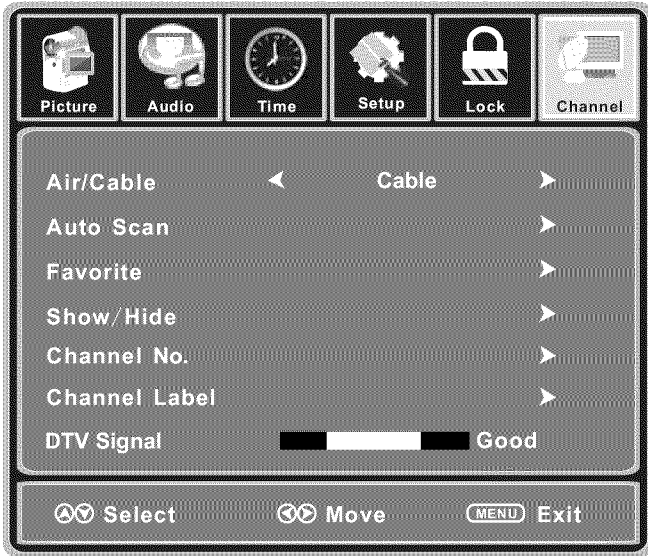


Description

**Air/Cable:** Allow you to select antenna between Air and Cable.


If you select "Cable", the following items(Favorite, Show/Hide, Channel NO, Channel Label and DTV Signal) are unable to use.

**Auto Scan:** Enter the Auto Scan menu to start auto scan.

- ★ If you select "Cable" as input signal in Antenna item, allows you to select Cable System among: Auto, STD, IRC and HRC. Use  $\downarrow$  button to highlight the "Start to Scan", then press  $\rightarrow$  button to search the channels automatically. The receivable channels will be stored automatically. When searching channels, press **MENU** to stop.

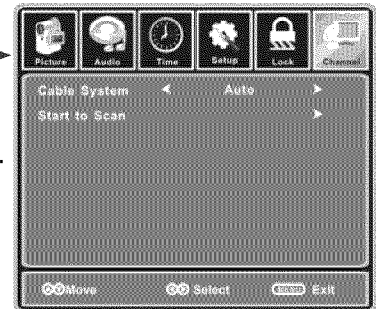


- ★ If you select "Air" as input signal in Antenna item, you can press  $\rightarrow$  button to search the channels automatically. The receivable channels will be stored automatically. When searching channels, press **MENU** to stop. NOTE: It will take a while to auto scan in NTSC or ATSC mode, please wait patiently.

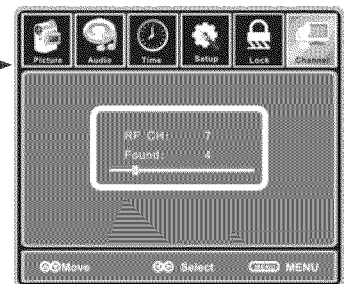

**Favorite:** Allow you to add these channels which you desired as the favorite channels.


Use  $\wedge$  /  $\vee$  button to highlight the desired item, then press **OK** button to add or remove the highlighted channel as favorite.

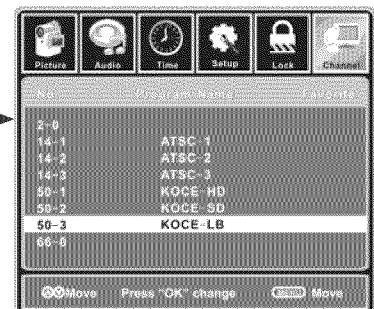

## OSD Menu

**Show/Hide:** Allow you to show or hide the channels.

Use  $\wedge$  /  $\vee$  button to highlight the desired item, then press **OK** button to show or hide the highlighted channel.

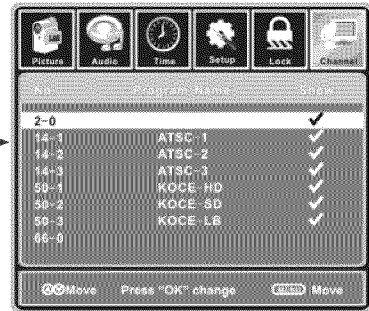

**Channel No.:** Show and select the channel.

**Channel Label:** Allow you to setup a label for the channel.

Press  $<$  /  $>$  button to select the position of the table, and press  $\wedge$  /  $\vee$  button to select the words.

**DTV Signal:** Show the quality of digital signal: good, Normal, Bad.




## Specialty Hotel and Commercial Features

### Securing the TV


This TV can be secured to the surface of a desk or table using the included security plate and lock.

To secure the TV:

- ▶ Affix the security plate firmly to the surface of a desk or table in the position where you would like the TV to be located using 6xST4x20C type screws.

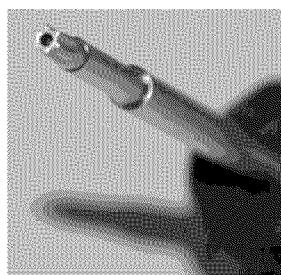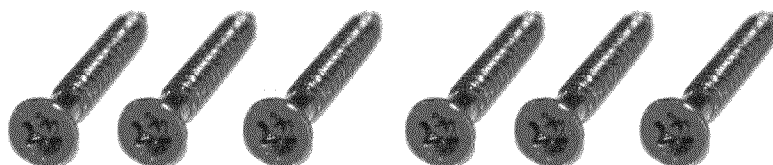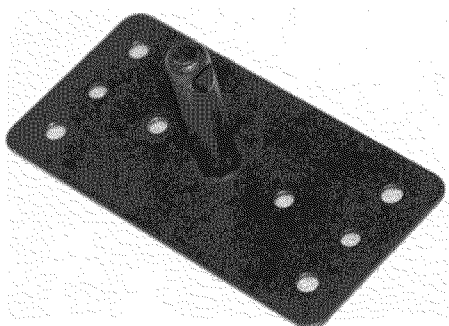


Screw driver: T20

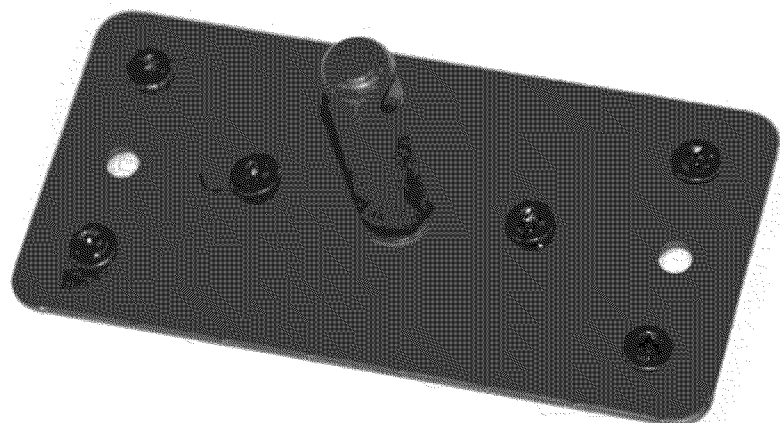



- ▶ Lower the TV carefully onto the security pin. Always use 2 or more people

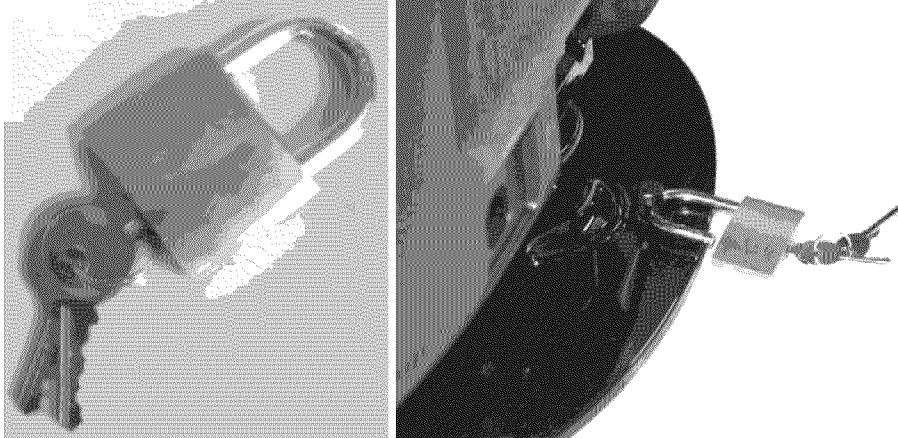


for this task.

- ▶ Lock the TV to the security pin using the included lock.
- 

### **Swivel Stand**

Optimum viewing angle for your guest.

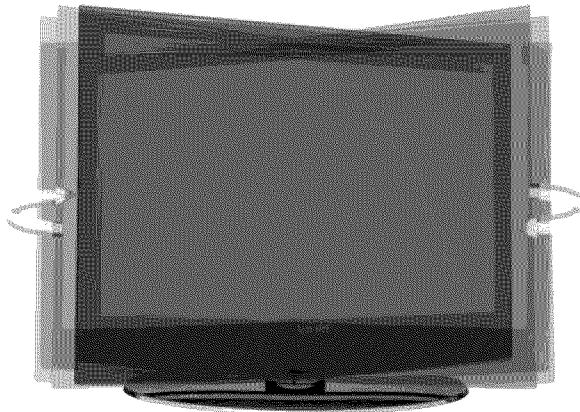

---


### **Using the connector security cover**

This TV includes a metal security cover to restrict access to the TV's connectors. Use of this cover is optional. The cover ships installed on the TV and must be removed prior to cable connection. Care should be taken to use cables that can be accommodated under the cover when it is screwed in place.



To install the connector cover:

- ▶ Connect any desired inputs such as cable, HDMI etc.

- ▶ Bend cables downwards and tie together

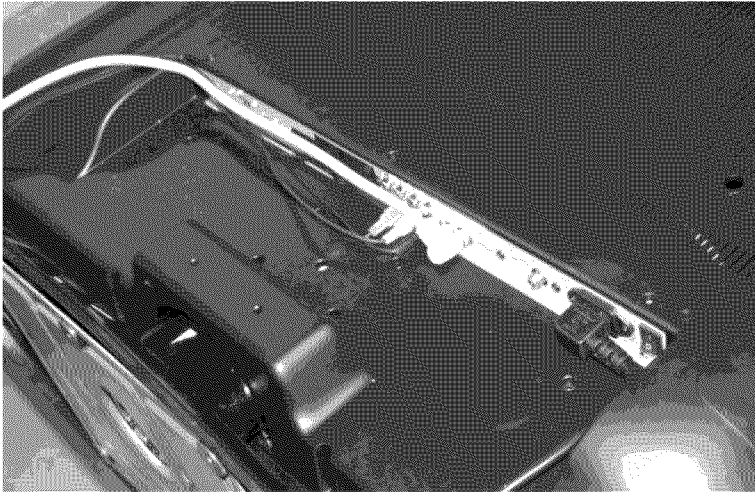


- ▶ Fix cover in place with provided 6 x security screws and screwdriver. Take care not to capture cables between TV and cover.

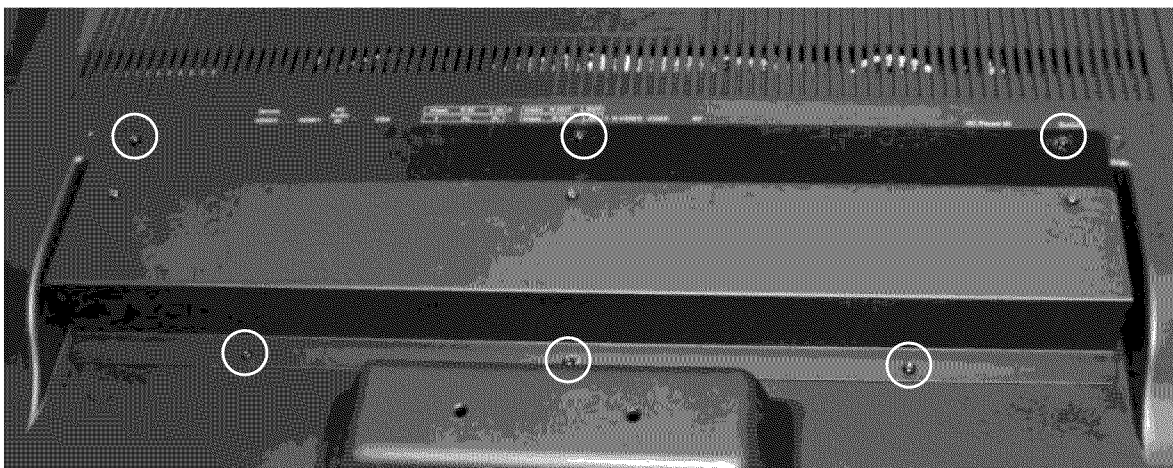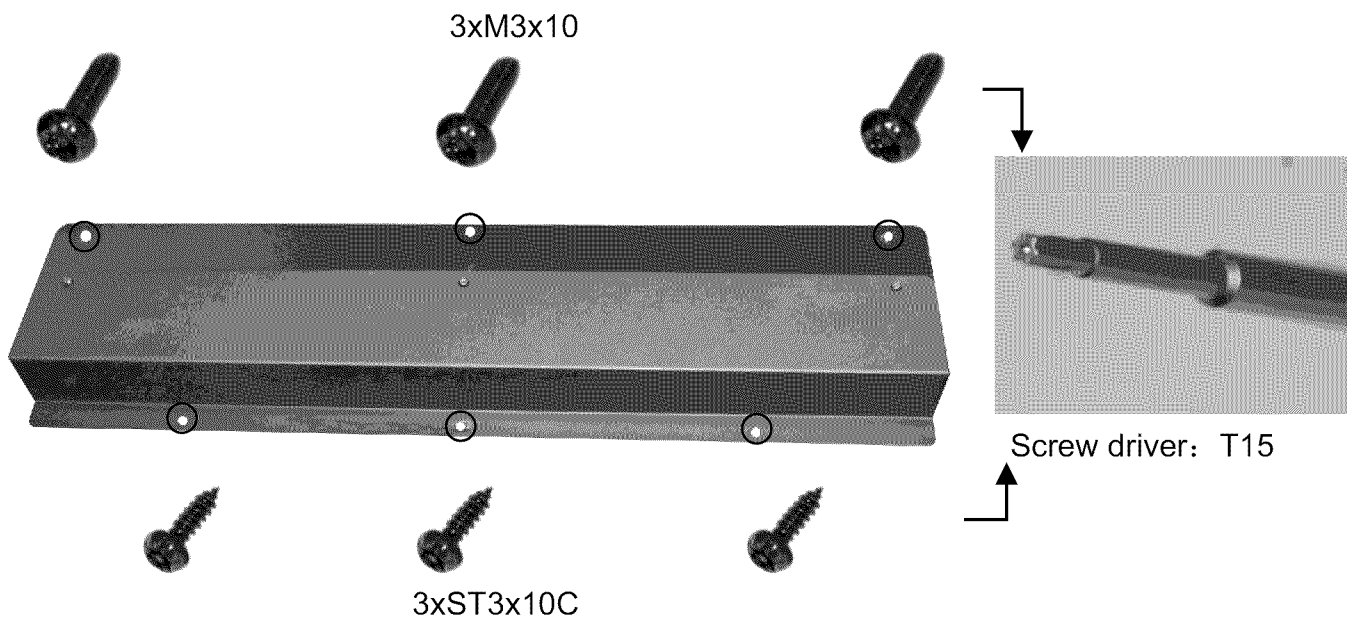


**Configuring Hotel Mode settings**

This TV includes a specialized Hotel Mode Menu that allows you to configure settings for hotel and commercial use. You may restrict users' access to TV features and control channel and volume settings.

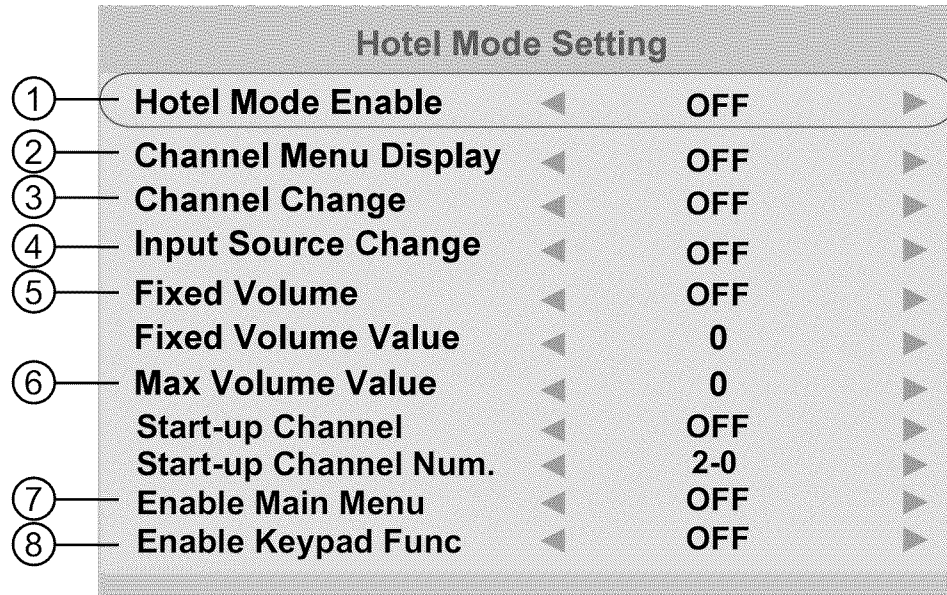


**(1) To enable Hotel Mode:**

- ▶ Press INPUT Source menu appears.
- ▶ Press numeric keys in sequence 2, 2, 3, 3. Hotel menu as below appears.
- ▶ Set **Hotel Mode Enable** setting to “On” using arrow keys.

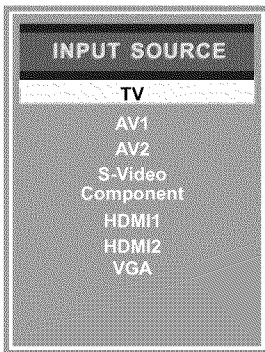

➡ 2,2,3,3 ➡

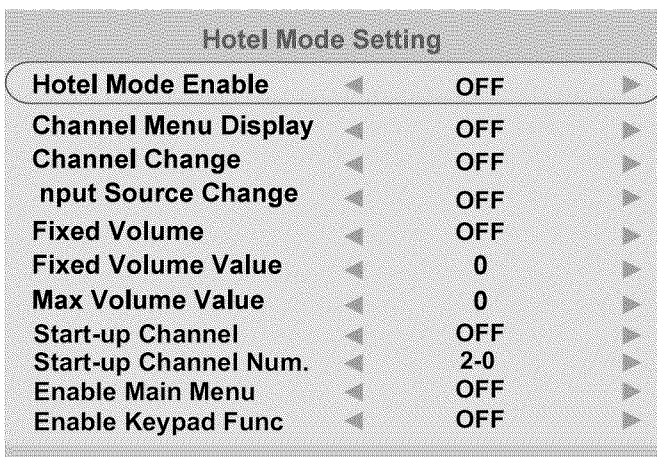

Details of settings are below

**(2) To block access to tuner settings**

▶ Set **Channel Menu Display** to **ON**. User cannot access channel menu so tuner settings cannot be changed.

**(3) To lock channel to current selection**

▶ Select the channel desired for viewing  
▶ Set Channel Change to OFF. Channel is locked to current selection. User cannot change channel.

**(4) To restrict input source selection to a selected source**

▶ Set the source  
▶ Turn source selection off

**(5) To fix volume level to a selected level**

▶ Set **Fixed volume** to **ON**  
▶ Choose **Fixed Volume Value** between 1-100. Volume is fixed at the preset value. User cannot adjust.



**(6) To limit maximum volume level to a selected level**

▶ Choose **Max Volume Value** between 1-100. User volume setting is limited to the preset value.




**(7) To select a TV start-up channel**

▶ Connect an antenna and run a channel scan as detailed on page 17.  
▶ Set **On Channel** to **ON**.  
▶ Set **On Channel Number** to the desired start-up channel from the list of tuned channels. Every time the TV is ON it will start up on the selected channel regardless of the last-used channel.

► Cloning Support

Master TV settings can be easily transferred to multiple guest room TVs using the optional Cloning Tool CL100. Please refer to CL100 user manual for details.

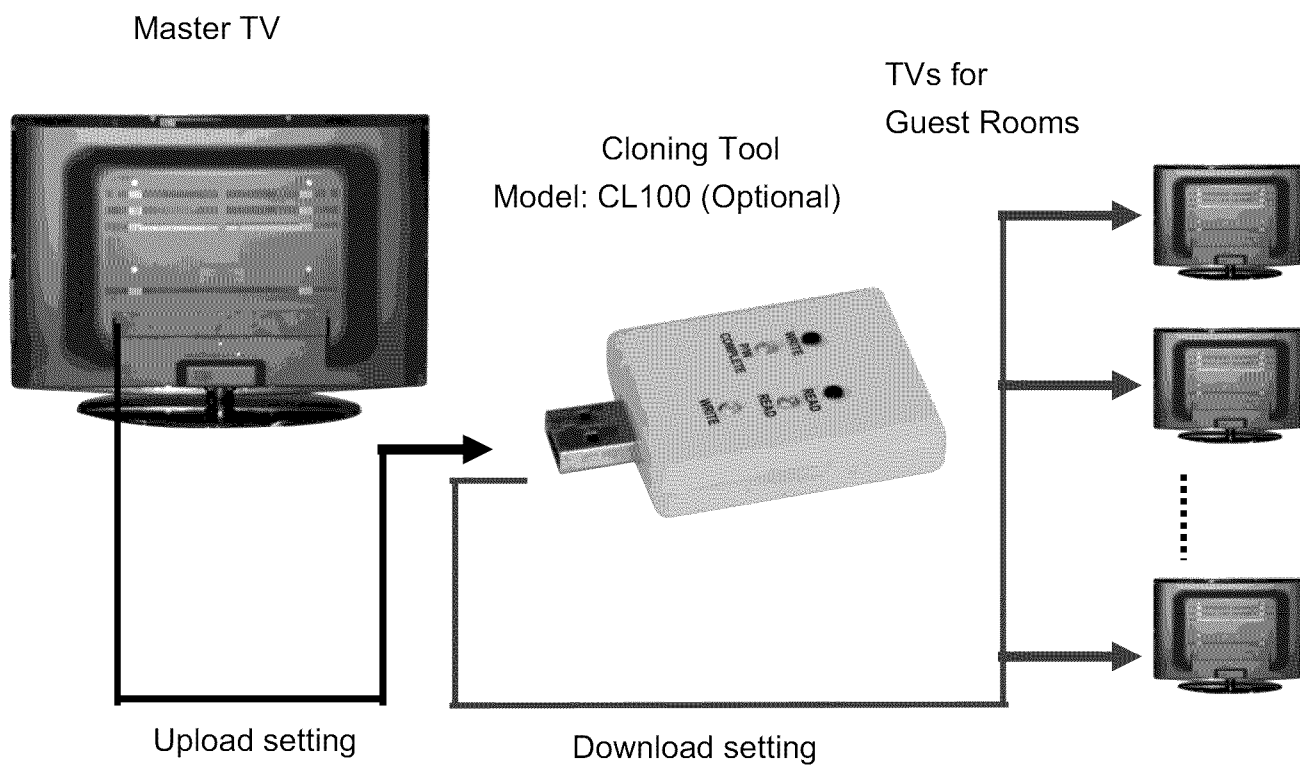

## **Simple Troubleshooting**

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

If the display still fails to perform as expected, connect your helpline for assistance.

### **No power**

- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

### **No picture or sound**

- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

### **Poor picture quality**

- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings: brightness, colour, sharpness, contrast, hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

### **No colour**

- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the channel is tuned properly.

### **TV does not respond to remote control**

- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control are not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

## Technical Specifications

LCD Panel	Panel Size	40" (measured diagonally) TFT LCD
	Brightness	450cd/m <sup>2</sup>
	Contrast Ratio	4000:1
BROADCAST SIGNAL SYSTEM		NTSC M + ATSC
ANTENNA INPUT IMPEDANCE		x1
SOUND OUTPUT		8W x 2
Max. Resolution		1920 x 1080
Input Connector	VIDEO	2
	S-VIDEO	1
	YPbPr	1
	AUDIO (L/R)	2
	PC IN	1
	HDMI	2
	RF	1
Output Connector	SPDIF	1
	VIDEO	1
	AUDIO(L/R)	1
Power Source	AC 100-240V, 50/60HZ	
Power Consumption	250W	

\* Product specifications and appearance are subject to change without notice.

# **VIORÉ™ COMMERCIAL LIMITED WARRANTY**

## **FLAT PANEL TELEVISION**

This **VIORÉ** brand Product, as supplied and distributed by **VIORÉ** and delivered new in the original carton to the original purchaser is warranted by **VIORÉ** against manufacturing defects in materials and workmanship for a limited warranty period of two (2) years on parts and labor. This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close out", "liquidation sale", "open box", products missing accessories, no fault found or damaged at time of delivery to **VIORÉ**.

Proof of purchase within two years from date of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through **VIORÉ** authorized dealers and used in the United States, Canada, and Puerto Rico by the original purchaser. To receive warranty service, the purchaser must contact **VIORÉ** for problem determination and service procedures. Warranty service may only be performed by a duly authorized **VIORÉ** service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase to **VIORÉ** or **VIORÉ's** authorized service center.

**VIORÉ** will repair or if repairs cannot be made, **VIORÉ** will replace this Product at no charge if the Product is defective as specified in this limited warranty during the limited warranty period. **VIORÉ** may use new or remanufactured parts or products to repair or replace the Product at its sole discretion. All replaced parts and Products become the property of **VIORÉ** and must be returned to **VIORÉ**. Replacement parts and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, commercial use of this product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by **VIORÉ** which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. **VIORÉ** does not warrant uninterrupted or error-free operation of the product.

**THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON VIORÉ. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VIORÉ SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact **VIORÉ** at:

**Phone: 1-877-777-1428 (USA / Puerto Rico)  
1-877-777-1429 (Canada)**

**[www.viore.com](http://www.viore.com)**