 


Operating Instructions WARNING: Before operating dishwasher, read important safety instructions in the Automatic Dishwashing Guide.

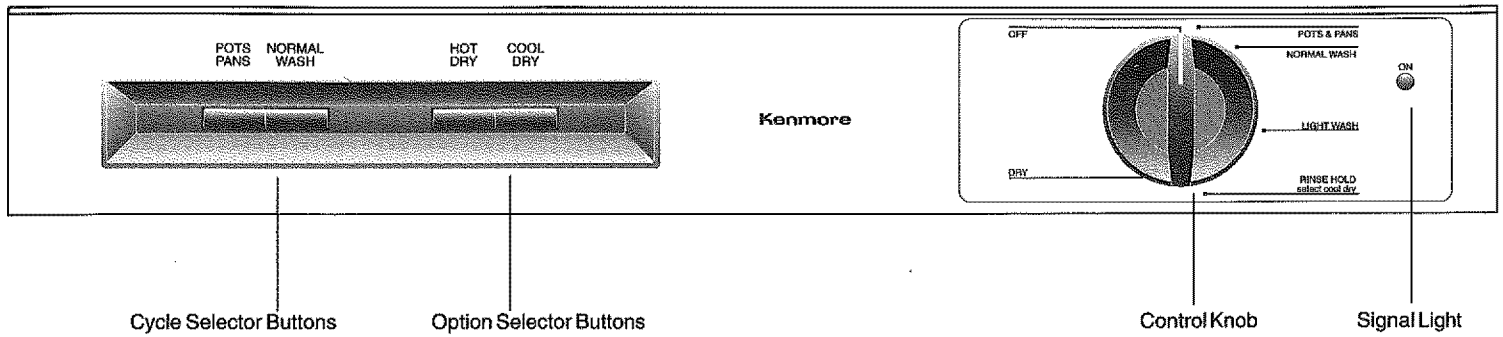

Starting Your Dishwasher

1. Load the dishwasher and add detergent (see your Automatic Dishwashing Guide). *Use granular detergent for best results.*
2. Close the door but do not latch.
3. Push selector button for desired cycle. If you plan to use the LIGHT WASH cycle or RINSE HOLD, push the NORMAL WASH button.
4. Push selector button for desired option.


5. Turn the control knob (clockwise to the desired cycle).
6. Turn on the hot water faucet nearest the dishwasher to clear cool water from the water pipe, then turn faucet off.
7. Latch dishwasher door to start cycle. *Motor sounds will be heard before water enters the tub.*

NOTE: The "ON" light glows while the dishwasher is operating. If the light doesn't come on when you latch the door, make sure the control knob has been advanced far enough.

Cycles


| | | | |
|--|--|---|--|
| | | <p>POTS & PANS Cycle For heavily soiled dishes and pots and pans. Cycle starts with pre-drain.</p> <p>Cycle Time: Approx. 81 min. Water Usage: Approx. 15.0 gal.</p> | <p>WASH → RINSE → RINSE → WASH → RINSE → RINSE → DRY → OFF</p> |
| | | <p>NORMAL WASH Cycle For normally soiled dishes. Cycle starts with pre-drain.</p> <p>Cycle Time: Approx. 74 min. Water Usage: Approx. 12.5 gal.</p> | <p>WASH → RINSE → WASH → RINSE → RINSE → DRY → OFF</p> |
| | | <p>LIGHT WASH Cycle For pre-rinsed or lightly soiled dishes. Cycle starts with pre-drain.</p> <p>Cycle Time: Approx. 60 min. Water Usage: Approx. 7.5 gal.</p> | <p>WASH → RINSE → RINSE → DRY → OFF</p> |
| | | <p>RINSE HOLD Cycle For rinsing dishes that will be washed later. Use Cool Dry option. Do not use detergent. Cycle starts with pre-drain.</p> <p>Cycle Time: Approx. 15 min. Water Usage: Approx. 5.0 gal.</p> | <p>RINSE → RINSE → OFF</p> |

Options

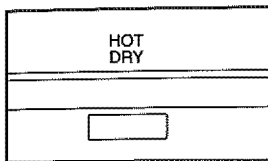

HOT DRY Option

Heater is on for the entire drying period. Drier dishes.

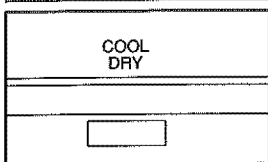

COOL DRY Option

Heater is off for the entire drying period. Saves energy. **Note:** If you wish to shorten drying time and save energy, turn the control knob to "OFF" at the beginning of the dry cycle and open the dishwasher door slightly. Use of a rinse agent will speed your drying and reduce spotting. The best drying results are obtained with hot water.

Helpful Hints

Before Operating Your Dishwasher

Please read your Automatic Dishwashing Guide. It contains IMPORTANT SAFETY INFORMATION for the safety of those operating your dishwasher. It also contains many suggestions for obtaining the best results from you dishwasher.

What Your Dishwasher Needs To Do Its Job

- Water temperature should be 140°F (60°C).
- Water pressure should be between 15 and 120 pounds per square inch.
- **Fresh** detergent for automatic dishwasher. Use granular detergent for best results.
- Proper connections to water and electricity.
- Rinse agent dispenser filled to reduce spotting and speed drying. (Refill dispenser at least once a month.)


Loading the Dishwasher

Proper loading contributes to good washing results. See your Automatic Dishwashing Guide for complete instructions and loading examples.

- Scrape away excess food, bones, pits, etc.
- When loading dishware into the rack, remember the following:
 - Load plastic items ("Dishwasher Safe") in upper rack only.
 - Place glasses in rows **between** prongs, not over prongs.
 - Silverware should be loaded so pieces do not nest together or protrude through openings in the basket.
 - Dishes should not interfere with turning or extending parts of the spray system.
 - Load with soiled surfaces facing inward.
 - Items should be placed so water can drain freely.

How to Add a Dish During a Cycle

1. To be certain the added item is washed and rinsed, make sure there is a full wash cycle yet to be completed.
2. Unlatch the door to stop the cycle. Wait for the water action to stop before opening.
3. Open the door and add the dish.
4. Close and latch the door. The cycle will resume automatically.

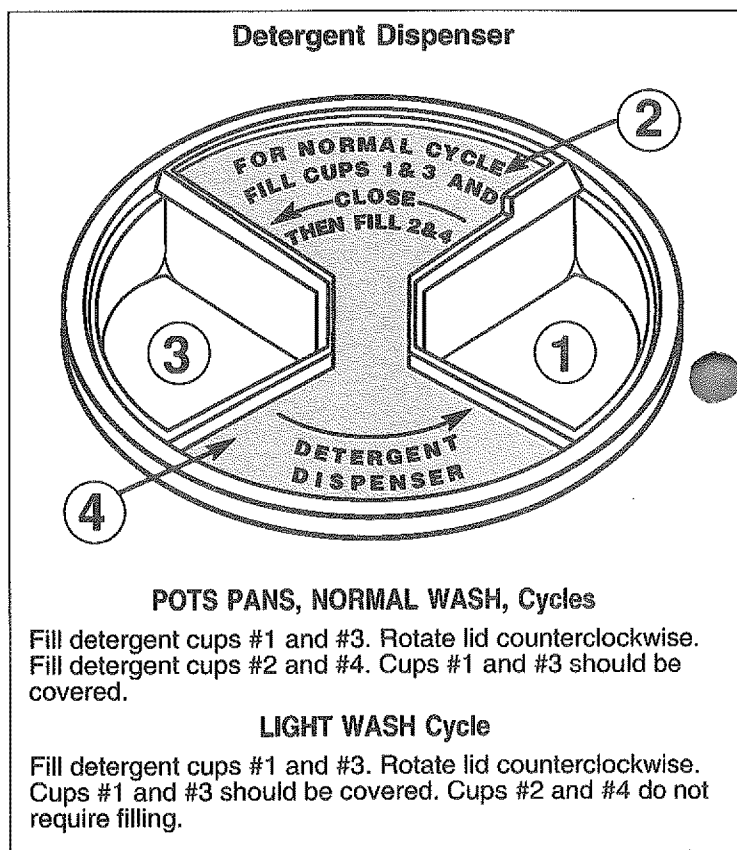

Remember, It Is Normal . . .

- For a small amount of water to remain in the bottom of the tub.
- To hear some sounds while your dishwasher is running:
 - The fill valve opening or closing.
 - Water entering the dishwasher.
 - Timer clicking as it advances.
 - Water being pumped out during drain.
 - Detergent cup opening.
 - Pump motor starting.
 - Double drain at the end of last rinse.

Before You Call For Service

Please check the Common Dishwashing Problems and Solutions section of your Automatic Dishwashing Guide. It lists many many operating problems and solutions you can correct yourself.