



CYCLONIC STICK VAC | CYCLONIC ASPIRATEUR VERTICAL | CYCLONIC BARREDORA DE SUCCIÓN



OWNER'S MANUAL

GUIDE D'UTILISATION • MANUAL DEL USUARIO

Operating and Servicing Instructions

Please read these instructions carefully before using your HOOVER® Stick Vac.

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.

Instructions d'Utilisation et d'Entretien

Veillez lire attentivement ces instructions avant d'utiliser votre aspirateur vertical HOOVER®.

N'oubliez pas d'enregistrer votre produit en ligne, à l'adresse Hoover.com, ou par téléphone, au 1-800-944-9200.

Instrucciones de Funcionamiento y Mantenimiento

Lea atentamente estas instrucciones antes de usar su Barredora de succión HOOVER®.

Inscriba su producto en línea en Hoover.com, o llame al 1-800-944-9200 si prefiere hacerlo por teléfono.


©2010 Techntron Floor Care Technology Limited. All Rights Reserved. Tous droits réservés.
Todos los derechos reservados. #960009635 ID101174-RO

- Brushroll continues to turn while product is turned on and handle is in upright position unless On/Off switch is set to the bare floor mode. To avoid damage to carpet, rugs, and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs.

WARNING:

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

1. FEATURES

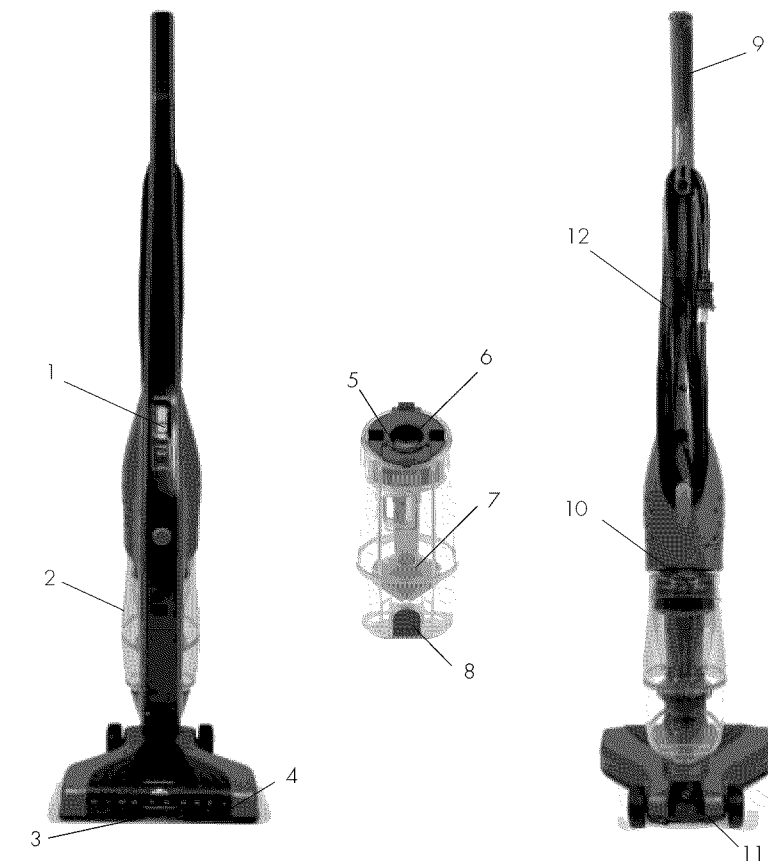

- | | | |
|--|--------------------------------|-----------------------------|
| 1.1 FRONT | DIRT CUP AND FILTER | BACK |
| 1. On/Off Switch (O=OFF, I=ON) | 5. Filter Cap | 9. Handle |
| 2. Dirt Cup | 6. Filter (inside filter cap) | 10. Dirt Cup Release Button |
| 3. Large Debris Opening | 7. Baffle Tube | 11. Nozzle Release Button |
| 4. Bottom Nozzle Cover (underneath nozzle) | 8. Bottom Empty Release Button | 12. Cord |


If you need assistance:

Visit our website at hoover.com. Follow the authorized dealer locator link to find the Hoover authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover authorized dealer. Locations (U.S. only) or to speak with a customer service representative; Mon-Fri 8am-7pm EST.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

2. ASSEMBLY


Attach Nozzle

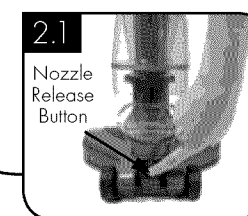


CAUTION: To reduce the risk of injury from moving parts, unplug before servicing.

Line up nozzle with main body and firmly push nozzle into body of unit until nozzle locks into place. **NOTE:** To remove, push release button and pull the nozzle away from the body of the unit.

Attach Handle

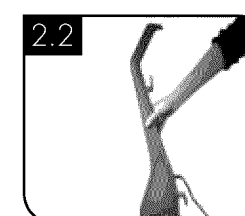


Insert handle into body. **NOTE:** Ensure handle faces proper direction.

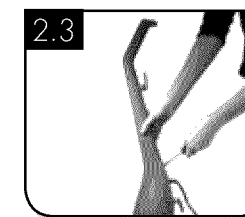

Insert screw and tighten until secure. **NOTE:** DO NOT over tighten screw.


Cord Storage

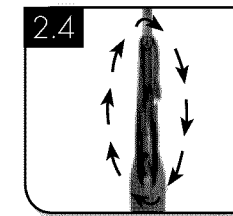

Wrap cord around cord hooks for convenient storage. Attach the plug end to cord.

3. HOW TO OPERATE

On/Off Switch

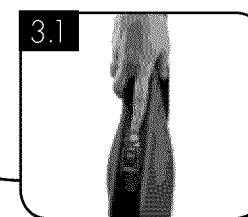


To turn vacuum on, slide switch forward.

(OFF) O

(ON) I : Has two modes, each indicated by a graphic displayed in window. The first mode is for bare floors and the second for carpet.

Handle Release

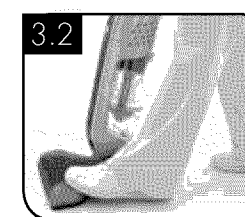

Hold down nozzle with foot and tilt back to reclining position.

4. MAINTENANCE


Dirt Cup & Filter Removal & Replacement

IMPORTANT: For best results, clean after each use.


REGULAR MAINTENANCE: Each time the dirt cup is emptied, the filter should be cleaned [Filter will be discolored after use. This will not affect the filter's performance.]

Any other servicing should be done by an authorized service representative.


Dirt Cup Removal and Cleaning

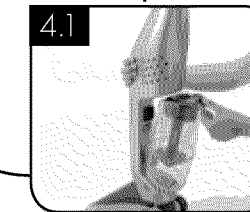

To Remove dirt cup, depress the dirt cup release button located on the top of the dirt cup and tip away from the body of the unit.

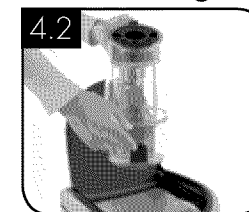

Press dirt cup empty button over trash can to release debris. Push door closed until latch clicks.

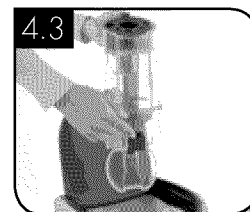


Dirt Cup Debris and Clog Removal


In order to maintain optimum performance of your cleaner, each time the dirt cup is removed for emptying it is recommended to check if there is any debris trapped in the dirt tube (A). If so, remove the debris before re-attaching the dirt cup to the cleaner.

If you still are experiencing reduced suction/performance, detach the nozzle base from the main unit (press button on back of nozzle to release B) and inspect both openings of the nozzle base (C) for any trapped debris. Remove any debris that may be present before re-attaching the nozzle base to the main body of the cleaner.


Filter Removal and Cleaning

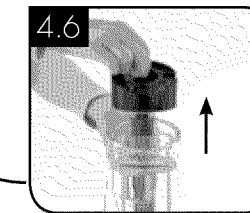

Pull out filter cap.

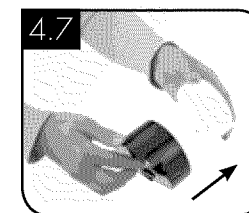

Pull out filter and brush clean. Rinse under cold water as needed.

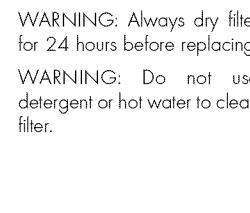


WARNING: Always dry filter for 24 hours before replacing.


WARNING: Do not use detergent or hot water to clean filter.

For filter replacement, please call 1-800-944-9200 or visit our website at www.hoover.com to locate a dealer nearest you. Filter Service Part #410044001.


Dirt Cup and Filter Replacement

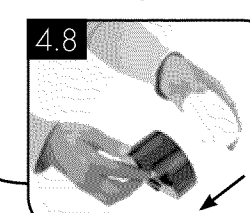

Insert filter into filter cap.

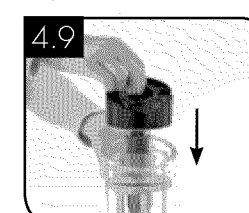


Insert filter cap into dirt cup.

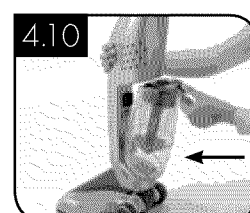


Place bottom of dirt cup onto housing and pivot into place until dirt cup release button locks.


Baffle Tube Removal and Replacement

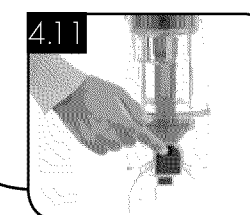

Hold dirt cup right side up and press bottom release button to open trap door.

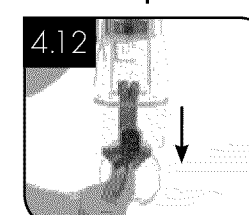


Turn baffle tube counter clockwise until it stops. Pull out baffle tube, hold over trash can and shake free debris.

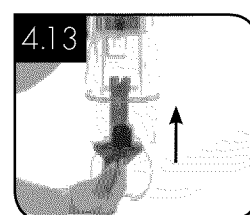

To replace baffle tube, insert back into dirt cup, align slots and twist clockwise until tube locks in place.

Belt and Brushroll Replacement

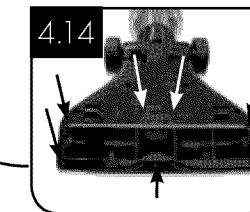

CAUTION: To reduce the risk of injury from moving parts, unplug before servicing.
CAUTION: Not to be used for grooming a pet.
Turn vacuum nozzle over. Remove screws indicated by arrows on bottom nozzle plate. Lift plate off nozzle bottom to access brush, belt and nozzle.
After replacement turn brushroll making sure belt turns freely.
Return nozzle plate and screws.

5. SERVICE

ANY SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE Call 1-800-944-9200 USA & Canada

In the event that further assistance is required, see your Yellow Pages for an authorized HOOVER® Dealer or visit www.hoover.com. Costs of any transportation to and from any place of repair are to be paid by the owner. The service parts used in this unit are easily replaced and readily available from an authorized HOOVER® Dealer or retailer. Always identify your product by the model number and manufacturing code when requesting information or ordering replacement parts. (The model number appears behind the dirt cup of the product.)

6. TROUBLESHOOTING

If a minor problem develops, it usually can be remedied quite easily when the cause is identified by using the checklist below.

Any other servicing should be done by an authorized service representative.

WARNING: To reduce risk of personal injury - unplug vacuum before servicing.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Product does not pick up dirt	1. Dirt cup may be full.	1. Empty dirt cup.
	2. Filter may be dirty.	2. Clean and/or wash filter.
	3. Baffle tube may be dirty.	3. Remove and clean.
	4. Airpath may be clogged.	4. Unplug vacuum before servicing. Remove nozzle by pressing the nozzle release button and pulling the nozzle in a downward motion. Remove any debris clogged in the nozzle airpath (see figs. 4.4 - 4.5). Reassemble nozzle to the product.
	5. Internal component damage.	5. Call for service: 1-800-944-9200
Brushroll will not turn	1. Brushroll may have an obstruction.	1. Unplug vacuum before servicing. Remove nozzle by pressing the nozzle release button and pulling the nozzle in a downward motion. Remove any debris clogged in the nozzle airpath (see figs. 4.4 - 4.5). Reassemble nozzle to the product.
	2. Motor protection device tripped.	2. Turn product to off and unplug. product will reset in approximately 30 minutes.
	3. Broken belt.	3. Unplug vacuum before servicing. Remove nozzle cover replace with recommended belt and replace nozzle cover.
	4. Internal component damage.	4. Call for service: 1-800-944-9200
Cleaner won't run	1. Power cord not firmly plugged in.	1. Plug unit into outlet firmly.
	2. Internal damage.	2. Call for service: 1-800-944-9200
	3. Blown fuse or tripped breaker.	3. Replace fuse or reset breaker in home.

Limited TWO Year Warranty for Cyclonic Stick Vac (Domestic Use)

WHAT THIS WARRANTY COVERS

When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER® product is warranted against original defects in material and workmanship for a full two year period from date of purchase (the "Warranty Period"). During the Warranty Period, Hoover® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchanges and Canada.

HOW TO MAKE A WARRANTY CLAIM

If this product is not as warranted, take or send the product to a Hoover® Authorized Warranty Service Dealer along with proof of purchase. For an automated referral to authorized service outlets in the U.S.A., phone: 1-800-944-9200 Or visit Hoover online at www.hoover.com.

WHAT THIS WARRANTY DOES NOT COVER

This Warranty does not cover: use of the product in a commercial operation (such as maid, janitorial and equipment rental services), brushroll, belt, improper maintenance of the product, damage due to misuse, acts of God, nature, vandalism or other acts beyond the control of Hoover, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick up, delivery, transportation or house calls. However, if you mail your product to a Hoover Authorized Warranty Service Dealer, cost of shipping will be paid one way.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, outside a U.S. Military Exchange and outside of Canada. This warranty does not cover products purchased from a party that is not an authorized retailer, dealer, or distributor of Hoover products.

OTHER IMPORTANT TERMS

This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any replacement or repair performed under this Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY HOOVER®. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL HOOVER® BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.

FRANÇAIS

CET ASPIRATEUR A ÉTÉ CONÇU POUR USAGE DOMESTIQUE SEULEMENT.
L'UTILISATION DE CE PRODUIT À DES FINS COMMERCIALES INVALIDE LA PRÉSENTE GARANTIE.

CONSIGNES DE SÉCURITÉ IMPORTANTES RANGER ET CONSERVER CES INSTRUCTIONS

Durant l'utilisation d'un appareil électrique, toujours respecter les précautions élémentaires, y compris les suivantes :
LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL.
AVERTISSEMENT: AFIN DE RÉDUIRE AU MINIMUM LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURES :

- Assembler complètement avant l'utilisation.
- N'utiliser l'appareil qu'à la tension spécifiée sur la plaque signalétique située derrière le vide-poussière de l'appareil.
- Ne pas laisser l'appareil sans surveillance lorsqu'il est branché. Le débrancher quand il n'est pas utilisé et avant d'en faire l'entretien.
- Ne pas utiliser l'appareil à l'extérieur ou sur des surfaces humides.
- Ne pas permettre que l'appareil soit utilisé comme un jouet. Ce produit n'est pas conçu pour être utilisé par des enfants de 12 ans et moins. Exercer une étroite surveillance lorsque l'appareil est utilisé à proximité d'enfants. Pour éviter les risques de blessures ou de dommages, tenir le produit hors de la portée des enfants, et ne pas leur permettre de placer leurs doigts ou des objets dans les ouvertures.
- L'appareil doit être utilisé seulement comme indiqué dans ce manuel. Utiliser uniquement les accessoires et les produits recommandés par le fabricant.
- Ne pas utiliser l'appareil si la fiche ou le cordon est endommagé. Si l'aspirateur ne fonctionne pas adéquatement, s'il est tombé, a été endommagé, a été laissé à l'extérieur ou est tombé dans l'eau, l'expédier à un centre de réparation pour qu'il soit vérifié.
- Ne pas tirer l'appareil par le cordon, ne pas se servir du cordon comme poignée, ne pas fermer de portes sur le cordon et ne pas contourner des coins ou des rebords tranchants avec le cordon. Éviter de faire rouler l'appareil sur le cordon. Tenir le cordon éloigné des surfaces chaudes.
- Ne pas tirer sur le cordon pour débrancher l'appareil, mais plutôt sur la fiche.
- Ne pas manipuler la fiche ou l'aspirateur avec les mains mouillées.
- Ne pas insérer d'objets dans les ouvertures de l'appareil. Ne pas utiliser l'appareil si les orifices sont obstrués; retirer la poussière, la mousse, les cheveux ou tout ce qui pourrait réduire le débit d'air.
- Garder les cheveux, les vêtements amples, les doigts et toute autre partie du corps à l'écart des ouvertures et des pièces en mouvement.
- Éteindre toutes les commandes avant de débrancher l'appareil.
- Être très prudent pendant l'utilisation dans les escaliers. Ne pas déposer l'aspirateur sur les marches. Afin d'éviter les blessures ou les dommages et d'empêcher l'appareil de tomber, toujours placer l'appareil au bas de l'escalier. Ne pas placer l'appareil dans les escaliers ou sur un meuble, ce qui pourrait causer des blessures ou des dommages.
- Ne pas aspirer les liquides inflammables ou combustibles comme l'essence, ni utiliser l'appareil à proximité de ces matériaux.
- Toujours éteindre cet appareil avant d'installer ou de retirer le tuyau ou le suceur électrique.
- N'aspirer aucune matière brûlante ou dégageant de la fumée, comme des cigarettes, des allumettes ou des cendres chaudes.
- Ne pas utiliser l'appareil sans son vide-poussière ou ses filtres.

