 


OWNER'S MANUAL

SEARS

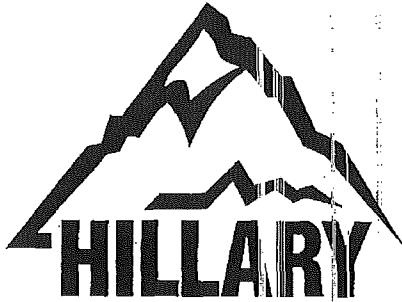

 
MODEL NO.
308.731140

• safety rules • assembly
care • replacements parts

THREE ROOM LOCKER DOME TENT

CAUTION: READ ALL INSTRUCTIONS
CAREFULLY BEFORE USE AND RETAIN
THEM FOR FUTURE REFERENCE.

FOR CONSUMER SERVICE, CALL 1-800-325-8368

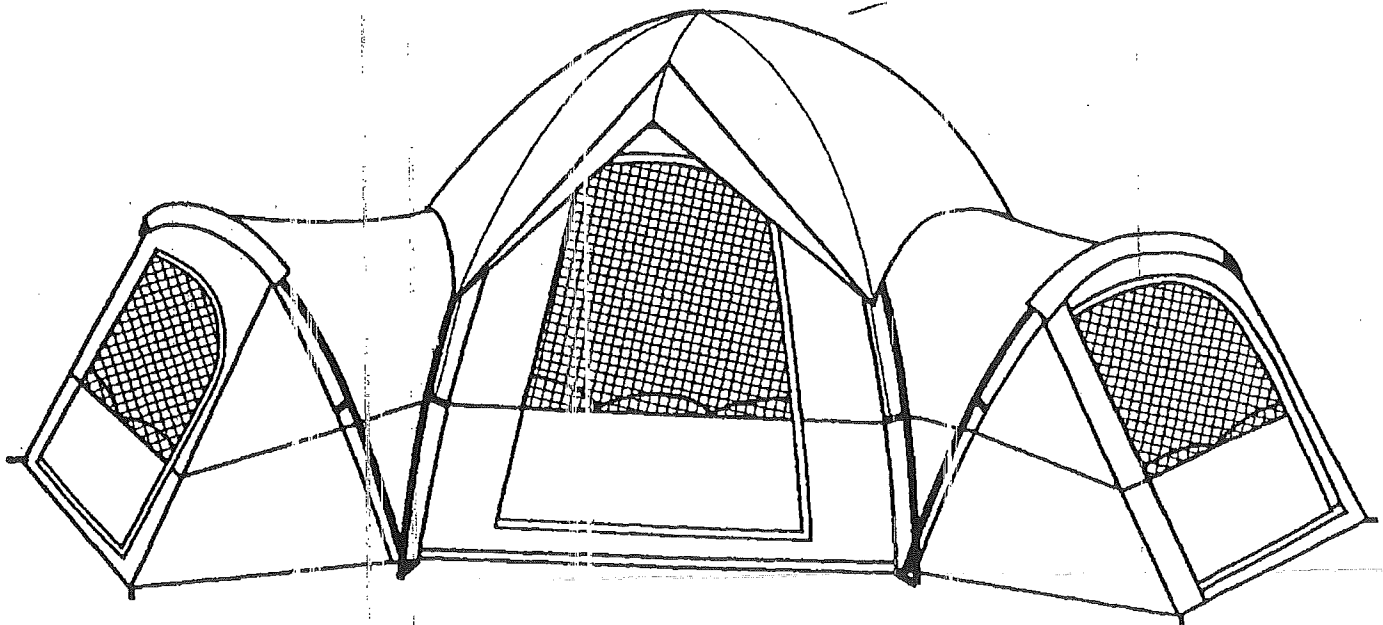

SAFETY

WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.
8. Do not store tent on concrete floor.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

CARE

Do not leave your tent set up in direct sunlight longer than necessary. The polyester fabric in your Hillary tent provides much greater ultraviolet resistance than nylon tents but for maximum life of product, avoid set up in sunlight for prolonged periods of time.

Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

Make certain your tent is clean and dry before storage. Do not store on concrete floor.

FULL ONE YEAR WARRANTY

 
If, within one year from the date of purchase, this tent fails due to defect in material or workmanship, warranty service is available by RETURNING IT TO THE NEAREST SEARS STORE/SERVICE CENTER in the United States and Sears will repair it, free of charge.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SEARS, ROEBUCK AND CO.
Department 817 WA
Hoffman Estates, IL 60179 USA

REPLACEMENT PARTS

*Congratulations on your purchase of a Sir Edmund Hillary tent,
an exclusive brand of Sears.*

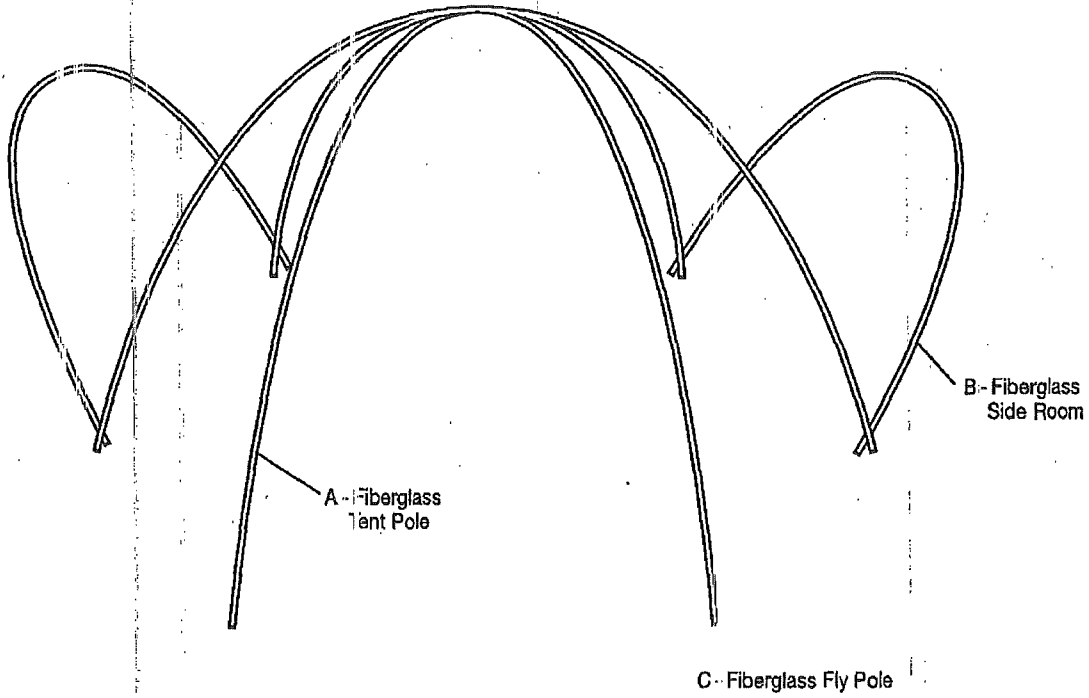

HOW TO ORDER REPLACEMENT PARTS FOR YOUR NEW DOME TENT

The Model Number for your tent will be found on the convenience pocket sewn on the inside of the tent. Always mention the Model Number in all correspondence regarding your Sears Tent and when ordering replacement parts.

For questions concerning your tent or to order replacement parts, call 1-800-325-8368.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

- 1. Part Number 2. Parts Description 3. Model Number 4. Name of Item

KEY NO.	DESCRIPTION	MODEL NO. 731140	QUANTITY REQUIRED
		PART NO.	
A	Fiberglass Tent Pole - Main	02-0090	3
B	Fiberglass Tent Pole - Side	97-0010	2
C	Fiberglass Fly Pole	98-0003	1
	Complete Frame	73114FR	1
	Carry Bag	Dome Bag	1
	Replacement Fly	73114FLY	1

ASSEMBLY INSTRUCTIONS

IMPORTANT: We advise you to assemble the tent once before going camping to become familiar with the assembly of the tent. For this model, it is recommended two people be involved in the set up.

 
NOTE: Please look at the replacement parts diagram to see how your frame is assembled.

- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the doors, prior to tent set-up, to allow air to enter the tent.
- To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of your local Sears store.
- For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.


STEP 1: Spread tent out flat, floor side down.

STEP 2: Extend the fiberglass frame sections by pulling out each section and placing into the metal ferrules. You will have six pole sections. The three longest poles (A) are for the main tent room, the next two longest poles (B) are the side room poles. The remaining, shortest pole (C) will be used for the fly.


STEP 3: There are six pole sleeves located on the roof of the tent. While making sure sleeves are in line with each other, slide an end of each of the three longest fiberglass poles (A) through the sleeves that are opposite each other. Straighten the sleeves along the fiberglass sections. Position poles so that they cross at the center roof of the tent.

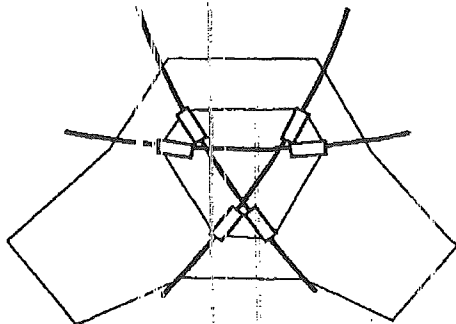

 STEP 4: Starting at the rear of the tent, locate the pin and rings at the base of the tent and insert one of the pins into the end of the corresponding pole. You will notice there are two pins attached to the rings at the sides of the tent. One pin is for the main room tent pole and other pin will be used for the side room pole.

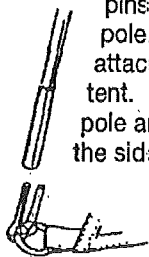

 STEP 5: One person should now go into the front door of the tent and gently lift the roof of the tent and the poles up off the ground. The other person should carefully flex the main room poles, one at a time, and place the ferrules at the ends of the pole over the metal pins at the base of the tent. Clip plastic hooks to the fiberglass frame sections.

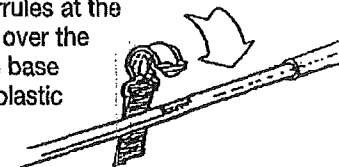


STEP 6: Insert the metal stakes through the rings located at each corner of the main tent room. Stake down main room by hammering each stake into the ground at a 45° angle, making certain to pull the main room out tight, so there are no wrinkles in the inside tent floor.

STEP 7: To form side rooms, slide the fiberglass side room poles (B) through the sleeves located at the roof of each of the two side rooms. With a person on each end of the side room poles, gently flex the fiberglass and place the pole ends over the remaining pins at the tent base. Clip tent to frame.


STEP 8: Stake down the side rooms by inserting the plastic stakes through the webbing stake loops and hammering stakes into the ground at a 45° angle, making sure the tent rooms are pulled out even and tight.

 Tent should appear as shown.

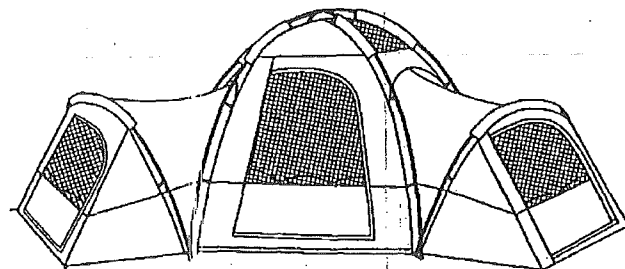


ASSEMBLY INSTRUCTIONS

 STEP 9: Unfold fly. Place ends of the fiberglass fly pole section into the pole pockets on the underneath side of the fly. Flexing the fiberglass may be necessary. Using the ties in the center of the fly, tie the fly pole into place.

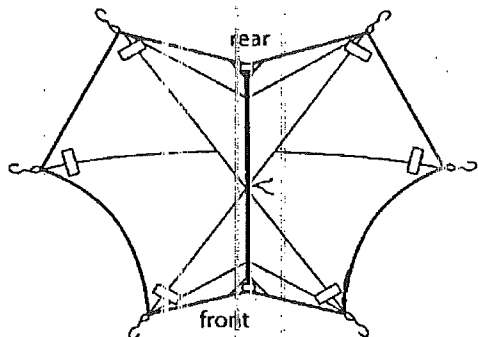

STEP 10: Position fly over tent so that the fly pole is in line with the front door of the tent. Fasten the Velcro fasteners sewn to the edge of the fly around the fiberglass tent poles.

 Tent should appear as shown.

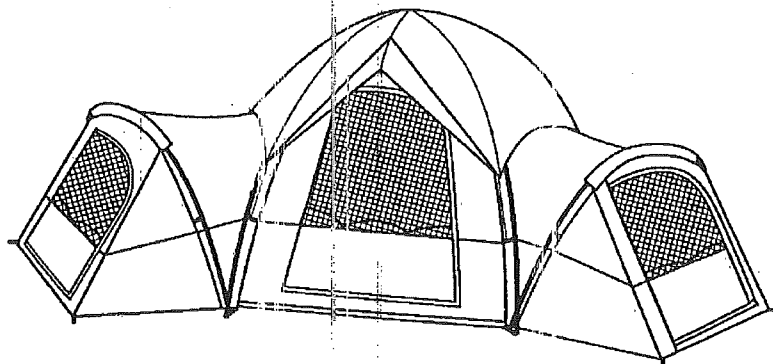

Convenience pockets are included inside your tent to keep small items within easy reach and up off the tent floor.

NOTE: Divider curtains are included which can be used to divide your tent into separate rooms for privacy. Simply attach to the loops located at the ceiling and side walls, inside your tent.

NOTE: To take down tent, follow steps above in reverse order. Be sure to leave tent doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of the carry bag, with the pole bag placed at the end opposite the main door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing. Store in a dry area off of concrete floor.

SEARS



THANK YOU FOR PURCHASING A QUALITY HILLARY TENT. THIS TROUBLESHOOTING GUIDE IS DESIGNED TO GIVE YOU YEARS OF FUN AND ENJOYMENT FROM YOUR CAMPING EQUIPMENT. YOUR TENT MAY TAKE ON ALMOST HUMAN CHARACTERISTICS. IT IS DIFFERENT ON A SUNNY, WARM DAY THAN ON A COOL, CLOUDY DAY; DIFFERENT WHEN IT IS RAINING THAN WHEN IT IS DRY.

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON THE OUTSIDE OF THE TENT COMBINED WITH BODY HEAT ON THE INSIDE OF THE TENT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING THE DOORS AND WINDOWS OPEN WILL REDUCE MOISTURE CONDENSATION.
2. SEAM LEAKAGE	APPLY A GENEROUS AMOUNT OF SEAM SEALER ON SEAMS. SEAM SEALER MAY BE PURCHASED AT ANY LOCAL SPORTING GOODS STORE.
3. MILDEW	TO AVOID MILDEW NEVER PUT YOUR TENT AWAY WET OR DAMP. HOWEVER, IF MILDEW OCCURS USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD DISHWASHING SOAP OR FELS NAPHTHA SOAP TO CLEAN. LET THE TENT DRY IN THE SUNLIGHT AND APPLY WATER REPELLENT COMPOUND.
4. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A CANVAS OR AWNING REPAIR SHOP FOR LARGER TEARS.
5. FAULTY ZIPPER	ALL OUR TENTS COME WITH SELF REPAIRING ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. IF THIS DOESN'T WORK, A REPLACEMENT CAN BE ORDERED FROM OUR PARTS DEPARTMENT AND THEN BE INSTALLED BY A LOCAL CANVAS OR AWNING REPAIR SHOP IN YOUR AREA.
6. FADING FABRIC	DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN.
7. FLOOR CONDENSATION	A GROUND CLOTH UNDER THE TENT PREVENTS THE FLOOR FROM FEELING DAMP AND HELPS PROLONG ITS LIFE. THE CLOTH SHOULD BE SMALLER THAN THE TENT FLOOR TO PREVENT RAIN FROM RUNNING UNDER THE TENT.
8. REMOVING STAKES	STAKES SHOULD BE PULLED WITH ANOTHER STAKE, HAMMER OR A STAKE PULLER, BUT NEVER BY PULLING ON THE TENT. AVOID STAKING TENT SO TIGHT THAT IT STRETCHES THE FABRIC. OVERSTRETCHING MAY CAUSE STAKE LOOPS TO TEAR.

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE. SEND US YOUR IDEAS ON "TRICKS OF CAMPING", REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR JUST YOUR THOUGHTS. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-325-8368, OR WRITE US AT: WENZEL COMPANY, 502 ORCHARD STREET, NEW HAVEN, MO 63068.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT FOR LONGER THAN NECESSARY.

ATTENTION!!!

- If You Have . . . **Camping Suggestions**
- If You Need . . . **Problems Solved**
- If You Have . . . **Consumer Questions**

CALL OUR CONSUMER HOT LINE

1-800-325-8368

SEARS



THANK YOU FOR PURCHASING A QUALITY HILLARY TENT. THIS TROUBLESHOOTING GUIDE IS DESIGNED TO GIVE YOU YEARS OF FUN AND ENJOYMENT FROM YOUR CAMPING EQUIPMENT. YOUR TENT MAY TAKE ON ALMOST HUMAN CHARACTERISTICS. IT IS DIFFERENT ON A SUNNY, WARM DAY THAN ON A COOL, CLOUDY DAY; DIFFERENT WHEN IT IS RAINING THAN WHEN IT IS DRY.

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON THE OUTSIDE OF THE TENT COMBINED WITH BODY HEAT ON THE INSIDE OF THE TENT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING THE DOORS AND WINDOWS OPEN WILL REDUCE MOISTURE CONDENSATION.
2. SEAM LEAKAGE	APPLY A GENEROUS AMOUNT OF SEAM SEALER ON SEAMS. SEAM SEALER MAY BE PURCHASED AT ANY LOCAL SPORTING GOODS STORE.
3. MILDEW	TO AVOID MILDEW NEVER PUT YOUR TENT AWAY WET OR DAMP. HOWEVER, IF MILDEW OCCURS USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD DISHWASHING SOAP OR FELS NAPHTHA SOAP TO CLEAN. LET THE TENT DRY IN THE SUNLIGHT AND APPLY WATER REPELLENT COMPOUND.
4. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A CANVAS OR AWNING REPAIR SHOP FOR LARGER TEARS.
5. FAULTY ZIPPER	ALL OUR TENTS COME WITH SELF REPAIRING ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. IF THIS DOESN'T WORK, A REPLACEMENT CAN BE ORDERED FROM OUR PARTS DEPARTMENT AND THEN BE INSTALLED BY A LOCAL CANVAS OR AWNING REPAIR SHOP IN YOUR AREA.
6. FADING FABRIC	DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN.
7. FLOOR CONDENSATION	A GROUND CLOTH UNDER THE TENT PREVENTS THE FLOOR FROM FEELING DAMP AND HELPS PROLONG ITS LIFE. THE CLOTH SHOULD BE SMALLER THAN THE TENT FLOOR TO PREVENT RAIN FROM RUNNING UNDER THE TENT.
8. REMOVING STAKES	STAKES SHOULD BE PULLED WITH ANOTHER STAKE, HAMMER OR A STAKE PULLER, BUT NEVER BY PULLING ON THE TENT. AVOID STAKING TENT SO TIGHT THAT IT STRETCHES THE FABRIC. OVERSTRETCHING MAY CAUSE STAKE LOOPS TO TEAR.

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE. SEND US YOUR IDEAS ON "TRICKS OF CAMPING", REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR JUST YOUR THOUGHTS. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-325-8368, OR WRITE US AT: WENZEL COMPANY, 502 ORCHARD STREET, NEW HAVEN, MO 63068.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT FOR LONGER THAN NECESSARY.

ATTENTION!!!

- If You Have . . . **Camping Suggestions**
- If You Need . . . **Problems Solved**
- If You Have . . . **Consumer Questions**

**CALL OUR CONSUMER HOT LINE
1-800-325-8368**