



Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

## Important Warranty Information Regarding Television Format Viewing

See the warranty card for more information on warranty terms. Wide screen format PDP Displays with 16:9 aspect ratios, the ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature, with the images consistently in motion. Displaying stationary graphics and images on the screen, such as the dark sidebars on non-expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing per week. Additionally, viewing other stationary images and text such as stock market crawls, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. Displaying stationary images for more than 5% of total viewing time can cause uneven aging of your PDP display and leave subtle, but permanent burned-in ghost images in the PDP picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On PDP models that offer picture sizing features, use these controls to view different formats as a full screen picture.

Watching the Plasma TV in 4:3 format for a long period of time may leave traces of the borders on the left, right, top, or bottom of the screen. Playing a DVD or a game console may have a similar effect. Damage caused by the above effect is not covered by the warranty.

**After-images on the Screen.** Displaying still images from Video games or a PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images for a long time.

**Warranty** Samsung does not cover any damage caused by image retention. Burn-in is not covered by the warranty.

The glass screen of your PDP TV can break if you accidentally drop the TV. Handle the TV with care. When moving the TV, always have two or more people pick it up and carry it as a safety precaution. Do not lay the TV flat on its face or back.

Your Samsung Plasma TV is a high quality television that has been carefully packaged to protect the integrity of the glass panel and component parts during shipment. It is, nonetheless, a fragile piece of electronics that requires careful handling. Refrain from putting undue stress on any part of the packaging when shipping or unpacking the TV. Use care when installing the TV. Avoid placing the TV in a location where it may be struck, exposed to sharp impacts, or fall. Panel breakage caused by a fall or impact strike is not covered under the manufacturer's warranty.

**Contact SAMSUNG 24/7:** If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

**Country** **CANADA** **USA**

**Address** Samsung Electronics Canada Inc., Customer Service 55 Standish Court Mississauga, Ontario L5R 4B2 Canada Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660-2112

**Customer Care Center** 1-800-SAMSUNG(726-7864)

**Web Site** www.samsung.com

© 2012 Samsung Electronics Co., Ltd. All rights reserved.



## Display Icons Used in the Channel List Screens

Icons	Meaning
✓	A selected channel.
♥	A Favorite channel.
⊙	A reserved program.
Ⓜ	A program currently being broadcast.

## The Channel List Tools Menu **TOOLS**

The Channel List Tools menu contains most of the functions you can use on the **All Channels**, **Added Channels**, and **Favorite List** screens. To view, select a list screen, select a channel, and then press the TOOLS button.

**Add / Delete:** Delete a channel from or add a channel to the **Added Channels** list.

To delete channels from the **Added Channels** list, follow these steps:

- Select one or more channels in the **Added Channels** list using the **▲/▼** buttons and the Yellow Select button on your remote.
- Press the TOOLS button on your remote. The Tools menu appears.
- Select **Delete** in the Tools menu, and then press the ENTER button.

To add channels to the **Added Channels** list, follow these steps:

- Select one or more channels in the **All Channels** list using the **▲/▼** buttons and the Yellow Select button on your remote.
- Press the TOOLS button on your remote. The Tools menu appears.
- Select **Add** in the Tools menu, and then press the ENTER button.

All deleted channels will be shown on the **All Channels** list. You add channels back to the **Added Channels** list on the **All Channels** list.

A gray-colored channel indicates the channel has been deleted from the **Added Channels** list.

The **Add** menu option only appears for deleted channels.

**Add to Favorite/Delete from Favorite:** Lets you add channels to and delete channels from your **Favorites** list.

To add channels to the Favorites list, follow these steps:

- Select one or more channels in the **All Channels** list using the **▲/▼** buttons and the Yellow Select button on your remote.
- Press the TOOLS button on your remote. The Tools menu appears.
- Select **Add to Favorite** in the Tools menu, and then press the ENTER button.

To delete channels from the **Favorites** list, follow these steps:

- Select one or more channels in the **Favorite Channels** list using the **▲/▼** buttons and the Yellow Select button on your remote.
- Press the TOOLS button on your remote. The Tools menu appears.
- Select **Delete from Favorite** in the Tools menu, and then press the ENTER button.

This is normal and does not indicate any defect or operational failure of unit. However, children should be prevented from touching the upper part of the TV.

**The TV is making a 'cracking' noise.** A 'cracking' noise may occur when the TV contracts or expands due changes in the surrounding environment such as temperature or humidity. This is normal and not a defect.

**Cell Defects** Your plasma TV has a panel containing 2,360,000 (HD-level) to 6,221,000 (FHD-level) pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

**Avoid operating the TV at temperatures below 41°F (5°C)**

**A still image displayed too long may cause permanent damage to the PDP Panel.**

Watching the Plasma TV in 4:3 format for a long period of time may leave traces of the borders on the left, right, top, or bottom of the screen. Playing a DVD or a game console may have a similar effect. Damage caused by the above effect is not covered by the warranty.

**After-images on the Screen.** Displaying still images from Video games or a PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images for a long time.

**Warranty** Samsung does not cover any damage caused by image retention. Burn-in is not covered by the warranty.

The glass screen of your PDP TV can break if you accidentally drop the TV. Handle the TV with care. When moving the TV, always have two or more people pick it up and carry it as a safety precaution. Do not lay the TV flat on its face or back.

Your Samsung Plasma TV is a high quality television that has been carefully packaged to protect the integrity of the glass panel and component parts during shipment. It is, nonetheless, a fragile piece of electronics that requires careful handling. Refrain from putting undue stress on any part of the packaging when shipping or unpacking the TV. Use care when installing the TV. Avoid placing the TV in a location where it may be struck, exposed to sharp impacts, or fall. Panel breakage caused by a fall or impact strike is not covered under the manufacturer's warranty.

**Contact SAMSUNG 24/7:** If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

**Country** **CANADA** **USA**

**Address** Samsung Electronics Canada Inc., Customer Service 55 Standish Court Mississauga, Ontario L5R 4B2 Canada Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660-2112

**Customer Care Center** 1-800-SAMSUNG(726-7864)

**Web Site** www.samsung.com

© 2012 Samsung Electronics Co., Ltd. All rights reserved.



## Timer Viewing

To cancel a scheduled show or channel, follow these steps:

- Select the **Programmed List** icon on the left side of the **Channel List** screen, and then press the ENTER button.
- On the **Programmed List** screen, select the show or channel entry you want to change, and then press the TOOLS button. The Tools Menu appears.
- Select **Change Info**, and then press the ENTER button. The **Time Viewing** screen appears.

Use the **◀/▶** buttons to move from entry field to entry field and the **▲/▼** buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.

- Select **Cancel Schedules**, and then press the ENTER button. The **Cancel Schedule** screen appears.
- Select **OK**, and then press the ENTER button.

**Information:** Display the information for a show or channel you have scheduled. You can also change the schedule information.

- Select the **Programmed List** icon on the left side of the **Channel List** screen, and then press the ENTER button.
- On the **Programmed List** screen, select the show or channel entry you want information for, and then press the TOOLS button. The Tools Menu appears.
- Select **Information**, and then press the ENTER button. The **Time Viewing** Information screen appears.

Select **Change Info** and press the ENTER button to change information, or select **Close** and press the ENTER button to close the Information screen.

**Select All / Deselect All:** You can select or deselect all channels in the channel list.

**Other Channel Menu Functions**

**Channel Mode (Added Channels/Favorite Channels)**

Lets you select the channel list displayed when you press the **ACHV** (Channel) button on your remote. For example, if you select Favorite Channels, you will only see Favorite channels when you press the **ACHV** button.

**Fine Tune** Analog channels only.

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually.

Select the channel, and then select **Fine Tune**.

Fine tuned channels that have been saved are marked with an asterisk "\*" on the right-hand side of the channel number in the channel banner.

To reset fine-tuning, select the channel, select **Fine Tune**, and then select **Reset** on the **Fine Tune** screen.

**Programmed List Screen Tools Menu **TOOLS****

**Change Info:** Change the scheduling information for a show or channel you have scheduled.

**Select All:** Select all the channels in the displayed channel list.

**Deselect All:** Deselect all the selected displayed channels.

You can only select **Deselect All** when one or more channels are selected.

**Channel Name Edit:** Analog channels only. Lets you assign a name of up to five characters to an analog channel. For example, Hist, Food, Golf, etc. This makes it easier to find and select a channel.

**Auto Program:** See Auto Program under Memorizing Channels.

**Programmed List (on the Channel List Screen)**

The **Programmed list** displays the channels and programs you have scheduled for viewing using the **Time Viewing** function. You can view, modify, or delete a show you have scheduled using the functions on the **Programmed List** screen Tools menu.

**Programmed List Screen Tools Menu **TOOLS****

**Change Info:** Change the scheduling information for a show or channel you have scheduled.

## The On Screen Menus

Your TV has two kinds of menus, the Main menu and the various Tools menus. The Main menu gives you access to most or all of the menu options available on your TV. The Tools menus display a selected number of frequently used menu options that change depending on the screen you are viewing. A Tools menu symbol (T) in the lower right side of the screen indicates that a Tools menu is available.

The Main menu has seven primary categories:

- Picture
- Sound
- Channel
- Setup
- Input
- Application
- Support

To view the Main menu, press the MENU button on your remote. To view a Tools menu, press the TOOLS button on your remote.

The menu options that appear in the Main menu depend on the Source you have selected. For example, if you have selected the HDMI source, the Channel category will not appear. To see the Channel category, you must first select TV in the Source List.

The Menu options are presented below, arranged by Main menu categories. A Tools button symbol (T) next to an option name indicates the option is also available in one of the Tools menus.

## Picture Menu

### Mode **TOOLS**

Select your preferred picture mode.

When your TV is connected to a PC, you can only select **Entertain** and **Standard**.

**Dynamic:** Brightens the screen. Suitable for a bright room.

**Standard:** Suitable for a normally lit room.

**Movie:** Darkens the screen, making it less glary. Suitable for watching movies in a darkened room.

**Entertain:** Sharpens the picture. Suitable for games.

Only available when the TV is connected to a PC.

**Cell Light / Contrast / Brightness / Sharpness / Color / Tint (G/R)**

**Cell Light:** Adjusts the brightness of the screen by adjusting the brightness of the individual pixels.

**Contrast:** Increases or decreases the contrast between dark and light areas of the picture.

**Brightness:** Adjusts the brightness of the screen. Not as effective as Cell Light.

**Sharpness:** Sharpens or dulls the edges of objects.

**Color:** Adjusts the color saturation. The higher the Color setting, the more intense the color. Low settings remove color and the picture becomes black, white, and gray.

**Tint:** Adjusts the amount of green and red in the picture. As you increase the amount of green, the amount of red decreases and vice versa.

When the TV is connected to a PC, you can only make changes to **Cell Light**, **Contrast**, **Brightness**, and **Sharpness**.

## Advanced Settings

Available in **Standard** and **Movie** mode only.

Compared to previous models, new Samsung TVs offer a more precise picture with more precise controls.

When your TV is connected to a PC, you can only make changes to **Gamma** and **White Balance**.

**Color Space (Auto / Native):** Auto automatically matches the range of colors available to create pictures to the color range of the video source. Native provides a color range wider than the color range of the video source.

**White Balance:** Adjusts the color temperature of the picture so that white objects look white (instead of, for example, slightly pink or slightly yellow) and the overall color of the picture looks natural.

**R-Offset / G-Offset / B-Offset:** Adjusts each color's (red, green, blue) darkness.

**R-Gain / G-Gain / B-Gain:** Adjusts each color's (red, green, blue) brightness.

**Reset:** Resets the **White Balance** to its default settings.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

## Advanced Settings

Available in **Standard** and **Movie** mode only.

Compared to previous models, new Samsung TVs offer a more precise picture with more precise controls.

When your TV is connected to a PC, you can only make changes to **Gamma** and **White Balance**.

**Color Space (Auto / Native):** Auto automatically matches the range of colors available to create pictures to the color range of the video source. Native provides a color range wider than the color range of the video source.

**White Balance:** Adjusts the color temperature of the picture so that white objects look white (instead of, for example, slightly pink or slightly yellow) and the overall color of the picture looks natural.

**R-Offset / G-Offset / B-Offset:** Adjusts each color's (red, green, blue) darkness.

**R-Gain / G-Gain / B-Gain:** Adjusts each color's (red, green, blue) brightness.

**Reset:** Resets the **White Balance** to its default settings.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

**Gamma:** Adjusts the primary color intensity.

**Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.

**Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.

**Flesh Tone:** Adjusts the amount of red in skin tones.

**Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.

Available in **Standard** mode only.

2. Press the ▲ or ▼ button to select **Media Play (USB)**, and then press the ENTER button.

3. Press the ◀ or ▶ button to select an icon (**Videos, Music, Photos, Settings**), and then press the ENTER button.

Media Play might not work properly with unlicensed multimedia files.

Need-to-Know List before using **Media Play (USB)**

- The file system supports FAT16, FAT32 and NTFS.
- Certain types of USB Digital camera and audio devices may not be compatible with this TV.
- Media Play** only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport

1. In the **Media Play** menu, press the ◀ or ▶ button to select **Videos**, and then press the ENTER button.

2. Press the ◀▶/▲/▼ buttons to select a video in the file list.

3. Press the ENTER button or (Play) button.

- The file name is displayed on the top of the screen with the playing time.
- If video time information is unknown, playing time and the progress bar are not displayed.
- During video playback, you can search using the ◀ and ▶ buttons.

In this mode, you can play movie clips contained in a game,

File Extension	Container	Video Codec	Resolution	Frame rate/frame/sec	Bit rate/variable kbps	Audio Codec
*.flv *.avi	flash formats	H.264 H.263	1920x1080 1920x1080	6~30 6~30	30Mbps 30Mbps	MP3

### Other Restrictions

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bit rate/ frame rate above the compatible Frame/sec listed in the Supported Video Formats table.

### Photos



1. In the **Media Play** menu, press the ◀ or ▶ button to select

### Media Play - Additional Functions

#### ■ Videos/Music/Photos Play Option menus

When playing a file, press the TOOLS button.

Category	Operation	Videos	Music	Photos
Title	You can select another video file to play directly.	✓		
Repeat Mode	You can play movie and music files repeatedly.	✓	✓	
Picture Size	You can adjust the picture size to your preference.	✓		
Picture Mode	You can adjust the picture setting.	✓		✓

Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.

#### NOTE

- Standard dimensions for wall mount kits are shown in the table below.
- When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.
- Do not use screws that do not comply with the VESA standard screw specifications.
- Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications.

### Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional information on proper use.

- Please find a "K" icon on the rear of the TV. The Kensington slot is beside the "K" icon.
- The position and color may differ depending on the model.

#### To lock the product, follow these steps:

- Wrap the Kensington lock cable around a large, stationary object such as desk or chair.

### Display Modes (HDMI Input)

Optimal resolution is 1024 x 768@60Hz.

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H/V)
BM	640 x 350	31.469	70.086	25.175	-/+
	720 x 400	31.469	70.087	26.322	-/+
	640 x 480	35.000	60.067	30.240	-/-
MAG	822 x 624	49.725	74.551	37.284	-/-
	640 x 480	31.469	59.940	25.175	-/-
	640 x 480	37.861	72.809	31.500	-/-
	640 x 480	37.500	75.000	31.500	-/-
	800 x 600	37.879	60.317	40.000	-/+