

Use & Care Guide
Manual de Uso y Cuidado

English/Español

Kenmore®

Heater

Calentador

 
Model/Modelo: 128.95092210

P/N 13477900B (0807)

Sears Brands Management Corporation
Hoffman Estates, IL 60179 U.S.A.

www.kenmore.com
www.sears.com
www.kmart.com



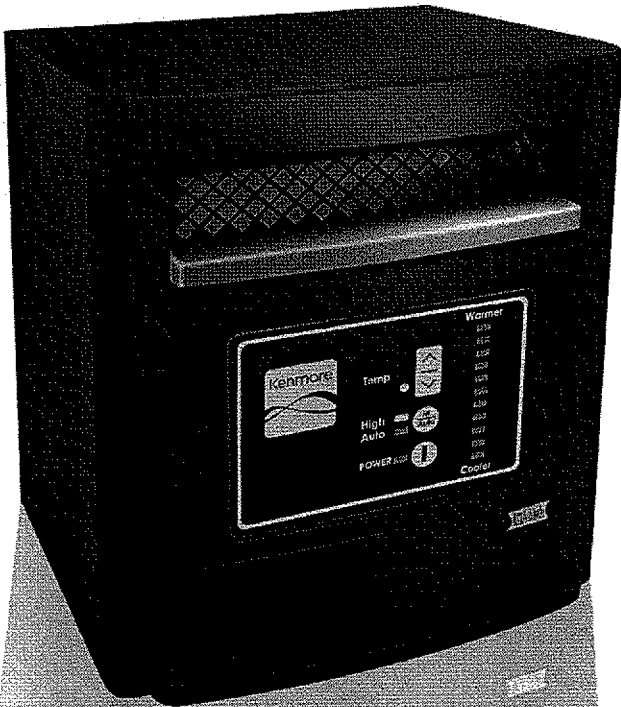

IMPORTANT SAFETY INSTRUCTIONS

WARNING

IMPROPER USE OF THIS HEATER COULD RESULT IN RISK OF FIRE, ELECTRIC SHOCK,
AND INJURY TO PERSONS

WARNING

ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE
PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE AND ANY
OTHER REPAIRS ATTEMPTED BY ANYONE OTHER THAN AN AUTHORIZED
SERVICE REPRESENTATIVE WILL VOID THE WARRANTY.
FOR AUTHORIZED SERVICE, CALL 1-800-839-0966

WARNING

RISK OF ELECTRICAL SHOCK
DO NOT OPEN

NO USER-SERVICEABLE PARTS INSIDE



 
READ ALL SAFETY INSTRUCTIONS BEFORE USING THE HEATER

- 1) This heater's grill is hot when in use. To avoid burns do not let bare skin touch hot surfaces. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and the rear.
- 2) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 3) Always unplug heater when not in use.
- 4) Do not operate any heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or has been damaged in any manner. In these cases, return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 5) Do not use the heater outdoors or on construction sites.
- 6) The heater is not intended for use in bathrooms, laundry areas and similar indoor locations, areas with standing water, a shower or swimming pool. Never place the heater where it may fall into a bathtub or other water container.
- 7) Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas and where it will not be tripped over.
- 8) To disconnect the heater, turn the unit off, then remove the plug from the outlet once it has stopped running.
- 9) Do not plug the heater into any other cord-connected device such as a power strip, surge protector, multiple outlet adapter, grounding adapter or outlet-type air fresheners. **Plug into a 3-prong 120v 15amp or higher grounded circuit receptacle only.**
- 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause

IMPORTANT SAFETY INSTRUCTIONS


electric shock or fire, or damage the heater.

- 11) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12) Do not block the front or rear of the heater.
- 13) Do not place anything directly in front of the heater.
- 14) When performing filter maintenance, do not force the filter to dry using alternative methods. Doing so could damage the filter.
- 15) A heater has hot or arcing or sparking parts inside. Do not use in areas where gasoline, paint or flammable liquids are used or stored.
- 16) Do not plug the heater into a loose-fitting or broken receptacle.
- 17) Do not alter the heater's design or you will void the warranty.
- 18) In the event that you open the cabinet of the heater, do not touch the heating elements with your bare hands. Moisture, oils or residue from the skin can weaken the glass and shorten the life span of the element.
- 19) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or power tab/power strip.
- 20) The heater is for use on 120 volt grounded outlets. The cord has a plug as shown in the figure below. Do not modify the plug in any way, nor use an adaptor to make the plug fit into an outlet. If the plug will not fit into the intended outlet, contact a qualified electrician to have the correct outlet installed.
- 21) Use this heater only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons and may void the warranty.
- 21) Manual restart is required if power to this unit is interrupted.

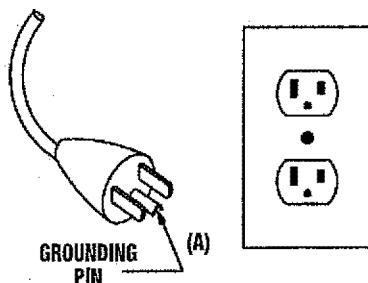

SAVE THESE INSTRUCTIONS

 PARTS AND FEATURES

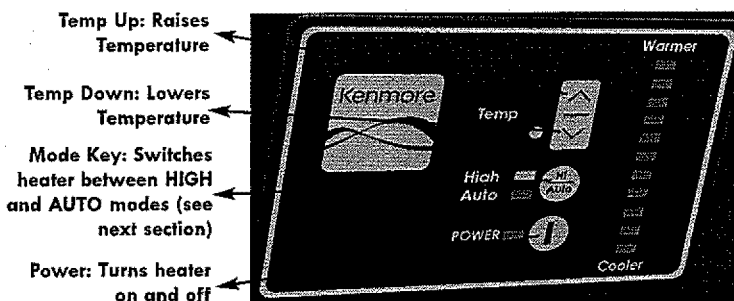

READ ALL INSTRUCTIONS BEFORE USING THIS HEATER

Operating your Kenmore®

- 1) Before starting operation, lift heater from box. We recommend keeping the packaging for off-season storage and any transport needs.
- 2) Find a level and unobstructed location to place the unpackaged heater.
- 3) Do not plug any other appliances in while heater is running.
- 4) Plug the power cord directly into an unused grounded 120 volt 15 amp circuit receptacle. The power button will illuminate and the heater will beep, indicating the unit is plugged into the receptacle.
- 5) Press the POWER button in the control panel to turn on the heater.
- 6) Switch the Mode Key to "High" in order to have the heater stay on high heat and not cycle on and off.
- 7) The heater is equipped with a temperature limiting control contained inside the unit. If the heater stops working, it could be because it has reached its temperature limit. Shut the power off, unplug unit and let the unit cool down (Approximately 30-45 minutes), plug in unit, turn the power back on and resume use. If the unit continues to shut down or the unit does not reset itself, please call 1-800-839-0966.

IMPORTANT FEATURE AND INSTRUCTION: To turn the heater off, press the "Power" button; the fan will continue to run until all of the heat has been expelled and will then turn off. This could up to 5 minutes in some cases. **DO NOT UNPLUG WHILE RUNNING.**

Cabinet Care – Wipe clean with a soft damp cloth.

Heater Storage – When the heater is not going to be used for an extended period of time, do the following:

- 1) Unplug the heater.
- 2) Wind up electrical cord so as to keep it off of the ground.
- 3) Cover the heater to prevent dust from accumulating on filter or internally.
- 4) Store the heater in a dry, low dust environment. Preferably in the original box.

SERVICE – To replace a heating element or for other repairs or service, please call 1-800-839-0966.

 
WASHABLE LIFETIME FILTER SYSTEM

Kenmore® Heaters come equipped with a washable lifetime filter on the rear of the unit that is easy to clean.

IMPORTANT INFORMATION: If you have allergies and/or are sensitive to dust, you will want to use this filter. When choosing to use the filter, it must be cleaned as often as necessary; a clogged filter will prevent the heater from working to its full capacity.

To clean the filter:

- 1) Press the tab(s) on the top of the filter cover to release the filter. (See picture)
- 2) Run warm tap water over the filter in the opposite direction of air flow, until water runs clear. The filter might excrete some filtered residue, so be cautious not to drip on any stainable surfaces such as carpeting. You can also soak the filter in water mixed with a small amount of mild dish soap (don't forget to rinse with water after soaking filter).
- 3) Shake the filter over a sink until excess water is removed and allow it to drip dry completely before reinstalling. DO NOT force the filter to dry using any alternative methods.
- 4) Reinstall the filter to the rear of the unit by positioning the filter back in place and securing the filter cover back into the locked position.

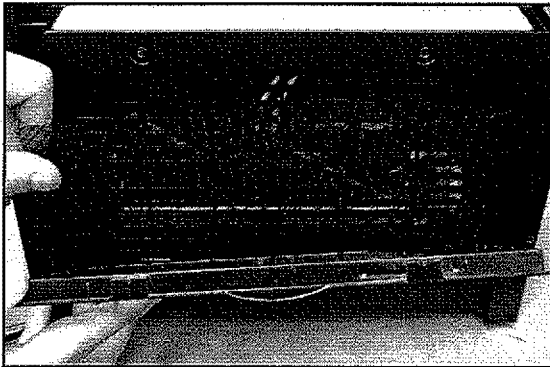

PERFORMANCE TIPS AND RECOMMENDATIONS

To assure maximum performance of the Kenmore® heater, please note the following recommendations:

- 1) For best results, do not locate the heater in an area with a high rate of air filtration and movement as the warm air will be exhausted.
- 2) Try placing the heater near a warmer inside wall and direct the output toward a cooler outside wall. The cooler outside wall will tend to draw the generated heat toward itself, which will allow for more efficient heating.
- 3) Placing the heater next to a cold air return will draw the heat away from area to be heated. Try closing or covering the cold air return. This will allow for more efficient heating. Experiment with the placement of the heater to see what works best for you.
- 4) To ensure maximum efficiency, a 40% (minimum) relative humidity should be maintained in the heated environment to achieve soft heat.
- 5) The heaters are designed to operate for maximum efficiency in a room temperature range from 68° to 72° F. Due to the soft heat concept, a temperature of 68 degrees will feel as though it were 72 degrees. This is due to the heat mixing evenly with humidity for "head-to-toe" comfort.
- 6) When the heater is placed in an isolated area, i.e. basement or recreation area, the delivery registers and air return grills of the existing system should be closed in that area if possible.
- 7) In rooms with large areas of bare concrete, try placing the heater a few feet above the floor. Make sure the heater is secure and won't fall. This will allow for more efficient heating since concrete acts as a heat sink and will tend to draw the heat in its direction.
- 8) Try lowering your central heating system to a lower temperature and placing the heater in the area you spend the majority of your time. Now set the Kenmore® heater to your comfort level. After all, there is no point heating multiple rooms when they are not in use.
- 9) When heating larger areas, place the heater in a central location. If a ceiling fan is nearby, try using it at the same time to help distribute the heat evenly. Our suggestion, give it a try and see what works best for you.
- 10) **If used in an extremely dirty or dusty area, the filter must be cleaned more frequently as it can clog and cause the heater to stop working.**
- 11) The heater grill is hot when in use. To avoid burns, do not let bare skin touch hot surface. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least three feet from the front of the heater and keep them away from the sides and rear.
- 12) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 13) To disconnect the heater, press power button to "off," then remove plug from outlet once it has stopped running.
- 14) Always unplug heater when not in use.

TROUBLESHOOTING

Why does the Blower Fan keep running after I have turned off the Power button?

The Blower Fan will continue to run until the unit's heat chambers have cooled down. After a few minutes the fan will shut off automatically.

Can the heating elements be replaced?

Yes. When needed, please call 1-800-839-0966.

The heater's airflow seems to have diminished.

Make sure the rear intake is not blocked and that the filter is clean. Follow the procedure in the "To Clean Filter" section of this booklet.

Can the heater be used in a bathroom?

No. It is not recommended due to the high level of moisture in a bathroom.

Will I be able to use the heater in a basement?

Yes, but keep in mind that rooms with little insulation will not retain the heat as efficiently. Bare concrete floors, which act as a heat sink with any type of heating, will absorb some of the heat. Placing the heater a few feet above the floor will allow for more efficient heating.

Can I use more than one heater at a time?

Yes, but you should make sure they are not on the same circuit. Each heater and appliance should be on its own circuit.

Can I use the heater on a job/construction site?

No. This heater is for domestic household use only. Using the heater for this purpose will void your warranty.

Can I move the heater around while it is operating?

No. It is not recommended to move any portable heater while it is operating. We recommend moving the heater only after the fan has completely turned off.

What is the life expectancy of an Kenmore® Quartz Heating Element?

Average element life is 20,000 hours. The Quartz Heating Elements are replaceable by professionals when you call 1-800-839-0966.

Can I use the heater and another appliance at the same time?

Yes, as long as they are not on the same circuit. Zone heaters are considered to be an appliance. You should not run more than one large appliance on a single circuit breaker. Your freezer, refrigerator, microwave oven, washing machine, dryer, and other such appliances should not share a circuit breaker.

Can I use an extension cord, surge protector, or power strip with my heater?

NO. It is not recommended. It is designed to plug directly into a grounded 120 volt 15 amp circuit receptacle.

I don't have a grounded outlet; can I use a cord adapter or remove the grounding plug?

NO. If you don't have a grounded outlet, contact a licensed electrician in your area to have one installed. Removing or altering any part of the heater will void the warranty.

My heater lost power.

Unplug from wall, check filter to make certain that it is clean, and plug back in. If unit does not power up or shuts down again please call **1-800-839-0966**.

WARNING

 
**ANY REQUIRED SERVICE OTHER THAN FILTER MAINTENANCE SHOULD ONLY BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE
FOR AUTHORIZED SERVICE, CALL 1-800-839-0966**



SPANISH TO COME



SPANISH TO COME



SPANISH TO COME



SPANISH TO COME



SPANISH TO COME



SPANISH TO COME

WARRANTY

ONE YEAR LIMITED WARRANTY

FOR ONE YEARS from the date of purchase, this product is warranted against defects in material or workmanship.

Call the following toll-free number to receive free warranty service for a defective product: 1-800-XXX-XXXX.

Warranty service is provided only with proof of purchase.

This warranty is void if this product is ever used for other than private household purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brand Management Corporation, Hoffman Estates, IL 60179

SPANISH TO COME

