


**Owner's Manual**

# **Cordless Lawn Mower**

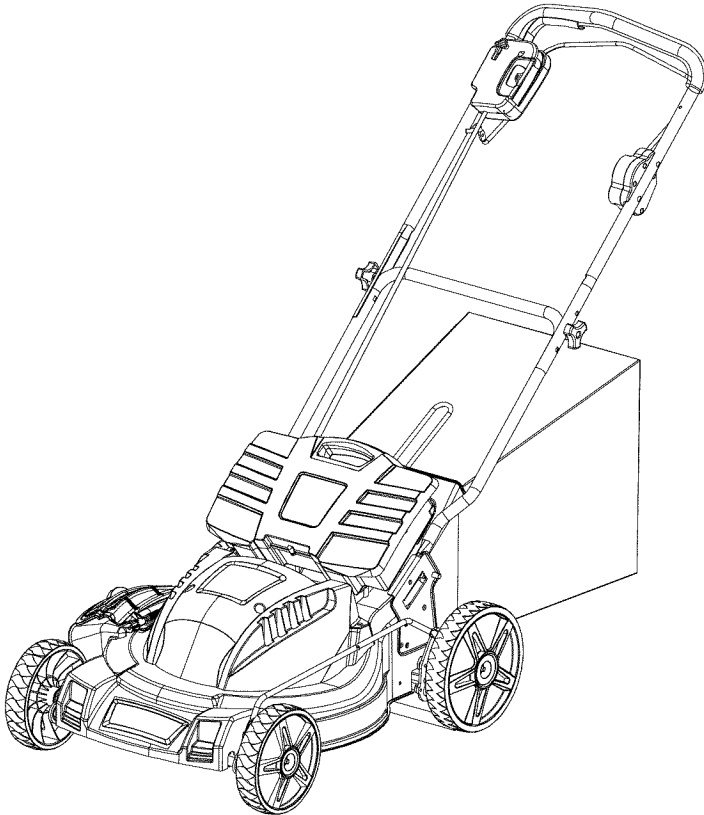

**WARNING!** To Reduce The Risk Of Injury, User Must Read And Understand Instruction Manual.

**SP-PM207SDC**

**FOR SERVICE CALL: 888-896-6881**  
**PARA SERVICIO LLAME: 888-896-6881**








**[www.steele-products.com](http://www.steele-products.com)**


# Owner's Manual

## PRODUCT SPECIFICATION


Component	Specifications
Battery Capacity	24 V d.c.
Charge Time	12-hour
No-load Speed	3,500 /min
Cutting Path	20 in. (508 mm)
Height Adjustment	1-3/4–3-1/4 in. ( 45mm – 82.55mm)
Wheels Size	7 in. (front)/ 9-1/2 in. (rear)
Unit Weight	97 lb (44 kg) with battery
	64lb (29kg) without battery

## SYMBOL

SYMBOL	NAME	SYMBOL	NAME
	Serving of toes or fingers-rotary mower blade.		Thrown objects from mower deck.
	Keep bystanders/children away.		Safety alert.
	Slip on slope.		Read the operator's manual.
	CPSC Danger label.		

 Please Read And Understand This entire manual before attempting to assemble, operate or install the product. These safety instructions are not meant to cover every possible condition that could occur.

## SAFETY INSTRUCTIONS

 **WARNING:** Read all instructions when using electric gardening appliances. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

### FOR ALL LAWN MOWERS

#### a) Avoid Dangerous Environment

Don't use appliances in damp or wet locations.

#### b) Don't Use In Rain.

#### c) Keep Children Away

All bystanders (visitors) should be kept at a safe distance from work area.

#### d) Dress Properly

Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors.

Wear protective hair covering to contain long hair.

#### e) Use safety glasses

Always use face or dust mask if operation is dusty.

#### f) Use right appliance

Do not use appliance for any job except that for which it is intended.

#### g) Don't force appliance

It will do the job better and safer at the rate for which it was designed.

#### h) Don't overreach

Keep proper footing and balance at all times.

#### i) Stay alert

Watch what you are doing. Use common sense. Do not operate appliance when you are tired.

#### j) Store idle appliances indoors

When not in use, appliances should be stored indoors in dry, and high or locked-up place-out of reach of children.

#### k) Maintain appliance with care

Keep cutting edge sharp and clean for best and safest performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.

#### l) Check damaged parts

Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.

#### m) Keep guards in place and in working order.

#### n) Keep blades sharp.

#### o) Keep hands and feet away from cutting area.

#### p) Objects struck by the lawn mower blade can cause severe injuries to persons.

The lawn should always be carefully examined and cleared of all objects prior to each mowing.

#### q) If lawn mower strikes a foreign object, follow these steps:

i) Stop lawn mower. Remove the safety key.

ii) Inspect for damage.

iii) Repair any damage before restarting and operating the lawn mower

#### r) Use identical replacement blades only.

## SAFETY INSTRUCTIONS

### SAFETY INSTRUCTIONS FOR BATTERY-OPERATED LAWN MOWERS

- a) Do not charge lawn mower in rain, or in wet locations.
- b) Do not use battery-operated lawn mower in rain.
- c) Remove or disconnect safety key before servicing, cleaning, or removing material from the lawn mower.
- d) Use only the following type and size battery: type **A22001**, **A22002** lead acid battery
- e) Do not dispose of the battery in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
- f) Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- g) Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

### CAUTION

The electrolyte is a dilute sulfuric acid that is harmful to the skin and eyes. It is electrically conductive and corrosive. The following procedures should be observed:

- a) Wear full eye protection and protective clothing.
- b) If electrolyte contacts the skin, wash it off immediately with water.
- c) If electrolyte contacts the eyes, flush thoroughly and immediately with water. Seek medical attention.

### SAFETY INSTRUCTIONS FOR WALK-BEHIND MOWERS

#### I. GENERAL OPERATION

1. Read, understand, and follow all instructions on the machine and in the manual (s) before starting.
2. Do not put hands or feet near or under the machine. Keep clear of the discharge opening at all times.
3. Only allow responsible adults, who are familiar with the instructions, to operate this machine.
4. Clear the area of objects such as rocks, wire, toys, etc., which could be thrown by the blade.  
Stay behind the handle when the motor is running.
5. Be sure the area is clear of bystanders before operating. Stop machine if anyone enters the area.
6. Do not operate machine barefooted or while wearing sandals. Always wear substantial footwear.
7. Do not pull machine backward unless absolutely necessary. Always look down and behind before and while moving backward.
8. Never direct discharged material toward anyone. Avoid discharging material against a wall or obstruction. Material may ricochet back toward the operator. Stop the blade when crossing gravel surfaces.
9. Do not operate machine without the entire grass catcher, discharge guard, rearguard, or other safety protective devices in place and working.
10. Never leave a running machine unattended.
11. Stop the motor, remove the safety key and wait until the blade comes to a complete stop before cleaning the machine, removing grass catcher, or unclogging the discharge guard.
12. Operate machine only in daylight or good artificial light.
13. Do not operate machine while under the influence of alcohol or drugs.
14. Never operate mower in wet grass. Always be sure of your footing; walk; never run.
15. Disengage the drive system, if so equipped, before starting the motor.
16. If the machine should start to vibrate abnormally, stop the engine (motor) and check for the cause immediately. Vibration is generally a warning of trouble.
17. Always wear eye protection when operating machine.
18. See manufacturer's instructions for proper operation and installation of accessories.  
Only use accessories approved by the manufacturer.

## SAFETY INSTRUCTIONS

### II. SLOPE OPERATION

Slopes are a major factor related to slip and fall accidents, which can result in severe injury. Operation on all slopes requires extra caution. If you feel uneasy on a slope, do not mow it.

1. Mow across the face of slopes; never up and down. Exercise extreme caution when changing direction on slopes.
2. Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could cause a slip and fall accident. Tall grass can hide obstacles.
3. Do not mow on wet grass or excessively steep slopes. Poor footing could cause a slip and fall accident.
4. Do not mow near drop-offs, ditches, or embankments. You could lose your footing or balance.

### III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children.

Children are often attracted to the machine and the mowing activity.

Never assume that children will remain where you last saw them.

1. Keep children out of the mowing area and under the watchful care of a responsible adult other than the operator.
2. Be alert and turn mower off if a child enters the area.
3. Never allow children to operate the machine.
4. Use extra care when approaching blind corners, shrubs, trees, or other objects that may block your view of a child.

### IV. SERVICE

#### GENERAL SERVICE

1. Keep all nuts and bolts tight to be sure the equipment is in safe working condition.
2. Never tamper with safety devices. Check their proper operation regularly.
3. Keep machine free of grass, leaves, or other debris build-up.
4. If you strike a foreign object, stop, remove the safety key and inspect the machine. Repair, if necessary, before starting.
5. Never make any adjustments or repairs with the motor running.
6. Check grass catcher components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary.
7. Mower blades are sharp. Wrap the blade or wear gloves, and use extra caution when servicing them.
8. Maintain or replace safety and instruction labels, as necessary.

## BATTERY & CHARGER

**⚠ CAUTION:** USE ONLY APPROVED REPLACEMENT BATTERIES, OTHER BATTERIES MAY CAUSE INJURY OR DAMAGE TO THE MOWER.

The battery that is supplied with this mower is a maintenance-free, sealed, 24 V storage battery. It can be tipped without danger of acid spillage. The charger will require approximately 12 hours to recharge a fully discharged battery.

### BATTERY SAFETY RULES

1. Allow at least 12 hours of battery charging before using the mower for the first time.
2. For optimal performance, charge the battery every two months, even when it is not in use.
3. Charge the battery in a cool, dry place.
4. The battery does not have to be fully discharged before recharging. This battery will not develop a memory.
5. 2 to 3 initial charging/discharging cycles may be required in order to reach the maximum run time /capacity.
6. Do not store battery in temperatures lower than 32° F (0° C)

### PROPER CARE FOR BATTERY

#### Off-Season storage

In order to ensure optimal performance, it is recommended that the battery be charged every two months when not in use.

If all of the following conditions are met, the mower can be stored with the charger disconnected.

1. The mower is fully charged before storing.
2. The average temperature of the storage location is below 50° F (10° C).
3. The battery should not be stored for more than 6 months.

### CHARGER SAFETY RULES

Charge the mower battery in a dry area that is protected from the weather. Do not expose the mower or the charger to rain. Do not charge the battery in a wet location.

Operate the battery charger in temperatures between 23 ° and 104 ° F (-5 ° and 40 ° C). In order to reduce the risk of electric shock, use only the charger that is provided by the manufacturer to charge the battery.

### DO NOT ABUSE THE CHARGE CORD.

Never carry the charger by the cord. Do not disconnect the charger from the outlet or from the mower by pulling the charger cord.


Do not service the mower with the charger connected or with the safety key installed.

Do not use a damaged charger. Replace the charger cords or the charger immediately. Keep the mower and the charger away from water, heat sources (radiators, heaters, stoves, etc.), flames, and chemicals. Do not dispose of this product in fire, batteries inside this product may explode or leak

## KNOW YOUR PRODUCT

Read this owner's manual and safety rules carefully before operating the mower. Compare the illustration below to the mower in order to become familiar yourself with the location of the various controls and adjustments. Save this manual for future reference.

Fig.1

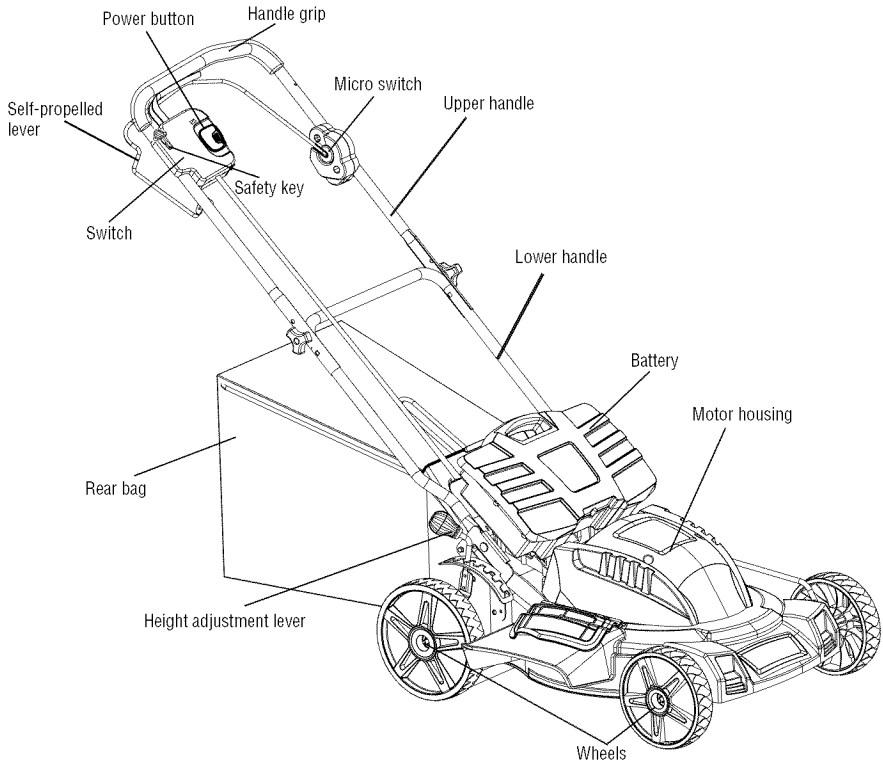

## ASSEMBLING YOUR LAWN MOWER

### Parts List


- Mulch plug (Installed at the rear of the mower at the factory)
- Grass catcher bag
- Side discharge chute
- 24V Battery (Pre-installed at the factory)
- Battery Charger
- Manual

### Note:

- Carefully remove the parts from the box.
- Inspect the parts carefully in order to verify that no breakage or damage occurred during shipping.
- Do not discard the packing material until all parts have been examined.

### ASSEMBLING THE HANDLE

1. Remove any packing material which may be between the upper and lower handles for shipping purposes.
2. Pull up and back on the upper handle to raise the handle into the operating position. Make certain the lower handle is seated securely into the handle mounting bracket (see Fig. 2).
3. Align the holes (3) between the upper handle (1) and lower (2) handles. Insert the bolts (4) and tighten them with the wing nuts (5) provided.
4. Secure the lower handle to the bracket with the handle knob (6) in each side (Fig. 3).

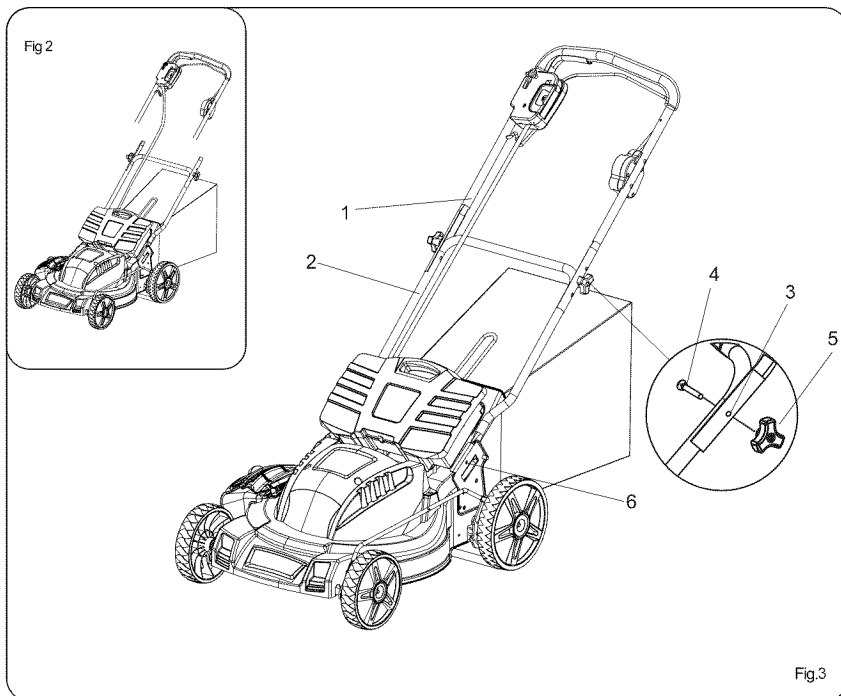




## ASSEMBLING YOUR LAWN MOWER

### INSTALLING THE GRASS CATCHER BAG (see Fig.4)

1. UNPLUG THE POWER CORD, AND WAIT FOR BLADE TO COME TO A COMPLETE STOP.
2. Lift the chute cover (1).
3. While holding up the cover (1), place the grass catcher bag hanger hooks (2) into the opening on the chute cover (1) to allow the hanger hooks to attach to the rod (3) which secures the chute cover.

Fig.4

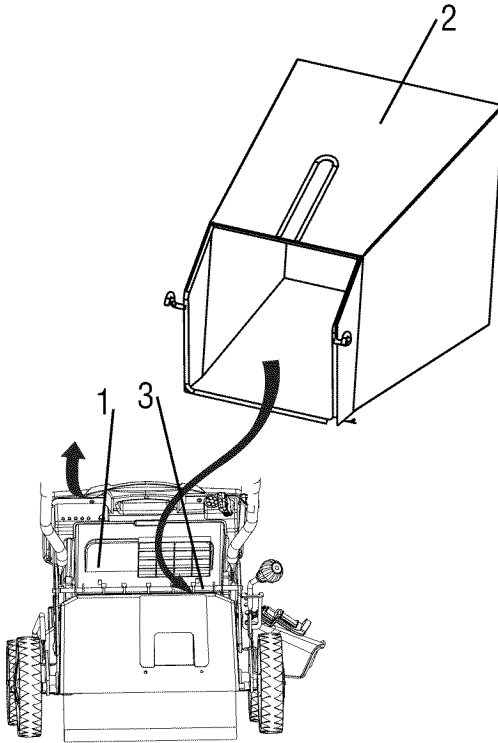

**NOTE:** For optimal performance empty grass bag often during use.  
A full grass bag will inhibit performance of the mower and collection of grass clippings.

## ASSEMBLING YOUR LAWN MOWER

### INSTALL THE SIDE DISCHARGE CHUTE (see Fig.5)

This mower has 3 different functions-mulch, side discharge, and rear bag. If you wish to discharge the clippings rather than mulch, perform these steps.

1. UNPLUG THE POWER CORD, AND WAIT FOR BLADE TO COME TO A COMPLETE STOP.
2. Lift the side discharge cover (1).
3. Align the grooves on the discharge chute (2) with the pins on the underside of the discharge cover (1).
4. Lower the discharge chute (2) until the hooks on the mower deck are secured in the openings in the discharge chute (2).
5. Release the side discharge cover (1).


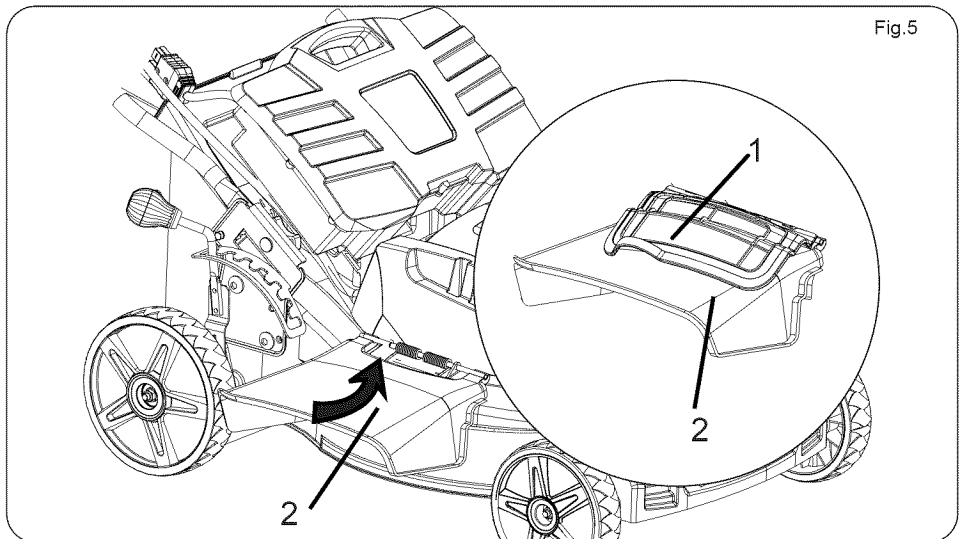


Fig.5

## ASSEMBLING YOUR LAWN MOWER

### INSTALLATION OR REMOVAL OF THE MULCH PLUG (see Fig.6)


1. UNPLUG THE POWER CORD, AND WAIT FOR BLADE TO COME TO A COMPLETE STOP.
2. To remove the mulch plug lift the chute cover (1) and pull out on the handle.
3. The mulch plug (2) is inserted on an angle so it will require some force when removing.

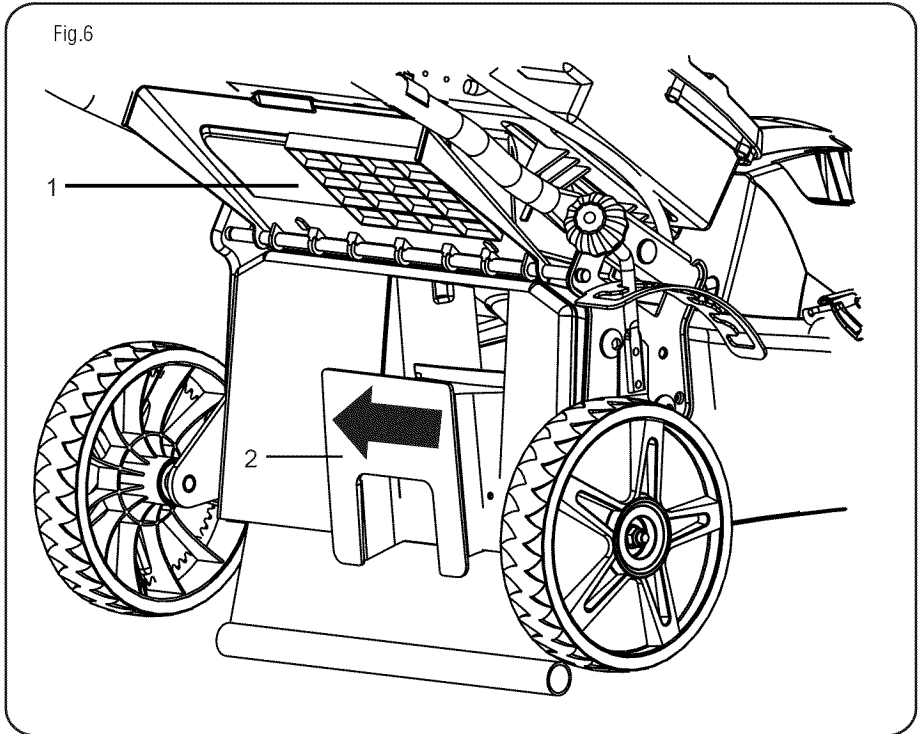

## ASSEMBLING YOUR LAWN MOWER

### ADJUST THE UPPER HANDLE HEIGHT (see Fig.7)

1. Loosen the upper handle knob.
2. Adjust the handle to the most comfortable of the 3 positions.
3. Tighten the upper handle knob as tight as you can.

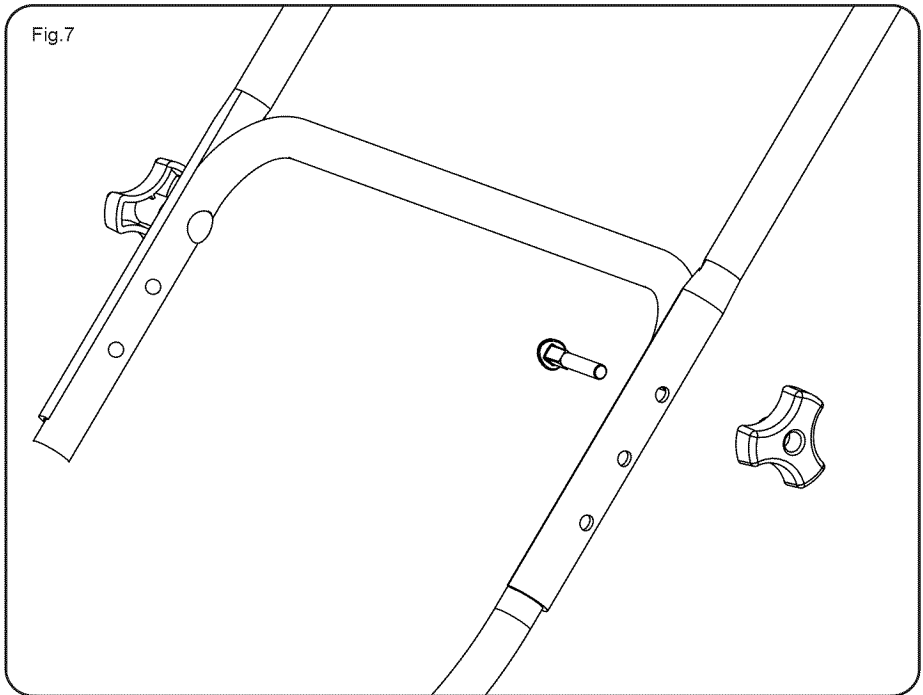

## OPERATING YOUR MOWER



### TO START & STOP THE MOWER:

Carefully follow the illustration below, in order, when starting or stopping the mower. (see Fig.8 & Fig.9)

### STARTING / STOPPING THE MOWER

See Fig 8 & Fig 9.

1. For the proper operation of this lawn mower , you need to inert the disable key in position, then the lawn mower can be operated by move the level release first to make the switch control level available, then hold the switch control level for operation .
2. For the stop of the lawn mower , just release the switch control level .
3. If your lawn mower not used for a while , pull out the disable key, then the machine can not operated even actuated by holding the switch control level.

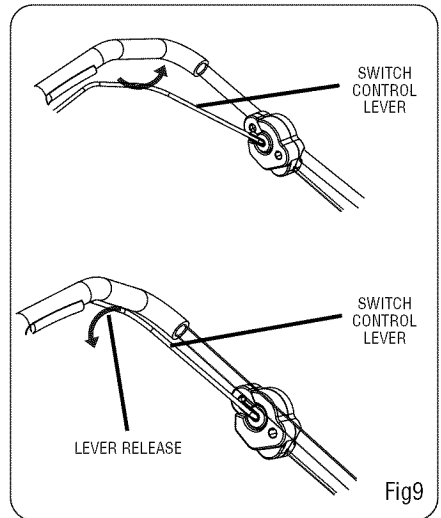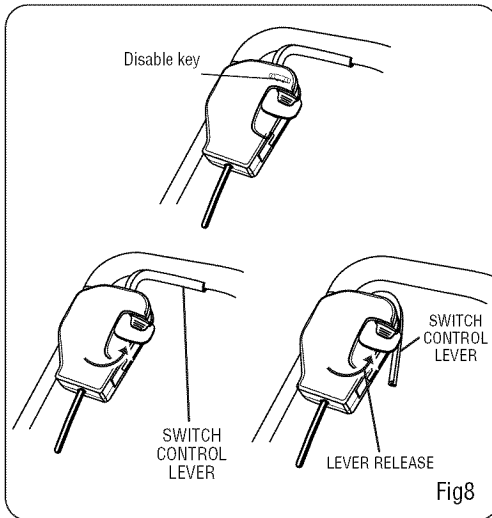

### SELF-PROPELLED SWITCH (See Fig 9 )

1. Self-propelled Independently under non-mowing condition. Hold the pulling lever to allow mower to self-propel, without having to pull the switch control lever. Release the pulling lever to stop the self-propelled function.
2. Self-propelled under mowing condition Insert the key and pull the switch control lever to start mowing. then repeat step 1 to start or stop self-propelled function.

**⚠ CAUTION:** Do not attempt to override the operation of the safety key or lever.

**⚠ WARNING:** The operation of any mower can result in foreign objects being thrown into the eyes, which can cause severe eye damage. Always wear safety glasses while operating the mower and while performing any adjustments or repairs.

**⚠ WARNING:** Ensure that other people and pets remain at least 50 ft.(15m) away when the mower is in use.

### INSPECT THE CUTTING AREA


Remove all stones, sticks, wire, bones, and other debris that might be thrown by the rotating blades.

**NOTE:**This mower is equipped with an internal circuit protector, If the mower stops, wait 10 seconds before restarting.

## OPERATING YOUR MOWER

### ADJUST THE CUTTING HEIGHT ( see Fig.10)

1. Simply depress the lever (1) towards the wheel and move to desired position. This sets all wheels to the same position.
2. To raise the height, pull the height adjustment lever from the current stop position towards the back of the mower.
3. To lower the height, pull the height adjustment lever from the current stop position towards the front of the mower.

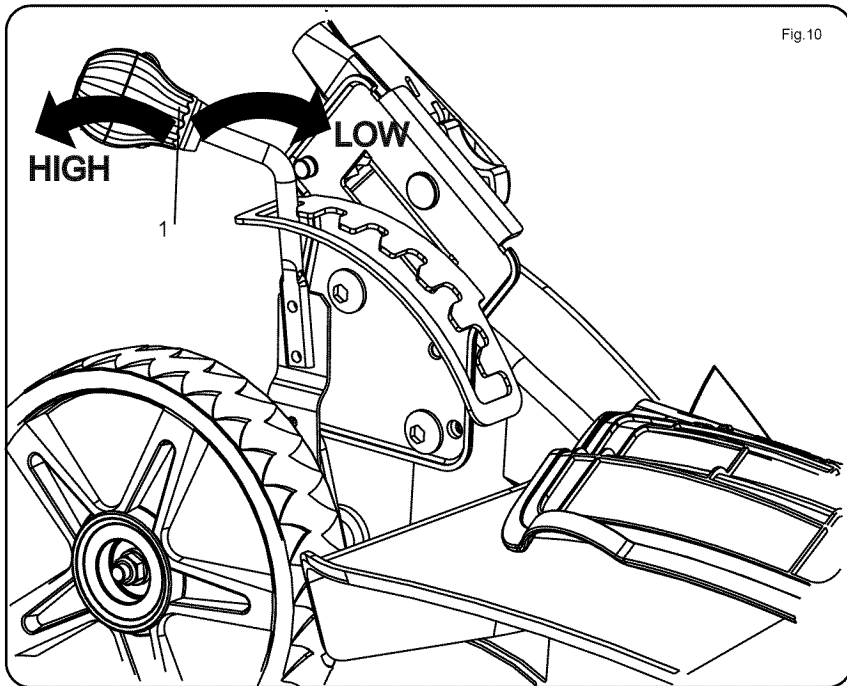

1.	1-3/4 in.	5.	2-3/4 in.
2.	2 in.	6.	3 in.
3.	2-1/4 in.	7.	3-1/4 in.
4.	2-1/2 in.		

## OPERATING YOUR MOWER

### CHARGING PROCEDURE


Note: The battery can be charged in or out of the mower.

The charger that is supplied with this mower is a specially designed 2-stage charger.

Step 1: The red light will light up during the recharge cycle.

Step 2: The green light will light up when the battery is fully charged.

1. Remove the jack cover.
2. Plug the charger connector into the jack on the battery.
3. Insert the 120 V plug from the charger into the electrical outlet.
4. The red light on the charger should come on, which indicates that the charger is working and the battery is being charged. The red light will go out and the green light will come on when the battery is completely charged (it takes approximately 15 hours to charge a fully discharged battery).

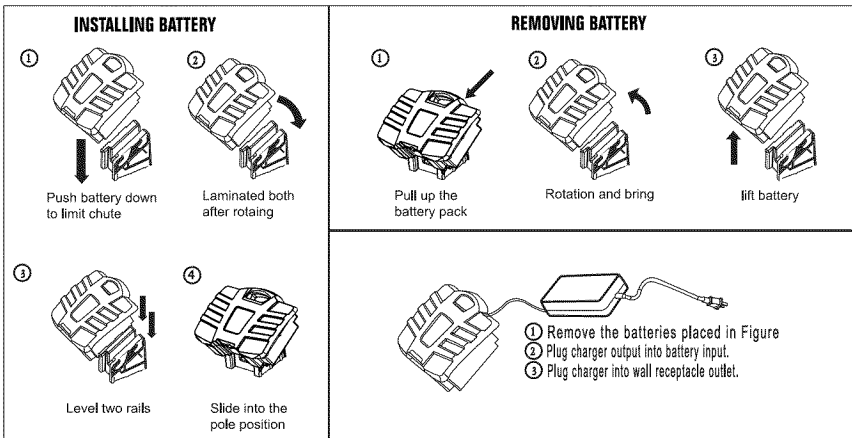


**WARNING** :Do not store battery in temperatures lower than 32°F (0°C)

### BATTERY USE

NOTE: If the switch does not reengage or the mower does not run when the battery is installed.

Push the Battery Capacity Indicator (BCI) switch, which is located on the back of the battery. The lights will indicate the battery's capacity, according to the following chart.

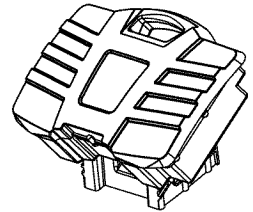


Lights	capacity
3 Green Lights	The battery is at full capacity
2 Green Lights	The battery is at 60% capacity
1 Green Light	The battery is at 50% capacity
Yellow Light	The battery is at 40% capacity and requires charging soon
Red Light	The battery is at 20% capacity and requires charging

Green                  Green                  Green                  Yellow                  Red                  BCI switch	
--	--

## OPERATING YOUR MOWER

 **WARNING:** Do not mow a slope that has an angle of greater than 15° (a rise of approximately 2-1/2 ft. [ 75 m] every 10 ft. [3m]). Mow across the face of a slope, and never up and down.

### MOWING TIPS

NOTE: A sharp blade will greatly enhance the performance of the mower, especially when cutting high grass.

Be sure to check the blade and to sharpen it at least once per year, as described in the Maintenance section

• Verify that the lawn is free of stones, sticks, wires, and other objects that could damage the blades or the motor.

These objects could be accidentally thrown by the mower in any direction, and could cause serious personal injury to the operator and to others.

- In order to prevent electric shock, do not operate the mower in damp or wet conditions.
- Do not mow in circles. Travel back and forth across the lawn.
- When cutting thick grass, reduce walking speed in order to allow for a more effective cut and a proper discharge of the clippings. For a healthy lawn, always cut off one-third or less of the total length of the grass. The average lawn should be approximately 1-1/2 to 2 in. (3.8 to 5 cm) long during cool months, and more than 2 in. (5 cm) long during hot months. If there is growth, the lawn should be cut in the fall.

### MULCHING TIPS

NOTE: INSPECT THE AREA WHERE THE MOWER IS TO BE USED, AND REMOVE ALL STONES, STICKS, WIRE, AND OTHER DEBRIS THAT MIGHT BE THROWN BY THE ROTATING BLADE.


1. Release the switch to turn the mower OFF when crossing any graveled area (stones can be thrown by the blade).
2. Set mower to the highest cutting height when mowing on uneven ground or in tall weeds.
3. For effective mulching, do not cut wet grass, because it tends to stick to the underside of the deck, preventing proper mulching of grass clippings. New or thick grass may require a narrower cut. The ground speed should be adjusted to the condition of the lawn. If mowing has been delayed and the grass has been allowed to grow longer than 4 in. (10 cm), mow the lawn twice in order to reduce the grass height to a maximum of 3-1/4 in. (8.3 cm).
4. Walk at a steady pace. Overlap the cutting rows. Do not let the grass get too tall. If the grass gets too long, start at the highest cutting position and work down to the desired cutting height.

**WARNING:** If you strike a foreign object, stop the motor and disconnect the power cord. Thoroughly inspect the mower for any damage. Repair any damage before operating the mower. Excessive vibration of the mower during operation is an indication of damage. Thoroughly inspect the mower and repair any damage before operating the mower.

( Using a 15-mm wrench or socket, turn the blade nut "CLOCKWISE" to secure the blade.)

5. Please install the mulch plug When mulching. (See page 10)



### CUTTING BLADE REPLACEMENT (see Fig.11 & Fig.12)

 **WARNING:** Always protect your hands by wearing heavy gloves and/or wrapping the cutting edges with rags or other materials when performing any maintenance on the blades.

1. RELEASE THE SWITCH LEVER TO TURN THE MOWER OFF, WAIT FOR THE BLADE TO COME TO A COMPLETE STOP, AND THEN REMOVE THE BATTERY
2. While wearing leather padded gloves, wedge a block of wood between the blade and the mower deck in order to prevent the blade from turning when the nut is being removed.
3. Using a 15-mm wrench or socket, loosen the blade nut (1) and remove the blade (4). Turn the nut "COUNTERCLOCKWISE" to loosen it and "CLOCKWISE" to tighten it (this is a reverse rotation nut).
4. Remove the blade nut (1), the square washer (2), the insulator washer (3), and the blade.
5. To re-install the blade, position the blade with the cutting edges toward the ground. Assemble the blade nut, the square washer, and the insulator washer as shown in following. Using a 15-mm wrench or socket, turn the blade nut "CLOCKWISE" to secure the blade.



## OPERATING YOUR MOWER

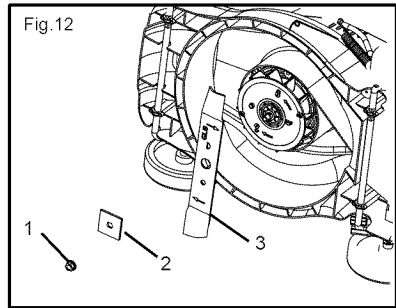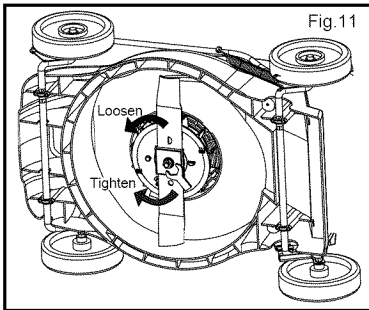

**NOTE:** Be sure to replace the parts in the exact order in which they were removed. When installing the cutting blade, verify that it is installed with the curved ends pointing toward the mower deck.

## CLEAN THE MOWER

**WARNING:** To reduce the risk of electric shock, do not expose the mower to water.

The underside of mower deck should be cleaned after each use as grass clippings, leaves, dirt and other debris will accumulate causing rust and corrosion.

Remove any buildup of grass and leaves on or around the motor cover (do not use water). Wipe the mower clean with a dry cloth occasionally.

- If debris build up on the underside of the unit while using, stop the motor and disconnect it from the power supply. Tilt the mower forward, or on its side, and scrape it clean with an appropriate tool.

## STORAGE

The following steps should be taken to prepare the lawn mower for storage.

- Make certain the power cord is disconnected.
- Clean mower as instructed in previous section.
- Inspect and replace/sharpen blade, if required. Refer to the Maintenance section.
- Store mower in a dry, clean area. Do not store next to corrosive materials, such as fertilizer and rock salt.
- Wipe extension cord to remove any foreign substances such as oil or stains. Replace extension cord if cut or damaged in any way.
- Wind cord in a series of equal loops to prevent it from tangling.
- Store mower indoors, in a cool, dry place, out of the reach of children. Do not cover lawn mower with a solid plastic sheet. Plastic coverings trap moisture around the mower causing corrosion.  
The handle may be folded away completely for storage.
- Loosen the handle knobs on the sides of the handle, and fold the upper handle down.
- Loosen the handle knobs, pull outwards on each side of the lower handle, and lift the sides of the lower handle past the edges of the handle mounting brackets. Fold the lower handle forward. Make sure not to bend or kink the power cord.

## ENVIRONMENTALLY SAFE BATTERY DISPOSAL

The following toxic and corrosive materials are in the batteries used in this battery pack: a toxic material.


### WARNING

All toxic materials must be disposed of in a specified manner to prevent contamination of the environment. Dispose of batteries according to local by-laws because this Lead-acid batteries contain lead that are hazardous materials.

If the battery pack cracks or breaks, with or without leaks, do not recharge it and do not use. Dispose of it and replace with a new battery pack. **DO NOT ATTEMPT TO REPAIR IT!**

To avoid injury and risk of fire, explosion, or electric shock, and to avoid damage to the environment:


- Cover The Battery's Terminals With Heavy-duty Adhesive Tape.
- Do Not Attempt To Remove Or Destroy Any Of The Battery Pack Components.
- Do Not Attempt To Open The Battery Pack.
- if a leak develops, the released electrolytes are corrosive and toxic. do not get the solution in the eyes or on skin, and do not swallow it.
- Do Not Place These Batteries In Your Regular Household Trash.
- Do Not Incinerate.
- Do Not Place Them Where They Will Become Part Of Any waste landfill or municipal solid waste stream.
- Take Them To A Certified Recycling Or Disposal Center.

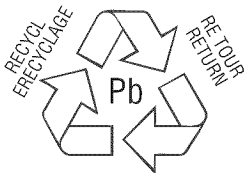

## SERVICE

1. When servicing the mower, use only replacement parts that are available from the manufacturer. In order to obtain replacement parts, call the toll-free helpline. The use of parts that do not meet the original equipment specifications may lead to improper performance, and may compromise safety.
2. Before cleaning, repairing, or inspecting, verify that the blade and all moving parts have come to a complete stop, and remove the safety key. In order to prevent accidental start-ups, remove the safety key when the mower is not in use. Remove the battery when making any adjustments or when any of the four wheels must be lifted off the ground.
3. Keep the handles dry, clean, and free of oil and grease.
4. In order to reduce the risk of fire, keep the motor free of grass, leaves, and debris build-up.
5. Frequently check the blade and motor mounting bolts for proper tightness. Visually inspect blade for damage (e.g.: bent, cracked, or worn).
6. For best and safest performance, maintain the mower with care. Keep the mower blade sharp and clean. Mower blades are sharp, and can cut. Wrap the blades or wear gloves, and use extra caution when servicing.
7. Keep all nuts, bolts, and screws tight in order to be sure that the equipment is in safe working condition.
8. Never tamper with safety devices. Check them regularly for proper operation.
9. After striking a foreign object, stop the motor and remove the safety key. Thoroughly inspect the mower for any damage. Repair any damage before operating the mower.
10. Lawn mower components are subject to wear and damage, which could expose moving parts or allow objects to be thrown. As a safety precaution, frequently check components and replace those that show signs of wear or damage.
11. When it is not in use, store the mower indoors in a dry area, with the safety key removed, and out of the reach of children.

PARTS LIST

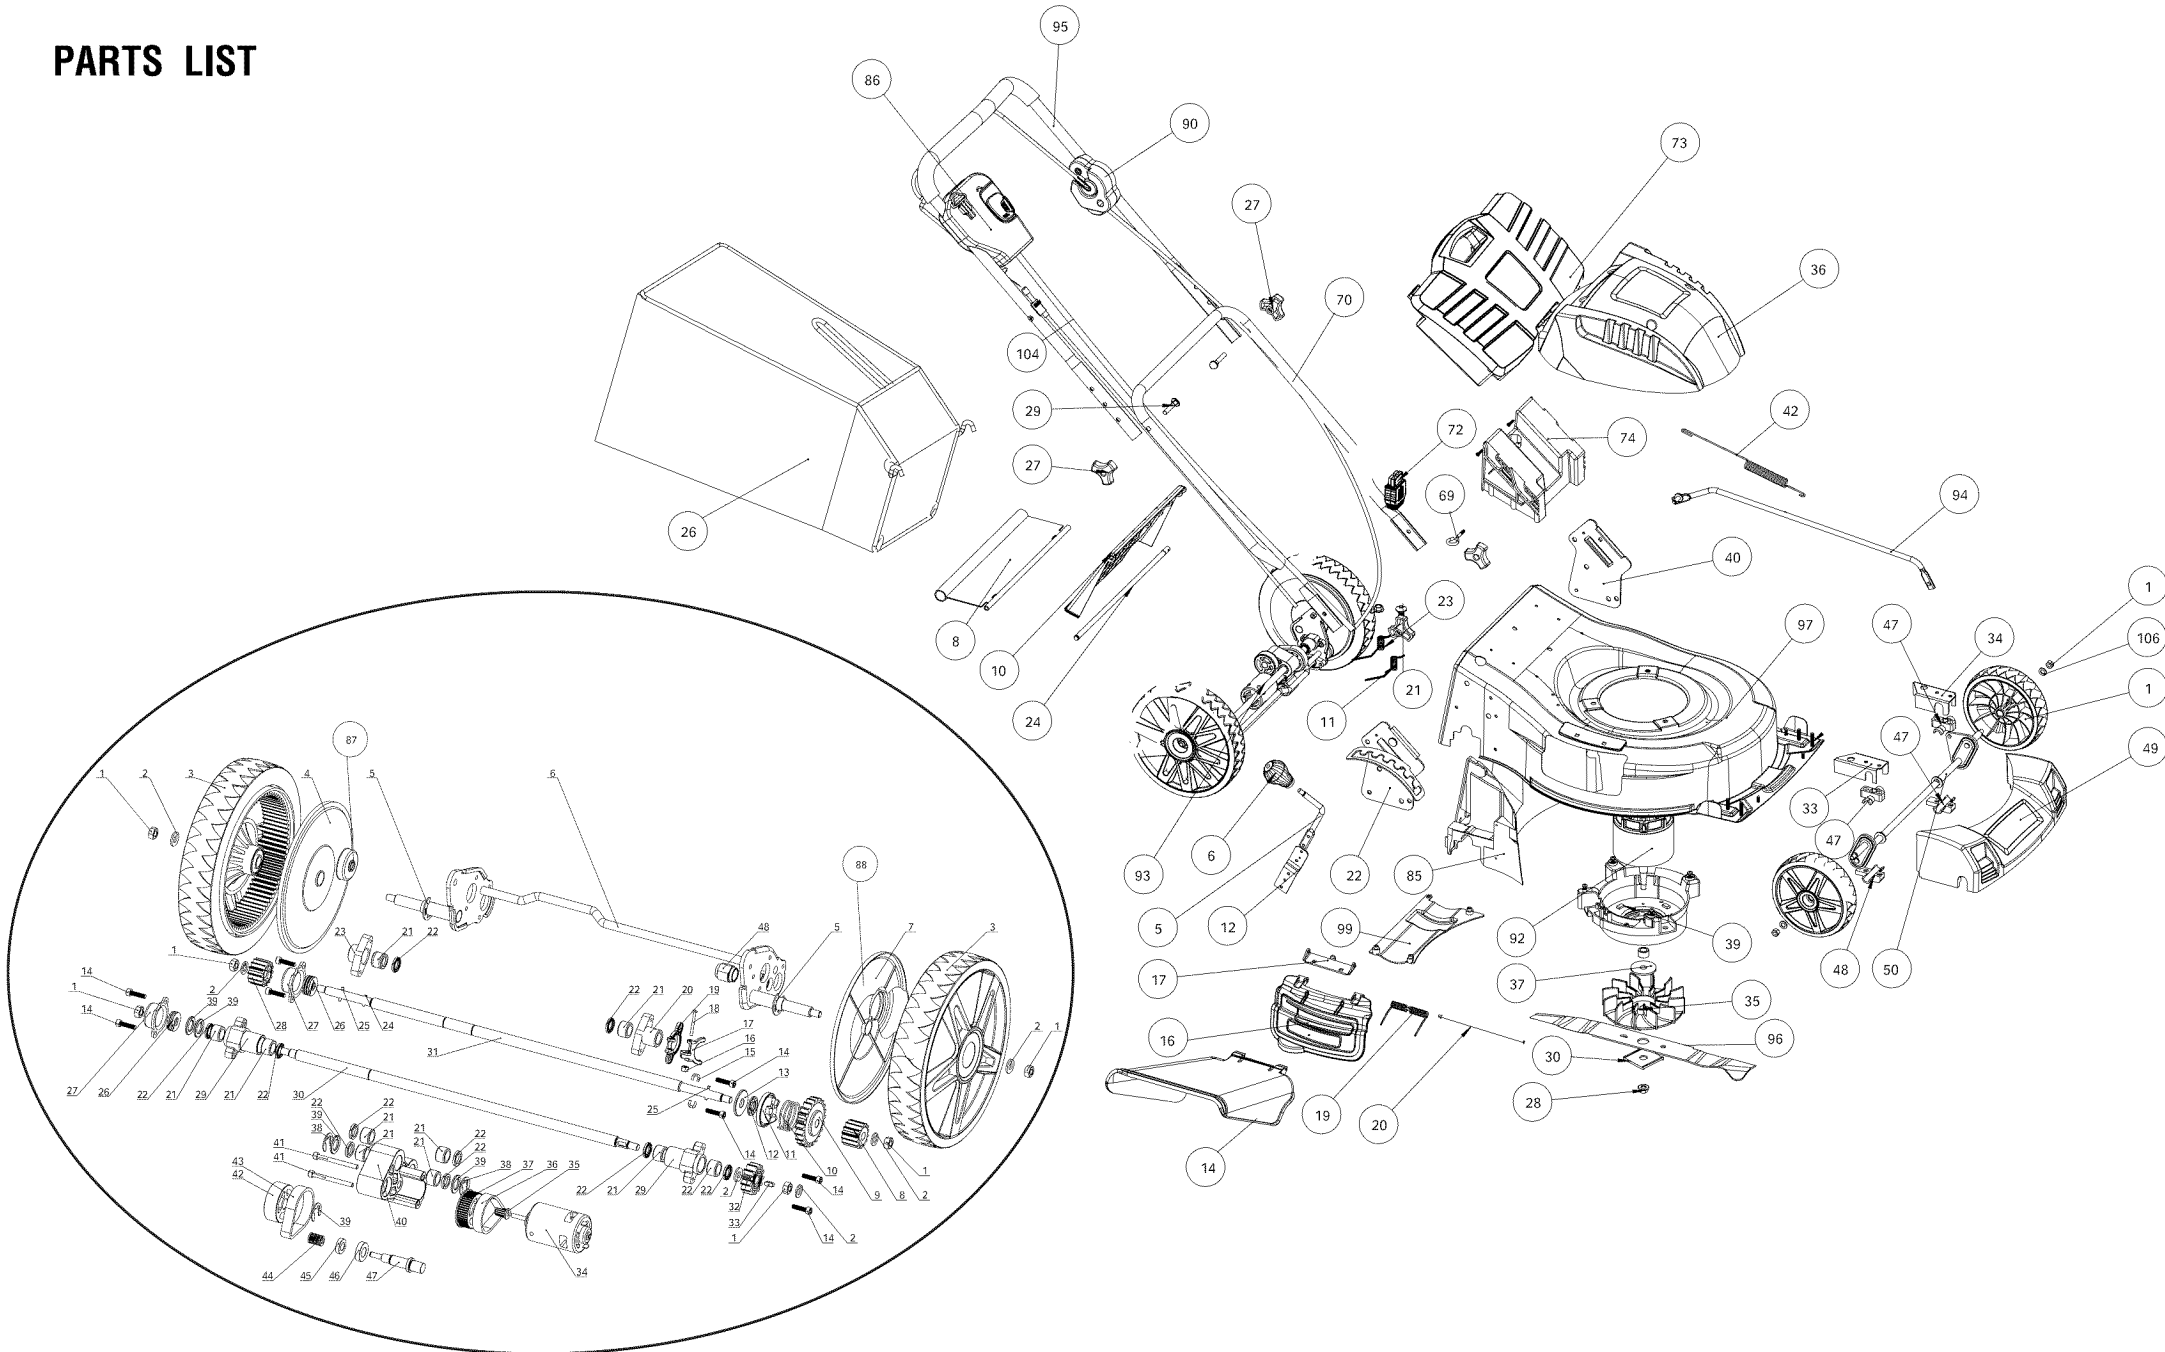

# Owner's Manual

## PARTS LIST

APA Part No.	Part No.	Description	QTY
PM207AC-01-QQ-01	8220502	Hexagon Lock Nut M8	4
PM207AC-02-QQ-02	8240112	Wash $\Phi$ 8	7
PM207AC-03-QQ-03	8412501	Hang Hook	1
PM207AC-04-QQ-04	8220401	Cap Screw M5 $\times$ 14	4
PM207AC-05-QQ-05	8321301	Height Adjustment Shaft	1
PM207AC-06-QQ-06	8419001	Height Adjustment Handle	1
PM207AC-07-QQ-07	8221101	Cap Screw M4 $\times$ 14	2
PM207AC-08-QQ-08	8430201	Rear Shield	1
PM207AC-09-QQ-09	8221001	Hex lock nut M4	1
PM207AC-10-QQ-10	8411101	Rear Cover	1
PM207AC-11-QQ-11	8247501	Open Circlip 7	2
PM207AC-12-QQ-12	8331601	Spring Board	1
PM207AC-13-QQ-13	8228401	Hexagon Lock Nut M5	4
PM207AC-14-QQ-14	8411301	Side-Discharge Deflector	1
PM207AC-15-QQ-15	8220801	Tapping Screw ST 4.8 $\times$ 18-F	20
PM207AC-16-QQ-16	8411401	Side-Discharge Cover	1
PM207AC-17-QQ-17	8331801	Side-Discharge Bracket	1
PM207AC-18-QQ-18	8220601	Bolt M6 $\times$ 15	2
PM207AC-19-QQ-19	8320801	Side Compression Spring	1
PM207AC-20-QQ-20	8320201	Side-Discharge-Pin	1
PM207AC-21-QQ-21	8220501	Bolt M10 $\times$ 20	4
PM207AC-22-QQ-22	8330801	Right Height Adjustment Board Assy	1
PM207AC-23-QQ-23	8322901	Back Cover Spring Right	1
PM207AC-24-QQ-24	8320401	Shaft For Rear Cover	1
PM207AC-25-QQ-25	8440201	Grass Collection Bags	1
PM207AC-26-QQ-26	8321401	Bracket For Grass Catcher	1
PM207AC-27-QQ-27	8410501	Knob	4
PM207AC-28-QQ-28	8220102	Lock Shaft Nut	1
PM207AC-29-QQ-29	8220202	Putters Bolt	2
PM207AC-30-QQ-30	8331901	Blade Fix Stand	1
PM207AC-31-QQ-31	8321001	Left back cover Spring	1
PM207AC-32-QQ-32	8238301	Flange Nut M10	4
PM207AC-33-QQ-33	8331101	Support Plate Right	1
PM207AC-34-QQ-34	8331001	Support Plate Left	1
PM207AC-35-QQ-35	8412701	Fan	1
PM207AC-36-QQ-36	8410101	Motor Housing	1
PM207AC-37-QQ-37	8330401	Fan Gasket	1
PM207AC-38-QQ-38	8220302	Hexagon Bolt M8 $\times$ 20	3
PM207AC-39-QQ-39	8410601	Motor Bracket	1
PM207AC-40-QQ-40	8330601	Shaft For Rear Cover	1
PM207AC-41-QQ-41	8227502	Flange Nut M8	3
PM207AC-42-QQ-42	8320901	Tension Springs	1

## PARTS LIST

APA Part No.	Part No.	Description	QTY
PM207AC-43-QQ-43	8323001	Fan Sleeve	1
PM207AC-44-QQ-44	8230201	Hexagon Lock Nut M6	11
PM207AC-45-QQ-45	8410701	7-inch Wheel Components	2
PM207AC-46-QQ-46	8321002	Front Axle Sleeve	2
PM207AC-47-QQ-47	8410401	Front Wheel Upper Board	2
PM207AC-48-QQ-48	8410301	Front Wheel Lower Board	2
PM207AC-49-QQ-49	8410201	Front Cover	1
PM207AC-50-QQ-50	8330101	Front Axle Assembly	1
PM207AC-51-QQ-51	8228701	Cap Screw M6 × 30	2
PM207AC-52-QQ-52	8228908	Cap Screw M6 × 40	2
PM207AC-61-QQ-53	8412001	Cord Clip	2
PM207DC-69-QQ-54	8330201	Threaded Ring	1
PM207DC-70-QQ-55	8320701	Lower Handle	1
PM207DC-71-QQ-56	8490101	Ø 8 Shrink Tube	1
PM207DC-72-QQ-57	8650201	Plug Assy	1
PM207DC-73-QQ-58	8110301	Battery Assy	1
PM207DC-74-QQ-59	8412101	Battery Bracket	1
PM207DC-75-QQ-60	8330812	R-shaped Line Card 1	2
PM207DC-76-QQ-61	8120101	Charger Components	1
PM207DC-77-QQ-62	8650512	Large Rotary Cap P6	2
PM207DC-78-QQ-63	8650501	Large Rotary Cap P4	1
PM207DC-83-QQ-64	8150112	9.5-inch Wheel-Components	2
PM207DC-84-QQ-65	8331012	Independent Drive	1
PM207DC-85-QQ-66	8410412	Rear Discharge Door 2	1
PM207DC-86-QQ-67	8639812	Switch Assy	1
PM207DC-87-QQ-68	8410512	9.5" Wheel Left Grass Panel	1
PM207DC-88-QQ-69	8410612	9.5" Wheel Right Grass Panel	1
PM207DC-89-QQ-70	8410712	Throttle Wire Stopper	1
PM207DC-90-QQ-71	8639912	Micro Switch Assy	1
PM207DC-91-QQ-72	8640112	Power Wire 20awg Sjt	1
PM207DC-92-QQ-73	8130432	Dc Motor	1

# Owner's Manual

## Limited Warranty

Steele® warrants to the original purchaser who uses the product in a consumer application (personal, residential or household usage) that all products covered under this warranty are free from defects in material and workmanship for two years from the date of purchase. All products covered by this limited warranty which are used in commercial applications (i.e. income producing) are warranted to be free of defects in material and workmanship for 90 days from the date of original purchase. Products covered under this warranty include air compressors, tools, service parts, pressure washers and generators.

Steele® will repair or replace, at Steele®'s sole option, products or components which have failed within the warranty period. Service will be scheduled according to the normal work flow and business hours at the service center location, and the availability of replacement parts. All decisions of Steele® with regard to this limited warranty shall be final.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### RESPONSIBILITY OF ORIGINAL PURCHASER (initial User):

To process a warranty claim on this product, DO NOT return item to the retailer. The product must be evaluated by an Authorized Warranty Service Center. For the location of the nearest Authorized Warranty Service Center contact the retailer or place of purchase.

Retain original cash register sales receipt as proof of purchase for warranty to work.

Use reasonable care in the operation and maintenance of the product as described in the Owner's Manual(s).

Deliver or ship the product to the Authorized Warranty Service Center. Freight costs, if any must be paid by the purchaser. If the purchaser does not receive satisfactory results from the Authorized Warranty Service Center, the purchaser should contact Steele® toll free 888-896-6881.

### THIS WARRANTY DOES NOT COVER:

Merchandise sold as reconditioned, used as rental equipment, or floor or display models.

Merchandise that has become damaged or inoperative because of ordinary wear, misuse, cold, heat, rain, excessive humidity, freeze damage, use of improper chemicals, negligence, accident, failure to operate the product in accordance with the instructions provided in the Owner's Manual(s) supplied with the product, improper maintenance, the use of accessories or attachments not recommended by Steele®, or unauthorized repair or alterations.

- Repair and transportation costs of merchandise determine not to be defective.
- Costs associated with assembly, required oil, adjustments or other installation and start-up costs. Expendable parts or accessories supplied with the product which are expected to become inoperative or unusable after a reasonable period of use.

Merchandise sold by Steele® which has been manufactured by and identified as the product of another company, such as gasoline engines. The product manufacturer's warranty, if any, will apply.

ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL LOSS, DAMAGE, OR EXPENSE THAT MAY RESULT FROM ANY DEFECTS, FAILURE OR MALFUNCTION OF THE PRODUCT IS NOT COVERED BY THIS WARRANTY. Some states do not allow the exclusion, so it may not apply to you.

IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO TWO YEARS FROM THE DATE OF ORIGINAL PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Distributed by:  
730 S.Epperson Dr.  
City Of Industry, CA 91748  
[www.steele-products.com](http://www.steele-products.com)  
all rights reserved