

ITEM# 1-1-35102

E
EASTPOINT

Chelsea
FOOSBALL TABLE



 
Assembly Instructions
Model # 35102

www.eastpointsports.com

TWO OR MORE ADULTS REQUIRED FOR ASSEMBLY



EASTPOINT

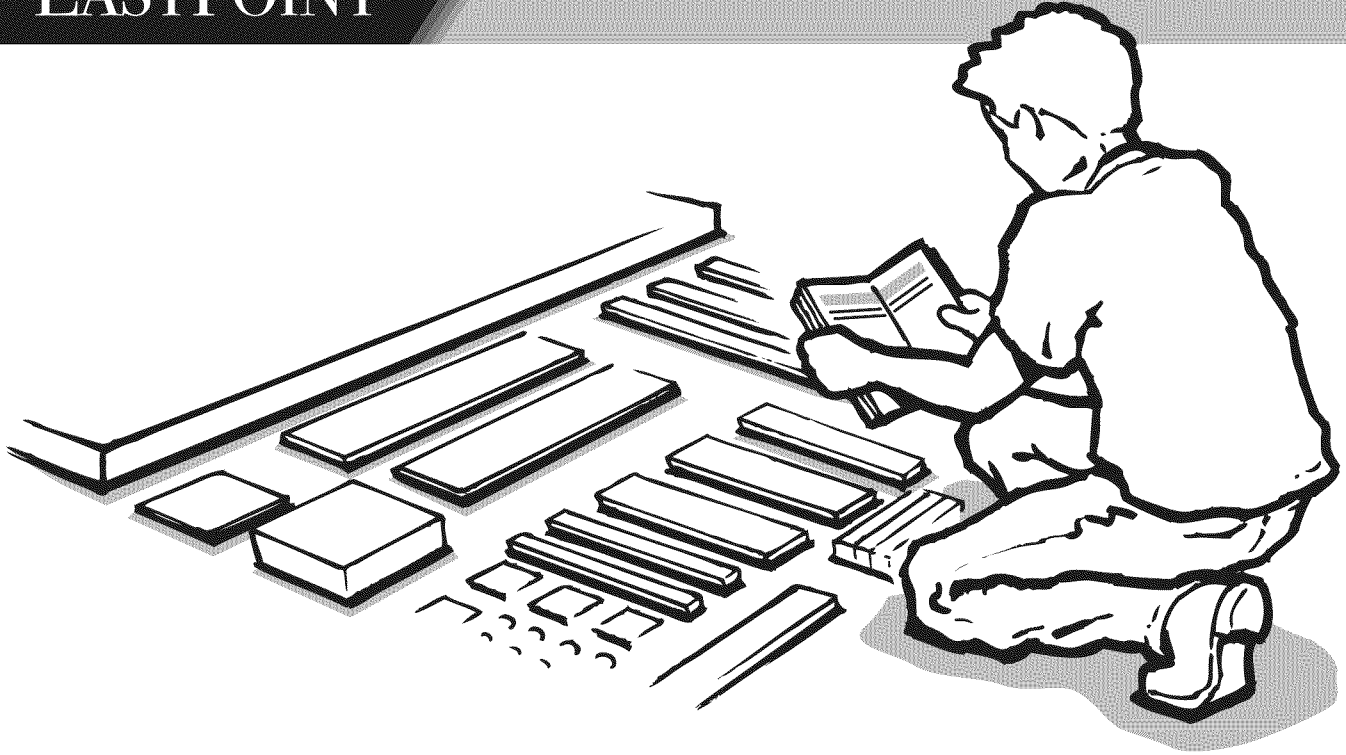

IMPORTANT - Lay out all parts before you begin

- Please review the parts identifier and make sure that you have all parts before beginning assembly.
- If any questions or issues, please contact us at 1-973-585-4747 **BEFORE** returning the product to the original place of purchase.
- Please keep your original sales receipt. Staple it on the adjacent page in the space provided for future reference/use. It will be required to receive service help or parts under warranty.

 
CONTACT INFO

Hours

Monday to Friday
(9:00am to 5pm EST)

Technical Support or Replacement Parts

Email us at: consumerservice@eastpointsports.com
Visit us at: www.eastpointsports.com
Call: 973-585-4747

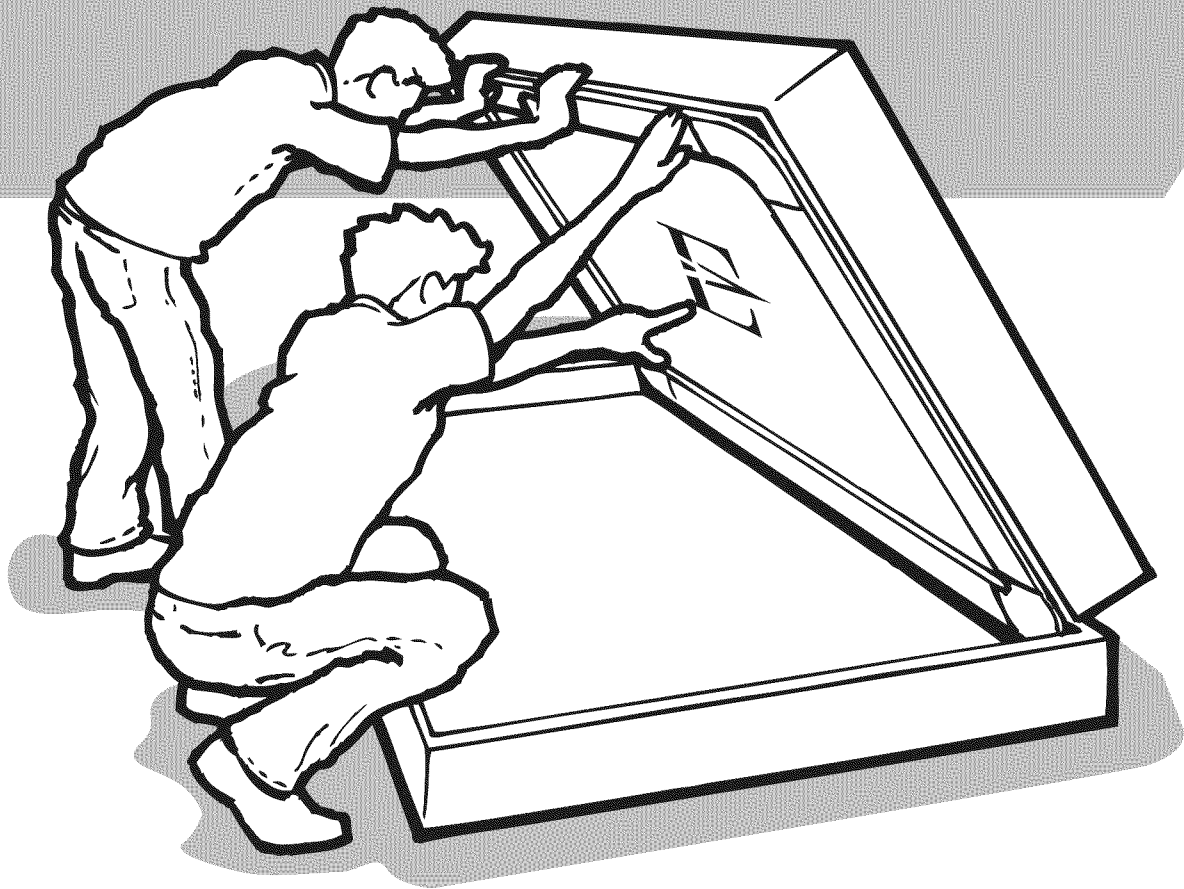

BEFORE BUILDING - Please inspect your playfield

Your Foosball Playfield is **NOT replaceable**. Any damage that exists to your playfield is not reparable under warranty. If your playfield is damaged, the entire game must be returned to the original place of purchase for an exchange.

**Please attach
RECEIPT HERE**

It will be required to receive service help or parts under warranty.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read all instructions** – All the safety and operating instructions should be read carefully before this Soccer Table can be played.
2. **Caution** – This is not a toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with to avoid possible injuries.
3. **We recommend** – that the game be periodically examined for conditions that may result in the risk of injury to persons. In the event such conditions exist, the game should not be used until properly repaired.
4. **Storage Conditions** – This product is made from wood based components and is sensitive to extreme temperatures and moisture / humidity. Subject to these conditions will effect game play, cosmetics and longevity.

Save These INSTRUCTIONS

TOOLS

Required

- 1 - Phillips Head Screwdriver (Standard Size) – Not Included
- 1 – Allen Wrench - Included

 
Recommended (Not Required):

- Electric Screwdriver or Power Driver
CAUTION – DO NOT OVERTIGHTEN. Over Tightening will result in irreparable damage to the product. If using, please make sure that the tool is set to a very low torque to prevent damage to the product.

 
How to use the: PARTS IDENTIFIER


Before you begin assembly, please make sure that you have all the parts listed and in the correct quantities. This will ensure the quickest and most organized assembly.


Be sure to work on the assembly on a soft non-marring surface such as carpet or the inside of the corrugate box top to prevent causing damage to the table surface during assembly.

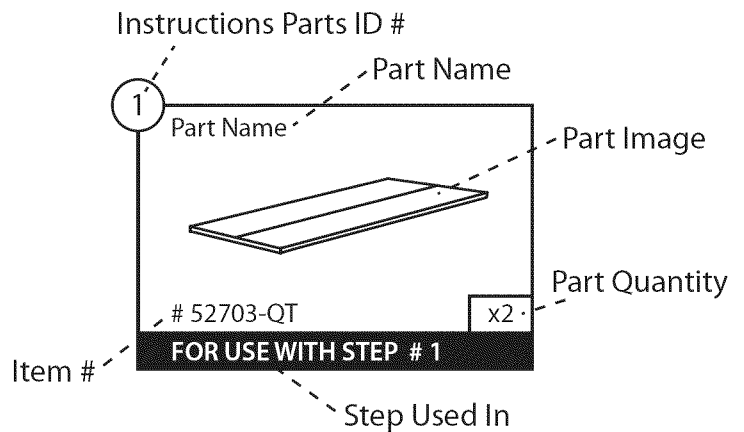

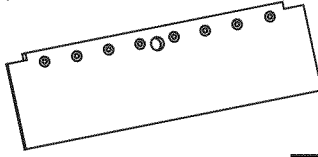

 PARTS IDENTIFIER Components and Hardware

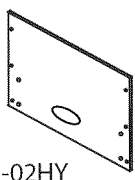
1 Apron - Side

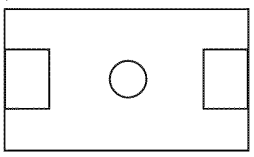  # 35102-01HY x2
STEP # 1

2 Apron - End

 # 35102-02HY x2
STEP # 6

 
3 Play Field

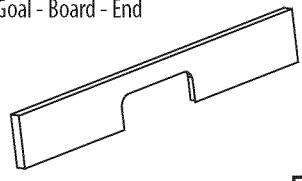 35102-03HY x1
STEP # 3

4 Leg

 35102-04HY x4
STEP # 8

 5 Board - Slat - Top

 35102-05HY x2
STEP # 5

6 Goal - Board - End

 35102-06HY x2
STEP # 2

 
7 Playfield - Support Brace



35102-07HY x2

STEP # 4


8 Goal - Box - Bottom



35102-08HY x2

STEP # 8


9 Rod - Player - Blue



35102-09HY x13

Pre-Assembled

 
10 Rod - Player - Yellow



35102-10HY x13

Pre-Assembled


11 Rod - 3 Player - 16mm



35102-11HY x4

Pre-Assembled


12 Rod - 2 Player - 16mm



35102-12HY x2

Pre-Assembled


13 Rod - 5 Player - 16mm



35102-13HY x2

Pre-Assembled


14 Washer - Molded - 36mm



35102-14HY x16

Pre-Assembled

 
15 Bumper - Rubber



35102-15HY x16

Pre-Assembled


16 Cap - End



35102-16HY x8

STEP # 10

 
17 Grip - Handle



35102-17HY x8

STEP # 10


18 Rod - 2 Player - Blue w/ Players

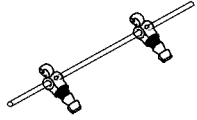

35102-18HY x1

STEP # 1

 
19 Rod - 3 Player - Blue w/ Players



35102-19HY x2

STEP # 1

 
20 Rod - 5 Player - Blue w/ Players



35102-20HY x1

STEP # 1

 
21 Rod - 2 Player - Yellow w/ Players



35102-21HY x1

STEP # 1

 
22 Rod - 3 Player - Yellow w/ Players

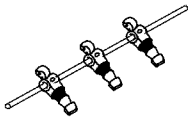

35102-22HY x2

STEP # 1

 
23 Rod - 5 Player - Yellow w/ Players

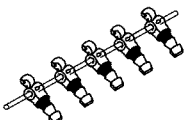

35102-23HY x1

STEP # 1


24 Rod Bushing



35102-24HY x16

Pre-Assembled


25 Bolt Player Mounting



35102-25HY x26

Pre-Assembled


26 Nut - Player Mounting



35102-26HY x26

Pre-Assembled

 
27 Ball - Entry Cup - Outside



35102-27HY x2


STEP # 11

28 Foosball - White




35102-28HY x2

29 Foosball - Orange



35102-29HY x2

30 Ball Return Cover



35102-30HY x2

Pre-Assembled

 
31 Scorer - Bead Style - Mold Silver



35102-31HY x2

STEP # 10


32 Leg Leveler - Silver



35102-32HY x4

STEP # 8


33 Cover - Leg Bolt



35102-33HY x16

STEP # 8

 
34 Goal - Silver



35102-34HY x2

Pre-Assembled


35 Nut - Leg



35102-35HY x4

Pre-Assembled

 
36 Bolt - Allen Key - 6 x 25mm



35102-36HY x16

STEP # 8

 
37 Washer - 12mm



35102-37HY x16

STEP # 8

38 Screw - Flat Head - 4 x 25mm



35102-38HY x16

STEP # 3


39 Screw - Flat Head - 4 x 12mm



35102-39HY x6

STEP # 11

40 Screw - Flat Head - 3.5 x 16mm



35102-40HY x4

STEP # 10


41 Screw - Washer Head - 3.5x 10mm



35102-41HY x32

STEP # 5,6 and 7


42 Screw - Washer Head - 4 x 34mm



35102-42HY x8

STEP # 8

 
43 Screw - Washer Head - 4 x 47mm



35102-43HY x4

STEP # 4


44 Wrench - Allen Key - 4mm

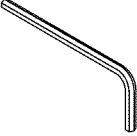

35102-44HY x1

STEP # 8

 
45 End Bracket - 4 hole



35102-45HY x6

STEP # 5, 6 and 7

 
46 Screw - Flat Head - 4 x 47mm



35102-46HY x20


STEP # 2 and 6

 47 Side Bracket - 2 hole



35102-47HY x4

 STEP # 5

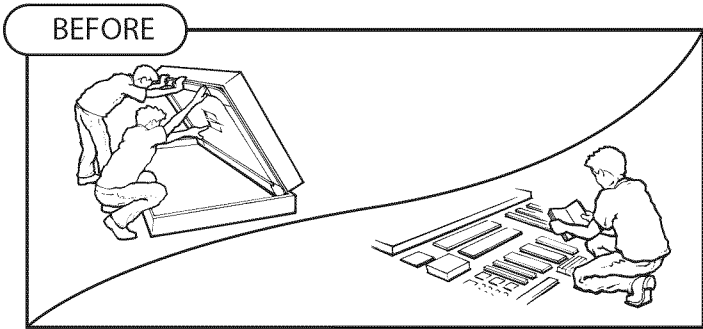


NOTE:

BEFORE BUILDING -

Please inspect your playfield and layout all your parts

Your Playfield is NOT replaceable. Any damage that exists to your playfield is not repairable under warranty. If your playfield is damaged, the entire game must be returned to the original place of purchase for an exchange.


 
ASSEMBLY INSTRUCTIONS

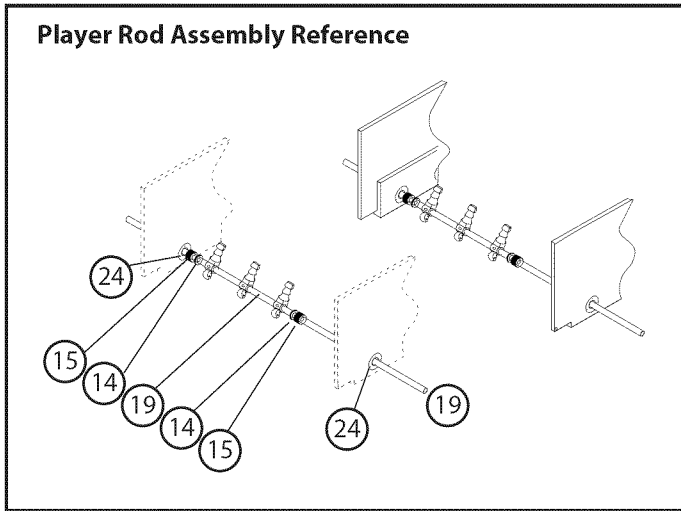

COMPONENTS	QTY.
19 Rod - 3 Player - Blue w/ Players SHOWN AS ONE EXAMPLE	
HARDWARE	
24 Rod Bushing Pre-assembled	x16
15 Bumper - Rubber Pre-assembled	x16
14 Bumper - Washer - Molded - 36mm Pre-assembled	x16

NOTE:

  
STEP 1

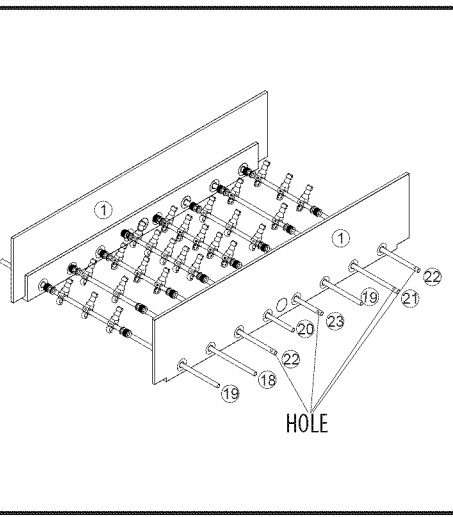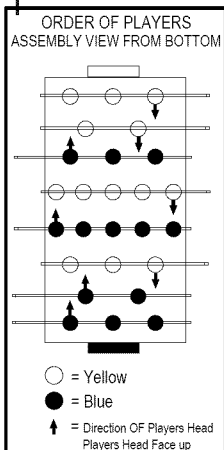

COMPONENTS	QTY.
1 Apron - Side	x2
HARDWARE	
18 Rod - 2 Player - Blue w/ Players	x1
19 Rod - 3 Player - Blue w/ Players	x2
20 Rod - 5 Player - Blue w/ Players	x1
21 Rod - 2 Player - Yellow w/ Players	x1
22 Rod - 3 Player - Yellow w/ Players	x2
23 Rod - 5 Player - Yellow w/ Players	x1

NOTE:

 
STEP 2

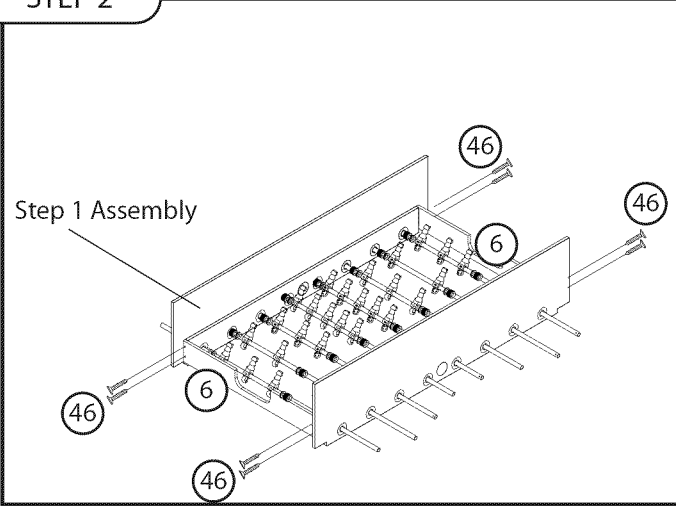

COMPONENTS	QTY.
6 Goal - Board - End	x2
Step 1 Assembly	x1
HARDWARE	
46 Screw - Flat Head - 4 x 47mm	x8

NOTE:

 STEP 3

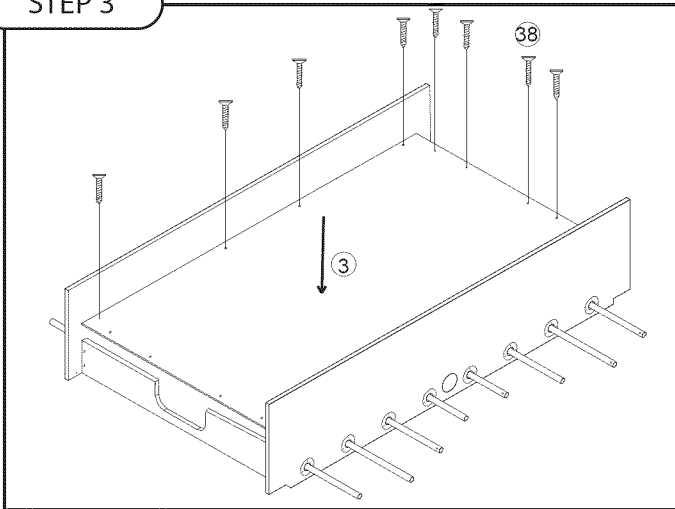

COMPONENTS

COMPONENTS	QTY.
Step 2 Assembly	x1
③ Play Field	x1


HARDWARE

HARDWARE	QTY.
③⑧ Screw - Flat Head - 4 x 25mm	x16

NOTE:

Install all 16 screws around playfield.

 STEP 4

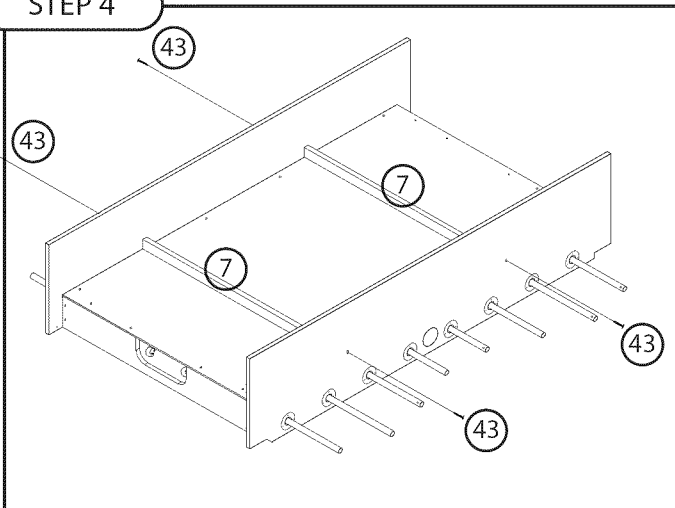

COMPONENTS


COMPONENTS	QTY.
Step 3 Assembly	x1
⑦ Playfield - Support Brace	x2

HARDWARE

HARDWARE	QTY.
④③ Screw - Washer Head - 4 x 47mm	x4

NOTE:

 STEP 5

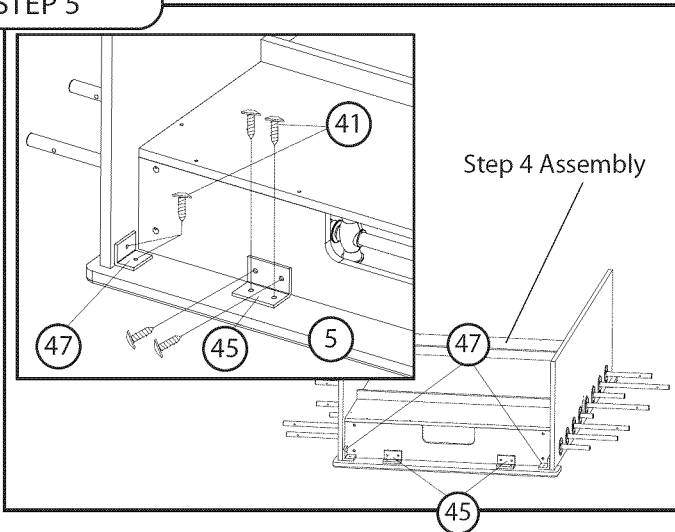

COMPONENTS

COMPONENTS	QTY.
⑤ Board - Slat - Top	x2
Step 4 Assembly	x1

HARDWARE


HARDWARE	QTY.
④① Screw - Washer Head - 3.5 x 10mm	x24
④⑤ End Bracket - 4 hole	x4
④⑦ Side Bracket - 2 hole	x4

NOTE:

NOTE: Must do both sides.

Also NOTE Screw 41 - 2 screws in each corner as shown.

 STEP 6

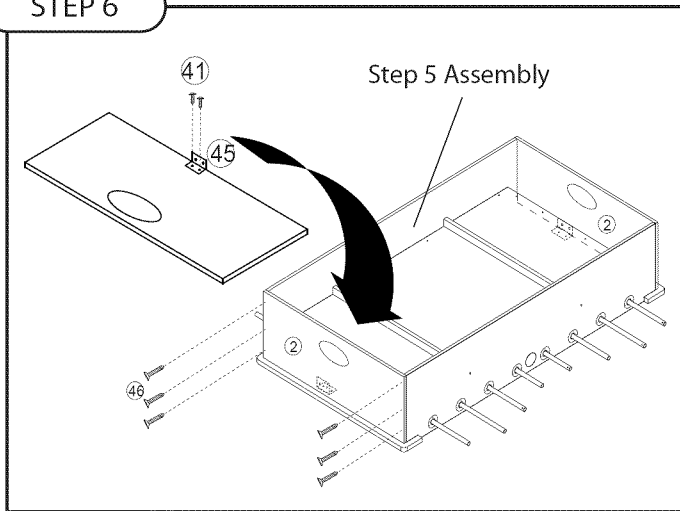


COMPONENTS	QTY.
2 Panel - End Goal	x2
10 Step 5 Assembly	x1

HARDWARE	QTY.
45 Bracket - 4 hole	x2
41 Screw - Washer Head - 3.5 x 10mm	x4
46 Screw - Flat Head - 4 x 47mm	x12

NOTE:

Repeat for both sides.
Brackets inset in well.

 STEP 7

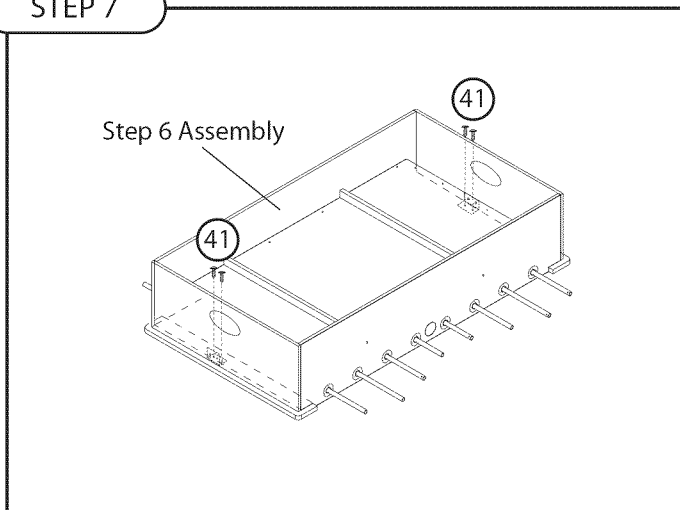


COMPONENTS	QTY.
Step 6 Assembly	x1

HARDWARE	QTY.
41 Screw - Washer Head - 3.5 x 10mm	x4

NOTE:

Repeat for both ends.

 STEP 8

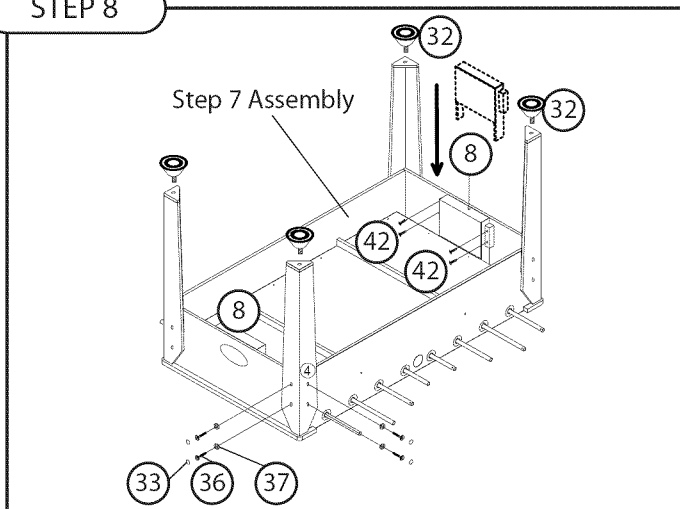

COMPONENTS	QTY.
Step 7 Assembly	x1
4 Leg	x4
8 Goal - Box - Bottom	x2
32 Leg Leveler - Silver	x4

HARDWARE	QTY.
33 Cover - Leg Bolt	x16
36 Bolt - Allen Key - 6 x 25 mm	x16
37 Washer - 12mm	x16
42 Screw - Washer Head - 4 x 34mm	x8
44 Wrench - Allen Key - 4mm	x1

 
NOTE:

Repeat for all legs, and both goal boxes.


IMPORTANT!

STEP 9

CAUTION: At least two strong adults are required to turn the table over as shown.
DO NOT LEAN TABLE ON LEGS - Flip over and place all 4 legs on ground at the same time. (SEE BELOW)

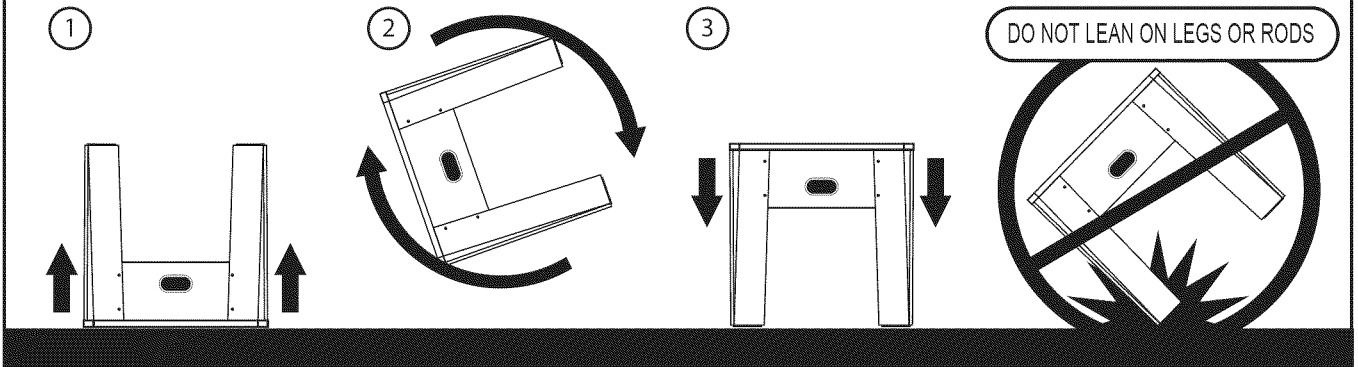

 STEP 10

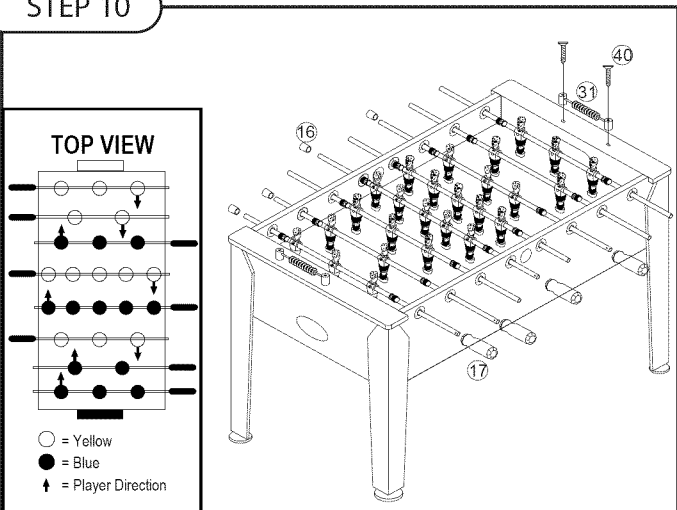


COMPONENTS	QTY.
31 Scorer - Bead Style - Mold Silver	x2
16 Cap - End	x8
17 Grip - Handle	x8
Step 9 Assembly	x1

HARDWARE	QTY.
40 Screw - Flat Head - 3.5 x 16mm	x4

NOTE:
 Use a little soap and water to assist in sliding handle all the way on to the rod.

 STEP 11

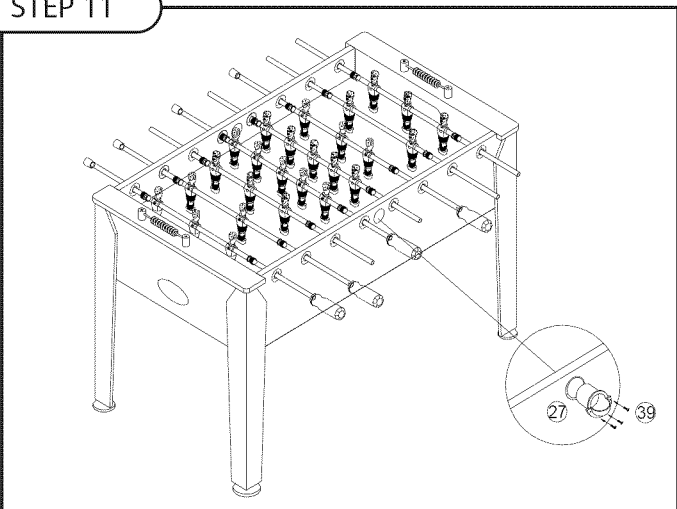

COMPONENTS	QTY.
Step 10 Assembly	x1
27 Ball - Entry Cup - Outside	x2

HARDWARE	QTY.
39 Screw - Flat Head - 4 x 12mm	x6

NOTE:

Limited Warranty

As described in and as limited by this Limited Warranty, EastPoint Sports, Ltd. (the "Company") warrants this Foosball Table (the "Product") to be free from defects in workmanship and materials for a period of 90 days from the date of original purchase. The term defects shall mean any imperfections that impair the use of the product. The Company reserves the right to request confirmation of Proof of Purchase when requesting parts or service in order to confirm that the game is within its warranty period.

What is Covered: Except as provided herein, this Limited Warranty covers all defects in materials and workmanship. This Limited Warranty is void if the Product is:

- Damaged through improper usage or storage, negligence, misuse, abuse, transportation damage, acts of nature, or accident (including failure to follow the instructions supplied with the product)
- Used in commercial applications, rentals or a commercial environment
- Modified or repaired by anyone not authorized by the Company

What is Not Covered:

The Limited Warranty does not cover:

- Expendable items such as cosmetic parts, game playing accessories, and any other items that may show signs of wear due to normal usage
- Any transportation/delivery/installation costs incurred by the Consumer (either home from the original place of purchase or back to the original place of purchase)

What the Company Will Pay For:

- If any part or component of the Product which is covered by this Limited Warranty is found by the Company to be defective, the Company will provide replacement parts without charge. The Company's obligation to repair or replace the Product or any portion thereof, shall be limited to the original purchase price of the product.
- If during the Limited Warranty period, the product is found to be defective, the Company will, at the Company's option, send parts, or make remuneration for the Product (either the same or equivalent value) without charge.

How to Obtain Warranty Service: In order to enforce your rights under this Limited Warranty, you must follow these procedures:

- You must return the ORIGINAL COPY OF YOUR SALES RECEIPT to the Company.
- You must call the Company's Consumer Service Department at 1-877-279-7071 on Monday through Friday between the hours of 9:00 A.M. and 5:00 P.M. (EST) to notify the Company of the nature of the problem. At the Company's option, replacement parts or a new Product (either the same or equivalent value) will be sent to you at no charge.
- If you are instructed to return the Product to the Company for servicing, you are responsible for shipping the Product, at your expense, to the address designated by the Company in packaging that will protect against further damage.
- You must also include your name, address, daytime telephone number, Product model number, and a description of the problem.
- The Company will pay for any shipping charges to return the repaired or replaced Product to you.

THIS LIMITED WARRANTY IS AVAILABLE ONLY TO THE ORIGINAL PURCHASER OF THE PRODUCT AND IS VALID ONLY IN THE UNITED STATES. THE COMPANY'S LIABILITY IS LIMITED TO THE REPAIR, REPLACEMENT, OR REMUNERATION, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL NOT INCLUDE ANY LIABILITY FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND. THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR DO NOT ALLOW FOR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. TO THAT EXTENT, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This Limited Warranty gives you specific legal rights, but you may also have other rights that vary from state to state.

If you have any questions regarding this Limited Warranty or the operation of the Product, you may call or write us.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A COPY OF THE SALES RECEIPT/PROOF OF PURCHASE. REPORT ANY DEFECTS TO:



628 ROUTE 10, SUITE #5 WHIPPANY, NEW JERSEY 07981 • 1-973-585-4747

TABLE MAINTENANCE AND CARE

Table Top –

- We recommend that you keep the table covered when not in use. This will prevent the build up of dust and will prolong the life of the table.
- In the event that your table does get dusty, we recommend using a clean soft cloth to wipe it away. The cloth should be non-abrasive. If necessary, you can use any gentle surface cleaner (no bleach or ammonia) with a lint free cloth.
NOTE: DO NOT spray the cleaning product directly on the table surface. It must be applied to the cloth directly. Then the table top can be wiped in a lengthwise direction.
- This table is meant for indoor use only.
- Do not sit on the table or the rods.

Legs -

- Periodically check the bolts on the legs to make sure that they are secure. After heavy playing or lots of abuse, there is a chance they can loosen and decrease the stability of the cabinet.

Rods and Players -

- Periodically check that the nuts and bolts securing the players are tight. If not tight, tighten with a Phillips Head Screwdriver.
- To clean the rods if necessary, you can use any gentle surface cleaner (no bleach or ammonia) with a lint free cloth.
- **DO NOT** hang on the rods. This will cause them to deform and will ruin the playability of your table. If this is the case, contact EastPoint for parts and repair instructions.
- **DO NOT** aggressively spin the rods as this may damage the bushings (and its not legal as per the official rules of the game)
- Use of 100% Silicone lubricant is acceptable to lubricate the rods and bushings.
NOTE: DO NOT over lubricate as you will lose all the touch and feel required to perform various plays and tricks.

Moving the Table -

- Do not drag the table with its legs touching the floor. If moving, you must lift it by either the 2 end aprons or 2 side aprons.
NOTE: DO NOT lift the table by the rods. This will damage the table and the rods and will make the table unplayable without contacting EastPoint for parts and repair instructions.

Balls -

- Over time, the textured surface of your ball will wear and become more smooth. This will lead to the player having less of an ability to trap the ball, perform tricks, or have really good ball control.
- If the ball is worn and you notice a decrease in the quality of your game play, either switch to a new one or contact EastPoint to purchase replacement balls.



www.eastpointsports.com