

Get it fixed, at your home or ours!

Your Home

For troubleshooting, product manuals and expert advice:



www.managemylife.com

For repair – **in your home** – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME®

(1-800-469-4663)

www.sears.com

Call anytime, day or night

(U.S.A. and Canada)

www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of the nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6637)

www.sears.ca

Sears

® Registered Trademark / TM Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / TM Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países
^{MC} Marque de commerce / ^{MC} Marque déposée de Sears Brands, LLC

Use & Care Guide
Manual de Uso y Cuidado
English / Español

Kenmore Elite. Coffeemaker 12-Cup Glass Carafe

Cafetera Garrafa de cristal 12-copas

Models/Modelos:
100.06906 – Brushed Aluminum
100.06916 – Black

P/N 1347790008 (0807)
Sears Brands Management Corporation
Hoffman Estates, IL 60179 U.S.A.
www.kenmore.com
www.sears.com



WARRANTY

KENMORE ELITE FULL WARRANTY

If this product fails due to a defect in material or workmanship within five years from the date of purchase, return it to any Sears store or other Kenmore outlet in the United States for free replacement.

This warranty does not cover the filters, which are expendable parts that can wear out from normal use within the warranty period.

This warranty is void if this product is ever used for other than private household purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ all instructions.
2. DO NOT touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, DO NOT immerse cord, plug, or the coffeemaker in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. ALWAYS UNPLUG coffeemaker from power outlet before cleaning, and when storing. Allow to cool before putting on or taking off parts, cleaning or storing.
6. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. DO NOT use outdoors.
9. NEVER let the cord hang over the edge of table or counter or touch hot surfaces.
10. DO NOT place coffeemaker on or near a hot gas or electric burner or in a heated oven.
11. DO NOT use this coffeemaker for anything other than its intended use.
12. The carafe is designed for use only with this coffeemaker.
13. Scalding may occur if the lid is removed during the brewing cycles. ALWAYS keep the lid on the carafe when in use.

 
2

IMPORTANT SAFEGUARDS

14. To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type receptacle. DO NOT alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.
15. This product is designed for household use only!
16. A short power supply cord (or detachable power supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

SAVE THESE INSTRUCTIONS!

PARTS AND FEATURES

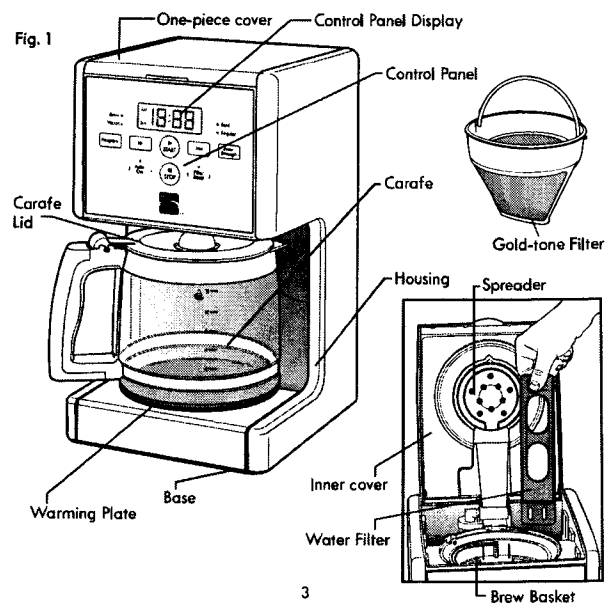


PREPARING TO USE YOUR COFFEEMAKER

Before the first use of the coffeemaker wash the brew basket, the permanent gold-tone filter, the carafe and carafe lid in either the top rack of your dishwasher, or by hand in warm, sudsy water.

The exterior of the coffeemaker, the control panel area and the warming plate should only be cleaned with a soft damp cloth.

NOTE: NEVER clean the warming plate unless it is completely cool.

 To clean the inside of the reservoir cover, open the one-piece cover, allowing it to rest in the open position, and wipe surfaces with a damp cloth.

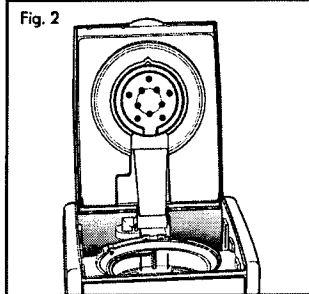

NOTE: DO NOT use abrasive cleansers or scouring pads when cleaning your coffeemaker. **NEVER** immerse the coffeemaker in water or any liquid.

 
 
 
After all parts are washed for the first time, pour cold water up to the 12 cup level mark in the water reservoir. Brew it through the coffeemaker as instructed in BREWING, but do not add coffee grounds to the Gold-tone filter. When done, turn off the coffeemaker and discard the water from the carafe.

OPERATING YOUR COFFEEMAKER

The easy-to-use programmable digital controls let you wake up to fresh coffee. It's never been easier to brew the perfect cup of coffee.

BREWING COFFEE

1. Lift the One-piece Cover by pulling up on handle. (See Fig. 3).
2. Use the carafe to fill the water reservoir of the coffeemaker to the desired level with cold water. There is a gauge marked from 2 to 12 cups (300ml to 1800ml) on both the coffeemaker's water reservoir and on the sides of the carafe (see Fig. 4). The amount of cold water will differ slightly from the amount of coffee brewed, because some of the water is absorbed by the coffee grinds in the process of brewing.
3. Place either the permanent gold-tone filter or a size #4 paper filter (not included) into the brew basket (see Fig. 5).
4. Add ground coffee. The amount of coffee you use is a matter of personal taste (we recommend one heaping tablespoon for every two cups). Experiment . . . try different amounts of ground coffee per cup until you brew your perfect cup of coffee. You can also try using the paper filter along with the gold-tone filter.
5. Close the cover. Place carafe on the warming plate and plug in the appliance. The control display window illuminates blue and the coffeemaker beeps for about 1 second to let you know the clock is not set. The clock will blink at 12:00 AM. The clock does not have to be set to brew coffee. To set the clock time, see OPERATING THE CONTROL PANEL.

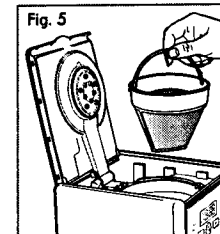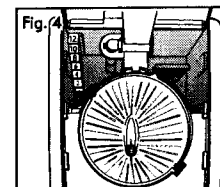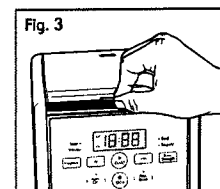

OPERATING YOUR COFFEEMAKER

- The default setting of the Coffeemaker is for Regular strength, indicated by a blue light next to the word Regular. Choose Bold strength by pressing the Brew Strength button. The blue light will switch to the word Bold. Push the START button to turn on the coffeemaker. A blue light appears by the word Brew to show that the coffeemaker is brewing. When the coffee has finished brewing, the coffeemaker automatically switches to the Warming mode. The blue light switches from the word Brew to the word Warm. For delayed brewing, see OPERATING THE CONTROL PANEL.

NOTE: Bold strength brews the best taste for 1-4 cups of coffee.

- When you have poured out all the coffee in the carafe, press the STOP button to turn off the appliance, and remove the carafe from the warming plate.
NOTE: If the coffeemaker is not turned off, it will automatically shut off after two hours.

PAUSE AND POUR FEATURE

The pause and pour feature enables you to remove the carafe from the Coffeemaker and pour a cup of coffee before brewing is finished. When the carafe is removed, a special valve stops the flow of coffee from the brew basket to the carafe. Brewing, however, does not stop. If the carafe is not replaced under the brew basket after 20 seconds, water and coffee will overflow from the brew basket.

OPERATING THE CONTROL PANEL

AUDIO SIGNALS

- When the unit is plugged in, one beep can be heard.
- When the coffee has finished brewing, three beeps can be heard.
- When the warming state is finished, five beeps can be heard.

SETTING THE CLOCK

- Set the time of day by pressing the Hour and Minute buttons. Be sure to set the time with the correct AM and PM designation.
- You can make the hours and minutes move more quickly in the clock display by holding the buttons down.
- After a few seconds the clock display turns off, but the clock still keeps time.

OPERATING THE CONTROL PANEL


TO SET AUTO BREW (Delayed Brewing)

- First set the clock. See directions above.
- Press the Program button. The clock will show the correct time as you have set it. Press the Program button again and the default time of 6:00 AM, or the last programmed brew time, flashes.
- To change the time you want to program the coffeemaker to brew, press the Hour and Minute buttons. Be sure to set time with the correct AM or PM designation.
- You can make the hours and minutes move more quickly in the clock display by holding the buttons down.

TO ACTIVATE AUTO BREW (Delayed Brewing)

- Once you have set the correct time to begin the automatic brewing and the clock has returned to the time of day, push in the Auto On button. A blue light above the Auto On button is illuminated to show the coffeemaker is programmed to automatically brew.
- Fill the Coffeemaker with the proper amount of coffee in the filter basket and water in the reservoir, return pot to hot plate and you are ready for Auto Brew.
- The Auto Brew can be cancelled at any time by pressing the STOP button. The Auto On light goes out. To check what time the Auto Brew is set for, push in the Program button and the time will be displayed.

 Fig. 6

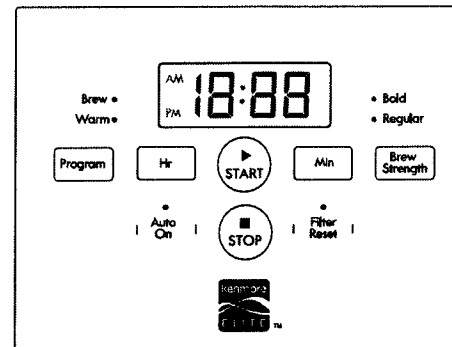

CARE AND CLEANING

⚠ WARNING: NEVER immerse the coffeemaker in water or any liquid.

⚠ WARNING: DO NOT clean the warming plate unless it is completely cool. DO NOT use abrasive cleansers or scouring pads.

To clean the inside of the reservoir cover, open the one-piece cover, allowing it to rest in the open position. Wipe surfaces with a damp cloth. **DO NOT** use abrasive cleansers or scouring pads.

CARAFE CARE

A damaged carafe may result in possible burns from a hot liquid. To avoid breaking:

1. **DO NOT** allow all liquid to evaporate from the carafe while on the warming plate and never heat the glass carafe when empty.
2. **DISCARD** the carafe if chipped, cracked, or damaged in any manner.
3. **NEVER** use abrasive scouring pads or cleansers; they will scratch and weaken the glass.
4. **DO NOT** place the carafe on or near a gas or electric burner, in a heated oven, or in a microwave oven.
5. Avoid rough handling and sharp blows.
6. **DO NOT** set a hot carafe down on a wet or cold surface.

CLEANING THE COFFEEMAKER AND CHANGING THE CHARCOAL FILTER

After every 70 cycles, or carafes of coffee, a blue light will appear in the control panel display above the Filter Reset button. This lets you know it is time to clean the inside of the coffeemaker of all mineral buildup, and to change the water filter.

Mineral deposits left by hard water can clog your coffeemaker. Cleaning is recommended about every 70 uses, when the coffeemaker's reminder lets you know you have reached this point.

CARE AND CLEANING

To Clean:

1. Press the "Filter Reset" button on the control panel to turn off the blue light and reset the count (Fig. 7).
2. Open the lid of reservoir, and pull out the charcoal water filter (Fig. 8).
3. Pour white vinegar into water reservoir up to the 6-cup level shown inside reservoir.
4. Add cold water up to the 12-cup line.
5. Put a paper filter in the brew basket, close cover, and place empty carafe on the warming plate.
6. Turn on the coffeemaker by pressing START and let half of the vinegar water solution brew through into carafe.
7. Turn the coffeemaker off by pressing STOP at this point and let it soak for at least 15 minutes to soften any deposits.
8. Turn the coffeemaker back on by pressing START and brew the remaining solution into the carafe. When brew cycle has stopped, turn off coffeemaker by pressing STOP, empty carafe, and discard soiled paper filter.
9. Refill reservoir with cold water and turn on by pressing START to run another brew cycle. You may want to repeat again to eliminate any vinegar smell/taste.
10. Wash the brew basket, gold-tone filter and carafe.
11. Open the Water Filter, pull out the old charcoal, discard and replace with a new one (Fig. 9).
12. Place the Water Filter with new charcoal into the reservoir. Coffeemaker is cleaned and ready for use.

