



YAMAHA

YSP-5100 / YSP-4100

Digital Sound Projector™

Owner's Manual

English
for North America

IntelliBeam

The “IntelliBeam” logo and “IntelliBeam” are trademarks of Yamaha Corporation.



The “CINEMA DSP” logo and “Cinema DSP” are registered trademarks of Yamaha Corporation.

UniVolume

The “UniVolume” and “UniVolume” are trademarks of Yamaha Corporation.

yAired

The “yAired” and “yAired” are trademarks of Yamaha Corporation.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories



Manufactured under license under U.S. Patent No's: 5,451,942;5,956,674;5,974,380;5,978,762;6,226,616;6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademark of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



Manufactured under license from Cambridge Mechatronics Ltd. Worldwide patents applied for.

The “ ” logo and “Digital Sound Projector™” are trademarks of Cambridge Mechatronics Ltd.

HDMI

“HDMI”, the “HDMI” logo and “High-Definition Multimedia Interface” are trademarks or registered trademarks of HDMI Licensing LLC.

x.v.Color

“x.v.Color” is a trademark.

iPod™, iPhone™

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc.



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



SIRIUS, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved. **Service not available in Alaska and Hawaii.**

About this manual

- Make sure you read precautions in “Safety and Accessory Information” (separate booklet) carefully before using this unit.
- This manual describes how to connect and operate this unit. For details regarding the operation of external components, refer to the supplied owner's manual for each component.
- Operations in this manual use keys on the supplied remote control of this unit unless otherwise specified.
- ✎ indicates a tip for your operation.
- An illustration of the remote control in the left pages of this manual indicates the keys to be used in two facing (left and right) pages.
- This manual is produced prior to production. Designs and specifications are subject to change in part as a result of improvements, etc. In case of differences between the manual and the product, the product has priority.

CONTENTS

INTRODUCTION

Features	4
General operation flow	5
Controls and functions	6
Front panel	6
Front panel display.....	7
Rear panel.....	8
Remote control	9

PREPARATION

Installation	10
Connections	12
Before connecting components	12
Connecting external components	12
Connecting a subwoofer.....	13
Connecting the FM antenna	14
Preparing the remote control	14
Installing batteries in the remote control.....	14
Operation range of the remote control	14
Changing OSD language	15
AUTO SETUP (IntelliBeam)	15
Installing the IntelliBeam microphone.....	15
Using AUTO SETUP (IntelliBeam)	16
Using the system memory	19
Saving settings	19
Loading settings	19

PLAYBACK FEATURES

Playback	21
Playing back sources	21
Playing back TV sounds.....	21
Playing back a player	21
Muting audio output	21
Decoder and input channel indicators	21
Playback mode	22
Selecting surround or stereo playback	22
Enjoying CINEMA DSP programs.....	22
Changing the audio output method for surround playback.....	23
Enjoying 2-channel sources in surround sound.....	24
Playing back 5.1-channel sources in 7.1-channel surround.....	24
FM tuning	25
Tuning into the desired FM station (Frequency tuning)	25
Registering FM stations and tuning in (Preset tuning).....	25
SIRIUS Satellite Radio™ tuning	26
Listening to Satellite Radio.....	26
Connecting the SiriusConnect™ tuner.....	26
Activating SIRIUS Satellite Radio™ subscription	27
SIRIUS Satellite Radio™ operations.....	27
Registering SIRIUS Satellite Radio™ channels	28
Setting the Parental Lock	29
Displaying the SIRIUS Satellite Radio™ information	30
Playing back iPod™/iPhone™	30

Useful features	31
Adjusting volume level automatically (UniVolume).....	31
Using the HDMI™ control function.....	31
Using the sleep timer	31
Configuring settings for each input source (OPTION MENU)	32
Displaying the input signal information	32

SETTINGS

Customizing this unit (SET MENU)	33
SET MENU items.....	33
Basic SET MENU operation.....	34
MANUAL SETUP.....	34
SOUND SET MENU.....	36
SOUND OUT MENU.....	37
INPUT MENU	38
DISPLAY MENU.....	39
System configurations (ADVANCED SETUP)	40
Using an external amplifier	41
Controlling external components	42

APPENDIX

Troubleshooting	43
Glossary	47
Specifications	48
List of remote control codes	49
Index	56

INTRODUCTION

Features

Digital Sound Projector

The Digital Sound Projector technology allows one slim unit to control and steer multiple channels of sound to generate multi-channel surround sound, thus eliminates the need for satellite loudspeakers and cabling normally associated with conventional surround sound systems. This unit also employs the beam modes that let you enjoy the surround sound (5 Beam, Stereo+3 Beam, 3 Beam for 5.1-channel audio, 5 Beam plus 2, Stereo + 3 Beam plus 2, 3 Beam for 7.1-channel audio) and 2-channel stereo playback.

HDMI (High-Definition Multimedia Interface)

- ◆ HDMI input x 4, HDMI output x 1
- ◆ HDMI interface for standard, enhanced, or high-definition video (including 1080p video signal transmission) as well as multi-channel digital audio based on HDCP
 - Automatic audio and video synchronization (lip sync) information capability
 - Deep Color video signal transmission capability
 - “x.v.Color” video signal transmission capability
 - High definition digital audio format signals capability
 - Multi-channel Linear PCM signal capability
- ◆ Simple and easy connections with HDMI supported external components
- ◆ Functional link which enables the remote control of your TV to control this unit (with an HDMI control-compatible TV)
 - Power mode switch capability (on/standby)
 - Volume adjustment capability
 - TV sounds reproduce device selection capability (this unit/TV)

AUTO SETUP (IntelliBeam)

This unit employs the automatic sound beam and acoustic optimization technology with the aid of the supplied IntelliBeam microphone. You can avoid troublesome listening-based speaker setup and achieve highly accurate sound beam adjustments that best match your listening environment.

Cinema DSP

This unit employs the Cinema DSP technology developed by Yamaha Electronics Corp. that lets you experience movies at home with all the original dramatic sound impact.

UniVolume

This unit employs the automatic volume adjustment function. You can limit the volume level of the TV so that it will not increase suddenly when whenever the contents being broadcast change (due to commercials, etc.).

Various digital audio decoders includes newly added HD audio decoder, and sound technologies

- ◆ Dolby TrueHD, Dolby Digital Plus, Dolby digital Surround EX, Dolby Digital, Dolby Pro Logic, Pro Logic II, Pro Logic IIx
- ◆ DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS 96/24, DTS-ES, DTS, DTS-ES (discrete and matrix), DTS Neo: 6
- ◆ Music Enhancer to improve the sound quality of compression artifacts such as the MP3 format
- ◆ Bass Extension to produce powerful bass sounds

Sophisticated FM tuner

- ◆ 40-station random and direct preset tuning
- ◆ Automatic preset tuning

SIRIUS Satellite Radio

- ◆ SIRIUS Satellite Radio tuning capability, using SiriusConnect tuner, sold separately
- ◆ SIRIUS Satellite Radio information displaying capability

Wireless connection (yAired)

- ◆ Wireless connection with iPod/iPhone, using Yamaha wireless transmitter for iPod (PDX-50TX/PDX-50BC)
- ◆ Wireless connection with subwoofer, using Yamaha wireless subwoofer kit (SWK-W10) (not available in some countries)
- ◆ iPod/iPhone interlock feature to turn on/off this unit or switch the input source in conjunction with iPod/iPhone operations

 
Versatile Remote Control

The supplied remote control comes with preset remote control codes used to control external components connected to this unit.

General operation flow


1 Install this unit and connect to other components.

“Installation” (page 10), “Connections” (page 12)




2 Run AUTO SETUP to optimize the beam and sound settings.

 “AUTO SETUP (IntelliBeam)” (page 15)



3 Play back a source.

 “Playback” (page 21).



4 Change the playback method (surround/stereo), CINEMA DSP and/or beam modes settings.

“Playback mode” (page 22).




5 Configure this unit's settings and/or set remote control codes.

“Customizing this unit (SET MENU)” (page 33), “Controlling external components” (page 42).

Controls and functions

Front panel

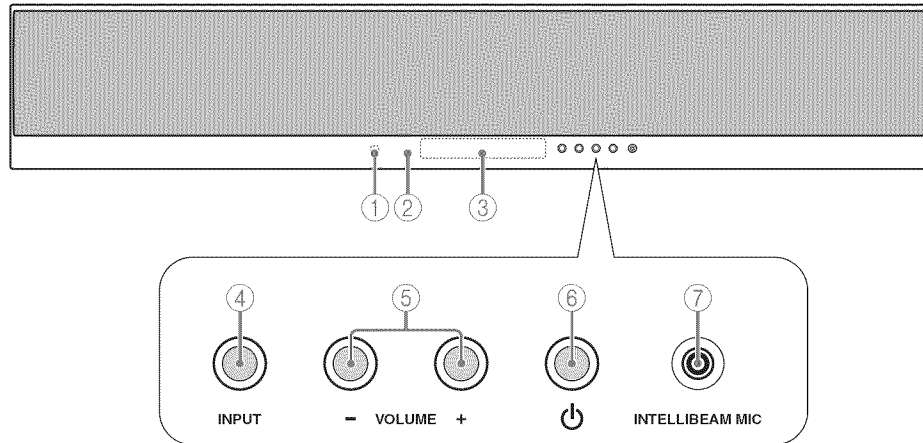

① **Remote control sensor**

Receives infrared signals from the remote control (page 14).

② **Power LED**

Lights up when the power is turned on (page 21).

③ **Front panel display**

Shows information about the operational status of this unit (page 7).

④ **INPUT**

Press repeatedly to switch between input sources.

⑤ **VOLUME +/-**

Controls the volume level of all audio channels.

Control range: MIN (minimum), 01 to 99, MAX (maximum)

⑥ **Power (⏻) key**

Turns on the power of this unit or sets it to the standby mode (page 21).


Note

- In the standby mode, this unit consumes a small amount of power in order to receive infrared signals from the remote control or to search for HDMI signals.

⑦ **INTELLIBEAM MIC jack**

Connect the supplied IntelliBeam microphone for AUTO SETUP (page 15).

Front panel display

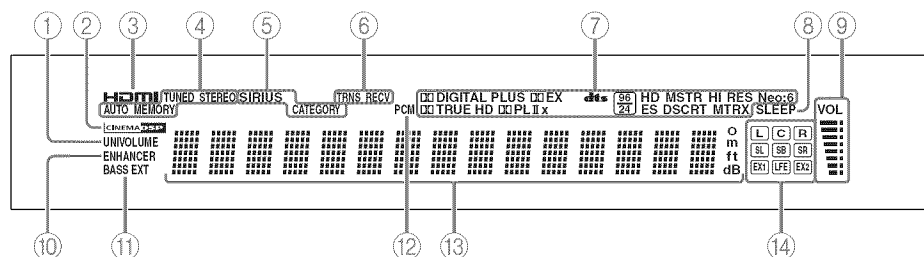

① UNIVOLUME indicator

Lights up when the UniVolume function is turned on (page 31).

② CINEMA DSP indicator

Lights up when a sound field program is selected (page 22).

③ HDMI indicator

Lights up when the signal of the selected input source is input from the HDMI IN jack(s).

④ Tuner indicators

FM: Light up when this unit is tuned into an FM station (page 25).
SIRIUS: MEMORY flashes during the preset operation (page 28).

⑤ SIRIUS indicators

Light up when this unit is tuned into a SIRIUS Satellite Radio channel (page 26).

⑥ Wireless indicators

TRNS Lights up when a wireless connection is established between the Yamaha wireless subwoofer kit (SWK-W10) and this unit (page 13).

RECV Lights up when a wireless connection is established between the Yamaha wireless transmitter for iPod (PDX-50TX) and this unit (page 30).

⑦ Decoder indicators

Light up when the corresponding decoder operates (page 21).

⑧ SLEEP indicator

Lights up when the sleep timer is set (page 31).

⑨ Volume level indicator

Displays the current volume level.

⑩ ENHANCER indicator

Lights up when the Music Enhancer is selected (page 37).

⑪ BASS EXT indicator

Lights up when the bass extension mode is turned on (page 37).

⑫ PCM indicator

Lights up when this unit is reproducing PCM (Pulse Code Modulation) digital audio signals.


⑬ Multi-information display

Shows information with alphanumeric characters when you adjust the parameters of this unit. Current input source and audio output method are displayed when this unit is turned on.

⑭ Input channel indicators

The channel component of the current input signal is displayed (page 21).

Rear panel

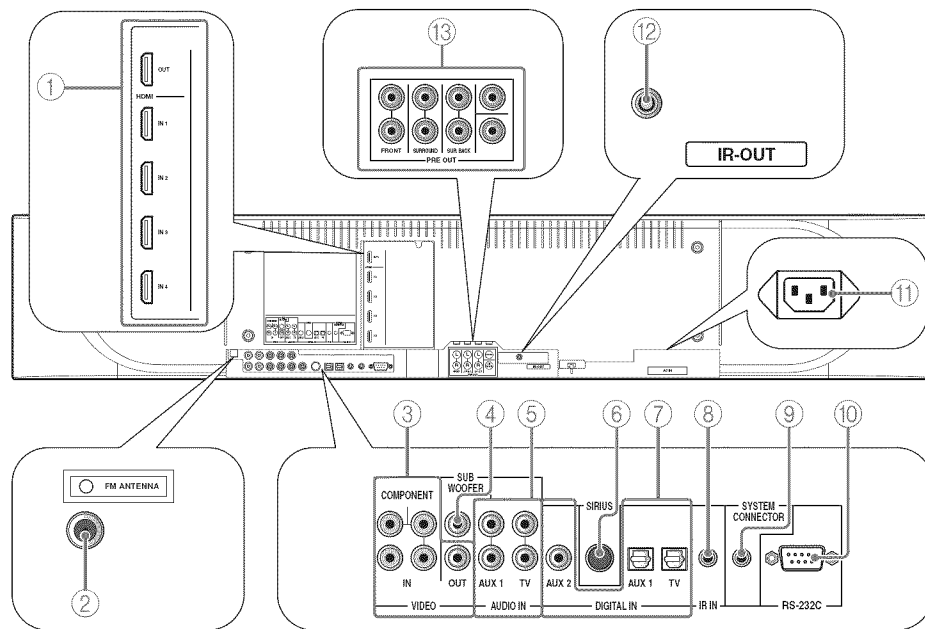

Note

- The rear panel illustration shows jacks and their names to help you find them easily. They are not exactly the same as the ones on the actual rear panel of this unit.

① HDMI jacks

Connect your HDMI components (page 12).

② FM ANTENNA jack

Connect the FM antenna (page 14).

③ VIDEO jacks

Connect to the video jacks of your external components (page 12).

④ SUBWOOFER jack

Connect your subwoofer (page 13).

⑤ AUDIO IN jacks

Connect to the analog audio output jacks of your external components (page 12).

⑥ SIRIUS antenna jack

Connect a SiriusConnect tuner (sold separately) (page 26).

⑦ DIGITAL IN jacks

Connect to the digital audio output jacks of your external components (page 12).

⑧ IR IN terminal

This is a control expansion terminal for commercial use only.

⑨ SYSTEM CONNECTOR terminal

Use to connect a Yamaha subwoofer equipped with a SYSTEM CONNECTOR terminal to this unit (page 13).

⑩ RS-232C terminal

This is a control expansion terminal for commercial use only.

⑪ AC IN

Connect the supplied power cable (page 12).


⑫ IR-OUT terminal

This is a control expansion terminal for commercial use only.

⑬ PRE OUT jacks

Connect your external amplifier (page 41).

Remote control

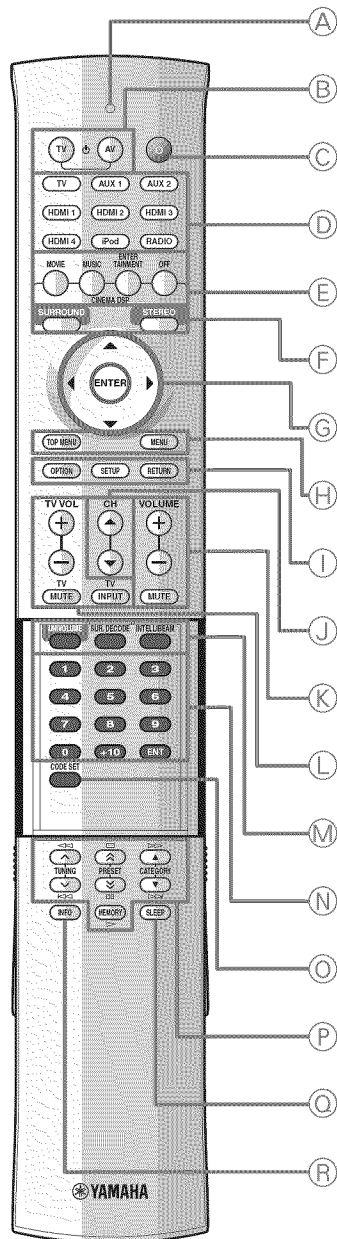

Note

- When operating the keys located on the slide cover (INFO, SLEEP, etc.), close the slide cover completely before operation.

A Transmission indicator

Lights up when infrared control signals are being output.

B TV (⏻)

Turns on the power of your TV or set it to the standby mode (page 42).

B AV (⏻)

Turns on the power of the selected component or set it to the standby mode (page 42).

C Power (⏻) key

Turns on the power of this unit or set it to the standby mode (page 21).

D Input selector keys

Use to select an input source (page 21). An input source key currently selected lights up when the remote control is operated.

E CINEMA DSP program keys

Select the CINEMA DSP programs (page 22).

F SURROUND/STEREO

Switches between surround and stereo playback (page 22).

G Cursor (△ / ▽ / ◀ / ▶) keys, ENTER

Select and adjust menu items.

H TOP MENU

Displays the top menu of a Blu-ray disc or DVD (page 42).

H MENU

Displays the menu of a Blu-ray disc or DVD (page 42).

I OPTION

Displays the option menu (page 32). The remote control turns to setting mode (⓪SETUP lights up).

I SETUP

Displays the SETUP menu (page 33). Press and hold to directly enter the LANGUAGE SETUP menu (page 15). Lights up when the remote control is turned into the setting mode of the main unit.

⓪ RETURN

Returns to the previous menu screen (page 34).

J CH △ / ▽

Changes the channels of your TV/recorder (page 42).

K VOLUME +/-

Increases or decreases the volume level of this unit (page 21).

K MUTE

Mutes the sound. (page 21).

L TV operation keys

Use to control your TV (page 42).

M UNIVOLUME

Turns on or off the UniVolume function (page 31).

M SUR.DECODE

Selects a decoder for surround playback (page 24). The remote control turns to setting mode (⓪SETUP lights up).

M INTELLIBEAM

Enters the AUTO SETUP menu (page 16). The remote control turns to setting mode (⓪SETUP lights up).

N Numeric keys

Use to enter numbers.

⓪ CODE SET

Sets remote control codes for external component operations (page 42).

P Tuner / external component operation keys

Use to select or preset an FM station or Sirius Satellite Radio channel or control playback of your external components (pages 25, 26 and 42).

⓪ SLEEP

Sets the sleep timer (page 31).

R INFO

Displays information about signals currently input to this unit (page 32).

PREPARATION

Installation


This section describes a suitable installation location to install this unit using a wall mount bracket, a rack, a table top stand or a floor stand. To achieve desired surround sound effects, install this unit where there are no objects such as furniture obstructing the path of sound beams (page 11). Depending on your installation environment, connections with external components (page 12) should be done before installation.

Notes

- Make sure you leave an adequate amount of ventilation space so that heat can escape. We recommend installing this unit using a wall mount bracket, a rack, a table top stand or a floor stand.
- Be sure to install this unit where it will not fall subject to vibrations, such as from an earthquake, and where it is out of the reach of children.
- When using a cathode-ray tube (CRT) TV, do not install this unit directly above your TV.
- If the picture on your TV screen becomes blurred or distorted, we recommend moving this unit away from your TV.

■ Attach the stands

Attach the supplied stands to this unit as shown below. Make sure that you attach the left and right stands correctly. These stands are unnecessary if you use the optional wall mount bracket.

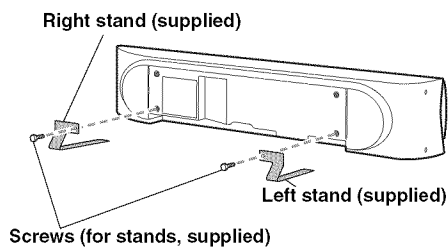


Note

- Depending on a rack, table top stand, or floor stand, the stands may not be necessary.

■ Using a rack

You can install this unit either above or under your TV in a commercially available rack.


It should be large enough to allow adequate ventilation space around this unit and strong enough to support the weight of both this unit and your TV.

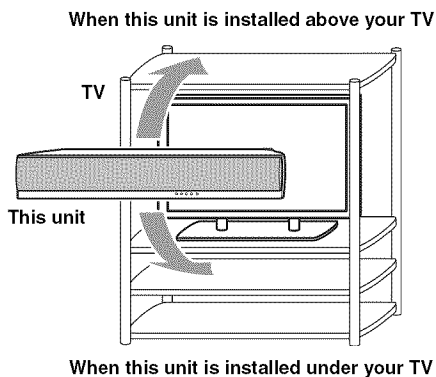



■ Using a wall mount bracket

You can use the optional wall mount bracket (such as SPM-K30) to mount this unit on the wall in your listening room.

Attachment of the wall mount bracket: refer to the owner's manual supplied with the wall mount bracket.

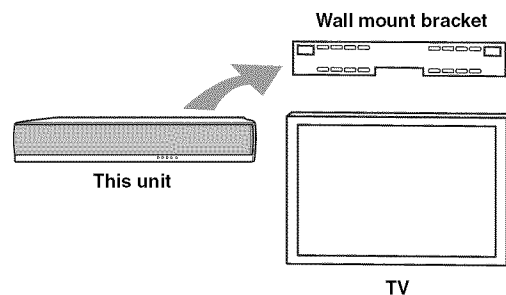


Dimensions when using SPM-K30

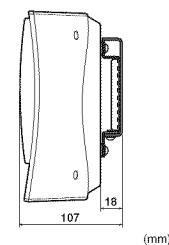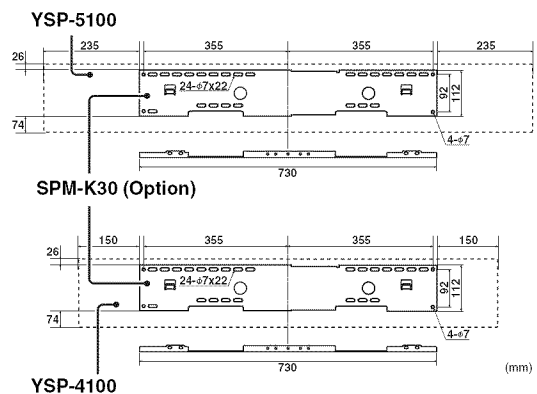


■ Using a table top stand or a floor stand

You can mount both your TV and this unit on a commercially available table top stand or floor stand.


■ Ideal installation condition

 : Object such as furniture

Parallel installation (with 5Beam)

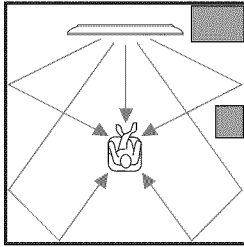


Corner installation (with Stereo+3Beam)

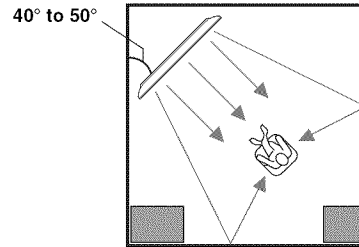

■ For better listening environment


Example 1

Install this unit as close to the exact center of the wall as possible.

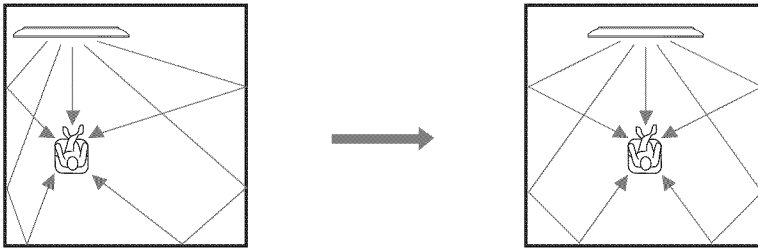


Example 2

Install this unit so that the sound beams can be reflected off the walls.

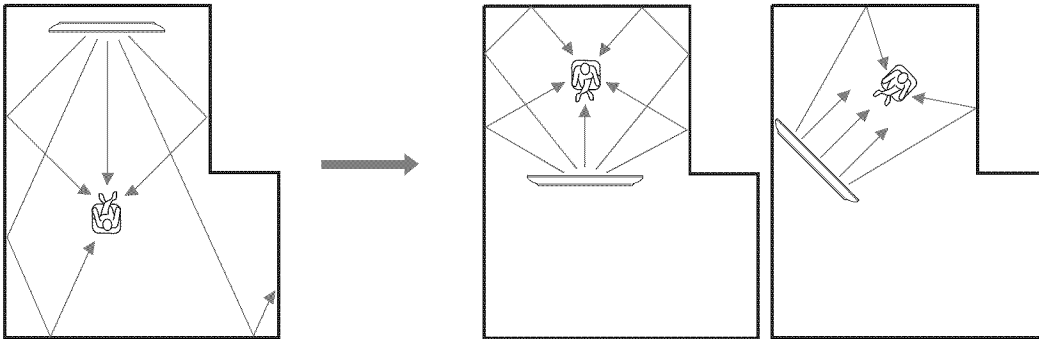

Example 3

Install this unit as close to the exact front of your normal listening position as possible.

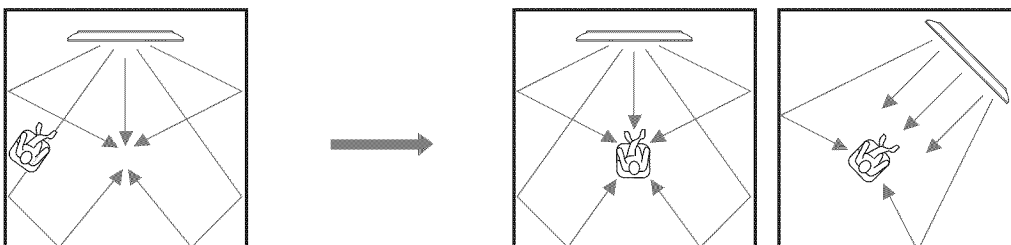

Connections

 
Before connecting components

■ Cables used for connections

The symbols on the left of cable names (such as ❶, ❷, and ❸) correspond with the symbols described in “Connecting your TV and Blu-ray disc player” (page 12) and “Connecting audio video components” (page 13).


For audio and video

❶ HDMI cable



For audio

 
❶ Audio pin cable (supplied)



❷ Optical cable (supplied)



 ❸ Digital audio pin cable (supplied)




For video

❶ Video pin cable (supplied)



 ❷ Component video pin cable



■ Information on HDMI

An HDMI cable can transmit both audio and video signals at the same time. If your TV and other components have HDMI jacks, use HDMI cables for simpler and easier connections.

See also: “Using the HDMI control function” (page 31), “INPUT MENU” (page 38)

Input source	Audio signal type
Blu-ray disc HD DVD	Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, DTS-HD High Resolution Audio, DTS-HD Master Audio, 2-channel PCM, multi-channel PCM
DVD video	Dolby Digital, DTS, 2-channel PCM, multi-channel PCM
DVD audio	2-channel PCM, multi-channel PCM



- This unit automatically converts input video signals and outputs the signals from the HDMI OUT jack.
- The HDMI of this unit supports High-Bandwidth Digital Content Protection (HDCP).
- We recommend that you use an HDMI cable shorter than 5 m (16 ft) with the HDMI logo printed on it.

■ Priority order for audio input signals


When digital and analog audio signals are simultaneously input from a single source component, this unit plays back digital audio signals by priority. For example, if audio signals are input to the DIGITAL IN (AUX 1) and AUDIO IN (AUX 1) jacks simultaneously, this unit plays back audio signals input to the DIGITAL IN (AUX 1) jack when “AUX1” is selected as the input source.

Connecting external components

Connect external components (TV, Blu-ray disc player, etc.) to this unit. Do not plug the power supply cable into an AC wall outlet until all connections are complete.


■ Connecting your TV and Blu-ray disc player

The following connection example shows a way to connect your TV and Blu-ray disc player by using the HDMI jacks. When you connect them by using the other jacks, refer to “Connecting audio and video components” (page 13). The symbols beside the cables correspond with the symbols described in “Cables used for connections” (page 12).

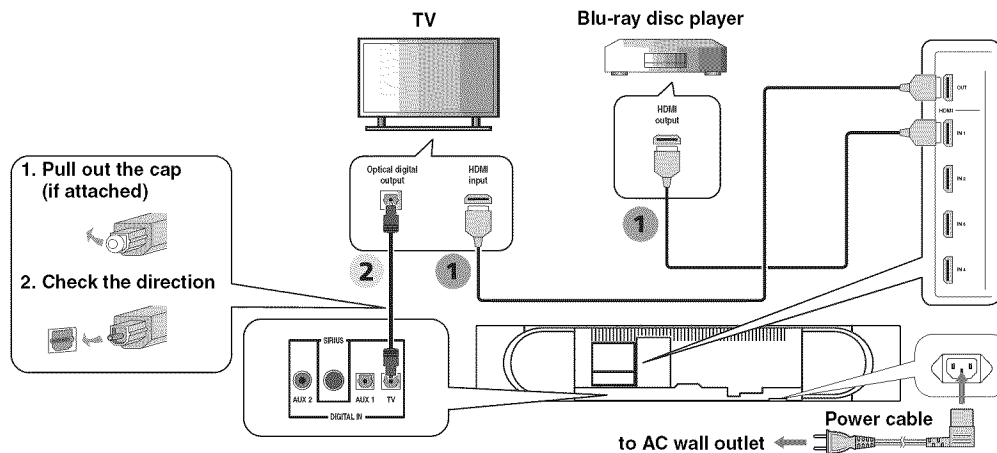

■ Connecting audio and video components

Determine the connection types depending on the jacks available on this unit and your external components. The symbols in the following table correspond with the symbols described in “Cables used for connections” (page 12).

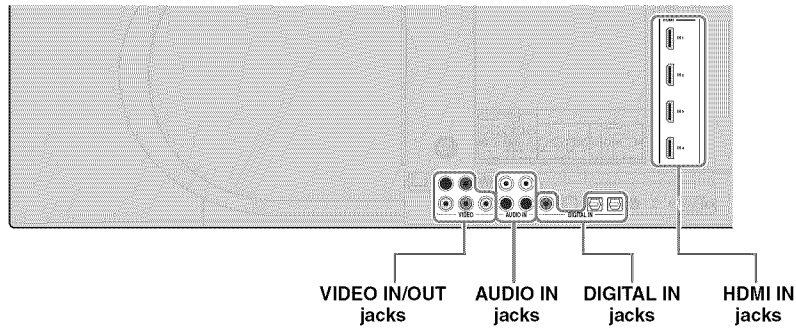

External component	Signal type	Jacks to use		Cable to use	Input selection key
		On external component	On this unit		
TV	Video	Composite video input	VIDEO OUT	①	TV
	Audio	Analog audio output	AUDIO IN (TV)	①	
External component with HDMI output	Audio/video	HDMI output	HDMI IN 1-4	①	HDMI1-4
External component with component video output	Audio	Coaxial digital output	DIGITAL IN (AUX 2)	③	AUX2
	Video	Component video output	VIDEO IN (COMPONENT)	②	
External component with composite video output	Audio	Optical digital output	DIGITAL IN (AUX 1)	②	AUX1
		Analog audio output	AUDIO IN (AUX 1)	①	
	Video	Composite video output	VIDEO IN (VIDEO)	①	




- Video signals input from the VIDEO IN (VIDEO) jack can be output not only to the VIDEO OUT jack but also the HDMI OUT jack. Video signals input from the VIDEO IN (COMPONENT) jacks are output to the HDMI OUT jack.

Connecting a subwoofer

Wireline connection


Connect the monaural input jack on your subwoofer to the SUBWOOFER jack on this unit.

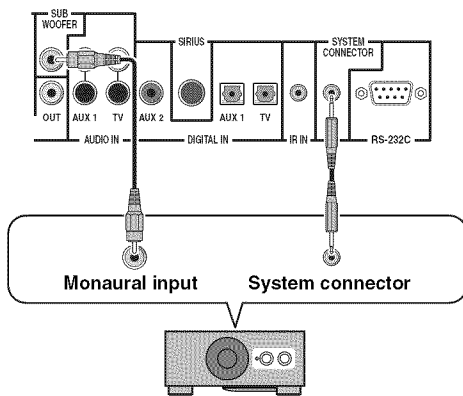

- If the subwoofer is connected by using a system type connection, changing the power mode of this unit controls the power mode of the subwoofer (Yamaha subwoofer).

Wireless connection

You can make a wireless connection of your subwoofer by using the Yamaha wireless subwoofer kit (SWK-W10). About SWK-W10, refer to “Safety and Accessory Information” (separate booklet). See also: “WIRELESS SETUP” (page 39)

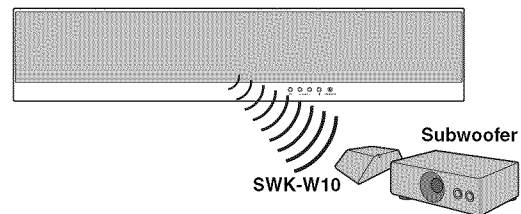



- For proper transmission, you need to set the group IDs of this unit and SWK-W10 to the same value. For the Group ID settings, refer to “Group ID” (page 39) and “Safety and Accessory Information (separate booklet)”.

Note

- Be sure to use the product only in the country in which it was purchased.

Connecting the FM antenna

Connect the supplied FM antenna or your antenna to the FM ANTENNA jack on this unit.

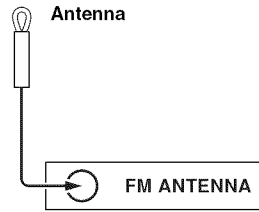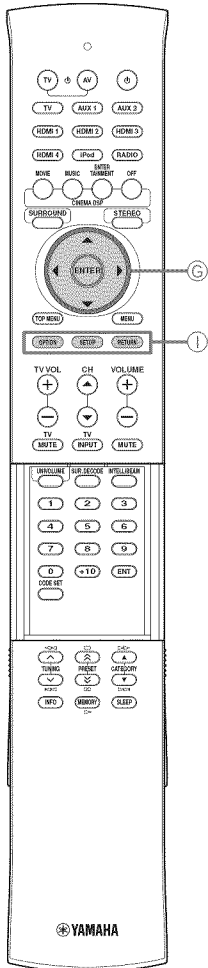


Preparing the remote control

Note

- Before installing batteries or using the remote control, make sure that you read precautions on the remote control and batteries in "Safety and Accessory Information" (separate booklet).


Installing batteries in the remote control

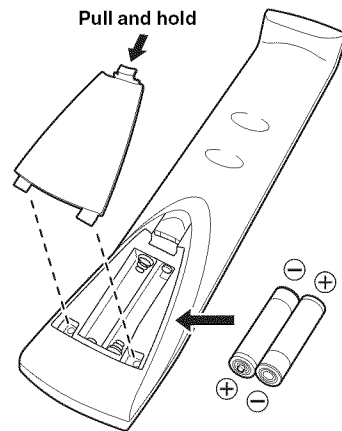

- 1 Pull and hold the tab on the battery cover and then open the cover.
- 2 Insert the two supplied batteries (R03P, UM4, AAA) into the battery compartment. Make sure you insert the batteries according to the polarity markings (+/-).
- 3 Close the battery cover.

Operation range of the remote control

The remote control transmits a directional infrared beam. Use the remote control within 6 m (20 ft) of this unit and point it toward the remote control sensor of this unit during operation.

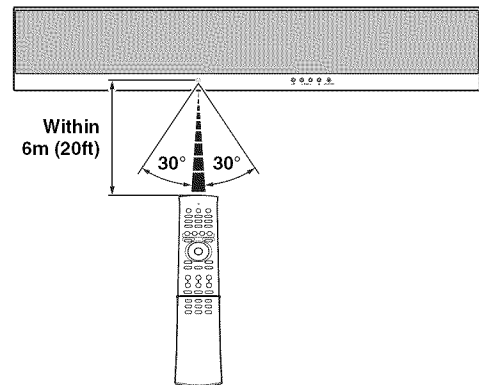

- Ⓒ ENTER
- Ⓒ ▲ / ▼
- Ⓓ SETUP

Changing OSD language

You can select an OSD language among English, German, French, Spanish, Italian, Dutch and Russian. Before operating the following steps, select this unit as the video input on your TV.

- 1 Press and hold **①**SETUP until the “LANGUAGE SETUP” menu appears on your TV.



- 2 Press **⊕** / **⊖** to select the desired language and then press **⊙**ENTER.

Choices: ENGLISH (English), DEUTSCH (German), Français (French), ESPAÑOL (Spanish), ITALIANO (Italian), NEDERLANDS (Dutch), Русский (Russian)

Initial setting: ENGLISH (English)

- 3 To exit from the menu, press **①**SETUP.

Changing OSD language

AUTO SETUP (IntelliBeam)

Using the system memory

AUTO SETUP (IntelliBeam)

This unit creates a sound field by reflecting sound beams off the walls of your listening room and by broadening the cohesion of all the channels. Just as you would arrange the speaker position of other audio systems, you need to set the beam angle to enjoy the best possible sound from this unit.


Notes

- After you have completed the AUTO SETUP procedure, be sure to disconnect the IntelliBeam microphone.
- The IntelliBeam microphone is sensitive to heat.
 - Keep the IntelliBeam microphone away from direct sunlight.
 - Do not place the IntelliBeam microphone on top of this unit.
- You cannot use the AUTO SETUP when “PREOUT” is selected in “SOUND OUT” (page 38).
- You cannot run the AUTO SETUP while playing back the iPod/iPhone by using PDX-50TX. To run the AUTO SETUP, stop playback and then disconnect the iPod/iPhone from PDX-50TX. About PDX-50TX, refer to “Safety and Accessory Information” (separate booklet).

Installing the IntelliBeam microphone

Follow the procedure below to connect the IntelliBeam microphone to this unit and place it in a proper location.

- 1 Connect the supplied IntelliBeam microphone to the INTELLIBEAM MIC jack on the front panel.


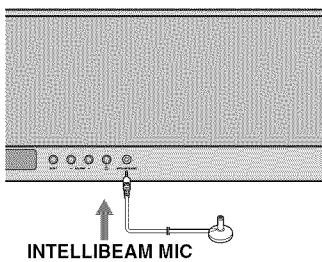



- 2 Place the IntelliBeam microphone on a flat level surface at your normal listening position.

Place the IntelliBeam microphone on the extended center line of this unit and 1.8 m (6.0 ft) or more away from it. Also, make sure place the IntelliBeam microphone within 1 m (3.3 ft) upper or lower from the center height of this unit.




- Use the supplied cardboard microphone stand or a tripod to place the IntelliBeam microphone at the same height as your ears would be when you are seated.

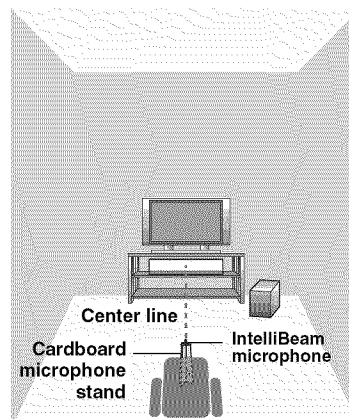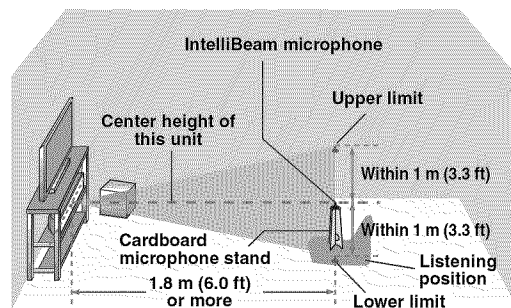


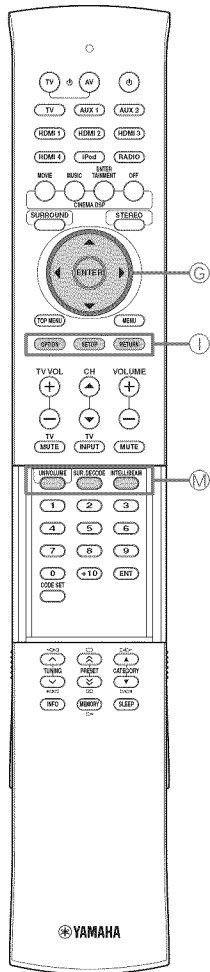

■ Assembling the supplied cardboard microphone stand

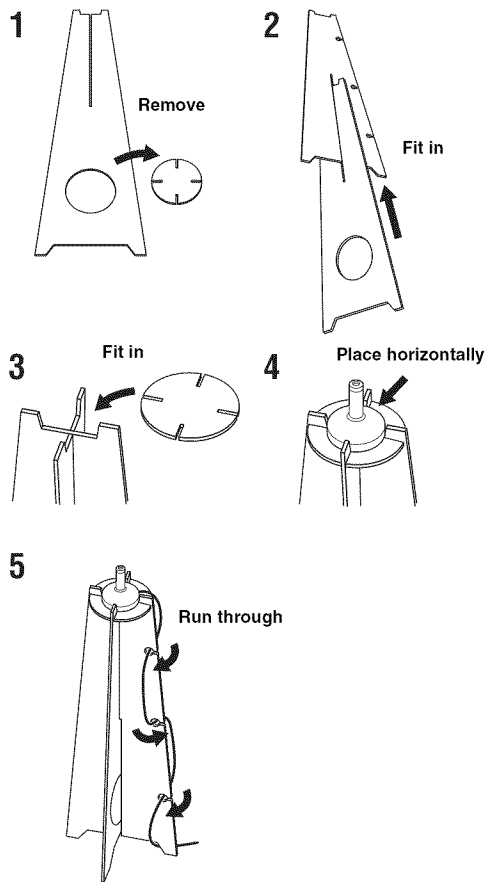

- If a subwoofer with adjustable volume and crossover frequency controls is connected to this unit, turn it on, set the volume to about half way and then set the crossover frequency to the maximum as shown below.

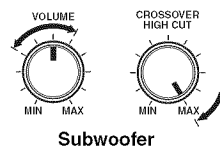

Using AUTO SETUP (IntelliBeam)

You can select one of the following AUTO SETUP types depending on your purpose.

“BEAM+SOUND OPTIMZ”

(Beam optimization and sound optimization)

Use to optimize the beam angle, delay, volume, and quality so that the parameters best match your listening environment. It is recommended that you should select this optimization feature in the following cases:

- If you make settings for the first time
- If the unit has been relocated
- If your listening room has been restructured
- If the objects in your listening room (furniture, etc.) have been rearranged

This menu takes about three minutes.

“BEAM OPTIMZ ONLY”

(Beam optimization only)

Use to optimize the beam angle so that the parameter best matches your listening environment. This menu takes about one minute.

“SOUND OPTIMZ ONLY”

(Sound optimization only)

Use to optimize the beam delay, volume, and quality so that the parameters best match your listening environment. You must optimize the beam angle with “BEAM OPTIMZ ONLY” before starting “SOUND OPTIMZ ONLY”. It is recommended that you should select this optimization feature in the following cases:

- If you have opened or closed the curtains in your listening room before using this unit
- If you have manually set the beam angle. This menu takes about three minutes.

Notes

- It is normal for loud test tones to be output during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.
- Make sure that your listening room is as quiet as possible. For accurate measurement, turn off air conditioner or other devices that make noises.
- To achieve the best results possible, vacate your listening room until the AUTO SETUP procedure is completed so that you may not obstruct the path of sound beams.
- If there are curtains in your listening room, we recommend following the procedure below.
 1. Open the curtains to improve sound reflection.
 2. Run “BEAM OPTIMZ ONLY”.
 3. Close the curtains.
 4. Run “SOUND OPTIMZ ONLY”.

- To return to the previous screen while using SET MENU, press **①RETURN**.

1 Press **①SETUP**.

The remote control keys to be used and available operations in each step are displayed at the bottom of the screen.



- You can also start the “BEAM+SOUND OPTIMZ” procedure simply by holding down **ⓂINTELLIBEAM** for more than two seconds. In this case, proceed to step 4.

- ⓂENTER
- Ⓜ△ / ▽
- ①RETURN
- ①SETUP
- ⓂINTELLIBEAM

- 2** Press **Ⓔ** / **Ⓕ** / **Ⓖ** to select “**AUTO SETUP**” and then press **Ⓔ**ENTER.



- 3** Press **Ⓔ** / **Ⓕ** / **Ⓖ** to select “**BEAM+SOUND OPTIMZ**”, “**BEAM OPTIMZ ONLY**” or “**SOUND OPTIMZ ONLY**” and then press **Ⓔ**ENTER.



- 4** Prepare to leave the room.

The best setting may not be done if you are in the room. Prepare to leave the room in 10 seconds after pressing **Ⓔ**ENTER in step 5.



- Wait outside the room during the AUTO SETUP procedure.
- The AUTO SETUP procedure takes about 3 minutes.
- To cancel the AUTO SETUP procedure after it is started, press **Ⓔ**RETURN.


- 5** Press **Ⓔ**ENTER to start the AUTO SETUP procedure and then leave the room within 10 seconds.



The setup screen automatically changes during the AUTO SETUP procedure.

If an error occurs, an error buzzer sounds and an error message is displayed. For details on error messages, see “Error messages for AUTO SETUP” (page 18).

If the AUTO SETUP procedure is complete, this unit rings the chimes.

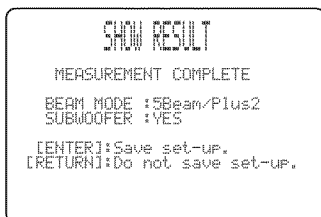

- If “ENVIRONMENT CHECK [FAILED]” is displayed, refer to “Error messages for AUTO SETUP” (page 18), press **Ⓔ**RETURN, and then run the AUTO SETUP procedure again.
- If “SUBWOOFER :NOT APPLICABLE” is displayed even though a subwoofer is connected to this unit and turned on, check the connection and then increase the volume level of the subwoofer and run the AUTO SETUP procedure again.
- Depending on the environment of your listening room, the beam angles of front right and left and surround left and right may be set to the same value even if “BEAM MODE :5 BEAM” is displayed as a result.


- 6** Press **Ⓔ**ENTER to confirm the results.

The menu screen disappears in two seconds.



- If you do not want to reflect the results, press **Ⓔ**RETURN.

- 7** Disconnect the IntelliBeam microphone.

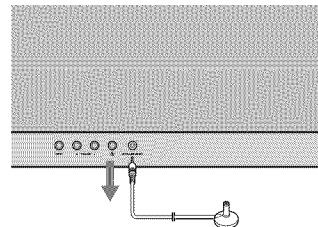

The measurement results are stored in the internal memory of this unit until you run the AUTO SETUP procedure again or configure the settings manually.

Changing OSD language

AUTO SETUP (IntelliBeam)

Using the system memory


■ Error messages for AUTO SETUP

If an error message is displayed on your TV, check the error message list to solve the problem and then follow the procedure below.

[ERROR E-1]: Press **Ⓞ**ENTER to run the AUTO SETUP procedure again or **Ⓛ**RETURN to cancel the operation
Other errors: Press **Ⓛ**RETURN to cancel the operation and then run the AUTO SETUP procedure again.

Note

If the problem is difficult to be solved, configure the settings manually in “MANUAL SETUP” (page 34).

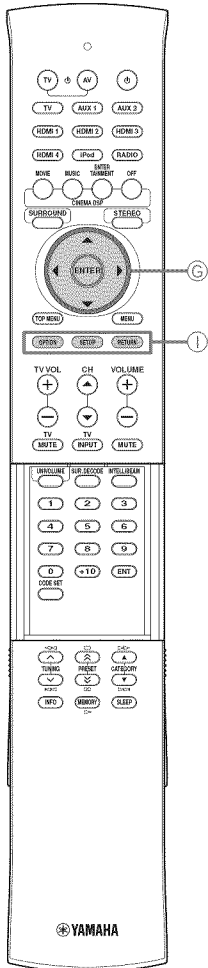

Error message	Cause	Remedy	See page
ERROR E-1 Please test in quieter environment.	There is too much unwanted noise in your listening room.	Make sure that your listening room is as quiet as possible. You may want to choose certain hours during the day when there is not much noise coming from outside.	—
ERROR E-2 No MIC detected. Please check MIC connection and re-try.	The IntelliBeam microphone is not connected to this unit or disconnected during the AUTO SETUP procedure.	Connect the IntelliBeam microphone to this unit firmly.	15
ERROR E-3 Unexpected control is detected. Please re-try.	Some other operations were performed on this unit while the AUTO SETUP procedure was in progress.	Do not perform any other operations while the AUTO SETUP procedure is in progress.	—
ERROR E-4 Please check MIC position. MIC should be set in front of the unit and re-try.	The IntelliBeam microphone is not placed in front of this unit.	Make sure that the IntelliBeam microphone is installed in front of this unit.	15
ERROR E-5 Please check MIC position. MIC should be set above 1.8m/6.0ft and re-try.	The IntelliBeam microphone is not placed in the right distance from this unit.	Make sure that the IntelliBeam microphone is installed more than 1.8 m (6.0 ft) from the front of this unit and within 1 m (3.3 ft) from the center height of this unit.	15
ERROR E-6 Volume level is lower than expected. Please check MIC position/connection and re-try.	The IntelliBeam microphone cannot collect the sound produced by this unit because the sound output level is too low.	Make sure that the IntelliBeam microphone is firmly connected to this unit and placed in a proper location. If the problem persists, contact the nearest authorized Yamaha service center for assistance.	15
ERROR E-7 Unexpected error happened. Please re-try.	An internal system error occurred.	Repeat the AUTO SETUP procedure.	—

- ⓄENTER
- Ⓞ△ / ▽
- ⓁRETURN
- ⓁSETUP

Using the system memory

You can save the current beam and sound settings in the system memory of this unit. It is handy to save certain settings according to the varying conditions of your listening environment. For example, if there are curtains in the path of sound beams, the effectiveness of the sound beams will vary depending on whether the curtains are open or closed.



• If there are curtains in your listening room, we recommend following the procedure below.


1. While the curtains are open, run "BEAM+SOUND OPTIMZ" (page 16) and then save the settings to "MEMORY1".
2. While the curtains are closed, run "SOUND OPTIMZ ONLY" (page 16) and then save the settings to "MEMORY2".

Saving settings

1 Press **Ⓢ**SETUP.



2 Press **Ⓢ**ENTER.

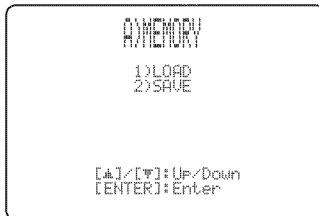

3 Press **Ⓢ** ▲ / ▼ to select "SAVE" and then press **Ⓢ**ENTER.



4 Press **Ⓢ** ▲ / ▼ to select the desired memory number and then press **Ⓢ**ENTER.



5 Press **Ⓢ**ENTER.

The current beam and sound settings are saved to the selected memory number.




Loading settings


1 Press **Ⓢ**SETUP.



2 Press **Ⓢ**ENTER.

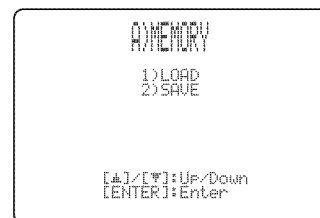

3 Press **Ⓢ**ENTER again.

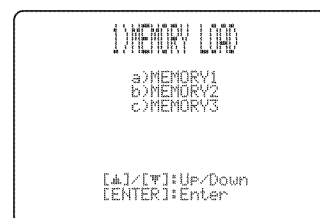


• If system settings are already stored in the selected memory number, this unit overwrites the old settings.


Changing OSD language

AUTO SETUP (IntelliBeam)


Using the system memory

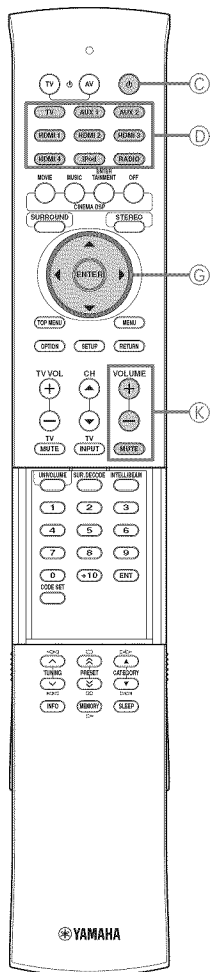

4 Press **C** **H** / **I** to select the memory number to be loaded and then press **E** **ENTER**.

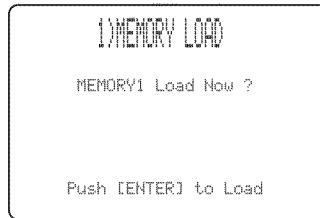

5 Press **E** **ENTER**.
The beam and sound settings saved in the selected memory number are loaded.

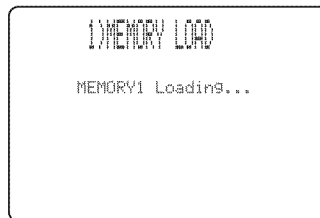

- C** Power
- D** AUX1/2
- E** HDMI1
- F** HDMI1-4
- G** Input selector keys
- H** TV
- I** ENTER
- J** **H** / **I**
- K** MUTE
- L** VOLUME +/-


PLAYBACK FEATURES

Playback

Playing back sources

This section describes how to playback source input from your external components. For details on your external components, refer to the owner's manual supplied with each component.


- 1 Press **Ⓞ**Power (**⏻**) key to turn on this unit.
- 2 Turn on external components (TV, Blu-ray disc player, etc.) connected to this unit.
- 3 Press one of the **Ⓜ**Input selector keys to select an external component as an input source.

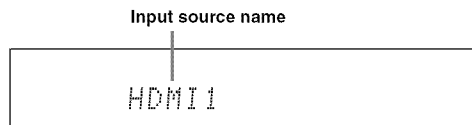

- You can change the input source name displayed on the front panel display (page 38).

- 4 Start playback of the external component that you have selected as the input source, or select a radio station on the tuner.
 - FM tuning (page 25)
 - Playing back iPod/iPhone (page 30)

- 5 Press **Ⓚ**VOLUME +/- to adjust the volume.

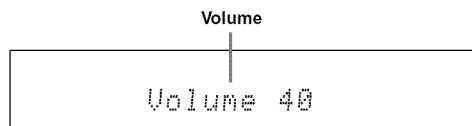

- 6 Press **Ⓞ**Power (**⏻**) key to turn this unit to the standby mode.

Playing back TV sounds

- 1 Select the desired TV channel.
- 2 Press **Ⓜ**TV to select the TV as the input source.
- 3 Mute the sound output on the TV.

Playing back a player

- 1 Select the player as the video input on the TV.
- 2 Press **Ⓜ**HDMI1-4 or **Ⓜ**AUX1/2 to select the player as the input source.

For example, if the player is connected to the HDMI IN 1 jack of this unit, press **Ⓜ**HDMI1.
- 3 Start playback of the player.
- 4 Mute the sound output on the TV.



- If your player supports the HD audio, check whether the audio output setting on the player is set to the value which supports HD audio output ("Auto", "Bitstream", etc.).
- If your player does not support the HD audio, check whether the audio output setting on the player is set to multi-channel linear PCM.
- If your player is connected to this unit through the digital connection, check whether the audio output setting on the player is set to digital output ("Bitstream", "Dolby Digital", "DTS", etc.).
- To enhance the surround sound effect, set the audio setting of your player to the multi-channel audio mode.
- You can use the supplied demonstration DVD to check the digital signals being input from the player through the digital connection (HDMI, optical or coaxial). The **DIGITAL** indicator lights up when this unit detects the digital audio signal input.

Muting audio output

- 1 Press **Ⓚ**MUTE to mute the audio output.
- 2 Press **Ⓚ**MUTE again to resume audio output.

Decoder and input channel indicators

■ Decoder indicators

Depending on the input source and the selected decoder, the indicators in the front panel display light up as follows:

Changing OSD language

AUTO SETUP (IntelliBeam)

Using the system memory

Playback


Playback mode

FM tuning

SIRIUS Satellite Radio™ tuning

Playing back iPod™

Useful features

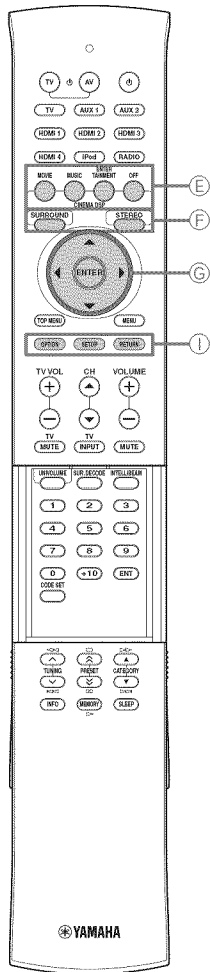


- ⓔCINEMA DSP
- ⓕOFF
- ⓕSTEREO
- ⓕSURROUND
- ⓐENTER
- ⓐ / ▽
- ⓐ ◀ / ▶
- ⓐ ▽
- ⓐ SETUP

Status	Indicator
When PCM signals are being input	PCM
When Dolby TrueHD signals are being input	TRUE HD
When Dolby Digital Plus signals are being input	DIGITAL PLUS
When Dolby Digital signals are being input	DIGITAL
When Dolby Digital EX signals are being input	EX
When Dolby Pro Logic is selected as the surround decoder	PL
When Dolby Pro Logic II is selected as the surround decoder	PL II
When Dolby Pro Logic IIx is selected as the surround decoder	PL IIx
When DTS HD Master Audio signals are being input	dts + HD + MSTR
When DTS HD High Resolution signals are being input	dts + HD + HI RES
When DTS digital signals are being input	dts
When DTS 96/24 signals are being input	dts + 96/24
When DTS ES discrete is selected as the surround decoder	dts + ES + DSCRT
When DTS ES matrix is selected as the surround decoder	dts + ES + MTRX
When DTS Neo:6 is selected as the surround decoder	dts + Neo:6

- ☀ You can select an audio signal to be played back (Auto or DTS) In “Decoder Mode” (page 32).

Input channel indicators

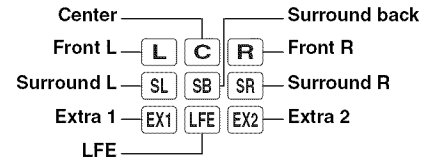

Depending on the channel component of the current digital input signal, the input channel indicators in the front panel display light up as follows:

Input signal	Indicator
2-channel stereo	L R
5.1-channel	L C R SL SB SR LFE
6.1-channel	L C R SL SB SR LFE
7.1-channel	L C R SL SB SR EX1 LFE EX2

- ☀ Extra (EX1/EX2) indicators light up when 7.1-channel signals recorded in a Blu-ray disc (etc.) are being input. Normally, surround back channel signals are recorded in the extra channels. This may vary depending on the disc.

Playback mode

You can select the playback method (surround or stereo), desired CINEMA DSP program and decoder to enjoy playback of the input source.

Selecting surround or stereo playback

Use to select the playback method (surround or stereo). See also: “Enjoying CINEMA DSP programs” (page 22), “Changing the audio output method for surround playback” (page 23).

Press **ⓕSURROUND** or **ⓕSTEREO**.

You can enjoy high realistic sensation with surround playback and hi-fi sound with stereo playback.

- ☀ Normal sounds (not sound beams) are output from the front right and front left channels. When you play back multi-channel sources, all signals except those from the front right and left channels are mixed down and output from the front right and left channels.
- When the stereo playback is selected, CINEMA DSP (page 22) and the decoder (page 24) become ineffective.

Enjoying CINEMA DSP programs

This unit is equipped with a Yamaha CINEMA DSP (digital sound field processing) chip containing several sound field programs used to enhance your playback experience. Most of the CINEMA DSP programs are precise digital recreations of actual acoustic environments of famous concert halls, music venues, and movie theaters.

- ☀ When you enjoy the CINEMA DSP programs, press **ⓕSURROUND** to select the surround playback, and then follow the steps below.
- The CINEMA DSP programs are not available in the following conditions.
 - Stereo playback is selected.
 - HD audio signals are being played back.
 - Audio signals with sampling frequency of higher than 96 kHz are being played back.
 - Audio signals are output from the PRE OUT jacks.

1 Press the desired CINEMA DSP key.

The CINEMA DSP category name appears in the front panel display and the CINEMA DSP indicator (page 7) lights up.

2 While the category name is displayed, press the CINEMA DSP key repeatedly.

Each time you press the key, program switches.



- To turn off the CINEMA DSP program, press OFF .

■ Movie (MOVIE)**Sci-Fi**

This program clearly reproduces dialogs and special sound effects of the latest science fiction films and lets you feel a broad and expansive cinematic space.

Spectacle

This program reproduces the wide and grand environment and lets you have added impressions on spectacular scenes with strong visual impacts.

Adventure

This program reproduces the thrilling environment of the latest action films and lets you feel the dynamic and excitement of fast-moving scenes.

■ Music (MUSIC)**Music Video**

This program produces a vibrant environment and lets you feel as if you are at an actual jazz or rock concert.

Concert Hall

This program creates a rich surround effect of a large round concert hall with a great deal of presence, emphasizing the extension of sounds, and lets you feel as if you are seated close to the center of the stage.

Jazz Club

This program recreates the acoustic environment of "The Bottom Line", a famous jazz club in New York once and lets you feel as if you are seated right in front of the stage.

■ Entertainment (ENTERTAINMENT)**Sports**

This program reproduces the energetic environment of live sports broadcasting, converging a commentator's voice on the center and broadening the overall atmosphere of the stadium, and lets you feel as if you are seated at an actual stadium or a ball park.

Drama

This program stables reverberations that match a wide range of movie genres from serious dramas to musicals and comedies, and offers an optimum 3D feeling, reproducing effects tones and background music softly but cubically around clear words.

Talk Show

This program reproduces excitement of live talk shows. It enhances the ambience of gaiety while keeping the conversations at a comfortable volume.

Game

This program is suitable for role-playing and adventure games. It utilizes the sound field effects for movies to represent the depth and spatial feeling of the field during play, while offering movie-like surround effects in the movie scenes in the game.

Mch Stereo

This program downmixes multi-channel source to 2 channels and then outputs the sound from all speakers and produces stereo sounds in wide range. It is ideal for background music at parties, etc.

Changing the audio output method for surround playback


You can set the number of beam output channels and audio output method.

1 Press SETUP .


The "SET MENU" screen appears on the TV.

2 Use UP / DOWN and ENTER to select "SOUND OUT MENU" - "SOUND BEAM OUT CONFIG" - "CHANNEL OUT".**3 Press LEFT / RIGHT to select the number of output channels.**

Choices: 5.1ch, 7.1ch
Initial setting: 7.1ch

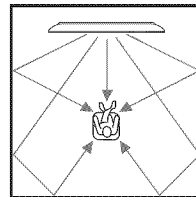4 Press DOWN to select "BEAM MODE".**5 Press DOWN to select the desired audio output method.****6 To exit from the menu, press SETUP .****■ Beam modes for "5.1ch"****5Beam**

Outputs sound beams from the front right and left, center, and surround right and left channels. This mode is ideal for enjoying surround sound effects to the fullest when you watch 5.1-channel audio discs.

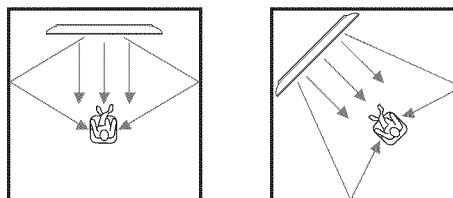Stereo+3Beam

Outputs normal sound from the front right and left channels and sound beams from the center and surround right and left channels. This mode is ideal for watching live recordings on a DVD.

Playback


Playback mode

FM tuning

SIRIUS Satellite
Radio™ tuning


Playing back iPod™

Useful features

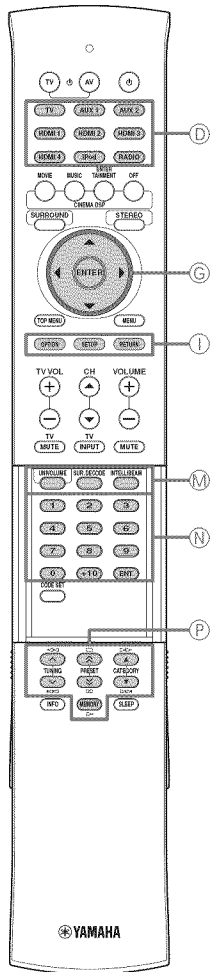

- Ⓓ RADIO
- Ⓔ ENTER
- Ⓒ ▲ / ▼
- Ⓘ OPTION
- Ⓛ RETURN
- Ⓜ SUR.DECODE
- Ⓝ Numeric keys
- Ⓟ TUNING ▲ / ▼
- Ⓟ MEMORY


3 Beam

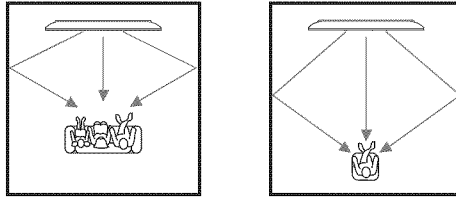

Outputs sound beams from the front right and left and center channels. For playback of multi-channel sources, surround right and left channel sources are mixed into the front right and left channels. This mode is ideal for enjoying movies with the whole family. In addition, you can use this mode when the listening position is close to the backside of the wall.


■ Beam modes for “7.1ch”

5BeamPlus2

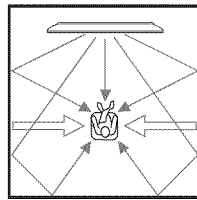


Outputs sound beams from the front right and left, center, and surround back right and left channels. Surround right and left channel sources are mixed into the front right and left channels. This mode is ideal for enjoying surround sound effects to the fullest when you watch 7.1-channel audio discs.

ST+3BeamPlus2

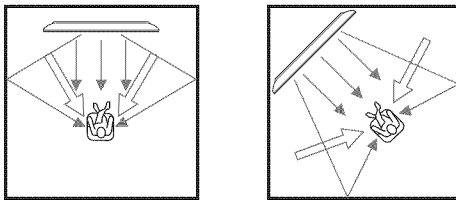

Outputs normal sound from the front right and left channels and sound beams from the center and surround back right and left channels. Surround right and left channel sounds are output by using front right and left channel sound and surround back right and left sound beams. This mode is ideal for watching live recordings on a DVD.

3 Beam

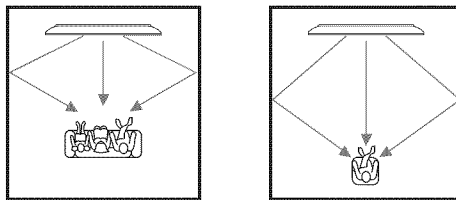

Outputs sound beams from the front right and left and center channels. For playback of multi-channel sources, surround right and left and surround back right and left channel sources are mixed into the front right and left channels. This mode is ideal for enjoying movies with the whole family. In addition, you can use this mode when the listening position is close to the backside of the wall.

Enjoying 2-channel sources in surround sound

This unit can decode 2-channel sources for 7.1-channel or 5.1-channel playback so that you can enjoy a variety of surround sound effects by switching the decoder.



- The decoders are available only when surround playback (page 22) is selected.
- Available decoders vary depending on the “CHANNEL OUT” setting (page 23).

Press **Ⓜ SUR.DECODE** repeatedly to switch between decoders.

2ch → 5ch

Decoder		Recommended source
Pro Logic (Dolby Pro Logic)	—	All sources
PLII (Dolby Pro Logic II)	Movie Music Game	Movies Music Games
Neo:6 (DTS Neo:6)	Cinema Music	Movies Music

2ch → 7ch

Decoder		Recommended source
PLIIx (Dolby Pro Logic IIx)	Movie Music Game	Movies Music Games
Neo:6 (DTS Neo:6)	Cinema Music	Movies Music

Playing back 5.1-channel sources in 7.1-channel surround

This unit decodes 5.1-channel sources and then playback them in up to 7.1-channel surround. One of the following decoders is automatically selected depending on the input signals. Set “CHANNEL OUT” to “7.1ch” (page 23).

5.1ch input source	Decoder
PCM, Dolby Digital, Dolby Digital EX, Dolby TrueHD, Dolby Digital Plus	Dolby Pro Logic IIx Movie/Music
DTS Digital, DTS ES matrix, DTS HD Master Audio, DTS HD High Resolution Audio	DTS ES matrix
DTS ES discrete	DTS ES discrete



- Press **Ⓜ SUR.DECODE** to switch between Dolby Pro Logic Movie and Music. To switch to the Dolby Pro Logic IIx Music decoder, select “PLIIxMusic”. To switch to the Dolby Pro Logic IIx Movie decoder, select one of the decoders other than “PLIIxMusic”.

FM tuning

The FM tuner of this unit provides the following two modes for tuning.

• Frequency tuning mode

You can tune into a desired FM station by searching or specifying its frequency.

• Preset tuning mode

You can preset the frequencies of FM stations by registering them to specific numbers, and later just select those numbers to tune into.

Note

Adjust the FM antenna connected to this unit for the best reception.

Tuning into the desired FM station (Frequency tuning)

1 Press **RADIO** repeatedly to select "FM".

Note

 
- If you select "FM" with INPUT on the front panel, press **RADIO** on the remote control prior to step 2 so that you can operate the procedures from step 2.

2 Press **TUNING** \wedge / \vee to specify the frequency.

The TUNED indicator on the front panel display lights up when the tuner is tuned into a station. The STEREO indicator also lights up if the program being broadcasted is in stereo.

See also: "FM Mode" (page 32)

Lights up



The frequency changes in the following manner according to how you press **TUNING** \wedge / \vee .

When you press the key more than 1 second

The tuner searches the frequency of a station that is detectable around the current frequency. This is effective when the tuner can receive strong signals without any interference. Once the search starts, release the key. When you keep holding the key, the search continues even when a station is detected. This is useful when you want to tune in to a specific station.

When you press and release the key

The tuner increases or decreases the frequency in steps. Use this method when the tuner cannot receive strong signals and stations are skipped during the search.

3 To directly specify the frequency, use **Numeric keys** to enter the frequency of the station.

Enter only integers. For example, if you want to set the frequency to 88.9 MHz, enter "889".

Note

- When you press **Numeric keys** during preset tuning, a preset number is selected. Set the tuner to the frequency tuning mode using **TUNING** \wedge / \vee prior to the operation.



- The reception is noisy and the sound is hard to listen, switch to monaural mode to get better reception. In the option menu, select "Mono" in "FM Mode" (page 32).

Registering FM stations and tuning in (Preset tuning)

You can register up to 40 FM stations automatically or manually.

■ Registering stations automatically

 
The tuner automatically detects FM stations with strong signals and registers up to 40 stations.

1 Press **RADIO** repeatedly to select "FM".


2 Press **OPTION**.

The option menu (page 32) appears on the front panel display.

3 Press **ENTER** \triangle / ∇ to select "Auto Preset" and then press **ENTER**.



This unit starts to preset FM radio stations in 5 seconds.

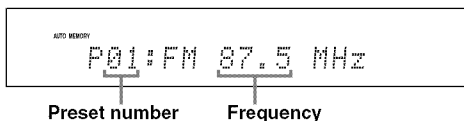

- You can select the preset number at which the preset starts by pressing **ENTER** \triangle / ∇ before pressing **ENTER**.
- To cancel the operation, press **RETURN**.

If auto preset is complete, "Preset Complete" appears.

4 To exit from the menu, press **OPTION**.

■ Registering stations manually

You can manually register FM stations with weak signals.

1 Tune into the desired FM station.

2 Press **MEMORY**.

"Manual Preset" appears on the front panel display, followed soon by the preset number to which the station will be registered.



- By holding down **MEMORY** for more than 2 seconds, you can skip the following steps and automatically register the selected station to an empty preset number (next to the lastly-registered preset number).

Playback


Playback mode

FM tuning


SIRIUS Satellite
Radio™ tuning

Playing back iPod™

Useful features

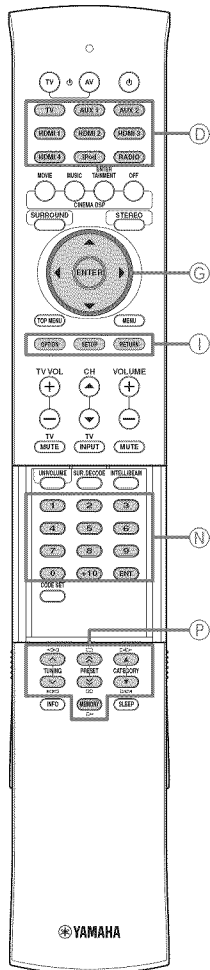

- 3 Press \textcircled{P} PRESET \wedge / \vee to select the preset number to which the station will be registered.**
When you select a preset number to which no station is registered, "Empty" appears. When you select a preset number to which any station has been already registered, the frequency of the station is displayed.

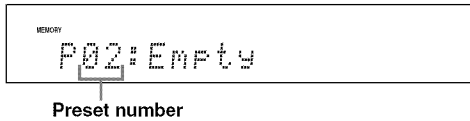

- You can also specify a preset number using the \textcircled{N} Numeric keys.

- 4 Press \textcircled{P} MEMORY.**
When registration is complete, the front panel display returns to the original state.

- To cancel registration, press \textcircled{I} RETURN or leave this unit without any operations for about 30 seconds.

- Calling a preset station (Preset tuning)**
You can call preset stations registered automatically or manually.

- Press \textcircled{P} PRESET \wedge / \vee to select the desired preset number.**

- Preset numbers to which no stations are registered are skipped.
- "No Presets" is displayed if no stations are registered.

- You can directly select a preset number by pressing the \textcircled{N} Numeric keys while calling a preset station.
- When you press \textcircled{N} Numeric keys during normal frequency tuning, a frequency is entered. Set the tuner to the preset tuning mode using \textcircled{T} TUNING \wedge / \vee prior to the operation.

■ Clearing preset stations

Use to clear the preset FM stations.

 
- 1 Press \textcircled{D} RADIO repeatedly to select "FM".**

- 2 Press \textcircled{I} OPTION.**

The option menu (page 32) appears on the front panel display.

- 3 Press \textcircled{G} \triangle / ∇ to select "Clear Preset" and then press \textcircled{G} ENTER.**

A preset station is displayed.



- To cancel the clearing operation, press \textcircled{I} RETURN.

- 4 Press \textcircled{G} \triangle / ∇ to select a preset station to be cleared, and then press \textcircled{G} ENTER.**

The selected preset station is cleared. If the operation is completed, "Cleared" appears. To clear the multiple preset stations, repeat step 4.

- 5 To exit from the menu, press \textcircled{I} OPTION.**

- \textcircled{D} RADIO
- \textcircled{G} ENTER
- \textcircled{G} \triangle / ∇
- \textcircled{I} OPTION
- \textcircled{I} RETURN
- \textcircled{N} Numeric keys
- \textcircled{N} 0
- \textcircled{N} ENT
- \textcircled{P} CATEGORY \triangle / ∇
- \textcircled{P} MEMORY
- \textcircled{P} PRESET \wedge / \vee
- \textcircled{P} TUNING \wedge / \vee

SIRIUS Satellite Radio™ tuning

Listening to Satellite Radio

To listen to Satellite Radio, you'll need to connect a SIRIUS Satellite Radio tuner (sold separately) to your Sirius-Ready receiver. SIRIUS Satellite Radio is available to residents of the US (except Alaska and Hawaii) and Canada.

Satellite Radio delivers a variety of commercial-free music from categories ranging from Pop, Rock, Country, R&B, Dance, Jazz, Classical and many more plus coverage of all the top professional and college sports including play by play games from select leagues and teams. Additional programming includes expert sports talk, uncensored entertainment, comedy, family programming, local traffic and weather and news from your most trusted sources.


Once you've purchased a SIRIUS tuner you'll need to activate it and subscribe to begin enjoying the service. Easy to follow installation and setup instructions are provided with the SIRIUS tuner. There are a variety of programming packages available, including the option of adding "The Best of XM" programming to the SIRIUS service. The "Best of XM" service is not available to SIRIUS Canada subscribers at this time. Please check with SIRIUS Canada for any updates using the numbers and web address below.

Family friendly packages are also available to restrict channels featuring content that may be inappropriate for children.

To subscribe to SIRIUS, U.S. and Canadian customers can call 1-888-539-SIRI (1-888-539-7474) or visit sirius.com (US) or siriuscanada.ca (Canada).

Connecting the SiriusConnect™ tuner

Connect the SiriusConnect tuner (sold separately) to the SIRIUS jack on the rear panel of this unit. For details, see the operating instructions provided with the SiriusConnect tuner.

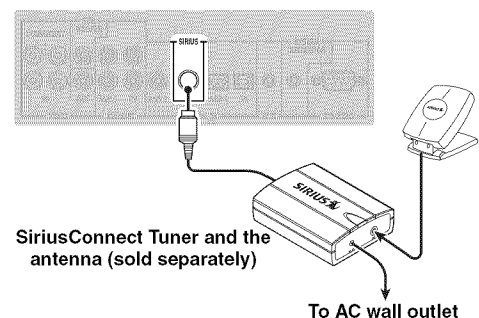



- To ensure optimal reception of the SIRIUS Satellite Radio signals, the antenna of the SiriusConnect tuner must be placed at or near a window with no obstacles in the path to the sky. The orientation of the antenna for the best reception differs depending on the area. Refer to the instruction manuals supplied with the SiriusConnect tuner for the installation of the antenna. You can mount it indoors or outdoors.
- Use the "Antenna Level" information in the front panel display (page 30) to check the antenna reception level and adjust the orientation of the antenna.
- You need to connect the SiriusConnect tuner to an AC wall outlet.

Note

- If "ANTENNA ERR" appears on the front panel display, the connection of the SiriusConnect tuner or antenna is incorrect. In such cases, check the connection of the SiriusConnect tuner and the antenna.

Activating SIRIUS Satellite Radio™ subscription

Before using the SIRIUS Satellite Radio feature, you need to activate your SIRIUS Satellite Radio subscription. To activate the subscription you need the Sirius ID which is uniquely assigned to the SiriusConnect tuner. Sirius ID is 12-digit number and it appears on the package of the SiriusConnect tuner, on the label of the SiriusConnect tuner, and when you tune into the SIRIUS Satellite Radio channel "0" (see below).

■ Displaying the Sirius ID of your SiriusConnect tuner

1 Press **Ⓧ**RADIO repeatedly to select "SIRIUS".

2 Press **Ⓝ**0 and then **Ⓝ**ENT to display the Sirius ID of your SiriusConnect tuner. "000 Sirius ID" and "xxxxxxxxxxxx" ("xxxxxxxxxxxx" indicates the 12-digit Sirius ID of your SiriusConnect tuner) appears on the front panel display. Write the Sirius ID below.

ID: _____

3 Contact SIRIUS Satellite Radio to activate your subscription.

SIRIUS Satellite Radio online information

Contact for activation
 URL: <https://activate.siriusradio.com/>
 Phone: 1-888-539-SIRIUS (1-888-539-7474)




- Status messages appear on the front panel display during the activation. For details, see "SIRIUS Satellite Radio" (page 44). Once the activation is finished, "SUB UPDATED" appears.

SIRIUS Satellite Radio™ operations

1 Press **Ⓧ**RADIO repeatedly to select "SIRIUS".

The SIRIUS indicator lights up on the front panel display and the SIRIUS Satellite Radio information for the currently selected channel appears on the front panel display.

Light up

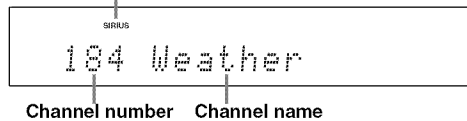

- When you select "SIRIUS" as the input source, this unit automatically recalls the previously selected channel.

Notes

- When you have not activated your subscription yet, you can only select "184" or "000".
- If a status message or an error message appears on the front panel display, see "SIRIUS Satellite Radio" (page 44).

2 Search for a channel by using one of the SIRIUS Satellite Radio search modes.


- To select a channel from the all channel list, see "All Channel Search mode" on this page.
- To select a channel by category, see "Category Search mode" on this page.
- To select the desired channel directly by entering the channel number, see "Direct number access" on this page.
- To select a channel from the preset channels, see "Calling a preset channel (Preset Search mode)" (page 28).



- You can display the SIRIUS Satellite Radio information on the front panel display (page 30).
- You can set the SIRIUS Satellite Radio preset channels (page 28).

■ All Channel Search mode

Press **Ⓧ**TUNING **^** / **∨** repeatedly to search for a channel within all channels.

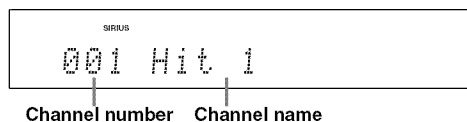

- You can search for a channel quickly by holding down **Ⓧ**TUNING **^** / **∨**.
- You can skip channels to the previous or next category by pressing **Ⓧ**CATEGORY **△** / **∇**.

Playback


Playback mode

FM tuning

SIRIUS Satellite Radio™ tuning

Playing back iPod™


Useful features

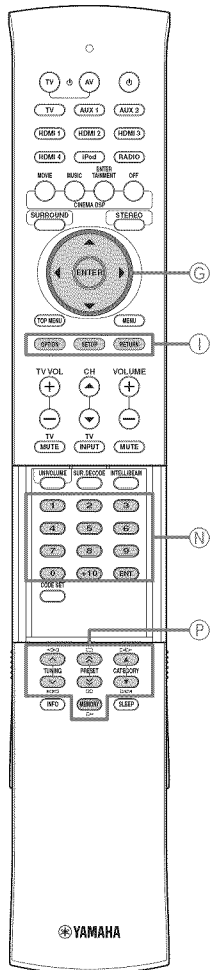

■ Category Search mode

- 1 Press **ⓂCATEGORY** Δ / ∇ repeatedly to select the channel category.

The CATEGORY indicator lights up on the front panel display during channel category selection. When you select the category, the first channel in the category is selected.

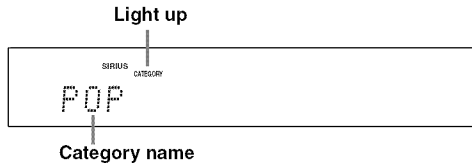

- If you do not operate within 10 seconds, the Category Search mode is automatically canceled.

- 2 While the CATEGORY indicator lights up, press **ⓂTUNING** \wedge / \vee repeatedly to search for a channel within the selected channel category.

- You can search for a channel quickly by pressing and holding **ⓂTUNING** \wedge / \vee .

Note

- This unit skips the channels when this unit is in the All Channel Search mode or Category Search mode in the following cases (it is not malfunction of this unit):
 - the channel is locked (page 29).
 - the channel is out of service.
 - you do not subscribe to the channel.

■ Direct number access

In the All Channel Search mode or Category search mode, press the **ⓃNumeric** keys to enter the desired three-digit channel number.

For example, to enter the number 123, press the **ⓃNumeric** keys as “1”, “2” and “3”.

- To display the Sirius ID number displayed on the front panel display, select channel “0”.
- To enter a one-digit or two-digit channel number, press the **ⓃNumeric** keys on the remote control and then press **ⓃENT** to confirm the input number.
- Instead of pressing **ⓃENT** to tune into the channel immediately, you can wait a few seconds until this unit confirms the entered channel number.
- If no key is pressed within a few seconds after you enter a one-digit or two-digit number, this unit automatically confirms the entered channel number.
- If the selected channel is locked, “PIN: ___” appears on the front panel display. Enter the four-digit Parental Lock code number by using the **ⓃNumeric** keys or press **ⓃENT** to cancel (page 29).
- If the selected channel is not available, an advisory message may appear. For details, see “SIRIUS Satellite Radio” (page 44) in “Troubleshooting”.

- ⓂENTER
- Ⓜ Δ / ∇
- Ⓜ Δ / ∇
- ⓂOPTION
- ⓂRETURN
- ⓃNumeric keys
- ⓃENT
- ⓂCATEGORY Δ / ∇
- ⓂMEMORY
- ⓂPRESET \wedge / \vee
- ⓂTUNING \wedge / \vee

 
Registering SIRIUS Satellite Radio™ channels

You can use this feature to store up to 40 SIRIUS Satellite Radio channels. You can then recall any preset channel easily by selecting the preset channel number as described in “Calling a preset channel (Preset Search mode)” on this page.

■ Registering preset channels


- 1 Search a channel you want to set as a preset channel in one of the SIRIUS Satellite Radio search modes.

For details, see “SIRIUS Satellite Radio operations” (page 27).



- 2 Press **ⓂMEMORY**.

The MEMORY indicator lights up on the front panel display.

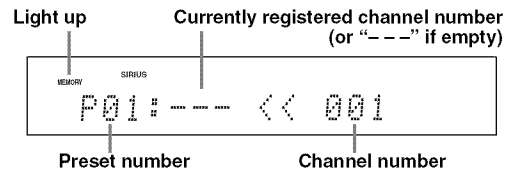

- By holding down **ⓂMEMORY** for more than 2 seconds, you can skip the following steps and automatically register the selected channel to an empty preset number (next to the lastly-registered preset number).
- To cancel the preset operation, press **ⓂRETURN**.

- 3 Press **ⓂPRESET** \wedge / \vee to select a preset number to which the selected channel is registered.

 
- You can also select a preset number using the **ⓃNumeric** keys.
- If you select a preset number being used (currently registered channel number appears next to the preset number), the current preset channel will be overwritten.

- 4 Press **ⓂMEMORY**.

■ Calling a preset channel (Preset Search mode)

Prior to selecting a preset channel in the Preset Search mode, you must preset SIRIUS channels. For details, see “Registering preset channels” on this page.

Press **ⓂPRESET** \wedge / \vee repeatedly to change the preset channel number (1 to 40).




■ Clearing preset channels

You can clear the assignments of preset SIRIUS Satellite Radio channels.

1 Press ⓪ OPTION on the remote control.
The option menu for “SIRIUS” appears on the front panel display.

2 Press ⓪ \triangle / ∇ repeatedly to select “Clear Preset” and then press ⓪ ENTER.

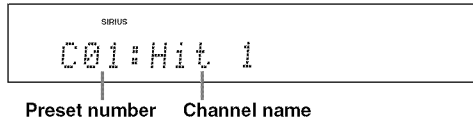

• To cancel the clearing operation, press ⓪ RETURN.

3 Press ⓪ \triangle / ∇ to select the preset number to reset and then press ⓪ ENTER.
The selected preset number is reset. To reset another preset number, repeat step 3.

4 To exit from the menu, press ⓪ OPTION.

Setting the Parental Lock

You can use the Parental Lock feature to limit the access to the desired SIRIUS Satellite channels. This unit automatically skips the locked channels when this unit is in the All Channel Search mode or Category Search mode.

■ Setting the code number and locking channels

 
Use this feature to set the Parental Lock code number (PIN) and select the channels to be locked.

1 Press ⓪ OPTION on the remote control.
The option menu for “SIRIUS” appears on the front panel display.

2 Press ⓪ \triangle / ∇ repeatedly to select “ParentalLock” and then press ⓪ ENTER.

3 Use ⓪ \triangleleft / \triangleright (to select a digit to edit) and ⓪ \triangle / ∇ (to select a number) to enter the desired 4-digit code number.

If you have entered a code number before, enter the same code number.



The entered code number is needed for tuning in the channel or unlocking the channel. Write it down below.
Code number: _____

 
4 Press ⓪ ENTER.
The confirmation screen appears.

5 Press ⓪ ENTER again to confirm the code number.


Note

- If a code number is already registered and you enter the different number, “Wrong” appears and the screen returns to step 3. Enter the correct code number.
- If you forget the Parental lock code or want to change it, reset it using “SIRIUS PIN” (page 41).


6 Press ⓪ \triangleleft / \triangleright to select the category of a channel you want to lock.



 7 Press ⓪ \triangle / ∇ to select a channel you want to lock.



 8 Press ⓪ ENTER to lock the selected channel.
You can toggle channel lock and unlock as you press ⓪ ENTER.



9 Repeat steps 6 through 8 to lock all the desired channels.

10 To exit from the menu, press ⓪ OPTION.
This unit is tuned into the last channel you select in the “Parental Lock” screen. If the channel is locked, this unit is tuned into “184 Weather” or “000 Sirius ID”.

■ Tuning into the locked channels

Tune into the channel with direct number access (page 28) or Preset Search mode (page 28). When you tune into the locked channel, “LOCKED CH” appears on the front panel display, followed by the following message. Enter the Parental lock code by using the ⓪ Numeric keys. To cancel this operation, press ⓪ ENT.



Note

- If an incorrect number is entered, “Wrong” appears on the front panel display and this unit is tuned into the previously selected channel.

Playback


Playback mode

FM tuning

SIRIUS Satellite
Radio™ tuning

Playing back iPod™

Useful features

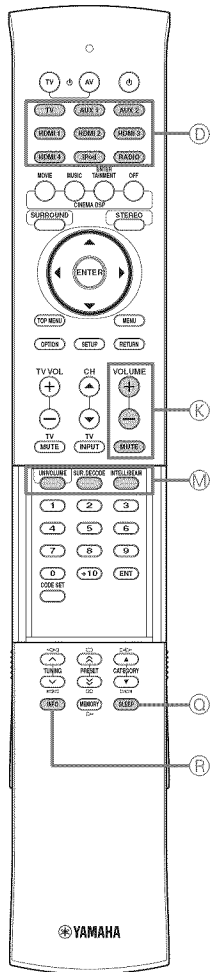


Displaying the SIRIUS Satellite Radio™ information

Use this feature to display the SIRIUS Satellite Radio information on the front panel display.


Note

- If a status message or an error message appears on the front panel display, see “SIRIUS Satellite Radio” (page 44).

Press **Ⓡ**INFO repeatedly to toggle the following SIRIUS Satellite Radio information display modes.

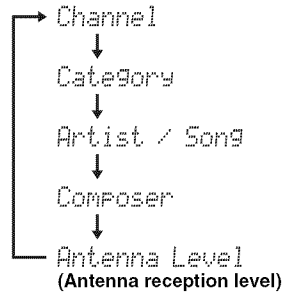

Display example (Artist / Song)

 

- If the SIRIUS Satellite Radio information contains a character that cannot be recognized by this unit, the character will be displayed with a space.
- When the antenna of the SiriusConnect tuner cannot receive the signals, “ACQUIRING” appears on the front panel display.
- When an information is unavailable, “—” appears.

Playing back iPod™/iPhone™

By using the Yamaha wireless transmitter for iPod (PDX-50TX/PDX-50BC), you can use the iPod/iPhone as a remote control and enjoy playback of your iPod/iPhone on this unit. About PDX-50TX/PDX-50BC, refer to “Safety and Accessory Information” (separate booklet). See also: “iPod Interlock” (page 39)




- This unit supports the following iPod/iPhone models.
 - iPod 5th generation
 - iPod classic
 - iPod touch
 - iPod nano
 - iPhone
 - iPhone 3G

Notes

- Be sure to use the product only in the country in where it was purchased.
- This unit does not support iPod (4th generation or before), iPod without Dock connector, iPod photo and iPod mini.
- You cannot run the AUTO SETUP while playing back the iPod/iPhone by using PDX-50TX. To run the AUTO SETUP, stop playback and then disconnect the iPod/iPhone from PDX-50TX.

Connect your iPod/iPhone and PDX-50TX, and then start playback.

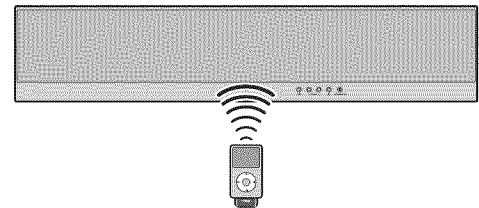

- When you start playback of your iPod/iPhone, this unit automatically operates as follows.
 - When this unit is on, this unit selects “iPod” as the input source.
 - When this unit is in the standby mode, this unit turns on and selects “iPod” as the input source.
- You can also select the input source with **Ⓢ**iPod.
- To adjust the volume level, use the volume control on the iPod/iPhone or **Ⓚ**VOLUME +/- on this unit.
- This unit automatically turns to the standby mode in the following conditions.
 - The iPod/iPhone is disconnected from PDX-50TX.
 - The iPod/iPhone is turned into sleep mode.

- Ⓢ iPod
- Ⓚ VOLUME +/-
- Ⓜ UNIVOLUME
- Ⓢ SLEEP
- Ⓡ INFO

Useful features

Adjusting volume level automatically (UniVolume)

This function adjusts the volume level of the TV so that it will not increase suddenly when whenever the contents being broadcast change (due to commercials, etc.).

Press **M** UNIVOLUME.

The UNIVOLUME indicator lights up on the front panel display.



- To turn off the UniVolume function, press **M** UNIVOLUME again.
- We recommend turning off the UniVolume function during playback of music.

Using the HDMI™ control function

You can operate the following functions of this unit with the remote control of your TV when the TV (HDMI control function supported) is connected to the HDMI OUT jack of this unit.

- Turning on this unit or to the standby (conjunction with TV)
- Adjusting the volume
- Selecting a device to reproduce TV sounds (this unit or TV)



- Even if your TV supports the HDMI control function, some functions may not be available. For details, refer to the manual supplied with your TV.
- If you connect this unit and Blu-ray disc player or DVD player (HDMI control function supported) with HDMI, you can also control those devices with the HDMI control function. For details, refer to the manual supplied with each device.
- We suggest that you use products (TV, Blu-ray disc/DVD player, etc.) from the same manufacturer.
- The HDMI control-compatible components include Panasonic VIERA Link compatible TV, DVD player/recorder and Blu-ray disc player.

To use this function, you need to set HDMI control function and register the HDMI components to the TV.



- For some HDMI components, you only need to set the HDMI control function. Registering HDMI components to TV is not required in this case.

Setting the HDMI control function

1 Turn on all devices connected to this unit with HDMI.

2 Enable the HDMI control function on each device.

For this unit, set "HDMI CONTROL" to "ON" (page 39).

For external devices, refer to the manual supplied with each device.

3 Turn off the TV and then turn on it again.

Registering HDMI components to TV

1 Select this unit as the input source of the TV.

2 Turn on the HDMI control device (Blu-ray disc or DVD player) connected to this unit.

3 Select the HDMI control device (Blu-ray disc or DVD player) as the input source of this unit to check the video input.

Note


- In case the HDMI control function does not work, check the followings. Also, turning off (unplug) and turning on (plug) the TV may be effective.
 - "HDMI CONTROL" is set to "ON" on this unit (page 39).
 - The HDMI control function is enables on the TV.
 - If you changed the connection method or connected components, repeat steps 1-3.

Using the sleep timer

Use this feature to automatically set this unit to the standby mode after a specified period of time.

1 Press **S SLEEP repeatedly to set the interval for the sleep timer.**

The SLEEP indicator (page 7) flashes in the front panel display while switching the interval for the sleep timer.

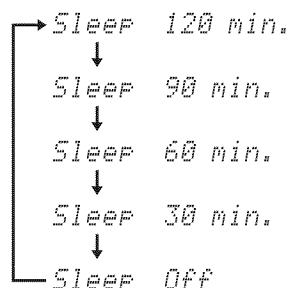

2 Wait for a few seconds without operating this unit to confirm the setting for the sleep timer.

The SLEEP indicator lights up in the front panel display, indicating that the sleep timer is activated.



- If this unit is set to the standby mode, the sleep timer setting is canceled.

Playback


Playback mode

FM tuning

SIRIUS Satellite
Radio™ tuning

Playing back iPod™

Useful features

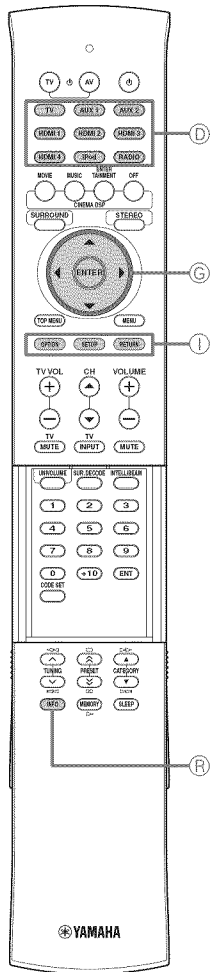


Configuring settings for each input source (Option menu)

You can configure various settings for each input source (TV, AUX1/2, HDMI1-4, iPod, FM and SIRIUS). Available menu items vary depending on the selected input source.

1 Press **D** Input selector keys to select the desired input source.

2 Press **I** OPTION.

 The first item of the option menu for the selected input source appears on the front panel display.



3 Press **G** Δ / ∇ to select the desired menu item and then press **G** ENTER.

4 Press **G** \leftarrow / \rightarrow to select the desired setting and then press **G** ENTER.

5 To exit from the menu, press **I** OPTION.

Option menu items

The following menu items are provided for each input source.

Input source	Menu items			
	Volume Trim	Decoder Mode		
HDMI1~4	Volume Trim	Decoder Mode		
TV	Volume Trim	Decoder Mode		
AUX1~2	Volume Trim	Decoder Mode		
FM	Volume Trim	FM Mode	Auto Preset	Clear Preset
SIRIUS	Volume Trim	Clear Preset	Parental Lock	
iPod	Volume Trim			

Details of the menu items are as follows. The configuration will be reflected to the input source currently selected.



- The initial settings are marked with “*”.

Volume Trim (Volume trim)

Use to reduce any change in volume when switching input sources by correcting volume differences between input sources.

Adjustable range: -6.0dB to +6.0dB (in 0.5 dB steps)
Initial setting: 0.0dB

Decoder Mode (Decoder mode)

Use to select DTS digital audio signals for reproduction. Choices: Auto*, DTS

- Select Auto to automatically select audio input signals.
- Select DTS to selects DTS signals only. Other input signals are not reproduced.

FM Mode (FM receiving mode)

Use to set the FM broadcasting receiving mode.

Choices: Stereo*, Mono

- Select Stereo to receive in stereo mode by priority.
- Select Mono to receive in monaural mode.

Auto Preset (Automatic preset)

Use to automatically detect FM radio stations and registers them as preset stations (page 25).

Clear Preset (Clear preset station)

Use to clear the preset FM stations (page 26) or preset SIRIUS Satellite Radio channels (page 29).

 
ParentalLock (Parental lock)

Use to limit access to the desired SIRIUS Satellite Radio channels (page 29).

Displaying the input signal information

Use to display information of the sampling frequency, video signal type, and resolution for each input source on the front panel display.

1 Select an input source (TV, AUX1/2, and HDMI1-4) and then press **R** INFO.



2 Press **R** INFO repeatedly to change items to be displayed.

Sampling frequency (Audio Sampling)

The sampling frequency per second in analog- to-digital conversion.

Video signal (Video Signal In)

Signal type and resolution of video input signal.

D Input selector keys

G ENTER

G Δ / ∇

G \leftarrow / \rightarrow

I OPTION

R INFO

SETTINGS


Customizing this unit (SET MENU)

You can manually configure various settings for this unit in “SET MENU”.

SET MENU items

Menu	Sub menu	Features	Page
MEMORY	LOAD	Loads the beam and sound settings saved in the memory.	19
	SAVE	Saves the current beam and sound settings to the memory.	19
AUTO SETUP	BEAM+SOUND OPTIMZ	Optimizes the beam and sound settings automatically.	16
	BEAM OPTIMZ ONLY	Optimizes the beam settings automatically.	16
	SOUND OPTIMZ ONLY	Optimizes the sound settings automatically.	16
MANUAL SETUP	SETTING PARAMETERS	Adjusts the listening room and listening position settings.	34
	BEAM ADJUSTMENT	Adjusts the various sound beam settings.	35
	IMAGE LOCATION	Adjusts the sound position of the front right and left channels.	35
SOUND SET MENU	TONE CONTROL	Adjusts the output level of high-frequency or low-frequency sound.	36
	SUBWOOFER SET	Configures the subwoofer settings.	36
	AUDIO DELAY	Adjusts delay in output timing between video signals and audio signals.	36
	DRC:Dynamic Range Control	Adjusts the dynamic range.	37
	BASS EXTENSION	Selects the bass sound extension.	37
	MUSIC ENHANCER	Selects the compressed audio enhancer.	37
	CHANNEL LEVEL	Adjusts the volume of each channel.	37
SOUND OUT MENU	SOUND BEAM OUT CONFIG	Configures the sound beam output settings.	37
	SOUND OUT	Configures the audio signal output settings.	37
INPUT MENU	INPUT ASSIGNMENT	Assigns jacks according to the component to be used.	38
	INPUT RENAME	Renames the displayed input source.	38
	HDMI SETUP	Configures the HDMI settings.	39
	WIRELESS SETUP	Configures the wireless settings.	39
DISPLAY MENU	F. DISPLAY SETUP	Configures the front panel display settings.	39
	OSD SETUP	Configures the OSD settings.	40
	LANGUAGE SETUP	Changes the language used in the OSD.	40
	UNIT SETUP	Changes the display unit of measurement.	40

Basic SET MENU operation

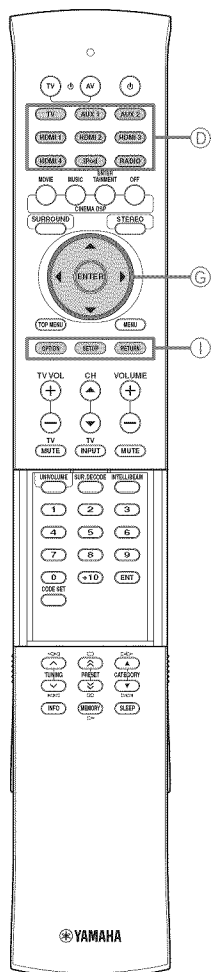

1 Press **D** SETUP.



2 Press **G** ▲ / ▼ to select the desired menu and then press **G** ENTER.



- To return to the previous menu, press **D** RETURN.

3 Press **G** ▲ / ▼ / ◀ / ▶ and **G** ENTER to configure each parameter.



- The initial settings are marked with “**”.

Note

- The menu screen disappears if one of the **D** Input selector keys is pressed while the SET MENU is being configured.

4 To exit from the menu, press **D** SETUP.

MANUAL SETUP

Use this menu to manually adjust the parameters related to the sound beam output. To fine-adjust parameters configured by AUTO SETUP, use “BEAM ADJUSTMENT” and “IMAGE LOCATION”.

■ SETTING PARAMETERS (Setting parameters)

SET MENU → MANUAL SETUP → SETTING PARAMETERS

Use to set the position of this unit in your listening room and the distance of this unit from the listening position.



- If you make adjustments in “SETTING PARAMETERS”, the “BEAM ADJUSTMENT” parameters are automatically adjusted.

Note

- If you make adjustments in “SETTING PARAMETERS”, the beam optimization settings made in the AUTO SETUP procedure will be lost.

D Input selector keys

G ENTER

G ▲ / ▼ / ◀ / ▶

G ▲ / ▼

G ▼


D RETURN

D SETUP

1 In “SETTING PARAMETERS 1/3”, configure “INSTALLED POSITION”.

Select the installed position of this unit.

Choices: FLAT TO WALL* (parallel to wall), ANGLE TO WALL OR CORNER (angle to wall or corner)

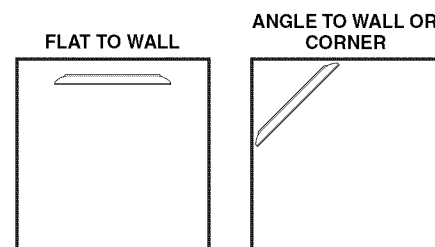

Note


- If you change this setting, “BEAM MODE” setting changes automatically (page 23).

2 Configure “INSTALLED HEIGHT”.

Specify the installed height of this unit.

Control range: 0.0 m to 3.0 m (0.0 ft to 10.0 ft)

Initial setting: 1.0 m (3.5 ft)

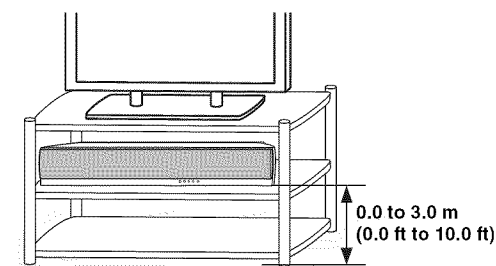


- Press **G** ▼ to proceed to the next page.

3 In “SETTING PARAMETERS 2/3”, configure the listening room settings.


Specify the length and width of the listening room.

Control range: 2.0 m to 12.0 m (6.5 ft to 40.0 ft)

When this unit is installed parallel to wall, specify the width of the listening room and the distance between this unit and rear wall.

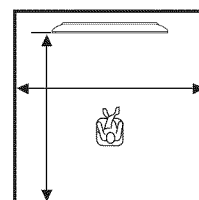


When this unit is installed at the corner of the room, specify the width of length of the listening room.

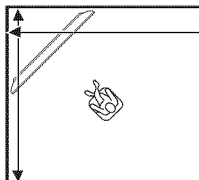

4 In “SETTING PARAMETERS 3/3”, configure the distance settings.

Specify the distance between the listening position and this unit. When this unit is installed parallel to wall, you also need to specify the distance between the listening position and left wall.


Control range (from this unit): 1.8 m to 9.0 m (6.0 ft to 30.0 ft)
Control range (from left wall): 0.6 m to 11.4 m (2.0 ft to 38.0 ft)

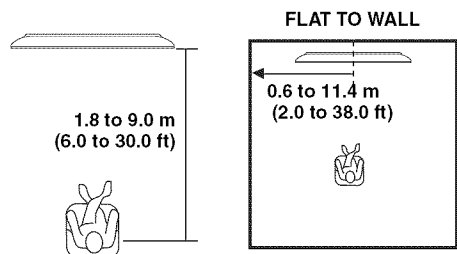

Note

- Configure this setting only when you have adjusted “HORIZONTAL ANGLE”.
- Control range: 0.3 m to 24.0 m (1.0 ft to 80.0 ft)

The length of each arrow indicates the beam travel length.

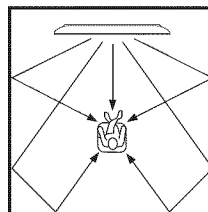

■ **BEAM ADJUSTMENT (Beam adjustment)**

SET MENU → MANUAL SETUP → BEAM ADJUSTMENT

Use to manually adjust the various sound beam settings.

Notes


- The “BEAM ADJUSTMENT” parameters are automatically adjusted (except “Center” in “FOCAL LENGTH”) if you run the AUTO SETUP (page 15) or if you configure “SETTING PARAMETERS” (page 34).
- Depending on the beam mode settings (page 23), some channel positions may not be available for selection. In this case, “—” is displayed.

1 Configure “HORIZONTAL ANGLE”.

Adjust the horizontal angle of sound beams for each channel using test tones.

Adjust toward L (left) to move the direction of the output to the left and adjust toward R (right) to move it to the right.

Control range: L90° to R90°

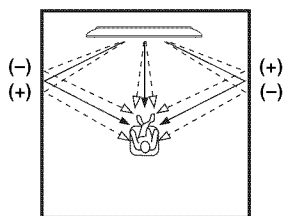


- Press to switch the channels.

2 Configure “VERTICAL ANGLE”.

Adjust the vertical angle of sound beams for each channel using test tones.

Adjust toward – (minus) to move the angle downward and adjust toward + (plus) to move the angle upward.

Control range: –45° to +45°

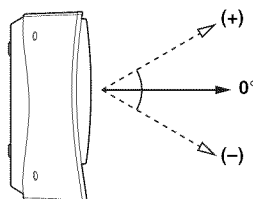


3 Configure “BEAM TRAVEL LENGTH”.

Adjust the distance that sound beams travel after being output and reflected off the wall until they arrive at the listening position so that all sounds can arrive at the listening position at the same time.

4 Configure “FOCAL LENGTH”.

Adjust the distance from the front of this unit to the focal point of output for each channel to achieve an expansive feeling for each channel. Adjust toward – (minus) to move the focus outward (widen the sweet spot) and adjust toward + (plus) to move the focus toward the normal position (narrow the sweet spot).

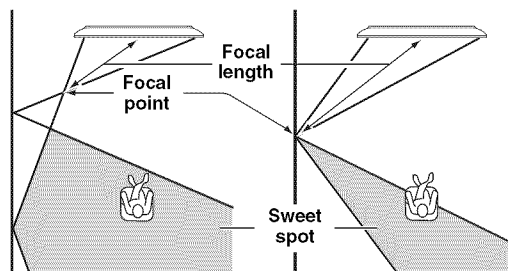


Control range: –1.0 m to +13.0 m (–3.5 ft to +43.5 ft)



- We recommend that you use the initial setting (–0.5 m or –1.5 ft) for “Center”.
- The width of the sweet spot becomes slightly wider than the width of this unit if you run the AUTO SETUP (page 15) or if you configure “SETTING PARAMETERS” (page 34).

Example

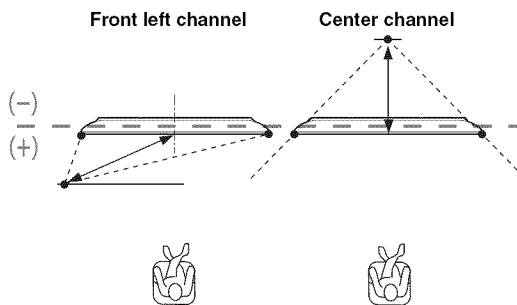

■ **IMAGE LOCATION (Image location)**

SET MENU → MANUAL SETUP → IMAGE LOCATION

Use to adjust the direction from which the front left and right channel sound is heard so that each sound can be heard closer to the center channel.

Use this feature to redirect audio signals if the sound coming from the front left and right channels seems unnatural.

Customizing this unit (SET MENU)

System configurations (ADVANCED SETUP)

Using an external amplifier

Controlling external components

You can adjust this parameter only when “5BeamPlus2”, “5 Beam” or “3 Beam” is selected in “BEAM MODE” (page 23).




- To adjust the volume of each channel, see “CHANNEL LEVEL” (page 37)

Choices: OFF*, ON

- Select “ON” to configure the sound direction.


1 Adjust the image location for the front left channel (LEFT).

The higher the percentage, the louder the output from the center

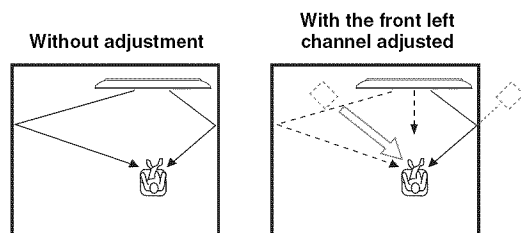

2 Adjust the image location for the front right channel (RIGHT).

The higher the percentage, the louder the output from the center

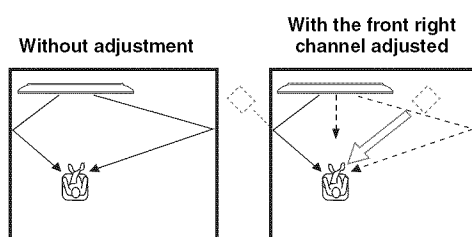

SOUND SET MENU

■ TONE CONTROL (Tone control)

SET MENU → SOUND SET MENU → TONE CONTROL

Use to adjust the tonal quality of sound beams.

TREBLE (Treble)

Use to adjust the high-frequency response.

Choices: -10.0 dB to +10.0 dB

Initial setting: 0.0 dB

BASS (Bass)

Use to adjust the low-frequency response.

Choices: -10.0 dB to +10.0 dB

Initial setting: 0.0 dB

■ SUBWOOFER SET (Subwoofer settings)

SET MENU → SOUND SET MENU → SUBWOOFER SET

Use to configure the subwoofer settings.

BASS OUT (Bass out)

Select where to output low-frequency effect (LFE) and low-frequency (bass) signals.

Choices: SUBWOOFER, FRONT OR AUTO*

- Select SUBWOOFER if you connect a subwoofer with a subwoofer cable. LFE and low-frequency signals from other channels are directed to the subwoofer.
- Select FRONT OR AUTO if you do not use a subwoofer or connect a subwoofer by wireless. LFE and low-frequency signals from other channels are directed to the front right and left channels when you do not use a subwoofer. They are directed to the subwoofer automatically when a wireless connection between a subwoofer and this unit is established properly. If the wireless connection is cut off, they are directed to the front channels automatically.

CROSS OVER (Crossover)

When “BASS OUT” is set to “SUBWOOFER”, you can use this feature to select a crossover (cutoff) frequency for all low-frequency signals. All frequencies below the selected frequency will be sent to the subwoofer position. Choices: 80Hz, 100Hz, 120Hz*

LFE LEVEL (Low-frequency effect level)

Adjust the output level of the low-frequency effect (LFE) channel according to the capacity of your subwoofer. This setting is effective only when this unit decodes Dolby Digital or DTS signals.

Choices: -20 dB to 0 dB*

DISTANCE (Distance)

Adjust the distance of the subwoofer from the listening position.

Choices: 0.3 m to 15.0 m (1.0 ft to 50.0 ft)

Initial setting: 3.0 m (10.0 ft)

■ AUDIO DELAY (Audio delay)

SET MENU → SOUND SET MENU → AUDIO DELAY

Use to adjust delay in output timing between video signals and audio signals.

AUTO LIP SYNC (Automatic lipsync)

Select whether to automatically adjust the audio output delay when a TV that supports the automatic lipsync is connected to the HDMI OUT jack of this unit.

Choices: ON*, OFF

- Select ON if the TV connected to the HDMI OUT jack of this unit supports the automatic lipsync. The audio output delay is automatically adjusted.
- Select OFF if the TV connected to the HDMI OUT jack of this unit does not support the automatic lipsync or you want to disable the automatic lipsync. You can manually adjust the audio output delay in “HDMI”.

TV

Adjust the audio output delay applied to signals input from the TV jacks.

Control range: 0 msec* to 400 msec

HDMI

Manually adjust the audio output delay applied to signals input from the HDMI IN jacks. This setting is effective only when “AUTO LIP SYNC” is set to “OFF”

Control range: 0 msec to 400 msec

Initial setting: 30msec

AUX1/2

Adjust the audio output delay applied to signals input from the AUX1/2 jacks.

Control range: 0 msec to 400 msec

Initial setting: 30msec


■ DRC:Dynamic Range Control (Dynamic range control)

SET MENU → SOUND SET MENU → DRC:Dynamic Range Control

Use to adjust the dynamic range compression. Dynamic range is the difference between the smallest sound that can be heard above the noise of the equipment and the biggest sound that can be heard without distortion.

Adaptive DRC (Adaptive dynamic range control)

Select whether to automatically adjust the dynamic range in conjunction with the volume level. When this function is enabled, the dynamic range is adjusted as follows.
When the volume level is low: Narrow the dynamic range. Loud sound is played back softer, and soft sound which is hard to be listened to is played back louder.
When the volume level is high: Widen the dynamic range. From soft sound to loud sound, source sound is played back without adjusting volume.

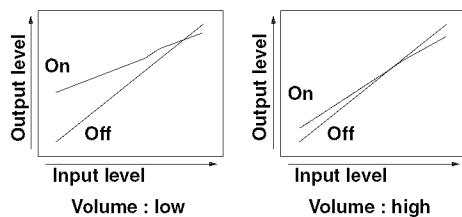

Choices: On*, Off

- Select On to enable the adaptive dynamic range control.
- Select Off to disable the adaptive dynamic range control.



- “Dolby/DTS DRC” is automatically set to “Max” when “Off” is selected.
- This setting is automatically set to “Off” when the UniVolume function is turned on while this setting is automatically set to “On” when the UniVolume function is turned off.

Dolby/DTS DRC (Dynamic range of Dolby Digital and DTS signals)

Select the amount of dynamic range applied when this unit is decoding Dolby Digital and DTS signals

Choices: Max* (Maximum), Standard, Min/Auto (Minimum/Auto)

- Select Max to output sound without adjusting the dynamic range of the input signals.
- Select Standard to set the standard dynamic range recommended for regular home use.
- Select Min/Auto to set the dynamic range suitable for low volume or a quiet environment, such as at night, for bitstream signals except for Dolby TrueHD signals (Min) or adjust the dynamic range for Dolby TrueHD signals based on input signal information (Auto).



- “Adaptive DRC” is automatically set to “Off” when the settings other than “Max” is selected.

■ BASS EXTENSION (Bass extension)

SET MENU → SOUND SET MENU → BASS EXTENSION

Use to turn on or off the bass sound extension. When this function is enabled, the BASS EXT indicator lights up on the front panel display (page 7).

Choices: OFF, MID*, DEEP

- Select OFF to output bass sounds without change.
- Select MID to output moderately-enhanced bass sounds.
- Select DEEP to output deep bass sounds.

■ MUSIC ENHANCER (Music Enhancer)

SET MENU → SOUND SET MENU → MUSIC ENHANCER

Use to turn on or off the compressed audio enhancer. When this function is enabled, the ENHANCER indicator lights up on the front panel display (page 7).

AUX1/2

Select whether to apply the compressed audio enhancer for playback of AUX1/2 input sources.

Choices: ON, OFF*

- Select ON to enable the compressed audio enhancer for playback of AUX1/2 input sources.
- Select OFF to disable the compressed audio enhancer for playback of AUX1/2 input sources.

iPod

Select whether to apply the compressed audio enhancer to iPod/iPhone playback.

Choices: ON*, OFF

- Select ON to enable the compressed audio enhancer for iPod/iPhone playback.
- Select OFF to disable the compressed audio enhancer for iPod/iPhone playback.

■ CHANNEL LEVEL (Channel level)

SET MENU → SOUND SET MENU → CHANNEL LEVEL

Use to adjust the volume of each channel with test tones. Control range: -10.0 dB to +10.0 dB

Note

- Adjustable channels vary depending on the “CHANNEL OUT” setting.
- “Surround Back R” and “Surround Back L” are not adjustable when “SOUND OUT” is set to “SPEAKER”.

SOUND OUT MENU

■ SOUND BEAM OUT CONFIG (Sound beam output configuration)

SET MENU → SOUND OUT MENU → SOUND BEAM OUT CONFIG

Use to configure the number of output channels or audio output method. For details, see “Changing the audio output method for surround playback” (page 23).

■ SOUND OUT (Sound output)

SET MENU → SOUND OUT MENU → SOUND OUT


Use to configure the audio signal output settings.

Customizing this unit (SET MENU)

System configurations (ADVANCED SETUP)

Using an external amplifier

Controlling external components

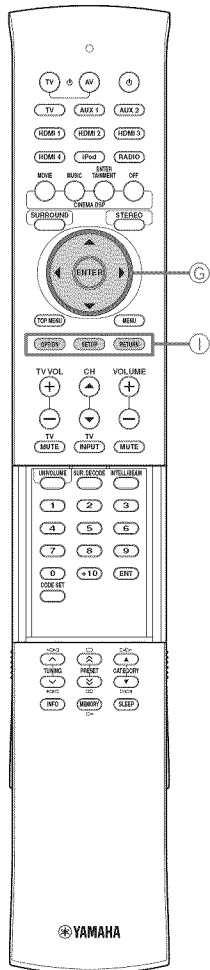

SOUND OUT (Sound output redirection)

Use to redirect the output of audio signals. Audio output of all the channels switches simultaneously.

Choices: SPEAKER*, PRE OUT

- Select SPEAKER to output sounds from this unit.
- Select PRE OUT to output audio signals from the PRE OUT jacks of this unit. You also need to configure the parameters from “BASS OUT” to “LFE Level” described below.



- The parameters from “BASS OUT” to “LFE Level” are settings for the PRE OUT jacks when they are selected as audio output jacks.

BASS OUT (Bass sound output redirection)

Use to redirect the output of bass sounds. The settings under “BASS OUT” are for the PRE OUT jacks.

Choices: SUBWOOFER, FRONT*

- Select SUBWOOFER to output bass sounds from the subwoofer.
- Select FRONT to output bass sounds from the external front right and left speakers.

Front SP Size (Front speaker size for PRE OUT)

Select the size of external front speakers.

Choices: Small, Large*

- Select Small if the diameter of the front speaker’s woofer is smaller than 16 cm. Low-frequency parts of front right and left channel signals are output from the subwoofer.

Center SP Size (Center speaker size for PRE OUT)

Select the size of external center speakers.

Choices: None, Small*

- Select None if no center speaker is used. Center channel signals are mixed into the front right and left speakers.
- Select Small if a center speaker is used. Low-frequency parts of center channel signals are output from the subwoofer (or mixed into the front right and left channel signals if subwoofer is not available).

PRE OUT Volume (PRE OUT volume)

Adjust the output level of the PRE OUT jacks.

Control range: -30.0 dB to 0.0 dB

Initial setting: -18.0 dB

LFE Level (Low-frequency effect level for PRE OUT)

Adjust the low-frequency effect output level of the PRE OUT jacks. This setting is effective only when this unit decodes Dolby Digital or DTS signals.

Control range: -20 dB to + 0 dB*

INPUT MENU

INPUT ASSIGNMENT (Input assignment)

SET MENU → INPUT MENU → INPUT ASSIGNMENT

Use to change the key assignments of input jacks on this unit. The parenthesis references displayed in the menu screen indicate the initial settings.

See also: “AUDIO SELECT” (page 39)



- Press to proceed to the next page.

AUDIO1

Select the key to which the AUDIO IN (TV) jacks are assigned.

Choices: TV*, AUX1, AUX2, HDMI1, HDMI2, HDMI3, HDMI4

Note

- The input already selected in “AUDIO2” is not displayed. To set the input selected in “AUDIO2”, change “AUDIO2” parameter, and then reconfigure.

AUDIO2

Select the key to which the AUDIO IN (AUX 1) jacks are assigned.

Choices: AUX1*, AUX2, HDMI1, HDMI2, HDMI3, HDMI4, TV

Note

- The input already selected in “AUDIO1” is not displayed. To set the input selected in “AUDIO1”, change “AUDIO1” parameter, and then reconfigure.

OPTICAL1

Select the key to which the DIGITAL IN (TV) jack is assigned.

Choices: TV*, AUX1, AUX2, HDMI1, HDMI2, HDMI3, HDMI4

Note

- The input already selected in “OPTICAL2” or “COAX” is not displayed. To set the input selected in one of these parameters, change the corresponding parameter, and then reconfigure.

OPTICAL2

Select the key to which the DIGITAL IN (AUX 1) jack is assigned.

Choices: AUX1*, AUX2, HDMI1, HDMI2, HDMI3, HDMI4, TV

Note

- The input already selected in “OPTICAL1” or “COAX” is not displayed. To set the input selected in one of these parameters, change the corresponding parameter, and then reconfigure.

COAX

Select the key to which the DIGITAL IN (AUX 2) jack is assigned.

Choices: AUX2*, HDMI1, HDMI2, HDMI3, HDMI4, TV, AUX1

Note

- The input already selected in “OPTICAL1” or “OPTICAL2” is not displayed. To set the input selected in one of these parameters, change the corresponding parameter, and then reconfigure.

INPUT RENAME (Input rename)

SET MENU → INPUT MENU → INPUT RENAME

Use to change the name of the input source displayed when the input source is selected. Select a name from templates, or enter an original name.

Selecting a name from templates

- 1 Press to select the input source to be renamed.

ENTER

/

RETURN

2 Press **Ⓒ** **◀ / ▶** **to select a input source name.**
 Choices: TV, Blu-ray, DVD, HDDVD, STB, Satellite, Game

3 To exit from the menu, press **Ⓓ** **RETURN.**

Entering an original name

1 Press **Ⓒ** **△ / ▽** **to select the input source to be renamed.**

2 Press **Ⓒ** **ENTER.**

“▽” appears above the new name display to indicate the position to be entered.

3 Press **Ⓒ** **◀ / ▶** **to place the _ (underscore) under the space or the character you want to edit.**

4 Press **Ⓒ** **△ / ▽** **to select the desired character.**

5 Repeat steps 3 and 4 to edit other characters.

6 To complete the setting, press **Ⓒ** **ENTER.**

7 To exit from the menu, press **Ⓓ** **RETURN.**



- A to Z, 0 to 9, a to z, and symbols (!, ?, <, >, etc.) are available for input.

■ HDMI SETUP (HDMI setup)

SET MENU → INPUT MENU → HDMI SETUP

Use to configure the settings related to HDMI signals and HDMI control function.

SUPPORT AUDIO (Support audio)

Use to select a component to play back HDMI audio signals. This setting is effective only when “HDMI CONTROL” is set to “OFF”.



- HDMI video signals input to one of the HDMI IN jacks of this unit are always output from the HDMI OUT jack.

Choices: (Model name of this unit)*, OTHER

- Select this unit to play back HDMI audio signals on this unit.
- Select OTHER to play back HDMI audio signals on the component connected to the HDMI OUT jack.

AUDIO SELECT (Audio select)

Select whether or not to output HDMI audio signals input to each HDMI IN jacks. This function is useful when you want to enjoy another audio input source while watching HDMI video sources. For example, if you set “HDMI1” of “AUDIO SELECT” to “OFF” and “OPTICAL1” of “INPUT ASSIGNMENT” to “HDMI1” (page 38), you can enjoy the audio source input to the DIGITAL IN (AUX 1) jack while watching the HDMI video source input to HDMI IN 1 jack.

Choices: OFF, ON*

HDMI CONTROL (HDMI control)

Use this function to link this unit and an HDMI control-compatible TV via HDMI. For details, see “Using the HDMI control function” (page 31).

Choices: OFF*, ON

- Select OFF to turn off the HDMI control function. The standby consumption power of this unit decreases.
- Select ON to turn off the HDMI control function.

■ WIRELESS SETUP (Wireless setup)

SET MENU → INPUT MENU → WIRELESS SETUP

Use to configure the wireless connection between this unit and PDX-50TX or SWK-W10.

Wireless Function (Wireless function)

Select whether or not to use the wireless function of this unit.

Choices: No, Yes*

- Select No to disable the wireless function of this unit.
- Select Yes to enable the wireless function of this unit.

iPod Interlock (iPod interlock)

Select whether or not to use the iPod/iPhone interlock function. When the iPod/iPhone interlock function is on, this unit automatically turns on if you turn on the iPod/iPhone when this unit is in the standby mode. In addition, this unit is set to the standby mode if the iPod/iPhone is set to the standby mode.

Choices: OFF, ON*

- Select OFF to disable the iPod/iPhone interlock function. The standby consumption power of this unit decreases.
- Select ON to enable the iPod/iPhone interlock function.

Group ID (Group ID)

The group ID is used for wirelessly connecting Yamaha products that support yAired. To establish a connection among this unit, PDX-50TX and SWK-W10, set the group ID of these products to the same group.

Choices: A1*, A2, A3, B1, B2, B3



- PDX-50TX supports “1” (A1), “2” (A2), and “3” (A3) only.

DISPLAY MENU

■ F.DISPLAY SETUP (Front panel display setup)

SET MENU → DISPLAY MENU → F.DISPLAY SETUP

Use to adjust the brightness and display settings of the front panel display.

STANDARD DIMMER (Standard dimmer)

Use to adjust the brightness of the front panel display when you operate this unit.

Choices: -2, -1, OFF*

AUTO DIMMER (Auto dimmer)

Use to adjust the brightness of the front panel display when you do not operate this unit. The front panel display automatically dims or turns off according to this setting if no operation is performed for a specified period of time.

Choices: DISPLAY OFF, -3 to -1, OFF*


- Select OFF for the same brightness as “STANDARD DIMMER”.
- Select -3 to -1 to get dimmer (based on “STANDARD DIMMER”).
- Select DISPLAY OFF to turn off the front panel display.

Customizing this unit
(SET MENU)

System configurations
(ADVANCED SETUP)

Using an external amplifier

Controlling external components

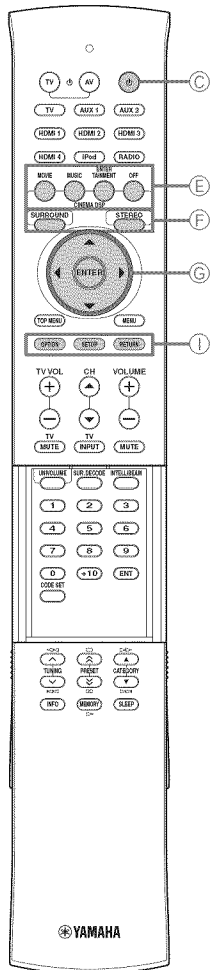

■ OSD SETUP (OSD setup)

SET MENU → DISPLAY MENU → OSD SETUP

Use to adjust the display position and select the background color of the OSD.

OSD SHIFT (OSD shift)

Use to adjust the vertical position of the OSD. Adjust toward the – (minus) direction to raise the position of the OSD, and adjust toward the + (plus) direction to lower it.

Choices: –5 to +5

Initial setting: ±0

OSD BACK COLOR (OSD background color)

Use to select the background color of the OSD.

Choices: Blue*, Gray, Black, Purple, Red

■ LANGUAGE SETUP (Language setup)

SET MENU → DISPLAY MENU → LANGUAGE SETUP

Use to select the language used in the OSD.

Choices: ENGLISH (English), DEUTSCH (German), Français (French), ESPAÑOL (Spanish), ITALIANO (Italian), NEDERLANDS (Dutch), Русский (Russian)

Initial setting: ENGLISH (English)

■ UNIT SETUP (Unit Setup)

SET MENU → DISPLAY MENU → UNIT SETUP

Use this to change the display unit of measurement.

Choices: METERS, FEET*

- Select METERS to enter distances in meters.
- Select FEET to enter distances in feet.

Note

- If you change this setting, the adjusted sound beam settings may change.


System configurations (ADVANCED SETUP)

This unit has additional menus that are displayed in the front panel display. These menus offer additional operations to adjust and customize the way this unit operates.

1 Press **ⓐ**Power **ⓑ** key to set this unit to the standby mode.

2 While holding down INPUT on the front panel, press **ⓐ**Power **ⓑ** key on the remote control.


Keep holding down INPUT until “ADVANCED SETUP” appears on the front panel display.

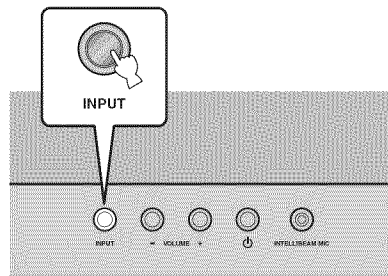

3 Press **ⓓ**SETUP.

4 Press **ⓔ** **ⓕ** / **ⓖ** to select the desired menu and then press **ⓓ**ENTER.

 Example (when “DEMO MODE” is selected)



- To return to the previous screen, press **ⓓ**RETURN.

5 Press **ⓔ** **ⓕ** / **ⓖ** to select the desired parameter.

6 Press **ⓐ**Power **ⓑ** key to set this unit to the standby mode.

The new setting will be reflected when you turn on this unit next time.



- The initial settings are marked with “*”.

TURN ON VOLUME (Volume level at power-on)

Set the initial volume level when the power of this unit is turned on.

Control range: OFF*, 01 to 99, MAX (Maximum)

MAX VOLUME SET (Maximum volume setting)

Set the maximum volume level so that this unit will not output sound beyond the limited volume level.

Control range: 01 to 99, MAX* (Maximum)

PANEL INP.KEY (Front panel input key)

Select whether or not to enable the INPUT key on front panel key. To disable the operations, select “P.INPUT: OFF”.

Choices: P.INPUT: ON*, P.INPUT: OFF

F.PANEL KEY (Front panel key)

Select whether or not to enable front panel key operations (except ADVANCED SETUP operations). To disable the operations, select “F.PANEL: OFF”.

Choices: F.PANEL: ON*, F.PANEL: OFF

- ⓐ Power
- ⓑ OFF
- ⓕ STEREO
- ⓖ SURROUND
- ⓓ ENTER
- ⓔ **ⓕ** / **ⓖ**
- ⓕ **ⓕ** / **ⓖ**
- ⓓ RETURN
- ⓓ SETUP

R.INPUT POWER (Power-on by remote control input keys)

Select whether or not to automatically turn on this unit when you select an input source on the remote control. To enable the function, select "R.INPUT PW: ON".
Choices: R.INPUT PW: OFF*, R.INPUT PW: ON

AC ON STANDBY (Standby after AC on)

Set this unit to the standby mode when the AC power is recovered after the power to this unit was lost temporarily (disconnect the AC power plug from the wall outlet, power outage, etc.). To enable the function, select "AC STANDBY: ON".

Choices: AC STANDBY: OFF*, AC STANDBY: ON

SIRIUS PIN (SIRIUS Satellite Radio PIN)

Reset the Parental Lock cord for SIRIUS Satellite Radio.
Choices: CANCEL*, RESET

MEMORY PROTECT (Memory protect)

Protect the settings you have saved in the system memory. To protect the settings, select "PROTECT: ON".

Choices: PROTECT: OFF*, PROTECT: ON

DEMO MODE (Demo mode)

Test the sound beam output from this unit to experience the sound beam. To set this unit to the demo mode, select "BEAM DEMO: ON".

Choices: BEAM DEMO: OFF*, BEAM DEMO: ON

- To move the beam horizontally, turn off this unit and then turn on it again ("DEMO" appears on the front panel display). Playback an input source and then press **⏻**OFF.
- To stop the beam movement, press **⏻**OFF again.
- To adjust the beam angle manually, press **Ⓢ**SURROUND or **Ⓢ**STEREO when the beam is not moving.



- After you checked the sound beam output, set this setting to "BEAM DEMO: OFF".
- If you set "SOUND OUT" to "PRE OUT", "DEMO MODE" does not function.

FACTORY PRESET (Factory preset)


Reset all of the parameters of this unit to the factory presets.

Choices: CANCEL*, RESET

Using an external amplifier

You can connect an external amplifier to the PRE OUT jacks. Set "SOUND OUT" (page 37) to "PRE OUT" and then configure "PRE OUT BASS Management" parameters.

See also: "Changing the audio output method for surround playback" (page 23)

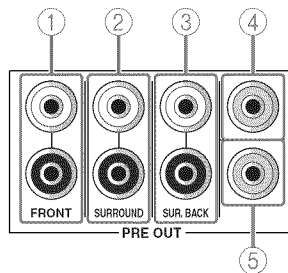**① FRONT PRE OUT jacks**

Output front right and left channel signals.

② SURROUND PRE OUT jacks

Output surround right and left channel signals.

③ SUR. BACK PRE OUT jacks

Output surround back right and left channel signals.

④ CENTER PRE OUT jack

Outputs center channel signals.

⑤ SUBWOOFER PRE OUT jack

Connect a subwoofer with a built-in amplifier.

Note

- The following functions are disabled when an external amplifier is used.
 - AUTO SETUP (page 15)
 - CINEMA DSP programs (page 22)
 - UniVolume (page 31)
 - MUSIC ENHANCER (page 37)
 - BASS EXTENSION (page 37)
 - Adaptive DRC (page 37)

Customizing this unit
(SET MENU)

System
configurations
(ADVANCED SETUP)

Using an external
amplifier

Controlling external
components

Controlling external components

Note

Depending on the external AV component you are using, you may not be able to operate the component with the remote control, even if a remote control code is set. In this case, operate the component using the supplied remote control.

You can control external components using the following keys on the remote control of this unit by setting the appropriate remote control codes (page 49). Before operating the control keys, press one of the **(D)** Input selector keys to select an external component to be controlled.

(B) TV \odot

Turns on the power of your TV or set it to the standby mode.

(B) AV \odot

Turns on the power of the selected component or set it to the standby mode.

(G) Cursor (\triangle / ∇ / \leftarrow / \rightarrow) keys, ENTER

Use to select menu items.

(H) TOP MENU

Displays the top menu of a Blu-ray disc or DVD.

(H) MENU

Displays the menu of a Blu-ray disc or DVD.

(I) RETURN

Returns to the previous menu screen.

(J) CH \triangle / ∇

Switches between available channels for your external component.

(L) TV operation keys

TV VOL +/-

Adjusts the audio output level of your TV.

TV MUTE

Temporarily mutes audio output from your TV.

TV INPUT

Switched the input source for your TV.

(N) Numeric keys

Use to enter numeric digits or specify a channel number.

(O) CODE SET

Sets remote control codes for external component operations (page 42).

(P) External component operation keys

Use to control playback of your external component.



The **(B)** TV \odot and **(L)** TV operation keys always work regardless of the selected input source.

Notes

Depending on external components, some or all operations may not work. In this case, operate the component using the supplied remote control.

If you operate your TV with the remote control of this unit when the HDMI control function is activated, this unit or external component connected to this unit with HDMI works improperly in some cases.

Setting remote control codes

1 While holding down **(O)** CODE SET, press **(D)** Input selector key to which the remote control code is assigned.

(A) Transmission indicator flashes twice.

2 Release **(O)** CODE SET.

3 Press **(N)** Numeric keys to enter the remote control code (page 49) for your external component.

Each time you press you press the key,

(A) Transmission indicator flashes once. Once the 5-

digit remote control code is entered properly,

(A) Transmission indicator lights up for approximately 2 seconds.



To clear remote control code set to a selected input source, enter "00010".

Note

If any key other than **(N)** Numeric keys is pressed,

(A) Transmission indicator flashes 5 times and the setting mode is canceled.

4 Perform a test operation using the remote control of this unit.

If the external component functions correctly, the remote control code setup is successful. If it does not function correctly, the remote control code may be incorrect. Check the remote control code for your external component (page 49) and try again.

Note

If no operation is performed after step 1 or in the middle of step 2 within 30 seconds, **(A)** Transmission indicator flashes 5 times and the setting mode is canceled.

Resetting all remote control codes

1 While holding down **(O)** CODE SET, press **(I)** SETUP.

(A) Transmission indicator flashes twice.

2 Release **(O)** CODE SET.

3 Press **(N)** Numeric keys to enter "99999".

Each time you press the **(N)** Numeric keys,


(A) Transmission indicator flashes once. Once the

remote control code is entered properly,

(A) Transmission indicator lights up for approximately 2 seconds and then the initialization is completed.

Note

If one of the other keys is pressed, **(A)** Transmission indicator flashes 5 times and the initialization is canceled.

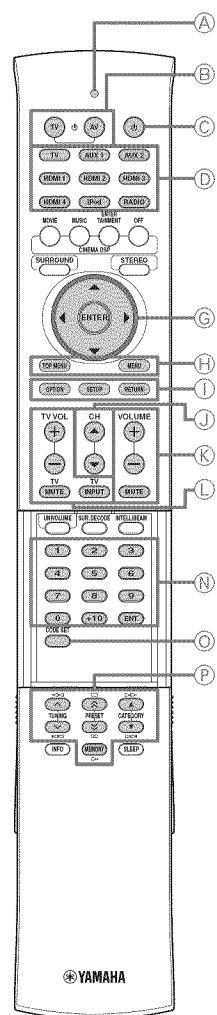

(A) Transmission indicator

(B) AV

(B) TV

(C) Power

(D) Input selector keys

(G) Cursor (\triangle / ∇ / \leftarrow / \rightarrow) keys

(G) ENTER

(H) MENU

(H) TOP MENU

(I) RETURN

(J) CH \triangle / ∇

(K) MUTE

(K) VOLUME +/-

(L) TV operation keys

(N) Numeric keys

(O) CODE SET

 
 
 
 
 
(P) External component operation keys

APPENDIX

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, set this unit to the standby mode, disconnect the AC power supply cable, and contact the nearest authorized Yamaha dealer or service center.

■ General

Problem	Cause	Remedy	See page
This unit does not operate properly.	The internal microcomputer has been frozen by an external electric shock (such as lightning or excessive static electricity) or by a power supply with low voltage.	Disconnect the AC power supply cable from the outlet and plug it in again after about 30 seconds.	12
This unit fails to turn on when  Power ( key is pressed, or enters the standby mode soon after the power has been turned on.	The AC power supply cable is not firmly connected to the AC wall outlet.	Connect the AC power supply cable firmly to the AC wall outlet.	12
	This unit has been exposed to a strong external electric shock (such as lightning and strong static electricity).	Set this unit to the standby mode, disconnect the AC power supply cable, plug it back in after 30 seconds, and use it normally.	12
This unit suddenly enters the standby mode.	The internal temperature becomes too high and the overheat protection circuitry has been activated.	Wait for about one hour for this unit to cool down and turn it back on.	—
	The sleep timer has turned the unit off.	Turn on the power and play back the source again.	21
No sound.	Incorrect input or output cable connections.	Connect the cables properly. If the problem persists, the cables may be defective.	12
	No appropriate input source has been selected.	Select an appropriate input source with INPUT or  Input selector keys.	21
	The volume is turned down.	Turn up the volume.	21
	The sound is muted.	Press  MUTE or  VOLUME +/- to resume audio output and adjust the volume level.	21
	The signals this unit cannot reproduce (such as PCM signals with more than 96 kHz of sampling frequency) are being received from the source component.	Play a source whose signals can be reproduced by this unit.	—
		Change the system settings of the source component.	—
	The HDMI components connected to this unit do not support the HDCP copy protection standards.	Connect the HDMI components that support the HDCP copy protection standards.	12
"SUPPORT AUDIO" is set to "OTHER" and HDMI audio signals are not being played back on this unit.	Set "SUPPORT AUDIO" to this unit in "SET MENU".	39	
No sound or too small sound from a specific channel	The output level of the channel is muted.	Raise the output level of the channel.	37
	The beam setting is inappropriate.	Adjust the beam setting.	35
	You play back the source in the stereo mode.	Start surround playback.	22
	Some audio output methods do not output sound beams for certain channels.	Select another beam mode.	23
No sound from the subwoofer.	"BASS OUT" is set to "FRONT OR AUTO" in "SUBWOOFER SET".	Set "BASS OUT" to "SUBWOOFER" in "SUBWOOFER SET".	36
	The source does not contain low bass signals.		
No sound from the subwoofer connected by wireless.	The group IDs of this unit and SWK-W10 are not set to the same value.	Check whether the group IDs of this unit and SWK-W10 are set to the same value.	39
	"Wireless Function" is set to "No".	Set "Wireless Function" to "Yes".	39
Distorted or too little bass sound.	"CROSS OVER" is set incorrectly in "SUBWOOFER SET".	Set "CROSS OVER" correctly in "SUBWOOFER SET".	36

Problem	Cause	Remedy	See page
Surround sound effects are insubstantial.	The listening room is not a regular shape.	Install this unit in a square or rectangular shaped room.	—
	There is no wall in the path of the sound beam.	Try placing a flat object, such as a board, in the path of the sound beam.	—
Digital audio signals cannot be played back. (DIGITAL indicator does not light up in the front panel display.)	The playback component is connected to this unit with an analog connection.	Connect them with an HDMI connection or a digital connection.	12
	The external component is not set to output digital audio signals.	Refer to the owner's manual supplied with your component and check the setting.	—
	Bit streaming is disabled on the external component.	Refer to the owner's manual supplied with your component and check the setting.	—
There is noise interference when a subwoofer is not connected to this unit.	The protection circuitry was in operation because a source with strong bass elements was played back.	Turn down the volume level.	21
		Set "BASS OUT" to "SUBWOOFER" in "SUBWOOFER SET".	36
		Connect a subwoofer and adjust settings for "SUBWOOFER SET".	36
On-screen display does not appear.	The cable is not connected to the TV or this unit properly.	Connect the cable properly.	12
The HDMI control function does not work properly.	"HDMI CONTROL" is set to "OFF" in "SET MENU".	Set "HDMI CONTROL" to "ON" in "SET MENU".	39
	The HDMI control function is disabled on your TV.	Refer to the owner's manual supplied with your TV and check the setting.	—
	The number of the connected HDMI components is over the limit.	Disconnect some of the HDMI components.	—
The automatic lipsync is not effective even "AUTO LIP SYNC" is set to "ON".	The TV does not support the automatic lipsync.	Set "AUTO LIP SYNC" to "OFF" and then manually adjust the audio output delay.	36
"Not Available" appears on the front panel display after key operation.	The key is unable to function in the current condition.		—

■ FM tuner

Problem	Cause	Remedy	See page
FM stereo reception is noisy.	The characteristics of FM stereo broadcasts may cause this problem when the transmitter is too far away or the antenna input is poor.	Check the antenna connections.	14
		Try using a high-quality directional FM antenna.	—
		Use the manual tuning method.	25
There is distortion, and clear reception cannot be obtained even with a good FM antenna.	There is multi-path interference.	Adjust the antenna position to eliminate multi-path interference.	—
The desired station cannot be tuned into with the automatic tuning method.	The signal is too weak.	Use a high-quality directional FM antenna.	—
		Use the manual tuning method.	25
Previously preset stations can no longer be tuned into.	This unit has been disconnected for a long period.	Preset the stations again.	25

■ SIRIUS Satellite Radio

Status message	Cause	Remedy	See page
ANTENNA ERR	The antenna is not connected to the SiriusConnect tuner properly.	Check the connection of the antenna and SiriusConnect tuner.	26
SIRIUS LOADING	This unit is communicating with the SiriusConnect tuner.	The message disappears normally within several tens of seconds.	—
CHECK TUNER	The SiriusConnect tuner is not connected to the SIRIUS jack of this unit correctly.	Check the connection of the SiriusConnect tuner and this unit.	26
	The SiriusConnect tuner is not connected to the AC wall outlet.	Connect the power cable of the SiriusConnect tuner to the AC wall outlet.	26

Status message	Cause	Remedy	See page
ACQUIRING	The signal is too weak.	Adjust the orientation of the antenna of the SiriusConnect tuner. Use the "Antenna Level" information on the front panel display to check the antenna reception level.	—
UPDATE	The SiriusConnect tuner is updating the channel list.	Wait until the updating is complete.	—
	The period of the subscription is end.	Contact SIRIUS Satellite Radio to renew the subscription.	27
FW UPDATING	The SiriusConnect tuner is updating the firmware.	Wait until the updating is complete.	—
SUB UPDATED	The subscription information is updated.	—	—

■ Remote control

Problem	Cause	Remedy	See page
The remote control does not work and/or function properly.	Wrong distance or angle.	The remote control functions within a maximum range of 6 m (20 ft) and no more than 30 degrees off-axis from the front panel.	14
	Direct sunlight or lighting (from an inverter type of fluorescent lamp, etc.) is striking the remote control sensor of this unit.	Reposition this unit.	—
	The batteries are weak.	Replace all batteries.	14
Cannot operate external components with the remote control of this unit.	The external component you want to operate is not selected as the input source.	Press the desired $\text{\textcircled{I}}$ Input selector key to select the external component you want to operate.	42
	The remote control code was not correctly set.	Set the remote control code correctly or try another code for the same manufacturer using the "List of remote control codes".	42
	Even if the remote control code is correctly set, there are some models that do not respond to the remote control.	Use the remote control supplied with the external component.	—

■ iPod

Problem	Cause	Remedy	See page
No sound.	PDX-50TX is connected to another device.	Select the same group ID as selected on this unit.	—
	PDX-50TX and this unit are not connected since they are set to different groups.	Set both PDX-50TX and this unit to the same group.	39
	"Wireless Function" is set to "No".	Set "Wireless Function" to "Yes".	39
	Distance is too far.	Move PDX-50TX closer to this unit.	—
	There is a device (microwave oven, wireless LAN, etc.) outputting signals in 2.4 GHz frequency band nearby.	Move this unit away from the device. If the device is IEEE802.11n-compliant, change the channel setting of the device so as not to affect the unit.	—
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.	—
	The firmware of the iPod or iPhone is not updated.	Download the latest iTunes software to update the firmware of the iPod or iPhone.	—
	The signal from PDX-50TX is blocked by your body or metallic objects, etc.	Change the way of holding, orientation, or position of PDX-50TX to avoid the object blocking the signal.	—
	The battery of iPod or iPhone is low.	Charge the iPod or iPhone.	—
	The iPod or iPhone is in the process of connecting with this unit.	Please wait for a while.	—
	The protection circuitry has been activated by excessive volume.	Turn down the volume.	21
Controlling volume on the iPod or iPhone does not work.	The iPod or iPhone being used is not supported by this unit.	Use an iPod or iPhone supported by this unit.	30
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.	—

Problem	Cause	Remedy	See page
Suddenly this unit produces sounds even though an iPod or iPhone is not connected.	This unit is connected to another device.	Change the group ID of this unit.	39
The iPod/iPhone interlock function does not work.	"iPod Interlock" is set to "OFF".	Set "iPod Interlock" to "ON".	39

■ Dolby Digital

Dolby Digital is a digital surround sound system that gives you completely independent multi-channel audio. With 3 front channels (left, center, and right) and 2 surround stereo channels, Dolby Digital provides 5 full-range audio channels. With an additional channel especially for bass effects, called LFE (low-frequency effect), the system has a total of 5.1-channels (LFE is counted as 0.1-channel). By using 2-channel stereo for the surround channels, more accurate moving sound effects and surround sound environment are possible than with Dolby Surround. The wide dynamic range (from maximum to minimum volume) reproduced by the 5 full-range channels and the precise sound orientation generated using digital sound processing provide listeners with excitement and realism previously unheard of. With this unit, any sound environment from monaural up to a 5.1-channel configuration can be freely selected for your enjoyment.

■ Dolby Digital Surround EX

Dolby Digital EX creates 6 full-bandwidth output channels from 5.1-channel sources.

For the best results, Dolby Digital EX should be used with movie sound tracks recorded with Dolby Digital Surround EX. With this additional channel, you can experience more dynamic and realistic moving sound especially with scenes with “fly-over” and “fly-around” effects.

■ Dolby Digital Plus

Dolby Digital Plus is an advanced audio technology developed for high-definition programming and media including HD broadcasts, and Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers multichannel sound with discrete channel output. Supporting bitrates up to 6.0 Mbps, Dolby Digital Plus can carry up to 7.1 discrete audio channels simultaneously. Supported by HDMI version 1.3 and designed for the optical disc players and AV receivers/amplifiers of the future, Dolby Digital Plus also remains fully compatible with the existing multichannel audio systems that incorporate Dolby Digital.

■ Dolby Pro Logic II

Dolby Pro Logic II is an improved technique used to decode vast numbers of existing Dolby Surround software. This new technology enables a discrete 5-channel playback with 2 front left and right channels, 1 center channel, and 2 surround left and right channels (instead of only 1 surround channel for conventional Pro Logic technology). Music and Game modes are also available for 2-channel sources in addition to the Movie mode.

■ Dolby Pro Logic IIx

Dolby Pro Logic IIx is a new technology enabling discrete multichannel playback from 2-channel or multi-channel sources. There are three modes available: “Music mode” for music sources, “Movie mode” for movie sources (for 2-channel sources only) and “Game mode” for game sources.

■ Dolby Surround

Dolby Surround uses a 4-channel analog recording system to reproduce realistic and dynamic sound effects: 2 front left and right channels (stereo), a center channel for dialog (monaural), and a surround channel for special sound effects (monaural). The surround channel reproduces sound within a narrow frequency range. Dolby Surround is widely used with nearly all video tapes and laser discs, and in many TV and cable broadcasts as well. The Dolby Pro Logic decoder built into this unit employs a digital signal processing system that automatically stabilizes the volume on each channel to enhance moving sound effects and directionality.

■ Dolby TrueHD

Dolby TrueHD is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience. Supporting bitrates up to 18.0 Mbps, Dolby TrueHD can carry up to 8 discrete channels of 24-bit/96 kHz audio simultaneously. Dolby TrueHD also remains fully compatible with the existing multichannel audio systems and retains the metadata capability of Dolby Digital, allowing dialog normalization and dynamic range control.

■ DTS 96/24

DTS 96/24 offers an unprecedented level of audio quality for multichannel sound on DVD video, and is fully backward-compatible with all DTS decoders. “96” refers to a 96 kHz sampling rate compared to the typical 48 kHz sampling rate. “24” refers to 24-bit word length. DTS 96/24 offers sound quality transparent to the original 96/24 master, and 96/24 5.1-channel sound with full-quality full-motion video for music programs and motion picture soundtracks on DVD video.

■ DTS Digital Surround

DTS digital surround was developed to replace the analog soundtracks of movies with a 6-channel digital sound track, and is now rapidly gaining popularity in movie theaters around the world. DTS, Inc. has developed a home theater system so that you can enjoy the depth of sound and natural spatial representation of DTS digital surround in your home. This system produces practically distortion-free 6-channel sound (technically, left, right, and center channels, 2 surround channels, plus an LFE 0.1-channel as a subwoofer, for a total of 5.1 channels). The unit incorporates a DTS-ES decoder that enables 6.1-channel reproduction by adding the surround back channel to existing 5.1-channel format.

■ DTS Neo:6

Neo:6 decodes the conventional 2-channel sources for 6-channel playback by the specific decoder. It enables playback with the full-range channels with higher separation just like digital discrete signal playback. Two modes are available: Music mode for playing music sources and Cinema mode for movies.

■ DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is a high resolution audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is virtually indistinguishable from the original, offering a high-definition home theater experience. Supporting bitrates up to 6.0 Mbps for Blu-ray Disc, DTS-HD High Resolution Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously.

DTS-HD High Resolution Audio also remains fully compatible with the existing multichannel audio systems that incorporate DTS Digital Surround.

■ DTS-HD Master Audio

DTS-HD Master Audio is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience. Supporting bitrates up to 24.5 Mbps for Blu-ray Disc, DTS-HD Master Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously. Supported by HDMI version 1.3 and designed

for the optical disc players and AV receivers/amplifiers of the future, DTS-HD Master Audio also remains fully compatible with the existing multichannel audio systems that incorporate DTS Digital Surround.

■ HDMI

HDMI (High-Definition Multimedia Interface) is the first industry-supported, uncompressed, all-digital audio/video interface. Providing an interface between any source (such as a set-top box or AV receiver) and an audio/video monitor (such as a digital television), HDMI supports standard, enhanced, or high-definition video as well as multi-channel digital audio using a single cable. HDMI transmits all ATSC HDTV standards and supports 8-channel digital audio, with bandwidth to spare to accommodate future enhancements and requirements.

When used in combination with HDCP (High-bandwidth Digital Content Protection), HDMI provides a secure audio/video interface that meets the security requirements of content providers and system operators. For further information on HDMI, visit the HDMI website at "<http://www.hdmi.org/>".

■ LFE 0.1-channel

This channel is for the reproduction of low bass signals. The frequency range for this channel is 20 Hz to 120 Hz. This channel is counted as 0.1 because it only enforces a low-frequency range compared to the full-range reproduction by the other 5/6 channels in Dolby Digital or DTS 5.1/6.1-channel systems.

■ PCM (Linear PCM)

Linear PCM is a signal format under which an analog audio signal is digitized, recorded, and transmitted without using any compression. This is used as a method of recording CDs and DVD audio. The PCM system uses a technique for sampling the size of the analog signal per very small unit of time. Standing for pulse code modulation, the analog signal is encoded as pulses and then modulated for recording.

■ "x.v.Color"

A color space standard supported by HDMI version 1.3. It is a more extensive color space than sRGB, and allows the expression of colors that could not be expressed before. While remaining compatible with the color gamut of sRGB standards, "x.v.Color" expands the color space and can thus produce more vivid, natural images. It is particularly effective for still pictures and computer graphics.

Specifications

AMP SECTION

- Maximum Output Power
 - Woofer 20 W/ch (4 Ω, 100 Hz, 10% THD)
 - Small dia. speaker 2 W/ch (4 Ω, 1 kHz, 10% THD)

SPEAKER SECTION

- Speaker type 2-way acoustic suspension magnetic
- Driver
 - Small dia. speakers 4 cm (1-9/16 in) cone magnetic shielding type × 40
 - Woofers 11 cm (4-5/16 in) cone × 2
 - Tweeters (YSP-5100 only) 2.5 cm (1 in) balanced dome x 2
- Frequency response
 - YSP-5100 75 Hz to 20 kHz (-10dB, Stereo mode)
 - YSP-4100 90 Hz to 20 kHz (-10dB, Stereo mode)

CONNECTIONS

- Input Jacks
 - TV, AUX 1 AUDIO IN 2 pairs (Analog)
 - TV, AUX 1 DIGITAL IN
(FS=32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz)
..... 2 (Optical digital)
 - AUX 2 DIGITAL IN
(FS=32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz)
..... 1 (Coaxial digital)
 - AUX 1 VIDEO IN 1 (Composite)
[U.S.A., Canada, Korea, and General models] NTSC
[Other models] PAL
 - AUX 2 VIDEO IN 1 (Component)
 - HDMI IN 4
- Output Jacks
 - SUBWOOFER 1
 - VIDEO OUT (composite input or menu screen) 1 (Composite)
[U.S.A., Canada, Korea, and General models] NTSC
[Other models] PAL
 - HDMI OUT 1
- System Connector Jack
 - INTELLIBEAM MIC 1 (Microphone input)
 - RS-232C 1 (System control)
 - SYSTEM CONNECTOR 1 (for subwoofer power interlock)
 - IR IN 1 (System control)
 - IR-OUT 1 (System control)

FM SECTION

- Tuning Range
 - [U.S.A. and Canada models] 87.5 to 107.9 MHz
 - [Other models] 87.50 to 108.00 MHz

Wireless

- Frequency 2.4 GHz

GENERAL

- Power Supply
 - [U.S.A. and Canada models] AC 120 V, 60 Hz
 - [Australia model] AC 220–240 V, 50/60 Hz
 - [Europe and Russia models] AC 220–240 V, 50/60 Hz
 - [Korea model] AC 220–240 V, 50/60 Hz
 - [General model] AC 110–120 V, 50/60 Hz
 - [China and Asia models] AC 220–240 V, 50/60 Hz
- Power Consumption 55 W
- Standby Power Consumption
 - HDMI Control OFF/Wireless Power OFF 0.5 W or less
 - HDMI Control ON/yAired ON (factory preset) 1.0 W or less
- Dimensions (W x H x D)
 - YSP-5100
 - Maximum dimension 1200 x 212 x 90 mm (47-1/4 x 8-3/8 x 5-5/8 in)
 - With stands 1200 x 214 x 110.7mm (47-1/4 x 8-7/16 x 4-3/8 in)
 - YSP-4100
 - Maximum dimension 1030 x 212 x 90 mm (40-17/32 x 8-3/8 x 5-5/8 in)
 - With stands 1030 x 214 x 110.7mm (40-17/32 x 8-7/16 x 4-3/8 in)
- Weight
 - YSP-5100 11.0 kg (24.3 lbs)
 - YSP-4100 10.0 kg (22.1 lbs)

* Specifications are subject to change without notice.

HDMI interface of this unit is based on the following standard:

- HDCP (High-bandwidth Digital Content Protection System) licensed by Digital Content Protection, LLC.

List of remote control codes

TV

ACCENT	14801, 16201	BASIC	00101	16701, 16801, 17801,	DUMONT	00201, 15401, 16301
ACCUPHASE	16201	BASIC LINE	14701, 14801, 15701,	17901, 18101, 18201,	DURABRAND	16801, 17601, 18201
ACTION	14701, 14801, 15401		15901, 16201	18601	DUX	15701, 16201
ACURA	00101	BAUR	00401, 04601, 06701,	CITY	D-VISION	15701, 16201
ADDISON	01201, 01601, 08401		14701, 14801, 15701,	CLARION	DWIN	09201, 10101
ADMIRAL	01301, 02201, 05801,		16101, 16201	CLARIVOX	DYNAMIC	14801
	14701, 14801, 15001,	BAYSONIC	02701	CLATRONIC	DYNATECH	15401
	15201, 18601	BEAUMARK	02601		DYNATRON	15701, 16201
ADVENT	09601	BEC	14701	CLP CLASSIC	DYNEX	15701
ADYSON	14701, 15401	BECRESE	14701, 15401	COLORTYME	ECE	00401
AEA	15701, 16201	BEKO	04701, 06201, 09001,	COMPUTRON	ELBE	03501, 15001, 15701,
AGB	06801		09101, 14701, 15701,			16201
AIKO	01201, 14801, 15701,	BELCOR	16201	CONCERTO	ELBIT	14701
	16201	BELL & HOWELL	16301	CONCORDE	ELECS	14701
AIM	15701, 16201		02001, 14701, 18401,	CONDOR	ELECTRATUNE	15401
AIWA	16901, 17101, 17701,		18601, 18701	CONIC	ELECTRO TECH	14801
	18301	BENCHMARK-BEAUMARK		CONRAC	ELECTROBAND	00001
AKAI	00101, 00301, 02901,		14701, 14801, 15401	CONRAD	ELECTROHOME	15401, 16301, 17901,
	04601, 06801, 08901,	BEON	00401, 14701, 15701,	CONTEC		19001
	10501, 14701, 14801,		16201			
	15401, 15701, 16201,	BESTAR	14701, 14801, 15701,	CONTINENTAL EDISON		
	16701		15901, 16201			
AKIBA	15701, 16201	BESTAR-DAEWOO		16001		
AKITO	15701, 16201		15901	15401	ELECTRONIKA	14701
AKURA	03701, 14701, 14801,	BIGSTON	14801	COSMEL		
	15701, 16201	BLACK DIAMOND		CRAIG	ELEKTA	14801, 15701, 16201
ALBA	00101, 00401, 04801,		16201	CROSLEY	ELEKTRA	18601
	08501, 14701, 14801,	BLAUPUNKT	02801	CROWN	ELEKTRONIKA	14701
	15701, 16201	BLUE SKY	08501, 11401, 14701,			
ALFA	14701		15701, 16201	CRYSTAL	ELG	15701, 16201
ALLSTAR	14701, 15701, 16201	BONDSTEC	03301, 15501	CTC	ELIN	00401, 06901, 14701,
AMERICA ACTION		BPL	15701, 16201	CURTIS MATHES		14801, 15701, 16101,
	02701	BRADFORD	02701		ELITE	04101, 14701, 15401,
AMPRO	09401	BRANDT	01701, 04201, 15801,			15701, 16201
AMSTRAD	00101, 00401, 02501,		16001	EMERSON	ELTA	00101, 14801, 14901
	04801, 05101, 05301,	BRENDSTAR	14801			02001, 02601, 02701,
	06801, 14801, 15001,	BRINKMANN	15701, 16201			03101, 04601, 05801,
	15701, 16201	BRIONVEGA	14701, 15001, 15701,			07901, 15401, 15701,
ANAM	00101, 02701, 03401,		16201			16201, 16301, 16801,
	15701, 16201	BRIORRYEGA	14701			17201, 17701, 17901,
ANAM NATIONAL		BROCKWOOD	15401			18201, 18501, 19301
	03401, 08301, 15701,	BROKSONIC	03101, 05801, 15401,	CXC	ENVISION	00301, 10601, 16301,
	16201		16801	DAEWOO		17901
ANGLO	14801	BROKWOOD	16301		EPSON	11001
ANITECH	00101, 14701, 14801,	BUSH	00101, 00101, 00401,		ERRES	00401, 14701, 15701,
	15401, 15701, 16201		04801, 04901, 08501,			16201
ANSONIC	14801, 15701, 15901,		11401, 14701, 15701,		ESC	15701, 16201
	16201		15901, 16101, 16201		ETHER	00101, 00301
AOC	00101, 00301, 00901,	BYDESIGN	14301, 14401, 14501,		ETRON	00101, 14801, 15701,
	01201, 01301, 01601,		14601			16201
	02601, 02701, 05601,	CAMPLE	15401	DAICHI	EUROMAN	15701, 16201
	14701, 15401, 16301,	CANDLE	00301, 15401, 16301,	DANSAI		14701
	16501, 17901		17801, 17901	DAWA	EUROPA	15701, 16201
APEX DIGITAL		CAPEHART	14701, 15401	DAYTON	EUROPHON	06801, 14701, 15701,
	09301, 09701, 09901	CARAD	15701, 16201	DAYTRON		16201
AR SYSTEM	15701, 16201	CARENA	15701, 16201		EXCEL	15701, 16201
ARC EN CIEL	16001	CARNIVALE	00301		EXQUISIT	15701, 16201
ARCAM	16001	CARREFOUR	14701, 15701, 16201	DE GRAAF	FAMILY LIFE	15701, 16201
ARDEM	15701, 16201	CARVER	00801, 02401, 14701	DECCA	FENNER	14801, 15901
ARISTONA	14701, 15701, 16201	CASCADE	00101, 15701, 16201		FERGUSON	00401, 01001, 01701,
ART TECH	14701	CASIO	15701, 16101, 16201			03201, 03801, 04201,
ASA	01401	CATHAY	00401, 14701, 15701,	DEITRON		07101, 15701, 15801,
ASBERG	14701, 15701, 16201		16201	DENON		16201
ASORA	14801	CCE	00401, 15701, 16201	DENVER	FIDELIS	14801
ASTRA	14801, 15701, 16201	CELEBRITY	00001	DESMET	FIDELITY	04601, 15701, 16201
ATLANTIC	14701, 15701, 16201	CELERA	09701		FILSAI	14801
ATORI	14801	CENTURION	00401, 14701, 15701,	DIAMANT	FINLANDIA	02901, 04401, 15801
ATORO	14801		16201, 17901	DIAMOND	FINLUX	00401, 01401, 01501,
AUDIOSONIC	00401, 01701, 14701,	CGE	03301, 14801, 16001	DIGATRON		04401, 06801, 14701,
	14801, 15701, 15901,	CGM	14801	DIGILINE		14801, 15101, 15701,
	16201	CHANGHONG	09701	DIGISTAR		16201
AUDIOTON	14801	CHING TAI	00101, 01201	DIGITOR	FIRST LINE	14701, 14801, 15701,
AUDIOVOX	14701	CHUN YUN	00001, 00101, 01201,	DIK		15901, 16101, 16201
AUTOVOX	15501, 16101		02701	DIMENSIA	FIRSTAR	00101, 03101
AWA	00101, 14801, 15701,	CHUNG HSIN	00701, 01601, 02701	DIXI	FIRSTLINE	00101, 03301, 08501
	15901, 16201	CIE	14801		FISHER	01401, 02001, 02901,
BAIRD	15801	CIMLINE	00101, 14801	DORIC		04701, 16101, 18901
BANG & OLUFSEN	07201	CINERAL	01201, 05601	DTS	FLINT	05701, 14701, 15701,
		CIRCUIT CITY	15401	DUAL		16201
		CITIZEN	00301, 00901, 01201,		FORMENTI	00401, 04101, 14701,
			14701, 15401, 16301,			15701, 16201

INTRODUCTION

PREPARATION

PLAYBACK FEATURES

SETTINGS

APPENDIX

FORTRESS	01301, 15401	HARRAD	15401	18701, 18901, 19001,	LUMA	14701, 14801, 15001,	
FRABA	15701, 16201	HARVARD	02701, 15401	19101,		15701, 15901, 16201	
FRIAC	15701, 16201	HARWOOD	15701, 16201	JCB	00001	LUMATRON	15701, 16201
FRONTECH	02201, 03301, 03701,	HAUPPAUGE	15701, 16201	JEAN	00101, 00601, 01201,	LUX MAY	14701, 15701, 16201
	14801, 16101	HAVERMY	01301		02101, 03101	LUXMAN	16301, 17901
FUJITSU	08701, 10401, 15401,	HCM	00101, 05101, 14801,	JENSEN	09601, 16301, 17901,	LUXOR	04501, 04601, 15201,
	15701, 16201		15701, 16201		19501		16101
FUJITSU GENERAL	15001	HEATHKIT	14701	JETPOINT	14701	LXI	00501, 00801, 02001,
FUNAI	02501, 02701, 03701,	HEDZON	15701, 16201	JINLIPU	14801		02101, 02601, 14701,
	14801, 15401, 17201,	HELLO KITTY	05601	JMB	15701, 15901, 16201		16301, 16601, 17401,
	17701, 18201	HEMMERMANN		JULIBEE	16201		17701, 17901, 18101,
FUTURE	15701, 16201		16101	JUMBOTRONIC			18401, 18701
FUTURETECH		HIFIVOX	16001		14701	M ELECTRONIC	00101, 00401, 01401,
	02701	HIGHLINE	15701, 16201	JVC	00701, 04801, 05801,		01501, 01701, 02201,
GALAXI	15701, 16201	HILINE	14801		08401, 08701, 14701,		03801, 04401, 04901,
GALAXIS	15701, 16201	HINARI	00101, 00401, 14701,		18901		06001, 14801
GALERIA	14801		14801, 15701, 16201	KAISER	14701	M ELECTRONICS	14701, 14801
GATEWAY	13301, 13401	HISAWA	05701	KAISUI	00101, 14701, 14801,	MACYS	15401
GBC	14801, 15901	HISENSE	19201		15701, 16201	MADISON	15701, 16201
GE	00301, 00501, 00601,	HITACHI	00101, 00301, 01201,	KAPSCH	02201	MAGNADYNE	03301, 06801, 14701,
	01201, 02601, 02701,		01501, 01701, 01801,	KARCHER	07701, 14701, 14801,		14801
	05601, 07101, 11801,		02201, 02601, 03001,		15701, 16201	MAGNAFON	06801
	12201, 12601, 15801,		04501, 06101, 06901,	KATHREIN	07001, 15701, 16201	MAGNASONIC	14701, 14801, 15401
	16301, 16401, 16601,		07301, 11701, 12101,	KAWASHO	16301, 17901	MAGNAVOX	00301, 00801, 12001,
	17301, 17401, 17901,		14701, 15401, 15701,	KEC	02701		12601, 14701, 15701,
	18401, 18701, 19001,		15801, 16101, 16201,	KENDO	00401, 14701, 14801,		16201, 16301, 17201,
	19101		16301, 17701, 17901,		15001, 15701, 16201		17801, 17901
GEC	00401, 06801, 15701,	HORIZONT	14701	KENNEDY	15001	MAGNUM	15701, 16201
	16101, 16201	HORNYPHON	14701	KENWOOD	00301, 15401, 16301,	MAJESTIC	18401, 18601, 18701
GELOSO	00101, 14801, 15901	HORNYPHONE			17901	MANESTH	03701, 04101, 14701,
GEMSOUND	14801		15701, 16201	KIOTA	14801		15701, 16201
GENERAL	14801	HUA TUN	00101	KITON	16201	MANHATTAN	15701, 16201
GENERAL ELECTRIC	15801	HUANYU	04901, 15901	KITON	15701	MARANTZ	00301, 00401, 00801,
GENERAL TECHNIC	14801	HYPER	14801, 15501	KLH	15401		07001, 14701, 15701,
	14801	HYPSON	00401, 03701, 14701,	KNEISSEL	03501, 05401, 15301,	MARK	16201, 16301, 17901
GENEXXA	02201, 14701, 15701,		14801, 15701, 16201		15701, 15901, 16201		00401, 14701, 15701,
	16201	IBERIA	15701, 16201	KOBIC	14801	MASUDA	15701, 16201
GIBRALTER	00201, 00301, 16301	ICE	03701, 04801, 14701,	KOLIN	00701, 01601, 02701	MATSUI	00101, 00401, 02901,
GITEM	14701		14801, 15701, 16201	KOLSTER	14701, 15701, 16101,		04801, 06301, 06801,
GM	14801	ICT	15701, 16201		16201		14701, 14801, 15701,
GMG	14801	IMA	15401	KONICHI	14801		16101, 16201
GOLDHAND	14801	IMPERIAL	03301, 04701, 05201,	KONKA	15701, 16201, 18001,	MATSUSHITA	03401, 08301
GOLDSTAR	00301, 00401, 01701,		14701, 15701, 16101,		19401	MAVA	15401
	02001, 02601, 05001,	INDIANA	00401, 14701, 15701,	KORPEL	00401, 14701, 15701,	MAXAM	14801
	14701, 14801, 15201,		16201		16201	MAXELL	14801
	15401, 15501, 15701,	INFINITY	00801, 14701	KOSMOS	15701, 16201	MCE	14801
	16201, 16301, 16501,	INGELEN	02201	KOYODA	00101	MEDIATOR	00401, 14701, 15701,
	17701, 17901, 18901	INGERSOLL	14801	KUASHO	14701, 15401		16201
GOODMANS	00401, 04801, 04901,	INNO HIT	06801, 14701, 14801,	KUBA	16101	MEDION	08501, 10301, 11401,
	08201, 14701, 14801,		15201, 15701, 16201	KUBA ELECTRONIC			15701, 16201
	15701, 15801, 15901,	INNOHIT	14701, 14801, 15201		16101	MEGATRON	01801, 02601, 16301,
	16201	INNOVA	00401	KURAZAI	18601		17901
GOREMJE	04701	INNOVATION	15701, 16201	L&S ELECTRONIC		MELECTRONIC	15701, 15801, 15901,
GPM	14801	INSIGNIA	16801, 17001, 17201,		10301		16101, 16201
GRADIENTE	00701, 02401, 15701,		17501, 17601, 18001,	LEADER	14801	MEMOREX	00101, 01901, 02001,
	16201		18201, 19401, 19501	LECSON	15701, 16201		02601, 03401, 05801,
GRADIN	14701, 14801	INTEQ	00201	LEGEND	14801		11401, 14801, 16301,
GRAETZ	02201, 04601, 15701,	INTERACTIVE		LENCO	14701, 14801, 15701,		16801, 17901, 18401,
	16201		15701, 16201		15901, 16201		18601, 18701
GRANADA	00401, 02901, 04301,	INTERBUY	14801, 15701, 16201	LENOIR	14801	MEMPHIS	14801
	06801, 14701, 15701,	INTERDISCOUNT		LEVIS AUSTRIA		MERCURY	14801, 15701, 16201
	15801, 16201		14701		15701, 16201	METZ	05501, 15701, 16201
GRANDIN	07701, 15701, 15901,	INTERFUNK	00401, 02201, 03301,	LEYCO	00401, 03701, 14701,	MGA	00301, 01901, 02601,
	16201		04601, 06701, 14701,		15701, 16201		15701, 16201, 16301,
GRENADIER	14801		15701, 16101, 16201	LG	00301, 00401, 00901,		16501, 17901, 18901,
GRUNDIG	00401, 02801, 06301,	INTERNAL	15701, 15901, 16201		01601, 02601, 09001,	MICROMAXX	10301, 15701, 16201
	07001, 07401, 15701,	INTERVISION	00401, 03701, 05001,		15701, 16201, 16301,	MICROSTAR	10301
	16201		14901, 15701, 16201		16501, 17701, 17901,	MIDLAND	00201, 00501, 00601,
GRUNPY	02701	IRRADIO	14701, 14801, 15101,	LIESENK & TTER	18901		15401, 16401, 16601,
GTT	14801		15201, 15501, 15701,		00401, 15701, 16201		17401, 18701
HAIER	17601, 18801		16201	LIESENK/TTER		MINATO	15701, 16201
HALLMARK	02601, 15401, 16301,	IST	14701		14701	MINERVA	06301
	17901	ISUKAI	14701, 15701, 16201	LIESENKOTTER		MINOKA	05101, 14701, 15701,
HANKOOK	00301, 02601, 02701	ITL	14801		14701, 15701, 16201		16201
HANSEATIC	00401, 04101, 04601,	ITS	04801, 14801, 15701,	LIFE	14801	MINUTZ	19101
	05201, 07001, 14701,		16201	LIFETEC	14801, 15701, 15901,	MITSUBISHI	00301, 01301, 01601,
	14801, 15301, 15701,	ITT	02201, 04601, 06901,		16201		01901, 02001, 02601,
	16101, 16201		16101	LINITRON	15401		02701, 03101, 03401,
HANTAREX	06801, 14701, 14801,	ITT NOKIA	16101	LLOYD	15401		06701, 11201, 11901,
	15701, 16201	ITV	15701, 15901, 16201	LLOYD'S	14801		14701, 14801, 15701,
HANTOR	15701, 16201	JBL	00801, 14701	LODGENET	18401, 18601, 18701		16201, 16301
HARLEY DAVIDSON	15401	JC PENNEY	16301, 16401, 16501,	LOEWE	06701, 14701, 15701,		16501, 17901, 19001
	15401		16601, 16701, 17301,		16201	MIVAR	03901, 04001, 06801,
HARMAN/KARDON	00801		17401, 17801, 17901,	LOGIK	15701, 16201, 18401,		07601, 15201, 15301
			18101, 18401, 18501,		18601, 18701	MONTGOMERY WARD	18401, 18601,

	18701		16201	PYMI	14801	SAMSUX	15401, 17901
MORGAN'S	15701, 16201	OTTO-VERSAND	14701, 14801, 14901	QUASAR	00601, 03401, 08301,	SAMTRON	16701
MOTOROLA	01301, 14701	PACIFIC	15701, 16201		16401	SANKY	15401
MTC	00301, 00901, 06701,	PAEL	15101	QUELLE	00401, 01401, 04601,	SANSEI	05601
	15401, 16101, 16301,	PALLADIUM	04701, 05201, 14701,		06701, 14701, 14801,	SANSUI	05801, 14701, 14801,
	16501, 16701, 17901,		15701, 16101, 16201		15001, 15101, 15201,		15401, 15701, 16201,
	18101	PALSONIC	15701, 16201		15401, 15501, 15701,		16801
MULTITEC	15701, 16201	PANAMA	03701, 14801, 15701,	R LINE	16101, 16201	SANYO	01401, 02001, 02701,
MULTITECH	00101, 02701, 14701,		16201	RADIALVA	14701, 15701, 16201		02901, 04301, 10201,
	14801, 15401, 15701,	PANASHIBA	14801		15701, 16201		14801, 15301, 15701,
	16101, 16201	PANASONIC	00401, 00601, 00801,	RADIO SHACK	15401, 15701, 16201,		16201, 16301, 18901
MUSIKLAND	15701, 16201		02201, 03401, 08301,		16301, 17701, 17901,	SAVE	15701, 16201
MYRYAD	07001, 15701, 16201		12401, 14701, 15701,		18401, 18701, 18901	SBR	00401, 14701, 15701,
NAD	02101, 02601, 04601,		16201, 16401	RADIOLA	00401, 14701, 15701,		16201
	11301, 16301, 17901,	PANAVISION	15701, 16201		16201	SCEPTRE	20201
	18101	PANAVOX	14801	RADIOMARELLI	06801, 15701, 16201	SCHAUB LORENZ	
NAIKO	15701, 16201	PANORAMA	14801				04601, 15901, 16101
NAKIMURA	15701, 15901, 16201	PATHE CINEMA	03201, 04101, 15301,	RADIOSHACK	00301, 00501, 02001,	SCHNEIDER	00401, 03301, 04801,
NAMSUNC	14801		16101		02601, 02701		08501, 14701, 14801,
NATIONAL	14701	PATHE MARCONI	16001	RADIOSTONE	16201		15001, 15301, 15501,
NEC	00101, 00301, 00601,		00101, 14801	RADIOTONE	14701, 14801, 15701		15601, 15701, 15801,
	02001, 02101, 02401,	PAUSA	15401	RCA	00001, 00301, 00501,		16101, 16201
	02601, 05701, 06501,	PCE/PEC	15401		01101, 01201, 02601,	SCOTCH	02601, 16301, 17901
	13201, 14801, 15701,	PENNEY	00301, 00501, 00601,		08601, 11501, 11801,	SCOTT	02601, 02701, 03101,
	15901, 16201, 16301,		00901, 02101, 02601,		13901, 12201, 12501,		15401, 16301, 17901
	16501, 17901	PERDIO	12201, 15401		12601, 12801, 15801,	SEARS	00501, 00801, 02001,
NECKERMANN	00401, 07001, 14701,		04101, 15701, 16201		16301, 16401		02101, 02501, 02601,
	14801, 15001, 15701,	PERFEKT	14701, 15701, 16201		16501, 16601, 17401,		16301, 16601, 16701,
	16101, 16201	PHILCO	00301, 00401, 00801,		17901, 18401, 18701,		17201, 17401, 17901,
NEI	00401, 14701, 15701,		01801, 02601, 02701,	REALISTIC	19001		18101, 18201, 18401,
	16201		03301, 05801, 13101,		00301, 02001, 02601,	SEG	18701, 18901
NETSAT	00401, 15701, 16201		14701, 14801, 15701,		02701, 16301, 17701,		03701, 08501, 14801,
NEUFUNK	15701, 16201		16201, 16301, 16501,		17901, 18401, 18701,		15401, 15701, 16101,
NEWAVE	00101, 01201, 01301,	PHILIPS	17801, 17901	RECOR	18901	SEI	16201
	02601		00001, 00301, 00401,	RECORD	15701, 16201		06801, 15701, 16101,
NEWTECH	14701, 14801, 15701,		00601, 00801, 01201,	RECTILIGNE	14701		16201
	15801, 16201		01601, 02601, 04901,	REDIFFUSION	15701, 16201	SEL-SINUDYNE	
NEXSTECH	17501		07001, 08801, 12601,	REDSTAR	04601		14701, 15701, 16201
NIKKAI	00401, 03701, 14701,		15701, 15801, 15901,	REFLEX	15701, 16201	SELECO	02201, 03501, 15001,
	15401, 15701, 16201		16201, 16301	REGENTE	14801		15301
NIKKO	00301, 01201, 02601,		17201, 17301, 17801,	REOC	09001	SEMIVOX	02701
	16301, 17901	PHILIPS (F)	18201	REVOX	00401, 14701, 15701,	SEMP	02101
NOBLEX	14801		14701		16201	SEMUA	15401
NOBLIKO	15101	PHOENIX	14701, 15701, 16201	REVOX/STUDER	14701	SENCORA	14801
NOGAMATIC	16001	PHONOLA	00401, 14701, 15701,	REX	02201, 03501, 03701,	SENTRA	16101
NOKIA	04601, 05901, 06001,	PILOT	16201		15001, 15301	SHARP	00301, 01301, 08301,
	06901, 08101, 14801,		00301, 15701, 16201,	RFT	05201, 15301, 15701,		15401, 16301, 17901
	15901, 16101	PIONEER	16301		16201	SHEN YING	00101, 01201
NONAME	14701		01701, 02201, 02301,	RICOH	15701, 16201	SHENG CHIA	00101, 01301, 03101
NORCENT	09301, 10801		03801, 08601, 09501,	R-LINE	00401	SHINTOSHI	15701, 16201
NORDMENDE	01701, 03801, 07101,		11301, 14701, 15701,	RMB	15401	SHIVAKI	14701, 15701, 15901,
	15701, 15801, 16001,		15801, 16201, 16301,	ROADSTAR	00101, 03701, 05201,		16201
	16201	PLANTRON	17901		14801, 15701, 16201	SHOGUN	16301
NORMEREL	15701, 16201		14701, 14801, 15701,	RODEX	15701, 16201	SHOW	14801
NOVABEAM	14701	POLAROID	16201	ROSITA	14801	SIAREM	06801
NOVATRONIC	14701, 14801, 15701,	POPPY	19201, 19501, 19601	ROWA	14801	SIEMENS	00401, 02801, 14701,
	15901, 16201	PORTLAND	14801	ROYAL	14801		15401, 15701, 16201
NTC	01201		01201, 15401, 15901,	RUKOPIR	15701, 16201	SIERA	15701, 16201
O GENERAL	14801		16301, 16501, 17901	RUNCO	00201, 00301, 06501,	SIERRA	14701
OCEANIC	02201, 04601	PRANDONI PRINCE	15101	SABA	07501	SIGNATURE	18401, 18601, 18701,
OKANO	14801, 15701, 16201	PRANDONI-PRINCE	06801		01701, 02201, 03801,	SILMA	14701
OLEVIA	19701, 19801, 19901,	PRICE CLUB	16701		04201, 15801, 16001	SILVA	14801, 15701, 16201
	20001	PRIMA	17001, 17501	SACCS	03201	SILVER	15701, 16201
OLYMPIC	14801	PRINCESS	14801	SAGEM	07701	SIMPSON	17801
ONCEAS	14801	PRINZ	16101	SAISHO	00101, 03701, 06801,	SINGER	14701, 14801, 15701,
ONWA	02701, 05301	PRISM	00601, 16401		14701		16201
OPERA	14701, 15701, 16201	PROELCO	14701	SAIVOD	15701, 16201	SINUDYNE	06801, 14701, 15001,
OPTIMUS	02001, 02301, 03401,	PROFEX	00101, 04601, 14801,	SAKURA	14801		15701, 16101, 16201
	08301		14901	SALORA	02201, 04601, 06901,	SKANTIC	04501
OPTONICA	01301	PROFITRONIC	14701, 15701, 16201		15201, 16101	SKY	00401, 15701, 16201
ORBIT	14701, 15701, 16201	PROLINE	15701, 16201	SAMBERS	06801, 15101, 15201	SKYGIANT	02701
ORIENT	14801	PROSCAN	00501, 16601, 17401,	SAMPO	00101, 00301, 01201,	SKYWORTH	00401
ORION	00401, 03101, 04101,		18401, 18701		01301, 02001, 02501,	SNYDER	14701
	05801, 06801, 14701,	PROSONIC	15701, 15901, 16201		02601, 08301, 13301,	SONLAVOX	02201, 15701, 16201
	14801, 15401, 15701,	PROTEC	14701, 14801		15401, 16301, 17901,	SONIKO	15701, 16201
	16201, 16801	PROTECH	00101, 00401, 03301,	SAMSUNG	18901	SONITRON	02901
ORLINE	15701, 16201		03701, 05201, 08501,		00101, 00301, 00401,	SONNECLAIR	15701, 16201
ORMOND	15701, 16201	PROTECT	15701, 16101		00901, 01101, 01201,	SONOKO	00101, 00401, 14701,
OSAKI	03701, 05101, 15701,	PROTON	16201		02001, 02601, 03701,		14801, 15701, 16201
	15901, 16201		00101, 00301, 02601,		04701, 07001, 07401,	SONOLOR	02201, 02901
OSIO	15701, 16201		14801, 15401, 16301,		07801, 08901, 09801,	SONTEC	00401, 14701, 15701,
OSUME	15701, 16201	PROVISION	17901, 18901		10501, 10701		16201
OTF	14801	PULSAR	15701, 16201		14701, 14801, 15201,	SONY	00001, 08301, 11101,
OTTO VERSAND	00401, 04101, 06701,	PULSER	00201, 16301		15401, 15701, 16201,		11601, 12701, 12901,
	07001, 14701, 14801,	PYE	14701, 14801, 15401,		16301, 16501, 16601,		15701, 16201
	14901, 15501, 15601,		14701, 15701, 15901,		16701, 17901, 18101,	SOUND & VISION	
	15701, 15801, 16101,		16101, 16201		18901, 20301		

	15701, 15901, 16201	08001, 08901, 15701, 15801, 16001, 16201	15901	08005, 08105, 08305, 08505
SOUNDESIGN	02601, 02701, 15401, 16301, 17801, 17901	TELEFUSION 15701, 16201	VIDIKRON 00801	CONCEPT 08705
SOUNDMASTER	14801	TELEGAZI 15701, 16201	VIDION 14801	CONIA 05805
SOUNDWAVE	00401, 05201, 15701, 16201	TELEMEISTER 04101, 15701, 16201	VIDTECH 02601, 16301, 16501, 17901	CROWN 06005
SOWA	00601, 00901, 01201, 02101, 02601	TELEOPTA 14801	VIEWSONIC 13301	CURTIS INTERNATIONAL 08505
SPECTRICIAN	14701, 15401	TELERENT 18401, 18601, 18701	VISION 04101, 14801, 15701, 16201	CYBERHOME 02405
SQUAREVIEW	02501, 18201	TELESONIC 15701, 16201	VISON 14701	CYTRON 06005
SSS	02701, 16301	TELESTAR 14801, 15701, 16201	VIZIO 18801	DAEWOO 03205, 03305
STANDARD	00101, 14801, 15701, 15901, 16201	TELETECH 00101, 14801, 15701, 16201	VORTEC 14701, 15701, 16201	DANSAI 03205
STARLITE	02701, 14801, 15701, 16201	TELETON 16101	VOXSON 02201, 14701, 15701, 16201	DECCA 03205
STARLUX	14801	TELEVIEW 15701, 16201	WALTHAM 04501, 15701, 16201	DENON 00005
STERN	02201, 03501, 15001, 15301	TEMPEST 14801, 15701, 16201	WARDS 00301, 00801, 02601, 11301, 14701, 16301, 16501, 17301, 17801, 17901, 18401, 18601, 18701, 19101	DIAMOND 03105, 06005
STRATO	15701, 16201	TENNESSEE 15701, 16201	WATSON 00401, 04101, 14701, 14801, 15701, 16201	DIGITREX 02105, 07605
SUNIC LINE	15701, 16201	TENSAI 04101, 14701, 14801, 15701, 15901, 16201	WATT RADIO 16101	Digitrex 05805
SUNKAI	15701, 16201	TENSON 14801	WAYCON 02101	DISNEY 08405
SUNSTAR	14801, 15701, 16201	TERA 00301, 16301	WEGA 15701, 16201	DUAL 05605, 06005
SUNWOOD	14701, 14801, 15701, 16201	TESLA 14701	WEGAVOX 14701, 14801, 15701, 16201	DURABRAND 07405
SUPERSCAN	17201	TESLA ORAVA 14701	WESTON 15701, 16201	DVD2000 00205
SUPERTEC	14801	TEVION 15701, 16201	WHARFEDALE 15701, 16201	ELTA 05905, 07205, 07505
SUPERTECH	14801, 15701, 16201	TEXET 15901	WHITE WESTINGHOUSE 00401, 04101, 05801, 07901, 14701, 15701, 16201, 17701	EMERSON 01205, 07405, 07805, 08405, 08605
SUPRA	14801, 15901, 16301	THOMAS 14701, 14801, 15401	WINSTON 14701, 14801	ENTERPRISE 01205
SUPREMACY	15401	THOMSON 01701, 03801, 07101, 08001, 12501, 15701, 15801, 16001, 16101, 16201	WINTERITZ 14801	FERGUSON 06005
SUPREME	00001	THORN 00401, 01401, 04601, 06701, 14701, 15101, 15701, 15801, 15901, 16201	WORLDVIEW 14701, 14801	FISHER 02005
SUTRON	14801	THORN-FERGUSON 14701, 15001	XRYPTON 15701, 16201	FUNAI 07805, 08405
SYC LINE	14801	TMK 02601, 16301, 17901	YAMAHA 00301, 01801, 08301, 10001, 11001, 13501, 13601, 13701, 13801, 14001, 14101, 14201, 16301, 16501, 17901	GE 00305, 02605, 08705
SYLVANIA	00301, 00801, 02501, 14701, 16301, 16801, 17201, 17701, 17801, 17901, 18201	TNCI 00201	YAMAJI 03609	GO VIDEO 02505
SYMPHONIC	02501, 02701, 15401, 17201, 17701, 18201	TOBO 14801	YAMISHI 15701, 16201	GOLDSTAR 02905, 07405
SYNCO	00001, 00901, 01201, 01301, 02601, 05601	TOKAI 14701, 15701, 15901, 16201	YAPSHE 03401	GOODMANS 05905, 06005
SYNTAX	19701	TOSHIBA 00901, 02001, 02101, 06601, 07801, 08301, 10901, 12101, 12301, 13001, 13201, 16701, 18101, 18901	YOKAN 15701, 16201	GRADIENTE 01805
SYSLINE	00401, 15701, 16201	TOSONIC 15401	YOKO 00401, 03701, 14701, 14801, 15701, 16201	GREENHILL 02605, 08705
T + A	05501	TOTEVISION 15401	YORK 00201, 01201, 02601, 05801, 14701, 16301, 16801, 17701, 17901, 18601, 19301	GRUNDIG 00705, 06005
TACICO	00101, 01201, 02601	TOWADA 16101	ZENITH 02105, 02605, 03005, 03505, 03605, 03705, 04105, 05805	HARMAN KARDON 08205
TAI YI	00101	TRANS CONTINENS 15701, 16201	AIWA 05605, 05705, 07105	HARMAN/KARDON 05505
TANDBERG	15001	TRANSONIC 15701, 16201	AKAI 07505	HELIOS 09205
TANDY	01301, 02201	TREVI 14801	ALBA 02605	HITACHI 01105, 01905
TASHIKO	01201, 08301	TRIAD 14701, 15701, 16201	AMSTRAD 02305	HITEKER 02105, 05805, 07605
TATUNG	00101, 00401, 00601, 00801, 00901, 02001, 02101, 06801, 14701, 15701, 16201, 18801	TRILUX 14701	APEX 07605, 08705	INITIAL 08705
TCM	10301	TRIUMPH 06801, 15701, 16201	APEX DIGITAL 02105, 02605, 03005, 03505, 03605, 03705, 04105, 05805	INSIGNIA 07405, 07705, 07805, 08705, 08805
TEAC	00101, 00401, 03701, 05101, 05201, 05701, 08501, 11401, 15701, 16101, 16201	TRIVISION 14801	AUDIOVOX 08805	JBL 08205
TEAK	14801	TUNTEX 00101, 00301, 01201	AXION 08805	JVC 00905, 01305
TEC	03301, 14801, 15001, 15701, 16201	TVS 05801	BBK 06105, 06205, 06305, 06405, 06505, 06605, 06705, 06805, 06905, 07005	KENWOOD 00005, 00605
TECH LINE	15701, 16201	TVTEXT 95 16201	BLAUPUNKT 02605	KLH 02605, 08705
TECHNEMA	04101	UHER 04101, 14701, 15701, 15901, 16201	BLAUPUNKT 08705	KONKA 07705
TECHNICS	00601, 03401, 08301, 14701, 16401	ULTRAVOX 15701, 15901, 16201	BLUE PARADE 01005	KOSS 01805
TECHNILAND	14701	UMA 14701	BLUE SKY 05805	KXD 07305
TECHNISAT	15701, 16201	UNIC LINE 15701, 16101, 16201	BRANDT 06005	LENCO 06005
TECHNOL	14801	UNIMOR 14701	BUSH 02305, 05905	LENQXX 05905, 07505
TECHWOOD	00601, 16301, 16401, 17901	UNITED 15701, 16201	CENTREX 02105	LG 02905, 07405
TECNISON	14801	UNIVERSAL 17301, 19101	CENTRIOS 08805	LIFETEC 06005
TECO	00101, 00601, 01201, 01301, 02601, 03701, 08401	UNIVERSUM 00401, 01401, 01501, 03701, 04401, 04701, 06401, 14701, 14801, 15701, 16101, 16201	CINEVISION 07405	LIMIT 03105
TEDELEX	14801, 15701, 16201	UNIVOX 15701, 16201	CLASSIC 05605	LIQUIDVIDEO 08805
TEKNANT	14701, 14801	URANYA 14801	CLATRONIC 03405	MAGNAVOX 00105, 02205, 07805
TEKNIKA	00801, 00901, 01201, 01901, 02701, 15401, 16301, 16501, 16701, 17801, 17901, 18101, 18401, 18601, 18701, 18901,	VANGUARD 14801	COBY 07305, 07605, 07905,	MARANTZ 00705, 07405
TEKON	14801	VECO 14801		MATSUI 06005
TELEAVIA	15801, 16001	VECTOR RESEARCH 00301		MBO 05905
TELECOR	15701, 16201	VESTEL 00401, 14701, 15701, 16201		MEDION 06005
TELEFAC	14801	VEXA 14701, 14801, 15701, 16201		MEMOREX 03805
TELEFUNKEN	01701, 03601, 04201,	VICTOR 00701, 03401, 08301, 08401		MICO 02705
		VIDEO SYSTEM 14701, 15701, 16201		MICROSOFT 00305
		VIDEOSAT 03301		MINTEK 02605, 08705
		VIDEOTECHNIC		MITSUBISHI 00205
				MUSTEK 02805, 05605
				Mx ONDA 06005
				NAD 07405
				NESA 02605, 08705
				NORCENT 08005, 08505
				ONKYO 00105
				OPPO 08905, 09005, 09105
				ORITRON 01805, 06005
				PALSONIC 02105, 05805
				PANASONIC 00005, 01605, 04205
				PHILIPS 00105, 00705, 01705, 03905, 07805, 08405
				PIONEER 00405, 01005, 01505, 01605
				POLK AUDIO 00705
				PORTLAND 07505
				PROLINE 06005
				PROSCAN 00305
				PROSONIC 08005
				QWESTAR 01805

RCA	00305, 01005, 02605, 08705		02102				LOEWE OPTA	04602
RIO	07405	AMERICAN HIGH		FISHER	01002, 01602, 05402, 06102		LOGIK	01402, 02002
ROADSTAR	05905		00302, 06402	FUJI	00202, 00302, 06402		LUXOR	00802, 01102, 01602, 04902
ROTEL	01305	AMSTRAD	00002, 04702	FUJITSU	00002, 00902		LXI	00402, 05702, 05902
SABA	06005	ANAM	00402, 01902, 02002, 02102, 02902	FUNAI	00002, 04702, 05902, 06302		M ELECTRONIC	
SAMSUNG	01105, 04505	ANAM NATIONAL		GARRARD	00002, 06302			00002, 04702
SANYO	02005		01902, 04502	GE	00302, 01202, 02002, 03502, 03702, 03802, 05502, 05602, 06402		MAGNASONIC	
SCHNEIDER	06005	ANITECH	01402	GEC	01502			04302
SCOTT	05805, 06005	ASA	00402, 01502	GENERAL	00902		MAGNAVOX	00002, 00302, 00502, 01502, 05602, 05902, 06402
SEARS	07805	ASHA	02002, 05502	GO VIDEO	02802		MAGNIN	02002, 05502
SHANGHAI	05805	ASUKA	00402	GOLDHAND	01402		MANESTH	00902, 01402
SHARP	01405	AUDIO DYNAMICS		GOLDSTAR	00402, 01802, 02902, 04202, 05402, 05702, 05902		MARANTZ	00302, 01502, 04602, 05402, 05802, 06002, 06102, 06402
SHERWOOD	03205		05402, 05802, 06002	GOODMANS	00002, 00402, 01402, 02102, 04702		MARTA	00402, 05702
SHINCO	08705	AUDIOVOX	00402, 02102, 05702				MATSUI	02602, 02702, 05002
SHINSONIC	00505, 08705	BAIRD	00002, 00602, 01602, 04902	GO-VIDEO	05502		MATSUSHITA	00302, 06402
SINGER	05905	BASIC LINE	01402, 02102	GRADIENTE	00002, 06302		MEDION	02602
SKYMASTER	05605	BEAUMARK	02002, 05502	GRAETZ	00602, 01602, 02002		MEI	00302, 06402
SLIM ART	03305	BELL & HOWELL		GRANADA	01502, 01602		MEMOREX	00002, 00302, 00402, 00502, 01002, 01102, 01602, 02002, 02202, 02602, 04202, 04702, 05502, 05702, 05902, 06102, 06302
SM ELECTRONIC			01602, 06102	GRANADA (UK)	04602, 04802			06402
	02805	BLAUPUNKT	01902, 04602, 04802, 05102, 05302	GRANDIN	00002, 00402, 01402		MEMPHIS	01402
SM ELECTRONICS				GRUNDIG	01402, 01502, 01902, 02502, 04602		METZ	00402, 02502, 04502, 04602, 05202
	05605, 05905	BRANDT	02402	HANSEATIC	00402		MGA	00802, 02002
SONY	00505, 04005	BRANDT ELECTRONIC		HARLEY DAVIDSON	00002, 06302		MGN TECHNOLOGY	02002, 05502
STANDARD	06005		00602	HARMAN KARDON	05402		MINERVA	04602
SUPERSCAN	07805			HARWOOD	01402		MINOLTA	00702, 06202, 06502
SV2000	07805	BROKSONIC	01702, 02602, 04402	HCM	01402		MITSUBISHI	00602, 00802, 01302, 01502, 03502, 05802, 06002, 06202
SVA	05805	BUSH	01402, 02102, 02702	HEADQUARTER			MOTOROLA	00302, 01102, 06402
SYLVANIA	02205, 07805, 08405	CALIX	00402, 05702	HINARI	01402, 02002, 02702, 05002		MTC	00002, 02002, 04702, 05502, 05902, 06302
SYMPHONIC	07805, 08405, 08605	CANDLE	05402, 05502, 05702	HI-Q	01002		MULTITECH	00002, 01402, 04702, 05502, 05902, 06302
TATUNG	03205	CANNON	05602, 06402	HITACHI	00002, 00402, 00602, 00702, 02002, 04702, 06202		MURPHY	00002, 04702
TEAC	01005, 02605	CANON	00302	HUGHES NETWORK SYSTEMS	00702		MYRYAD	01502
TECHNICS	00005	CARVER	01502		00702		NAD	01602
TENSAI	05905, 06005	CCE	01402, 02102	HYPSON	01402		NATIONAL	01902, 04802
TEVION	06005	CGE	00002, 04702	IMPERIAL	00002, 04702		NEC	00302, 00402, 00602, 01102, 01302, 01602, 05402, 05802, 06002, 06102, 06602
THETA DIGITAL		CIMLINE	01402	INSIGNIA	05702		NECKERMANN	
	01005	CINERAL	02102	INSTANT REPLAY				01502, 04602, 05002
THOMSON	00305	CINEVISION	05702	INTEQ	05702		NESCO	01402
TOSHIBA	00105, 04605	CITIZEN	00402, 02102, 04302, 05402, 05502, 05702	INTERFUNK	01502		NEWAVE	00402
URBAN CONCEPTS		COLORTYME	05402	ITT	00602, 01602, 02002, 04902		NIKKO	00402, 05702
	00105	COLT	01402	ITT-NOKIA	04902		NOBLEX	02002, 05502
VOXSON	05605	COMBITECH	02702	ITV	00402, 02102		NOBLIKO	04602
WHITE WESTINGHOUSE		CRAIG	00402, 01002, 01402, 02002, 05502, 05702	JC PENNEY	05402, 05502, 05602, 05702, 05802, 06002, 06102, 06202, 06402, 06502, 06602, 06702		NOKIA	00602, 01602, 02002, 04902
	08405	CROWN	01402, 02102				NORDMENDE	
XBOX	00305	CURTIS MATHES		JCL	06402			00602, 02402
YAMAHA	00005, 00705, 00805, 04305, 04405		00302, 00602, 01202, 03702, 05402, 05502, 05602, 05902, 06402	JENSEN	00602, 06202, 06602		OCEANIC	00002, 00602
	05605	CYBERNEX	02002, 05502	JVC	00602, 00902, 01302, 05402, 05802, 06002, 06102, 06602		OKANO	02302, 02602
ZENITH	00105, 01205, 02905, 07405	CYRUS	01502	KAISUI	01402		OLYMPUS	00302, 01902, 04802, 06402
ZEUS	03305	DAEWOO	00902, 01602, 02102, 03402, 04302, 06302	KEC	00402, 02102		OPTIMUS	00402, 01102, 01602, 02802, 05502, 05702
		DANSAI	01402	KENDO	04902		OPTONICA	05502
		DBX	05402, 05802, 06002	KENWOOD	00602, 01302, 05402, 05802, 06002, 06102, 06602		ORION	01702, 02602, 02702, 04402, 05002
		DE GRAAF	00702	KLH	01402		OSAKA	04702
		DECCA	00002, 01502, 04702	KODAK	00302, 00402, 05702, 06402		OSAKI	00002, 00402, 01402, 04702
		DEGRAAF	04702	KOLIN	00602, 00802		OTTO VERSAND	
		DENON	00702	KORPEL	01402			01502
		DIMENSIA	05602	LENCO	02102		PALLADIUM	00402, 00602, 01402
		DUAL	00602	LEYCO	01402		PANASONIC	00302, 01802, 01902, 03102, 03702, 04502, 04802, 05102, 05302, 05602, 06402
		DUMONT	00002, 01502, 01602, 04702	LG	00402, 00702, 00902, 02902, 05902		PATHE MARCONI	
		DURABRAND	05702	LLOYD	04702, 05902, 06302			00602
		DYNATECH	00002, 04702, 05902, 06302	LLOYD'S	00002		PENNEY	00302, 00402, 00702, 02002, 03702, 04202
		ELCATECH	01402	LOEWE	00402, 01502, 04502			
		ELECTROHOME						
			00402, 05702					
		ELECTROPHONIC						
			00402, 05702					
		EMEREX	00102					
		EMERSON	00002, 00302, 00402, 00802, 00902, 01702, 02002, 02102, 04302, 04402, 04702, 05002, 05502, 05702, 05902, 06102, 06302, 06402					
		ESC	02002, 02102					
		FERGUSON	00602, 02402					
		FIDELITY	00002, 04702					
		FINLANDIA	01502, 01602					
		FINLUX	00002, 00702, 01502, 01602, 04702, 04802, 04902					
		FIRSTLINE	00402, 00802, 00902,					

PENTAX	00702, 05402, 06202, 06502	SONIC BLUE	03002, 03102	ADELPHIA	04503	TS	00103
PERDIO	00002, 04702	SONTEC	00402	ALLEGRO	02903, 03403	TV86	03603
PHILCO	00302, 05602, 06402	SONY	00002, 00102, 00202, 00302, 03302, 04102, 04702	AMERICAST	02003	UNIKA	03703, 03803, 04303
PHILIPS	00302, 01502, 03202, 03902, 04002, 04602, 06402	STS	00702, 06202, 06402, 06502	ANTRONIX	03703, 03803	UNITED CABLE	00103
PHONOLA	01502	SUNKAI	02602	ARCHER	03703, 03803, 04003, 04303	UNIVERSAL	02903, 03703, 03803, 04003, 04303, 04603
PILOT	00402, 05702	SUNSTAR	00002, 04702	AT&T	04503	VIEWSTAR	03103, 03203, 03603, 04103
PIONEER	00702, 01302, 01502, 05802, 06002, 06202, 06702	SUNTRONIC	00002	BELL SOUTH	02003	VERIZON FIOS	05003, 05103
POLK AUDIO	01502	SYLVANIA	00002, 00302, 00802, 01502, 04702, 05602, 05902, 06302, 06402	BIRMINGHAM CABLE COMMUNICATIONS	00803	ZENITH	00003, 01503, 02003, 03403, 04303
PROFITRONIC	02002	SYMPHONIC	00002, 04702, 05902, 06302	BRITISH TELECOM	00103		
PROLINE	00002, 04702	TANDBERG	05002, 05202	CABLETENNA	03703		
PROSCAN	01202, 03802, 05602	TANDY	00002, 01602, 05902, 06102	CABLEVIEW	03703		
PROTEC	01402	TASHIKO	00002, 00402, 04702, 05702	CENTURY	04303		
PULSAR	00502	TATUNG	00002, 00602, 00902, 01302, 01502, 04702, 06602	CITIZEN	04303		
PYE	01502	TEAC	00002, 00602, 02102, 02202, 03402, 04702, 05902, 06302, 06602	COGECO	04503		
QUARTER	06102	TECHNICS	00302, 01902, 04802, 06402	COMCAST	04503		
QUARTZ	06102	TECO	00302, 00402, 00602, 01102	COMTRONICS	03103		
QUASAR	00302, 03702, 05602, 06402	TEKNIKA	00002, 00302, 00402, 04702, 05702, 05902, 06302, 06402	CONTEC	03503		
QUELLE	01502, 04602, 04802, 05002	TELEAVIA	00602, 02402	DAERYUNG	00203, 01403, 01903		
RADIO SHACK	05502, 05602, 05702, 05902, 06102, 06302, 06402	TELEFUNKEN	00602	DIRECTOR	01303		
RADIOLA	01502	TENOSAL	01402	FILMNET	01203		
RADIO SHACK	00002	TENSAI	00002	GARRARD	04303		
RADIX	00402, 05702	THOMAS	00002	GC ELECTRONICS	03803		
RANDEX	00402, 05702	THOMSON	00602, 01202, 01302, 02402	GENERAL INSTRUMENT	00103, 00803, 01303, 01703		
RCA	00302, 00702, 01202, 02002, 03502, 03702, 03802, 05502, 05602, 05702, 06202, 06402, 06502	TIVO	03202, 03302	GENERAL INSTRUMENT (GI)	02803, 04503, 04703, 04803		
REALISTIC	00002, 00302, 00402, 01002, 01102, 01602, 04702, 05502, 05602, 05702, 05902, 06102, 06302, 06402	TMK	02002, 05002, 05502	GOLDSTAR	00503		
REOC	02602	TOSHIBA	00602, 00802, 00902, 01302, 01502, 03602, 06202	HAMLIN	00303, 00703		
REPLAYTV	03002, 03102	TOTEVISION	00402, 02002, 05502, 05702	HITACHI	04703		
REX	00602	UHER	02002	JASCO	04303		
RIO	05702	UNITECH	02002, 05502	JERROLD	00103, 00803, 01303, 01703, 02803, 04203, 04703		
ROADSTAR	00402, 01402, 02002, 02102	UNIVERSUM	00002, 00402, 01502, 02002	LG	00503		
RUNCO	00502	VECTOR	00902	MAGNAVOX	03203		
SABA	00602, 02402	VECTOR RESEARCH	05402, 05802, 06002	MEMOREX	00003		
SAISHO	05002	VICTOR	00602, 01302, 05802, 06002	MNET	01203		
SAIORA	00802	VIDEO CONCEPTS	00902, 05402, 05802, 06002	MOTOROLA	00803, 01303, 01703, 02303, 02803, 04503, 04703, 04803		
SAMPO	00402, 01102	VIDEOMAGIC	00402	MOVIE TIME	03603		
SAMSUNG	00902, 02002, 02802, 05502, 06202	VIDEOSONIC	02002, 05502	NOKIA	04903		
SANKY	00502, 01102	VILLAIN	00002	NOOS	01803		
SANSUI	00002, 00602, 01302, 04402, 05802, 06002, 06602	WARDS	00002, 00302, 00702, 01002, 01102, 01202, 01402, 01502, 02002, 05502, 05602, 05702, 05902, 06202, 06302, 06402, 06502	NSC	03603		
SANYO	01002, 01602, 02002, 05502, 06102	WHITE WESTINGHOUSE	01402, 05902	OAK	03503, 03903		
SAVILLE	02702	XR-1000	00002, 00302, 01402, 06302, 06402	PACE	00603, 02203		
SBR	01502	YAMAHA	00602, 05402, 05802, 06002, 06602	PANASONIC	00003, 00203, 00403, 02703		
SCHAUB LORENZ	00002, 00602, 01602	YAMISHI	01402	PARAGON	00003		
SCHNEIDER	00002, 01402, 01502, 04702	YOKAN	01402	PHILIPS	01003, 01103, 03203, 04303		
SCOTT	00802, 00902, 01702	YOKO	02002	PHILIPS-MAGNAVOX	03003, 03303		
SEARS	00002, 00302, 00402, 00702, 01002, 01602, 04202, 05702, 06102, 06202, 06402, 06502, 06702	ZENITH	00002, 00202, 00502, 04402, 05702, 05802, 05902, 06002	PIONEER	00503, 01603, 01903		
SEG	02002			PULSAR	00003		
SEI	01502			PVP STEREO VISUAL MATRIX	00103		
SELECO	00602			QUASAR	00003		
SEMP	00902			RADIO SHACK	03003, 03303, 03403		
SHARP	01102, 03502, 05902			RCA	02403, 02503, 04303		
SHINTOM	01402, 01602, 06202			REALISTIC	03803		
SHOGUN	05502			REGAL	00703, 00903		
SIEMENS	00402, 01502, 01602, 04602			REMBRANDT	04703		
SIGNATURE	05902			RUNCO	00003		
SILVA	00402			SAGEM	01803		
SINGER	00902, 01402, 06402			SAMSUNG	00003, 00503		
SINUDYNE	01502, 05202			SCIENTIFIC ATLANTA	00203, 01403, 01903		
				SHAW	04503		
				SIGNATURE	04703		
				SONY	02103		
				STARCOM	00103		
				SUPERCABLE	00803		
				TANDY	04103		
				TELE+1	01203		
				TOCOM	02803, 04203, 04403, 04803		
				TORX	00103		
				TOSHIBA	00003		
				TRANS PX	00803		

CABLE TV TUNER

ABC	00103, 00203, 02803, 04703
-----	----------------------------

SATELLITE TUNER

@SAT	06404
ABSAT	00104
ALBA	01404
ALPHASTAR	02504
AMSTRAD	03004
ASTON	00304, 05004
ASTRO	00604
ATSAT	06404
AVALON	01304
BLAUPUNKT	00604
BRITISH SKY BROADCASTING	03004, 05204
CANAL DIGITAL	03104
CANAL SATELLITE	03104
CANAL+	03104
CHAPARRAL	00804
CITYCOM	05304
COMAG	09004, 09104, 09704, 10104, 10304, 11604, 11704, 11804, 12004
CONNEXIONS	01304
CROSSDIGITAL	04604
CYRUS	00704
DAERYUNG	01304
DAEWOO	06304
D-BOX	02104, 04904
DIGENIUS	01104
DIRECTV	00904, 01204, 01504, 01704, 02204, 02304, 02804, 04104, 04604, 05104, 06904
DISH NETWORK SYSTEM	02604, 03704
DISHPRO	02604, 03704
DISTRATEL	00004
DMT	04004
DNT	00704, 01304
DREAM MULTIMEDIA	05804
DREAMBOX	08604, 08704, 09604, 09804, 09904, 10004, 10404, 10604
ECHOSTAR	00504, 01304, 01604, 02604, 03104, 03604, 03704, 04304
ENGEL	03804
EXPRESSVU	02604
FINLUX	01404
FOXTEL	07004, 07104, 07204, 07304, 07404
FRACARRO	03604
FTE	03404
FUBA	01304
GALAXIS	03404, 04704
GE	01504
GENERAL INSTRUMENT	03504, 08204, 08304
GOI	02604
GOLD BOX	03104
GRUNDIG	00604, 03004
HIRSCHMANN	00604, 01304
HITACHI	01404, 02804
HOUSTON	08504, 10704, 10804, 11004, 11104, 11304, 11904
HTS	02604
HUGHES NETWORK SYSTEM	

	02304, 05104, 06904	WISI	00604, 01304, 01404
HUMAX	03404, 05304	XSAT	00104
INVIDEO	03604	ZEHNDER	04004
JVC	02604	ZENITH	03304
KATHREIN	00104, 00604, 00704, 01004, 01804, 05604		
KREISELMEYER	00604		
LABGEAR	06304		
LOGIX	03804		
LORENZEN	01104		
MAGNAVOX	02004, 02204		
MANHATTAN	01404, 03804, 04204		
MARANTZ	00704		
MEDIASAT	03104		
MEMOREX	02204		
METRONIC	00004		
MITSUBISHI	02304		
MOTOROLA	03504		
MYRYAD	00704		
NEXT LEVEL	03504		
NOKIA	01404, 02104, 02404, 04904, 05704, 06804		
OCTALTV	03704		
ORBITECH	04504		
PACE	01404, 03004, 05204, 06604		
PANASONIC	00904, 01904, 03004, 06504		
PANDA	01404		
PAYSAT	02204		
PHILIPS	00204, 00704, 01404, 02004, 02204, 02304, 03104, 04104, 05104, 06904		
PIONEER	03104		
PRIMESTAR	08204, 08304		
PROMAX	01404		
PROSCAN	01204, 01504		
RADIOLA	00704		
RADIOSHACK	03504		
RADIX	01304		
RCA	00404, 01204, 01504, 03204		
RFT	00704		
SABRE	01404		
SAGEM	02904, 04804, 05904		
SAMSUNG	03804, 04604, 06004, 06204		
SAT CONTROL	06404		
SATSTATION	04204		
SCHWAIGER	04704		
SEEMANN	01304		
SIEMENS	00604		
SKY	03004, 03304, 05204, 12104, 12204, 12304		
SKY HD	12404		
SKY MASTER	07504, 07604, 07704, 07804, 07904, 08004		
SKY+ (SKY Digital +)	08104		
STARCHOICE	08204, 08304		
SM ELECTRONIC	05404		
SMART	08804, 08904, 09204, 09304, 09404, 09504, 10204, 10304, 10504, 10904, 11204, 11404, 11504		
SONY	01704, 03004, 06704		
STAR CHOICE	03504		
STRONG	06404		
TANTEC	01404		
TECHNISAT	04404, 04504		
TELESTAR	04504		
THOMSON	01404, 03104, 03904, 06104		
Tivo	08404		
TOPFIELD	05504		
TOSHIBA	02304, 02704, 06904		
TPS	02904, 05904		
ULTIMATETV	01204, 01704		
UNIDEN	02004, 02204		
UNIVERSUM	00604		
VENTANA	00704		

Index

■ Numerics

2-channel source surround decode	24
3Beam, beam mode	24
5.1ch beam mode	23
5.1-channel source 7.1-channel decode	24
5Beam, beam mode	23
5BeamPlus2, beam mode	24
7.1ch beam mode	24

■ A

AC IN jack	8
AC ON STANDBY, ADVANCED SETUP	41
Activating SIRIUS Satellite Radio subscription	27
Adaptive DRC, Dynamic range control	37
Adaptive dynamic range control, Dynamic range control	37
Adjusting volume level automatically UniVolume	31
ADVANCED SETUP	40
Adventure, CINEMA DSP program	23
All Channel Search mode, SIRIUS Satellite Radio	27
Attaching stands, installation	10
Audio / video component connection	13
AUDIO DELAY, SOUND SET MENU	36
Audio delay, SOUND SET MENU	36
AUDIO IN jacks	8
Audio Sampling, input signal information	32
AUDIO SELECT, HDMI setup	39
Audio select, HDMI setup	39
AUTO DIMMER, Front panel display setup	39
Auto dimmer, Front panel display setup	39
AUTO LIP SYNC, Audio delay	36
Auto Preset, option menu	32
AUTO SETUP	15
AUTO SETUP, Error messages	18
Automatic lipsync, Audio delay	36
Automatic preset, option menu	32
AUX1/2, Audio delay	36
AV button, Remote control	9
AV key, controlling external component	42

■ B

BASS EXT indicator	7
BASS EXTENSION, SOUND SET MENU	37
Bass extension, SOUND SET MENU	37
BASS OUT, Subwoofer settings	36
Bass out, Subwoofer settings	36
Bass sound output redirection, Sound output	38
BEAM ADJUSTMENT, MANUAL SETUP	35
Beam adjustment, MANUAL SETUP	35
Beam mode, 5.1ch	23
Beam mode, 7.1ch	24
Blu-ray disc player connection	12

■ C

cardboard microphone stand assemble	16
Category Search mode, SIRIUS Satellite Radio	28
CENTER PRE OUT jack	41
Center SP Size, Sound output	38
Center speaker size for PRE OUT, Sound output	38
CH key, controlling external component	42
CH keys, Remote control	9
CHANNEL LEVEL, SOUND SET MENU	37
Channel level, SOUND SET MENU	37
CINEMA DSP indicator	7
CINEMA DSP program keys, Remote control	9
CINEMA DSP programs	22
Clear preset station, option menu	32
Clear Preset, option menu	32
CODE SET key, controlling external component	42
CODE SET key, Remote control	9
Concert Hall, CINEMA DSP program	23
Configuring input source settings	32
Connecting audio / video components	13
Connecting Blu-ray disc player	12

Connecting external components	12
Connecting FM antenna	13
Connecting SiriusConnect tuner	26
Connecting subwoofer	14
Connecting TV	12
Connections	12
Controlling external component	42
Corner installation, placement	11
CROSS OVER, Subwoofer settings	36
Crossover, Subwoofer settings	36
Cursor keys, controlling external component	42
Cursor keys, Remote control	9
Customizing this unit	33

■ D

Decoder indicators	7, 21
Decoder Mode, option menu	32
Decoder mode, option menu	32
DEMO MODE, ADVANCED SETUP	41
Demo mode, ADVANCED SETUP	41
DIGITAL IN jacks	8
Direct number access, SIRIUS Satellite Radio	28
Display language change	15
DISPLAY MENU	39
Displaying input signal information	32
DISTANCE, Subwoofer settings	36
Distance, Subwoofer settings	36
Dolby Digital Plus, glossary	47
Dolby Digital Surround EX, glossary	47
Dolby Digital, glossary	47
Dolby Pro Logic II, glossary	47
Dolby Pro Logic IIX, glossary	47
Dolby Surround, glossary	47
Dolby TrueHD, glossary	47
Dolby/DTS DRC, Dynamic range control	37
Drama, CINEMA DSP program	23
DRC:Dynamic Range CTRL, SOUND SET MENU	37
DTS 96/24, glossary	47
DTS Digital Surround, glossary	47
DTS Neo:6, glossary	47
DTS-HD High Resolution Audio, glossary	47
DTS-HD Master Audio, glossary	47
Dynamic range control, SOUND SET MENU	37
Dynamic range of Dolby Digital and DTS signals, Dynamic range control	37

■ E

ENHANCER indicator	7
ENTER key, controlling external component	42
ENTER key, Remote control	9
ENTERTAINMENT, CINEMA DSP program	23
Entertainment, CINEMA DSP program	23
Error messages, AUTO SETUP	18
External amplifier using	41
External component connection	12
External component operation	42
External component operation keys, controlling external component	42
External component operation keys, Remote control	9

■ F

F.DISPLAY SETUP, DISPLAY MENU	39
F.PANEL KEY, ADVANCED SETUP	40
FACTORY PRESET, ADVANCED SETUP	41
Factory preset, ADVANCED SETUP	41
FM antenna connection	13
FM ANTENNA jack	8
FM Mode, option menu	32
FM receiving mode, option menu	32
FM tuner, troubleshooting	44
FM tuning	25
Frequency tuning, FM tuning	25
Front panel	6

Front panel display	6, 7
Front panel display setup, DISPLAY MENU	39
Front panel input key, ADVANCED SETUP	40
Front panel key, ADVANCED SETUP	40
FRONT PRE OUT jacks	41
Front SP Size, Sound output	38
Front speaker size for PRE OUT, Sound output	38

■ G

Game, CINEMA DSP program	23
General, troubleshooting	43
Group ID, Wireless setup	39

■ H

HDMI control function	31
HDMI CONTROL, INPUT MENU	39
HDMI control, INPUT MENU	39
HDMI indicator	7
HDMI jacks	8
HDMI SETUP, INPUT MENU	39
HDMI setup, INPUT MENU	39
HDMI, Audio delay	36
HDMI, glossary	48

■ I

IMAGE LOCATION, MANUAL SETUP	35
Image location, MANUAL SETUP	35
INFO key, Remote control	9
INPUT ASSIGNMENT, INPUT MENU	38
Input assignment, INPUT MENU	38
Input channel indicators	7, 22
INPUT key, Front panel	6
INPUT MENU	38
INPUT RENAME, INPUT MENU	38
Input rename, INPUT MENU	38
Input selector keys, Remote control	9
Input signal information display	32
Input source setting configuration	32
Installing batteries, remote control	14
IntelliBeam	15
INTELLIBEAM key, Remote control	9
INTELLIBEAM MIC jack	6
iPod Interlock, Wireless setup	39
iPod interlock, Wireless setup	39
iPod, troubleshooting	45
iPod/iPhone playback	30
IR IN terminal	8
IR-OUT terminal	8

■ J

Jazz Club, CINEMA DSP program	23
-------------------------------------	----

■ L

LANGUAGE SETUP, DISPLAY MENU	40
Language setup, DISPLAY MENU	40
LFE 0.1-channel, glossary	48
LFE Level, Sound output	38
LFE LEVEL, Subwoofer settings	36
Linear PCM, glossary	48
Loading settings	19
Low-frequency effect level for PRE OUT, Sound output	38
Low-frequency effect level, Subwoofer settings	36

■ M

MANUAL SETUP	34
MAX VOLUME SET, ADVANCED SETUP	40
Maximum volume setting, ADVANCED SETUP	40
Mch Stereo, CINEMA DSP program	23
MEMORY PROTECT, ADVANCED SETUP	41
Memory protect, ADVANCED SETUP	41
MENU key, controlling external component	42
MENU key, Remote control	9
MOVIE, CINEMA DSP program	23

Movie, CINEMA DSP program	23	SIRIUS PIN, ADVANCED SETUP	41	VOLUME +/- keys, Front panel	6
Multi-information display	7	SIRIUS Satellite Radio channel registration	28	VOLUME +/- keys, Remote control	9
MUSIC ENHANCER, SOUND SET MENU	37	SIRIUS Satellite Radio PIN, ADVANCED SETUP	41	Volume level at power-on, ADVANCED SETUP	40
Music Video, CINEMA DSP program	23	SIRIUS Satellite Radio subscription activation	27	Volume level indicator	7
MUSIC, CINEMA DSP program	23	SIRIUS Satellite Radio, troubleshooting	44	Volume Trim, option menu	32
Music, CINEMA DSP program	23	SIRIUS Satellite Radio™ tuning	26	Volume trim, option menu	32
MUTE key, Remote control	9	SiriusConnect tuner connection	26		
Muting audio output	21	SLEEP indicator	7	W	
		SLEEP key, Remote control	9	wall mount bracket using, installation	10
N		Sleep timer	31	Wireless Function, Wireless setup	39
Numeric keys, controlling external component	42	SOUND BEAM OUT CONFIG, SOUND OUT MENU	37	Wireless function, Wireless setup	39
Numeric keys, Remote control	9	Sound beam output configuration, SOUND OUT MENU	37	Wireless indicators	7
		SOUND OUT MENU	37	WIRELESS SETUP, INPUT MENU	39
		SOUND OUT MENU	37	Wireless setup, INPUT MENU	39
O		SOUND OUT, SOUND OUT MENU	37		
Operation range, remote control	14	Sound output redirection, Sound output	38	X	
OPTION key, Remote control	9	Sound output, SOUND OUT MENU	37	x.v.Color, glossary	48
OSD BACK COLOR, OSD setup	40	SOUND SET MENU	36		
OSD background color, OSD setup	40	Specifications	48		
OSD language change	15	Spectacle, CINEMA DSP program	23		
OSD SETUP, DISPLAY MENU	40	Sports, CINEMA DSP program	23		
OSD setup, DISPLAY MENU	40	ST+3BeamPlus2, beam mode	24		
OSD SHIFT, OSD setup	40	Stand attachment, installation	10		
OSD shift, OSD setup	40	STANDARD DIMMER, Front panel display setup	39		
		Standard dimmer, Front panel display setup	39		
P		Standby after AC on, ADVANCED SETUP	41		
PANEL INP.KEY, ADVANCED SETUP	40	STEREO key, Remote control	9		
Parallel installation, placement	11	Stereo+3Beam, beam mode	23		
Parental lock, input signal information	32	Subwoofer connection	14		
ParentalLock, input signal information	32	SUBWOOFER jack	8		
PCM indicator	7	SUBWOOFER PRE OUT jack	41		
PCM, glossary	48	SUBWOOFER SET, SOUND SET MENU	36		
Playback	21	Subwoofer settings, SOUND SET MENU	36		
Playing back iPod/iPhone	30	SUPPORT AUDIO, HDMI setup	39		
Power key, Ffront panel	6	Support audio, HDMI setup	39		
Power key, Remote control	9	SUR, BACK PRE OUT jacks	41		
Power LED	6	SUR.DECODE key, Remote control	9		
Power-on by remote control input keys, ADVANCED SETUP	41	SURROUND key, Remote control	9		
PRE OUT jacks	8	SURROUND PRE OUT jacks	41		
PRE OUT Volume, Sound output	38	System configurations	40		
PRE OUT volume, Sound output	38	SYSTEM CONNECTOR terminal	8		
Preset tuning, FM tuning	25	System memory using	19		
R		T			
R.INPUT POWER, ADVANCED SETUP	41	Table top stand/floor stand using, installation	10		
Rack using, installation	10	Talk Show, CINEMA DSP program	23		
Rear panel	8	TONE CONTROL, SOUND SET MENU	36		
REC.V, Wireless indicators	7	Tone control, SOUND SET MENU	36		
Registering SIRIUS Satellite Radio channels	28	TOP MENU key, controlling external component	42		
Remote control	9	TOP MENU key, Remote control	9		
Remote control code list	49	Transmission indicator, Remote control	9		
Remote control code resetting all	42	TREBLE, Tone control	36		
Remote control code setting	42	Treble, Tone control	36		
Remote control preparation	14	TRNS, Wireless indicators	7		
Remote control sensor	6	Troubleshooting	43		
Remote control, troubleshooting	45	Tuner indicators	7		
Resetting all remote control code	42	Tuner operation keys, Remote control	9		
Resolution, input signal information	32	TURN ON VOLUME, ADVANCED SETUP	40		
RETURN key, controlling external component	42	TV	36		
RETURN key, Remote control	9	TV button, Remote control	9		
RS-232C terminal	8	TV connection	12		
		TV INPUT key, controlling external component	42		
S		TV key, controlling external component	42		
Sampling frequency, input signal information	32	TV MUTE key, controlling external component	42		
Satellite radio listening, SIRIUS Satellite Radio	26	TV operation keys, Remote control	9		
Saving settings	19	TV VOL +/- key, controlling external component	42		
Sci-Fi, CINEMA DSP program	23	TV, Audio delay	36		
SET MENU	33				
SET MENU operation	34	U			
Setting Loading	19	UNIT SETUP, DISPLAY MENU	40		
SETTING PARAMETERS, MANUAL SETUP	34	Unit setup, DISPLAY MENU	40		
Setting parameters, MANUAL SETUP	34	UNIVOLUME indicator	7		
Setting remote control code	42	UNIVOLUME key, Remote control	9		
Setting saving	19				
Setting the Parental Lock, SIRIUS Satellite Radio	29	V			
SETUP key, Remote control	9	VIDEO jacks	8		
SIRIUS antenna jack	8	Video Signal In, input signal information	32		
SIRIUS indicators	7				





YSP-5100 / YSP-4100

Quick Reference Guide

English

for North America

This Quick Reference Guide explains steps to connect external components to this unit and start playback. For detailed operation, refer to the "Owner's Manual" in the supplied CD-ROM.


Check that you received all of the supplied accessories referring to "Supplied accessories" (page 6 of "Safety and Accessory Information" (separate booklet)). For instructions on how to operate or set the external components, refer to the owner's manual supplied with each component.

1 Installing this unit


Decide where to install this unit.

This unit uses sound beams to create surround effects (the arrows in the following diagrams indicate the images of paths of 5-channel sound beams). To achieve desired surround sound effects, install this unit where there are no objects such as furniture obstructing the path of sound beams.

When installing this unit parallel to the wall

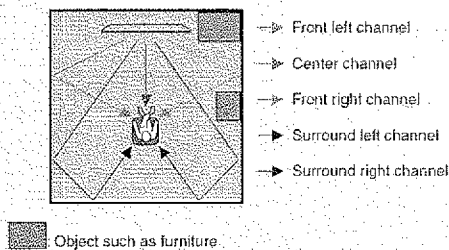


When installing this unit in the corner of a room

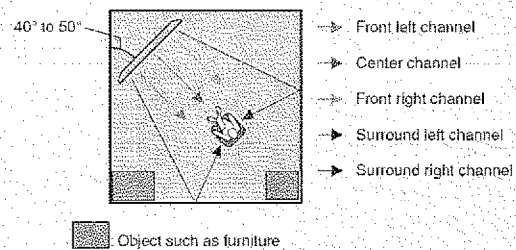


Attach the stands.

Attach the supplied stands to this unit as shown below. Make sure that you attach the left and right stands correctly. These stands are unnecessary if you use the optional wall mount bracket.

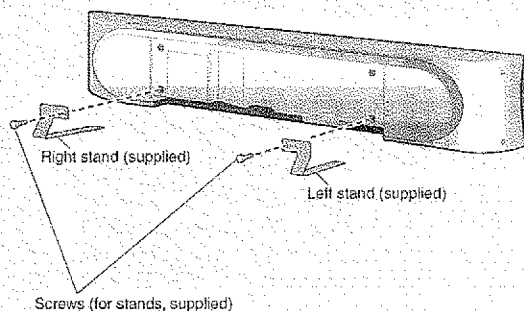

When installing this unit using a rack

When installing this unit, be careful not to scratch this unit, rack or floor. Depending on your installation environment, connections with external components (next step) should be done before installation.

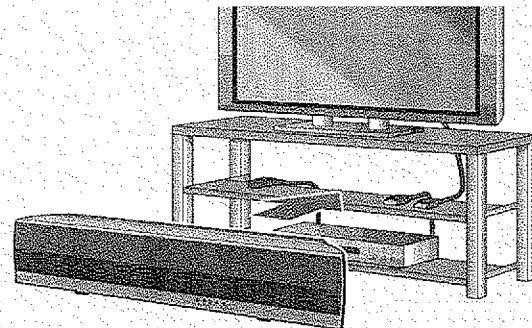

2


Connecting external components to this unit

Connect your TV and Blu-ray disc player to this unit.

The rear panel illustration shows jacks and their names to help you find them easily. They are not exactly the same as the ones on the actual rear panel of this unit. Do not plug the power cable into an AC wall outlet until all connections are complete.

Example - A

This example shows a way to make the most of the capability of this unit. You can enjoy Blu-ray disc audio and video with higher quality via the HDMI cable. In addition, by inputting TV sounds to this unit through the optical cable, you can enjoy multi-channel audio from the TV.

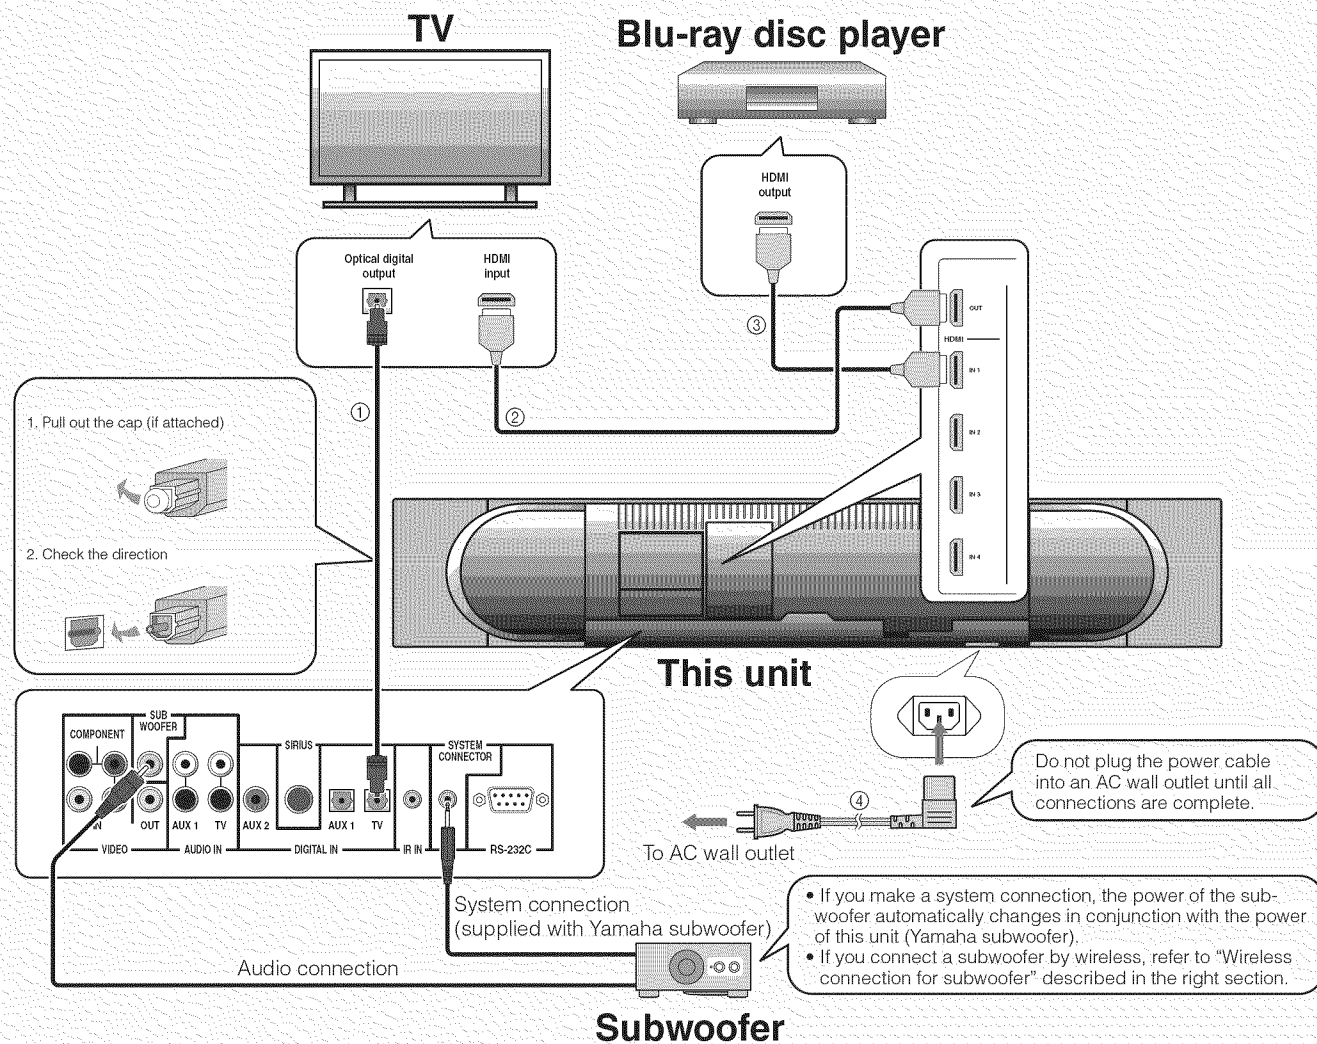

Connect cables in the order of the circled numbers.

Supplied	Sold separately
① Optical cable (to play back TV digital sounds on this unit)	② HDMI cable (to display the Blu-ray disc video and this unit's menu screen on the TV)
④ Power cable	③ HDMI cable (to input the digital audio/video signals of the Blu-ray disc to this unit)

* If you connect this unit to an HDMI control-compatible TV (except some models) via HDMI, you can use the remote control supplied with your TV to turn on or off the power, select the audio output component, and adjust the volume level of this unit. For details, see "Using the HDMI control function" of "Owner's Manual" (on the supplied CD-ROM).


2

Connecting external components to this unit

These examples show ways to connect additional components (such as a tuner or game console), a subwoofer by wireless, and an indoor FM antenna. Do not plug the power supply cable into an AC wall outlet until all connections are complete.


Example - a

This example shows a way to make the most of the capability of this unit. Connect your external component to one of the HDMI IN jacks of this unit.

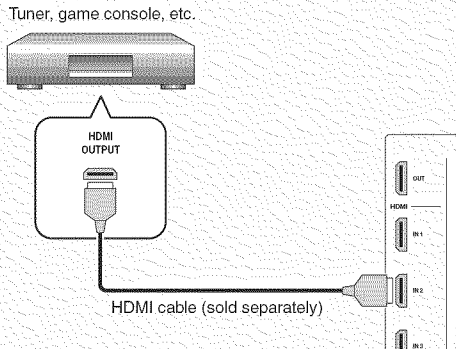


Example - b

This example shows a way to connect your external component using the AUX1 (optical digital or stereo analog) and VIDEO IN jacks.

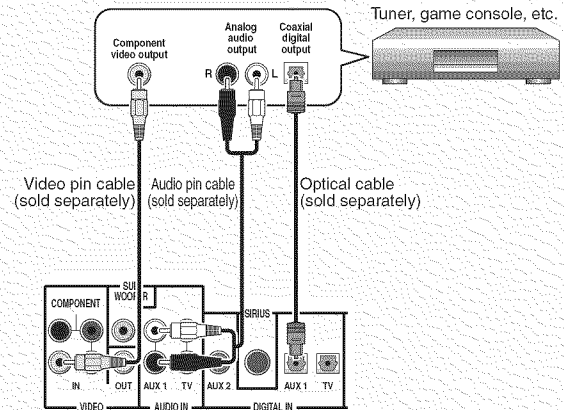

Wireless connection for subwoofer


This shows a way to connect a subwoofer by using the Yamaha wireless subwoofer kit (SWK-W10). For instructions on SWK-W10, refer to "Safety and Accessory Information" (separate booklet).

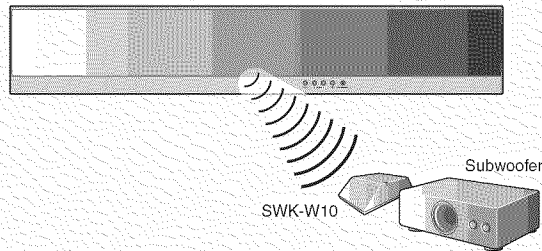

For proper transmission, you need to set the group IDs of this unit and SWK-W10 to the same value. For the Group ID setting of this unit, refer to "WIRELESS SETUP" of "Owner's Manual" (supplied CD-ROM).


Example - c

This example shows a way to connect your external component using the AUX2 (coaxial digital) and COMPONENT VIDEO IN jacks.

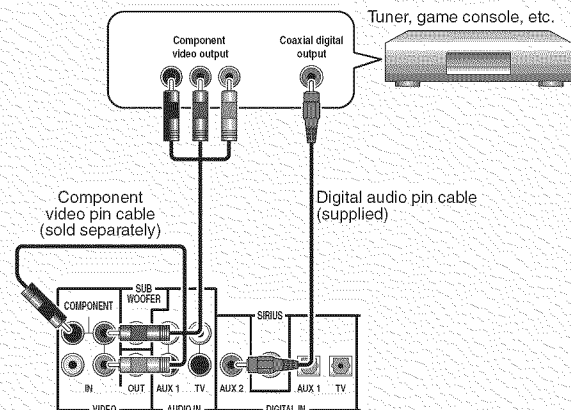

Connecting the FM antenna


Connect the supplied FM antenna.

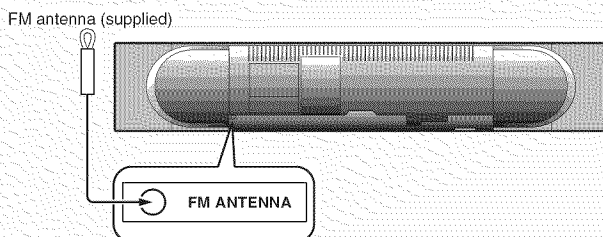

2 Connecting external components to this unit

Example - B

This example shows a way to connect a TV and Blu-ray disc player using the supplied cables. You can enjoy the multi-channel audio from the Blu-ray disc player and the analog/digital audio from the TV. Use the video pin cable supplied with your Blu-ray disc player to make a video connection between your Blu-ray disc player and this unit.

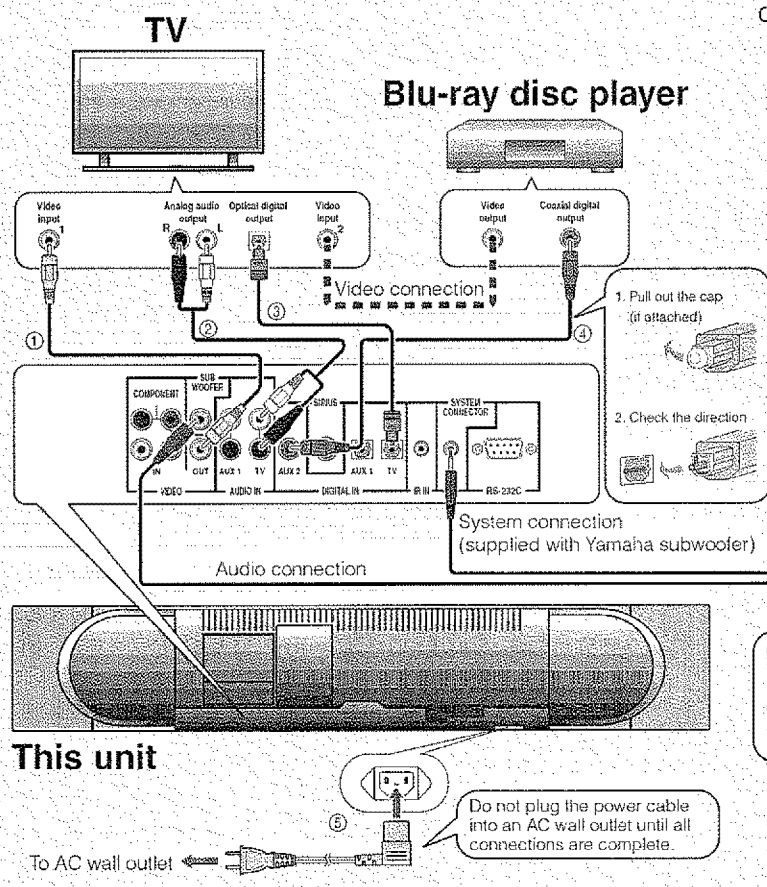

Connect cables in the order of the circled numbers.

- | Supplied | |
|----------|--|
| ① | Video pin cable
(to display this unit's menu screen on the TV) |
| ② | Audio pin cable
(to play back TV analog sounds on this unit) |
| ③ | Optical cable
(to play back TV digital sounds on this unit) |
| ④ | Digital audio pin cable
(to input digital audio signals of the Blu-ray disc to this unit) |
| ⑤ | Power cable |


Subwoofer

- If you make a system connection, the power of the subwoofer automatically changes in conjunction with the power of this unit (Yamaha subwoofer).
- If you connect a subwoofer by wireless, refer to "Wireless connection for subwoofer" described in the left section.


3 Preparing the remote control

Install batteries in the remote control.

Make sure you insert the batteries according to the polarity markings (+/-).

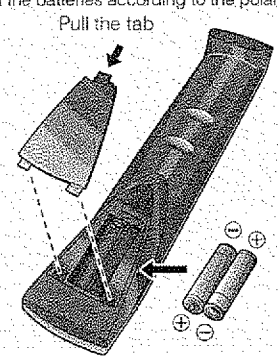

Operation range

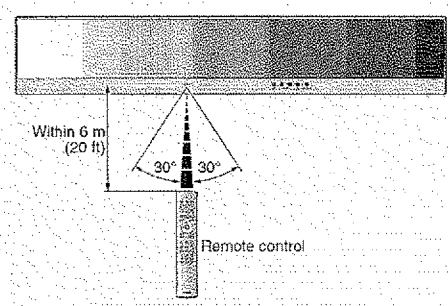


4 Carrying out the AUTO SETUP (IntelliBeam)

Carry out the AUTO SETUP to adjust the settings so that the best listening environment is created.

The IntelliBeam technology allows you to achieve sound adjustments that best match your listening environment. It is normal for loud test tones to be output during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.



1 Connect the supplied IntelliBeam microphone to the INTELLIBEAM MIC jack on the front panel.

If necessary, use the supplied cardboard microphone stand. Assemble the stand and place the IntelliBeam microphone on top of it horizontally as shown below.

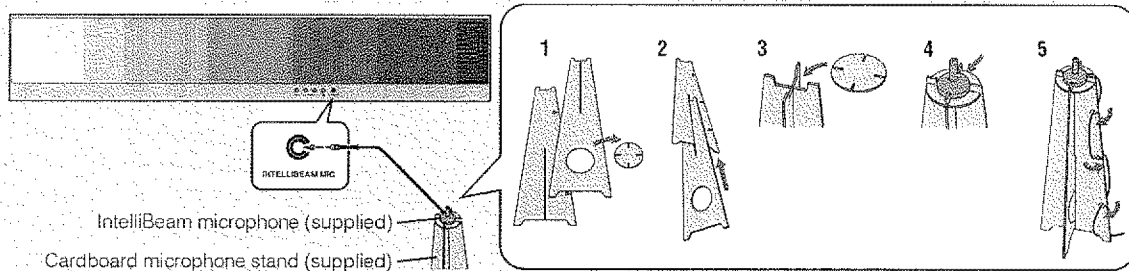

2 Set the IntelliBeam microphone at your normal listening position.

Use the supplied cardboard microphone stand or a tripod to place the IntelliBeam microphone at the same height as your ears would be when you are seated.

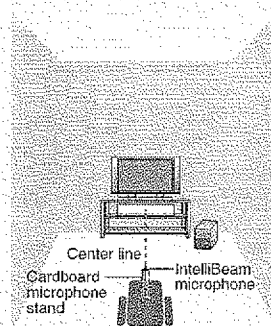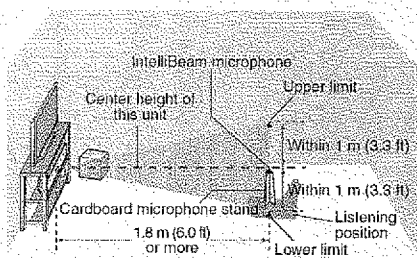


Place the IntelliBeam microphone on the extended center line of this unit and 1.8 m (6.0 ft) or more away from it. Also, make sure place the IntelliBeam microphone within 1 m (3.3 ft) upper or lower from the center height of this unit.

3 Press the Power (⏻) key on the remote control.

The power of this unit turns on.

If a subwoofer with adjustable volume and crossover frequency controls is connected to this unit, turn it on, set the volume to about half way and then set the crossover frequency to the maximum as shown below.

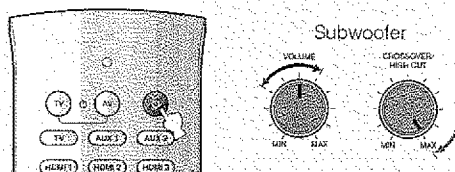


4 Turn on the power of your TV and select this unit as the video input on your TV.

If this unit is connected to the HDMI input on the TV (as shown in "Example - A"), switch the video input to "HDMI".
If this unit is connected to the video input 1 on the TV (as shown in "Example - B"), switch the video input to "1".

4 Carrying out the AUTO SETUP (IntelliBeam)

5 Press and hold INTELLIBEAM for more than 2 seconds.

The INTELLIBEAM key is located inside of the slide cover.

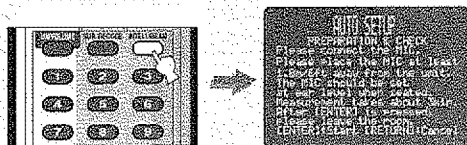

6 Make sure that your listening room is as quiet as possible.


For accurate measurement, turn off air conditioner or other devices that make noises.

7 Prepare to leave the room.

The best setting may not be done if you are in the room. Prepare to leave the room in 10 seconds after pressing ENTER in step 8.

- When leaving the room, bring this Quick Reference Guide with you.
- Wait outside the room during the AUTO SETUP procedure.
- The AUTO SETUP procedure takes about 3 minutes.
- To cancel the AUTO SETUP procedure after it is started, press RETURN.

8 Press ENTER to start the AUTO SETUP procedure and then leave the room within 10 seconds.

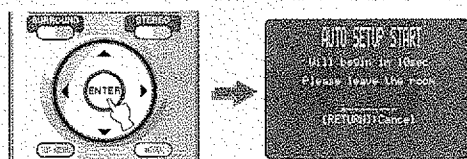

The setup screen automatically changes during the AUTO SETUP procedure.

When the AUTO SETUP procedure is complete, the "SHOW RESULT" screen appears on the TV.




If "ENVIRONMENT CHECK (FAILED)" is displayed, see "Error messages for AUTO SETUP" of "Owner's Manual" (on the supplied CD-ROM) and then run the procedure again.

- The result may differ depending on the environment.
- If any error occurs, the corresponding error message appears on the screen. In this case, see "Error messages for AUTO SETUP" of "Owner's Manual" (on the supplied CD-ROM).


9 Press ENTER.

The following screen appears on the TV for 2 seconds and then the menu screen disappears from the TV.

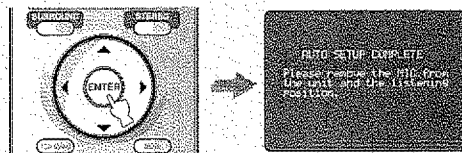

10 Disconnect the IntelliBeam microphone.


Now the AUTO SETUP is complete. Keep the IntelliBeam microphone in a safe place. The settings are automatically saved in the system memory.

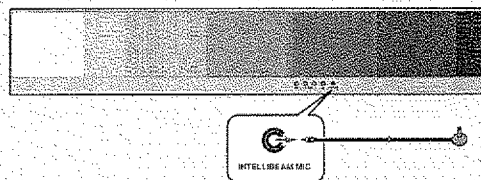

5 Checking digital audio input

You can check the digital signals being input from the Blu-ray disc player through the digital connection (HDMI, optical, coaxial) by using the supplied demonstration DVD.

 1 Press HDMI1-4 or AUX1/2 to select the Blu-ray disc player as the input source and start playback of the demonstration DVD.



2 Check whether the DIGITAL indicator lights up.



- If the indicator does not light up, check the setting for digital audio output on the player. For details, see "Using the supplied demonstration DVD" (page 7 of "Safety and Accessory Information" (separate booklet)).

Basic playback operations


Playing back audio signals

Enjoying Blu-ray discs in surround sound

- 1 Select the Blu-ray disc player as the video input on your TV.

- 2 1) Press HDMI1-4 or AUX1/2 to select the Blu-ray disc player as the input source.

For example, if the Blu-ray disc player is connected to the HDMI IN 1 jack of this unit (as shown in "Example - A"), press HDMI1.

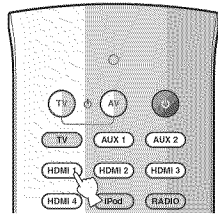


- 2) Start playback of a Blu-ray disc.

Enjoying TV in surround sound


- 1 Select the desired TV channel.

- 2 Press TV to select the TV as the input source.

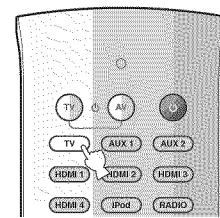


- 3 Press VOLUME +/- to adjust the volume.

 If the TV speakers output sounds, mute it.



- 4 Press SURROUND and then the CINEMA DSP keys to select the desired CINEMA DSP program.

Each time you press the CINEMA DSP key, program switches. For details on each program, see "Enjoying CINEMA DSP programs" of "Owner's Manual" (on the supplied CD-ROM). To turn off the CINEMA DSP program, press OFF.

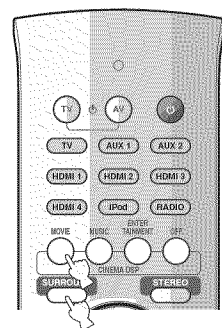


Playing back audio signals

Playing back iPod/iPhone

- 1 Prepare your iPod/iPhone and the Yamaha wireless transmitter for iPod (PDX-50TX/PDX-50BC).

For instructions on PDX-50TX/PDX-50BC, refer to "Safety and Accessory Information" (separate booklet).


- 2 Start play back of your iPod/iPhone.

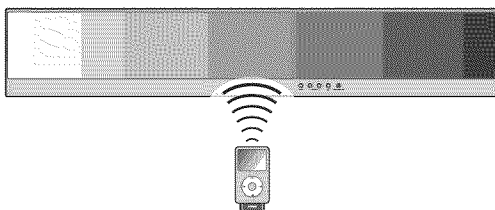

- For proper transmission, you need to set the group IDs of this unit and PDX-50TX to the same value. For the Group ID setting of this unit, refer to "WIRELESS SETUP" of "Owner's Manual" (supplied CD-ROM).

FM tuning


- 1 Press RADIO repeatedly to select "FM".

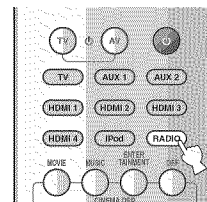

FM 88.9 MHz

- 2 Press TUNING \wedge / \vee .

 Frequency is changed.




FM 92.5 MHz

Using the audio functions of this unit

Selecting surround or stereo playback

- Press SURROUND or STEREO.

You can enjoy stereoscopic sound field with surround playback and hi-fi sound with stereo playback.

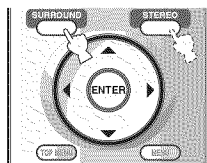

Adjusting volume level automatically (UNIVOLUME)

- Press UNIVOLUME.

You can limit the volume level of the TV so that it will not increase suddenly when whenever the contents being broadcast change (due to commercials, etc.). The UNIVOLUME key is located inside of the slide cover.






YSP-5100 / YSP-4100

Digital Sound Projector™


For more detailed information, refer to the Owner's Manual on the CD-ROM. To view the Owner's Manual, click "English" in the screen displayed automatically when you insert the CD-ROM into your PC. Then follow the on-screen instructions. If the screen is not displayed automatically, open the "index.html" in the CD-ROM.
Caution: Do not attempt to play this CD-ROM on an audio CD player.

Including "Wireless transmitter for iPod PDX-50TX/PDX-50BC Owner's Manual" and "Wireless subwoofer kit SWK-W10 Owner's Manual"

IMPORTANT SAFETY INSTRUCTIONS

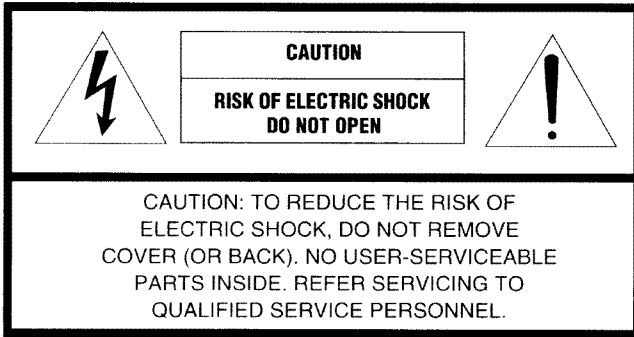

■ Explanation of Graphical Symbols

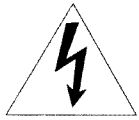

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



We Want You Listening For A Lifetime

Yamaha and the Electronic Industries Association’s Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, Yamaha and the Electronic Industries Association’s Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



FCC INFORMATION (for US customers)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received including interference that may cause undesired operation.

See user manual instructions if interference to radio reception is suspected.

This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF)

Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.

This Class B digital apparatus complies with Canadian ICES-003.

POUR LES CLIENTS RÉSIDANT AU CANADA

Afin d'éviter les risques de décharges électriques, veuillez à insérer à fond la large broche de la fiche dans la large fente de la prise de courant. Cet appareil numérique de Classe B est conforme à la norme canadienne ICES-003.

Caution: Read this before operating this unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place with at least 5 cm (2 in) of space above (or below) this unit – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cord and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the “Troubleshooting” section (of “Owner’s Manual” on the supplied CD-ROM) on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, press the power (⏻) key to set it to standby mode and disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 20 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

WARNING

THE POWER SUPPLY CABLE OF THIS UNIT MUST BE CONNECTED TO THE MAIN SOCKET OUTLET VIA A PROTECTIVE EARTHING CONNECTION.

Radio waves may affect electro-medical devices.
Do not use this unit near medical devices or inside medical facilities.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off by the power (⏻) key. This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power.

Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

IMPORTANT

Please record the serial number of this unit in the space below.
MODEL:
Serial No.:
The serial number is located on the rear of the unit. Retain this Safety and Accessory Information in a safe place for future reference.





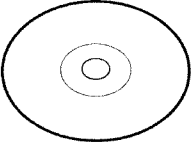
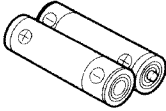
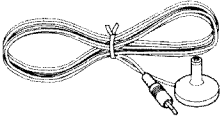

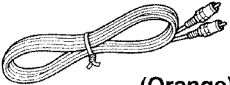
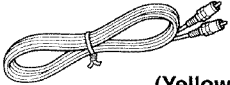
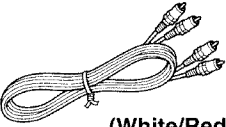
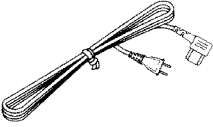
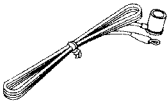
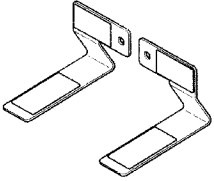

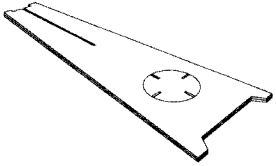
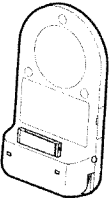
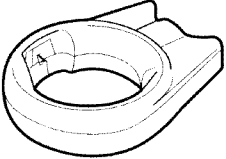
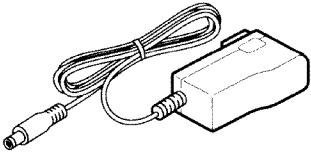
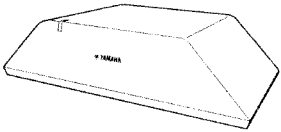
Notes on remote controls and batteries

- Do not spill water or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
 - places of high humidity, such as near a bath
 - places of high temperatures, such as near a heater or stove
 - places of extremely low temperatures
 - dusty places
- Insert the battery according to the polarity markings (+ and -).
- Change all batteries if you notice the following conditions: the operation range of the remote control narrows or the transmit indicator does not flash or is dim.
- If the batteries run out, immediately remove them from the remote control to prevent an explosion or acid leak.
- If you find leaking batteries, discard the batteries immediately, taking care not to touch the leaked material. If the leaked material comes into contact with your skin or gets into your eyes or mouth, rinse it away immediately and consult a doctor. Clean the battery compartment thoroughly before installing new batteries.
- Do not use old batteries together with new ones. This may shorten the life of the new batteries or cause old batteries to leak.
- Do not use different types of batteries (such as alkaline and manganese batteries) together. Specification of batteries may be different even though they look the same.
- Before inserting new batteries, wipe the compartment clean.
- If the remote control is without batteries for more than 2 minutes, or if exhausted batteries remain in the remote control, the contents of the memory may be cleared. In such a case, install new batteries and set the remote control code.
- Dispose of batteries according to your regional regulations.

Supplied accessories

Check that you have received all of the following parts.

Accessories supplied with YSP-5100/YSP-4100

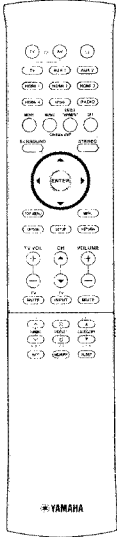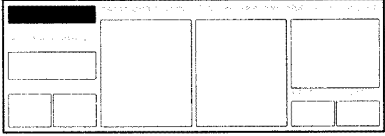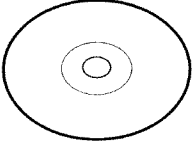Remote control x1	Quick Reference Guide x1	Demonstration DVD x1	Safety and Accessory Information x1
			
Manual CD-ROM x1	Battery x2 (R03P, UMA, AAA)	IntelliBeam microphone x1	Optical cable x1
			
Digital audio pin cable x1	Video pin cable x1	Audio pin cable x1	Power cable x1
			
(Orange)	(Yellow)	(White/Red)	
Indoor FM antenna x1	Stand (right/left) x1 pair	Screw set (for stand) x1 set	Cardboard microphone stand x1
			
Wireless transmitter for iPod x1 (PDX-50TX)	Charging cradle x1 (PDX-50BC)	AC adapter for PDX-50BC x1 (MU12-2050100-A1)	
			
Wireless subwoofer kit x1 (SWK-W10)			
			

Using the supplied demonstration DVD

By playing back the supplied demonstration DVD, you can check the digital signals being input properly from the Blu-ray disc player through the digital connection (HDMI, optical, or coaxial) and experience this unit's multi-channel surround sound.

■ Playing back the demonstration DVD

1 Select input sources both on this unit and your TV so that audio signal of DVD is input to this unit and video signal is input to your TV.

HDMI connection: On your TV, select this unit as the input source. On this unit, select the Blu-ray disc player as the input source.

 
Audio/Video connection: Select the Blu-ray disc player as the input source on both of your TV and this unit.

2 Load the demonstration DVD.


3 Select "Rain and Thunder" from the DVD menu.

Display the DVD menu screen by using the remote control of the Blu-ray disc player and then playback "Rain and Thunder".

4 Check the indicator displayed on the front panel display.

 DIGITAL (Dolby Digital) indicator lights up.


 DIGITAL indicator

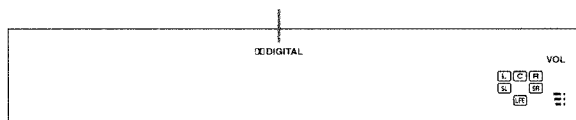

Front panel display

If the indicator does not light up, the digital audio signal of the demonstration DVD is not input to this unit. Check the connections and settings of the Blu-ray disc player.

Note

-  DIGITAL indicator does not light up when the Blu-ray disc player is not playing back the demonstration DVD and the DVD menu screen is displayed.


5 Experience the Dolby Digital 5.1ch surround sound.

The sound of rain and buzzing of cicadas are heard from all around the listening position.



- Enjoy the surround sound in surround playback mode (page 22 of "Owner's Manual" (on the supplied CD-ROM)).

■ If DIGITAL indicator does not light up

If  DIGITAL indicator does not light up on the front panel display in step 4, check the followings.

Is the Blu-ray disc player connected to this unit using a digital cable?

You need to connect these components with digital cables (HDMI cable, optical cable, or coaxial cable) to playback 5.1-channel contents such as Dolby Digital.

Is an input source selected correctly on this unit?

Check that which input jack of this unit the Blu-ray disc player is connected to. Then check whether the name of input source displayed on the front panel display of this unit is the same as that of the input jack used.



- If you connect the Blu-ray disc player to the HDMI IN 1 jack, when you select HDMI 1 as the input source, "HDMI 1" should be displayed.

Is digital audio output set correctly on the Blu-ray disc player?

HDMI connection: Set the digital audio output setting to "AUTO" or "Bitstream".

Digital audio connection: Enable "Dolby Digital/DTS" or "Bitstream".



- Refer to the owner's manual supplied with the Blu-ray disc player for the settings.

Wireless transmitter for iPod PDX-50TX/PDX-50BC Owner's Manual

PDX-50TX is a wireless transmitter designed for iPod or iPhone series. PDX-50TX employs the Yamaha “yAired” technology to establish a wireless connection with another Yamaha product that supports “yAired” and enables playback of the iPod or iPhone on your Yamaha product.

Also the charging cradle PDX-50BC can be used for charging the iPod or iPhone, or to play music or movies for an extended time.

■ Cautions

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 3 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 4 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 5 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 6 Do not plug in this unit to a wall outlet until all connections are complete.
- 7 Do not use force on switches, knobs and/or cords.
- 8 When disconnecting the power cable/AC adapter from the wall outlet, grasp the plug; do not pull the cable.
- 9 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 10 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 11 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 12 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 13 Be sure to read the “Troubleshooting” section on common operating errors before concluding that this unit is faulty.
- 14 Before moving this unit, turn off this unit, and disconnect the AC power plug from the wall outlet.
- 15 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 16 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 17 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 18 Be sure to use the AC adaptors supplied with this unit. Using an AC adaptor other than those provided may cause fire or damage to this unit.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Radio waves may affect electro-medical devices.
Do not use this unit near medical devices or inside medical facilities.


Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

Even if an iPod or iPhone is not connected to this unit, this unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet. In this state, this unit is designed to consume a very small quantity of power.


Be sure to use this product only in the country in where it was purchased.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

- 1 **Connect the AC adapter to PDX-50BC (charging cradle) and then connect the AC plug to the AC wall outlet.**

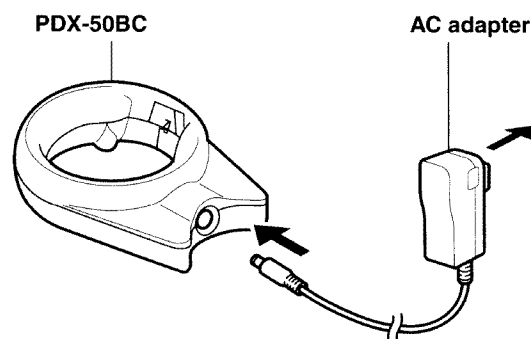


- 2 **Remove the transparent film on the pad.**

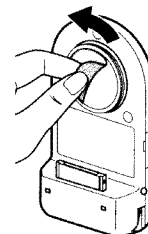


3 Connect your iPod or iPhone to PDX-50TX (transmitter).

The green LED lights up if a wireless connection between PDX-50TX and another Yamaha product is established.

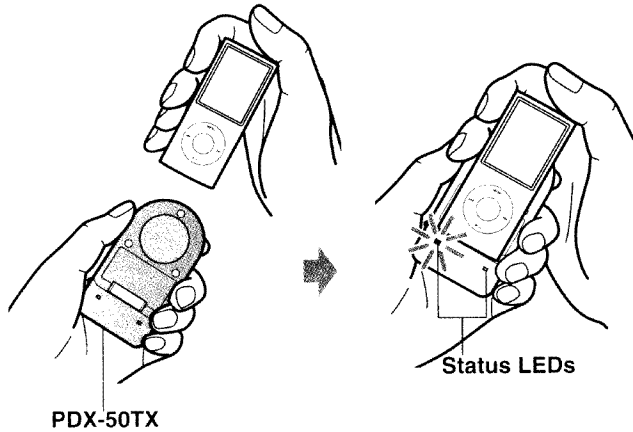


LED	Status
Off	An iPod or iPhone is not connected, or has stopped playing. However, lights up for 30 seconds or 2 minutes (depends on the iPod/iPhone) after connecting or stopping playback.
Flashes green continuously	Connection in progress, please wait.
Flashes green once	Adjusting the volume level.
Lights up green	A connection is established. You are ready to start playback of iPod on another Yamaha product.
Lights up green and flashes red	Flashes red for 2 seconds: An unsupported iPhone or iPod is connected. Keeps flashing red: Connection failed.
Flashes red (regardless of green status)	The battery of the iPod or iPhone is low.

4 Adjust the angle of your iPod or iPhone so that it is aligned parallel to PDX-50TX.

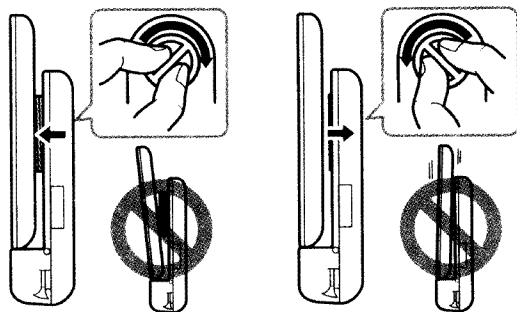


5 To charge the iPod or iPhone, place it on PDX-50BC.

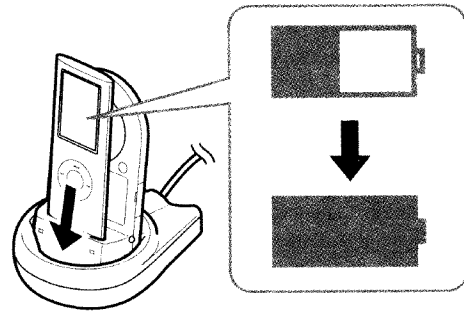

■ Group selection switch

Use this switch to set the group ID. To establish a wireless connection (yAired) with another Yamaha product, set both the products to the same group.


Group selection switch

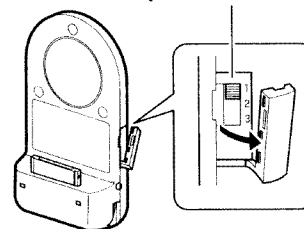

- PDX-50TX supports “1” (A1), “2” (A2), and “3” (A3) on some Yamaha products that support “yAired”.

■ Disconnecting the iPod or iPhone

 To disconnect the iPod or iPhone from PDX-50TX (transmitter), pull the iPod or iPhone upward.



- Disconnection may be difficult under low temperature. In this case, do not disconnect the iPod or iPhone by force; loosen off the tab on the back of PDX-50TX to make the disconnection easier.

■ Troubleshooting

Refer to the table below if the unit does not function properly. If the problem you are experiencing is not listed below, or if the instruction below does not help, contact the nearest authorized Yamaha dealer or service center.

Problem	Cause	Remedy
No sound.	PDX-50TX and another Yamaha product are not connected since they are set to different groups.	Set both PDX-50TX and another Yamaha product to the same group.
	The signals are obstructed because there is an obstacle between the transmitting-side product and this unit.	Remove the obstacle.
		Move this unit to another position.
	There is a device (microwave oven, wireless LAN, etc.) outputting signals in 2.4 GHz frequency band nearby.	Move PDX-50TX away from the device.
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.
	The firmware of the iPod or iPhone is not updated.	Download the latest iTunes software to update the firmware of the iPod or iPhone. For details, refer to the owner's manual supplied with your iPod or iPhone.
	The signal from PDX-50TX is blocked by your body or metallic objects, etc.	Change the way of holding, orientation, or position of PDX-50TX to avoid the object blocking the signal.
	The battery of iPod or iPhone is low.	Charge the iPod or iPhone.
	The volume is turned down.	Turn up the volume.
	It is in the process of a connection.	Please wait for a while.
The protection circuitry has been activated by excessive volume.	Turn down the volume.	
Controlling volume on the iPod or iPhone does not work.	The iPod or iPhone being used is not supported by this unit.	Use an iPod or iPhone supported by this product.
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.

■ Specifications

Supported iPod

..... iPod (5th generation), iPod classic, iPod nano, iPod touch

Supported iPhone

..... iPhone, iPhone 3G, iPhone 3GS (as of August 2009)

Power supply

U.S.A. and Canada models AC 120 V, 60 Hz

Other models AC 100 to 240 V, 50/60 Hz

Power consumption 4 W

Power consumption without connecting iPod/iPhone

..... less than 1 W

Transmission range Approx. 20 m (66 ft) (without interference)

Maximum playback duration

..... Approx. 10 hours (from full charged iPod)

Dimensions (W x D x H)

PDX-50TX 45.4 x 21.6 x 81 mm (1-29/32 x 7/8 x 3-7/32 in)

PDX-50BC 56 x 20.5 x 74 mm (2-7/32 x 13/16 x 2-15/16 in)

Weight

PDX-50TX 29 g (1.02 oz)

PDX-50BC 29.5 g (1.04 oz)

* Specifications are subject to change without notice

yA^{red}

iPod™, iPhone™

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Wireless subwoofer kit SWK-W10 Owner's Manual

SWK-W10 is a wireless subwoofer kit that employs the Yamaha “yAired” technology to enable receiving subwoofer signals via a wireless communication. By connecting SWK-W10 to your subwoofer (with internal amplifier) using a subwoofer cable, you can enjoy bass sounds wirelessly received from the transmitting-side Yamaha product. Also, since the power and volume level of the subwoofer are controlled in conjunction with transmitting-side operations, it is so simple to operate.

■ Cautions

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place and away from direct sunlight, heat sources, vibration, dust, moisture and cold. For proper ventilation, allow the following minimum clearances.
Top: 5 cm (2 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 14 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 15 Be sure to read the “Troubleshooting” section on common operating errors before concluding that this unit is faulty.
- 16 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 17 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.

- 18 When using this unit for a long time, this unit may become warm. Leave this unit alone for cooling.
- 19 Install this unit near the AC outlet and where the AC power plug can be reached easily.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Even if a subwoofer is not connected to this unit, this unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet. In this state, this unit is designed to consume a very small quantity of power.

Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

Be sure to use this product only in the country in where it was purchased.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

IMPORTANT



Please record the serial number of this unit in the space below.

MODEL:

Serial No.:


The serial number is located on the rear of the unit. Retain this Owner's Manual in a safe place for future reference.

- The name plate is located on the bottom of the unit.

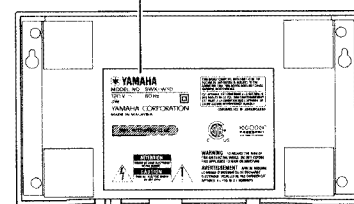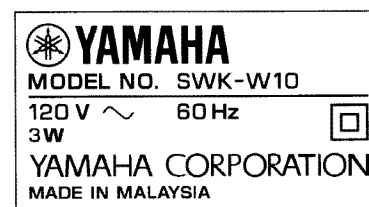

1 Keep this unit and your subwoofer (with internal amplifier) unplugged from AC wall outlets.

2 Set the group ID of this unit to one used on the transmitting-side Yamaha product.

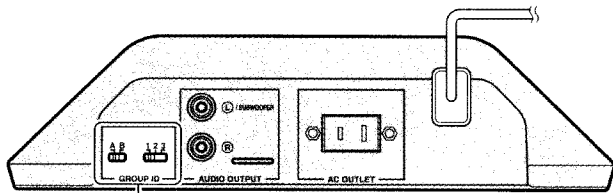

GROUP ID switch




- For information about the group ID of the transmitting-side Yamaha product, refer to the manual supplied with the product.
- If the transmitting-side product is not equipped with an A/B switch, set the A/B switch of this unit to “A”.

3 Install this unit near your subwoofer.

Place this unit on your subwoofer or mount this unit on the wall using the hooking holes on the bottom surface.

4 Connect the cables in the following order.

- ① Connect the AUDIO OUTPUT (SUBWOOFER) of this unit and the input jack of your subwoofer using a subwoofer cable.
- ② Plug the power cable of your subwoofer to the AC OUTLET terminal of this unit.
- ③ Plug the power cable of this unit to an AC wall outlet.

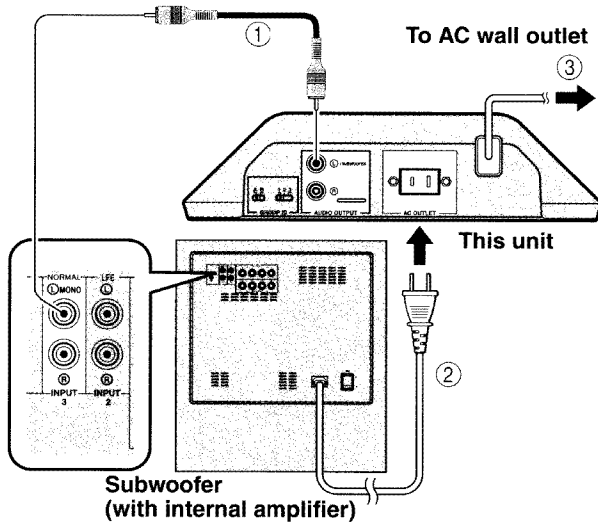


Subwoofer (with internal amplifier)

Note

- Do not plug a subwoofer which power consumption is higher than 100 W to the AC OUTLET terminal of this unit.

5 Turn on the subwoofer.

6 Set the volume of your subwoofer to about half way and then set the crossover frequency to the maximum.

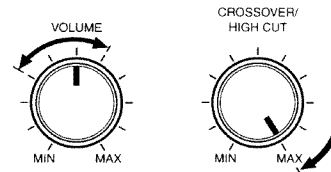


Subwoofer

7 Turn on the transmitting-side product.

The LED turns to green if a wireless connection between this unit and transmitting-side product is established.

Status LED

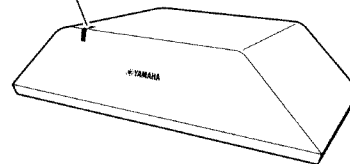

LED	Status
Red	This unit is turned off because the transmitting-side product is also turned off. Turn on the transmitting-side product to turn on this unit.
Orange	A wireless connection is being established. Please wait.
Green	A wireless connection is established properly.

Note

- If your subwoofer is operable with the remote control, set the subwoofer’s power management setting to “Always On” to make the power control of this unit functions properly.

■ Troubleshooting

Refer to the table below if the unit does not function properly. If the problem you are experiencing is not listed below, or if the instruction below does not help, contact the nearest authorized Yamaha dealer or service center.

Problem	Cause	Remedy
No sound.	This unit and transmitting-side Yamaha product are not connected since they are set to different groups.	Set both this unit and transmitting-side Yamaha product to the same group.
	The signals are obstructed because there is an obstacle between the transmitting-side product and this unit.	Remove the obstacle.
		Move this unit to another position.
	There is a device (microwave oven, wireless LAN, etc.) outputting signals in 2.4 GHz frequency band nearby.	Move this unit away from the device.
	The connection between this unit and your subwoofer is improper.	Check the connection.
	The volume is turned down.	Raise the output level of the subwoofer.
		Adjust the volume control of the transmitting-side product to turn up the volume. The subwoofer volume raises in conjunction with the operation of the transmitting-side product.
The wireless connection is unstable for some reasons.	Unplug this unit from the AC wall outlet and then plug it again. Check if the LED status lights green.	
The subwoofer is set to the standby mode when the AC power of the subwoofer is turned to ON.	Set the subwoofer's power management setting so that the subwoofer power interlocks with the AC power of the subwoofer.	
	Set audio setting on the subwoofer to audio detection mode.	
Too low volume.	The volume is turned down.	Turn up the volume or adjust the crossover frequency on your subwoofer.
The status LED does not light up green.	This unit and transmitting-side Yamaha product are not connected since they are set to different groups.	Set both this unit and transmitting-side Yamaha product to the same group.

■ Specifications

Power supply

U.S.A. and Canada models AC 120 V, 60 Hz

Australia model AC 240 V, 50 Hz

Other models AC 230 V, 50 Hz

Power consumption 3 W

Power consumption without wireless connection 1.5 W or less

AUDIO OUTPUT (SUBWOOFER) 2 V/120 Hz or less

AC OUTLET 100 W maximum

Transmission range.... Approx. 20 m (66 ft) (without interference)

Dimensions (W × D × H) 120 × 53.5 × 120.5 mm

(4-7/8 × 2-1/4 × 4-7/8 in)

Weight..... 0.8 kg (1.8 lbs)

* Specifications are subject to change without notice






Registering Your New Yamaha Product is Fast and Easy

Thank you for purchasing a new product from Yamaha Electronics. We'd like to continue providing you with high quality products and better service. So, we've made it simple to register your new product purchase online. Please take a few minutes to visit our website at www.yamaha.com/YEC/registration/ and complete the information and questions included there. We appreciate your business and we look forward to hearing from you.

Failure to complete the registration form does not diminish your warranty rights in any way.

Register online at www.yamaha.com/YEC/registration/

Product registration applies to USA customers only.

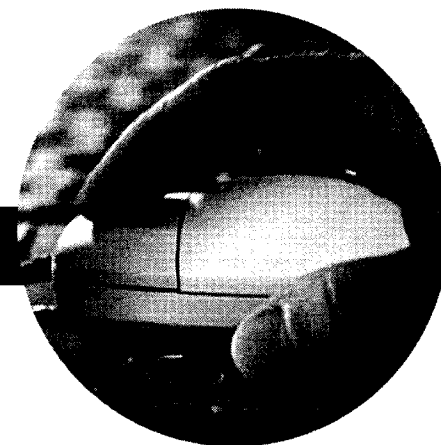

YAMAHA Home Audio products are designed and manufactured to provide a high level of trouble-free performance. YAMAHA Electronics Corporation, USA, is proud of the experienced craftsmanship that goes into each and every YAMAHA Home Audio product. YAMAHA sells its Home Audio products only through a network of high quality, specially authorized dealers and is pleased to offer the following Limited Warranty, which applies only to products purchased from our authorized dealers. YAMAHA Home Audio products are backed by a nationwide network of high quality YAMAHA Authorized Service Centers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized YAMAHA dealer or the YAMAHA Electronics Corporation, USA, Service Department if you have any questions.



> LIMITED WARRANTY < HOME AUDIO PRODUCTS

Type of Product

Duration of Warranty

(beginning from first consumer purchase)

A/V and Stereo Receivers, Processor and Integrated Amplifiers, Separate Amplifiers and Preamplifiers, Tuners, CD Players and Changers, HDD Players and Recorders, Powered Loudspeakers, Media Controllers and Speaker Systems purchased individually, as a pair, or as part of an Integrated or Packaged system. 2 years

Cassette Decks, BLU-RAY Disc Players, DVD Players and Changers, Integrated Systems (Receiver or Amplifier combined or on same chassis with CD or DVD Player), Desktop Audio Systems (i.e. TSX and PDX Series), Multimedia Speakers and Accessories. 1 year

What is Covered and what is Not Covered:

This warranty covers all defects in materials or workmanship in this product, but DOES NOT COVER the following:

- (1) Damage, deterioration or malfunction resulting from:
 - a. Accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions contained in your Owner's Manual.
 - b. Any shipment of the product. (Claims must be presented to the carrier.)
 - c. Repair or attempted repair by anyone other than YAMAHA or an authorized YAMAHA Service Center.
- (2) Any unit which has been altered or on which the serial number has been defaced, modified or removed.
- (3) Normal wear, battery replacement and any periodic maintenance.
- (4) Any unit which has not been purchased from an authorized YAMAHA Home Audio dealer in the USA. If you are uncertain as to whether a dealer has been authorized by YAMAHA, please contact YAMAHA's Service Department.
- (5) Any unit used for industrial or commercial purposes.

Who may enforce the warranty:

This warranty is enforceable only by the original purchaser.

What we will pay for and what you must pay for:

YAMAHA will repair or replace units covered by this warranty, without charge to the consumer for labor or materials. Some repair parts may be used or rebuilt replacements, that meet or exceed Yamaha specifications for new parts, in exchange for defective parts. **YOU ARE RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND FOR ANY INITIAL SHIPPING CHARGES**, if the product(s) must be shipped for warranty service. However, we will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty.

How you can get Warranty Service:

- (1) If your YAMAHA product(s) require service, contact the authorized YAMAHA dealer and the dealer will advise you of the procedures to be followed. If this is not practical, contact YAMAHA at the address, telephone number or Internet URL shown below. We may request that you send the defective product(s) to a local authorized YAMAHA Service Center, to an authorized YAMAHA Regional Service Center, or authorize return of the defective product(s) to YAMAHA for repair.
- (2) Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, as well as your sales receipt or other proof of date and place of purchase, as evidence of warranty coverage.
- (3) Warranty registration is not required for warranty coverage.

Limitation of Implied Warranties:

ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Exclusion of Damages:

YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT OUR OPTION. IF WE ELECT TO REPLACE THE PRODUCT, THE REPLACEMENT MAY BE A RECONDITIONED UNIT. YAMAHA SHALL NOT BE LIABLE FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE, OR ANY OTHER DAMAGES WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Should you have any questions about service received or if you need assistance in locating an authorized YAMAHA Service Center, please contact:



SERVICE DEPARTMENT

YAMAHA Electronics Corporation, USA

6660 Orangethorpe Avenue, Buena Park, California 90620-1345

Telephone: (800) 292-2982, 8 AM to 4 PM Pacific time

Internet URL: <http://www.yamaha.com/yec/>

Do not return any product to the above address; it is not a service location. YAMAHA products are backed by a nationwide network of high quality YAMAHA authorized Service Centers, providing prompt, courteous and professional service. **For referral to your nearest authorized YAMAHA Preferred Customer Service Center or authorized YAMAHA Regional Service Center call 1-800-4 YAMAHA.**