CONTENTS

02

02

04

05

05

05

05

05

05

05

06

07

07

07

LED LCD TV **USER'S MANUAL**

MODEL LED40G45RQ

Please register your product at www.rca.com Please keep your sales receipt and keep the record of the serial number and the date of purchase in order to receive warranty parts and service

Serial Number

Date of Purchase



as they may touch dangerous voltage or other electrical parts that

resource. This TV should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the

serious damage to the appliance.

 
21. Do not attempt to service this TV by yourself because opening or removing covers may expose you to dangerous high voltage or other hazards. Refer all servicing to qualified service personnel.

22. This device complies with Part 15 of the FCC Rules. Operation s subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

instructions

24. To reduce the risk of electric shock, the grounding of center pin of plug must be maintained. 25. If an outside antenna or cable system is connected to the TV.

be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA NO.70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and



or when it is left unused for long periods of time, unplug it from the wall outlet and disconnect antenna or cable system. This will prevent damage to the TV due to lightning and power line

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. This TV should be operated only from the type of power supply indicated on the rating label

If customer is not sure the type of power supply in your home. consult your appliance dealer or local power company. For TV remote control battery power, refer to the operating instructions.

16. The TV set shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the TV set.

17. Never push objects of any kind into this TV through openings could result in fire or electric shock. Never spill liquid of any kind into

18. Unplug the TV from the wall outlet before cleaning. Do not use

 
liquid or aero cleaners. Use a damp cloth for cleaning.

19. This TV should never be placed near or over a radiator or heat manufacturer's instructions have been adhered to.

20. Do not place this TV on an unstable cart, stand, tripod, bracket, or table. The TV may fall, causing serious injury to someone, and


23. WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation

requirements for the grounding electrodes. (See figure A)



Caution: Pushing, pulling or climbing on the TV may cause the TV falling. Do not let children climb or hang on the TV. Always place the IV on a sturdy, level, stable surface that can hold the weight of TV.

 Step one: Insert the M6 mounting screws into the upper two wall





07 Basic Operations 07 Turning On and Off 07 Choosing TV Channel 07 Selecting Input Source 80 Channel Bar 80 Adjusting Volume 80 EPG (Electronic Program Guide) OSD Menu Operations 80 Adjust the OSD Screen 80 Picture Menu 09 Sound Menu 09 Channel Menu Parental Menu 09 Setup Menu 10 Others Menu Frequently Asked Questions (FAQs) Troubleshooting Wall Mounting Unit Specification 13 USB Media Play 13 **Product Specification** 14

Child Safety Guide

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



The Issue

The home theater entertainment experience is a growing trend and larger flat panel displays and popular purchases

However, flat panel displays are not always supported on the proper stands of installed according to the manufacturer's recommendations.

Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or cats may fall over and cause injury.

This Manufacturer Cares!

The consumer electronics industry is committed to making home entertainment enjoyable and safe.

Tune Into Safety

- One size does NOT fit all. follow the manufacturer's recommendation for the safe installation and use of your flat panel display.

· Carefully read and understand all enclosed instructions for proper use of this product.

Don't allow children to climb on or play with furniture and television sets.

- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.

- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or

Care should be taken to route all cords and cables connected to the panel display so that they cannot be pulled or grabbed by curious children.

Wall Mounting: IF YOU DICIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).

- Follow all instructions supplied by the display and wall mount manufacturers

- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about

- Make sure that the wall where you are mounting the display is appropriate. Some block construction. If you are unsure, contact a professional installer

 
- A minimum of two people are required for installation. Flat panel displays can be heavy.

Caution and Warning




Caution: To reduce the risk of electric shock, do not remove

The lightning flash with arrowhead symbol, within a





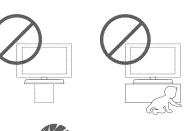

2. HDMI-DVI cable transfers only video signal from DVI port of

audio output to L-AUDIO-R jack on TV back panel

DVI device to HDMI jack of TV. For audio signal, please connect

The picture below is an example of a connection using the HDMI

Posibles Problemeas

Guía de seguridad para niños

en cuenta los consejos de seguridad:

- La experiencia de entretenimiento de cine en casa es una tendencia creciente y los grandes monitores de pantalla plana son muy populares.

¡Muchas gracias por su uso del presente producto!

Cuando usted disfruta de su nuevo producto, por favor tenga

embargo, los monitores de pantalla plana no se han instalado siempre en los soportes adecuados o instalado de acuerdo con las recomendaciones de fabricante.

- Los monitores de pantalla plana que se han instalado inadecuadament en tocadores, estanterías, estantes, escritorios, oradores, baúle s o carros se pueden caer y causar el daño corporal.

¡Al Fabricante le Importa

La industria electrónica del consumidor está comprometida a hacer el entretenimiento de casa agradable y seguro.

Ajustar Hasta Seguridad

· Un tamaño fijo NO es adecuado para todos, siga las ecomendaciones de fabricante para la instalación segura y el uso de su monitor de pantalla plana

SEGURIDAD

DE NIÑOS:

Lea con cuidado y entienda todas las instrucciones adjuntas para el uso propio de este producto.

No permita a los niños a subir al equipo o jugar con muebles v televisiones

No cloque los monitores de pantalla plana en el mueble quese puede usar fácilmente como escalón, así como una

Recuerde que los niños pueden llegar a ser excitados al ver una programación, especialmente en el monitor de pantalla plana "más grande que vida". El cuidado se tiene que empezar por poner o instalar el moniotr donde no se puede

El cuidado se tiene que empezar por encaminar todos los cordones y cables conectados al monitor de pantalla plana para que no se puedan tirar o agarrar conectados al monitor de pantalla plana para que no se pueden tirar o agarrar por los niños curiosos.

empujar, detener al castado del camino ni echar abaio.

Montaje de Pared: SI USTED DECIDE A MONTAR SU MONITOR DE PANTALLA PLANA LA PARED, SIEMPRE

independiente(como U L, CSA, ETL).

- Siga todas las instrucciones ofrecidas por el fabricante de monitor y montaje de pared.

- Si usted tiene cualquier duda sobre su habilidad para instalar seguramente su monitor de pantalla plana, contacte a su distribuidor para la instalación profesional.

no son diseñados para ser montados a paredes con tachones de acero o la vieja construcción de bloque de ceniza. Si usted está inseguro, contacte a un instalador profesional.

- Por lo menos dos personas se requieren para la instalación. Los monitores de pantalla plana puede ser pesados.

FCC Notice

Fcc Information

This equipment has been tested and found to comply with the

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio Communications.

However, there is no Guarantee that interference will not occur in a particular installation

If this equipment does cause harmful interference to radio or television recention, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

Reorient or relocate the receiving antenna Increase the separation between the equipment and the receiver. Connect the equipment into an outlet on a circuit different from

to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for

Device complies with FDA radiation performance standards, 21

CFR subchapter. Crn subcriapier. Caution: (Invisible) Laser Radiation when open.

Safety Precautions

1. Read these instructions Keep these instructions.

3. Heed all warnings. 4. Follow all instructions.

5. Do not use this apparatus near water. For example, do not use near a laundry tub, in a wet basement, or near a swimming pool, 6. Clean only with dry cloth.

7. Do not block any ventilation openings, Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet back or bottom are provided for ventilation, to ensure reliable operation of the TV and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the TV on a bed, sofa, rug, or other

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus

11. Only use attachments/accessories specified by the

combination to avoid injury from tip-over. A TV and cart combination should be moved with care. Quick

 
stops, excessive force, and uneven surfaces may cause the TV and cart combination to overturn. 13. Unplug this apparatus during lightning storms or when unused

For added protection for this TV receiver during a lightning storm

for long periods of time.

(Note: The fastening components such as screws are not supplied

mounting screw holes and fasten them (Figure B) Step two: Insert anchors to wall and connect the bolts and anchors with ropes or chains (Figure C)



Preparation for Your New TV

Before Turning On TV

Child Safety Guide

Safety Precautions

Check Accessories

Setup TV Table Stand

Connection and Using

Side Panel Connections

Connecting HDMI device

TV Jacks Explanation

Keypad Buttons

Front Panel

Keypad and Front Panel

Connecting AV Composite video device

Connecting YPbPr Component device

How to obtain various kinds of Input Sources 06

TV Signal Connection

Cable Connections

Select TV Location

Preparation for Your New TV

Check Accessories Check the accessories that are packed with your TV.

Setup TV Table Stand Please refer to Quick Start Guide to carry out stand installing.

Select TV Location Select a flat, stable table to place your TV set. Please follow the safety instructions when placing the TV.

Connection and Using

After placing your TV properly, you can connect the TV with power supply and cable components. For further information, see page 5

TV Signal Connection

The first step in connecting your TV is obtaining the signal, Your TV LED40G45RQ has a back panel, which allows you to receive nalog and/or digital television channels via ANT/CABLE jack nnecting your TV determine using an antenna or a cabl service to obtain the signal

Connect the antenna to TV via coaxial cable on ANT/CABLE jack

 
of the back panel. You are ready to receive air local digital and analog channels B. Cable TV service

Connect the cable TV wall jack to TV via coaxial cable on

ANT/CABLE jack of the back panel. You are ready to receive off-air local digital and analog channels.

C. Set-Top Box If you use a set-top box, you may need to call your cable company or satellite service provider, which use a special connection, please

refer to the user's guide of set-top box. Note: Do not plug the AC cord until you have accomplished all the connections. This TV does not support QAM under cable channel



Cable Connections

Choose Your Connections

Warranty Card

TV LED40G45RQ supports various connections to other devices (such as DVD, VCR, Set-top box, etc.). Please follow the table to choose the cables which adapt to your device.

Jacks	Cables	Information
COMPOSITE	Video/Audio cable	See the below
COMPONENT Y, Pb, Pr L-AUDIO-R	Audio Cable Audio Cable COMPONENT video cable	Go to page 6
(NOTION OF THE PROPERTY OF T	HDMI-DVI cable HDMI cable	Go to page 6

Note: HDMI, the HDMI logo, and High-Definition Multimedia

Caution: Unplug the AC cord when you connect other devices to

Side Panel Connections

Connecting AV Composite device

Composite connector will be shared with Component Y connector. To connect a composite AV device, such as a DVD player, follow

2.Connect the L-AUDIO-R jacks on the side of TV to the audio output jacks of device via audio cable.

Notice the left channel jack and plugs are white and the right

signal has regular good display quality.

Cables

MHL cable

Interface are trademarks or registered trademarks of HDMI

1.Connect the COMPOSITE jack on the side of TV to the video output jacks of device via video cable (vellow).

channel jack and plugs are red. Note: AV signal belongs to composite video. This kind of video

Composite Video Connection

The picture below is an example of a connection using the composite video iack.

Connecting YPbPr Component device

(Better Video Quality) To connect a component device, such as a DVD player, follow 1.Connect the COMPONENT IN Y/Pb/Pr jack on the side of TV to he video output jacks of device via video cable (green, blue and

2.Connect the L-AUDIO-R jacks on the side of TV to the audio output jacks of device via audio cable Notice the left channel jack and plugs are white and the right channel jack and plugs are red.

Note: Y/Ph/Pr jacks are component video. This kind of video signal nas better display quality Component Video Connection

Connecting HDMI device (Best Video Quality)

port of PC via HDMI-DVI cable.

1. Connect the HDMI1/DVI/MHL jack on the side of TV to the DVI

output jack of computer with audio cable (dual-channel RCA jacks


Note: 1. HDMI (High-Definition Multimedia Interface) is a compact

audio/video interface for transmitting uncompressed digital data. It carries the audio and video signal via the same cable and has the

2. Connect the L-AUDIO-R jack on the side of TV to the audio

to 3.5mm stereo jack or the L-AUDIO-R jack).


input port of the device such as amplifier,

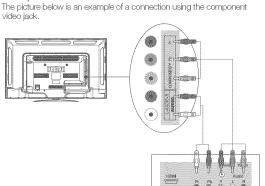

How to Obtain Various Kinds of Input Sources After connection is done, press INPUT button on remote control

TV Jacks Explanation

or TV top panel to choose the input source you need. See page 7, Basic Operation of TV.

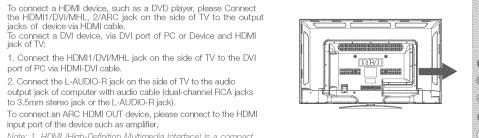

HEAD PHONE: Connect a 3.5mm headphone for personal audio. USB: Connect your USB storage device to enjoy music/photo files on your TV. (Also used for service purpose)

uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable. MHL: (Mobile High-Definition Link) To standard HDMI input, transmit the video/audio from portable electronic device (cellphone, digital

be connected to the device supporting ARC, transmit the TV sound to the COMPONENT Y/Pb/Pr: Connect a device that has component video jacks, such as a DVD player. To access device connected to the Y/Pb/Pr jack, press the INPUT button on your remote; then press the up/down arrow to select Component. Press the OK


button at last to confirm. Y/Pb/Pr (Component Video): They provide good picture quality because the video signal is separated into three components. Use three video-grade or component video cables for the connection. When using Y/Pb/Pr, make sure you connect left and right audio cables to the AUDIO IN R/L jacks.

AUDIO IN L: Left audio channel connection. The left audio connector is usually white. For mono audio sources, be sure to

use the left AUDIO INPUT. AUDIO IN R: Right audio channel connection. The right audio

Kevpad Buttons

If you cannot locate your remote, you can use the keypad buttons on your TV to operate many TV features

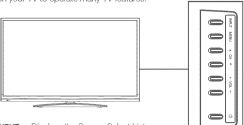

INPUT Displays the Source Select List

Scans up through the channel list In the TV menu system, it acts like the up arrow on the remote control and can be used to select menu options.

 
control and can be used to select menu options. like the right arrow on the remote control and can be

Decreases the volume. In the TV menu system, it acts ke the left arrow on the remote control and can be used to select menu options. Turns the TV on and off.

Front Panel

start guide.

working distance and angle, see the quick



Power/Standby Indicator: Light up in red when the TV is in standby mode. Light out when the TV is on. Remote Control Sensor: Remote control IR sensor, which

Codes for Cox Communications: 0178

Codes for Dish Network: 627

Codes for Fios Verizon: 0205, 0057, 0493, 0775

Basic Operations Turning On and Off

Connect the AC cord to power the LED LCD TV. At this time the TV will enter standby mode and power indicator will turn red. Use Power button (🖒) on the top panel of TV or on the remote control

Choosing TV Channel

Tuning To Analog Channels an analog channel has a channel number beginning with "A".

Note: Although there is no analog TV signal available in America. Tuning To Digital Channels A digital channel has a channel number beginning with "D". Input

Input the digital number with numeric buttons directly and press

OK button to confirm. For example, to watch analog channel "A51",

the main digital number with numeric buttons directly, then press " " button on remote control, and input the sub number at last. For example, to watch analog channel "D31-1", press "3", "1", " ",

press "5", "1", "OK" on remote control in sequence.

"1", "OK" on remote control in sequence. Changing Channels Directly You can use CH button to increase channel number and CH to decrease channel number.

Selecting Input Source

can also work as CH /CH buttons

source you need and press OK to

When no OSD (On Screen Display) is used, the up/down arrows Source Select AV HDMI 1 HDMI 2 USB

control to display Source Select list. Use up/down arrows to highlight the

- Use una montura que se ha recomendadop or el fabricante de monitor y/o listado por un laboratorio

- Compruebe que la pared adonde se está montando el monitor es adecuada. Algunos montajes de la pared

limits for a Class B digital device, pursuant to Part 15 of the FCC

HDMI1/DVI, 2: (High-Definition Multimedia Interface) It provides an

camera, digital-video camera) to TV set. ARC: (Audio Return Channel)Adopted in TV output of digital audio, can

L-AUDIO-R, COMPOSITE: Connect an AV device that has composite video jacks, such as a VCR or a DVD player. To access device connected to these jacks, press the INPUT button on your remote; then press the up/down arrow to select AV. Press the OK button at last to confirm.

ANT/CABLE: Connect to receive the signal from your antenna or

Digital Audio out: Connect a coaxial cable for digital audio

Keypad and Front Panel turn on TV again.

MENU Displays the TV Main Menu.

Scans down through the channel list. In the TV menu system, it acts like the down arrow on the remote Increases the volume. In the TV menu system, it acts

used to select menu options.

Press the OK button on the remote control, when OSD (on-scree display)is not used, the channel bar will appear on the Bottom of the creen. It displays the current channel's information. The following list describes the items on the channel bar.



D14-1/A2 If the channel is analog, A is displayed. If

example in the pictures above A2 is an analog channel, and D50-1 is a digital channel (-1 is a sub-channel number) ATSC-1 Display the current channel number

English/Stereo Displays whether the current channel is

Displays the signal resolution 480i/480i

Adjusting Volume

EPG (Electronic Program Guide)

PICTURE, AUDIO, TIME, SETUP or LOCK and press OK/down

press the MENU button

Press the MENU button repeatedly until the menus disappear

cables is not connected well, or they are connected wrongly.

(on-screen display)is not used, Look at the top right corner of the screen. An "A" is displayed for an analog channel. A "D" is displayed for a digital channel.

Note: Since the analog TV in America has been cut off, we reserve analog TV function only for some unexpected use.

Why are there bars on my screen, and can I get rid of them?

Most digital video is sent in a 16/9 format which fills your screen, but is sometimes sent in 4/3 which does not fill your screen. It depends on how the station or device connected to your TV is formatting the wideo. If there are bars on the screen, Check Screen size in the picture mode to try a different format that may eliminate the bars. Some bars can't be removed because of the way the format is sent by the picture mode and the format type is displayed at the bottom of the screen For more information on screen size, go to page 9 Why does channel search find a lot of channels

but when I try to tune to them, there's nothing there?

When channels are unavailable, your TV screen is blank or appears like snow. You probably want to remove these channels from your channel list. Remove these in the Channel List Menu. Go to page 8 for more

Some channels don't carry programming, such as video On Demand.

Why does it take a long time when I search the channels

If you have both analog and digital channels, the TV is looking for all available channels in the channel list. If you do have digital channels, the TV is also searching for scrambled channels, non-scrambled channels and each sub-channel of that digital channel

Identifying Problems

If there are any problems when using the product, please consult the ist below. If the list does not solve the problem, call our Customer

The TV can't be turned on. Make sure the AC cord is plugged in

- Check the wall outlet, make sure the AC output works normally

The side panel may be locked (disabled). Use the remote control

Select the Keypad Lock function in the PARENTAL control Menu

and press OK to uncheck the locking status.

There is no picture or sound but the TV is on and there is a "No

The sound is fine, but the picture is poor.

to it? For using other video/audio device, make sure the external device works normally first, then press INPUT and choose the right input source. The Signal Type option may be set incorrectly. Go to page 8 for

Are you trying to use an input source with no device connected

The channel may be blank. Try to search the channel again or

change another channel.

- If you can only get black and white pictures from external device

that you've connected to your TV, maybe it is due to the video

Quick Menu

QUICK MENU

CHANNEL

4_▶ Move

are shown below

ecute an auto channel search.

go to TV channel directly in sub-menu

Select your TV signal type: Air or Cable

Display how strong your TV signal is.

options can be applied to each input.

DTV Signal(In DTV Mode)

Picture Menu

Auto Scan

Show / Hide

Channel List

The Quick Menu contains menus and provides you a quick way to

approached. Press MENU on the remote and then you will see the

from the Main menu. Press the OK/down button to proceed to

(ox) Select

Use up/down to choose the function you need, press OK or right

Enter sub-menu and press OK to show or hide the TV channel.

Displays a channel list. It shows the current channels. Press OK to

The Picture Menu contains menus and controls to configure the

arrow to adjust or enter a sub-menu. The detailed explanation

∢ Air

(vev) Seturn

Auto Scan

Show / Hide

Channel List

Signal Type

DTV Signal

icture Mode

Quick Menu showing on your screen. Press the down button to

approach the main settings that may be most possibly and frequently

proceed the Quick Menu. Use up/down to choose the function you need, press OK to enter a sub-menu and press left/right arrow to Jan-01 07:10 Sat

eing broadcasted in stereo or mono. I the current channel is digital, this space will be SAP (Second Audio Program) language.

Channel Menu The Channel Menu enables you to search, view and edit channels It is available in TV mode only. Press MENU and choose CHANNEL

Displays the screen aspect ratio. 4:3/CC Display the CC status (on or off)

Jan-01 07:10 Sat Displays current program date and time.

Press the VOL+/VOL- button on the remote control to adjust the volume. If you want to switch sound off, press MUTE. When OSD (On Screen Display) is not used, the arrows left/right can also work

Press EPG button on the remote control, the electronic program quide will appear in the center of screen. The electronic program guide gives the TV program playing project. You can use left/right arrows to switch pages

OSD Menu Operations

Adjust the OSD Screen

The OSD (On Screen Display) menu enables you to approach to the TV functions. To use OSD menu system, press OK button on remote control, then

use left/right arrow to highlight an option from QUICK, CHANNEL, Signal Type Press the up and down arrow to move to a different option within

each menu. If necessary, press OK or right arrow to display the choices of the option you've highlighted. If available, use the text at the bottom of each screen for help. To return to the previous menu

Press the HOME button. The menu will clear from the screen

How do I tell an analog channel from a digital channel? Check the connection stability first, then check the correctness Press the OK button to display the Channel Bar, when OSD

> For Component input, the three Y. Pb. Pr video cables (red. blue and green) should be connect to the corresponding input jacks on the side of your TV.

Press the OK/down button to proceed to PICTURE menu.

- Check the antenna connections. Make sure all of the cables are firmly connected to the TV jack on side of your TV.

- Try adjusting the color features to improve. There is no sound, but the picture is fine.

In jack on the side of your TV.

- The sound might be muted. Try pressing the MUTE button to

- For using AV or Component, remember to connect the device's left d right audio output correctly. The left channel cable is white and th right channel cable is red. Please match the cables and jacks according

The sound settings may not be set correctly. Go to page 9 for

- If your audio source has only one jack or is a (mono) audio source make sure you have plugged the connection into the Audio In L jack

The buttons on the side panel don't work.

The side panel may be locked (disabled). Use the remote control to

Select the Keypad Lock function in the PARENTAL control Menu and press OK to uncheck the locking status. - Unplug the TV from the AC power for 10 minutes and then plug it back.

Turn the TV on and try again. The TV turns off unexpectedly.

a power surge. Wait 30 seconds and then turn the TV on again

If this happens frequently, the voltage in your house may be abnormal If the other electronic equipment in your home can't work normally, consult a qualified service personnel

Can't select a certain channel.

The channel may be blocked or not approved in the PARENTAL control Menu.

The channel may be skipped in channel list in CHANNEL Menu. Check the blocking and skipping status of channel. The stereo sound performance is bad.

- It may be a weak station. Use the AUDIO Menu and set Analog Sound as

A black box appears on the screen


Closed captioning might be on. Check Closed Caption in the SETUP menu. Go to page 10 for more instructions.

Problems with the HDMI Connection

- Make sure the HDMI device (DVD, video gamer, etc.) is turned on and the cables are firmly connected If problems still occur, turn off your device and reconnect it. Reset the power by unplugging the power cord and plugging it again.

- If a "No Signal" message appears on screen , the HDMI device isn't responding. Contact the manufacturer of the HDMI device for

- If you have black bars on each side of your picture (which neans the TV can not display a full-screen image), the device you connected might have a switch or a menu option allowing you to change the picture quality output that will fix this. Choose either 720p or 1080i.

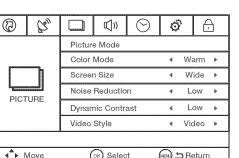

rrow to adjust or en	ose the function you ne ter a sub-menu. The d able, use the text at the	
C. A 8 N 1 .		

Choose the preset visual mode of your TV: Standard, Movie, User, Dynamic, Power Saving. (Only in User mode

you can adjust Brightness, Contrast, Color, Tint and Sharpness Changes to Power Saving mode can decrease the power

· Brightness: Adjust the brightness of picture.

. Tint: Adjust the balance between red and green level (only

. Contrast: Adjust the contrast of color.

available in NTSC signal). · Sharpness: Adjust the sharpness level of picture

This option allows you to select one of three automatic color adjustments: Cool for a bluer palette of picture colors; Normal or Warm for a redder palette of color.

creen Size Cinema, Zoom, and Normal.) Please choose the ratio that applies o your video signal format best.

Set noise reduction as Off/low/Medium/High

Dynamic Contrast Set dynamic contrast Off/low/Medium/High.

If you connect the HDMI/DVI port of PC to HDMI jack of the TV and the video signal is 1080p, please choose the compatible video style: Video, Graphic.

Note: Noise reduction belos to reduce the nicture "static" or a type of interference. This feature is especially useful for providing a clearer picture in weak analog signal conditions.

The Audio Menu lets you adjust audio output. To access the

						ed to Aud	io
®	80		(j))	9	Q)	A	
		Sound	Mode]
One of the last	1	Audio	Languag	е	∢ En	glish 🕨]
Щ))	Analog	g Audio C	utput	∢ ST	EREO ▶	1
AUE	010	Digital	Audio O	utput	4 P	CM ▶	1

way the picture appears. The Picture Menu options apply to the video for the main TV and VIDEO INPUT selections. All picture Press MENU on the remote. Select Picture from the Main menu. (IIII) 🗢 Return (ok) Select

-There may be an AC power failure or the power cord

The batteries in the remote may be weak, dead, or installed

- Something might be blocking between the remote control and the

remote sensor on the front panel of the TV. Make sure there is a clear path.

You are experiencing problems with V-Chip/Parental Controls.

- If the rating limits don't work, you must lock the settings. Go to the

Main Menu (press MENU on your remote), select PARENTAL control to

If you've been through the Troubleshooting section and nothing has

Note that after a reboot, you may need to run your TV through the

setup process again. To reboot, unplug the power cord from the wall

Keep your TV unplugged for about 5 minutes. Then plug in the TV and

If the problem remains, then please visit the Customer Support Menu at

Wall Mounting Unit Specification

VESA 200 x 100 M6 screws, length 12mm

We only provide the installing specifications but not the wall mount itself.

If you need the mount, please consult with the local dealer for a VESA

B. We strongly suggest to set the wall mount with equipments of

damage to device or people.

the TV set may fall.

vall to prevent cable interference

specification we ordered. If not, inappropriate installing may cause

D. We suggest that you keep your TV at least 2.36 inches(60mm) from the

f. Do not set up the wall mount by yourself. Please contact qualified professionals for installation.

an angle more than 10 degrees with vertical direction. Otherwise

3. The walls for mounting must have enough strength to hold the whole weight of TV set. For example, concrete wall and brickwork

The TV should not be mounted on walls or surfaces which have

rca.com or updated FAQs or contact RCA Customer Support at

The Remote control doesn't work.

The remote may not be aimed directly at the TV.

incorrectly. Put new batteries in the remote.

fixed your problem, try rebooting your TV.

turn it on. See if the problem is fixed.

the support number provided in your Warranty card.

check the settings.

outlet or power strip.

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are

Choose the preset sound mode of your TV: Standard, Soft, User, Dynamic. Only in User mode you can adjust

Sound Mode

· Bass: Adjust the bass component of TV sound.

Select digital TV audio language type: English, French or Spanish

Select analog TV audio sound type: Stereo, SAP or Mono (only

Set the audio output type as Off, PCM or Raw. Please set this

Creates a 3D sound surround from standard stereo material, with

Press OK button to activate audio only mode. The TV will output only

sound and the LED LCD panel will be turned off. To restore normal

The seven-band graphic equalizer allows you to adjust the audio

frequency settings. You can select one of the equalizer presets

(Off, Pop, Rock, Jazz) or create your own personal preset (User)

Press the left or right arrow to select the frequency (100Hz, 250Hz

500Hz, 1KHz, 2KHz, 4KHz, 10KHz), you want to adjust. Use the

The Time Menu lets you change the TV time settings. To access

the Time Menu, press MENU on the remote, and then select Time

Time Zone

Auto Clock

Treble: Adjust the treble component of TV sound.

(only available for DTV channel).

option according to your power amplifier.

playing, hold POWER button for three seconds.

Analog Audio Output

available in TV mode)

Digital Audio Output

deep and rich enhancement.

Audio Only

Auto Volume

Equalizer Settings

from the Main Menu.

TIME

2014/1/18 12:0 PM Wake Up OSD Display Duration 4 15 Sec. I OK) Select Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are

4 Off ▶

∢ Eastern ▶

4 On ▶

Set the sleep timer(Off, 5, 10, 15, 30, 60, 90, 120, 180, 240 Min.) The TV will automatically enter standby mode after times up. Time Zone

Showing the country's time zone, you can Set Time zone Off Eastern, Central, Mountain, Pacific, Alaska, Hawaii, Samoa, Newfoundland, Atlantic

are eligible. Do not place the mount on soft walls such as earth

4. If spare parts of different specifications (such as screws) are used during mounting, consult with qualified professionals to make sure these parts are safe and effective.

5. Before attaching the base to wall, ensure the holes for anchors

are in keeping with the installing rules. Otherwise there may exist

6. Do not place any heating source under your television. Or else,

7. Do not place the TV near anything dripping. Transducers and high voltage wires should be kept far away from the apparatus too. Or else, it may cause creepage, electric shock or bad

3. Do not place TV in a location where collision or vibration is

9. In order to avoid unexpected falling of the TV set, do not put

10. Be sure to unplug the TV before installing. Keep anything hard

11. After installing, if there is any need to move the cabinet, please

With USB Media Play, you can enjoy music and photo files stored

- Connect a USB storage device to the USB port in the back of the TV

MOVIE

TEXT

or sharp away from the screen panel to prevent the scuffing

any strong force on TV or wall mount after installing.

USB Media Play

- Press "INPUT" and select "USB".

PHOTO

Playing back Photo files

photo preview, or play slideshow

Plaving back Music files

Playing back Movie files

display text on your mobile devices.

in a USB storage device on your RCA TV.

Connecting a USB storage device

MUSIC

ess arrow (◀/▶) to select "Photo" and press "OK'

ress arrow (◀/▶) to select "Music" and press "OK".

or folder. Press "OK" to playback the music file you selected.

ss arrow (◄/▶) to select "MOVIE" and press "OK".

or folder. Press "OK" to playback the movie file you selected.

- The file or folder list will show up. Press arrow(▲/▼) to select a file

You can directly open and playback the file. View thumbnalls for

- The file or folder list will show up. Press arrow(▲/▼) to select a file

The file or folder list will show up. Press arrow(▲/▼) to select a file

Similar to the photo menu. You can use TEXT menu to access and

or folder. Press "OK", and you will be given several options to view

Auto Clock

Press left/right arrow to select caption display cc on or cc off Select auto clock on/off. Auto clock helps you synchronize your Digital Caption Type

Set your TV time manually (needs to turn off auto clock), press up/

down and left/right arrow to config the current time.

SETUP menu

4_▶ Move

Set the Wake Up time for your TV, after enters menu, you can use the up/down and left/right arrow on the remote control to adiust it.

OSD Display Duration

Set the time how long to display OSD menu(5 Sec, 15 Sec, 30 Sec, 45 Sec, 60 Sec). Setup Menu

The Setup Menu lets you config the TV with your preferences, Select

SETUP from the Main Menu, Press OK/down button to proceed to

9	(Z.)		©)	9	Ø	ď	9
		Menu Language			4	Englisl	h Þ
	4.	Menu Transparency ◀ 0% ▶				▶	
Œ.	} ,	Closed Caption					
SET	UP	All reset					
		Initial Setup Wizard					
		Blue Background			Þ		

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are shown below.


(ок) Select

(мен) 🍮 Return

Menu Language To choose your menu language, press the left/right arrow until the language you need appears. Available languages: English, French and Spanish.

Menu Transparency To choose your menu transparency mode press the left/right arrow until the transparency you need appears: 0%, 25%, 75%

Closed Caption

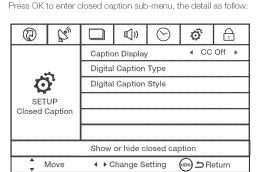

Supported Files	
• Photo	JPG/JPEG files
 Music 	WAV files
Movie	MPG files
Supported USB storage/	file system format
 USB Storage 	USB flash drive
 File System format 	FAT32

Caution: Do not turn off the TV or disconnect USB storage device while the TV is playing back picture or music. his may result in loss of data or damage to the USB storage device, and RCA is not responsible for any damage to, or loss of, data on the USB storage device.

Product Specification

Model		LED40G45HQ
Diagonal Display Size		40 inches
Television System		American TV standard ATSC/NTSC system
Channel C	overage	VHF:2~13 UHF:14~69 CATV:1~135
Temperature		Storage Temperature is $-20^{\circ}\mathrm{C} - +60^{\circ}\mathrm{C} - 4^{\circ}\mathrm{F} - +140^{\circ}\mathrm{F}$ Operating Temperature is $0^{\circ}\mathrm{C} - +50^{\circ}\mathrm{C} +32^{\circ}\mathrm{F} - +122^{\circ}\mathrm{F}$
Humidity		Storage Humidity : Less than 85%RH (No condensation)
		Operation Humidity : Less than 80%RH (No condensation)
Power Sup	ply	AC 100-120V, 60Hz
	RF input	Cable/Antenna × 1 AV × 1
Connection Interface	Video input	Component × 1
	Audio input Audio output	AV × 1 Headphone × 1, Digital Audio Out × 1
Resolution		1920 × 1080
Component	/HDML mode	480i, 480p, 720p, 1080i, 1080p
	With stand	36.4"W × 22.8"H × 7.7"D
Dimensions	Without stand	36.4"W × 21.7"H × 3.9"D
Weight	With stand	19.2LBS(8.7KGS)
	Without stand	18.3LBS(8.3KGS)
Power Consumption		less than 59W

Limited Warranty for USA

product, we will pay an authorized RCA service center the labor charge to repair any defects in materials or workmanship in your television.If your television is unrepairable we will provide you with a refurbished unit of the same or better model. Coverage - Parts For a period of 12 months from date of purchase of your RCA

For a period of 12 months from date of purchase of your RCA

product, we will pay an authorized RCA service center for the new,or at our option, refurbished replacement parts needed to repair any defects in material or workmanship in your television. If your television is unrepairable we will provide you with a refurbished Coverage - LED LCD Panel

For a period of 12 months from date of purchase of your RCA

product, we will pay an authorized RCA service center for the

TV time to standard time (from DTV signal)

Service1, Service2, Service3, Service4, Service5, Service6 Digital Caption Style to select the closed caption style. Select the item you want to adjust

in Digital CC Style menu with up/down arrows. After changing, you can preview the caption style in the bottom . Mode: Decide whether you can change the settings on the CC

/right arrow to select digital closed caption to

• CC Size: Set the CC font size (Default, Normal, Large, Small)

 CC Opacity Color: Set the CC opacity color (Default, Solid, Flashing, Translucent, Transparent)

 Text Color: Set the CC text color (Default, White, Red, Green Blue, Yellow, Magenta, Cyan). CC Background Opacity: Set the CC background opacity (Default, Solid, Flashing, Translucent, Transparent).

CC Background: Set the CC background color (Default, White,

Red, Green, Blue, Yellow, Magenta, Cyan) Press OK button to execute reset to TV system. All the settings

will be reset to factory default.

Note: The OSD's appearance and color are referred to the actual


Blue Back Press OK button to select Blue Back on or off. If the Blue Back is

turned on, the TV will display a blue background when there is no signal input. No Signal Power Off

Press left/right arrow to select a time period (Off, 1 Min, 5 Min, 10 Min) for "No Signal Power Off". The TV will shut off after that period of time while no signal. We suggest you turn on this function when Blue Back is turned on. It may hurt the LED LCD panel if blue screen on for too long.

Adopted in TV output of digital audio, can be connected to the device supporting ARC, transmit the TV sound to the device. Lock Menu

he Lock Menu enables you to lock program with special content, panel key board and input source. Press MENU on the remote and choose Lock Menu from the Main Menu. Press the down button to proceed the Lock Menu. The menu image and explanation are shown

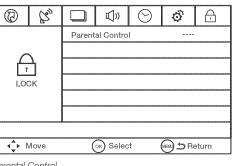

of the same or better model.

How to Obtain Service

operating instruction

workmanship.

Commercial Use Excluded

 When the Parental Control Menu is accessed from the Main Menu. you need to enter password to unlock the menu function. Please enter your four-digit password with numeric keys 0~9. Note: The After unlocking, the items in parental control menu can be used.

Use arrow up/down to highlight the function you need and press OK or right arrow to use V-chip. Change Password, Keypad Lock and Source Lock, Clear Channel List sub-menu

new, or at our option, refurbished LED LCD panel needed to repair.

any defects in material or workmanship in your television. If your

television is unrepairable we will provide you with a refurbished unit

For assistance (U.S.A) - if you purchased RCA product in

The service representative will review your options for service.

representative, you may take your product to an autho

Items Not Covered By Limited Warranty

Your limited warranty does not cover the following items:

-Batteries and customer replacement fuses

As a convenience we offer three ways to obtain warranty service.

You may mail your product to the address provided by the service

center, or you may request in home service (servicer will determine if

product is serviceable in home or must be taken back to local service

center for repair). Service representative will supply instructions for

preferred service. At the time of service proof of purchase such as

original receipt, will be required, Only 37" LCD size and above are

-Un-installation, installation and adjustment of customer controls and

-Damage due to misuse, abuse, negligence or neglect including but, not

-Inability to receive a signal due to problems not caused by the product.

-Product purchased or serviced outside of Country of Original

-i.e. Purchased USA can not be serviced in Mexico/Purchased in

-Damage due to acts of nature, including but not limited to, lightning

This limited warranty only applies to products used for personal use

LIMITATION OF WARRANTY

limited to damage resulting from exposure to moisture, burnidity or salt

-Damage to the product due to images burnt into the screen

-Product modified or incorporated into other products

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS

RCA is a trademark of RCA Trademark Management SAS and used under license by ON Corporation

Garantia limitada para EE.UU

Si su televisor es irreparable que le proporcionara una unidad

Cobertura / Recambios

en E.U.A. favor dellamar al: 1-888-977-6722

Panel de Cobertura-LED LCD

Durante un periodo de 12 meses desde la fecha de compra de su producto RCA, pagaremos un centro autorizado de servicio de RCA para un reemplazar la pantalla LED LCD, ya sea con pantalla nueva o reacondicionada, o a nuestra onción, para reparar cualquier defecto del material o mano de obra en la pantalla de su televisor. Si su televisor

and does not cover any product used for institutional, commercial or

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY APPLICABLE TO THIS PRODUCT, ON CORP US, INC. THE MANUFACTURER OF THIS PRODUCT, DISCLAIMS ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). NO VERBAL OR WRITTEN INFORMATION. GIVEN BY ON CORP US, INC., ITS AGENTS, INDEPENDENT CONTRACTORS, SALES REPRESENTATIVES, EMPLOYEES, RETAIL DEALERS, WHOLE SALE DISTRIBUTORS OR ANY OTHER THIRD PARTY SHALL CREATE A GUARANTY OR INCREASE, EXPAND OR

THIS LIMITED WARRANTY PROVIDES THE SOLE AND EXCLUSIVE REMEDY FOR THE CONSUMER OF REPAIR OR REPLACEMENTOF THE PRODUCT, ON CORP US, INC. SHALL NOT BE LIABLE FOR SPECIAL INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THEP RODUCT OR ARISING OUT OF A BREACH EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT.

MODIEY THE SCOPE OF THIS LIMITED WARRANTY

THIS LIMITED WARRANTY AND THE DISCLAIMERS CONTAINED HEREIN ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO APPLICABLE LIMITED WARRANTY PERIOD(S) SET FORTH ABOVE.

Change PIN

Input Block

Keypad Lock

Clear Channel Lis

Change your 4-digit PIN

OK Change Setting (NEW) S Return

V-CHIP

Remote

This option allows you to lock or unlock the input source. The

the correct parental password. Use up/down arrow to select the

Block UnRated Show

Downloadable Rating

Restrict movie and TV programs by US Ratings

Similar with Movie Rating. After adjusting, press MENU to return or press HOME to exit the menu.

Ise arrow keys to select the rating level you want to block, press

OK to lock/unlock the rating level. If you have blocked a lower leve

ating, the higher ratings will be blocked too. For example, when

PG-13 is blocked, R, NC-17 and X will be blocked at the same

Detail

G General Audience (no restrictions)

Restricted, Children under 17

PG Parental guidance suggested.

NC-17 No children under age 17

Clear Downloadable Data

(ok) Change Setting Seturn

D Sexually Explicit Dialogue

L Adult Language

US V-CHIP

Canada V-CHIF

e the PIN of parental menu

source, press OK to lock or unlock it.

Move

Rating Age-Based Ratings

TV-Y7 Directed to Children 7 Years and Older

TV-MA Mature Audience Only

TV-PG Parents Guidance Suggested V Violence

TV-14 Parents Strongly Cautioned FV Fantasy Violence

TV-Y All Children

Movie Rating

LOCK

Control

Change PIN

Input Block

FROM STATE TO STATE.

Durante un periodo de 12 meses desde la fecha de compra de su ducto RCA, pagaremos a un centro autorizado de servicio de RCA el cargo de mano de obra para reparar cualquier defecto en materiale:

Durante un periodo de 12 meses desde la fecha de compra de s producto RCA, pagaremos a un centro autorizado de servicio de RCA para un reemplazar ya sea con partes nuevas o reacondicionadas, o a nuestra opcion, para reparar cualquier defecto del material o mano de

Si su televisor es irreparable que le proporcionara una unidad

es irreparable que le proporcionara una unidad reacondicionada del Como Obtener Servicio

Para asistencia en Estados Unidos (E.U.A) si compro un aparato RCA

I representante de Servicio revisara sus opciones para el servicio. Para su comodidad le ofrecemos tres formas de obtener servicio de

I representante de servicio, usted puede llevar su producto a un centro de servicio autorizado, o puede solicitar en el servicio a domicilio (administrador determinara si el producto se encuentre en funcionamiento en casa o debe ser llevado de vuelta a servicio local tecnico para su reparacion). El representante del Servicio le proporcionara las instrucciones para el

Usted puede enviar su producto a la direccion proporcionada po

Se requiere del comprobante de compra original.

Solo se les dara servicio a Domicilio a Televisores de 37 " pulgadas de

tamano y mas grandes.

Elementos no cubiertos por la garantia limitada Su garantia limitada no cubre los siguientes temas: Un-instalacion, montaje y ajuste de controles del cliente

e instrucciones de funcionamiento Las pilas y los fusibles de repuesto al cliente Danos por uso indebido, abuso, negligencia o descuido.

incluyendo pero no limitado a, los danos derivados

de la exposicion a la humedad, la humedad o la sal.

Block Unrated Show Block all the unrated program.

Clear Downloadable Data Activate or downloadable rating data, if available

Keypad Lock Select this option to block or unblock the TV's side panel buttons

This option allows you to execute Clear Channel List function.

Frequently Asked Questions (FAQs)

Connect an antenna to the TV Input jack to view free local digital channels. You may need to purchase an antenna. (See page 5 for more information about antenna setup). Visit www.antennaweb.org for assistance in deciding what type of antenna to use to receive the local digital channels available to you.

Are there other ways to view High Definition(HD) video?

Besides using an antenna as mentioned above, you can also use a set-

Incapacidad para recibir la senal debido a los problemas que no son causadas por el producto.

 Productos comprados o prestar servicios fuera del pais de compra original.

servicios en Mexico/Comprado en Mexico no puede prestar servicios en Estados Unidos. Danos debidos a fenomenos de la naturaleza, incluvendo

Uso Comercial Exclusion Esta garantia limitada solo se aplica a los productos utilizados para uso personal o, y no cubre todos los productos utilizados con

LIMITACION DE GARANTIA

cualquier otra garantia, expresada o implicada (INCLUYENDO DEBERAN crear una garantia ni aumentar. Ampliar c

PARA EL CONSUMIDOR DE REPARACION O REEMPLAZO DEL PRODUCTO, EN CORP EE,UU., Inc. no sera resnancable nor danas especiales, incidentales a consequentes resultantes DELUSO DEL PRODUCTO O DERIVADOS DE UNA VIOLACION garantia expresa o

Esta GARANTIA LIMITADA DEL UNICO Y EXCLUSIVO REMEDIO

ESTA GARANTIA LIMITADA Y RESPONSABILIDADES contenida en el se rige por las Leyes del Estado de Indiana, SALVOPROHIBIDO POR LA LEY APLICABLE, CUALQUIER GARANTIA IMPLICITA DE COMERCIALIZACION O IDONEIDAD PARA UN PROPOSITO PARTICULAR ESTARA LIMITADA A LIMITADA periodo de garantia (S) mencionado anteriormente. Esta garantia le otorga derechos legales especificos y USTED TAMBIEN PUEDE TENER OTROS DERECHOS,

ON Corporation

RCA es una marca registrada de SAS bajo lici

10920 Via Frontera, Ste 540 San Diego, CA 92127, U.S.A. ©2014 ON Corporation

RCA is a trademark of RCA Trademark Management

Rating Detail Programming intended for children under age 8. children 8 years and over to watch on their own. General programming, suitable for all audiences. Parental Guidance

Press OK to enter French rating menu. Similar with English



Note: These ratings are available only if the broadcaster is sending

Press OK to enter US V-Chip ratings menu, which contains two sub-menus: TV rating and Movie Rating.

so that they can't be used. Clear Channel List

This function will reset the whole TV system to factory default (not only reset OSD menu).

select your remote: Off, remote1 or remote2. this is for special

What's the most convenient way to view High Definition (HD)

After entering your location, this mapping program tells you which local analog and digital stations are available using a certain antenna.

top box to receive digital video. Contact your cable service provider or satellite provider to purchase digital programming and have them connect the box to ensure you are

Danos en el producto debido a las imagenes de grabadas

El: Comprado en Estados Unidos no puede prestar Productos modificados o incorporados a otros productos

pero no limitado a, danos por rayos o inundaciones Las llamadas de servicio que no impliquen cualquier

defecto en materiales o mano de obra.

fines institucionales, comerciales o de alquiler.

ESTA GARANTIA LIMITADA ES EL UNICO Y EXCLUSIVO DE GARANTIA APLICABLE A ESTE PRODUCTO. EN CORP FE UU, Inc., el fabricante de este producto, rechaza TODAS LAS GARANTIAS IMPLICITAS DE COMERCIAL IZACION O IDONEIDAD PARA UN PROPOSITO PARTICULAR). NO informacion verbal o escrita por part CORP DE EE.UU., Inc., sus agentes, contratistas independientes, representantes de ventas, empleados, comerciantes minoristas, mavoristas o cualquier otro tercerc

implicita de este producto.

QUE PUEDEN VARIAR DE ESTADO.

ON Corp US, Inc

RCA es una marcade RCA Trademark Management

SAS usada bajo licencia de ON Corporation

which may not be suitable for viewers under age of 14 Adult programming

Press OK or right arrow to enter Canada V-Chip ratings menu, which

ress OK to enter English rating menu. Use arrow keys to select the

evel. If you have blocked a lower level rating, the higher ratings will be blocked too. For example, when PG is blocked, 14+ and 18+ will

rating level you want to block, press OK to lock/unlock the rating

contains two sub-menus: English Rating and French Rating

English Rating

be blocked at the same time.