For Medium (15,000-18,500 BTU) + Heavy duty (22,000-28,500 BTU) Air Conditioner READ BEFORE INSTALLING UNIT

INSTALLATION WARNINGS AND CAUTION

- * Carefully read the installation manual before beginning.
- Follow each step as shown.
- * Observe all local, state, and national electrical codes and by qualified, licensed, authorized personnel only.
- * Pay attention to danger and safety notices.
- To avoid risk of personal injury, property damage, or product damage due to the weight of this device and sharp edges that may be exposed:
- Air conditioners covered in this manual pose an excessive weight hazard. Two or more people are needed to move and install the unit. Wear protective gloves whenever lifting or carrying the unit. AVOID the sharp metal fins of front and rear coils. To prevent injury or strain, use proper lifting and carrying techniques when moving unit.
- * Carefully inspect location where air conditioner will be installed. Be sure it will support the weight of the unit overan extended period of time.
- * Handle air conditioner with care.
- * Make sure air conditioner does not fall during installation.
- * If a new electrical outlet is required, have the outlet installed by a qualified electrician before installing unit.

NOTE: DO NOT USE ANY SCREWS OTHER THAN THOSE SPECIFIED HERE. Preliminary instructions: window sash seal Do the following before starting to install unit. See illustrations below. Check dimensions of your unit to determine model type: Ì safety lock and Heavy duty Medium 1/2" long hex head screw Capacity: 22,000~28,500 BTL 15,000~18,500 BTU top angle Unit Height: 18-5/8" 17-5/8" foam gasket Unit Width: 26-1/2" 23-5/8" washer head locking screw Min. Window Opening 19-1/2" 18-1/2" Min. Window Width: 31" 26-1/2" frame assembly 42" Max. Window Width: 40-1/2" (left) 1. Check window opening size: the mounting parts furnished with this air conditioner are made to install in side retainer a wooden sill double-hung window. The standard parts are for window dimensions listed above. Open sash to 1/2" lona screws and a minimum of 19" (483mm). (FIG.1) bottom rail locknuts 2. Check condition of window: all wood parts of window seal to unit must be in good shape and able to firmly hold the needed window frame locknut 3/4 support bracket assembly screws. If not, make repairs before installing unit. long flat (right) head bolt 3. Check your storm windows: If your storm window sill angle frame does not allow the clearance required, correct by bracket adding a piece of wood as shown (FIG.2), or by removing storm window while room air conditioner is being installed. FIG.1 FIG.2 sash sash 19" min 1/2" min 1-1/2" min 19" min inner sill 1/2" min inner sill board thickness as outer sill required, along entire inner outer sill window sill; fasten to inner storm window frame or sill with two nails or screws. other obstruction storm window frame or 2020218A1534 other obstruction

4. Check for anything that could block airflow

Check area outside of window for things such as shrubs, trees, or awnings, Inside, be sure furniture, drapes, or blinds will not stop proper air flow.

5. Check the available electrical service

Power supply must be the same as that shown on the unit serial nameplate. (See Use & Care Guide for serial plate location.) Power cord is 48" long. Be sure you have an outlet near.

All models have a 3-prong service plug to provide proper service and safe positive grouding. Do not change plug in any way. Do not use an adapter plug. If your present wall outlet does not match your plug, call a qualified electrician to make the needed change.

6. Carefully unpack air conditioner

Remove all packing material. Protect floor or other stable flat surface with covering to prevent scratches from unit. With the aid of an assistant, remove unit from styrofoam base and rest on protected surface. Move and install unit with the aid of an assistant. Save packing and shipping box for future unit storage.

Accessory Kit includes		
 Hardware bag(shipped inside window support brackets) 	 Foam gasket 	
 Window support bracket (2) 	 Window sash seal 	
 Side retainer (2) 	 Bottom rail seal 	
Window Filler Panel (2)	 Top angle rail 	
* MEDIUM models only		

HEAVY DUTY top angle rail can be found in carton base packaging (FIG.3)

Tools Required			
• a large flat blade screwdriver	 tape measure 		
 adjustable wrench or pliers 	• pencil		
• level	 Socket wrenches 		
Phillips screwdriver			

L

Hardware	Qty		Hardware	Qty.
7/16" Locking S Washer for wind		a S	Sill Angle Bracket	2
1/2" Long hex h	ead screw 7		Long hex-head locking screw fo angle rail, side retainer 5/16" lor	
Safety Lock	1	Ŷ	Safety Lock (for Vinyl-Clad window)	2
1/2" Long Screw and locknut	4 e		Locking screw #10 X 1/4" panhe Phillips screws (for Vinyl-Clad with the screws)	
3/4" Long Flat H and Locknut	ead Bolt 2 ea		weather seals (6"X3/4"X1/12")	5
6 foam insert	2			

AWARNING Avoid fire hazard or electric shock. Do not use an extension cord or an adaptor plug. Do not remove any prong from the power cord.

230

Remark: The appearance of actual plug may be slightly different from the line drawing shown in the figure. The line drawings are for

230V

304

reference only.

HEAVY DUTY

(22,000~28,500BTU)

TOP ANGLE RAIL

Grounding Prong

Do not, under any

circumstances, cut, remove or bypass the grounding prong.

 \square

FIG.3

230

204

Mounting

 
Remove Air Conditioner from Cabinet

NOTE: Remove any packaging material from cabinet exterior.

1. Pull down on front grille from upper edge. Lift front grille upwards and place to one side. (See FIG.1)

Window

 Remove filter. To remove, grasp in the middle on each side. Bow filter out to detach top edge from tabs. Once top is free, lift filter up and out.
 FIG.2






3. Locate the four Front Panel screws and remove. These screws will be needed to re-install the Front Panel later (See FIG.2).

4. Push metal cabinet side inward to release plastic tabs on each side of Front Panel (see Fig. 3).

5. Rotate Front Panel up until top tabs are free. Pull panel straight out. When pulling out, front panel will also pull free from vent control lever. Depress latch on electronics plug (on some models) to disconnect.

 6. Remove Front Panel from unit (see Fig. 4).





Remove shipping screws from top of unit and also on both sides by the base if installed. (See FIG.5)
 With the aid of an assistant, hold the cabinet while pulling on the base pan handle (see FIG. 4), and carefully remove the air conditioner from cabinet.

 Add two foam inserts to holes in top of cabinet where shipping screws were removed from. (See FIG.6)
 Except 22,000BTU model, other heavy duty models (24,000~28,500BTU) come with internal shipping packaging. THIS PACKAGING AND PLASTIC TIES MUST BE REMOVED PRIOR TO INSTALLING THE AIR CONDITIONER BACK INTO THE CABINET. (See FIG.7)

11. Remove plastic wrapping from all points on power cord.



2 Install Top Angle Rail and Side Retainers

1. Remove adhesive strip coating from foam gasket. Attach adhesive side of gasket to bottom of top angle rail. Insert four 5/16" screws from inside of cabinet and secure to top angle rail.

2. From inside of cabinet insert three 5/16" screws to attach each side retainer as shown in Fig. 8. Attach side retainers with flat side against cabinet and angled edge toward rear of cabinet.

 
3 Assemble Window Filler Panels


1. Place cabinet on floor, a bench, or a table.


2. Slide "I" section at end of window filler panel into side retainer on each side of the cabinet (see FIG. 9 and FIG.10).

3. On each side of cabinet, insert top and bottom legs of window filler panel frame into channel in the top and bottom angle rails.

4. Insert a 7/16" locking screw and flat washer into hole on top leg of each window filler panel (see section 6). Do not totally tighten. Allow leg to slide freely. Screws will be tightened after Section 6.



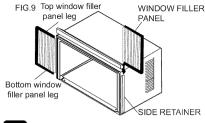

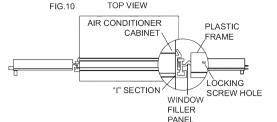


Place Cabinet in Window

1. Open window and mark the center of window inner sill as shown (FIG. 11).


 Place cabinet in window with cabinet bracket securely seated over edge of inner sill as shown in FIG. 12. Bring window down temporarily behind top angle rail to hold cabinet in place.
 Shift cabinet left or right as needed to line up center of cabinet on center line marked on inner sill.

4. For wooden window: Fasten cabinet to window inner sill with two 1/2" long hex head screws into holes (FIG.13A). (You may wish to pre-drill pilot holes.)

 For Vinyl-Clad window: Place two safety locks into the holes located in the bottom of the cabinet and drive two #10X1/4" pan-head Phillips locking screws through the safety locks into the cabinet as shown (FIG.13B).



 Remove protective strip from adhesive side of Bottom Rail Foam Seal. Apply Seal over screws fastening bottom rail to window inner sill.

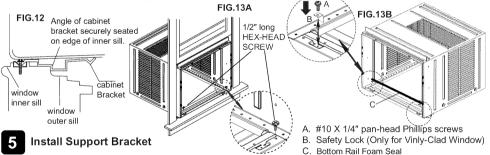


1. Hold each support bracket flush against outside of sill and tight to bottom of cabinet. Mark brackets at top level of sill. Mark cabinet bottom at distance of sill width. See Fig. 15 A. Remove support brackets.

2. Attach sill angle brackets to support brackets at marked positions with flat head bolts and nuts. Hand tighten only at this point. See Fig. 15B.

3. Insert 1/2" long bolts through appropriate holes in cabinet bottom given the sill width distance. Thread the bolts into the slots of the support brackets. Tighten lock washer nuts onto bolts.

4. Adjust height of sill angle bracket so that bracket rests securely on edge of sill, and so that cabinet has about 7/8" to 1 1/4" downward tilt for proper water drainage (tilted about 2° to 4° downward to the outside, see Fig. 14). Tighten nuts securely. After proper installation, condensate should not drain from the overflow drain hole during normal use, correct the slope otherwise.

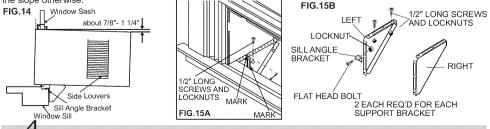


6 Extend Window Filler Panels and attach to top angle rail:

1. Carefully raise window to expose filler panel locking screws on top angle rail. Loosen screws so filler panels slide easily.

2. Extend panels to fill window opening completely. Tighten locking screws on top (FIG. 16).

3. Close window behind top angle rail.

4. Attach the top angle rail to window frame: Use a 3/32" drill bit to drill one hole through the hole in the middle of top angle rail into the window frame, and drive one 1/2" HEX-HEAD locking screw through the hole in the middle of top angle rail into the window frame as shown (FIG. 17).

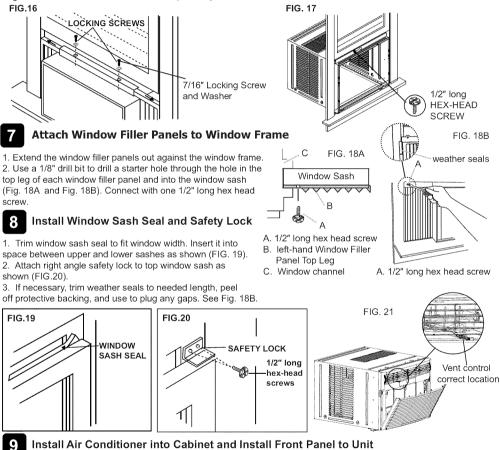

- 1. Lift air conditioner and carefully slide into cabinet.
- 2. CAUTION: Do not push on controls OR finned coils.
- 3. Be sure air conditioner is firmly seated towards rear of cabinet.

4. Reconnect electronics plug if present. Position vent control lever so that it will thread into its channel in the front panel (see FIG.21). Hook front panel top tabs into slots on cabinet top, and rotate front panel down so that side tabs snap into place on cabinet. Insert 4 previously removed screws through front panel and into air conditioner.

5. Insert air conditioner filter. Reinstall the front grille by hooking bottom tabs into slots on Front Panel bottom, then rotating grille up to snap into place.

Thru-The-Wall Installation

NOTE:

· Consult local building codes prior to installation, or a qualified carpenter.

Select Wall Location

This air conditioner slides out from its cabinet, so that it can be installed through an outside wall as explained below.

	Heavy duty	Medium
Max wall thickness	10″	8"

NOTE:

- IMPORTANT: Side louvers must never be blocked.
- All parts needed for Thru-The-Wall Installation are provided, except a wood frame, shims, and 10 wood screws (#10-1" long minimum). Select a wall surface that:

1. Does not support major structural loads such as the frame construction at ends of windows, and under truss-bearing points, etc.

- 2. Does not have plumbing or wiring inside.
- 3. Is near existing electrical outlets, or where another outlet can be installed.
- 4. Faces to the area to be cooled, and it is not blocked.
- 5. Allows unblocked airflow from rear sides and end (outside) of installed air conditioner.

2 Prepare Wall


 Prepare wall in frame construction (including brick and stucco veneer). Working from inside the room, find wall stud nearest the center of area where air conditioner will be installed (by sounding wall, or by magnetically finding nails).
 Cut out a hole on each side of center stud.


3. Measure between inside edges of every other stud as shown in FIG.1. Carefully measure and cut an opening with the following dimensions depending on your model. See FIG.1 and FIG.2.

WIDTH "X" = inside model width plus twice the thickness of framing material used.

HEIGHT "Y" = inside model height plus twice the thickness of framing material used.


	Heavy Duty	Medium
Capacity:	22,000~28,500BTU	15,000~18,500BTU
Inside Frame Height:	18-7/8" (47.9 cm)	18" (45.7 cm)
Inside Frame Width:	26-3/4" (67.9 cm)	23-7/8" (60.6 cm)

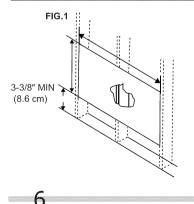

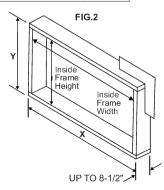

4. Build a wooden frame with the INSIDE dimensions of your model listed above. (Measure twice remember...) Frame depth should be the same as wall thickness. Fill in the space from the opending to the studs with wood spacers, as shown.

5. Nail frame to spacers to spacers with front flush with dry wall.

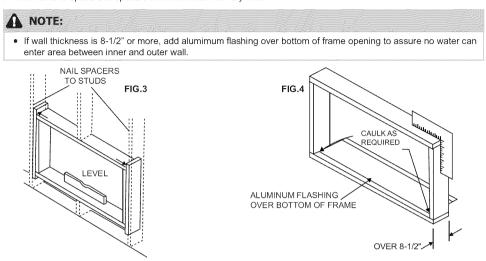


Prepare and Install Cabinet

1. Slide air conditioner from cabinet; refer back to Step 1 of Window Mounting.

2. Place cabinet into opening with bottom rail resting firmly on bottom board of wooden frame.


3. Position cabinet to achieve proper downward tilt for water removal. Unit must tilt back about 7/8" to 1 1/4" for proper water drainage. (See FIG.5 below.)


4. Secure bottom rail to wood frame with two large wood screws 1" (2.5 cm) long using the two holes in the bottom of the channel resting on frame. (See FIG.6 following)

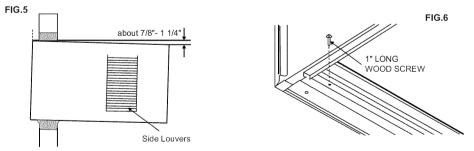

Refer to Step 5 of Window Mounting for assembly of support brackets. Nail a wooden strip to the outside wall for the angle sill bracket to rest upon. See Fig. 7.

5. Screw or nail cabinet to wooden frame using shims as needed to eliminate cabinet distortion. See Fig. 8. Remember to maintain proper tilt as described in Step 3.

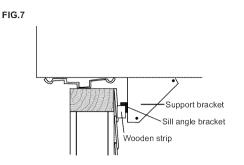

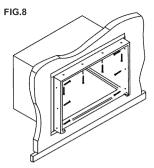

6. Install air conditioner into cabinet by following all steps in Step 9 of Window Mounting.

OPTIONAL: Caulking and installation of trim on interior wall may be done. You can buy wood from your local lumber or hardware supply. On the outside, caulk opendings around top and sides of cabinet, and all sides of wood sleeve to the opening.

NOTE:

8

• See Step 5, Item 4 of Window Mounting Instructions for bottom rail seal location.

Masonry Construction

1. Cut or build a wall opening in the masonry wall similar to the frame construction (refer to Step 2 of Thru-the-Wall Installation for a wall thickness greater than 8-1/2").

2. Secure cabinet in place using masonry nails, or the right masonry anchor screws. (Another way to secure cabinet is to build a frame in the masonry wall such as the one shown in Fig. 3 of Step 2 Prepare Wall. Securely anchor frame to masonry wall. This way gives very good louver clearance on either side of cabinet.)

3. Install a lintel to support masonry wall above cabinet. Existing holes in cabinet can be used and/or additions holes can be drilled to fasten cabinet at various positions. Be sure that side louver clearance is in accordance with Step 1 Select Wall Location.

4. Install exterior cabinet support brackets as shown in Step 3 of Thru-the-Wall Installation. Caulk or flash if needed, to provide a weather-tight seal around top and sides of cabinet.

5. To complete installation, apply wood trim molding around room side projection of cabinet.