Roku[®] Streaming Stick™ (Roku Ready® version) Included

USER'S MANUAL

MODEL LRK32G30RQD



We've built a smarter TV—includes Roku Streaming Stick (Roku Ready Versio

- · No wires, MHL port powers streaming stick
- · Enjoy more than 1000+ entertainment channels • Control with Roku Ready* TV remote and mobile app

HBO GO* is only accessible in the US and certain US territories where a high-speed broadband is available. Some restrictions may apply. 8/2014 Home Box Office, Inc. All rights reserved. SONS ASSESSED TO SOME SEASON TO SOME STREAMING STICK™ are and/or redstated trademarks of Roku, the linite states and other countries.

ease register your product at www.rca.com

Safety Precautions

5. Do not use this apparatus near water. For example, do not use

near a laundry tub, in a wet basement, or near a swimming pool,

7. Do not block any ventilation openings. Install in accordance with

the manufacturer's instructions. Slots and openings in the cabinet

back or bottom are provided for ventilation, to ensure reliable operation of the TV and to protect it from overheating. These

openings must not be blocked or covered. The openings should

never be blocked by placing the TV on a bed, sofa, rug, or other

8. Do not install near any heat sources such as radiators, heat

9. Do not defeat the safety purpose of the polarized or grounding-

type plug. A polarized plug has two blades with one wider than the

other. A grounding-type plug has two blades and a third grounding

prong. The wide blade or the third prong is provided for your

electrician for replacement of the obsolete outlet.

the manufacturer, or sold with the apparatus.

combination to avoid injury from tip-over.

they exit from the apparatus.

cart combination to overturn.

indicated on the rating label

afety. If the provided plug does not fit into your outlet, consult an

10. Protect the power cord from being walked on or pinched

particularly at plugs, convenience receptacles, and the point where

11. Only use attachments/accessories specified by the

12. Use only with cart, stand, tripod, bracket, or table specified by

When a cart is used, use caution when moving the cart/apparatus

A TV and cart combination should be moved with care. Quick

stops, excessive force, and uneven surfaces may cause the TV and

13. Unplug this apparatus during lightning storms or when unused

For added protection for this TV receiver during a lightning storm,

wall outlet and disconnect antenna or cable system.

or when it is left unused for long periods of time, unplug it from the

This will prevent damage to the TV due to lightning and power line

14. Refer all servicing to qualified service personnel. Servicing is

required when the apparatus has been damaged in any way, such

as power-supply cord or plug is damaged, liquid has been spilled

15. This TV should be operated only from the type of power supply

If customer is not sure the type of power supply in your home,

remote control battery power, refer to the operating instructions.

consult your appliance dealer or local power company. For TV

16. The TV set shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the TV set

registers, stoves, or other apparatus (including amplifiers) that

. Read these instructions

2. Keep these instructions

3. Heed all warnings.

4. Follow all instructions

6. Clean only with dry cloth

and the like.

produce heat.

manufacturer.

Serial Number



17. Never push objects of any kind into this TV through openings as they may touch dangerous voltage or other electrical parts that could result in fire or electric shock. Never spill liquid of any kind into

18. Unplug the TV from the wall outlet before cleaning. Do not use

liquid or aero cleaners. Use a damp cloth for cleaning. 19. This TV should never be placed near or over a radiator or heat resource. This TV should not be placed in a built-in installation such

manufacturer's instructions have been adhered to. 20. Do not place this TV on an unstable cart, stand, tripod, bracket, or table. The TV may fall, causing serious injury to someone, and

serious damage to the appliance.

 
21. Do not attempt to service this TV by yourself because opening noving covers may expose you to dangerous high voltage or other hazards. Refer all servicing to qualified service personnel.

22. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

23. WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation


24. To reduce the risk of electric shock, the grounding of center pin


25. If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NEPA NO.70. and supporting structure, grounding of the lead-in wire to ar antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and



Caution: Pushing, pulling or climbing on the TV may cause the TV falling. Do not let children climb or hang on the TV. Always place the And if possible, secure the TV according to the instruction below (Note: The fastening components such as screws are not supplied

  or objects have fallen into the apparatus, the apparatus has been Step one: Insert the M6 mounting screws into the upper two wall exposed to rain or moisture, does not operate normally, or has mounting screw holes and fasten them (Figure B). with ropes or chains (Figure C).





CONTENTS

Choosing TV Channel

Selecting Input Source

EPG (Electronic Program Guide)

Channel Bar

Adjusting Volume

OSD Menu Operations

Quick Menu

Channel Menu

Picture Menu

Audio Menu

Time Menu

Setup Menu

Lock Menu

DVD OPERATIONS

Troubleshooting

USB Media Play

Product Specification

Frequently Asked Questions (FAQs)

Wall Mounting Unit Specification

ROKU

Adjust the OSD Screen

| Child Safety Guide | |
|--|----|
| Caution and Warning | 02 |
| Safety Precautions | 04 |
| Preparation for Your New TV | 05 |
| Check Accessories | 05 |
| Setup TV Table Stand | 05 |
| Select TV Location | 05 |
| Connection and Using | 05 |
| TV Signal Connection | 05 |
| Cable Connections | 05 |
| Side Panel Connections | 05 |
| Connecting AV Composite video device | 05 |
| Connecting YPbPr Component device | 06 |
| Connecting HDMI device | 06 |
| How to obtain various kinds of Input Sources | 06 |
| TV Jacks Explanation | 06 |
| Keypad and Front Panel | 07 |
| Keypad Buttons | 07 |
| Front Panel | 07 |
| Basic Operations | 07 |
| Turning On and Off | 07 |



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered

Preparation for Your New TV

Before Turning On TV

Check Accessories Check the accessories that are packed with your TV.

(refer to Quick Start Guide) as a bookcase or rack unless proper ventilation is provided or the Setup TV Table Stand

Please refer to Quick Start Guide to carry out stand installing

Select a flat, stable table to place your TV set. Please follow the safety instructions when placing the TV.

After placing your TV properly, you can connect the TV with power supply and cable components. For further information, see page 5 to page 6

TV Signal Connection

The first step in connecting your TV is obtaining the signal. Your inalog and/or digital television channels via ANT/CABLE jack. Before connecting your TV, determine using an antenna or a cable service to obtain the signal.


Connect the antenna to TV via coaxial cable on ANT/CABLE lack of the back panel. You are ready to receive air local digital and

B. Cable TV service

Connect the cable TV wall jack to TV via coaxial cable on ANT/CABLE jack of the back panel. You are ready to receive off-air local digital and analog channels.

If you use a set-top box, you may need to call your cable company or satellite service provider, which use a special connection, please refer to the user's guide of set-top box.

Note: Do not plug the AC cord until you have accomplished all the connections. This TV does not support QAM under cable channel

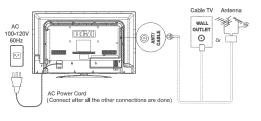

Cable Connections

Choose Your Connections

TV LRK32G30RQD supports various connections to other evices (such as DVD, VCR, Set-top box, etc.). Please follow the table to choose the cables which adapt to your device.

| ****** | | information |
|--|--|---------------|
| COMPOSITE | Video/Audio cable | See the below |
| L-AUDIO-R O O O O O O COMPONENT Y, Pb, Pr L-AUDIO-R | Audio Cable COMPONENT video cable | Go to page 6 |
| (2) (2) (2) (2) (2) (2) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4 | HDMI-DVI cable HDMI cable | Go to page 6 |
| Roku/HDMI3 | MHL cable [ROM] Roku Streaming Stick | Go to page ∂ |

Paution: Unplug the AC cord when you connect other devices to

Side Panel Connections

Connecting AV Composite device (Good Video Quality)

Composite connector will be shared with Component Y connector. o connect a composite AV device, such as a DVD player, follow


1.Connect the COMPOSITE jack on the side of TV to the video output jacks of device via video cable (yellow 2. Connect the L-AUDIO-R lacks on the side of TV to the audio

output jacks of device via audio cable. Notice the left channel jack and plugs are white and the right channel jack and plugs are red.

Note: AV signal belongs to composite video. This kind of video signal has regular good display quality.

Composite Video Connection

The picture below is an example of a connection using the composite video jack.

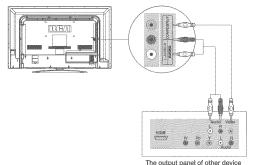

Connecting HDMI device (Best Video Quality)

1. Connect the HDMI 2/DVI jack on the side of TV to the DVI port

of PC via HDMI-DVI cable.

output jack of computer with audio cable (dual-channel RCA jacks to 3,5mm stereo jack or the L-AUDIO-R jack). To connect an ARC HDMI OUT device, please connect to the HDMI input port of the device such as amplifier,

Note: 1. HDMI (High-Definition Multimedia Interface) is a comaudio/video interface for transmitting uncompressed digital data. It carries the audio and video signal via the same cable and has the

audio output to L-AUDIO-R lack on TV back panel.

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



Tune Into Safety

- One size does NOT fit all, follow the manufacturer's recommendation for the safe installation and use of your flat panel display.

- Carefully read and understand all enclosed instructions for proper use of this product.

- Don't allow children to climb on or play with furniture and television sets.

- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers

 Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.

 Care should be taken to route all cords and cables connected to the panel display so that they cannot be pulled or grabbed by curious children.

Wall Mounting: IF YOU DICIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL,CSA,ETL).

- Follow all instructions supplied by the display and wall mount manufacturers.

- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.

unsure, contact a professional installer

Child Safety Guide

The Issue

popular purchases

manufacturer's recommendations.

07

07

80

80

80

80

80

80

80

08

09

09

09

10

13

13

13

08 1 2

The home theater entertainment experience is a

growing trend and larger flat panel displays and

However, flat panel displays are not always supported

on the proper stands or installed according to the

Flat panel displays that are inappropriately situated

on dressers bookcases shelves desks speakers

The consumer electronics industry is committed to

making home entertainment enjoyable and safe.

chests or cats may fall over and cause injury.

 
This Manufacturer Cares!

- A minimum of two people are required for installation. Flat panel displays can be heavy.

Caution and Warning



presence of uninsulated dangerous voltage within the product enclosure that may be of sufficien







(Better Video Quality) o connect a component device, such as a DVD player, follow

Connecting YPbPr Component device


1.Connect the COMPONENT IN Y/Pb/Pr jack on the side of TV to the video output jacks of device via video cable (green, blue and

2.Connect the L-AUDIO-R jacks on the side of TV to the audio output jacks of device via audio cable Notice the left channel jack and plugs are white and the right channel jack and plugs are red.

Note: Y/Pb/Pr lacks are component video. This kind of video signal has better display quality.

Component Video Connection

The picture below is an example of a connection using the component video jack.

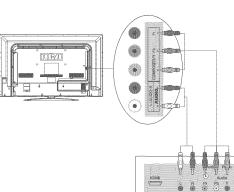

connect a HDMI device, such as a DVD player, please Connect the HDMI 1/ARC, 2/DVI jack on the side of $\overline{\text{TV}}$ to the output jacks of device via HDMI cable.


connect a DVI device, via DVI port of PC or Device and HDMI


2. Connect the L-AUDIO-R lack on the side of TV to the audio

2. HDMI-DVI cable transfers only video signal from DVI port of DVI device to HDMI jack of TV. For audio signal, please connec

The picture below is an example of a connection using the HDMI


Note: 1. Roku Streaming Stick is already connected with HDMI 3. 2. If you want to use MHL, you should remove Roku Streaming Stick from HDML3

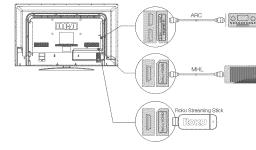

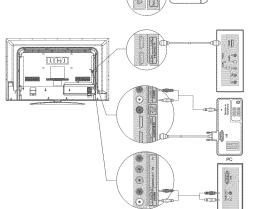

How to Obtain Various Kinds of Input Sources or TV top panel to choose the input source you need. See page 7

TV Jacks Explanation

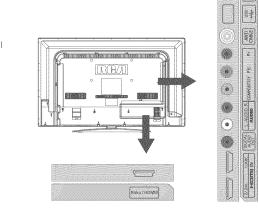

Ajustar Hasta Seguridad

- Un tamaño filo NO es adecuado para todos, siga las recomendaciones de fabricante para la instalación segura y

SEGURIDAN

DE NIÑOS:

el uso de su monitor de pantalla plana - Lea con cuidado y entienda todas las instrucciones

adjuntas para el uso propio de este producto. - No permita a los niños a subir al equipo o jugar con

- No cloque los monitores de pantalla plana en el mueble quese puede usar fácilmente como escalón, así como una

 Requerde que los niños nueden llegar a ser excitados al ver una programación, especialmente en el monitor de pantalla plana "más grande que vida". El cuidado se tiene que empezar por poner o instalar el moniotr donde no se puede empujar, detener al castado del camino ni echar abajo.

- El cuidado se tiene que empezar por encaminar todos los cordones y cables conectados al monitor de pantalla plana para que no se puedan tirar o agarrar conectados al monitor de pantalla plana para que no se pueden tirar o agarrar por los niños curiosos.

Montaje de Pared: SI USTED DECIDE A MONTAR SU MONITOR DE PANTALLA PLANA LA PARED, SIEMPRE

- Use una montura que se ha recomendadop or el fabricante de monitor y/o listado por un laboratorio independiente(como UL, CSA, ETL).

- Siga todas las instrucciones ofrecidas por el fabricante de monitor y montaje de pared.

- Si usted tiene cualquier duda sobre su habilidad para instalar seguramente su monitor de pantalla plana, contacte a su distribuidor para la instalación profesional. - Compruebe que la pared adonde se está montando el monitor es adecuada, Algunos montajes de la pared

no son diseñados para ser montados a paredes con tachones de acero o la vieja construcción de bloque de ceniza. Si usted está inseguro, contacte a un instalador profesional.

- Por lo menos dos personas se requieren para la instalación. Los monitores de pantalla plana puede ser pesados.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

Guía de seguridad para niños

en cuenta los consejos de seguridad:

Posibles Problemeas

de pantalla plana son muy populares

pueden caer y causar el daño corporal.

;Al Fabricante le Importa

fabricante.

agradable y seguro.

¡Muchas gracias por su uso del presente producto!

- La experiencia de entretenimiento de cine en casa

es una tendencia creciente y los grandes monitores

embargo, los monitores de pantalla plana no se

han instalado siempre en los soportes adecuados o

instalado de acuerdo con las recomendaciones de

- Los monitores de pantalla plana que se han

instalado inadecuadament en tocadores, estanterías,

estantes, escritorios, oradores, baúle s o carros se

- La industria electrónica del consumidor está

comprometida a hacer el entretenimiento de casa

Cuando usted disfruta de su nuevo producto, por favor tenga

These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

HEAD PHONE: Connect a 3.5mm headphone for personal audio.

HDMI 1/ARC, 2/DVI, Roku/HDMI3: (High-Definition Multimedia Interface)

It provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.

ARC: (Audio Return Channel) Adopted in TV output of digital audio, can be connected to the device supporting ARC, transmit the TV sound to the device MHL: (Mobile High-Definition Link) To standard HDMI input, transmit

camera,digital-video camera) to TV set. Note: Roku / HDMl3 port support MHL. If you want to use MHL, you can use it after discarding Roku Streaming stick.

COMPONENT Y/Pb/Pr: Connect a device that has component

video jacks, such as a DVD player. To access device connected to the Y/Pb/Pr jack, press the INPUT button on your remote; there

press the up/down arrow to select Component. Press the OK button

because the video signal is separated into three components. Use

three video-grade or component video cables for the connection. When using Y/Pb/Pr, make sure you connect left and right audio

L-AUDIO-R, COMPOSITE: Connect an AV device that has

composite video jacks, such as a VCR or a DVD player. To access device connected to these jacks, press the INPUT button on your

remote; then press the up/down arrow to select AV. Press the

• AUDIO IN L: Left audio channel connection. The left audio connector is usually white. For mono audio sources, be sure to

the video/audio from portable electronic device (cellphone, digital

USB: Connect your USB storage device to enjoy music/photo file

on your TV. (Also used for service purpose).

cables to the AUDIO IN R/L jacks.

ENTER button at last to confirm.

use the left ALIDIO INPLIT

Device complies with FDA radiation performance standards, 21 CFR subchapter.

If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and the receiver.
Connect the equipment into an outlet on a circuit different from

Consult the dealer or an experienced radio/TV technician for

 
interference by one or more of the following measures:

that to which the receiver is connected.

Caution: (Invisible) Laser Radiation when open. However, there is no Guarantee that interference will not occur in a

Front Panel

About remote control angle, see the quick start quide



 $\begin{tabular}{ll} \textbf{Power/Standby Indicator:} Light up in red when the TV is in standby mode. Light out when the TV is on. \end{tabular}$

• Y/Pb/Pr (Component Video): They provide good picture quality

Codes for Comcast: 10178

Codes for Dish Network: 627 Codes for Fios Verizon: 0205 0057 0493 0775

Turning On and Off • AUDIO IN R: Right audio channel connection. The right audio

Connect the AC cord to power the LED LCD TV. At this time the TV will enter standby mode and power indicator will turn red. Use Power button (d) on the top panel of TV or on the remote control the TV. After switching off the TV for 5 seconds, you can

Choosing TV Channel

Keypad Buttons If you cannot locate your remote, you can use the keypad buttons



MENU Displays the TV Main Menu.

Turns the TV on and off.

Keypad and Front Panel

on your TV to operate many TV features.

Scans up through the channel list In the TV menu system, it acts like the up arrow on the remote control and can be used to select menu options. Scans down through the channel list. In the TV menu

system, it acts like the down arrow on the remote

control and can be used to select menu options Increases the volume. In the TV menu system, it acts ike the right arrow on the remote control and can be used to select menu options.

Decreases the volume. In the TV menu system, it acts like the left arrow on the remote control and can be used

control to display Source Select list.

Remote Control Sensor: Remote control IR sensor, which Codes for Cox Communications: 0178

Basic Operations

ANT/CABLE: Connect to receive the signal from your antenna or Digital Audio out: Connect a coaxial cable for digital audio turn on TV again.

Tuning To Analog Channels

OK button to confirm. For example, to watch analog channel "A51", press "5", "1", "OK" on remote control in sequence. Note: Although there is no analog TV signal available in America

we reserve ATV functions for some expansible use

Tuning To Digital Channels

the main digital number with numeric buttons directly, then press "-" button on remote control, and input the sub number at last. For example, to watch analog channel "D31-1", press "3", "1", "-", 1", "OK" on remote control in sequence.

When no OSD (On Screen Display) is used, the up/down arrows can also work as CHA/CHV buttons.

Changing Channels Directly You can use CHA button to increase

AV

HDMI 1 HDMI 2 Roku

log channel has a channel number beginning with "A". Input the digital number with numeric buttons directly and press

A digital channel has a channel number beginning with "D". Input

channel number and CHV to decrease channel number.

Selecting Input Source Press INPUT button on remote

Use up/down arrows to highlight the source you need and press OK to

Jan-01 07:10 Sat

D14-1/A2 If the channel is analog, A is displayed. If it's a digital channel, D is displayed. For example, in the pictures above, A2 is an analog channel, and D50-1 is a digital

channel (-1 is a sub-channel number). ATSC-1 Display the current TV signal type. Displays whether the current channel is

being broadcasted in stereo or mono. If the current channel is digital, this space will be SAP (Second Audio Program) language. 480i/480i Displays the signal resolution.

double-D symbol is displayed

4:3/CC Displays the screen aspect ratio Display the CC status (on or off). Jan-01 07:10 Sat Displays current program date and time If the channel is Dolby Digital AC-3, the Dal

Note: Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Adjusting Volume

Press the VOL+VOL - button on the remote control to adjust the volume. If you want to switch sound off, press MUTE. When OSD (On Screen Display) is not used, the arrows left/right can also work as VOL-/VOL+ buttons.

EPG (Electronic Program Guide)

Press EPG button on the remote control, the electronic program guide will appear in the center of screen. The electronic program guide gives the TV program playing project. You can use left/right arrows to switch pages.

OSD Menu Operations

Adjust the OSD Screen The OSD (On Screen Display) menu enables you to approach to the

o use OSD menu system, press MENU button on remote control hen use left/right arrow to highlight an option from QUICK, CHANNEL, PICTURE AUDIO TIME SETUP or LOCK and press OK/down

To exit the OSD menu:

ullet Press the $\mathbb{\Omega}$ button. The menu will clear from the screen. • Press the MENU button repeatedly until the menus disappear.

Quick Menu

The Quick Menu contains menus and provides you a quick way approached the main settings that may be most possibly and frequently approached, Picture Mode, Sound Mode, Closed Caption, Sleep Timer, and Channel List

- The Signal Type option may be set incorrectly. Go to page 8 for The channel may be blank. Try to search the channel again or change another channel.

The sound is fine, but the picture is poor.

If you can only get black and white pictures from external device that you've connected to your TV, maybe it is due to the video cables is not connected well, or they are connected wrongly. Check the connection stability first, then check the correctness. For AV input, the yellow video cable connects to the vellow Video In lack on the side of your TV. For Component input, the three Y, Pb, Prvideo cables (red, blue, and green) should be connect to the corresponding input jacks on the side of your Tv Check the antenna connections. Make sure all of the cables are firmly d to the TV lack on side of your TV.

There is no sound, but the picture is fine e sound might be muted. Try pressing the MUTE button to restor

For using AV or Component, remember to connect the device's left and right audio output correctly. The left channel cable is white and the right channel cable is red. Please match the cables and jacks according

to their colors. - The sound settings may not be set correctly. Go to page 9 for more information. - If your audio source has only one jack or is a (mono) audio source, make

ure you have plugged the connection into the Audio In L jack (white) on

The buttons on the side panel don't work.

Select the Keypad Lock function in the PARENTAL control Menu and press OK to uncheck the locking status. Unplug the TV from the AC power for 10 minutes and then plug it back.

Turn the TV on and try again. The TV turns off unexpectedly.

The electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn the TV on again. If this

nappens frequently, the voltage in your house may be abnormal. If the other electronic equipment in your home can't work normally

Can't select a certain channel,

may be blocked or not approved in the PARENTAL control Menu. The channel may be skipped in channel list in CHANNEL Menu

Check the blocking and skipping status of channel. The stereo sound performance is bad.

It may be a weak station. Use the AUDIO Menu and set Analog Sound

A black box appears on the screen.
- Closed captioning might be on. Check Closed Caption in the SETUP

menu. Go to page 10 for more instructions. Problems with the HDMI Connection.

- Make sure the HDMI device (DVD, video gamer, etc.) is turned on and the

cables are firmly connected. If problems still occur, turn off your device and reconnect it. Reset the power by unplugging the power cord and If a "No Signal" message appears on screen , the HDMI device

sn't responding. Contact the manufacturer of the HDMI device for further assistance.

If you have black bars on each side of your picture (which means the TV can not display a full-screen image), the device you connected might have a switch or a menu option allowing ou to change the picture quality output that will fix this. Choose either 720p or 1080i.

The Remote control doesn't work.

here may be an AC power failure or the power cord unplugged in Something might be blocking between the remote control and the

remote sensor on the front panel of the TV. Make sure there is a clear path The remote may not be aimed directly at the TV. The batteries in the remote may be weak, dead, or installed incorrectly. Put new batteries in the remote.

You are experiencing problems with V-Chip/Parental Controls. If the rating limits don't work, you must lock the settings. Go to the Main Menu (press MENU on your remote), select PARENTAL control

Channel Menu

Show / Hide

The Channel Menu enables you to search, view and edit channels. It is available in TV mode only.

Auto Scan Execute an auto channel search.

Enter sub-menu and press OK to show or hide the TV channel. Channel List Displays a channel list. It shows the current channels. Press OK to

go to TV channel directly in sub-menu Signal Type

Select your TV signal type: Air or Cable DTV Signal(In DTV Mode) Display how strong your TV signal is.

Picture Menu

The Picture Menu contains menus and controls to configure the way the picture appears. The Picture Menu options apply to the video for the main TV and VIDEO INPUT selections. All picture options can be applied to each input.

Choose the preset visual mode of your TV: Standard, Movie, User, Dynamic, Power Saving.(Only in User mode you can adjust Brightness, Contrast, Color, Tint and Sharpness Changes to Power Saving mode can decrease the power consumption.)

Color Mode This option allows you to select one of three automatic color adjustments: Cool for a bluer palette of picture colors; Normal or Warm for a redder palette of color

Screen Size Screen Size: Select a screen aspect ratio. (Available ratio: Wide, Cinema. Zoom. and Normal.) Please choose the ratio that applies to your video signal format best.

Set noise reduction as Off/low/Medium/High.

lote: Noise reduction helps to reduce the picture "static" or any type of interference. This feature is especially useful for providing a clearer picture in weak analog signal conditions.

Dynamic Contrast Set dynamic contrast Off/low/Medium/High.

Video Style If you connect the HDMI/DVI port of PC to HDMI jack of the TV and the video signal is 1080p, please choose the compatible video style: Video, Graphic. model doesn't support Video Style function

Audio Menu he Audio Menu lets you adjust audio output.

Sound Mode

Choose the preset sound mode of your TV: Standard, Soft, User, Dynamic. Only in User mode you can adjust Bass, Treble, Balance

Select digital TV audio language type: English, French or Spanish

(only available for DTV channel).

Analog Audio Output Select analog TV audio sound type: Stereo, Mono or SAP (only available in TV mode).


Digital Audio Output

Set the audio output type as Off, PCM or Raw. Please set this option according to your power amplifier.

Creates a 3D sound surround from standard stereo material, with deep and rich enhancement.

If you've been through the Troubleshooting section and nothing has fixed your problem, try rebooting your TV. Note that after a reboot, you may eed to run your TV through the setup process again. To reboot, unplug for about 5 minutes. Then plug in the TV and turn it on. See if the problem is fixed. If the problem remains, then please visit the Customer Support v.rca.com or updated FAQs or contact RCA Customer Support at the support number provided in your Warranty card.

Wall Mounting Unit Specification

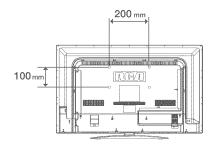

LRK32G30RQD VESA 200 x 100 M6 screws, length 10mm

A. The wall mount is not contained in the accessories sold with television We only provide the installing specifications but not the wall mount itself. you need the mount, please consult with the local dealer for a VESA wall mount.

B. We strongly suggest to set the wall mount with equipments of pecification we ordered. If not, inappropriate installing may cause darnage to device or people.

C. We suggest that you keep your TV at least 2.36 inches(60mm) from the wall to prevent cable interference.

Warnings 1. Do not set up the wall mount by yourself. Please contact

qualified professionals for installation. 2. The TV should not be mounted on walls or surfaces which have

e more than 10 degrees with vertical direction. Otherwise The walls for mounting must have enough strength to hold the whole weight of TV set. For example, concrete wall and brickwork

e eligible. Do not place the mount on soft walls such as earth 4. If spare parts of different specifications (such as screws) are used during mounting, consult with qualified professionals to make sure these parts are safe and effective.

5. Before attaching the base to wall, ensure the holes for anchors are in keeping with the installing rules. Otherwise there may exist

6. Do not place any heating source under your television. Or else. it can cause fire. 7. Do not place the TV near anything dripping. Transducers and

high voltage wires should be kept far away from the apparatus

too. Or else, it may cause creepage, electric shock or bad 8. Do not place TV in a location where collision or vibration is liable to happen.

Press OK button to activate audio only mode. The TV will output only sound and the LED LCD panel will be turned off. To restore normal

playing, hold POWER button for three seconds

Auto Volume

Equalizer Settings

No Signal Power Off The seven-band graphic equalizer allows you to adjust the audio Select a time period for "No Signal Power Off". The TV will shut off after that period of time while no signal. We suggest you turn on this function when Blue Back is turned on, It may hurt the LED LCD Panel if blue screen is on for too long. requency settings. You can select one of the equalizer presets (Off, Pop, Rock, Jazz) or create your own personal preset (User)

Time Menu The Time Menu lets you change the TV time settings

Sleep Timer Set the sleep timer(Off, 5, 10, 15, 30, 60, 90, 120, 180, 240 Min). The TV will automatically enter standby mode after times up.

Showing the country's time zone, you can Set Time zone Off Eastern, Central, Mountain, Pacific, Alaska, Hawaii, Samoa, Newfoundland, Atlantic,

Auto Clock

Select auto clock on/off. Auto clock helps you synchronize your TV time to standard time (from DTV signal).

Set your TV time manually (needs to turn off auto clock), press up/ down and left/right arrow to config the current time.

adjust it.

use the up/down and left/right arrow on the remote control to OSD Display Duration Set the time how long to display OSD menu(5 Sec, 15 Sec, 30 Sec,

Set the Wake Up time for your TV, after enters menu, you can

45 Sec, 60 Sec). Setup Menu

The Setup Menu lets you config the TV with your preferences.

Menu Language

Available languages: English, French and Spanish.

Menu Transparency Set the menu transparency mode: 0%, 25%, 75%, 100% Closed Caption

Set the closed caption. The detail is as follows.

Select the caption display cc on or cc off.

Digital Caption Type

Caption Display

elect the digital closed caption type; service1, service2, Service3, Service4, Service5, Service6.

Digital Caption Style Set the digital closed caption style. After changing, you can preview he caption style in the bottom

 Mode: Decide whether you can change the settings on the CC Display Style. CC Size: Set the CC font size (Default, Normal, Large, Small).

 CC Font: Set the CC font (Default, Font 0 - 7 . CC Opacity Color: Set the CC opacity color (Default, Solid, Flashing, Translucent, Transparent).

· Text Color: Set the CC text color (Default, White, Red, Green, Blue, Yellow, Magenta, Cyan). CC Background Opacity: Set the CC background opacity (Default,

Solid, Flashing, Translucent, Transparent). • CC Background: Set the CC background color (Default, White, Red, Green, Blue, Yellow, Magenta, Cyan).

9. In order to avoid unexpected falling of the TV set, do not put any strong force on TV or wall mount after installing.). Be sure to unplug the TV before installing. Keep anything hard

or sharp away from the screen panel to prevent the scuffing 11. After installing, if there is any need to move the cabinet, please contact the qualified professionals

USB Media Play

With USB Media Play, you can enjoy music and photo files stored n a USB storage device on your RCA TV. Connecting a USB storage device

Connect a USB storage device to the USB port in the back of the TV. Press "INPUT" and select "USB" "USB Media Play" menu will appear.



Plaving back Photo files

display text on your RCA TV.

Supported Files

USB Storage

Music

Movie

Media Support Specification

Supported USB storage/file system format

while the TV is playing back picture or music.

File System format FAT32

data on the USB storage device.

Press arrow (◀/▶) to select "Photo" and press "OK". The file or folder list will show up. Press arrow(▲/♥) to select a file or folder. Press "OK", and you will be given several options to view photo files.

You can directly open and playback the file. View thumbnails for photo preview, or play slideshow. Playing back Music files

s arrow (∢/▶) to select "Music" and press "OK". The file or folder list will show up, Press arrow(A/V) to select a file or folder. Press "OK" to playback the music file you selected. Playing back Movie files Press arrow (◀/▶) to select "MOVIF" and press "OK".

JPG/JPEG files

USB flash drive

Caution: Do not turn off the TV or disconnect USB storage device

This may result in loss of data or damage to the USB storage

device, and RCA is not responsible for any damage to, or loss of

The file or folder list will show up. Press arrow(▲/▼) to select a ile or folder. Press "OK" to playback the movie file you selected. Plaving back Text files Similar to the photo menu. You can use TEXT menu to access and

product, we will pay an authorized RCA service center for the new,or at our option, refurbished replacement parts needed to repair any defects in material or workmanship in your television. If your television is unrepairable we will provide you with a refurbished unit of the same or better model. Coverage - LED LCD Panel For a period of 12 months from date of purchase of your RCA product, we will pay an authorized RCA service center for the new, or at our option, refurbished LED LCD panel needed to repair

elevision is unrenairable we will provide you with a refurbished unit WAV files How to Ohtain Service MPG files

For assistance (U.S.A) - if you purchased RCA product in J.S.A, please call 1-888-977-6722. he service representative will review your options for service.

As a convenience we offer three ways to obtain warranty service. You may mail your product to the address provided by the service representative, you may take your product to an authorized service center, or you may request in home service (servicer will determine if product is serviceable in home or must be taken back to local service enter for repair). Service representative will supply instructions for referred service. At the time of service proof of purchase such as riginal receipt, will be required. Only 37" LCD size and above are

any defects in material or workmanship in your television. If your

Roku

Execute reset to TV system. All setting will be reset to factory default. lote: The OSD's appearance and color are referred to the

Select Blue Back on or off, If the Blue Back is turned on, the TV

Adopted in TV output of digital audio, can be connected to the device supporting ARC, transmit the TV sound to the device.

anel key board and inpút source.

Change the PIN of parental menu.

Set the V-Chip. The detail is as follows

Input Block

Canada V-Chip

English Rating

French Rating

Block Unrated Show

Block all the unrated program

Clear Downloadable Data

so that they can't be used.

Clear Channel List

only reset OSD menu).

Television System

Channel Coverage

Humidity

Weight

without notice.

Coverage - Parts

Power Supply

RF input

Video input

English Rating and French Rating.

e Lock Menu enables you to lock program with special content,

When the Parental Control Menu is accessed from the Main Menu,

you need to enter password to unlock the menu function. Please enter your four-digit password with numeric keys 0~9, *Note: The*

This option allows you to lock or unlock the input source. The source blocked can not be chosen from input list unless you input the correct parental password.

Set the US V-Chip ratings which contains two sub-menus: TV Rating and Movie Rating.

Select the rating level you want to block: G, PG, PG-13, R, NC-17, X.

select the rating level you want to block: TV-Y, TV-Y7, TV-G.

level rating, the higher ratings will be blocked too.

Activate or downloadable rating data, if available

Product Specification

IV-PG, TV-14,TV-MA, D, L, S, V, FV. If you have blooked a lower

Set the Canada V-Chip ratings which contains two sub-menus:

Select the rating level you want to block: C, C8+, G, PG, 14+, 18+

Note: These ratings are available only if the broadcaster is sending

Select this option to block or unblock the TV's side panel buttons

This option allows you to execute Clear Channel List function. This function will reset the whole TV system to factory default (not

select your remote: Off, remote1 or remote2, this is for special

LRK32G30RQD

ATSC/NTSC system

CATV: 1~135

VHF: 2-13 UHF: 14-69

Operating Temperature is

AC 100-120V, 60H;

Audio output Headphone x 1, Digital Audio Out x 1

480i, 480p, 720p, 1080

With stand 28.9"W x 18.5"H x 7.3"D

Without 28.9"W × 17.4"H × 3.2"D

12.8LBS(5.8KGS)

2 months from date of purchase of your RCA

d of 12 months from date of nurchase of your RCA

less than 42W

With stand 13.7LBS(6.2KGS)

Notice: Specifications and cabinet design are subject to change

For a period of 12 months from date of purchase of your RCA product, we will pay an authorized RCA service center the labor charge to repair any defects in materials or workmanship in your

levision. If your television is unrepairable we will provide you with a

Limited Warranty for USA

refurbished unit of the same or better model.

nent × 1

HDMI × 3 (HDMI 3 is already

-20℃ ~ +60℃ -4°F ~ +140°F

Operation Humidity : Less than 80%R

 
31.5 inches

ct the rating level you want to block: G, 8ans+, 13ans+, 16ans+,

· After unlocking, the items in parental control menu can be used

will display a blue background when there is no signal input.

Roku[®] Streaming Stick[™] (Roku Ready[®] Version)



A:[RESET BUTTON] Used to

B: [STATUS LIGHT] Signifies or activity when flashing

What to do Start Streaming

can enjoy the Roku streaming stick by pressing the Roku button on remote control.

Now you can grab your remote and jump right into guided setup. Have your network name and password ready and do

Select your network from the list of available networks Enter your network password, if you use one. Remember, network passwords are case sensitive.

What to do (cont.)

Complete guided setup Continue following the on-screen instructions and you'll: Get the latest software.

Link the Roku Streaming Stick to your Roku account on your

Your Roku account:

During setup, you'll be prompted to create your Roku account online at roku.com/ link. Your Roku Streaming Stick will generate a unique code that links your player to your new account. Roku accounts are free. And while a valid credit card number is required to create your account, rest assured you will only be charged if you authorize purchases of apps and games from the Roku Channel Store.

Get more information about Roku, Inc. You can get more information about Roku, Inc. from homepage

DVD Operations

DVD mode of TV LRK32G30RQD

TV LRK32G30RQD has a built-in DVD player module, which you can use to watch DVD disk. The following operation guide gives the DVD module instruction.

1. How to enter DVD mode for TV LRK32G30RQD Press INPUT button on remote control, select "DVD" in the Source Select menu (see page 7), then press OK or right arrow to enter DVD mode. The DVD will start playing automatically if there is a disk in DVD module. If not, the TV will display a standby screen as shown. And a "No Disc" message will appear on screen

Note: The TV will turn to DVD mode automatically when you insert a disk, no matter which mode it is now.

Items Not Covered By Limited Warranty Your limited warranty does not cover the following iter Jn-installation, installation and adjustment of customer controls and

latteries and customer replacement fuses Damage due to misuse, abuse, negligence or neglect including but, not imited to, damage resulting from exposure to moisture, humidity or salt. Inability to receive a signal due to problems not caused by the product. Damage to the product due to images burnt into the screen. oduct purchased or serviced outside of Country of Origina

e. Purchased USA can not be serviced in Mexico/Purchased in Mexico can not be serviced in USA. -Product modified or incorporated into other products Damage due to acts of nature, including but not limited to, lightning arriage of flooding.

Service calls which do not involve any defect in materials or

Commercial Use Excluded

This limited warranty only applies to products used for personal use and does not cover any product used for institutional, commercial or

LIMITATION OF WARRANTY

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTS

APPLICABLE TO THIS PRODUCT. ON CORP US, INC., THE MANUFACTURER OF THIS PRODUCT, DISCLAIMS ALL OTHER WARRANTIES. EXPRESSED OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). NO VERBAL OR WRITTEN INFORMATION GIVEN BY ON CORP US, INC., IT'S AGENTS, INDEPENDENT CONTRACTORS, SALES REPRESENTATIVES, EMPLOYEES, RETAIL DEALERS, WHOLE SALE DISTRIBUTORS OR ANY OTHER THIRD PARTY SHALL CREATE , GUARANTY OR INCREASE. EXPAND OR MODIFY THE SCOPE OF LIMITED WARRANTY THIS LIMITED WARRANTY PROVIDES THE SOLE AND EXCLUSIVE REMEDY FOR THE CONSUMER OF REPAIR OR REPLACEMENTOF THE PRODUCT. ON CORP US, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THEP RODUCT OR ARISING OUT OF A EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUC THIS LIMITED WARRANTY AND THE DISCLAIMERS CONTAINED HEREIN ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO APPLICABLE LIMITED WARRANTY PERIOD(S) SET FORTH ABOVE, THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU ALSO MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

RCA is a trademark of RCA Trademark Management SAS and used under license by ON Corporation

Garantia limitada para EE.UU

Cobertura-Trabaio

producto RCA, pagaremos a un centro autorizado de servicio de RCA el cargo de mano de obra para reparar cualquier defecto en materiales o mano de obra en el televisor. Si su televisor es irreparable que le proporcionara una unidad ondicionada del mismo modelo o superio

Cobertura / Recambios Durante un neriodo de 12 meses desde la fecha de comora de s producto RCA, pagaremos a un centro autorizado de servicio de RCA para un reemplazar ya sea con partes nuevas o reacondicionadas, o a nuestra opcion, para reparar cualquier defecto del material o mano de obra en el televisor.

Panel de Cobertura-LED LCD Panel de Cobertura-LED LCD Durante un periodo de 12 meses desde la fecha de compra de su producto RCA, pagarernos un centro autorizado de servicio de RCA para un reemplazar la pantalla LED LCD, ya sea con pantalla nueva o reacondicionada, o a nuestra opcion, para reparar cualquier defecto delmaterial o mano de obra en la pantalla de su televisor. Si su televiso

es irreparable que le proporcionara una unidad reacondicionada del

Si su televisor es irreparable que le proporcionara una unidad reacondicionada del mismo modelo o superior.

2. Insert a disk to DVD player Insert the DVD disk with reflector surface facing the front of TV.



h strength, Insert disk gently and the odule will load in the disk automaticali

remote control. For operating information, see the follow Note: About DVD control buttons on remote control, see the guick start auide of accessories with your TV.

Stop playing: During playing, you can use STOP button to stop playing. If you press STOP once, the DVD will be stopped briefly. Press STOP again, it will stop completely and the disk in DVD module no longer wheels.

nodule. And press EJECT again, the DVD will load the disk renewedly *This function is enabled only when DVD mode is on

Going backward or forward: You can press FR for fast review and FF for fast forward. You can also press PREV to return to the previous chapter and press NEXT to skip to next chapter.

5. DVD Q MENU

and then you will see the Q.Menu showing on your screen. Use up/down to choose the function you need: Title Menu, DVD Menu, Zoom, Subtitle, Audio

Title Menu: Choose Title Menu, you can reset the disk to the title menu, equals to ejecting and loading the disk again. DVD Menu: Choose DVD Menu, you will return to the root menu of current

Subtitle: Choose Subtitle, you can switch the available subtitles in DVD disk

Repeat A-B: Choose Repeat A-B once to set the repeating origin and Choose it twice to set the repeating end. DVD-setup menu: Choose DVD Setup, a specific setup menu for DVD will

6 DVD Setup Menu General setup page Press Q.MENU button on the remote to display Q.Menu. Use up/down

TV Display OSD Lang

to another mode and then come back to DVD mode, it can play Note: We suggest you turn off the last memory function unless you really

need it. To turn on this function may influence the lifetime of flash memoi

Para su comodidad le ofrecemos tres formas de obtener servicio de

Elementos no cubiertos por la garantia limitada Su garantia limitada no cubre los siguientes temas:

les el o bebamud el bebamur ncapacidad para recibir la senal debido a los problemas que no son causadas por el producto

mitado a, danos por rayos o inundacione: Las llamadas de servicio que no impliquen cualquier defecto en

LIMITACION DE GARANTIA

EN CORP EE.UU.. Inc. no sera responsable por danos especiales. ocidentales o consequentes resultantes DEL USO DEL PRODUCTO O DERIVADOS DE UNA VIOLACION garantia expresa o implicita de e producto. ESTA GARANTIA LIMITADA Y RESPONSABILIDADES contenida en el se rige por las Leyes del Estado de Indiana. IMPLICITA DE COMERCIALIZACION O IDONEIDAD PARA UN PROPOSITO PARTICULAR ESTARA LIMITADA A LIMITADA periodo de garantia (S) mencionado anteriormente. Esta garantia le otorga os legales específicos y LISTED TAMBIEN PUEDE TENER OTROS DERECHOS, QUE PÚEDEN VARIAR DE ESTADO.



Play/pause the disk: After inserting the disk to DVD module, the TV will

Language, Repeat, Repeat A-B, Prev. Next. DVD Setup.

Zoom: Choose Zoom, you can zoom in the screen for 2 times, 3 times or 4 times from centre. This function provide a better view of the content locate

Audio Language: Choose Audio Language, you can switch the available

display on screen. This menu is especially prepared for DVD control

and OK button to enter DVD Setup menu. There exist three sub-menus in DVD Setup menu, the first one is General Setup

Set it on to memorize the last point. During playing the DVD, if you change

Como Obtener Servicio Para asistencia en Estados Unidos (E.U.A) si compro un aparato RCA en E.U.A. favor dellamar al: 1-888-977-6722

Usted puede enviar su producto a la direccion proporcionada por el representante de servicio, usted puede llevar su producto a un centro de servicio autorizado, o puede solicitar en el servicio a

funcionamiento en casa o debe ser llevado de vuelta a servicio local El representante del Servicío le proporcionara las instrucciones parael

Se requiere del comprobante de compra original. Solo se les dara servicio a Domicilio a Televisores de 37 " pulgadas de tamano y mas grandes.

- Un-instalacion, montaje y ajuste de controles del cliente e instrucciones de funcionamiento. Las pilas y los fusibles de repuesto al cliente.

Danos en el producto debido a las imagenes de grabadas en la oductos comprados o prestar servicios fuera del país de compra

Comprado en Mexico no puede prestar servicios en Estados Unidos. Productos modificados o incorporados a otros productos.

Uso Comercial Exclusion

APLICABLE A ESTE PRODUCTO. EN CORP EE.UU., Inc., el fabricante de este producto, rechaza cualquier otra garantia, expi INCLUYENDO TODAS LAS GARANTIAS IMPLICITAS DE COMERCIA IZACION O IDONEIDAD PARA UN PROPOSITO PARTICULAR). NO informacion verbal o escrita por parte CORP DE FE.UU., Inc., sus agentes, contratistas independientes, representantes de ventas, empleados, comerciantes minoristas, mayoristas o cualquier otro tercer DEBERAN crear una garantia ni aumentar. Ampliar o modificar el alcance de esta garantia limitada. e esta gararria rimitada. 64a GARANTIA LIMITADA DEL LINICO V EVOLLISMO REMEDIO PARA CONSUMIDOR DE REPARACION O REEMPLAZO DEL PRODUCTO.

ESTA GARANTIA LIMITADA ES EL UNICO Y EXCLUSIVO DE GARANTIA

RCA es una marca registrada de SAS bajo licencia de



B. Speaker setup page

the General Setup Page

Set the TV type as PAL, Auto or NTSC.

Set the DVD audio language.

t the DVD subtitle language.

Set the DVD disk menu language.

Questions (FAQs)

Setup Page.

Subtitle

Disc Menu

Parental

n the remote to display Q.Menu. Use up/dow

and OK button to enter DVD Setup menu and then press left/right arrow

to choose Speaker Setup Page. The operating method is similar with

C. Preference page
Press Q.MENU button on the remote to display Q.Menu. Use up/down

to Preference Page. The operating method is similar with the General

and OK button to enter DVD Setup menu and then press left/right arrow

two-channel audio signal (L/R) to TV front speakers (left/right).

some disks with PAL system, or select Auto for convenience

Reset the DVD setup menu options as factory default.

What's the most convenient way to view High Definition (HD)

Connect an antenna to the TV Input jack to view free local digital

Visit www.antennaveb.org for assistance in deciding what type of antenna to use to receive the local digital channels available to you.

After entering your location, this mapping program tells you which local

Are there other ways to view High Definition(HD) video?

Besides using an antenna as mentioned above, you can also use a set-top box to receive digital video. Contact your cable service provider or satellite provider to purchase digital programming and have them connect the box to ensure you are viewing channels in the best way.

Press the OK button to display the Channel Bar. When no OSD (On Screen Display) is used,Look at the topright corner of the screen. An "A" is displayed for an analog channel.A "D" is displayed for a digital

Why are there bars on my screen, and can I get rid of them?

Most digital video is sent in a 16/9 format which fills your screen, but is sometimes sent in 4/3 which does not fill your screen. It depends or

now the station or device connected to your TV is formatting the video

to try a different format that may eliminate the bars. Some bars can't be

Why does channel search find a lot of channels, but when I

Some channels don't carry programming, such as video On Demand. When channels are unavailable, your TV screen is blank or appears like snow. You probably want to remove these channels from your channel list. Remove these in the Channel List Menu. Go to page 8 for more

Limited Warranty for Roku Streaming

ick is limited to the repair or replacement of defective units as

If there are bars on the screen, Check Screen size in the picture mode

information on screen size, go to page 9.

try to tune to them, there's nothing there?

analog and digital stations are available using a certain antenr

How do I tell an analog channel from a digital channel?

channel. Note: Since the analog TV inAmerica has been cut off, we

channels. You may need to purchase an antenna, (See page 5 for more

Disk reflector surface facing the front of TV.

4. DVD basic operations
You can control the DVD Playing with keypad on DVD module or with

play DVD disk automatically. You can use PLAY/PAUSE button to suspend the playing. Press again, the TV will restore playing.

Eject the disk: You can press EJECT button to eject the disk from DVD

Press Q.MENU button on the remote

near screen centre.

Repeat: Choose Repeat, you can switch between chapter repeat, title repeat

Set the DVD OSD language as English, French or Spanish.

mismo modelo o superior.

domicilio (administrador determinara si el producto se encuentre e

Danos por uso indebido, abuso, negligencia o descuido incluyendo pero no limitado a, los danos derivados de la exposicion a la

El: Comprado en Estados Unidos no puede prestar servicios en

Esta garantia limitada solo se aplica a los productos utilizados para uso personal o, y no cubre todos los productos utilizados con fines institucionales, comerciales o de alquiler.

SALVOPROHIBIDO POR LA LEY APLICABLE, CUALQUIER GARANTIA

cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC Caution: Any changes or modifications not expressly approved by the

U.S.A. is firmware-limited to channels 1 through 11.

the receiver is connected.

· Reorient or relocate the receiving antenna.

Class B digital device, pursuant to Part 15 of the FCC Rules.

and batteries).

This option is preset as Stereo. That means the DVD player will output a

available channels in the channel list. If you do have digital channels, the TV is about a value of the TV is also searching for scrambled channels, non-scrambled channels, and each sub-channel of that digital channel. I can't connect to my wireless home network during guided

Turn on the TV and Select Roku Input, the settings In the wifi select section, Make sure Select your network from the list of available networks. Enter your Network password, if you use one. Remember, network passwords are case sensitive. If you have urned off SSID broadcasting on your wireless router, you can add


Why does it take a long time when I search the channels

f you have both analog and digital channels, the TV is looking for all

If you are not getting 3 or more signal-strength bars above your wireless network, adjust the location of your Roku Ready TV and/or wireless router. Make sure there are no obstructions, like

Roku Ready TV are compatible with most home wireless net Any wireless router or access point that supports the 802.11b/g/n

Set the parental control rating as KID SAF, G. PG, PG13, PGR, R. NC17 routers and access points. or ADULT. To change this option, you need password, and the original

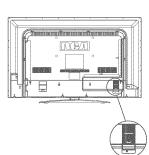

1.If Roku stick power light on, please push reset button 2.If Roku Stick power light off, Please remove Roku Cover on back side of TV and unpulg Boku Streaming Stick and plug in again and

Signal" sign on screen.

t below. If the list does not solve the problem, call our Custome

flake sure the AC cord is plugged in. Check the wall outlet, make sure the AC output works normally

and press OK to uncheck the locking status There is no picture or sound but the TV is on and there is a "No

his device is restricted to indoor use when operation in the 5.15 to

- Are you trying to use an input source with no device connected to it? For using other video/audio device, make sure the external device works normally first, then press INPUT and choose the right input source.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be collocated or

Industry Canada statement online help resources at review the online help resources at www. Industry Canada statement
roku.com/support before seeking warranty service.To return or obtain
This device complies with RSS-210 of the Industry Canada Rules. warranty service for a Roku Streaming Stick, you must first obtain a Return Merchandise Authorization (RMA) number from a Customer Support Cheresentative (CSR) at Roku. Customer Support contact information can be

information with your request: (a) model number, (b) serial number, (c) problem description, (d) software version (located in the System Configuration menu), (e) date of purchase, (f) place of purchase (re-seller or online place or purchase), and (g) return shipping address (P.O.boxes are not accepted). To the persuate a decident the experiments of the persuate operation, view these guidelines. Observe all warnings, precautions and instructions. Stope use, unplug the device that the Roku Streaming Stick is inserted into from the electrical outlet and disconnect any other cables immediately, if the Roku Streaming Stick or the device functions in an abnormal manner,

Class B digital device, pursuant to Part 15 of the FCO Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Do not allow liquid, small particles or other foreign objects to get into the Roku Streaming Stick during an electrical storm.


Do not allow liquid, small particles or other foreign objects to get into the Roku Streaming Stick or accessories.

Do not expose the Roku Streaming Stick or accessories.

your network by selecting "My network is not shown" from the My WIFI Strength is very weak, What should I do?

cement walls, between your Roku Ready TV and your wireless

ss protocols should work, including newer 802.11n dual-band

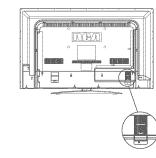

Troubleshooting

to try a different normal than they entitle the basis. Some basis and the removed because of the way the format is sent by the broadcaster. The format changes as you choose screen size type in the picture mode and the format type is displayed at the bottom of the screen. For more o turn on the TV. Select the Keypad Lock function in the PARENTAL control Menu

operating in conjunction with any other antenna or transmitter.

from issuance. Roku may attempt to troubleshoot a warranty-related. Ce dispositif est conforme à la norme CNR-210 d'industrie Canada problem prior to issuing RMA number.

Applicable. aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de

Important: When emailing for a RMA number, please provide the following for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

 For more information on product safety and troubleshooting, plea www.roku.com/support

damage due to acts of God, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of, your Roku Streaming Stick. This warranty does not cover damage due to improper operation or maintenance, connection to improper vertices as a streaming discomfort of pain in your hands or arms while operation the remote if the maintenance, connection to improper voltage supply or attempted repair condition persists, consult a doctor.

user is encouraged to try to correct the interference by one of the following ROKU®, the ROKU Logo, ROKU READY®, the ROKU READY Logo, and STREAMING STICK™ are trademarks and/or registered tra

If I can't see Roku Screen when I turn on the TV, What should I do? Please Check the Boku Stick rear on TV.

If there are any problems when using the product, please consult the


Roku will either repair the unit or replace the unit with either a new or rebuilt Roku Streaming Stick, at its option. If the Warranty Period has expired or is To comply with US FCC regulation, the country selection function has been

• When playing video games, use in a well-lit area and stand or sit as far limited to service disruption, changes in service terms, changes in offerings, changes in format, or technical problems. This warranty does not cover expense to the control of the contro

- Discomfort or pain in a part of the body, such as eyes, ears, hands, or arms.

 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which
ON Corp US, Inc. • Consult the dealer or an experienced radio/TV technician for help This device San Diego, CA 92127, U.S.A.

What adapter would you recommend for use with Roku Ready TV ?

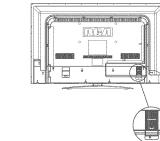

Identifying Problems

The side panel may be locked (disabled). Use the remote control

5.25 GHz frequency band.

otherwise not applicable (see scope and limitation on Warranty below), w will return the Roku Streaming Stick to you. More information about this warranty can be found at www.roku.com/support. THE FOREGOING SETS FORTH ROKU'S SOLE OBLIGATION AND YOUR completely removed from all US models. The availability of some specific

found by visiting www.roku.com/support. RMA numbers expire thirty days French translation

return any of the accessories could result in a delay and/or result in an invoice to you or credit to Roku for the missing accessories.

The Roku Streaming Stick has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential

Legal Notices: Federal Communication Commission Interference Statement

If symptoms persist, consult your physician. Legal Notices: receited continuation continuation of the limits for a first symptoms persist, consult your physician.

It symptoms persist, consult your physician.

Keep the Roku Streaming Stick and any accessories, including the remote,

the United States and other countries.

The TV can't be turned on.

IMPORTANT NOTE: Limited Warranty: Roku warrants the Roku Streaming Stick hardwar against defects in materials and workmanship under normal use for a period of one (1) year from the date of purchase("Warranty Period"). If Roku determines that the Roku Streaming Stick's hardware is defective,

are firmware programmed at the factory to match the intended destination The firmware setting is not accessible by the end user. Return and Warranty Service Process: Please access and review the

prepaid, together with proof of purchase and all accessories, in either the recu, y compris un brouillage susceptible de provoquer un fonctionnemer

Scope of and Limitation on Warranty: The warranty on the Roku described in the Limited Warranty section above. This warranty does not cover customer training or education, installation, set up adjustments, or signal reception problems. This warranty also does not cover any issue

"www.roku.com/support

Use and handling

"The Roku Ready sticks play games, but the gaming remote is sold separately

by anyone other than a facility authorized by Roku to service your Roku Streaming Stick. This warranty does not cover consumables (such as fuses and between the consumables of the consumable o

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off And on, the

complies with Part 15 of to the following two conditions: (1) This device may not @2014 ON Corporation

EXCLUSIVE REMEDY IN THE EVENT OF ANY BREACH OF THIS LIMITED channels and/or operational frequency bands are country dependent and

RMA number is obtained, you must ship your Roku Streaming Stick, freight brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage original packaging or packaging affording an equal degree of protection, to the Roku authorized distribution facility identified by the CSR. Failure to Safety Precautions

RCA is a trademark of RCA Trademark Management SAS used under license to ON Corporation

party responsible for compliance could void the user's authority to operate

RCA es una marcade RCA Trademark Management ty responsible for 602,11b or 802,11g operation of This product in the SAS usada bajo licencia de ON Corp