

Channel Bar

Press the CK button on the remote control, when OSD (on-screen displays) not used, the channel bar will appear on the Bottom of the screen. It displays the current channel's information. The following list describes the items on the channel bar.

D14-1 Air 4:3 Jan-01 07:10 Sat	ATSC-1 English 480i Jan-01 07:10 Sat	A2 Air Stereo 480i Jan-01 07:10 Sat
---	--	--

DTV

ATV

D14-1/A2 If the channel is analog, A is displayed. If it's a digital channel, D is displayed. For example, in the pictures above, A2 is an analog channel, and D50-1 is a digital channel (- 1 is a sub-channel number).

ATSC-1 Displays the current TV signal type.
English/Stereo Displays whether the current channel is being broadcasted in stereo or mono. If the current channel is digital, this space will be SAP (Second Audio Program) language.
480I/480I Displays the signal resolution.
4:3/CC Displays the screen aspect ratio. Display the CC status (on or off).

Jan-01 07:10 Sat Displays current program date and time. If the channel is Dolby Digital AC-3, the double-D symbol is displayed.

Note: Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Adjusting Volume

Press the VOL+VOL- button on the remote control to adjust the volume. If you want to switch sound off, press MUTE. When OSD (On Screen Display) is not used, the arrows left/right can also work as VOL-/VOL+ buttons.

EPG (Electronic Program Guide)

Press EPG button on the remote control, the electronic program guide will appear in the center of screen. The electronic program guide gives the TV program playing project. You can use left/right arrows to switch pages.

OSD Menu Operations

Adjust the OSD Screen

The OSD (On Screen Display) menu enables you to approach to the TV functions.
To use OSD menu system, press MENU button on remote control, then use left/right arrow to highlight an option from QUICK, CHANNEL, PICTURE, AUDIO, TIME, SETUP or LOCK and press OK/down button.

To exit the OSD menu:

- Press the button. The menu will clear from the screen.
- Press the MENU button repeatedly until the menus disappear.

Quick Menu

The Quick Menu contains menus and provides you a quick way to approached the main settings that may be most possibly and frequently approached. Picture Mode, Sound Mode, Closed Caption, Sleep Timer, and Channel List.

- The Signal Type option may be set incorrectly. Go to page 8 for detailed instructions.
- The channel may be blank. Try to search the channel again or change another channel.

The sound is fine, but the picture is poor.
If you can only get black and white pictures from external device that you've connected to your TV, maybe it is due to the video cables is not connected well, then they are connected wrongly. Check the connection stability first, then check the correctness. For AV input, the yellow video cable connects to the yellow Video In jack on the side of your TV. For Component input, the three Y, Pb, Pr video cables (red, blue, and green) should be connect to the corresponding input jacks on the side of your TV. Check the antenna connections. Make sure all of the cables are firmly connected to the TV jack on side of your TV.

- Try adjusting the color features to improve.
- There is no sound, but the picture is fine.**
 - The sound might be muted. Try pressing the MUTE button to restore sound.

- For using AV or Component, remember to connect the device's left and right audio output correctly. The left channel cable is white and the right channel cable is red. Please match the cables and jacks according to their colors. - The sound settings may not be set correctly. Go to page 9 for more information.
- If your audio source has only one jack or is a (mono) audio source, make sure you have plugged the connection into the Audio In L jack (white) on the TV.

- The buttons on the side panel don't work.**
 - The side panel may be blocked (disabled). Use the remote control to turn on the TV.
 - Select the Keypad Lock function in the PARENTAL control Menu and press OK to uncheck the locking status.

- The TV turns off unexpectedly.**
 - The electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn the TV on again. If this happens frequently, the voltage in your house may be abnormal. If the other electronic equipment in your home can't work normally, consult a qualified service personnel.

- Can't select a certain channel.**
 - The channel may be blocked or not approved in the PARENTAL control Menu.
 - The channel may be skipped in channel list in CHANNEL Menu. Check the blocking and skipping status of channel.

- The stereo sound performance is bad.**
 - It may be a weak station. Use the AUDIO Menu and set Analog Sound Mode.

- A black box appears on the screen.**
 - Closed captioning might be on. Check Closed Caption in the SETUP menu. Go to page 10 for more instructions.

- Problems with the HDMI Connection.**
 - Make sure the HDMI device (DVD, video games, etc.) is turned on and the cables are firmly connected. If problems still occur, turn off your device and reconnect it. Reset the power by unplugging the power cord and plugging it again.
 - If a "No Signal" message appears on screen , the HDMI device is not responding. Contact the manufacturer of the HDMI device for further assistance.
 - If you have black bars on each side of your picture (which means the TV can not display a full-screen image), the device you connected might have a switch or a menu option allowing you to change the picture quality output that will fix this.

- The Remote control doesn't work.**
 - There may be an AC power failure or the power cord unplugged in something might be blocked between the remote control and the remote sensor on the front panel of the TV. Make sure there is a clear path.
 - The remote may not be aimed directly at the TV.
 - The batteries in the remote may be weak, dead, or installed incorrectly. Put new batteries in the remote.
 - You are expanding problems with V-Chip/Parental Controls.**
 - If the rating limits don't work, you must lock the settings. Go to the Main Menu (press MENU on your remote), select PARENTAL control to check the settings.

Channel Menu

The Channel Menu enables you to search, view and edit channels. It is available in TV mode only.

Auto Scan

Execute an auto channel search.

Show / Hide

Enter sub-menu and press OK to show or hide the TV channel.

Channel List

Displays a channel list. It shows the current channels. Press OK to go to the TV channel directly in sub-menu.

Signal Type

Select your TV signal type: Air or Cable.

DTV Signal (In DTV Mode)

Display how strong your TV signal is.

Picture Menu

The Picture Menu contains menus and controls to configure the way the picture appears. The Picture Menu options apply to the video for the main TV and VIDEO INPUT selections. All picture options can be applied to each input.

Picture Mode

Choose the preset visual mode of your TV: Standard, Movie, User, Dynamic, Power Saving.(Only in User mode you can adjust Brightness, Contrast, Color, Tint and Sharpness. Changes to Power Saving mode can decrease the power consumption.)

Color Mode

This option allows you to select one of three automatic color adjustments: Cool for a blue palette of picture colors; Normal or Warm for a redder palette of color.

Screen Size

Screen Size: Select a screen aspect ratio. (Available ratio: Wide, Cinema, Zoom, and Normal). Please choose the ratio that applies to your video signal format best.

Noise Reduction

Set noise reduction as Off/low/Medium/High.
Note: Noise reduction helps to reduce the picture "static" or any type of interference. This feature is especially useful for providing a clearer picture in weak analog signal conditions.

Dynamic Contrast

Set dynamic contrast Off/low/Medium/High.

Video Style

If you connect the HDMI/DVI port of PC to HDMI jack of the TV and the video signal is 1080p, please choose the **compatible video style**: Video, Graphic.

Audio Menu

The Audio Menu lets you adjust audio output.

Sound Mode

Choose the preset sound mode of your TV: Standard, Soft, User, Dynamic. Only in User mode you can adjust Bass, Treble, Balance.

Audio Language

Select digital TV audio language type: English, French or Spanish (only available for DTV channel).

Analog Audio Output

Select analog TV audio sound type: Stereo, Mono or SAP (only available in TV mode).

Digital Audio Output

Set the audio output type as Off, PCM or Raw. Please set this option according to your power amplifier.

Surround

Creates a 3D sound surround from standard stereo material, with deep and rich enhancement.

What else can I do?


If you've been through the Troubleshooting section and nothing has fixed your problem, try rebooting your TV. Note that after a reboot, you may need to run your TV through the setup process again. To reboot, unplug the power cord from the wall outlet or power strip. Keep your TV unplugged for about 5 minutes. Then plug in the TV and turn it on. See the problem is fixed. If the problem remains, then please visit the Customer Support Menu at www.rca.com or updated FAQs or contact RCA Customer Support at the support number provided in your Warranty card.

USB Media Play

With USB Media Play, you can enjoy music and photo files stored in a USB storage device on your RCA TV.

Connecting a USB storage device

- Connect a USB storage device to the USB port in the back of the TV.
- Press "INPUT" and select "USB".
- "USB Media Play" menu will appear.

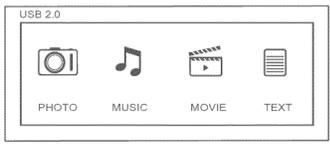

Playing back Photo files

- Press arrow () to select "Photo" and press "OK".
- The file or folder list will show up. Press arrow() to select a file or folder. Press "OK", and you will be given several options to view photo files.
- You can directly open and playback the file. View thumbnails for photo preview, or play slideshow.

Playing back Music files

- Press arrow () to select "Music" and press "OK".
- The file or folder list will show up. Press arrow() to select a file or folder. Press "OK" to playback the music file you selected.

Playing back Movie files

- Press arrow () to select "MOVIE" and press "OK".
- The file or folder list will show up. Press arrow() to select a file or folder. Press "OK" to playback the movie file you selected.

Playing back Text files

Similar to the photo menu. You can use TEXT menu to access and display text on your RCA TV.

Media Support Specification

Supported Files

- Photo JPG/JPEG files
- Music WAV files
- Movie MPG files

Supported USB storage/file system format

- File System USB flash drive
- File System format FAT32

Caution: Do not turn off the TV or disconnect USB storage device while the TV is playing back picture or music. This may result in loss of data or damage to the USB storage device, and RCA is not responsible for any damage to, or loss of, data on the USB storage device.

Audio Only

Press OK button to activate audio only mode. The TV will output only sound and the LED LCD panel will be turned off. To restore normal playing, hold POWER button for three seconds.

Auto Back

Select Blue Back on or off. If the Blue Back is turned on, the TV will display a blue background when there is no signal input.

Equalizer Settings

The seven-band graphic equalizer allows you to adjust the audio frequency settings. You can select one of the equalizer presets (Off, Pop, Rock, Jazz) or create your own personal preset. (User).

Time Menu

The Time Menu lets you to change the TV time settings.
Sleep Timer Set the sleep timer(Off, 5, 10, 15, 30, 60, 90, 120, 180, 240 Min). The TV will automatically enter standby mode after times up.

Time Zone

Showing the country's time zone, you can Set Time zone Off Eastern, Central, Mountain, Pacific, Alaska, Hawaii, Samoa, Newfoundland, Atlantic.

Auto Clock

Select auto clock on/off. Auto clock helps you synchronize your TV time to standard time (from DTV signal).

Clock

Set your TV time manually (needs to turn off auto clock), press up/down and left/right arrow to config the current time.

Wake Up

Use the Wake Up time for your TV, after enters menu, you can use the up/down and left/right arrow on the remote control to adjust it.

OSD Display Duration Set the time how long to display OSD menus(Sec, 15 Sec, 30 Sec, 45 Sec, 60 Sec).

Setup Menu

The Setup Menu lets you config the TV with your preferences.

Menu Language

Set the menu language.

Available languages: English, French and Spanish.

Menu Transparency

Set the menu transparency mode: 0%, 25%, 75%, 100% .

Closed Caption

Set the closed caption. The detail is as follows.

Caption Display

Select the caption display cc on or cc off.

Digital Caption Type

Select the digital closed caption type: service1, service2, Service3, Service4, Service5, Service6.

Digital Caption Style

Set the digital closed caption style. After changing, you can preview the caption style in the bottom.

- Mode:** Decide whether you can change the settings on the CC Display Style.
- CC Size:** Set the CC font size (Default, Normal, Large, Small).
- CC Font:** Set the CC font (Default, Font 0 - 7).
- CC Opacity Color:** Set the CC opacity color (Default, Solid, Flashing, Transparent, Transparent).

Text Color

Select the CC text color (Default, White, Red, Green, Blue, Yellow, Magenta, Cyan).

CC Background Opacity: Set the CC background opacity (Default, Solid, Flashing, Transparent, Transparent).

CC Background: Set the CC background color (Default, White, Red, Green, Blue, Yellow, Magenta, Cyan).

Product Specification

Model	LRK32G45RQD
Diagonal Display Size	31.5 inches
Television System	American TV standard ATSC/NTSC system
Channel Coverage	VHF: 2-13 UHF: 14-69 CATV: 1-135
Temperature	Storage Temperature is -20℃ +60℃ -4℉ +140℉ Operation Temperature is 0℃ +50℃ +32℉ +122℉
Humidity	Storage Humidity: Less than 85%RH (No condensation) Operation Humidity: Less than 80%RH (No condensation)
Power Supply	AC 100-120V, 60Hz
Connection Interface	RF input Video input Audio input Audio output
Resolution	Headphone x 1, Digital Audio Out x 1 1920 x 1080
Component/HDMI mode	AV x 1 HDMI x 3 HDMI 3 is already connected with Roku Streaming stick
Dimensions	With stand Without stand
Weight	With stand Without stand
Power Consumption	less than 42W

Note: Specifications and cabinet design are subject to change without notice.

Limited Warranty for USA

Coverage - Labor
For a period of 12 months from date of purchase of your RCA product, we will pay an authorized RCA service center the labor charge to repair any defects in materials or workmanship in your television, if your television is unrepairable we will provide you with a refurbished unit of the same or better model.

Coverage - Parts
For a period of 12 months from date of purchase of your RCA product, we will pay an authorized RCA service center for the new, or at our option, refurbished replacement parts needed to repair any defects in material or workmanship in your television, if your television is unrepairable we will provide you with a refurbished unit of the same or better model.


Coverage - LED LCD Panel
For a period of 12 months from date of purchase of your RCA product, we will pay an authorized RCA service center for the new, or at our option, refurbished LED LCD panel needed to repair any defects in material or workmanship in your television. If your television is unrepairable we will provide you with a refurbished unit of the same or better model.

How to Obtain Service
For assistance (U.S.A.) - If you purchased RCA product in U.S.A., please call 1-888-977-6722. Or visit www.rca.com

The service representative will review your options for service. As a convenience we offer three ways to obtain warranty service. You may mail your product to the address provided by our service representative, you may take your product to an authorized service center, or you may request in home service (serviceur will determine if product is serviceable in home or must be taken back to local service center for repair). Service representative will supply instructions for preferred service. At the time of service proof of purchase such as original receipt, will be required. Only 37" LCD size and above are applicable for in-home service.

Roku

Roku® Streaming Stick™ (Roku Ready® Version)

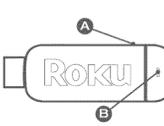

A: [RESET BUTTON] Used to reset Roku Streaming Stick.

B: [STATUS LIGHT] Signifies it is on when lit, or activity when flashing.

What to do

Start Streaming
You can enjoy the Roku streaming stick by pressing the Roku button on remote control.

Connect to network

Now you can grab your remote and jump right into guided setup. Have your network name and password ready and do the following:
- Select your network from the list of available networks.
- Enter your network password, if you use one. Remember, network passwords are case sensitive.

What to do (cont.)

- Complete guided setup**
Continue following the on-screen instructions and you'll:
 - Get the latest software.
 - Link the Roku Streaming Stick to your Roku account on your computer.

Your Roku account:

During setup, you'll be prompted to create your Roku account online at roku.com/link. Your Roku Streaming Stick will generate a unique code that links your player to your new account. Roku accounts are free. And while a valid credit card number is required to create your account, rest assured you will only be charged if you authorize purchases of apps and games from the Roku Channel Store.

Get more information about Roku, Inc.
You can get more information about Roku, Inc. from homepage (www.roku.com).

DVD Operations

DVD mode of TV LRK32G45RQD

TV LRK32G45RQD has a built-in DVD player module, which you can use to watch DVD films. The following operation guide gives the DVD module instruction.

1. How to enter DVD mode for TV LRK32G45RQD

Press INPUT button on remote control, select "DVD" in the Source Select menu (see page 7), then press OK or right arrow to enter DVD mode. The DVD will start playing automatically if there is a disk in DVD module. If not, the TV will display a standby screen as shown. And a "No Disc" message will appear on screen.

Note: The TV will turn on DVD mode automatically when you insert a disk, no matter which mode it is now.

Items Not Covered By Limited Warranty

- Your limited warranty does not cover the following items:
 - Un-installation, installation and adjustment of customer controls and operating instructions.
 - Batteries and customer replacement fuses.
 - Damage due to misuse, abuse, negligence or neglect including but, not limited to, damage resulting from exposure to moisture, humidity or salt.
 - Inability to receive a signal due to problems not caused by the product.
 - Damage to the product due to images burnt into the screen.
 - Product purchased or serviced outside of Country of Original Purchase.
 - I.e. Purchased USA can not be serviced in Mexico/Purchased in Mexico can not be serviced in USA.
 - Product modified or incorporated into other products.
 - Damage due to acts of nature, including but not limited to lightning damage or flooding.
 - Service calls which do not involve any defect in materials or workmanship.

Commercial Use Excluded

This limited warranty only applies to products used for personal use and does not cover any product used for institutional, commercial or rental purposes.

LIMITATION OF WARRANTY

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY APPLICABLE TO THIS PRODUCT. ON CORP US, INC., THE MANUFACTURER OF THIS PRODUCT, DISCLAIMS ALL OTHER WARRANTIES, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, NO VERBAL OR WRITTEN INFORMATION GIVEN BY OR FOR CORP US, INC., ITS AGENTS, INDEPENDENT CONTRACTORS, SALES REPRESENTATIVES, EMPLOYEES, RETAIL DEALERS, WHOLESALE DISTRIBUTORS OR ANY OTHER THIRD PARTY SHALL CREATE A WARRANTY OR INCREASE, EXPAND OR MODIFY THE SCOPE OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY PROVIDES THE SOLE AND EXCLUSIVE REMEDY FOR THE CONSUMER OF REPAIR OR REPLACEMENT OF THE PRODUCT. ON CORP US, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THE PRODUCT OR ARISING OUT OF A BREACH EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT. THIS LIMITED WARRANTY AND THE DISCLAIMERS CONTAINED HEREIN ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO APPLICABLE LIMITED WARRANTY PERIOD(S) SET FORTH ABOVE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU ALSO MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

RCA is a trademark of RCA Trademark Management SAS and used under license by ON Corporation

Garantía limitada para EE.UU.

Cobertura-Trabajo
Durante un periodo de 12 meses desde la fecha de compra de su producto RCA, pagaremos a un centro autorizado de servicio de RCA para reemplazar ya sea con partes nuevas o reacondicionadas, o a nuestra opción, para reparar cualquier defecto del material o mano de obra en el televisor.


Si su televisor es irreparable que le proporcionara una unidad reacondicionada del mismo modelo o superior.

Cobertura / Reembolsos
Durante un periodo de 12 meses desde la fecha de compra de su producto RCA, pagaremos a un centro autorizado de servicio de RCA para reemplazar ya sea con partes nuevas o reacondicionadas, o a nuestra opción, para reparar cualquier defecto del material o mano de obra en la pantalla de su televisor. Si su televisor es irreparable que le proporcionara una unidad reacondicionada del mismo modelo o superior.

Panel de Cobertura-LED LCD
Durante un periodo de 12 meses desde la fecha de compra de su producto RCA, pagaremos un centro autorizado de servicio de RCA para reemplazar la pantalla LED LCD, ya sea con pantalla nueva o reacondicionada, o a nuestra opción, para reparar cualquier defecto del material o mano de obra en la pantalla de su televisor. Si su televisor es irreparable que le proporcionara una unidad reacondicionada del mismo modelo o superior.

2. Insert a disk to DVD player

Insert the DVD disk with reflector surface facing the front of TV.

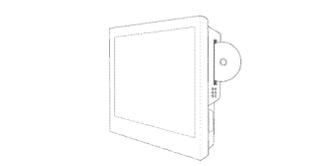

Disk reflector surface facing the front of TV.

Note: Do not insert with much strength. Insert disk gently and the DVD module will load in the disk automatically.

4. DVD basic operations

You can control the DVD Playing with keypad on DVD module or with remote control. For operating information, see the follow.
Note: About DVD control buttons on remote control, see the quick start guide of accessories with your TV.

Play/pause the disk: After inserting the disk to DVD module, the TV will play DVD disk automatically. You can use the PAUSE button to suspend the playing. Press again, the TV will restore playing.
Stop playing: During playing, you can use STOP button to stop playing. If you press STOP once, the DVD will be stopped briefly. Press STOP again, it will stop completely and the disk in DVD module no longer wheels.

Eject the disk: you can press EJECT button to eject the disk from DVD module. And press EJECT again, the DVD will load the disk renewely. This function is enabled only when DVD mode is on.

Going backward or forward: You can press FF for fast reverse and FF for fast forward. You can also press FREV to return to the previous chapter, and press NEXT to skip to next chapter.

5. DVD Q.MENU

Press Q.MENU button on the remote and then you will see the Q.Menu showing on your screen. Use up/down to choose the function you need. Title Menu, DVD Menu, Zoom, Subtitle, Audio Language, Repeat, Repeat A-B, Prev, Next, DVD Setup.

Title Menu: Choose Title Menu, you can reset the disk to the title menu. It equals to ejecting and loading the disk again.

DVD Menu: Choose DVD Menu, you will return to the root menu of current DVD function.

Zoom: Choose Zoom, you can zoom in the screen for 2