

gures and Illustrations in this User Manual are provided for reference ily and may differ from actual product appearance. Product design and ecifications may be changed without notice. Important Warranty Information Regarding

Television Format Viewing

See the warranty card for more information on warranty

Wide screen format LED Displays (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature and the images are constantly moving. Displaying stationary graphics and images on creen, such as the dark sidebars on non- expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing per week. Additionally, iewing other stationary images and text such as stock market reports, video dame displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. Displaying stationary images that exceed the above guidelines can cause uneven aging of LED Displays that leave subtle, but permanent burned-in ghost images in the LED picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On LED models that offer picture sizing features, use these ontrols to view different formats as a full screen picture. Be careful in the selection and duration of television formats you use for viewing. Uneven LED aging as a result of format selection and use, as well as burned-in images, are not covered by your Samsung

limited warranty. • SAMSUNG ELECTRONICS NORTH AMERICAN LIMITED WARRANTY STATEMENT

Subject to the requirements, conditions, exclusions and limitations of the original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein. SAMSUNG will additionally provide Warranty Repair Service in the United States on SAMSUNG products purchased in Canada, and in Canada on SAMSUNG products purchased in the United States, for the warranty period originally specified, and to the Original Purchaser only. The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center. Along with this Statement the Original Limited Warranty Statement and a dated Bill of Sale as Proof of Purchase must be presented to the Service Center.

- To delete channels from the **Favorites** list, follow these steps: 1. Select one or more channels in the Favorite Channels list using the $\blacktriangle/
 abla$ buttons and the Yellow Select button on your
- 2. Press the TOOLS button on your remote. The Tools menu appears. 3. Select Delete from Favorite in the Tools menu, and then
- press the ENTER 🗗 button. Timer Viewing: You can schedule a channel to be displayed
- automatically at a set time, even when you are watching another To change the information, follow these steps: channel. You must set the current time first in the Time > Clock function to use Time Viewing.
- To schedule a channel, follow these steps:
- 1. Select a channel in the Added Channels list using the $\blacktriangle/ \heartsuit$ buttons and the Yellow Select button on your remote 2. Press the TOOLS button on your remote. The Tools menu
- appears. 3. Select **Time Viewing** in the Tools menu, and then press the ENTER I button. The Time Viewing screen appears.



- 4. Use the **◄/▶** buttons to move from entry field to entry field and the ▲/▼ buttons to change the entries. Where numbers re displaved, vou can also enter numbers directly using the number keypad on your remote.
- Solution If you select Everyday or Every Week, the date you select in the Date field becomes the start date for your scheduled viewing. For **Everyday**, the TV will turn on every day, at the time you selected, starting from that date. For Everyweek, the TV will turn on every week, on the same day of the week as the start date you selected, at the time you selected, from that day on. If you select **Once**, the TV will turn on once, on the date and time you selected
- 5. Press the ENTER 🕑 button on your remote when done.
- Solve Added Channels can be scheduled.
- Scheduled programs and channels are displayed in the Programmed List.
- When you select a digital channel, press the button to view the digital program list. If you highlight a program in the list, and then press the ENTER (Schedule) button, you set Timer Viewing for that program directly.
- B Channel Name Edit: Analog channels only. Lets you assign a name of up to five characters to an analog channel. For example, Hist, Food, Golf, etc. This makes it easier to find and select a
- Select All: Select all the channels in the displayed channel list. **Deselect All:** Deselect all the selected displayed channels. Sou can only select Deselect All when one or more
- channels are selected.

[UH4005-ZA]BN68-05829L-00ENG.indb 1

Matter Auto Program: See Auto Program under Memorizing Channels.

ransportation to and from the Service Center is the responsibility o the purchaser. Conditions covered are limited only to manufacturing defects in material or workmanship, and only those encountered in normal use of the product. Excluded, but not limited to, are any originally specified provisions for, in-home or on-site services minimum or maximum repair times, exchanges or replacements. accessories, options, upgrades, or consumables.

For the location of a SAMSUNG Authorized Service Center, please call toll-free

---- In the United States : 1-800-SAMSUNG (1-800-726-7864) - In Canada : 1-800-SAMSUNG

Still image warning

-1-

Avoid displaying still images (such as ipeg picture files) or still image elements (such as TV channel logos, TV shows or movies in panorama or 4:3 format, stock or news scroll bars, etc.) on the screen. The constant display of still pictures can cause ghosting or image burn-in (image retention) on the LED screen, which will affect image quality. To reduce the risk of this effect, please follow the mmendations below:

- Avoid displaying the same TV channel for long periods.
- Always try to display any image in full screen mode. Use the TV's Picture Options menu to select the optimal screen size. Reduce brightness and contrast values to the minimum required to achieve the desired picture quality. Values that exceed the
- minimum may speed up the burn-in process. • Frequently use all TV features designed to reduce image retention and screen burn-in. Refer to proper user manual section for details.

Country	CANADA	U.S.A		
Address	Samsung Electronics Canada Inc. 2050 Derry Road West, Mississauga, Ontario L5N 0B9 Canada	Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 076		
Customer Care Center 🖀	1-800-SAMSUNG (726-786	1-800-SAMSUNG (726-7864)		
Web Site	www.samsung.com/ca/ support (English) www.samsung.com/ca_fr/ support (French)	www.samsung.com/us/ support		

© 2014 Samsung Electronics Co., Ltd. All rights reserved.

Programmed List (on the Channel List Screen) The **Programmed** list displays the channels and programs you

have scheduled for viewing using the Time Viewing function. You can view. modify, or delete a show you have scheduled using the functions on the Programmed List screen Tools menu.

Programmed List Screen Tools Menu TOOLS

Change Info: Change the scheduling information for a show or channel vou have scheduled.

- 1. Select the Programmed List icon on the left side of the
- Channel List screen, and then press the ENTER I button. 2. On the **Programmed** List screen, select the show or channel entry you want to change, and then press the TOOLS button.
- The Tools Menu appears. 3. Select Change Info, and then press the ENTER 🖃 button. he Time Viewing screen appears.
- 4. Use the **∢**/**▶** buttons to move from entry field to entry field. and the **A**/**V** buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.
- 5. Press the ENTER 🖼 button when done. Cancel Schedules: Cancel a show or channel you have

cheduled. To cancel a scheduled show or channel, follow these steps:

- 1. Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER I button.
- 2. On the Programmed List screen, select the show or channel entry you want to cancel, and then press the TOOLS button. , fools Menu appears.
- 3. Select Cancel Schedules, and then press the ENTER button. The Cancel Schedule screen appears.
- 4. Select OK, and then press the ENTER I button.
- Information: Display the information for a show or channel you have scheduled. You can also change the schedule Information. . Select the **Programmed** List icon on the left side of the
- Channel List screen, and then press the ENTER I button. 2. On the **Programmed** List screen, select the show or channel entry you want information for, and then press the TOOLS
- button. The Tools Menu appears. 3. Select Information, and then press the ENTER I button.
- The Time Viewing Information screen appears. 4. Select Change Info and press the ENTER 🖼 button to
- change information, or select Close and press the ENTER button to close the Information screen.
- Select All / Deselect All: You can select or deselect all channels in the channel list.

The On Screen Menus

Your TV has two kinds of menus, the Main menu and the various Tools menus. The Main menu gives you access to most or all of he menu options available on your TV. The Tools menus display a selected number of frequently used menu options that change depending on the screen you are viewing. The Main menu has seven primary categories

Picture Options

being played.

ts the entire screen.

(1080i / 1080p) HĎ signals.

ATV, AV, Component (480i, 480p)

that may appear on the screen.

Input Source

(720p. 1080i, 1080p)

darker.

optimum quality

Picture Reset

p, and bottom are cut off.

When the TV is connected to a PC, you can only mak

anges to the Color Tone, Size and HDMI Black Level

en sizes as well. However, we highly recommend you use

🛸 The menu is deactivated, when the H. 264 (1080p) DTV is

Zoom1: Provides moderate magnification of the picture. Sides,

 ${\rm Zoom2:}$ Provides larger magnification of the picture. Sides, top, and bottom are cut off.

Wide Fit: Enlarges the aspect ratio of the picture so the picture

Do not watch your TV in the 4:3 format for a long time

Screen Fit: Displays the full image without any cut-off when your TV is inputting HDM! (720p / 1080i / 1080p) or Component

HD (High Definition) has a 16:9 aspect ratio and 1080i/1080p

You can adjust and store settings for each external device you have connected to an input on the TV. Picture Sizes available

Digital Clean View (Off / Low / Medium / High / Auto) : If the

🛸 When the signal is weak, try all the Digital Clean View

HDMI Black Level (Normal / Low) : For HDMI signals, select

options until the TV displays the best picture.

Available only in HDMI mode (RGB signals).

1080i) and HDMI (480i / 1080i).

brightness control adapted motion.

Available in Standard mode only.

picture settings to their factory defaults.

If you selected Manual

60, 90, 120, 150 and 180 minutes).

Timer 1 / Timer 2 / Timer 3

You must set the clock first.

Wolume: Set the desired loudness.

Activate.

the USB device:

appears.

button.

e-appears

to select the folder.

device lower than USB 2.0.

and the type or name of the device.

Solution To cancel the Sleep Timer, select Off.

select. You can set three different on/off timer settings

Sleep Timer 100157

adcast signal received by your TV is weak. you can activate

the Digital Clean View feature to reduce any static and ghosting

the black level to adjust the screen depth. Low make blacks look

process film signals from all sources and adjusts the picture for

🛸 Available in ATV, DTV (interlace), AV, COMPONENT (480i /

Bicture Reset (Reset Picture Mode/Cancel): Resets the

The Clock Set screen appears. Use the ▲/▼ buttons to

change the values in each field or use the number buttons to

enter the values directly. Use the ◀/▶ buttons to move from

field to field. When done with all the fields, press ENTER

Automatically shuts off the TV after a preset period of time. (30,

Activate/Inactivate fields for the On Time and Off Time. Use the

◄/► buttons to move from field to field. Use the ▲/▼ buttons

to change the values in each field. To activate the timer with

B Contents: To select what will be turned on when the timer

setting is activated. You can set the TV to turn on a specific

channel or play back contents such as photo or audio files.

and then press the ENTER 🖼 button. The Contents screer

the ▲/♥ buttons to change the values in each field.

connected to your TV before you can select USB.

- TV/USB: Select TV or USB. The USB device must be

Use the ◀/▶ buttons to move to move to the Contents field.

appears. Use the </ > buttons to move from field to field. Use

- Antenna: Displays the current antenna source, Air or Cable

The maximum displayed number of files, including sub

folders, in one folder of USB storage device is 2000.

le media may not be playing smoothly when using the

1. Use the **4/** buttons to move to the field under **Music**

or the field under Photo, and then press the ENTER

button. The TV displays a single folder (the Root folder)

2. Press the ENTER 🖼 button. A list of folders on the device

🖄 If there are no folders on your device, press the

3. Use the ▲/▼ buttons to highlight a folder that contains

4. Press the RETURN button. The Timer screen re-appears.

Sat~Sun or Manual. If you select Manual, you can select the

days you want to activate the timer by using the </>

o highlight the day, and then pressing the ENTER 🖼 button.

To unselect a day, highlight it, and then press the ENTER 🖃

When you finished making all your selections on the Timer screen.

🗱 Repeat: Select Once, Everyday, Mon~Fri, Mon~Sat,

press either the ENTER 🕑 or RETURN button.

Yellow select button to select the Boot folder, and

then press the RETURN button. The Timer screen

music or photos, and then press the Yellow select button

- Channel: If you have selected TV, select the desired channel.

- Music/Photo: If you have selected USB, follow these steps to

select a folder containing MP3 (Music) or JPEG (Photo) files on

the setting you have chosen, set the Activate/Inactivate field to

Turns the TV on and off automatically at times and days you

MOn Time / Off Time: Set the hour, minute, am/pm, and

Available only when Clock Mode is set to Manual.

Picture Size

16:9, Zoom

Zoom2, 4:3

16:9. Wide Fit

4:3. Screen Fit

4:3: Sets the picture to the old, 4:3 format and puts black or gray

Traces of borders displayed on the left, right and center of

he screen may cause image retention (screen burn) which

Color Tone (Cool / Standard / Warm): Cool makes the picture

bluer (cooler). Warm 1 and Warm 2 make the picture redder

Size: Set the size and aspect ratio of the picture on the screen

Your cable box or satellite receiver may have its own set of

16:9: Sets the picture to the 16:9 wide screen format.

he TVs 16:9 mode most of the time.

borders on the right and left of the picture.

s not covered by the warranty.

by Input Source are listed below:

DTV (1080i), Component (1080i, 1080p), HDMI

(1920x1080) or 720p (1280x720) resolution.

 Picture Input

Sound	 Application
Channel	 Support

 Setup 	
---------------------------	--

To view the Main menu, press the MENU button on your remote, To view a Tools menu, press the TOOLS button on your remote. 🔊 The menu options that appear in the Main menu depend

on the Source you have selected. For example, if you have selected the HDMI source, the Channel category will not appear. To see the Channel category, you must first select TV in the Source List.

The Menu options are presented below, arranged by Main menu categories. A Tools button symbol (TOOLS,) next to an option name indicates the option is also available in one of the Tools menus.

Picture Menu

Mode TOOLSE

Select your preferred picture mode.

- 👒 When your TV is connected to a PC, you can only select Entertain and Standard.
- Brightens the screen. Suitable for a bright room.
- Standard: Suitable for a normal. Movie: Darkens the screen, making it less glary. Suitable for
- watching movies in a darkened room I Entertain: Sharpens the picture. Suitable for games.
- Only available when the TV is connected to a PC.
- Backlight / Contrast / Brightness / Sharpness / Color / Tint (G/R)
- Backlight: Adjusts the brightness of the screen by adjusting the brightness of the individual pixels.
- Contrast: Increases or decreases the contrast between dark and Film Mode (Off / Auto) : Sets the TV to automatically sense and light areas of the picture.
- Brightness: Adjusts the brightness of the screen. Not as effective as Backlight.
- Sharpness: Sharpens or dulls the edges of objects. Color: Adjusts the color saturation. The higher the Color setting, Motion Lighting (Off / On): Reduce power consumption by
- the more intense the color. Low settings remove color and the picture becomes black, white and gray. Tint (G/R): Adjusts the amount of green and red in the picture.
- As you increase the amount of green, the amount of red decreases and vice versa. When the TV is connected to a PC, you can only make
- changes to Backlight, Contrast, Brightness, and Sharpness

Other Channel Menu Functions

Channel Mode (Added Channels/Favorite Channels)

_ets you select the channel list displayed when you press the ∧CH∨ (Channel) button on your remote. For example, if you select Favorite Channels, you will only see Favorite channels when you press the **ACHV** button.

Fine Tune

Analog channels only

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually.

- 🛸 Select the channel, and then select Fine Tune. Sine tuned channels that have been saved are marked with
- an asterisk "*" on the right-hand side of the channel number in the channel banner.
- Sa To reset fine-tuning, select the channel, select Fine Tune, and then select Reset on the Fine Tune screen

Setup Menu

Plug & Play Lets you re-run the Plug & Play initial setup procedure. For instructions, see your Quick Start Guide.

Language

Set the menu language Schoose between English, Español, and Français.

Setting the Time

- Solution The time you set will appear when you press the INFO
- button. Monomial Clock: Set the clock so you can use the various timer features
- of the TV. If you disconnect the power cord, you have to set the

2. Press ENTER R and select Auto or Manual, and then press

The TV will automatically download the correct time from a

Select Time Zone, and then press the ENTER
 u button.
 Use the ▲/▼ buttons to select your Time Zone, and then

• Select DST (Daylight Savings Time), and then press

ENTER . Select On if you want to turn the DST

djustment on and off manually. Select Off to turn off the

DST adjustment. Select Auto if you want the TV to adjust

to DST automatically. Press ENTER I when done.

the Clock Mode is set to Auto.

ST and Time Zone function are only available when

clock again. To set the clock, follow these steps: 1. Select Setup >Time > Clock.

ENTER 🗗 again.

digital channel

If you selected Auto:

press ENTER .

Sound Menu

Mode TOOLS

Standard: Selects the normal sound mode Music: Emphasizes music over voices. Movie: Provides the best sound for movies. Clear Voice: Emphasizes voices over other sounds.

Equalizer Available in Standard sound mode only.

Balance L/R: Adjusts the balance between the right and left Bandwidth

Adjustment): Adjusts the loudness of specific bandwidth frequencies I Reset: Resets the equalizer to its default settings.

DTS TruSurround

Available in Standard sound mode only.

DTS TruSurround is a patented DTS technology that solves the problem of playing 5.1 multichannel content over two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system including internal television speakers. It is fully compatible with all multichannel formats.

Preferred Language

Digital channels only.

Digital-TV broadcasts can transmit many audio tracks multaneously (for example, simultaneous translations of a progra into foreign languages).

🛸 You can only select a language from among the ones being broadcast.

Multi-Track Sound (MTS)

Analog channels only. Mono: Select for channels that are broadcasting in mono or if you are having difficulty receiving a stereo signal.

Stereo: Select for channels that are broadcasting in stereo SAP: Select to listen to the Separate Audio Program, which is usually a foreign-language translation.

Depending on the program being broadcast, you can listen to Mono, Stereo or SAP.

Auto Volume

Automatically adjusts the volume level when you change video sources or content so the level remains the same.

SPDIF Output

The SPDIF (Sony Philips Digital InterFace) outputs an ncompressed digital audio signal when you connect the digital audio lack on the back of the TV to a digital audio in lack on a receiver or home theater.

Madio Format (PCM/Dolby Digital): You can select the Digital Audio output (SPDIE) format. The available Digital Audio output format may differ depending on the input source. By connecting the TV to a receiver or home theater with

Dolby Digital and 5.1ch speakers and selecting Dolby Digital, you can maximize your interactive 3D sound experience.

Other Features

Program Rating Lock

The Program Rating Lock feature lets you block programs you've determined are inappropriate for your children based on the program's ratings. To access the **Program Rating Lock** ture and make any changes, you must enter a PIN (persona identification number). To watch a blocked program, you must also enter the same PIN.

Program Rating Lock is not available in HDMI or

Component mode 🛸 The default PIN number of a new TV set is "0-0-0-0". You can set your own PIN using the Change PIN function.

How It Works

When you access the Program Rating Lock Menu functions for the first time, the PIN input screen appears. Enter 0-0-0-0. The PIN screen closes and the Program Rating Lock Menu appears. Eve time you access the Program Rating Lock functions, the PIN screen will appear and you must enter a PIN.

When the Rating Lock screen appears, select Program Rating Lock, and then press ENTER . Select On, and then press the ENTER 🖼 key again. Depending on what type of programs or movies you want to block, select one of the options on the screen. and then press the ENTER I button. The options are listed below:

TV Parental Guidelines: You can block TV programs based on their ratings. This function allows you to control what your children are watching. MPAA Rating: You can block movies based on their MPAA

ratings. The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information on which films are appropriate for

Canadian English: You can block TV programs based on their Anglophone Canadian ratings

Solution Strench: You can block TV programs based on their French Canadian ratings

Bownloadable U.S. Rating: Parental restriction information can be used while watching DTV channels.

Locking/Blocking Programs or Movies

You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The TV Parental Guidelines option also has kinds of content listed across the top: ALL: Lock all IV ratings. / **FV**: Fantasy violence / **V**: Violence / **S**: Sexual situation / L: Adult Language / D: Sexually Suggestive Dialog.

To lock/block movies or shows with certain ratings and/or kinds of content, click the square next to the rating and/or under the kind of content. A lock appears. To unlock/unblock, click the square again. When you click a low rating, all the ratings above it will also display locks. You can also Allow All or Lock All. When done, press the RETURN button on your remote.

Mange PIN: The Change PIN screen will appear. Choose any 4 digits for your PIN and enter them in Enter New PIN fields. Re-enter the same 4 digits in Confirm New PIN fields. When the Change PIN screen disappears, press the OK button. The TV has memorized your new PIN.

If you forget the PIN, press the remote-control buttons in the following sequence, which resets the pin to "0-0-0-0 POWER (off) \rightarrow MUTE \rightarrow 8 \rightarrow 2 \rightarrow 4 \rightarrow POWER (on)

Audio Delay: Lets you correct timing mismatches between the audio track and the video when you are watching the TV and listening to digital audio output from the TV through an external device such as an AV receiver. When you select Audio Delay, a slider appears. Use the left and right arrow buttons to adjust the

slider. Press ENTER I when done (0ms ~ 250ms). Speaker Select

A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to External Speaker. Solution When Speaker Select is set to External Speaker, the

volume and MUTE buttons will not operate and the sound settings will be limited

- Solution When Speaker Select is set to External Speaker. * TV Speaker: Off, External Speaker: Or
- Solution When Speaker Select is set to TV Speaker.
- * TV Speaker: On, External Speaker: On If there is no video signal, both speakers will be mute.

Visual Impaired

Diaital channels only

Adds verbal description to the main audio to help the visually impaired.

Sound Reset

Reset All: Resets all sound settings to the factory defaults.

Channel Menu

Memorizing Channels

When you first set up your TV using Plug & Play, the TV memorized the channels that were available over the air or through our cable system and added them to the Channel List. The Antenna and Auto program functions described below let you re-run the channel memorization function without having to re-run the Plug & Play procedure

Antenna (Air / Cable)

Before your television can memorize the available channels, you nust select your TV's signal source, Air (using an antenna) or Cable. Select Menu > Channel > Antenna > Air or Cable. After you have selected the signal source, go on to the Auto Program function.

Selecting the signal source using the Antenna function also determines the signal source the TV is tuned to. For example, f you receive your TV signal over the air, and you select Cable, you will see only snow. You must select Air to see a picture.

Auto Program

The Auto Program function memorizes all channels that are available over the air or through your cable system and adds them to the Channel List.

To start Auto Program, follow these steps:

- 1. Push MENU III → Channel → Auto Program → ENTER III on your remote. The Antenna Source screen appears.
- 2. On the Antenna Source screen, select the source of your TV signal.

- 3 -

Game Mode (On/Off) When you connect a game console such as a PlayStation™ or Xbox™ to your TV. you can enjoy a more realistic gaming experience by turning on the Game Mode function.

- Security Before you disconnect the game console and connect another external device, set Game Mode to Off in the setup menu
- If you display the TV menu in Game Mode, the screen shakes Same Mode is not available when the input source is set to
- After connecting the game console, set Game Mode to On. You may notice slightly reduced picture quality.

(On-Screen Text Dialogue)

Caption: You can switch the caption function on or off. If captions are not available, they will not be displayed on the

- 🗠 The Caption feature does not work in Component or
- HDMI mode. Caption Mode: You can select the desired caption mode.
- Default / CC1~CC4 / Text1~Text4: (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels.
- Default / Service1 ~ Service6 / CC1 ~ CC4 / Text1 ~ Text4: (Digital channels only) The Digital Captions function works with
- Service1~6 may not be available in digital caption mode lepending on the broadcast
- Digital Caption Options: (Digital channels only) Size: Options include Default, Small, Standard and Large. The
- default is Standard. Font Style: Options include Default and Styles 0 to 7. The default is Style 0.
- Foreground Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the

color of the letters. The default is White. Background Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the background color of the captions. The default is Black. Foreground Opacity: This adjusts the opacity of text. Options include Default, Transparent, Translucent, Solid and Flashing. Background Opacity: This adjusts the opacity of the caption background. Options include Default, Transparent, Translucent,

Solid and Flashing Return to Default: This option sets each Size, Font Style, Foreground Color, Background Color, Foreground Opacity and Background Opacity to its default.

Solution Options are available only when you can select Default and Service1 ~ Service6 in Caption Mode.

Solution The Foreground and Background cannot be set to the same color

If your TV is connected to an antenna choose Air, and then press ENTER I. The TV will automatically start memorizing channels. Cable

Maintenance in the second seco

Semote control buttons active on the Channel List screen

* Yellow (Select): Move the cursor to a channel. Press the Yellow

• 🖅 (Tools): Displays the Channel List Tools menu. (The Tools

A program currently being broadcast.

The Channel List Tools menu contains most of the functions you

can use on the All Channel. Added Channels, and Favorite List

screens. To view, select a list screen, select a channel, and then

To delete channels from the Added Channels list, follow these steps:

1. Select one or more channels in the Added Channels list using

3. Select Delete in the Tools menu, and then press the ENTER

1. Select one or more channels in the All Channels list using the

▲/▼ buttons and the Yellow Select button on your remote.

2. Press the TOOLS button on your remote. The Tools menu

To add channels to the Added Channels list, follow these steps:

2. Press the TOOLS button on your remote. The Tools menu

3. Select Add in the Tools menu, and then press the ENTER 🖼

Sa All deleted channels will be shown on the All Channels list

A gray-colored channel indicates the channel has been

Solution The Add menu option only appears for deleted channels.

Add to Favorite/Delete from Favorite: Lets you add channels to

1. Select one or more channels in the All Channels list using the

▲/▼ buttons and the Yellow Select button on your remote

3. Select Add to Favorite in the Tools menu, and then press the

MEDIA.P

2. Press the TOOLS button on your remote. The Tools menu

deleted from the Added Channels list.

To add channels to the Favorites list, follow these steps:

and delete channels from your Favorites list.

Enjoy photos, music and/or movie files saved on a

USB Mass Storage Class (MSC) device.

□ Connecting a USB Device

Using the Media Play Menu

open Media Play in the Menu, follow thes

1. Press the MENU button. Then, press the ▲ or ♥ button to

select Application on the left, and then press the ENTER

2. Press the ▲ or ▼ button to select Media Play (USB), and then press the ENTER → button.

Press the ◀ or ► button to select an icon (Videos, Music, Photos, Settings), and then press the ENTER → button.
 Media Play might not work properly with unlicensed multimedia file

Need-to-Know List before using Media Play (USB)

Certain types of USB Digital camera and audio devices may not be compatible with this TV.

Readers. Devices should be connected directly to the TV's USB

files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or loss.

Media Play only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives and Flash Card

Before connecting your device to the TV, please back up your

• A USB device that requires high power (more than 0.5A) may not

The maximum supported JPEG resolution is 15360 x 8640 pixels.

If a file is corrupted or the TV does not support the file type, the "Not Supported File Format" message appears.

downloaded from a for-pay site. Digital Rights Managemen

(DRM) is a technology that supports the creation, distribution, and management of digital content in an integrated and

comprehensive way, including protecting the rights and interests

of content providers, preventing illegal copying of contents, and managing billing and settlements.

2014-06-25 🖾 3:15:44

• The TV cannot play MP3 files with DRM that have been

• Do not disconnect the USB device while it is loading.

. The higher the resolution of the image, the longer it takes to

• The file system supports FAT16, FAT32 and NTFS.

port. USB HDD is not supported.

be supported.

display on the screen.

2. Connect a USB device containing photo, music, and/or movie

files to the USB jack on the back of the TV. A pop up window

Eff Enter 🄊 Re

3. Press the MEDIA.P button on your remote. The Media Play

You add channels back to the Added Channels list on the

the ▲/▼ buttons and the Yellow Select button on your remote

□ The Channel List Tools Menu

Add / Delete: Delete a channel from or add a channel to the

• Green (Zoom): Enlarges or shrinks a channel number.

hus may differ depending on the situation

Display Icons Used in the Channel List Screens

function to the channels you selected.

A selected channel.

A Favorite channel.

A reserved program.

w.

Θ

ŏ

press the TOOLS button.

Added Channels list.

button.

appears.

button.

All Channels list.

ENTER 🗗 button.

Media Play

1. Turn on your TV.

menu appears.

🚛 E SUM 💼 Change Device

scheduled using Timer Viewing.

button to select the channel. A \checkmark mark appears. Repeat to select additional channels. Then, open the Tools menu and apply a

Meaning

If your TV is connected to a cable outlet, choose Cable, and then press ENTER . Go to Step 3.

If you choose Auto, and then press ENTER , the TV will automatically select the correct Antenna source. Go to

- Step 3. On the Cable Type screen, use the
 the type of digital and analog cable systems you have: STD, HRC, or IRC. Most systems are STD (Standard). When done, select Start, and then press ENTER . The TV will start memorizing
- channels. 🛸 Channel memorization can take up to 45 minutes, depending on your cable system.
- Memorized channels are added to the Added Channels list. These are the channels you will see when you use the Channel buttons on your remote.

Clear Scrambled Channel

- This function filters out scrambled channels after Auto Program is completed. This process may take up to 20~30 minutes
- Series The ENTER I button to stop the Clear Scrambled Channel
- Solution This function is only available in Cable mode.

Managing Channels

Channel List

Auto

See vour list of Added channels. Favorite channels, or channels you've scheduled for viewing. Add or delete Favorite channels, add or delete channels from the Added Channels list, schedule channels or programs for viewing. Watch a channel by selecting the channel in the All Channels, Added Channels, or Favorite screen, pressing the ▲ / ▼ buttons, and then pressing the ENTER G button.



Favorite: Shows all favorite channels.

Boot Logo

Eco Solution

being received.

Auto Protection Time

Cummont Manue

follow the directions on the screen.

Self Diagnosis

on the screen.

PIN option.

Software Upgrade

Contact Samsung

HD Connection Guide

button to turn on the screen.

brightness can be adjusted manually.

surrounding light intensity.

Channel List Screens icons are listed on the left side. Select an icon using the <u>▲/▼</u> buttons to view each list. I 🕷 🗞 All Channels: Shows all currently available channels including

those you deleted from the Added Channels Market Added Channels: Shows all Added Channels. These are the

channels that appear when you press the CH LIST button.

Enable/disable displaying the logo while the TV starts up.

Energy Saving (Off / Low / Medium / High / Picture Off)

This adjust the brightness of the TV in order to reduce pow

consumption. If you select Picture Off, the screen is turned

Eco Sensor (Off / On): To enhance your power savings; the

off, but the sound remains on. Press any button except volume

picture settings will automatically adapt to the light in the room

🔊 If you adjust the Backlight, the Eco Sensor will be set to Off.

Min. Backlight: When Eco Sensor is On, the minimum screen

(become slightly darker in most cases) depending on the

🐁 If Eco Sensor is On, the display brightness may change

No Signal Power Off (Off / 15 min. / 30 min. / 60 min.); Sets

Disabled when the PC is in power saving mode

off when no user operation is received for 4 hours.

the formation of ghost images on the screen

how guickly the TV switches to standby mode, if no picture is

Matter Auto Power Off (Off / On): The TV will be automatically turned

Matter Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10

Picture Test: Use to check for picture problems. If the problem

Sound Test: Use the built-in melody sound to check for sound

Signal Strength: (Digital channels only) An HD channel's

BReset: Reset all settings to the factory defaults.

problems. If the problem occurs during the test, select Yes and

reception quality is either perfect or the channels are unavailable. Adjust your antenna to increase signal strength.

The PIN input screen appears before the setup screen.

Sector Your 4-digit PIN. Change the PIN using the Change

Software Upgrade can be performed by downloading the latest

Refer to this information when connecting external devices to the

View this information when your TV does not work properly or

regarding our call centers and how to download products and

when you want to upgrade the software. You can find information

firmware from samsung.com to a USB memory device.

appears in the test picture, select Yes and follow the directions

hours): If the screen remains idle with a still image for a certain

period of time you define, the screen saver is activated to preven

- · PTP devices are not supported.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be ecognized or may malfunction
- If the TV has no input during the time period set in Auto Protection Time, the Screensaver will run.
- The power-saving mode of some external hard disk drives ma be released automatically when your connect them to the TV.
- If you use a USB extension cable, the TV may not recognize the USB device or may not be able to read the files on the device.
- If a USB device connected to the TV is not recognized, the list of
- files on the device is corrupted, or a file in the list is not played connect the USB device to a PC, format the device, and check
- he connectior • If a file you deleted from the PC is still found when you run **Media Play**, use the "Empty the Recycle Bin" function on the PC to
- permanently delete the file.
- Photos only supports the sequential jpeg format. • The Videos option does not support the scene search and
- thumbnail functions. If the number of files and folders saved on a USB storage device is
- iver approximately 4000, the files and folders may not appear and some folders may not open.

• The maximum displayed number of files, including sub folders, in one folder of USB storage device is 2000.

The media may not be playing smoothly when using the device lower than USB 2.0.

0)

Trouble Powering On

Stand Assembly

Poor Picture

it did in the store

The picture is distorted: macroblock

error, small block, dots, pixelization

There is poor color or brightness

Color is wrong or missing.

the screen.

Cannot find a channe



- 1. In the Media Play menu, press the d or > button to select
- 2. Press the $\langle | \mathbf{A} | \mathbf{\nabla} \rangle$ buttons to select a video in the file list. 3. Press the ENTER 🕑 button or 🕨 (Play) button.
- The file name is displayed on the top of the screen with the playing time.
- If video time information is unknown, playing time and the progress bar are not displayed.
- During video playback, you can search using the ◀ and buttons.
- 🔊 In this mode, you can play movie clips contained in a game, but you cannot play the game itself.

Supported Subtitle Formats

Name		Fi	le extension	
MPEG-4 timed text		.ttxt		
SAMI			.smi	
SubRip			.srt	
SubViewer			.sub	
Micro DVD		.sub or .txt		
SubStation Alpha		.ssa		
Advanced SubStation Alpha	1		.855	
nternal				
Name	Co	ntainer	Format	
			Sector Se	

SubStation Alpha			M	<∨	Text Fo	ormat
	Advanced SubStation Alpha			<∨	Text Fo	ormat
SubRip			Mł	<∨	Text Fo	ormat
	MPEG-4	Timed text	M	⊃4	Text Fo	ormat
Suppo	orted Vide	o Formats				
RIe tension	Container	Video Codec	Resolution	Frame rate(tps)	Bit rate(Mbps)	Audio Codec
		DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	
.mp4	MP4	H264	1920x1080	6~30	20Mbps	MP37 ADPCM7

10,04 1017-4						
		VC-1	1920×1080	630	20Mbps	AAC
		MJPEG	640x480	6~30	10Mbps	
		DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	630	20Mbps	MP3/AC3
".avi ".mkv"	"AVI MKV"	MPEG 1/2/4	1920×1080	6~30	20Mbps	/ LPOM / ADPCM /
.TUKA.	MIKV.	H264	1920×1080	6~30	20Mbps	DTS
		MJPEG	640x480	6~30	10Mbps	
"*.asf ASF	DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	MP3/AC3 /LPCM/	
	MPEG 1/2/4	1920x1080	6~30	20Mbps	ADPCM / WMA /	
		H.264	1920×1080	6~30	20Mbps	WMA Pro
".ts ".trp		MPEG2 -TS	1920x1080	6~30	20Mbps	AC3 / AAC
'.tp TS '.m2ts'	H. 264	1920x1080	6~30	20Mbps	/ MP3 / DD+	
*dat *.mpg *.mpeg *.vob*	MPEG1	1920×1080	630	20Mbps	AC3 /	
	PS	MPEG2	1920x1080	6~30	20Mbps	MPEG / LPCM /
		H. 264	1920×1080	6~30	20Mbps	AAC
1.3gp	3GPP	MPEG 1/2/4	1920x1080	6~30	20Mbps	MP3
.ogp	JOGPP	H.264	1920×1080	6~30	20Mbps	IVIP'O

 flash
 H.264
 1920x1080
 6~30
 20Mbps

 formata
 Someron H.263
 1920x1080
 6~30
 20Mbps
 Sorenson H.263 1920x1080 6~30 20Mbps

Before you turn the TV on, find the red light on the right or left bottom of your TV. Press the power on button on the TV or remote and the light should blink about 5 times before the TV turns on.

f you find that you are having trouble powering on your Samsung television, there are a number of things to check it

If you happen to be using the TV as a monitor and the stand-by light only blinks for a few seconds when you press the power button, your PC is in sleep mode. To take your PC out of sleep mode, press a key on your

If you're sure your power cord, remote control, and PC are functioning properly, you may be having a cable issue. If you have a cable or satellite box, your TV may appear to be off because the cable or satellite box is not outputting a

signal. To test the signal output of your cable or satellite box, press the guide or info button on the cable or satellite box remote control. If the screen displays the guide or info data, the problem is caused by the box.

• If you have any trouble assembling the stand, refer to "Install the Stand" in the Start Up or Stand Installation Guide.

- Video content will not play, or not play correctly, if there is an error in the content or the container Sound or video may not work if the contents have a standard
- bit rate/ frame rate above the compatible Frame/sec listed in the Supported Video Formats table.
- If the Index Table erroneous, the Seek (Jump) function is not supported.
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps.
- Video content can not be played if there are many contents i one file.

Video Decoder

Supports up to H.264. Level 4.1 H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported. MPEG4 SP, ASP :

- Below 1280 x 720: 60 frame max - Above 1280 x 720: 30 frame max

H.263 is not supported.

GMC is not support.

Audio Decoder

Supports up to WMA7, 8, 9 STD, 9 PRO, 10 PRO WMA 9 PRO and WMA 10 PRO support 5.1 channel. (LBR mode of WMA Pro is not supported) WMA Lossless is not supported.

Music



1. In the Media Play menu, press the < or <p>button to select Music, and then press the ENTER 🕞 button.

- 🖄 During music playback, you can search using the ◀ and 🚽 button.

Solution State extension. Other file extensions are not displayed, even if they

If the sound is abnormal when playing MP3 files, adjust the Equalizer in the Sound menu. (An over-modulated MP3 file

🔊 NOTE To cancel a selection, press the Yellow button again

2. Repeat Step 1 to select multiple files.

CMYK, YCCK Color space JPEG are not supported.

Playing selected video/music/photo files

• To deselect all selected files, press the TOOLS button, select Deselect All, and then the ENTER 🖼 button.

2. Press the </ > / ▲ / ▼ buttons to select a photo in the file list.

While a photo list is displayed, press the ► (Play) / ENTER → button on the remote control to start a slide show.

• All files in the file list section will be displayed in the slide show.

• During the slide show, you can adjust the slide show speed using ((I) (REW) or (I) (FF) button.

S Media Play can play Music files automatically during a Slide

Sou cannot change the Mode in Background Music until the

Photo

Base-line

Progressive

Resolution

15360 x 8704

1024 x 768

Photos, then press the ENTER 🖼 button.

3. Press the ENTER button or ► (Play) button.

During the slide show, files are displayed in order.

Show if Background Music is set to On.

Background Music file has finished loading.

Supported Photo Formats

Image

JPEG

Other Restrictions

Playing Multiple Files

then press the ENTER 🕞 button.

- ◄/▶/▲/▼ buttons to highlight a folder.
- ENTER 🗬 button.

There is no picture/video.	Check the cable connections. (Remove and reconnect all cables connected to the TV and external devices). Set your external device's (Cable/Sat Box, DVD, Blu-ray etc) video outputs to match the connections to the
	input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the T
	 Make sure your connected devices are powered on. Be sure to select the correct input source by pressing the SOURCE button on the remote control.
	Reboot the connected device by pressing the device's power cable.
RF (Cable/Antenna) Connection	
The TV is not receiving all channels.	 Make sure the coaxial cable is connected securely.
	 Run Auto Program to add available channels to the channel list. go to MENU - Channel - Auto program then select Auto and make sure the correct Cable TV signal type is in the menu. Three are 3 options. (STD, HRC and IRC) Verify the antenna is positioned correctly.
No Caption on digital channels.	 Check the Caption Setup menu. Try changing Caption Mode Service 1 to CC1. Some channels may not have caption data.
The picture is distorted: macroblock, error, small block, dots, pixelization.	 Compression of video contents may cause picture distortion, especially on fast moving pictures such as thos sports and action movies. A weak signal can cause picture distortion. This is not a TV problem.
Others	
Purple/green rolling horizontal bars and buzzing noise from the TV speakers with Component cable connection.	 Remove the left and right audio connections from the set-top-box. If the buzzing stops, this indicates that the top-box has a grounding issue. Replace the Component video cables with an HDMI connection.
The picture will not display in full screen.	 HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents. Black bars on the top and bottom appear when movies that have aspect ratios different from your TV play or TV.
	 Adjust the picture size option on your external device or change the TV to full screen.
The remote control does not work.	Replace the remote control's batteries. Make sure you insert them with the polarity (+/-) correct .
	 Clean the transmission window located on the top of the remote control. Try pointing the remote directly at the TV from 5–6 feet away.
The cable/set top box remote control does not turn the TV on or off, or adjust the volume.	 Program the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual the SAMSUNG TV code.
A "Mode Not Supported " message appears.	Check the supported resolution of the TV and adjust the external device's output resolution accordingly. Reference resolution settings in this manual.
Caption on the TV menu is greyed out.	 You cannot select Caption in the TV menu when watching content from a device connected via HDMI or Component. Caption must be activated on the external device.
There is a plastic smell from the TV.	This smell is normal and will dissipate in a few days,
TV Signal Strength is unavailable in the Self Diagnosis Test menu.	This function is only available for digital channels received through an Antenna / RF/Coax connection.
TV is tilted to the right or left side.	Remove the stand base from the TV and reassemble it.
The Channel menu is grey out (unavailable).	The Channel menu is only available when you select the TV source.
Your settings are lost after 30 minutes or every time the TV is turned off.	 If TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Please change from Store Demo mode to Home Use mode using the Plug & Play procedure. Press the SOURCE button to set TV mode, go to MENU → Setup → Plug & Play → ENTERC.
You have intermittent loss of audio or video.	 Check the cable connections and reconnect them. Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.
You see small particles when you look closely at the edge of the frame of the TV.	This is part of the product's design and is not a defect.
POP (TV's internal banner ad) appears on the screen.	Select Home Use under Plug & Play mode. For details, refer to Plug & Play (Initial Setup).

Solution Watch these troubleshooting on video at www.samsung.com/spsn.

Some functions and pictures shown in this manual are available on specific models only.

🗞 You can keep your TV in optimum condition by upgrading it with the latest firmware from the Samsung web site (samsung.com → Support → Downloads). To upgrade, download the firmware to your computer, copy the firmware file to a USB memory stick,

- 14-

 


Licer









- 13 -

🖃 Pause 🚸 Jump 🔎 Tools 🏷 Retur 2. Press the ◀/▶/▲/♥ buttons to select the desired Music in the

file list.

- 3. Press the ENTER 🕑 button or 🕨 (Play) button.
- 🛸 ৰ (REW) and ► (FF) buttons do not function during

are saved on the same USB device.

may cause a sound problem.)

3. Press the TOOLS button, select Play Selected Contents, and

Playing a video/music/photo folder



1. With the folders on your USB device displayed, use the

2. Press the TOOLS button, select Play Folder, and then press the

1. On the File List screen, highlight a file, and then press the Yellow button on your remote.

Photos

NOTE

· Air/Cable Antenna connection: Try HD channels after running Auto Program. Many HD channels broadcast up scaled SD (Standard Definition) content. The picture quality of up scaled SD content is low. Adjust the Cable/Set top box video output resolution to 1080i or 720p. · Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in sports and action movies · A weak signal can cause picture distortion. This is not a TV problem Mobile phones used close to the TV (within 3.3ft) may cause noise in the picture on analog and digital channels. • If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen. • Adjust the Picture options in the TV menu. (go to Picture Mode / Color / Brightness / Sharp e to the default picture settings, (go to MENU - Picture - Picture Beset

• Re-run Plug & Play or run Auto Program. (go to MENU - Channel - Auto Program)

First, perform the Picture Test and to see if your TV is displaying the test image properly.

If the test image is properly displayed, the poor picture may be caused by the source or signal.

 Adjust the Energy Saving option in the TV menu. (go to MENU - Setup - Eco Solution - Energy Saving) • If the picture size is set to Screen Fit, change it to 16:9. There is a dotted line on the edge of · Change the cable/satellite box resolution • If you are using an AV composite input, connect the video cable (yellow) to the Green jack of Component Input 1 The picture is black and white on the TV When changing channels, the picture . If connected to a cable box, please try to reset it. (Reconnect the AC cord and wait until the cable box reboots. It freezes or is distorted or delayed. may take up to 20 minutes) . Set the output resolution of the cable box to 1080i or 720p. Perform the Sound Test to confirm that your TV audio is properly operating. Sound Problems (go to MENU - Support - Self Diagnosis - Sound Test) If the audio is OK, the sound problem may be caused by the source or signal. • Check the volume of the device (Cable/Sat Box, DVD, Blu-ray, etc.) connected to your TV. There is no sound or the sound is too low at maximum volume. The picture is good, but there is no • If you are using an external device, check the device's audio output option Ex. you may need to change your cable box's audio option to HDMI if the box is connected to your TV using an HDMI cable. · Reboot the connected device by reconnecting the device's power cable. The speakers are making an Check the cable connections. Make sure a video cable is not connected to an audio input. inappropriate noise. • For Antenna or Cable connections, check the signal information. A weak signal may cause sound distortion. · Perform the Sound Test as explained above. No Picture, No Video The TV will not turn on. Make sure the AC power cord is securely plugged into the wall outlet and the TV. Make sure the wall outlet is working. Try pressing the POWER button on the TV to make sure the problem is not the remote. If the TV turns on, refer to 'Remote control does not work' below.

Other Restrictions

before making a call to the service department.

keyboard or move the mouse. Then try turning your TV on.

Go to MENU - Support - Self Diagnosis - Picture Test

deliver HD (high definition) picture quality.

The TV image does not look as good as • If you have an analog cable/satellite box, upgrade to a digital set top box. Use HDMI or Component cables to

Cable/Satellite subscribers: Try HD channels from the channel line up.

Videos, and then press the ENTER 🖼 button.

Media Play - Additional Functions Wideos/Music/Photos Play Option menus

When playing a file, press the TOOLS button.

Category	Operation	Videos	Music	Photos
Title	You can select another video file to play directly.	~		
Repeat Mode	You can play movie and music files repeatedly.	~	~	
Picture Size	You can adjust the picture size to your preference.	~		
Picture Mode	You can adjust the picture setting.	\checkmark		\checkmark
Sound Mode	You can adjust the sound setting,	\checkmark	\checkmark	\checkmark
Subtitle Setting	You can play the video with Subtitles. This function only works if the subtitles have the same file name as the video.	~		
Audio Format	You can select the digital audio output format.	~		
Audio Language	You can change the audio language if the video has more than one language.	~		
Stop Slide Show / Start Slide Show	You can start or stop a Slide Show.			~
Slide Show Speed	You can select the slide show speed during the slide show.			\checkmark
Background Music	You can set and select background music when watching a Slide Show.			~
Zoom	You can zoom into images in full screen mode.			\checkmark
Rotate	You can rotate images in full screen mode.			\checkmark
Information	You can see detailed information about the played file.	~	~	~

Other Information Installing the Wall Mount Kit

The wall mount kit (sold separately) allows you to mount the TV or For detailed information about installing the wall mount, see

the instructions provided with the wall mount items. Contact a technician for assistance when installing the wall mount bracket Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you elect to install the wall ount on vour owr

Wall Mount Kit Specifications (VESA)

Solution The wall mount kit is not supplied, but sold separately. Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.

🐁 NOTE

* Standard dimensions for wall mount kits are shown in the table * When purchasing our wall mount kit, a detailed installation

manual and all parts necessary for assembly are provided * Do not use screws that do not comply with the VESA standard screw specifications.

• Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the

* For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.

. Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.

 Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions

* Do not mount the TV at more than a 15 degree tilt. Always have two people mount the TV on a wall.



Securing the TV to the Wall

Caution: Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, resulting in serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install. the anti-fall device for safety purposes, as follows.

To prevent the TV from falling

 $^{\circledast}$ Since the necessary brackets, screws, and string or cable are not supplied, please purchase these separately.

- 1. Insert the screws into the wall brackets and firmly fasten them to the wall. Make sure the screws are firmly fixed to the wall.
- Section We strongly recommend you drive the screws into a stud.
- 2. Using screws, insert the screws through the TV brackets, and then fasten the screws to the top VESA screw holes on the back
- of the TV. 3. Connect the brackets on the TV and the brackets on the wall with a strong string or cable, and then tie the string or cable tightly to the brackets.
- Verify all connections are properly secured. Periodically check the connections for any sign of fatigue or failure. If you have any doubt about the security of your connections, contact a professional installer.
- Install the TV close to the wall so that it does not fall. Connect the string or cable so that the brackets on the wall are at the same height or lower than the brackets on the TV. Untie the string or cable before moving the TV.
- 🛸 To purchase a TV Holder kit, contact Samsung customer

 
Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional

information on proper use. 🕸 Please find a "🗟" icon on the rear of the TV. The Kensington slot is beside the "₽" icon.

 $^{\otimes}$ The position and color may differ depending on the model.

Assembling the Cable manager



Display Modes (HDMI/DVI Input)

Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MH2)	Synic Polarity (H / V)	1366 x 768
IDM	640 x 350	31.469	70.086	25.175	+/-	~
IBM	720 x 400	31.469	70.087	28.322	-/+	~
	640 x 480	35.000	66.667	30.240	-/-	~
MAC	832 x 624	49.726	74.551	67.284	-/-	~
	1152 x 870	68.681	75.062	100.000	-/-	
	640 x 480	31.469	59.940	25.175	-/-	~
	640 x 480	37.861	72.809	31.500	-/-	~
	640 x 480	37.500	75.000	31.500	-/-	4
	800 x 600	37.879	60.317	40.000	+/+	~
	800 x 600	48.077	72.188	50,000	+/+	~
	800 × 600	46.875	75.000	49,500	+/+	~
	1024 x 768	48.363	60.004	65.000	-/-	~
	1024 x 768	56.476	70.069	75,000	-/-	~
	1024 x 768	60.023	75.029	78.750	+/+	~
VESA DMT	1152 x 864	67.500	75.000	108.000	+/+	
	1280 x 720	45.000	60.000	74.250	+/+	~
	1280 x 800	49.702	59.810	83.500	-/+	
	1280 x 1024	63.981	60.020	108.000	+/+	
	1280 x 1024	79.976	76.025	135.000	+/+	
	1366 x 768	47.712	59.790	85.500	+/+	~
	1440 x 900	55,935	59.887	106,500	-/+	
	1600 x 900RB	60.000	60.000	108.000	+/+	
	1680 x 1050	65,290	59.954	146.250	-/+	
	1920 x 1080	67.500	60.000	148.500	+/+	

Troubleshooting

If the TV seems to have a problem, first review this list of possible problems and solution. If none of these troubleshooting tips apply, visit samsung.com, then click on Support, or call Samsung customer service at 1-800-SAMSUNG.

Problem	Possible Solution
Flickering and Dimming	If your Samsung Television is flickering or dimming sporadically, you may need to disable some of its energy efficient features like the Eco Sensor or the Energy Saving feature. Follow the steps below with your remote to turn these features off or on.
	• Energy saving : Menu \rightarrow Setup \rightarrow Eco Solution \rightarrow Energy Saving \rightarrow Select Settings
Component Connections / Screen Color	If you find that the color on your Samsung television's screen is not correct or black and white, first run a Self Diagnosis Test on the TV to make sure there are no device issues.
	Self Diagnosis : User Menu \rightarrow Support \rightarrow Self Diagnosis \rightarrow Picture Test
	 If the test is ok, try making sure ;
	Your connections are all consistent. For example, if you've used the AV In jack on your TV, make sure you have used the AV Out jack on your video source.
	 Try making sure you have connected to the correct jacks. For example, if you use the Component jacks, labeled Pb, Pr, and Y, to connect your TV and video source, make sure you have connected the blue Pb jack on the video source to the blue Pb jack on the TV, the red Pr jack on the source to the red Pr jack on the TV.
Screen Brightness	If you find that the colors on your Samsung TV are correct but just a little too dark or bright, there are some settings you should check before calling for a repair.
	 Backlight, Contrast, Brightness, Sharpness, Color, Tint (G/R) and so on. Go to "Picture" in the Menu, and then try adjusting these options.
Unwanted Powering off	If your Samsung TV appears to turn off by itself, there may be an issue with either your Timer settings or your Eco friendly No Signal Power Off feature.
	First make sure the Sleep Timer is not accidentally set. The Sleep Timer lets you fall asleep with the TV still on knowing that it will turn off after a certain period of time and not waste energy.
	• Sleep Timer : User Menu \rightarrow Setup \rightarrow Time \rightarrow Sleep Timer
	If the Sleep Timer is not activated, you may have engaged the No Signal Power Off or Auto Power Off feature.
	• No Signal Power Off : User Menu \rightarrow Setup \rightarrow Eco Solution \rightarrow No Signal Power
	• Auto Power Off : User Menu \rightarrow Setup \rightarrow Eco Solution \rightarrow Auto Power Off

Storage and Maintenance

👒 If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean it before watching

👒 The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratch

a soft cloth to preve	nt scratches.		
-50	Do not spray water directly onto the product. Any liquid that goes into the product may cause a failure, fire, or electric shock.	-500	Clean the product with a soft cloth dampened with in a small amount of water. Do not use a flammable liquid (e.g. benzene, thinners) or a cleaning agent.
icense			
	DivX Certified® to play DivX® video up to HE) 1080p, including prem	ium content.
DIVX	ABOUT DIVX VIDEO: DivX® is a digital video This is an official DivX Certified® device that I divx. com for more information and software ABOUT DIVX VIDEO-ON-DEMAND: This DivX	has passed rigorous tes tools to convert your file	ting to verify that it plays DivX video. Visit is into DivX videos.
HD	DivX Video-on-Demand (VOD) movies. To ob device setup menu. Go to vod.divx.com for r	tain your registration co	de, locate the DivX VOD section in your
	DivX®, DivX Certified® and associated logos used under license.	are trademarks of Rovi	Corporation or its subsidiaries and are
	Covered by one or more of the following U.S	. patents: 7,295,673; 7,4	460,668; 7,515,710; 7,519,274
DOLBY. DIGITAL PLUS	Manufactured under license from Dolby Labo Laboratories.	vratories. Dolby and the	double-D symbol are trademarks of Dolby
cits 2.0 Channel	For DTS patents, see http://patents.dts.com the Symbol, & DTS and the Symbol together of DTS, Inc. © DTS, Inc. All Rights Reserved.	are registered trademar	
Studio Sound	Manufactured under a license from U.S. Pate 5,638,452, 5,771,295, 5,970,152, 5,912,970 7,907,736 and 7,764,802. DTS, the Symbol, DTS Studio Sound is a trademark of DTS, Ind	3, 7,200,236, 7,492,907 , and DTS and the Symb	, 8,050,434, 7,720,240, 7,031,474, ool together are registered trademarks &
Homi	The terms HDMI and HDMI High-Definition M registered trademarks of HDMI Licensing LLC		
Open Source Licen	se Notice		
Open Source used in th Notice is written only Er	is product can be found on the following webp glish.	oage. (http://opensource	e.samsung.com) Open Source License
To send inquiries and request	s for questions regarding open sources, contact Samsun	g via Email (oss.request@sam	sung.com).
	· · · · · · · · · · · · · · · · · · ·	· · ·	

This product uses some software programs which are distributed under the Independent JPEG Group. CU License - ICU 1.8.1 and late

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1995-2008 International Business Machines Corporation and others All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the bove copyright notice(s) and this permission notice appear in supporting documentation.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT IOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software vithout prior written authorization of the copyright holder.

I trademarks and registered trademarks mentioned herein are the property of their respective owners.

Specifications Environmental Consideration 50°F to 104°F (10°C to 40°C) Operating Temperature 10% to 80%, non-condensing Operating Humidity Storage Temperature Storage Humidity ~4°F to 113°F (-20°C to 45°C 5% to 95%, non-UN40H4005AF UN48H4005AF Model Name Display Resolution 1366 x 768 Screen Size 40" Class 48" Class (40.0" measured diagon (47.6" measured diagona (Diagonal) Sound 10W x 2 Output 35.9 x 21.5 x 3.5 inches 42.6 x 25.1 x 3.5 inches Dimensions (W x H x D) (914.2 x 547.9 x 90.9 (mm)) 35.9 x 23.0 x 7.7 inches (1083,2 x 637.8 x 90.9 (mm)) 42.6 x 26.6 x 8.0 inches With stand (914.2 x 586.4 x 196.4 (mm (1083.2 x 677.0 x 203.9 (mr Weight 15.4 lbs (7.0 Kg 20.0 lbs (9.1 Kg) Without Stand 16.7 lbs (7.6 K 21.8 lbs (9.9 K With Stand

 
Design and specifications are subject to change without prior notice. This device is a Class B digital apparatus.

 
🦠 For information about the power required and more about power consumption, refer to the label attached to the product.

🖏 Typical power consumption is measured according to Energy Star Program requirements for televisions

Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: www. samsung.com/recyclingdirect or call, (877) 278-0799.

IN JACK PANEL DETAIL / REAR VIEW





IOTE: All drawings are not necessarily to scale. Some dimensions are subject to change without prior notice. Refer to the dimensions prior to perl installation of your TV. Not responsible for typographical or printed errors. © 2014 Samsung Electronics America, Inc

(Unit: inches