


OWNER'S MANUAL

Operating and Servicing Instructions

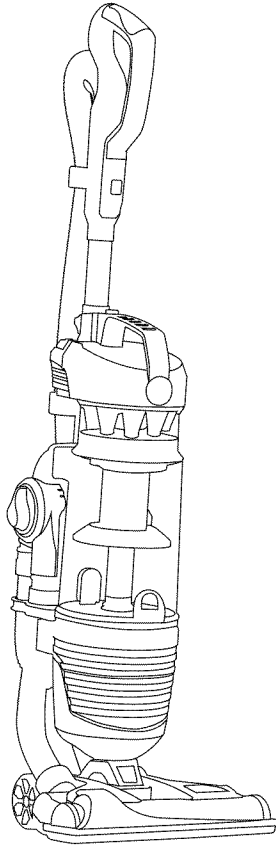

hoover.com



IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE.

Questions or concerns? For assistance, please call Customer Service at 1-800-944-9200 Mon-Fri 8am-7pm EST. **PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.**

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.
IF USED COMMERCIALY WARRANTY IS VOID.**

Thank you for choosing a HOOVER® product.

Please enter the complete model and manufacturing code in the spaces provided.

MODEL _____

MFG. CODE _____

Hint: Attach your sales receipt to this owner's manual. Verification of date of purchase may be required for warranty service of your HOOVER® product.

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.

www.hoover.com
1-800-944-9200
(U.S. and Canada)

www.hoover.com
1-800-944-9200
(U.S. and Canada)

Techtronic Floor Care Technology Limited
VACUUM CLEANER/ ASPIRATEUR/ASPIRADORA
MODEL/MODELE/MODELO XXXXXXX
MFG. CODE XXXX
120 v. 60Hz. 12.0 A
SERIES/SERIE/SERIE XXXXX
HOUSEHOLD TYPE/TYPE MENAJER/TIPO DOMESTICO
Distributed by HOOVER, Inc. Glenwillow OH 44139
Made in China/Hecho en China/Fabrique en Chine

MANUFACTURING CODE
(Label located on bottom of vacuum)

CONTENTS

Important Safety Instructions.....	3-4
Vacuum Assembly.....	5
Carton Contents.....	5
Attach Handle.....	5
Attach Dirt Cup.....	5
Position Tools.....	5
How To Use.....	6
Vacuum Description.....	6
Cord Storage.....	6
Handle Positions.....	6
On-Off Switch.....	6
Carry Handle.....	6
Hose and Tool Use.....	7-8
Air Valve Modes.....	7
D-Grip Wand/Handle Release.....	7
D-Grip Handle Release.....	7
Select Proper Tool.....	7
Attach Tools.....	8
Stair Cleaning.....	8
Maintenance.....	8-12
Dirt Cup.....	8
Filters.....	8-10
Brushroll.....	11
Air-Powered Hand Tool.....	12
Troubleshooting.....	13
Service.....	14
Warranty.....	15

If you need assistance:

Visit our website at hoover.com. Follow the authorized dealer locator link to find the Hoover® authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover® authorized dealer locations (U.S. only) or to speak with a customer service representative; Mon- Fri 8am- 7pm.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Fully assemble before operating.
- Operate vacuum only at voltage specified on data label on bottom of cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments and products.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without Dirt Cup and/or Filters in place.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. **WASH HANDS AFTER HANDLING.**

CAUTION: TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Do not use sharp objects to clean out hose as they can cause damage.
- Store appropriately indoors in a dry place. Do not expose machine to freezing temperatures.

WARNING:

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

1. VACUUM ASSEMBLY


CARTON CONTENTS

- A. Handle Wand
- B. Vacuum Base/Dirt Cup/Handle Grip
- C. 2-in-1 Combination Tool
- D. Air-Powered Turbo Tool*

*Available on select models only.

Remove all parts from carton and identify each item shown.



Make sure all parts are located before disposing of packing materials.

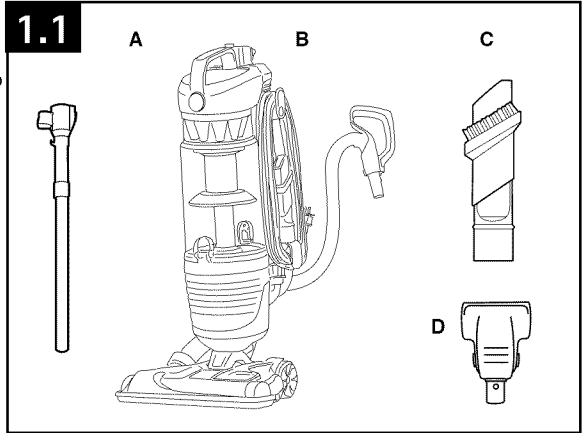

ATTACH HANDLE


1.2 Press lever (A) and insert handle wand into vacuum base.

1.3 Attach handle grip to the top of the handle wand.

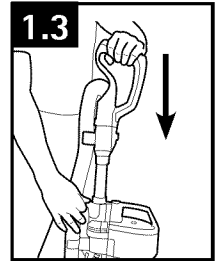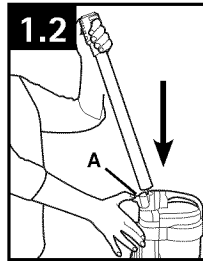

ATTACH DIRT CUP



1.4 Place bottom of dirt cup into vacuum body first. Pivot cup into vacuum. Press down on the dirt cup release button to secure into place.

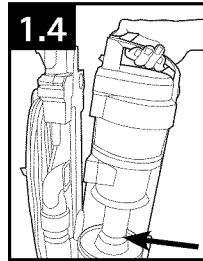

POSITION TOOLS

1.5 For storage mode, push dusting brush all the way down onto crevice tool.


1.6 Snap combination tool into tool storage area (B) on back side of vacuum.

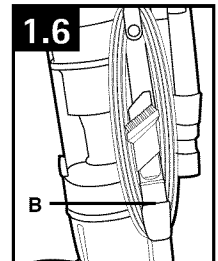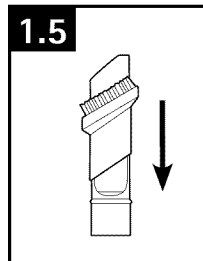

2. HOW TO USE

VACUUM DESCRIPTION

1. D-Grip Handle
2. Handle Release Button
3. Handle Wand
4. Dirt Cup Release Button
5. Carry Handle
6. Dirt Cup
7. Pre-Motor Filter
8. Brushroll Window
9. Accessory Hose
10. Rinsable Filter Access
11. ON/OFF Power Switch
12. Brushroll On/Off Switch
13. Cord Release
14. Cord
15. 2-in-1 Combination Tool
16. Accessory Hose Access
17. Nozzle Hose Access
18. Furniture Guard
19. Filter made with HEPA media
20. Air Valve Dial
21. Handle Wand Release Button
22. Air-Powered Hand Tool*

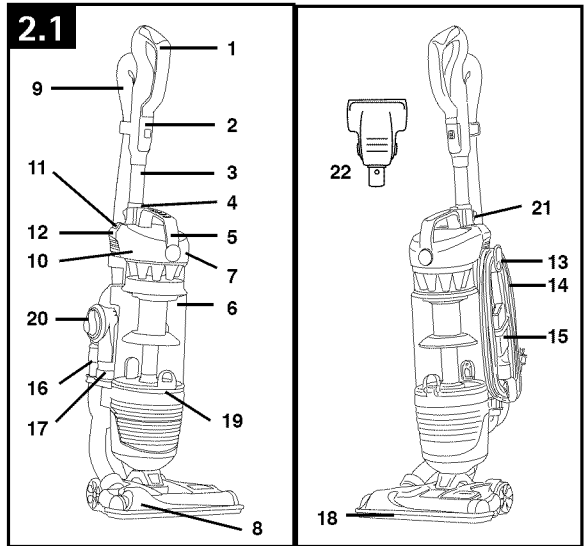

Operate cleaner only at voltage specified on data plate on bottom of cleaner.

This cleaner is intended for household use.


*Available on select models only

CORD STORAGE

2.2 Wrap cord on cord hooks for convenient storage.


Attach the plug end of the cord.

2.3 Twist upper cord hook (D) to allow cord to be released.

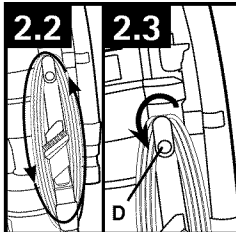


HANDLE POSITIONS

2.4 The handle of your cleaner has two positions: upright for storage and when using cleaning tools; operating position for general operation on carpet and floors; hold nozzle with foot (E) and pull handle back.

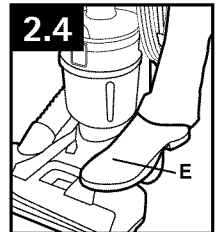

ON-OFF SWITCH

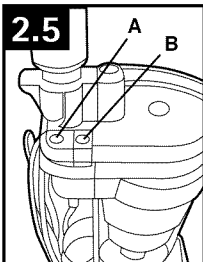


2.5 Plug cord into electrical outlet.

To turn vacuum ON, push ON/OFF switch (A) once. To turn vacuum OFF, push switch again.

To turn brushroll ON, push ON/OFF switch (B) once. To turn brushroll OFF, push switch again.


CARRY HANDLE

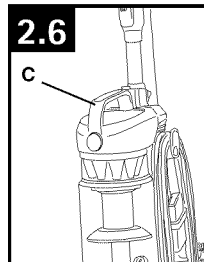

2.6 The cleaner can be moved by using the carry handle (C).

3. HOSE AND TOOL USE


AIR VALVE MODES

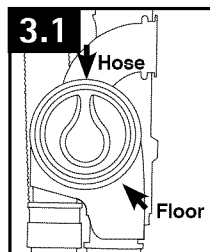


3.1 Set air valve for desired use.

A. Hose
B. Floor


D-GRIP WAND/ HANDLE RELEASE

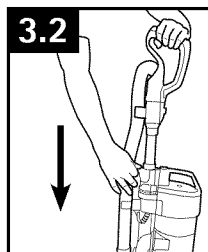

3.2 Press handle release button down to release handle from unit.

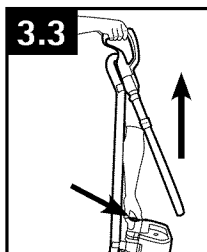

3.3 Pull handle up and out of unit.

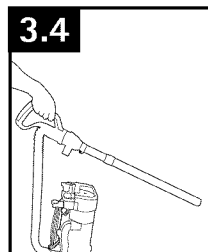


3.4 Hold handle wand by top of grip for easy reach cleaning. Tools can be attached to end of wand if desired.


⚠ CAUTION ⚠

Valve must be turned to 'TOOLS' position for above floor cleaning.


D-GRIP HANDLE RELEASE

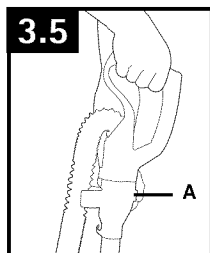

3.5 Push button (A) to release Short Handle grip.

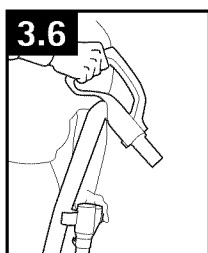


3.6 Pull handle up and out of unit.

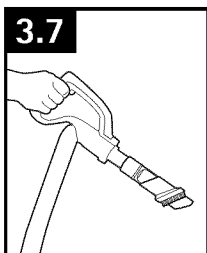

3.7 Attach 2in1 tool for cleaning.

SELECT PROPER TOOL 2-in-1 Combination Tool

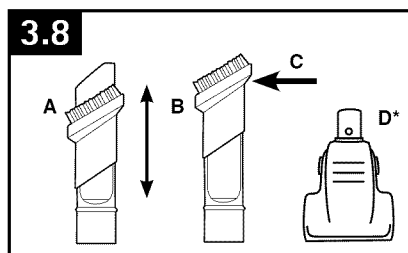

3.8 Simply push the attachment firmly on the end of the wand or hose end. To remove tool, twist and pull apart gently and return to storage.

A. Crevice Tool may be used in tight spaces, corners and along edges in such places as dresser drawers, upholstered furniture, stairs and baseboards.

B. Dusting Brush may be used for furniture, table tops, books, lamps, lighting fixtures, venetian blinds, baseboards, shutters, and registers.

C. Push lock button in to release dusting brush and slide down to revert to crevice mode.

D. Air-Powered Hand Tool may be used for upholstered furniture, draperies, mattresses, clothing, and carpeted stairs. (Tool varies per model*)

*Available on select models only

ATTACH TOOLS

⚠ WARNING ⚠

Unplug vacuum before connecting wand or tools.

Cleaner must be in the upright position.

Press handle wand release button and pull handle up to remove.


Press the hose release button on the nozzle and remove the hose from the nozzle.

3.9 Attach the hose to the handle/extension wand. For extended cleaning reach, you may attach the hose to the stair hose*. Choose the 2-in-1 combination tool, Turbo Tool or use the extension wand alone.


3.10 Simply push the attachment firmly on the end of the extension wand or hose. To remove tool, twist and pull apart gently.

*Available on select models only

3.9

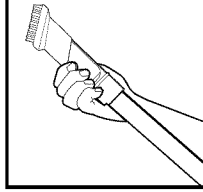

3.10

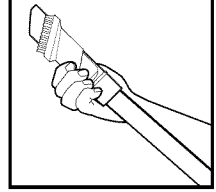


⚠ CAUTION ⚠

Not to be used for grooming a pet.

STAIR CLEANING

3.11 The hose and tools can be used for stair cleaning.

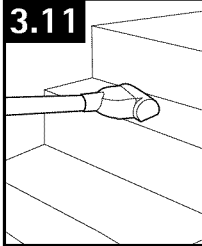

⚠ CAUTION ⚠

Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage. When using tools, always ensure handle is in upright position.

4. MAINTENANCE

Familiarize yourself with these home maintenance tasks as proper use and care of your vacuum will ensure continued cleaning effectiveness.

Any other servicing should be done by an authorized service representative.

If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center prior to continuing use.

DIRT CUP: When to Empty

4.1 Empty the dirt cup before the dirt cup reaches the max line (A). Place the vacuum in the upright position before removing the dirt cup.

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use vacuum without dirt cup or filters in place.

Very fine materials, such as face powder or cornstarch, may seal the filter and cause a reduction in performance. When using the vacuum for this type of dust, empty the cup and clean the filters often.





DIRT CUP: How to Empty

4.2 Press dirt cup release button and pivot cup out.

4.3 Hold dirt cup over trash receptacle, push dirt cup door release lever (A) to open dirt cup door (B).

Close dirt cup door (B). Press firmly to secure.

4.4 Place bottom of dirt cup into vacuum body first. Pivot dirt cup into vacuum. Press down on the dirt cup release button to secure into place.

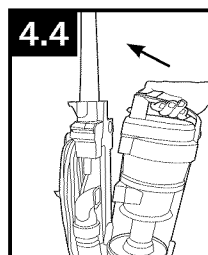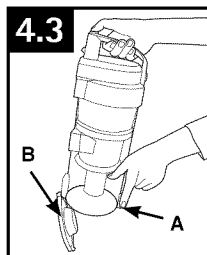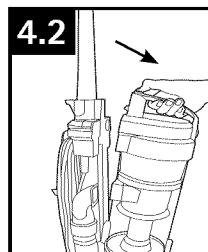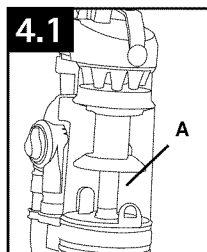

FILTERS: When to Clean

To maintain optimal performance, filters should be cleaned every two months under normal use.

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use vacuum without dirt cup or filters in place.

Rinsable Filter: How to Clean

Remove dirt cup as described in Fig. 4.2.

4.5 Twist the dirt cup lid to open.



4.6 Pull tab to remove rinsable filter.

Rinse with water for two minutes or until water runs clear. Then squeeze out excess water. Allow 24 hours for filter to dry completely.

Replace filter, tab side out.

Close lid securely by twisting dirt cup lid until it clicks as shown in Fig. 4.5.

Replace dirt cup as described in Fig 4.4.

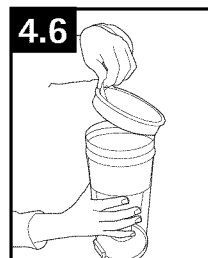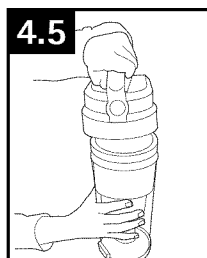

Rinsable Filter: What to Buy

When used and maintained properly, your Rinsable Filter should not need replacement within the warranty period. If desired, additional filter is available. Ask for Hoover® Part No. 440004215.

• IMPORTANT •

Allow filter to dry completely before replacing. Dry filter on edge so air circulates on both sides of filter. This may take up to 24 hours.

Filter Made With HEPA Media: How to Clean

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use vacuum without dirt cup or filters in place.

4.7 Remove dirt cup.

4.8 Unlock final filter cover by twisting filter counter-clockwise to remove.

4.9 Lift filter cover from the filter housing.

5.0 Pull filter out by lifting on tab in center and hold over a trash receptacle. Tap out dirt and debris.

5.1 Replace filter cover by twisting clock-wise till it snaps.





Replace dirt cup on vacuum.

• IMPORTANT •

DO NOT RINSE OR WASH THE FILTER CARTRIDGE.

Filter Made With HEPA Media: What to Buy

When used and maintained properly, your Filter should not need replacement within the warranty period. If desired, additional filter is available. Ask for Hoover® Part No. 440004216.

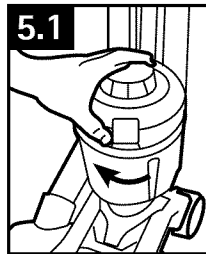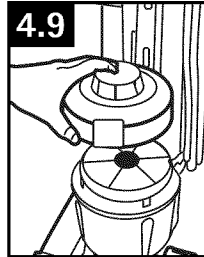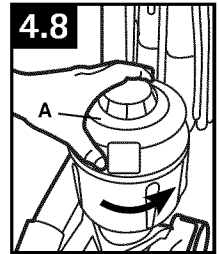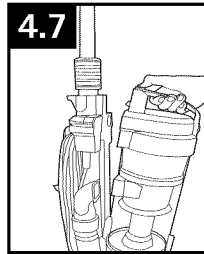

CYCLONIC FILTER ASSEMBLY: How to Clean

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing.

Do not use vacuum without dirt cup or filters in place.

Remove dirt cup as described in Fig. 4.2.





5.2 Twist dirt cup lid to access filter.

5.3 Push dirt cup door release lever (A) to open dirt cup door (B).

5.4 Remove gasket (C) from the bottom of the dirt cup assembly, twist dirt cup lock ring (D) and slide down off filter assembly. Pull out filter assembly from top of dirt cup.

5.5 Dirt and debris can be cleaned from the filter assembly with the dusting/ upholstery tool.

Replace dirt cup as described in Fig. 4.4.

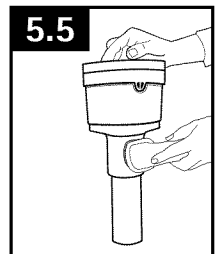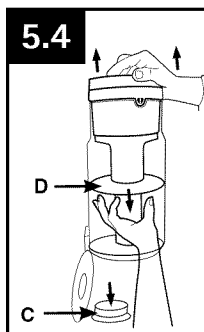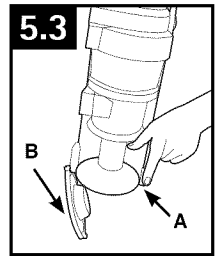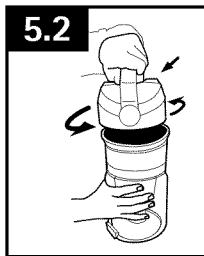

BRUSHROLL: How to Clean

⚠ WARNING ⚠




To reduce the risk of injury from moving parts
- Unplug before servicing.

5.5 Turn vacuum over so bottom side is facing up. Remove any debris and/or hair from brushroll.

For additional maintenance required for belt or brushroll please contact a HOOVER® service provider at 1-800-944-9200.

5.6 Vacuum is equipped with an automatic brushroll shut off.

5.7 Check for obstructions in the brushroll area and remove any obstructions. To reset the brushroll, press the ON/OFF brushroll switch (B) OFF and wait for the red light to go out. Then press the ON/OFF brushroll switch again.

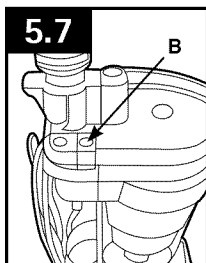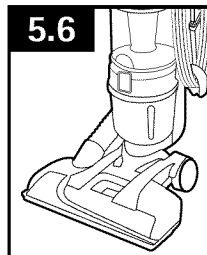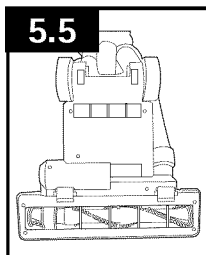

LUBRICATION

The motor and brushroll are equipped with bearings which contain sufficient lubrication for their lifetime. The additional of lubricant could cause damage. Do not add lubricant to motor or brushroll.

⚠ NOTICE ⚠

A Thermal Protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates the cleaner will stop running.

If this happens proceed as follows:

1. Turn cleaner OFF and unplug it from the electrical outlet.
2. Empty dirt cup.
3. Inspect the nozzle inlet, hose connector, hose, dirt cup inlet, cyclonic filter, washable filter, and filter made with HEPA filter. Clear any obstructions.
4. When cleaner is unplugged and motor cools for 30 minutes, the thermal protector will deactivate and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

AIR-POWERED HAND TOOL:

How to Clean

(Tool varies per model)




⚠ CAUTION ⚠

To reduce the risk of injury from moving parts -
Unplug before servicing.

5.8 Turn tool so bottom faces up. Rotate the latches (A) on either side of tool.

5.9 Remove bottom plate (B).

5.10 Remove any debris and/ or hair from brushroll.
Replace bottom plate by aligning tabs along front edge of tool. Rotate latches back into locked position.

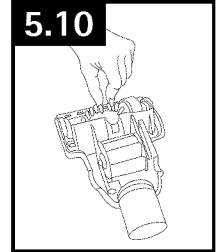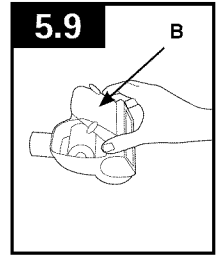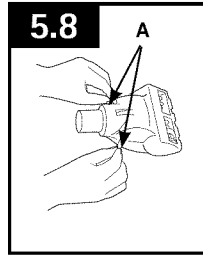

5. TROUBLESHOOTING

If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the checklist below.

Any other servicing should be done by an authorized service representative.

If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continued use.

⚠ **WARNING** ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Vacuum won't run	<ol style="list-style-type: none"> 1. Power cord not firmly plugged into outlet. 2. No voltage in wall plug. 3. Blown fuse or tripped breaker. 4. Thermal Protector activated. 5. Automatic brushroll shut-off engaged 	<ol style="list-style-type: none"> 1. Plug unit in firmly. 2. Check fuse or breaker in home. 3. Check fuse or breaker in home. Replace fuse/reset breaker in home. 4. Unplug and allow vacuum to cool for 30min. (This will reset the thermal protector) 5. Press brushroll ON/OFF switch twice.
Vacuum won't pick up or Low suction	<ol style="list-style-type: none"> 1. Rinsable filter and/ or filter made with HEPA media is dirty. 2. Dirt Cup full and/ or clogged. 3. Brushroll and/ or hose clogged. 4. Automatic brushroll shut-off engaged. 5. Valve is in the wrong mode selection. 	<ol style="list-style-type: none"> 1. Clean rinsable filter and or filter made with HEPA media - Pg.10 2. Empty dirt cup - Pg.9. 3. Check hose. Check brushroll - Pg.11. 4. Check for obstructions and or press brushroll ON/OFF switch twice. 5. Change valve to the appropriate mode.
Dust escaping from vacuum	<ol style="list-style-type: none"> 1. Dirt cup full. 2. Dirt cup not installed correctly. 3. Hose not installed correctly. 4. Rinsable and/ or filter made with HEPA media not installed completely. 	<ol style="list-style-type: none"> 1. Empty dirt cup - Pg. 9. 2. Review dirt cup removal & replacement - Pg. 9. 3. Review hose installation - Pg. 7. 4. Review filter removal and cleaning - Pg. 10.
Brushroll will not turn	<ol style="list-style-type: none"> 1. Brushroll switch is off 2. Brushroll is clogged. 	<ol style="list-style-type: none"> 1. Press the brushroll on/off switch - pg 6 2. Clear/ remove debris from brushroll - pg 11

6. SERVICE

To obtain approved Hoover® service and genuine Hoover® parts, locate the nearest Authorized Hoover® Warranty Service Dealer (Depot) by:

- Checking the Yellow Pages under “Vacuum Cleaners” or “Household”.
- Visit our website at hoover.com (U.S. Customers) or hoover.ca (Canadian customers). Follow the service center link to find the service outlet nearest you.
- For an automated referral of authorized service outlet locations call 1-800-944-9200.

Do not send your vacuum to Hoover®, Inc., Company in Glenwillow for service. This will only result in delay.

If you need further assistance:

To speak with a customer service representative call 1-800-944-9200; Mon-Fri 8am-7pm EST. In Canada, contact Hoover® Canada, Toronto: 755 Progress Ave., Scarborough, ON M1H 2W7 OR Hoover® Canada, Edmonton: 18129-111 Ave., Edmonton, AB T5W 2P2, Phone: 1-800-944-9200, Mon-Fri 8am-7pm EST. Always identify your vacuum by the complete model number when requesting information or ordering parts. (The model number appears on the bottom of the vacuum.)

Please do not return this product to the store.

7. WARRANTY

LIMITED FIVE YEAR WARRANTY

(Domestic Use)

WHAT THIS WARRANTY COVERS

When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER® product is warranted against original defects in material and workmanship for a full five year from date of purchase (the "Warranty Period"). During the Warranty Period, Hoover® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchanges and Canada.

HOW TO MAKE A WARRANTY CLAIM

If this product is not as warranted, take or send the product to either a Hoover® Sales and Service Center or Hoover® Authorized Warranty Service Dealer along with proof of purchase. For an automated referral to authorized service outlets in the U.S.A., phone: 1-800-944-9200 OR visit Hoover® online at www.hoover.com. For additional assistance or information concerning this Warranty or the availability of warranty service outlets, phone the Hoover® Consumer Response Center, Phone 1-800-944-9200, Mon-Fri 8am-7pm EST. In Canada, contact Hoover® Canada, Carson Building, 100 Carson St., Etobicoke, Ontario M8W 3R9, Phone: 1-800-944-9200, Mon-Fri 8am-7pm EST.

WHAT THIS WARRANTY DOES NOT COVER

This Warranty does not cover: use of the product in a commercial operation (such as maid, janitorial and equipment rental services), brushroll, belt, improper maintenance of the product, damage due to misuse, acts of God, nature, vandalism or other acts beyond the control of Hoover®, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick up, delivery,

transportation or house calls. However, if you mail your product to a Hoover® Sales and Service Center for warranty service, cost of shipping will be paid one way.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, outside a U.S. Military Exchange and outside of Canada. This warranty does not cover products purchased from a party that is not an authorized retailer, dealer, or distributor of Hoover® products.

OTHER IMPORTANT TERMS

This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any replacement or repair performed under this Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY HOOVER®. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL HOOVER BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.