gures and illustrations in this User Manual are provided for reference ily and may differ from actual product appearance, Product design and ecifications may be changed without notice.

### Important Warranty Information Regarding Television Format Viewing

See the warranty card for more information on warranty

Wide screen format LED Displays (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature and the images are constantly moving. Displaying stationary graphics and images on creen, such as the dark sidebars on non-expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing per week. Additionally, iewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. Displaying stationary images that exceed the above guidelines can cause uneven aging of LED Displays that leave subtle, but permanent burned-in ghost images in the LED picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On LED models that offer picture sizing features, use these ontrols to view different formats as a full screen picture. Be careful in the selection and duration of television formats you use for viewing. Uneven LED aging as a result of format selection and use, as well as burned-in images, are not covered by your Samsung limited warranty.

• SAMSUNG ELECTRONICS NORTH AMERICAN LIMITED WARRANTY STATEMENT

Subject to the requirements, conditions, exclusions and limitations of the original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein, SAMSUNG will additionally provide Warranty Repair Service in the United States on SAMSUNG products purchased in Canada, and in Canada on SAMSUNG products purchased in the United States, for the warranty period originally specified, and to the Original Purchaser only.

The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center. Along with this Statement the Original Limited Warranty Statement and a dated Bill of Sale as Proof of Purchase must be presented to the Service Center.



defects in material or workmanship, and only those encountered in normal use of the product. Excluded, but not limited to, are any originally specified provisions for, in-home or on-site services minimum or maximum repair times, exchanges or replacements, accessories, options, upgrades, or consumables. For the location of a SAMSUNG Authorized Service Center, please

the purchaser. Conditions covered are limited only to manufacturing

-- In the United States: 1-800-SAMSUNG (1-800-726-7864) --- In Canada : 1-800-SAMSUNG

### Still image warning

Avoid displaying still images (such as ipeg picture files) or still image elements (such as TV channel logos, TV shows or movies in panorama or 4:3 format, stock or news scroll bars, etc.) on the screen. The constant display of still pictures can cause ghosting or image burn-in (image retention) on the LED screen, which will affect image quality. To reduce the risk of this effect, please follow the mmendations below:

- Avoid displaying the same TV channel for long periods. Always try to display any image in full screen mode. Use the TV's
- Picture Options menu to select the optimal screen size. · Reduce brightness and contrast values to the minimum required to achieve the desired picture quality. Values that exceed the minimum may speed up the burn-in process.
- Frequently use all TV features designed to reduce image retention and screen burn-in. Refer to proper user manual section for

### Contact SAMSUNG WORLD WIDE you have any questions or comments relating to Samsung products,

Country	CANADA	U.S.A		
Address	Samsung Electronics Canada Inc. 2050 Derry Road West, Mississauga, Ontario L5N 0B9 Canada	Canada Inc. 2050 Derry America, Inc. 85 Road West, Mississauga, Challenger Road		
Customer Care Center 雪	1-800-SAMSUNG (726-786	54)		
Web Site	www.samsung.com/ca/ support (English) www.samsung.com/ca_fr/ support (French)	www.samsung.com/us/ support		

© 2014 Samsung Electronics Co., Ltd. All rights reserved.

### The On Screen Menus

Your TV has two kinds of menus, the Main menu and the various Tools menus. The Main menu gives you access to most or all of he menu options available on your TV. The Tools menus display a selected number of frequently used menu options that change depending on the screen you are viewing.

The Main menu has seven primary categories Input

 Sound Application Channel Support

To view the Main menu, press the MENU button on your remote, To view a Tools menu, press the TOOLS button on your remote.

The menu options that appear in the Main menu depend on the Source you have selected. For example, if you have selected the HDMI source, the Channel category will not appear. To see the Channel category, you must first select TV in the Source List.

The Menu options are presented below, arranged by Main menu categories. A Tools button symbol (TOOLS, ) next to an option name indicates the option is also available in one of the Tools

## Picture Menu

### Mode TOOLS 2

Picture

Select your preferred picture mode.

- When your TV is connected to a PC, you can only select Entertain and Standard.
- **Dynamic**: Brightens the screen. Suitable for a bright room. Standard: Suitable for a normal. Movie: Darkens the screen, making it less glary. Suitable for
- watching movies in a darkened room **Entertain**: Sharpens the picture. Suitable for games
- Only available when the TV is connected to a PC.

### Backlight / Contrast / Brightness / Sharpness / Color / Tint (G/R)

- Backlight: Adjusts the brightness of the screen by adjusting the brightness of the individual pixels.
- light areas of the picture. ■ Brightness: Adjusts the brightness of the screen. Not as
- effective as Backlight. Sharpness: Sharpens or dulls the edges of objects.
- the more intense the color. Low settings remove color and the picture becomes black, white and gray. Tint (G/R): Adjusts the amount of green and red in the picture. As you increase the amount of green, the amount of red
- When the TV is connected to a PC, you can only make changes to Backlight, Contrast, Brightness, and

□ Other Channel Menu Functions

decreases and vice versa.

When the TV is connected to a PC, you can only make inges to the Color Tone, Size and HDMI Black Level

- Color Tone (Cool / Standard / Warm): Cool makes the picture bluer (cooler). Warm 1 and Warm 2 make the picture redder Size: Set the size and aspect ratio of the picture on the screen
- Your cable box or satellite receiver may have its own set of en sizes as well. However, we highly recommend you use he TVs 16:9 mode most of the time. The menu is deactivated, when the H. 264 (1080p) DTV is
- 16:9: Sets the picture to the 16:9 wide screen format. Zoom1: Provides moderate magnification of the picture. Sides,
- p, and bottom are cut off. **Zoom2**: Provides larger magnification of the picture. Sides, top, and bottom are cut off.
- Wide Fit: Enlarges the aspect ratio of the picture so the picture
- 4:3: Sets the picture to the old, 4:3 format and puts black or gray borders on the right and left of the picture. Do not watch your TV in the 4:3 format for a long time Traces of borders displayed on the left, right and center of
- s not covered by the warranty. Screen Fit: Displays the full image without any cut-off when your TV is inputting HDMI (720p / 1080i / 1080p) or Component
- (1080i / 1080p) HĎ signals. HD (High Definition) has a 16:9 aspect ratio and 1080i/1080p
- (1920x1080) or 720p (1280x720) resolution.
- You can adjust and store settings for each external device you have connected to an input on the TV. Picture Sizes available by Input Source are listed below:

Input Source	Picture Size
ATV, AV, Component (480i, 480p)	16:9, Zoom1, Zoom2, 4:3
DTV (1080i), Component (1080i, 1080p), HDMI (720p, 1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit

- padcast signal received by your TV is weak, you can activate the Digital Clean View feature to reduce any static and ghosting hat may appear on the screen.
- When the signal is weak, try all the Digital Clean View options until the TV displays the best picture.
- HDMI Black Level (Normal / Low) : For HDMI signals, select the black level to adjust the screen depth. Low make blacks look Available only in HDMI mode (RGB signals).
- Contrast: Increases or decreases the contrast between dark and Film Mode (Off / Auto1 / Auto2): Sets the TV to automatically sense and process film signals from all sources and adjusts the picture for optimum quality. Available in ATV, DTV (interlace), AV, COMPONENT (480i /
- Color: Adjusts the color saturation. The higher the Color setting, Motion Lighting (Off / On): Reduce power consumption by brightness control adapted motion. Available in Standard mode only.

1080i) and HDMI (480i / 1080i).

■ Picture Reset (Reset Picture Mode/Cancel): Resets the picture settings to their factory defaults.

### Sound Menu

### Mode TOOLS 2

- Standard: Selects the normal sound mode
- Music: Emphasizes music over voices.
- Movie: Provides the best sound for movies. ■ Clear Voice: Emphasizes voices over other sounds.
- Equalizer
- Available in Standard sound mode only.
- Balance L/R: Adjusts the balance between the right and left **III 100Hz / 300Hz / 1KHz / 3KHz / 10KHz** (Bandwidth
- Adjustment): Adjusts the loudness of specific bandwidth frequencies
- Reset: Resets the equalizer to its default settings.

### DTS TruSurround

Available in Standard sound mode only.

DTS TruSurround is a patented DTS technology that solves the problem of playing 5.1 multichannel content over two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system including internal television speakers. It is fully compatible with all multichannel formats.

### Preferred Language

Digital channels only.

Digital-TV broadcasts can transmit many audio tracks imultaneously (for example, simultaneous translations of a progra into foreign languages).

You can only select a language from among the ones being broadcast.

## Multi-Track Sound (MTS)

- Analog channels only. Mono: Select for channels that are broadcasting in mono or if you are having difficulty receiving a stereo signal.
- Stereo: Select for channels that are broadcasting in stereo SAP: Select to listen to the Separate Audio Program, which is usually a foreign-language translation.
- Depending on the program being broadcast, you can listen to Mono, Stereo or SAP.

Auto Volume Automatically adjusts the volume level when you change video sources or content so the level remains the same.

## SPDIF Output

The SPDIF (Sony Philips Digital InterFace) outputs an ncompressed digital audio signal when you connect the digital audio jack on the back of the TV to a digital audio in jack on a receiver or home theater.

Madio Format (PCM/Dolby Digital): You can select the Digital Audio output (SPDIF) format. The available Digital Audio output format may differ depending on the input source.

By connecting the TV to a receiver or home theater with Dolby Digital and 5.1ch speakers and selecting Dolby Digital, you can maximize your interactive 3D sound

### Audio Delay: Lets you correct timing mismatches between the audio track and the video when you are watching the TV and listening to digital audio output from the TV through an external device such as an AV receiver. When you select Audio Delay, a slider appears. Use the left and right arrow buttons to adjust the slider. Press ENTER when done (0ms ~ 250ms).

settings will be limited

Visual Impaired

Dolby Digital Comp

Channel Menu

the Plug & Play procedure.

Antenna (Air / Cable)

■ Memorizing Channels

Set Dolby Digital compression mode

Digital channels only

Sound Reset

\* TV Speaker: Off, External Speaker: Or

When Speaker Select is set to TV Speaker.

\* TV Speaker: On, External Speaker: On

If there is no video signal, both speakers will be mute.

Adds verbal description to the main audio to help the visually

Reset All: Resets all sound settings to the factory defaults

When you first set up your TV using Plug & Play, the TV

your cable system and added them to the Channel List. The

Antenna and Auto program functions described below let you

Before your television can memorize the available channels, you

Cable. Select Menu > Channel > Antenna > Air or Cable. After

you have selected the signal source, go on to the Auto Program

Selecting the signal source using the Antenna function also

if you receive your TV signal over the air, and you select

The Auto Program function memorizes all channels that are

To start Auto Program, follow these steps:

available over the air or through your cable system and adds them

1. Push MENU  $\blacksquare$   $\rightarrow$  Channel  $\rightarrow$  Auto Program  $\rightarrow$  ENTER  $\blacksquare$ 

on your remote. The Antenna Source screen appear 2. On the Antenna Source screen, select the source of your TV

Cable, you will see only snow. You must select Air to see a

determines the signal source the TV is tuned to. For example

must select your TV's signal source, Air (using an antenna) or

re-run the channel memorization function without having to re-run

memorized the channels that were available over the air or through

A sound echo may occur due to a difference in decoding speed If you choose Auto, and then press ENTER , the TV will between the main speaker and the audio receiver. In this case, set the TV to External Speaker. automatically select the correct Antenna source. Go to

- When Speaker Select is set to External Speaker, the Step 3. volume and MUTE buttons will not operate and the sound When Speaker Select is set to External Speaker.
  - On the Cable Type screen, use the ◄/▶/▲/▼ buttons to select the type of digital and analog cable systems you have: STD, HRC, or IRC. Most systems are STD (Standard). When done, select

If your TV is connected to an antenna choose Air, and then press

ENTER . The TV will automatically start memorizing channels.

If your TV is connected to a cable outlet, choose Cable, and then

Channel memorization can take up to 45 minutes, depending

Start, and then press ENTER . The TV will start memorizing

on your cable system. Memorized channels are added to the Added Channels list. These are the channels you will see when you use the

### Channel buttons on your remote. Clear Scrambled Channel

press ENTER . Go to Step 3.

This function filters out scrambled channels after Auto Program completed. This process may take up to 20~30 minutes


Press the ENTER button to stop the Clear Scrambled

### This function is only available in Cable mode.

# Managing Channels

## **Channel List**

See vour list of Added channels. Favorite channels, or channels you've scheduled for viewing. Add or delete Favorite channels, add or delete channels from the Added Channels list, schedule channels or programs for viewing. Watch a channel by selecting the channel in the All Channels, Added Channels, or Favorite screen, pressing the ▲ / ▼ buttons, and then pressing the ENTER → button.

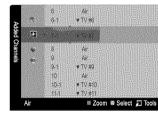

Channel List Screens icons are listed on the left side. Select an icon using the <u>▲/▼</u> buttons to view each list.

- M. All Channels: Shows all currently available channels including those you deleted from the Added Channels
- Added Channels: Shows all Added Channels. These are the channels that appear when you press the CH LIST button. Favorite: Shows all favorite channels.

- Remote control buttons active on the Channel List screen
- scheduled using Timer Viewing.
- \* Green (Zoom): Enlarges or shrinks a channel number.
- \* Yellow (Select): Move the cursor to a channel. Press the Yellow
- button to select the channel. A  $\checkmark$  mark appears. Repeat to select additional channels. Then, open the Tools menu and apply a function to the channels you selected.
- 🖅 (Tools): Displays the Channel List Tools menu. (The Tools

### Display Icons Used in the Channel List Screens

icons	weaning
✓	A selected channel.
ø	A Favorite channel.
<u>©</u>	A reserved program.
ŏ	A program currently being broadcast.

### ☐ The Channel List Tools Menu Tools 7

The Channel List Tools menu contains most of the functions you can use on the All Channel Added Channels, and Favorite List screens. To view, select a list screen, select a channel, and then press the TOOLS button.

MAdd / Delete: Delete a channel from or add a channel to the Added Channels list.

To delete channels from the Added Channels list, follow these steps: 1. Select one or more channels in the Added Channels list using

- the ▲/▼ buttons and the Yellow Select button on your remote 2. Press the TOOLS button on your remote. The Tools menu
- 3. Select **Delete** in the Tools menu, and then press the ENTER button.
- To add channels to the Added Channels list, follow these steps: 1. Select one or more channels in the All Channels list using the
- ▲/▼ buttons and the Yellow Select button on your remote. 2. Press the TOOLS button on your remote. The Tools menu
- 3. Select Add in the Tools menu, and then press the ENTER 3
- All deleted channels will be shown on the All Channels list
- All Channels list. A gray-colored channel indicates the channel has been

You add channels back to the Added Channels list on the

- deleted from the Added Channels list. The Add menu option only appears for deleted channels.
- Add to Favorite/Delete from Favorite: Lets you add channels to and delete channels from your Favorites list.

## To add channels to the Favorites list, follow these steps:

- 1. Select one or more channels in the All Channels list using the ▲/▼ buttons and the Yellow Select button on your remote
- 2. Press the TOOLS button on your remote. The Tools menu
- 3. Select Add to Favorite in the Tools menu, and then press the ENTER button.


To delete channels from the **Favorites** list, follow these steps: 1. Select one or more channels in the Favorite Channels list using the ▲/▼ buttons and the Yellow Select button on your

2. Press the TOOLS button on your remote. The Tools menu

3. Select Delete from Favorite in the Tools menu, and then press the ENTER button. Timer Viewing: You can schedule a channel to be displayed

### channel. You must set the current time first in the Time > Clock

- function to use Time Viewing. To schedule a channel, follow these steps: Select a channel in the Added Channels list using the ▲/▼ buttons and the Yellow Select button on your remote
- 2. Press the TOOLS button on your remote. The Tools menu

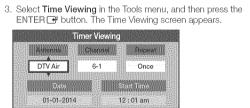

- 4. Use the ◀/▶ buttons to move from entry field to entry field and the ▲/♥ buttons to change the entries. Where numbers
- number keypad on your remote. If you select Everyday or Every Week, the date you select in the Date field becomes the start date for your scheduled viewing. For **Everyday**, the TV will turn on every day, at the time you selected, starting from that date. For Everyweek, the TV will turn on every week, on the same day of the week as the start date you selected, at the time you selected, from that day on, If you select Once, the TV will turn on once, on the date
- 5. Press the ENTER button on your remote when done.
- Only Added Channels can be scheduled. Scheduled programs and channels are displayed in the Programmed List.
- view the digital program list. If you highlight a program in the list, and then press the ENTER (Schedule) button, you set **Timer Viewing** for that program directly. Mannel Name Edit: Analog channels only. Lets you assign a

When you select a digital channel, press the ▶ button to

- Select All: Select all the channels in the displayed channel list. ■ Deselect All: Deselect all the selected displayed channels. You can only select Deselect All when one or more
- channels are selected.

The Programmed list displays the channels and programs you have scheduled for viewing using the Time Viewing function. You can view, modify, or delete a show you have scheduled using the

### Programmed List Screen Tools Menu TOOLS,

- automatically at a set time, even when you are watching another To change the information, follow these steps:
  - The Tools Menu appears.
  - he Time Viewing screen appears. Use the 
     buttons to move from entry field to entry field. and the ▲/▼ buttons to change the entries. Where numbers
  - number keypad on your remote.
  - 5. Press the ENTER button when done.
  - To cancel a scheduled show or channel, follow these steps:
  - 2. On the Programmed List screen, select the show or channel
  - button. The Cancel Schedule screen appears. 4. Select OK, and then press the ENTER 🗗 button. Information: Display the information for a show or channel you
  - . Select the **Programmed** List icon on the left side of the Channel List screen, and then press the ENTER → button.
  - button. The Tools Menu appears.

Select All / Deselect All: You can select or deselect all channels

- 4. Select Change Info and press the ENTER button to change information, or select Close and press the ENTER button to close the Information screen.
- name of up to five characters to an analog channel. For example, Hist, Food, Golf, etc. This makes it easier to find and select a
- Mauto Program: See Auto Program under Memorizing Channels.

### Programmed List (on the Channel List Screen)

functions on the Programmed List screen Tools menu.

# ■ Change Info: Change the scheduling information for a show or

- channel vou have scheduled. 1. Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER button.
- 2. On the Programmed List screen, select the show or channel entry you want to change, and then press the TOOLS button.
- 3. Select Change Info. and then press the ENTER 4 button.
- are displayed, you can also enter numbers directly using the
- Cancel Schedules: Cancel a show or channel you have
- 1. Select the Programmed List icon on the left side of the Channel List screen, and then press the ENTER - button.
- entry you want to cancel, and then press the TOOLS button. ools Menu appears 3. Select Cancel Schedules, and then press the ENTER []
- have scheduled. You can also change the schedule Information.
- 2. On the Programmed List screen, select the show or channel entry you want information for, and then press the TOOLS
- 3. Select Information, and then press the ENTER™ button. The Time Viewing Information screen appears.

## ENTER → again.

- If you selected Auto: The TV will automatically download the correct time from a
- Select Time Zone, and then press the ENTER → button.
  Use the ▲/▼ buttons to select your Time Zone, and then press ENTER ... Select DST (Daylight Savings Time), and then press

ENTER . Select On if you want to turn the DST

to DST automatically. Press ENTER when done. DST and Time Zone function are only available when the Clock Mode is set to Auto.

djustment on and off manually. Select **Off** to turn off the

DST adjustment. Select Auto if you want the TV to adjust

### If you selected Manual The Clock Set screen appears. Use the ▲/▼ buttons to

Channel Mode (Added Channels/Favorite Channels) ets you select the channel list displayed when you press the

### select Favorite Channels, you will only see Favorite channels when you press the ACHV button.

Fine Tune Analog channels only

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel

∧CH (Channel) button on your remote. For example, if you

manually.

Select the channel, and then select Fine Tune. Fine tuned channels that have been saved are marked with an asterisk "\*" on the right-hand side of the channel number

### To reset fine-tuning, select the channel, select Fine Tune, and then select Reset on the Fine Tune screen

in the channel banner.

## Setup Menu

Lets you re-run the Plug & Play initial setup procedure. For

## Language

Set the menu language Choose between English, Español, and Français.

instructions, see your Quick Start Guide.

☐ Setting the Time The time you set will appear when you press the INFO

■ Clock: Set the clock so you can use the various timer features If you disconnect the power cord, you have to set the clock again.

To set the clock, follow these steps:

1. Select Setup >Time > Clock. 2. Press ENTER \* and select Auto or Manual, and then press

change the values in each field or use the number buttons to enter the values directly. Use the field to field. When done with all the fields, press ENTER . Available only when Clock Mode is set to Manual.

Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

To cancel the Sleep Timer, select Off.

Sleep Timer 100187

Timer 1 / Timer 2 / Timer 3 Turns the TV on and off automatically at times and days you select. You can set three different on/off timer settings You must set the clock first.

M On Time / Off Time: Set the hour, minute, am/pm, and Activate/Inactivate fields for the On Time and Off Time. Use the

- ◄/► buttons to move from field to field. Use the ▲/▼ buttons to change the values in each field. To activate the timer with the setting you have chosen, set the Activate/Inactivate field to Activate. **Wolume**: Set the desired loudness. Contents: To select what will be turned on when the timer setting is activated. You can set the TV to turn on a specific channel or play back contents such as photo or audio files.
- and then press the ENTER 🚭 button. The Contents screer appears. Use the ◀/▶ buttons to move from field to field. Use the ▲/♥ buttons to change the values in each field.

Use the **◄/▶** buttons to move to move to the Contents field,

- TV/USB: Select TV or USB. The USB device must be connected to your TV before you can select USB. - Antenna: Displays the current antenna source, Air or Cable - Channel: If you have selected TV, select the desired channel.

- Music/Photo: If you have selected USB, follow these steps to

select a folder containing MP3 (Music) or JPEG (Photo) files on

the USB device: The maximum displayed number of files, including sub folders, in one folder of USB storage device is 2000. The media may not be playing smoothly when using the

device lower than USB 2.0.

to select the folder.

1. Use the ◀/▶ buttons to move to the field under Music or the field under Photo, and then press the ENTER button. The TV displays a single folder (the Root folder) and the type or name of the device.

2. Press the ENTER button. A list of folders on the device

appears. If there are no folders on your device, press the Yellow select button to select the Boot folder, and then press the RETURN button. The Timer screen

3. Use the ▲/▼ buttons to highlight a folder that contains

4. Press the RETURN button. The Timer screen re-appears.

music or photos, and then press the Yellow select button

Sat~Sun or Manual. If you select Manual, you can select the days you want to activate the timer by using the ◄/▶ buttons o highlight the day, and then pressing the ENTER 🖼 button. To unselect a day, highlight it, and then press the ENTER 🗗

press either the ENTER or RETURN button.

When you finished making all your selections on the Timer screen.

■ Repeat: Select Once, Everyday, Mon~Fri, Mon~Sat,

## □ Other Features

Program Rating Lock The Program Rating Lock feature lets you block programs you've determined are inappropriate for your children based on the program's ratings. To access the **Program Rating Lock** ture and make any changes, you must enter a PIN (personal

Program Rating Lock is not available in HDMI or

identification number). To watch a blocked program, you must also

### Component mode The default PIN number of a new TV set is "0-0-0-0". You can

enter the same PIN.

set your own PIN using the Change PIN function. How It Works When you access the Program Rating Lock Menu functions for the first time, the PIN input screen appears. Enter 0-0-0-0. The PIN screen closes and the Program Rating Lock Menu appears. Eve time you access the Program Rating Lock functions, the PIN

When the Rating Lock screen appears, select Program Rating Lock, and then press ENTER . Select On, and then press the ENTER 🗗 key again. Depending on what type of programs or movies you want to block, select one of the options on the screen. and then press the ENTER button. The options are listed below

■ TV Parental Guidelines: You can block TV programs based

on their ratings. This function allows you to control what your

screen will appear and you must enter a PIN.

children are watching.

- MPAA Rating: You can block movies based on their MPAA ratings. The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information on which films are appropriate for
- Canadian English: You can block TV programs based on their Anglophone Canadian ratings ■ Canadian French: You can block TV programs based on their

### French Canadian ratings Downloadable U.S. Rating: Parental restriction information can be used while watching DTV channels.

Locking/Blocking Programs or Movies You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The TV Parental Guidelines option also has kinds of content listed across the top: ALL: Lock all IV ratings. / FV: Fantasy violence / V: Violence / S: Sexual situation / L: Adult Language / D: Sexually Suggestive Dialog.

When you click a low rating, all the ratings above it will also display locks. You can also Allow All or Lock All. When done, press the RETURN button on your remote. ■ Change PIN: The Change PIN screen will appear. Choose any 4 digits for your PIN and enter them in Enter New PIN fields. Re-enter the same 4 digits in Confirm New PIN fields. When the Change PIN screen disappears, press the OK button. The TV

has memorized your new PIN

content, click the square next to the rating and/or under the kind of

content. A lock appears. To unlock/unblock, click the square again.

If you forget the PIN, press the remote-control buttons in

the following sequence, which resets the pin to "0-0-0-0

POWER (off)  $\rightarrow$  MUTE  $\rightarrow$  8  $\rightarrow$  2  $\rightarrow$  4  $\rightarrow$  POWER (on)

# Game Mode (On/Off)

to the Channel List

When you connect a game console such as a PlayStation™ or Xbox™ to your TV. you can enjoy a more realistic gaming experience by turning on the Game Mode function.

Precautions and limitations for game mode:

 Before you disconnect the game console and connect another external device, set Game Mode to Off in the setup menu • If you display the TV menu in Game Mode, the screen shakes Game Mode is not available when the input source is set to

## After connecting the game console, set Game Mode to On. You may notice slightly reduced picture quality.

default is Standard.

default is Style 0.

(On-Screen Text Dialogue)

■ Caption: You can switch the caption function on or off. If captions are not available, they will not be displayed on the The Caption feature does not work in Component or HDMI mode. ■ Caption Mode: You can select the desired caption mode.

mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels." Default / Service1 ~ Service6 / CC1 ~ CC4 / Text1 ~ Text4:

Default / CC1~CC4 / Text1~Text4: (analog channels only) The

Analog Caption function operates in either analog TV channel

(Digital channels only) The Digital Captions function works with

Service1~6 may not be available in digital caption mode epending on the broadcast. Digital Caption Options: (Digital channels only) Size: Options include Default, Small, Standard and Large. The

Font Style: Options include Default and Styles 0 to 7. The

Foreground Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the color of the letters. The default is White. Background Color: Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the background color of the captions. The default is Black. Foreground Opacity: This adjusts the opacity of text. Options include Default, Transparent, Translucent, Solid and Flashing. Background Opacity: This adjusts the opacity of the caption To lock/block movies or shows with certain ratings and/or kinds of

> Return to Default: This option sets each Size, Font Style, Foreground Color, Background Color, Foreground Opacity and Background Opacity to its default.

> background. Options include Default, Transparent, Translucent,

Digital Caption Options are available only when you can select Default and Service1 ~ Service6 in Caption Mode The Foreground and Background cannot be set to the

# Boot Logo

Enable/disable displaying the logo while the TV starts up. Eco Solution

Energy Saving (Off / Low / Medium / High / Picture Off)

how quickly the TV switches to standby mode, if no picture is

Maria Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10

hours): If the screen remains idle with a still image for a certain

period of time you define, the screen saver is activated to preven

This adjust the brightness of the TV in order to reduce pov consumption. If you select Picture Off, the screen is turned off, but the sound remains on. Press any button except volume button to turn on the screen. Mo Signal Power Off (Off / 15 min. / 30 min. / 60 min.): Sets

### being received. Disabled when the PC is in power saving mode Matter Auto Power Off (Off / On): The TV will be automatically turned off when no user operation is received for 4 hours.

Auto Protection Time

## the formation of ghost images on the screen

on the screen.

Support Menu Self Diagnosis ■ Picture Test: Use to check for picture problems. If the problem

problems. If the problem occurs during the test, select Yes and ■ Signal Strength: (Digital channels only) An HD channel's

eption quality is either perfect or the channels are unavailable.

Reset: Reset all settings to the factory defaults. The PIN input screen appears before the setup screen Enter your 4-digit PIN. Change the PIN using the Change

Adjust your antenna to increase signal strength.

## Software Upgrade Software Upgrade can be performed by downloading the latest firmware from samsung.com to a USB memory device.

**HD** Connection Guide Refer to this information when connecting external devices to the

when you want to upgrade the software. You can find information

regarding our call centers and how to download products and

### **Contact Samsung** View this information when your TV does not work properly or

### Media Play Enjoy photos, music and/or movie files saved on a

USB Mass Storage Class (MSC) device.

# 3. Press the MEDIA.P button on your remote. The Media Play Using the Media Play Menu

en Media Play in the Menu, follow thes 1. Press the MENU button. Then, press the ▲ or ▼ button to

Press the ▲ or ▼ button to select Media Play (USB), and then press the ENTER → button.

Need-to-Know List before using Media Play (USB) The file system supports FAT16, FAT32 and NTFS. Certain types of USB Digital camera and audio devices may not be compatible with this TV.

port. USB HDD is not supported. Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.

be supported. Do not disconnect the USB device while it is loading. . The higher the resolution of the image, the longer it takes to

display on the screen. • The maximum supported JPEG resolution is 15360 x 8640 pixels. If a file is corrupted or the TV does not support the file type, the "Not Supported File Format" message appears.

• The TV cannot play MP3 files with DRM that have been downloaded from a for-pay site. Digital Rights Managemen (DRM) is a technology that supports the creation, distribution, and management of digital content in an integrated and comprehensive way, including protecting the rights and interests of content providers, preventing illegal copying of contents, and managing billing and settlements.

### ☐ Connecting a USB Device Turn on your TV.

2. Connect a USB device containing photo, music, and/or movie files to the USB jack on the back of the TV. A pop up window



appears in the test picture, select Yes and follow the directions Sound Test: Use the built-in melody sound to check for sound select Application on the left, and then press the ENTER

### 3. Press the ◀ or ▶ button to select an icon (Videos, Music, Photos, Settings), and then press the ENTER → button. Media Play might not work properly with unlicensed

 Media Play only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives and Flash Card Readers. Devices should be connected directly to the TV's USE

[UH5003-ZA]BN68-05829P-LPRENG.indb 1 2014-07-25 🖾 8:38:39

- . PTP devices are not supported.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be
- If the TV has no input during the time period set in Auto Protection Time, the Screensaver will run.
- The power-saving mode of some external hard disk drives ma be released automatically when your connect them to the TV.
- If you use a USB extension cable, the TV may not recognize the USB device or may not be able to read the files on the device. • If a USB device connected to the TV is not recognized, the list of files on the device is corrupted, or a file in the list is not played
- he connection • If a file you deleted from the PC is still found when you run **Media Play**, use the "Empty the Recycle Bin" function on the PC to permanently delete the file.

connect the USB device to a PC, format the device, and check

- · Photos only supports the sequential jpeg format.
- The Videos option does not support the scene search and
- thumbnail functions. · If the number of files and folders saved on a USB storage device is
- over approximately 4000, the files and folders may not appear and some folders may not open.
- The maximum displayed number of files, including sub folders, in one folder of USB storage device is 2000.

  | File | Extension | Continue | Continue
- The media may not be playing smoothly when using the device lower than USB 2.0.

Trouble Powering On

Stand Assembly

Poor Picture

Cannot find a channe

There is a dotted line on the edge of

There is no sound or the sound is too

The picture is good, but there is no

low at maximum volume.

The TV turns off automatically

[UH5003-ZA]BN68-05829P-LPRENG.indb 2



- 1. In the Media Play menu, press the ◀ or ▶ button to select Videos, and then press the ENTER 🚭 button.
- 2. Press the / \/ Image: A / Image > A / Image: A video in the file list.
- 3. Press the ENTER button or (Play) button. The file name is displayed on the top of the screen with the
- playing time. If video time information is unknown, playing time and the
- progress bar are not displayed.
- During video playback, you can search using the ◀ and
- In this mode, you can play movie clips contained in a game, but you cannot play the game itself.

### Supported Subtitle Formats

xternal	
Name	File extension
MPEG-4 timed text	.ttxt
SAMI	.smi
SubRip	.srt
SubViewer	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass

Name	Container	Format
Xsub	AVI	Picture Format
SubStation Alpha	MKV	Text Format
Advanced SubStation Alpha	MKV	Text Format
SubRip	MKV	Text Format
MPEG-4 Timed text	MP4	Text Format

	Extension	Container	Video Codec	Resolution	rate(fps)	rate(Mbps)	Codec
			DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	
	*.mp4	MP4	H264	1920x1080	630	20Mbps	MP3 / ADPCM /
			VC-1	1920x1080	630	20Mbps	AAC
			MJPEG	640x480	6~30	10Mbps	
			DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	MP3 / AC3
	"".avi ".mkv"	"AVI MKV"	MPEG 1/2/4	1920x1080	6~30	20Mbps	/ LPCM / ADPCM /
	"THKV"	MKV.	H264	1920x1080	6~30	20Mbps	DTS
			MJPEG	640x480	6~30	10Mbps	
	"*.asf		DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	MP3 / AC3 / LPCM /
	*.wmv*	ASF	MPEG 1/2/4	1920x1080	6~30	20Mbps	ADPGM /WMA/
			H.264	1920x1080	6~30	20Mbps	WMA Pro
	".ts	TS	MPEG2 -TS	1920x1080	6~30	20Mbps	AC3 / AAC / MP3 /
	f.tp		H. 264	1920x1080	6~30	20Mbps	DD+
	"1.clat		MPEG1	1920x1080	630	20Mbps	AC3 /
	*.mpg *.mpeg	PS	MPEG2	1920x1080	6~30	20Mbps	MPEG / LPOM /
	"dov."		H. 264	1920x1080	630	20Mbps	AAC
е	1.3gp	3GPP	MPEG 1/2/4	1920x1080	6~30	20Mbps	MP3
	-,3gp	JGPP	H.264	1920x1080	6~30	20Mbps	MP3
	*:flv	flash	H.264	1920x1080	6~30	20Mbps	MP3
	".flV	formats	Sorenson H.263	1920x1080	6~30	20Mbps	IVIFO

- error in the content or the container
- bit rate/ frame rate above the compatible Frame/sec listed in the
- If the Index Table erroneous, the Seek (Jump) function is not
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps.
- Video content can not be played if there are many contents in

Supports up to H.264, Level 4.1 H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are



H.263 is not supported. GMC is not support.

Video Decoder

## Supports up to WMA7, 8, 9 STD, 9 PRO, 10 PRO WMA 9 PRO and WMA 10 PRO support 5.1 channel. (LBR

- Above 1280 x 720: 30 frame max

mode of WMA Pro is not supported)

WMA Lossless is not supported.

### Music



- 1. In the Media Play menu, press the ◀ or ▶ button to select Music, and then press the ENTER → button.
- 2. Press the ◀/▶/▲/♥ buttons to select the desired Music in the
- 3. Press the ENTER → button or ► (Play) button.
- Media Play only displays files with MP3 and PCM file extension. Other file extensions are not displayed, even if they
- If the sound is abnormal when playing MP3 files, adjust the Equalizer in the Sound menu. (An over-modulated MP3 file

## Media Play - Additional Functions





- In the Media Play menu, press the 

  or 

  button to select Photos, then press the ENTER 🚭 button.
- 2. Press the ◄/▶/▲/▼ buttons to select a photo in the file list.
- 3. Press the ENTER → button or ▶ (Play) button. NOTE
- While a photo list is displayed, press the ► (Play) / ENTER → button on the remote control to start a slide show.
- · All files in the file list section will be displayed in the slide show.
- During the slide show, files are displayed in order.
- During the slide show, you can adjust the slide show speed using (◄) (REW) or (►) (FF) button. \* You can move to other files using ◀ or ▶ button Media Play can play Music files automatically during a Slide

Show if Background Music is set to On.

- You cannot change the Mode in Background Music until the
- Background Music file has finished loading • Supported Photo Formats

### Image 15360 x 8704 Base-line JPEG 1024 x 768

## Other Restrictions

. CMYK, YCCK Color space JPEG are not supported

### Playing Multiple Files

Playing selected video/music/photo files 1. On the File List screen, highlight a file, and then press the Yellow

- button on your remote.
- 2. Repeat Step 1 to select multiple files. NOTE
- A 
   mark appears to the left of the selected files.
- To cancel a selection, press the Yellow button again
- 3. Press the TOOLS button, select Play Selected Contents, and
- then press the ENTER button
- Playing a video/music/photo folder
- 1. With the folders on your USB device displayed, use the
- ◄/▶/▲/▼ buttons to highlight a folder. 2. Press the TOOLS button, select Play Folder, and then press the

✓ | ✓ | ✓

■ Videos/Music/Photos Play Option menus

When playing a file, press the TOOLS button.

Repeat Mode

Picture Size

Audio Format

Start Slide

Slide Show

Zoom

Rotate

u can select another video file play directly.

can adjust the picture size

can play the video with itles. This function only work subtitles have the same file as the video.

ou can select the digital audi

u can change the audio

uage if the video has mor

ı can start or stop a Slide

u can select the slide shov during the slide show

'ou can zoom into images in ful

The wall mount kit (sold separately) allows you to mount the TV or

For detailed information about installing the wall mount, see

The wall mount kit is not supplied, but sold separately.

Install your wall mount on a solid wall perpendicular to the floor.

When attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it

the instructions provided with the wall mount items. Contact a

technician for assistance when installing the wall mount bracket Samsung Electronics is not responsible for any damage to the

product or injury to yourself or others if you elect to install the wall

You can rotate images in full

Other Information

Installing the Wall Mount Kit

Wall Mount Kit Specifications (VESA)

may fall and result in severe personal injury.

u can set and select

ou can play movie and music

Picture Mode You can adjust the picture setting.

Sound Mode You can adjust the sound setting.

NOTE

- Standard dimensions for wall mount kits are shown in the table
  - When purchasing our wall mount kit, a detailed installation
  - manual and all parts necessary for assembly are provided Do not use screws that do not comply with the VESA standard
  - screw specifications. Do not use screws that are longer than the standard dimension
  - or do not comply with the VESA standard screw specifications. ews that are too long may cause damage to the inside of the
  - For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ
  - depending on the wall mount specifications.

  - Do not fasten the screws too firmly. This may damage the

  - product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents. Samsung is not liable for product damage or personal injury
  - when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions \* Do not mount the TV at more than a 15 degree tilt.

	Always have two people mount the TV on a wall.						
_	Product Family	TV size in inches	VESA screw hole specs (A * B) in millimeters	Standard Screw	Quantity		
_	LED-TV	40 - 48	200 X 200	M8	4		
			'				





- Since the necessary brackets, screws, and string or cable are not supplied, please purchase these separately.
- 2. Using screws, insert the screws through the TV brackets, and then fasten the screws to the top VESA screw holes on the back
- Connect the brackets on the TV and the brackets on the wall with a strong string or cable, and then tie the string or cable tightly to the brackets. Verify all connections are properly secured. Periodically check
- the connections for any sign of fatigue or failure. If you have any doubt about the security of your connections, contact a professional installer.
- Connect the string or cable so that the brackets on the wall are at the same height or lower than the brackets on the TV. Untie the string or cable before moving the TV. To purchase a TV Holder kit, contact Samsung customer



License

Do not spray water directly onto the product. Any liquid that goes into the product may cause a failure, fire, or electric shock.





DivX Certified® to play DivX® video up to HD 1080p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx. com for more information and software tools to convert your files into DivX videos.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS,



5,638,452, 5,771,295, 5,970,152, 5,912,976, 7,200,236, 7,492,907, 8,050,434, 7,720,240, 7,031,474, 7.907.736 and 7,764,802. DTS, the Symbol, and DTS and the Symbol together are registered trademarks &

Open Source License Notice

Notice is written only English.

- send inquiries and requests for questions regarding open sources, contact Samsung via Email (oss.request@samsung.com).
- U License ICU 1.8.1 and late
- OPYRIGHT AND PERMISSION NOTICE

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Softwar without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to nom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES F MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT IOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL. INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY NAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS


ccept as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software rithout prior written authorization of the copyright holder.

## Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional information on proper use.

- Please find a "☆" icon on the rear of the TV. The Kensington slot is beside the "๙" icon.
- The position and color may differ depending on the model.

### Assembling the Cable manager

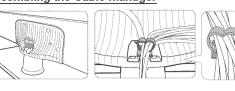

Display Modes (HDMI/DVI Input)

Mode Fesolution Horizontal Vertical Pixel Clor

If the TV seems to have a problem, first review this list of possible problems and solution. If none of these troubleshooting tips apply, visit amsung.com, then click on Support, or call Samsung customer service at 1-800-SAMSUNG.

Problem	Possible Solution
Flickering and Dimming	If your Samsung Television is flickering or dimming sporadically, you may need to disable some of its energy efficier features like the Eco Sensor or the Energy Saving feature. Follow the steps below with your remote to turn these features off or on.
	<ul> <li>Energy saving : Menu → Setup → Eco Solution → Energy Saving →Select Settings</li> </ul>
Component Connections / Screen Color	If you find that the color on your Samsung television's screen is not correct or black and white, first run a Self Diagnosis Test on the TV to make sure there are no device issues.
	$ \bullet \   Self Diagnosis : User Menu \to Support \to Self Diagnosis \to Picture Test $
	If the test is ok, try making sure ;
	<ul> <li>Your connections are all consistent. For example, if you've used the AV In jack on your TV, make sure you have used the AV Out jack on your video source.</li> </ul>
	<ul> <li>Try making sure you have connected to the correct jacks. For example, if you use the Component jacks, labeled Pb, Pr, and Y, to connect your TV and video source, make sure you have connected the blue Pb jack on the video source to the blue Pb jack on the TV, the red Pr jack on the source to the red Pr jack on the TV.</li> </ul>
Screen Brightness	If you find that the colors on your Samsung TV are correct but just a little too dark or bright, there are some settings you should check before calling for a repair.
	<ul> <li>Backlight, Contrast, Brightness, Sharpness, Color, Tint (G/R) and so on. Go to "Picture" in the Menu, and then try adjusting these options.</li> </ul>
Unwanted Powering off	If your Samsung TV appears to turn off by itself, there may be an issue with either your Timer settings or your Eco friendly No Signal Power Off feature.
	First make sure the Sleep Timer is not accidentally set. The Sleep Timer lets you fall asleep with the TV still on knowing that it will turn off after a certain period of time and not waste energy.
	• Sleep Timer : User Menu $\rightarrow$ Setup $\rightarrow$ Time $\rightarrow$ Sleep Timer
	If the Sleep Timer is not activated, you may have engaged the No Signal Power Off or Auto Power Off feature.
	ullet No Signal Power Off : User Menu $ o$ Setup $ o$ Eco Solution $ o$ No Signal Power
	Auto Power Off : User Menu → Setup → Eco Solution → Auto Power Off

## Storage and Maintenance

- 🗞 If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean it before watching
- 🖎 The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches






Clean the product with a soft cloth dampened with in a small amount of water. Do not use a flammable liquid (e.g. benzene, thinners) or a cleaning

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark

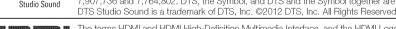

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or The terms HDMI and HDMI High-Delitition involutioned interface, and do not registered trademarks of HDMI Licensing LLC in the United States and other countries.

- This product uses some software programs which are distributed under the Independent JPEG Group.

ove copyright notice(s) and this permission notice appear in supporting documentation

CTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.



used under license.



of DTS, Inc. © DTS, Inc. All Rights Reserved. Manufactured under a license from U.S. Patent No's: 6,285,767, 8,027,47

Open Source used in this product can be found on the following webpage. (http://opensource.samsung.com) Open Source License

opyright (c) 1995-2008 International Business Machines Corporation and others All rights reserved,

rademarks and registered trademarks mentioned herein are the property of their respective owners.


### **Specifications** onmental Consideration perating Temperature perating Humidity 50°F to 104°F (10°C to 40°C) 10% to 80%, non-condensing orage Temperature torage Humidity -4°F to 113°F (-20°C to 45°C 5% to 95%, non-cor UN40H5003AF Model Name lav Resolution 1920 x 1080 40" Class (16.3 : 9) en Size (39.5" measured diagonall 10W x 2 36.1 x 20.9 x 3.7 inches ensions (W x H x D) (918.0 x 533.2 x 94.0 (mm) 36.1 x 23.3 x 8.9 inches (918.0 x 592.6 x 227.6 (mm 16.7 lbs (7.6 Kg) hout Stand

Design and specifications are subject to change without prior notice.

This device is a Class B digital apparatus. 🦠 For information about the power required and more about power consumption, refer to the label attached to the product.

Typical power consumption is measured according to Energy Star Program requirements for televisions. 🖏 Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: www.

# M JACK PANEL DETAIL / REAR VIEW

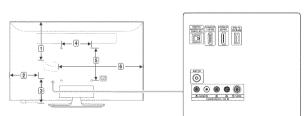

Model name	Ð.	(2)	(3)	[4]	( <del>5</del> )	(6)
UN40H5003AF	9.3	5.6	5.7	7.8	7.8	23.9

NOTE: All drawings are not necessarily to scale. Some dimensions are subject to change without prior notice. Refer to the dimensions prior t installation of your TV. Not responsible for typographical or printed errors. © 2014 Samsung Electronics America, Inc

### • Supported Video Formats

File Extension	Container	Video Codec	Resolution	Frame rate(fps)	Bit rate(Mbps)	Audio Codec
		DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	
*.mp4	MP4	H264	1920x1080	630	20Mbps	MP3 / ADPCM /
		VC-1	1920x1080	630	20Mbps	AAC
		MJPEG	640x480	6~30	10Mbps	
	*AVI	DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	MP3 / AC3 / LPOM / ADPCM / DTS
avi.		MPEG 1/2/4	1920x1080	6~30	20Mbps	
".mkv"	MKV*	H264	1920x1080	6~30	20Mbps	
		MJPEG	640x480	6~30	10Mbps	
"1.asf 1.wmv"	ASF	DivX3.11 / DivX4 / DivX5 / DivX6	1920x1080	6~30	20Mbps	MP3 / AC
		MPEG 1/2/4	1920x1080	6~30	20Mbps	ADPCM / WMA /
		H.264	1920x1080	6~30	20Mbps	WMA Pro
".ts ".trp ".tp	TS	MPEG2 -TS	1920x1080	6~30	20Mbps	AG3 / AA / MP3 /
		H. 264	1920x1080	6~30	20Mbps	DD+
**.clat *.mpg		MPEG1	1920x1080	630	20Mbps	AC3 /
	PS	MPFG2	1920x1080	630	20Mhns	MPEG /

## Other Restrictions

- Video content will not play, or not play correctly, if there is an
- Sound or video may not work if the contents have a standard Supported Video Formats table.

There is no picture/video

Before you turn the TV on, find the red light on the right or left bottom of your TV. Press the power on button on the TV or remote and the light should blink about 5 times before the TV turns on. f you find that you are having trouble powering on your Samsung television, there are a number of things to check it before making a call to the service department. If you happen to be using the TV as a monitor and the stand-by light only blinks for a few seconds when you
press the power button, your PC is in sleep mode. To take your PC out of sleep mode, press a key on your

keyboard or move the mouse. Then try turning your TV on. If you're sure your power cord, remote control, and PC are functioning properly, you may be having a cable issue. If you have a cable or satellite box, your TV may appear to be off because the cable or satellite box is not outputting a

signal. To test the signal output of your cable or satellite box, press the guide or info button on the cable or satellite box remote control. If the screen displays the guide or info data, the problem is caused by the box. • If you have any trouble assembling the stand, refer to "Install the Stand" in the Start Up or Stand Installation Guide Re-run Plug & Play or run Auto Program. (go to MENU - Channel - Auto Program) First, perform the Picture Test and to see if your TV is displaying the test image properly

If the test image is properly displayed, the poor picture may be caused by the source or signal.

Many HD channels broadcast up scaled SD (Standard Definition) content. The picture quality of up

to the default picture settings, (go to MENU - Picture - Picture Re

The TV image does not look as good as | • If you have an analog cable/satellite box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality. · Cable/Satellite subscribers: Try HD channels from the channel line up. • Air/Cable Antenna connection: Try HD channels after running Auto Program.

Go to MENU - Support - Self Diagnosis - Picture Test

scaled SD content is low.

Adjust the Cable/Set top box video output resolution to 1080i or 720p. The picture is distorted: macroblock . Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in · A weak signal can cause picture distortion. This is not a TV problem . Mobile phones used close to the TV (within 3.3ft) may cause noise in the picture on analog and digital channels, If you're using a component connection, make sure the component cables are connected to the correct jacks Color is wrong or missing. Incorrect or loose connections may cause color problems or a blank screen Adjust the Picture options in the TV menu. (go to Picture Mode / Color / Brightness / Sharp There is poor color or brightness • Adjust the Energy Saving option in the TV menu. (go to MENU - Setup - Eco Solution - Energy Saving )

 Change the cable/satellite box resolution The picture is black and white • If you are using an AV composite input, connect the video cable (yellow) to the Green jack of Component Input 1 When changing channels, the picture . If connected to a cable box, please try to reset it. (Reconnect the AC cord and wait until the cable box reboots. It freezes or is distorted or delayed. . Set the output resolution of the cable box to 1080i or 720p. Sound Problems Perform the Sound Test to confirm that your TV audio is properly operating. (go to MENU - Support - Self Diagnosis - Sound Test) If the audio is OK, the sound problem may be caused by the source or signal.

Check the volume of the device (Cable/Sat Box, DVD, Blu-ray, etc.) connected to your TV.

If you are using an external device, check the device's audio output option Ex. you may need to change your cable box's audio option to HDMI if the box is connected to your TV using an HDMI cable.

· Reboot the connected device by reconnecting the device's power cable. The speakers are making an Check the cable connections. Make sure a video cable is not connected to an audio input. inappropriate noise. • For Antenna or Cable connections, check the signal information. A weak signal may cause sound distortion. · Perform the Sound Test as explained above. No Picture, No Video

If the picture size is set to Screen Fit, change it to 16:9.

The TV will not turn on . Make sure the AC power cord is securely plugged into the wall outlet and the TV. Try pressing the POWER button on the TV to make sure the problem is not the remote.
If the TV turns on, refer to 'Remote control does not work' below.

• Ensure the Sleep Timer is set to Off in the Time menu.

• If your PC is connected to the TV, check your PC power settings . Make sure the AC power cord is plugged securely into the wall outlet and the TV. . When you are watching TV connected to an antenna or cable connection, the TV will turn off after 10 - 15 minutes

During music playback, you can search using the < and</p> (REW) and F (FF) buttons do not function during

are saved on the same USB device.

. Check the cable connections, (Remove and reconnect all cables connected to the TV and external devices), Set your external device's (Cable/Sat Box, DVD, Blu-ray etc) video outputs to match the connections to the Type input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV. · Make sure your connected devices are powered on. Be sure to select the correct input source by pressing the SOURCE button on the remote control

RF (Cable/Antenna) Connection The TV is not receiving all channels. · Make sure the coaxial cable is connected securely Run Auto Program to add available channels to the channel list. go to MENU - Channel - Auto program then select Auto and make sure the correct Cable TV signal type is set in the menu. There are 3 options. (STD, HRC and IRC)

No Caption on digital channels. The picture is distorted: macroblock . Compression of video contents may cause picture distortion, especially on fast moving pictures such as those in error, small block, dots, pixelization

Purple/green rolling horizontal bars and buzzing noise from the TV speakers with Component cable connection.

The picture will not display in full screen. • HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents. The remote control does not work.

The cable/set top box remote control Program the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for does not turn the TV on or off, or adjust the SAMSUNG TV code. • Check the supported resolution of the TV and adjust the external device's output resolution accordingly. Refer to resolution settings in this manual.

. This smell is normal and will dissipate in a few days. TV Signal Strength is unavailable in the | • This function is only available for digital channels received through an Antenna / RF/Coax connection

 If TV is in the Store Demo mode, it will reset audio and picture settings every 5 minutes. Please change from Store Demo mode to Home Use mode using the Plug & Play procedure. Press the SOURCE button to select Your settings are lost after 5 minutes or every time the TV is turned off.

You have intermittent loss of audio or

🤏 This TFT LED panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product. Watch these troubleshooting on video at www.samsung.com/spsn.

 $\rightarrow \text{Support} \rightarrow \text{Downloads}. \text{ To upgrade, download the firmware to your computer, copy the firmware file to a USB memory stick,}$ insert the USB memory stick into the TV's USB slot, and then select Support > Software Upgrade in the TV's menu.

• To deselect all selected files, press the TOOLS button, select Deselect All, and then the ENTER → button.

Reboot the connected device by reconnecting the device's power cable.

· Verify the antenna is positioned correctly Check the Caption Setup menu. Try changing Caption Mode Service 1 to CC1. · Some channels may not have caption data

 A weak signal can cause picture distortion. This is not a TV problem. Remove the left and right audio connections from the set-top-box. If the buzzing stops, this indicates that the set-top-box has a grounding issue. Replace the Component video cables with an HDMI connection.

 Black bars on the top and bottom appear when movies that have aspect ratios different from your TV play on the · Adjust the picture size option on your external device or change the TV to full screen Replace the remote control's batteries. Make sure you insert them with the polarity (+/-) correct Clean the transmission window located on the top of the remote control. • Try pointing the remote directly at the TV from 5~6 feet away.

A "Mode Not Supported" message Caption on the TV menu is greyed out. • You cannot select Caption in the TV menu when watching content from a device connected via HDMI or • Caption must be activated on the external device.

TV is tilted to the right or left side. Remove the stand base from the TV and reassemble it The Channel menu is grey out • The Channel menu is only available when you select the TV source. (unavailable).

TV mode, go to MENU → Setup → Plug & Play → ENTER . Check the cable connections and reconnect them Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible
enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree

You see small particles when you look 

This is part of the product's design and is not a defect. closely at the edge of the frame of the TV. POP (TV's internal banner ad) appears • Select Home Use under Plug & Play mode. For details, refer to Plug & Play (Initial Setup).

Some functions and pictures shown in this manual are available on specific models only. 🦠 You can keep your TV in optimum condition by upgrading it with the latest firmware from the Samsung web site (samsung.com

Do not install your Wall Mount Kit while your TV is turned on. It may result in rsonal injury due to electric shock.

# Securing the TV to the Wall

Caution: Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, resulting in serious injuries or death. Follow all safety precautions provided

### To prevent the TV from falling

- Insert the screws into the wall brackets and firmly fasten them to the wall. Make sure the screws are firmly fixed to the wall. We strongly recommend you drive the screws into a stud.
- Install the TV close to the wall so that it does not fall.

samsung.com/recyclingdirect or call, (877) 278-0799.

(Unit: inches)

2014-07-25 🖾 8:38:45