


# BIG GREEN DEEP<sup>®</sup> CLEANING MACHINE **USER GUIDE**

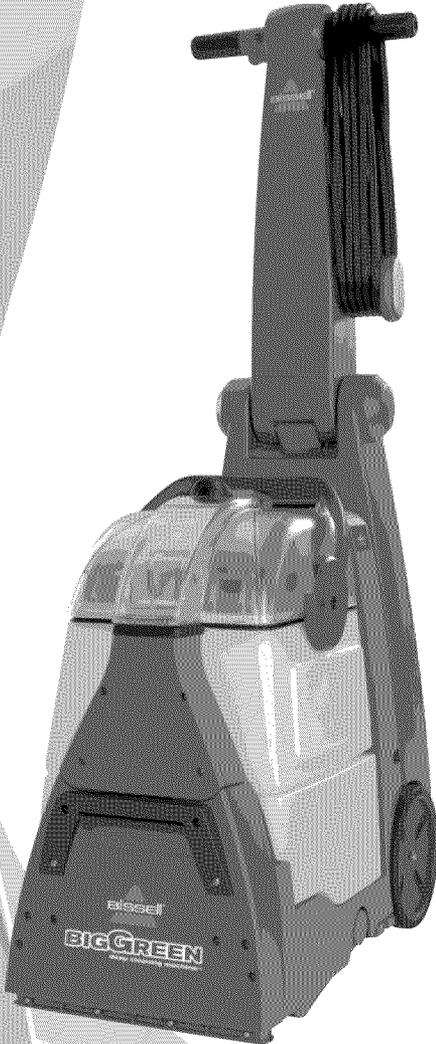

86T3 SERIES

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following:

### **⚠️ WARNING**

#### **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

- » Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug.
- » Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Use indoors only.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Always install float before any wet pick-up operation.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging appliance.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Use only BISSELL cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Fluid section of this guide.
- » Unplug before connecting TurboBrush Tool.
- » Do not immerse. Use only on surfaces moistened by the cleaning process.
- » Keep appliance on a level surface.
- » Do not use without intake screen filter in place.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE


This model is for household use only.

### **⚠️ WARNING**

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

### **GROUNDING INSTRUCTIONS**

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

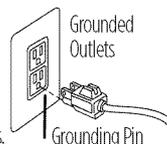


# Thanks for buying a BISSELL deep cleaner

We're glad you purchased a BISSELL deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL deep cleaner is well made, and we back it with a limited five-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL deep cleaner.

 Thanks again, from all of us at BISSELL.




Mark J. Bissell  
Chairman & CEO

Safety Instructions . . . . .	2
Product View . . . . .	4
Assembly . . . . .	5
Operations . . . . .	5-9
Maintenance & Care . . . . .	10-11
Troubleshooting . . . . .	12
Replacement Parts . . . . .	13
Accessories . . . . .	14
Warranty . . . . .	15
Consumer Care . . . . .	15
Product Registration . . . . .	16

## TIPS

- » Deep cleaning stairs and high-traffic areas on a regular basis helps prolong carpet life.
- » Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.
- » Before turning off the machine, suction up clean water to thoroughly rinse out the interior of the flex hose. Then, lift the cleaning tool and point it upwards to drain any remaining water into the dirty water/collection tank.

# Product View

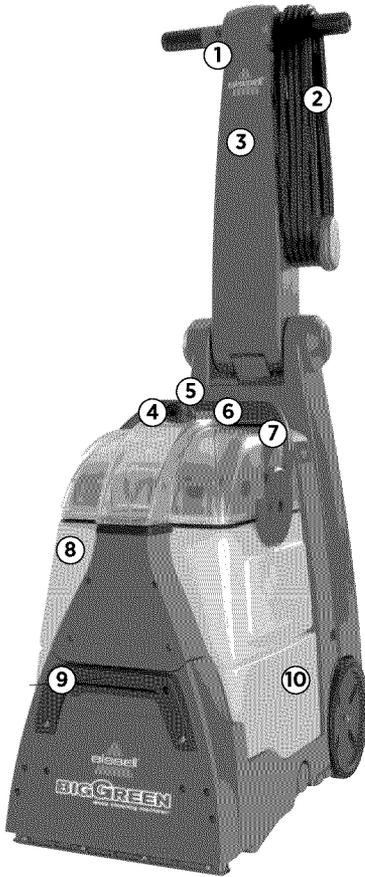

- 1 Spray Trigger
- 2 Power Cord
- 3 Adjustable Handle
- 4 Hose Latch
- 5 Tank Carry Handle
- 6 Flow Indicator
- 7 Solution Hose Connection
- 8 Dirty Water Tank



- 9 Front Carry Handle
- 10 Clean Water Tank
- 11 Spray Trigger
- 12 Power Switch
- 13 Upper Handle Release
- 14 Back Carry Handle
- 15 Recline Handle

# Assembly

Your BISSELL deep cleaning machine comes with no assembly required!

**⚠️ WARNING**

Do not plug in your deep cleaner until you are familiar with all instructions and operating procedures.

# Operations

## Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.

**⚠️ WARNING**

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

						
	Professional Deep Cleaning	Pet Stain & Odor	Deep Clean & Protect	Allergen Cleansing	Spring Breeze	Tough Stain Pretreat
Best for	Out Cleans all other formulas	Removes tough pet stains and contains patented odor removal technology	Deep cleans carpets and protects from future stains with Scotchgard™ Protector	Helps remove pet & pollen allergens	Powerful cleaning with a refreshing scent	Pretreat to penetrate and loosen tough stains
2X Concentrated	X	X	X	X	X	
Scotchgard™ Protector	X	X	X			

\*ONLY BISSELL Protects from future stains with Scotchgard™ Protector  
Scotchgard™ is a trademark of 3M®.

## Before you clean

1. Move furniture to another area if cleaning the entire room (optional).
2. Vacuum area with a dry vacuum cleaner thoroughly before deep cleaning.
3. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.
4. Pretreating (optional) is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas such as entryways and hallways.
  - a. Spray the BISSELL Tough Stain Pre-Cleaner formula onto high traffic areas, soiled areas or stains.
  - b. Allow to penetrate for at least three minutes.
  - c. Clean as normal using your BISSELL deep cleaning machine, following the instructions on page 6.

**ATTENTION**

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition. Please see Stain Removal instructions on page 11.



# Operations

## Carpet cleaning

1. Remove dirty water tank by pulling dirty water tank handle to upright position and lift up to remove dirty water tank.

2. Lift clean water tank from the base of machine.

a. Unscrew cap on top of the clean water tank. Fill tank to **FILL** line with clean, hot tap water.

**Do not boil or microwave water.**

b. Measure BISSELL formula using cap on tank. Fill cap to line twice for each full tank of water. Always use genuine BISSELL formulas to maximize cleaning and for the safety of your machine.

c. Screw cap back onto clean water tank and place tank onto base of the machine.

3. Replace dirty water tank securely on top of the clean water tank and push handle back to lock into place.

4. Plug into a proper outlet and turn the power switch to the ON (I) position.

5. Recline handle by pushing down on the green lever on the back of the machine while pulling back on handle.

6. **Cleaning strokes.** While pressing the trigger, make one slow forward wet pass and another back. Let the formula and DirtLifter PowerBrush do the work for you.

**NOTE: Your machine is equipped with a circuit breaker that will automatically shut off the brush if a large or loose object is caught in the brush roll. If that happens, be sure to unplug your machine, remove the foreign object and then plug machine in to reset the circuit breaker.**

7. **Cleaning strokes.** Release the trigger and make one slow forward and backward pass over the same area to remove any residual dirty water and aid in drying. Repeat cleaning passes until solution being pulled up appears clean. Continue passes without pressing the trigger until you can't see any more water being pulled up.

8. Remove the dirty water tank by pulling the handle to the upright position and lift up. Carry the tank like a bucket to a utility sink or outside where you will dispose of the dirty water.







9. Unlatch the top of the tank from the bottom by pushing the handle all the way forward and lifting the top off. Pour dirty water into the sink.

**NOTE: You may notice hair and debris deposits on the carpet or in the tank that were loosened by the cleaning action (especially with newer carpets that have never been deep cleaned before). This debris should be picked up and thrown away.**

10. Fill the clean water tank with clean hot tap water and follow instructions 2 - 9 to continue cleaning.

## ⚠ CAUTION

Do not overwet. Take care not to run over loose objects or edges of area rugs. Stalling brush may result in premature belt failure.

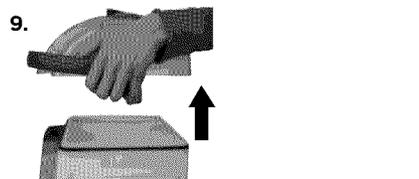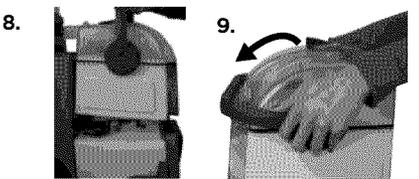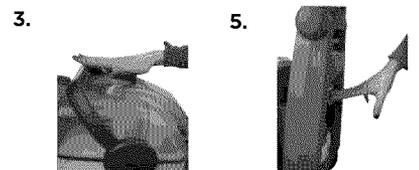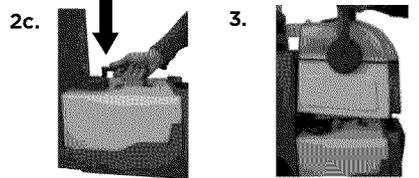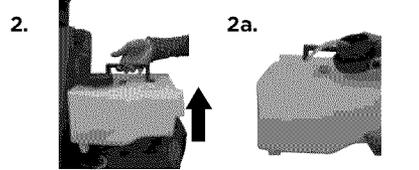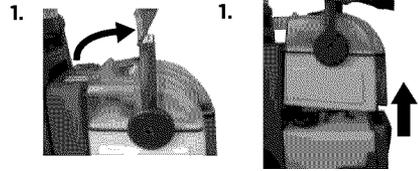

## ⚠ WARNING

To reduce the risk of injury, be extra careful when cleaning stairs. Make sure machine is secure and level.

# Operations

## Cleaning with attachments

Your deep cleaning machine may have come with a hose and at least one attachment for cleaning stairs, upholstery and more.

**1. Important!** If using to clean upholstery, check upholstery tags.

**a.** Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your deep cleaning machine. If the tag is coded with an "X" or an "S" (with a diagonal stripe through it) or says "Dry Clean Only", do not proceed with any deep cleaning machine. Do not use on velvet or silk. If manufacturer's tag is missing or not coded, check with your furniture dealer.

**b.** Check for colorfastness in an inconspicuous place.

**c.** If possible, check upholstery stuffing. Colored stuffing may bleed through fabric when wet.

**d.** Plan activities to allow upholstery time to dry.

**e.** Vacuum thoroughly to pick up loose debris and pet hair. Use a vacuum with a brush attachment and a crevice tool to clean in fabric folds.

**2.** Fill the clean water tank. Lift clean water tank from the base of machine.

**a.** Unscrew cap on top of the clean water tank. Fill tank to **FILL** line with clean, hot tap water. **Do not boil or microwave water.**

**b.** Measure BISSELL formula using cap on tank. Fill cap to line twice for each full tank of water. Always use genuine BISSELL formulas to maximize cleaning and for the safety of your machine.

**c.** Screw cap back onto clean water tank and place tank onto base of the machine.


**3.** Attach Hose

**a.** Connect solution hose to the hose connection point on unit, next to flow indicator. Insert hose and turn clockwise until locked into place.


**b.** Open hose latch on the front of the unit and insert hose into place. Turn clockwise until locked into place.

**4.** Attach the cleaning tool to the end of the hose.

**5.** Clean by pressing the red trigger to spray solution onto the area to be cleaned. Slowly move the tool back and forth over the soiled surface. Release the trigger to suction soiled water. Continue to clean in the area, working in small sections, until no more dirt can be removed. **Caution: Do Not Overwet**

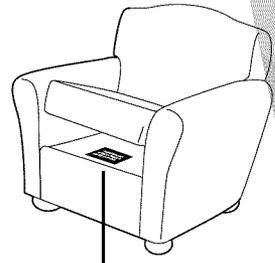

Manufacturer's tag

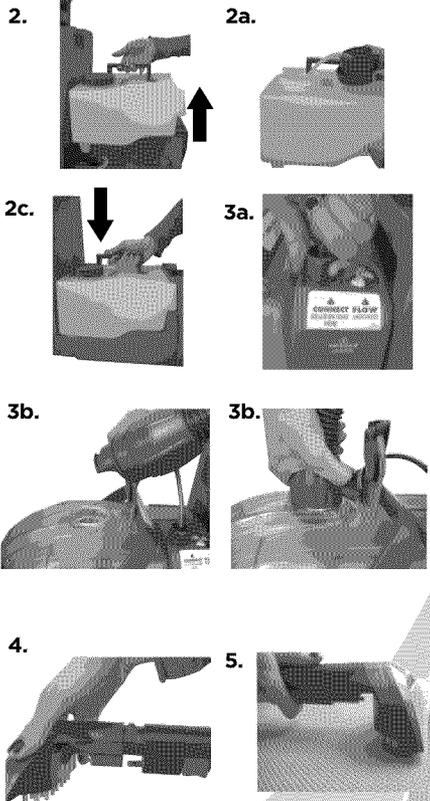

# Operations

6. Remove and rinse tool in clean running water. Let dry completely.
7. Empty dirty and clean water tanks and rinse following instructions on page 9 "Machine care " instructions 1 - 4.

## Stain Removal

---

**Do Not Delay!** Attending to an accident soon after it occurs ensures the most optimal clean. Leaving it for an extended period of time may cause it to set and become permanent

1. Blot up liquids with an absorbent cloth or paper towels. White materials are recommended because certain dyes may bleed and make the stain worse.
2. Gently scrape up any semi-solids with a spoon or spatula. Do not use a knife or other utensil with sharp edges because it could damage the carpet or upholstery.
3. If the area has dried, remove the remaining semi-solids and residue with a sweeper or vacuum.
4. Be sure to test any spot removal formulas in an inconspicuous area first. This is important as some dyes and materials could be damaged or discolored by cleaning solvents. If such a change should occur, try a different solution or call a professional.
5. If cleaning on Berber carpeting, gently run your machine over a hidden area. If no fuzzing occurs, continue cleaning in soiled area.
6. Using the BISSELL Tough Stain PreCleaner, spray evenly over soiled area. **DO NOT OVERWET.** Wait 3-5 minutes. Gently work the solution by blotting area with a clean, damp, color safe cloth.
7. Clean using the unit or the hose with attachment.



# Operations

## Machine storage

---

Once your cleaning is complete, make sure both the dirty and clean water tanks are emptied, rinsed out and dried before the next use.

**NOTE: Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is a danger of freezing. Freezing will damage internal components and void the warranty.**

## Machine care

---

For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete

1. Turn power OFF (O). Unplug the machine and wrap the power cord.
2. After emptying the clean and dirty water tanks, rinse them out with running hot tap water.
3. The top half of the dirty water tank can also be rinsed clean through the nozzle area.
4. To clean attachments, remove from hose and rinse in clean, running water and let dry. Clean the hose by removing it from the machine and let running tap water run through both ends.
5. After carpet is dry, vacuum again to remove hair and fuzz.

# Maintenance & Care

## Belt removal and replacement

1. Turn off the machine and unplug it from the outlet.
2. Remove the dirty and clean water tanks from the base of the machine.
3. While standing behind the unit, lay the unit on its' side (cord side up)
4. Looking at the bottom of unit, find the back center of the brush carriage where the carriage latch is located. It is between the brush assembly and the front wheels.
5. Pull brush carriage towards you with one hand until it stops, then pinch the carriage latch with other hand while pulling the carriage towards you. The carriage should swing out to access belt cover.
6. Remove three screws from cover. Lift and remove to access brush carriage.
7. Turn the belt inward towards the large pulley while lifting out.
8. Place new belt over small pulley first and then slip the belt over the large pulley.


**NOTE: Test the brush roll to make sure it spins freely before moving to the next step.**

9. Replace the brush carriage and screws.
10. Push brush carriage back into place making sure the carriage latch locks back into place.

## **WARNING**

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

3.

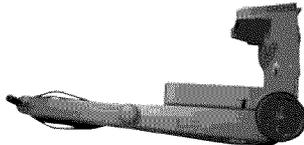


4.



5.




6A.

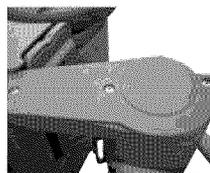

6B.




7.

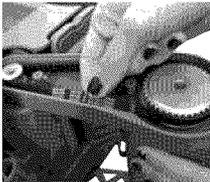


8.



9.

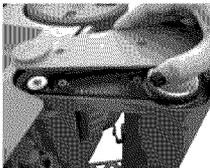

10.

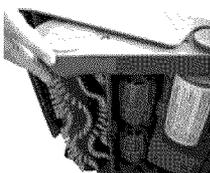

# Maintenance & Care


## Brush removal and replacement

1. Turn OFF (O) the machine and unplug from the outlet.
2. Remove the dirty and clean water tanks from the base of the machine.
3. While standing behind the unit, lay the unit on its' side (cord side down).
4. Looking at the bottom of the unit, find the center of the brush carriage where the carriage latch is located. It is between the brush assembly and wheels.
5. Pull the brush carriage towards you with one hand until it stops. Pinch the carriage latch with the other hand while pulling the carriage towards you. The carriage should swing out to access brush end cover.
6. Remove three screws from endcap. Pull endcap off to release brush roll.
7. With cover removed, the brush comes out easily by tilting the loose end out of the carriage.
8. To replace the brush roll back into the unit, place the large open end of the brush onto the carriage and tilt opposite end back into place.
9. With the brush sitting relatively straight up and down by itself, place endcap back on top and replace three screws. The brush will need to be held and centered to the cover while placing it back on.
10. Spin the brush by hand to make sure it turns freely with some minor resistance from the motor. Push brush carriage back into place with a light pull against the lock.

## WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.


3.

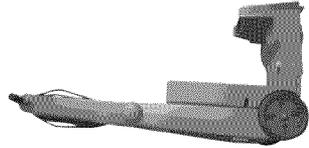


4.




5.

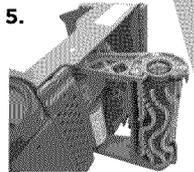


6A.

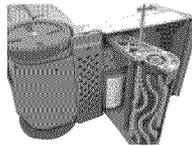


6B.

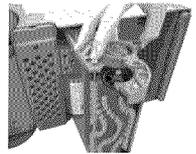


7.

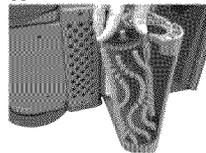


8.

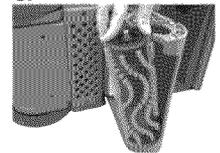

9.

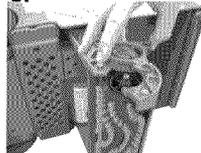

10.

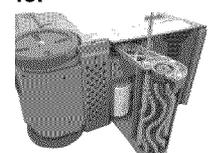

# Troubleshooting

## **WARNING**

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

<b>Problem</b>	<b>Possible causes</b>	<b>Remedies</b>
<b>Reduced spray or no spray</b>	Water tank may be empty	Fill clean tank with hot tap water
	Tank may not be seated completely	Turn power OFF (O). Remove and reseat tank
	Pump may have lost prime.	Turn power OFF (O) and then back ON (I). Wait one minute, then depress trigger
	Debris filter on base is clogged	Turn power OFF (O). Use hand to remove debris
<b>DirtLifter® PowerBrush does not turn</b>	The belt is off or broken	Turn power OFF (O) and unplug unit from outlet. Follow instructions on page 10
	The unit is in the upright position	Brushes only rotate when unit is reclined using the recline handle
	Circuit breaker on machine may have tripped	Turn the machine OFF (O) and unplug from outlet. Check to see if foreign object is caught in brush roll. Remove object. Plug machine in to reset circuit breaker
<b>Cleaner not picking up solution</b>	Tanks may not be seated properly	Turn the machine OFF (O). Pick up both the clean and dirty water tanks and reseat them so they fit snugly on the unit
	Clean water tank is empty	Check fluid levels in clean water tank and refill if necessary
	Dirty water tank has picked up the maximum amount	Empty dirty water tank.
	Red float “door” in the tank may have closed as a result of bumping an object or moving machine back and forth too quickly	Turn the machine OFF (O), allowing red float door to release into the open position. Turn the unit back ON (I) to continue cleaning. Be sure your forward and backward strokes are completed at a slower pace
	Front nozzle of machine is clogged	Turn the machine OFF (O). Use fingers to remove any debris from this area.
	Upper body filter is clogged	Turn the machine OFF (O). Use fingers to remove any debris from this area.

**Please do not return this product to the store.**

 
Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

**For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.**

# Replacement Parts

These items are available for your BISSELL BigGreen deep cleaner.  
Call 1-800-237-7691 or visit [www.BISSELL.com](http://www.BISSELL.com)

PART #	PART NAME		PART #	PART NAME	
203-7443	Hose assembly		203-7451	Float	
203-7452	Dirty tank bottom		203-7449	Dirty tank lid with handle	
203-7454	Clean tank assembly		203-7455	Clean tank cap assembly	
203-7457	Nozzle assembly		203-7458	Brush	
203-7459	Brush endcap		203-7460	Belt	

\*Not all parts are included with every model.

# Accessories

These items are available for your BISSELL BigGreen deep cleaner.  
Call 1-800-237-7691 or visit [www.BISSELL.com](http://www.BISSELL.com)

PART #	PART NAME		PART #	PART NAME	
203-6651	3" Tough Stain Tool		203-6652	Powered TurboBrush® Hand Tool	
203-6653	4" Upholstery Tool		203-6654	6" Stair Tool	
203-6655	Spraying Crevice Tool		203-0116	2-in-1 Crevice Tool	
203-7240	Oxy Gen2 Tool		62E5-2	DeepClean + Protect formula with Scotchgard™ Protector 60oz	
99K5-2	2X Pet Stain and Odor Formula with Scotchgard™ Protection 60 oz.		89Q5-2	2X Allergen Cleansing Formula 60 oz.	
78H6-3	2X Professional Deep Cleaning Formula with Scotchgard™ Protection 48 oz.		26V2	2X Spring Breeze Formula 60oz.	
4001	Tough Stain PreCleaner 22 oz.				

\*Not all parts are included with every model.

# Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

## Limited Five-Year Warranty

Subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for five years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

**Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.**

## \*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE FIVE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

**NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.**

# Service

## If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

## Website or E-mail:

[www.BISSELL.com](http://www.BISSELL.com)

## Or Call:

BISSELL Consumer Care  
1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

## Or Write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids, MI 49501

ATTN: Consumer Care

# Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.  
**You'll receive:**

## **BISSELL Rewards Points**

Automatically earn points for discounts and free shipping on future purchases.

## **Faster Service**

Supplying your information now saves you time should you need to contact us with questions regarding your product.

## **Product Support Reminders and Alerts**

We'll contact you with any important product maintenance reminders and alerts.

## **Special Promotions**

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

**Visit [www.BISSELL.com/registration](http://www.BISSELL.com/registration) now!**

## BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

### **Call:**

**BISSELL Consumer Care**  
1-800-237-7691

Monday - Friday      8 am - 10 pm ET  
Saturday              9 am - 8 pm ET  
Sunday                 10am - 7pm ET

### **Write:**

**BISSELL Homecare, Inc.**  
PO Box 3606  
Grand Rapids MI 49501  
ATTN: Consumer Care

## **Visit the BISSELL website: [www.BISSELL.com](http://www.BISSELL.com)**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: \_\_\_\_\_

Please record your Purchase Date: \_\_\_\_\_

**NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 19 for details.**

*We can't wait to hear from you!*

Rate this product and let us (and millions of your closest friends) know what you think!

**[www.BISSELL.com](http://www.BISSELL.com)**



©2013 BISSELL Homecare, Inc.  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 160-3692 Rev 12/13  
Visit our website at: [www.BISSELL.com](http://www.BISSELL.com)  
Scotchgard is a trademark of 3M