

KVJ0333
INSTRUCTIONS
INSTRUCTIONS
INSTRUCCIONES



KitchenAid

WELCOME TO THE WORLD OF KITCHENAID.

We're committed to helping you create a lifetime of delicious meals for family and friends. To help ensure the longevity and performance of your appliance, keep this guide handy. It will empower you with the best way to use and care for your product. Your satisfaction is our #1 goal. Remember to register your product online at www.kitchenaid.com or by mail using the enclosed Product Registration Card.



Join us in the kitchen at www.kitchenaid.com.

TABLE OF CONTENTS

EASY CLEAN JUICER SAFETY	
Important safeguards.....	4
Electrical Requirements.....	5
PARTS AND FEATURES	
Parts and accessories.....	6
ASSEMBLING THE EASY CLEAN JUICER	
Before first use.....	7
Assembling the Easy Clean Juicer parts.....	7
OPERATING THE EASY CLEAN JUICER	
Making juice.....	9
TIPS FOR GREAT RESULTS	
Speed Selector Table.....	10
Quick tips.....	10
RECIPES.....	11
CARE AND CLEANING	
Disassembling the Easy Clean Juicer.....	14
Cleaning the Easy Clean Juicer.....	16
Cleaning tips.....	17
TROUBLESHOOTING.....	17
WARRANTY AND SERVICE.....	18

PROOF OF PURCHASE & PRODUCT REGISTRATION

Always keep a copy of the itemized sales receipt showing the date of purchase of your Juicer. Proof of purchase will assure you of in-warranty service. Before you use your Juicer, please fill out and mail your product registration card packed with the unit, or register on-line at www.kitchenaid.com. This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. This card does not verify your warranty. Please complete the following for your personal records:

Model Number _____

Serial Number _____

Date Purchased _____

Store Name _____

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

State of California Proposition 65 Warnings:

WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Always make sure Juicer lid is securely closed before motor is turned on. Do not remove the lid while Juicer is in operation.
3. Be sure to turn the Juicer OFF and unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Make sure the motor stops completely before disassembling.
4. Do not put your fingers or other objects into the feed tube while it is in operation. If food becomes lodged in opening, use food pusher or another piece of fruit or vegetable to push it down. Never push by hand. Always use the food pusher provided. When this method is not possible, turn the motor off and disassemble Juicer to remove the remaining food.
5. Avoid contacting moving parts.
6. Do not use outdoors.
7. Close supervision is necessary when any appliance is used by or near children.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.

EASY CLEAN JUICER SAFETY

9. Do not use the appliance if the ceramic disc or rotating parts are damaged. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
10. To protect against risk of electrical shock, do not put Juicer's main body in water or other liquid.
11. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock or injury.
12. Do not let cord hang over edge of table or counter.
13. Do not operate Juicer without the pulp container in place.

SAVE THESE INSTRUCTIONS

Electrical requirements

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 120 Volts A.C. only



Frequency: 60 Hz

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

PARTS AND FEATURES

Parts and accessories

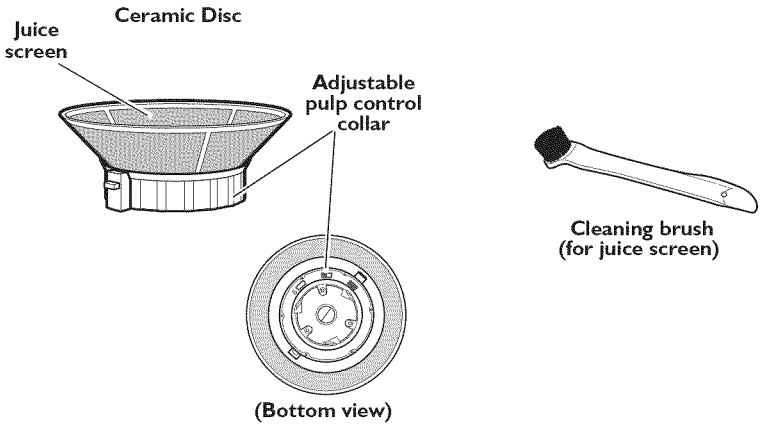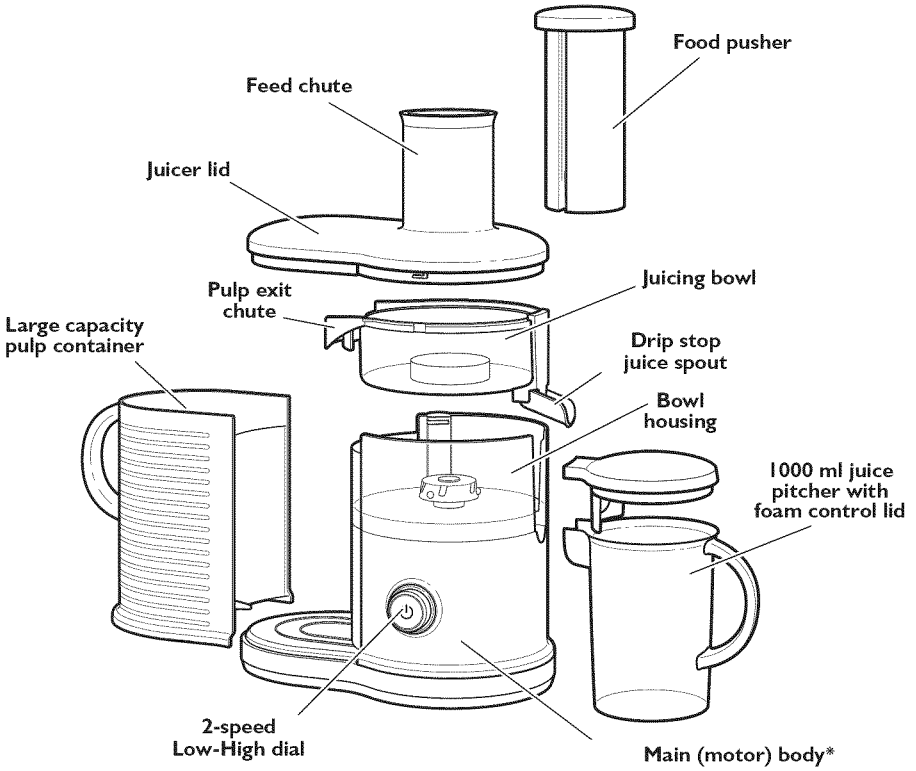


*Wipe clean only. See "Care and cleaning" section for more information.

ASSEMBLING THE EASY CLEAN JUICER

Before first use

Your Easy Clean Juicer will come fully assembled in the box. Before using your Juicer for the first time, remove the pulp container first, and then disassemble the rest of the unit. The pulp container must be pulled out from the juicer before the lid can be removed. Once disassembled, wash all parts and accessories either by hand or in the dishwasher. See “Care and Cleaning” section for more detail.

NOTE: This product is designed for household use only.

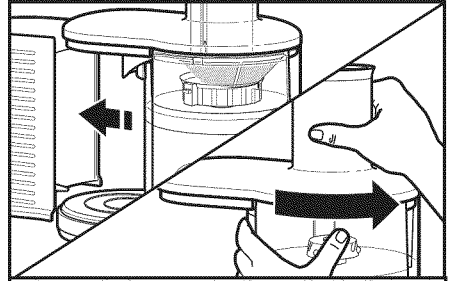


Remove pulp container. Grasp the feed chute on the Juicer lid and turn it counter-clockwise to remove it from the Juicer.


English

Assembling the Easy Clean Juicer parts

IMPORTANT: Place Juicer on a dry, level countertop with the 2-speed dial facing you. Do not plug in the Juicer until it is completely assembled.

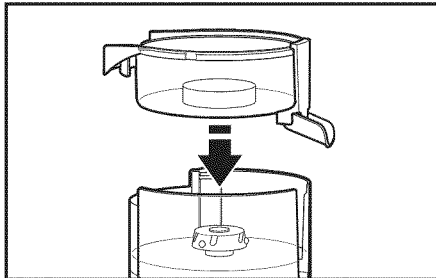


1 Place the juicing bowl inside of the bowl housing.

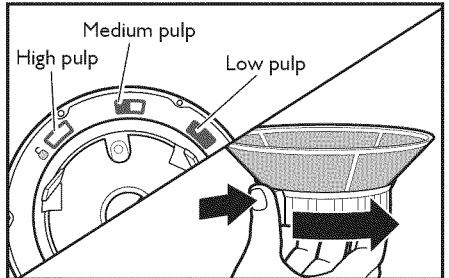


2 Adjust the pulp control collar to the appropriate pulp setting for High, Medium or Low pulp flow. To adjust, push in button on collar and rotate until you hear it lock into place at the desired setting.


ASSEMBLING THE EASY CLEAN JUICER

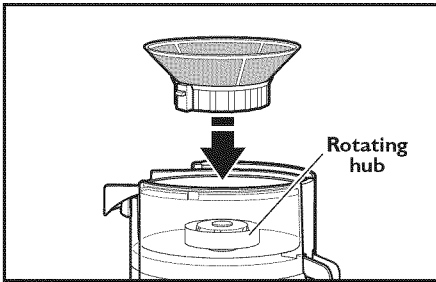


- 3 Place the ceramic disc inside the juicing bowl on top of the rotating hub. Rotate the disc until the tabs on the inside of the collar match up with the notches on the hub and the disc settles easily into place.

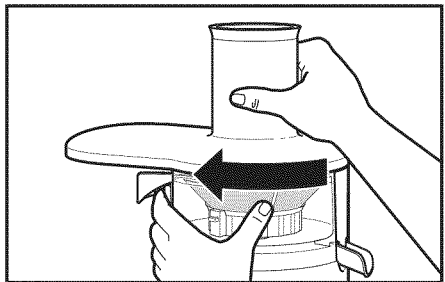


- 4 Place the juicer lid over the bowl housing so that the long lid section is slightly to the right of the pulp exit chute. Grip the feed chute, turning the lid clockwise until it locks into place.

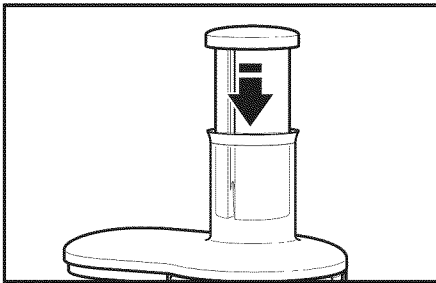

- 5 Slide the food pusher down the feed chute, aligning the groove in the food pusher with the protruding rib on the inside of the feed chute.

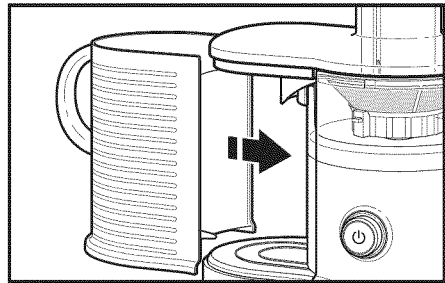

- 6 Slide the pulp basket into position under the long lid section until it rests against the motor body.

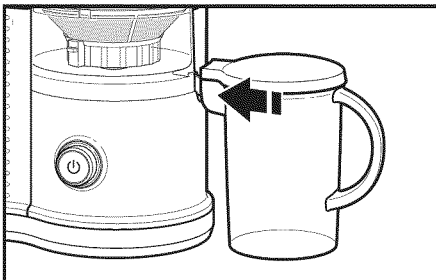

- 7 Place juice pitcher under the juice spout. Make sure juice spout is in the down position.

NOTE: The lid of the juice pitcher comes equipped with a foam guard. To include the foam with your juice, simply remove the lid before pouring juice into your glass.

OPERATING THE EASY CLEAN JUICER

Making juice

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

⚠ WARNING



Rotating Blade Hazard

Always use food pusher.


Keep fingers out of openings.


Keep away from children.


Failure to do so can result in amputation or cuts.

Before operating your Easy Clean Juicer, make sure the Juicer is assembled correctly, and the adjustable pulp collar is set to the appropriate pulp level for your recipe (see “Assembling the Easy Clean Juicer”).

Plug the power cord into a grounded 3-prong outlet.

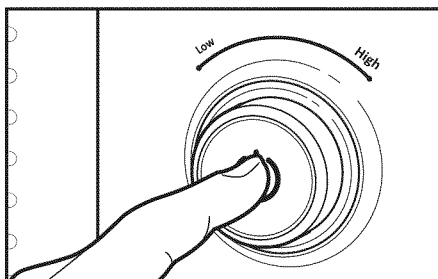

1 Adjust the speed dial to the desired setting. See the Speed Selector Table in the “Tips for great results” section for more information. Press  (Power button) to turn on Juicer.

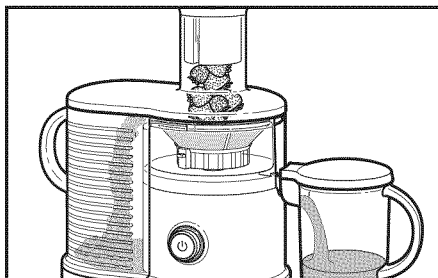

2 With motor running, place food into feed chute using the food pusher. As food is processed, the extracted juice will flow into the juice pitcher, and the separated pulp will flow into the pulp basket.

NOTE: Do not allow the pulp basket to overfill while juicing, as it may affect operation of the Juicer.

To empty pulp basket while juicing, first turn off Juicer by pressing the Power button. Once the power is off, remove the pulp basket and empty its contents. Make sure to replace the empty pulp basket before turning power back on and continuing to juice.

TIP: To prevent drips to your counter, turn up the juice spout when removing the juice pitcher.

TIPS FOR GREAT RESULTS

Speed selector table

Food Item	Dial Speed
Apples	High
Apricots (pit removed)	Low
Beets (trimmed)	High
Blueberries	High
Broccoli	High
Brussels sprouts (trimmed)	High
Carrots	High
Cauliflower	High
Celery	High
Cucumber (peeled)	High
Fennel	High
Grapes (seedless)	High
Kale	High
Kiwi Fruit (peeled)	Low

Food Item	Dial Speed
Mangoes (peeled, pit removed)	Low
Melons (peeled)	Low
Nectarines (pit removed)	High
Oranges (peeled)	High or Low
Peaches (pit removed)	Low
Pears (stalks removed)	High for hard or Low for soft
Pineapple (peeled)	Low
Plums (pit removed)	Low
Raspberries	Low
Spinach	High
Strawberries	High
Tomatoes	High
Watermelon (peeled)	Low

Quick tips

Before juicing:

- Thoroughly wash your fruits and vegetables, making sure they are free of soil, leaves, and stems. Small leaves, such as on strawberries, do not have to be removed.
- To avoid damaging the juicer, do not juice frozen fruits or vegetables. For optimal performance, always use fresh fruits and vegetables.
- Large seeds or pits must be removed prior to juicing to avoid damage to the ceramic disk. This includes fruits such as; nectarines, peaches, mangoes, apricots, plums, cherries, etc.
- Always peel fruits with hard or inedible skins. Examples include mangoes, citrus fruits, melons, and pineapples.
- Some vegetables, such as cucumbers or yellow squash, do not have to be peeled first, depending on the softness of the skin and recipe requirements. Leaving the peels on will change the color and flavor of the finished juices.

After juicing:

- There may be pieces of fruit or vegetables remaining in the pulp after juicing. These should be removed prior to using the pulp in any recipes.
- Saved pulp can be used for other recipes, as compost for your garden, or can be discarded.

For easy cleanup:

- As you juice, clean parts to avoid dried on juice and pulp.
- After each use, immediately rinse removable parts in hot water to remove pulp and juice. It may be necessary to use the cleaning brush to remove pulp from the screen. Let parts air dry.

JUICES

Cranberry Apple Twist

Makes 3 servings

- 2 apples
- $\frac{3}{4}$ cup cranberries
- $\frac{1}{2}$ cucumber
- $\frac{1}{2}$ lemon, peeled
- 1 inch fresh ginger, peeled

Juice ingredients together. Stir; serve immediately.

Garden Fresh Juice

Makes 3 servings

- 3 tomatoes, stemmed
- 3 carrots, ends trimmed
- 2 radishes

Juice ingredients together. Stir; serve immediately.

Mojo Mojito Juice

Makes 3 servings

- 1 cucumber
- 1 pear
- 1 cup fresh mint
- $\frac{1}{2}$ lime, peeled

Juice ingredients together. Stir; serve immediately.

Pineapple Mango Cucumber

Makes 2 servings

- $\frac{1}{4}$ pineapple, peeled
- 1 mango, peeled and pitted
- 1 cucumber
- $\frac{1}{2}$ lemon, peeled

Juice ingredients together. Stir; serve immediately.

Daily Green

Makes 2 servings

- 1 green apple
- 3 leaves kale
- $\frac{1}{2}$ cucumber
- $\frac{1}{2}$ lemon, peeled
- 2 stalks celery
- 1 inch fresh ginger, peeled

Juice ingredients together. Stir; serve immediately.

Melon Raspberry Medley

Makes 2 servings

- $\frac{1}{8}$ honeydew melon, rind removed
- $\frac{1}{8}$ seedless watermelon, rind removed
- $\frac{1}{3}$ cup raspberries
- Ice cubes (optional)

Juice ingredients together. Stir; serve immediately over ice, if desired.

Morning Veggie juice

Makes 2 servings

- 2 tomatoes
- $\frac{1}{2}$ cucumber
- 8 green beans
- $\frac{1}{2}$ lemon, peeled
- Dash hot pepper sauce

Juice first 4 ingredients together. Stir in hot pepper sauce until well blended; serve immediately.

Pomegranate Lime Coconut

Makes 2 servings

- 1 pomegranate, peeled
- $\frac{1}{2}$ cucumber
- 1 lime, peeled
- $\frac{1}{4}$ cup coconut water

Juice first 3 ingredients together. Stir in coconut water until well blended; serve immediately.

RECIPES

Ruby Apple Stinger

Makes 2 servings

- 2 beets
- 2 carrots, ends trimmed
- ½ apple
- 1 inch fresh ginger, peeled
- ¼ lemon, peeled

Juice ingredients together. Stir; serve immediately.

Tropical Veggie Juice

Makes 2 servings

- ⅙ pineapple, peeled
- 5 leaves kale
- ½ cucumber
- ½ cup coconut water

Juice first 3 ingredients together. Stir in coconut water until well blended; serve immediately.

RECIPES USING PULP

Citrus Carrot

Makes 2 servings

- 1 orange, peeled
- ½ lemon, peeled
- 2 carrots, ends trimmed

Juice ingredients together. Stir; serve immediately.

Note: Use the leftover pulp from this juice to make Carrot and Oat Muffins. Juice the orange and carrots first and measure ½ cup pulp for the muffins before juicing the lemon. For pulp with a better consistency, peel the carrots before juicing them and remove any large pieces of orange rind.

Carrot and Oat Muffins

Makes 12 muffins

- 2 eggs
- ½ cup milk
- ½ cup unsweetened applesauce
- 2 tablespoons canola oil
- ½ cup shredded carrot (1 medium carrot)
- ½ cup orange and carrot pulp from Citrus Carrot
- ¾ cup old-fashioned oats
- ¾ cup all-purpose flour
- ¾ cup whole wheat flour
- ½ cup sugar
- 1 ½ teaspoons baking powder
- ¾ teaspoon ground cinnamon
- ½ teaspoon baking soda
- ½ teaspoon salt
- ¼ cup finely chopped walnuts (optional)

Preheat oven to 350°F.

Spray 12 standard (2½-inch) muffin cups with nonstick cooking spray.

Whisk eggs in a medium bowl. Whisk in milk, applesauce and oil until blended. Stir in carrot and juice pulp. In a large bowl, combine oats, all-purpose flour, whole wheat flour, sugar, baking powder, cinnamon, baking soda and salt; mix well. Add applesauce mixture; stir just until moistened. Do not overmix.

Spoon batter evenly into prepared muffin cups. Sprinkle 1 teaspoon walnuts over each muffin, if desired.

Bake 20 to 22 minutes or until muffins are golden brown. Cool in pan 5 minutes; remove to wire rack to cool completely.

Carrot Cuke Parsnip Juice

Makes 2 servings

- ½ cucumber
- 1 lemon, peeled
- 2 parsnips, ends trimmed
- 2 carrots, ends trimmed

Juice ingredients together. Stir; serve immediately.

NOTE: Use the leftover pulp from this juice to make Vegetarian Chili with Brown Rice. Juice the cucumber, parsnips and carrots first and measure 1 cup pulp for the chili before juicing the lemon. For pulp with a better consistency, peel the parsnips and carrots before juicing them, if desired.

Vegetarian Chili with Brown Rice

Makes 6 servings

- 1 tablespoon canola oil
 - 1 onion, chopped
 - 1 green bell pepper, diced
 - 1 red bell pepper, diced
 - 1 stalk celery, diced
 - 1 jalapeño pepper, minced
 - 1 clove garlic, minced
 - 2 cups vegetable broth
 - 1 can (about 14 ounces) diced tomatoes
 - 1 cup cooked brown rice
 - 1 cup canned pinto beans, rinsed and drained
 - ½ teaspoon dried oregano
 - ½ teaspoon chipotle chili powder
 - ½ teaspoon salt
 - ¼ teaspoon black pepper
 - ¼ teaspoon ground cumin
 - 1 cup pulp from Carrot Cuke Parsnip
- Shredded Cheddar cheese

Heat oil in large saucepan over medium-high heat. Add onion, bell peppers, celery, jalapeño and garlic; cook and stir 7 minutes or until vegetables are softened.

Add broth, tomatoes, rice, beans, oregano, chili powder, salt, black pepper and cumin; bring to a boil over high heat. Reduce heat to medium; cover and cook 15 minutes or until vegetables are tender. Stir in juice pulp. Cook, uncovered, 10 minutes or until thickened.

Ladle chili into bowls; top each serving with cheese.

RECIPES

Sweet Pepper Carrot Juice

Makes 2 servings

- 1 red bell pepper, stemmed
- 1 yellow bell pepper, stemmed
- 3 carrots, ends trimmed

Juice ingredients together. Stir; serve immediately.

NOTE: Use the leftover pulp from this juice to make Penne Pasta with Chunky Tomato Sauce and Spinach. For pulp with a better consistency, peel the carrots before juicing them, if desired.

Penne Pasta with Chunky Tomato Sauce and Spinach

Makes 4 to 6 servings

- 4 cups uncooked whole wheat or multigrain penne pasta
- 1 jar (24 ounces) spicy marinara sauce
- 1 large ripe tomato, chopped (about 1½ cups)
- 4 cups packed baby spinach or torn spinach leaves (4 ounces)
- ½ cup pulp from Sweet Pepper Carrot
- ¼ cup grated Parmesan cheese
- ¼ cup chopped fresh basil



Cook pasta according to package directions.

Meanwhile, heat marinara sauce and tomato in medium saucepan over medium heat 3 to 4 minutes or until hot and bubbly, stirring occasionally. Remove from heat; stir in spinach and juice pulp.


Drain pasta; return to saucepan. Add sauce mixture; toss to combine. Divide evenly among serving bowls; top with cheese and basil.

CARE AND CLEANING


Disassembling the Easy Clean Juicer

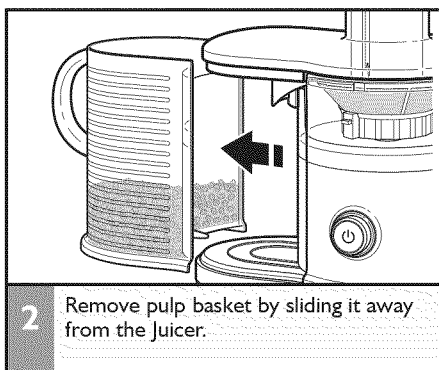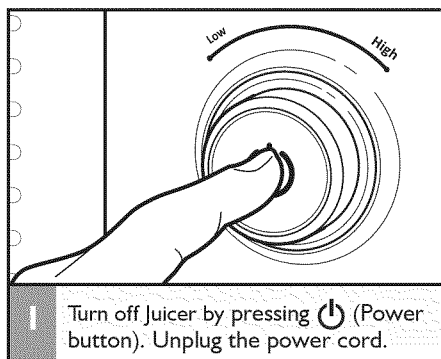


CARE AND CLEANING

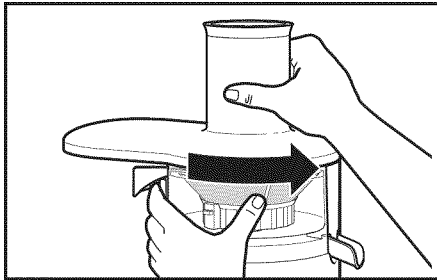

3 Grasp the feed chute on the Juicer lid and turn it counter-clockwise to unlock and remove it from the Juicer.

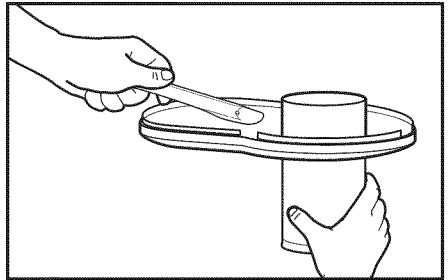


4 There may be pulp stuck to the underside of the lid. Use the flat side of the cleaning brush to carefully scrape the stuck pulp into the pulp container.

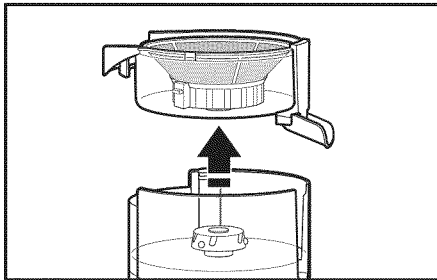


5 Gently lift juicing bowl out of bowl housing with ceramic disc still in place.

NOTE: For easy cleanup, it is recommended to remove the ceramic disc from the juicing bowl over sink.

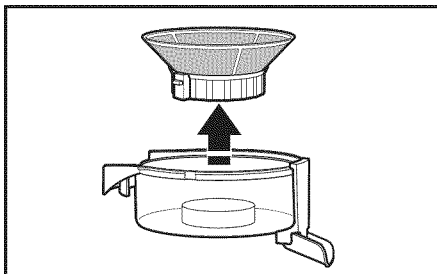

6 Lift ceramic disc out of juicing bowl.

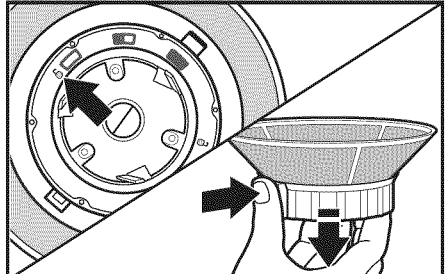


7 Remove adjustable pulp collar from the juice screen for cleaning: Turn collar to "unlock." Press spring button and pull collar down, removing it from the screen.

CARE AND CLEANING


Cleaning the Easy Clean Juicer

IMPORTANT: To avoid damaging the Juicer, do not wash or immerse the motor body in water or other liquids. All other parts are top rack dishwasher safe.

Before cleaning, make sure Juicer has been turned off, unplugged, and disassembled correctly. See “Disassembling the Easy Clean Juicer.”

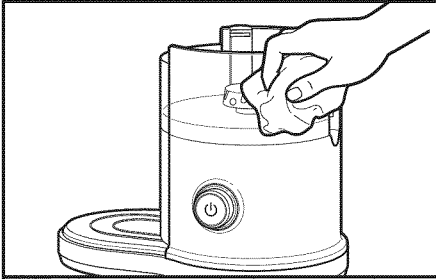


- 1 Wipe the motor body and power cord with a soft, damp cloth. Dry thoroughly. Do not use abrasive cleansers or scouring pads.

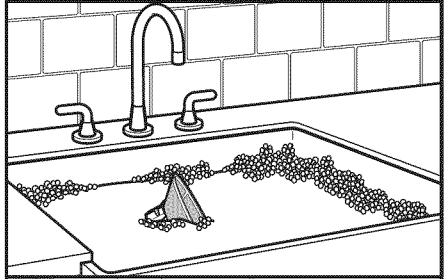

- 2 Soak juicer screen in hot, soapy water for 10 minutes. Hold screen under running water and use cleaning brush to clean out any stuck food or residue in the screen.

NOTE: The fine mesh of the juice screen may become clogged if pulp is left to dry on it. Clean immediately after usage.

After cleaning the juice screen, check to see if the mesh holes are clear of debris by holding it up towards a light. If debris remains, repeat Step 2.

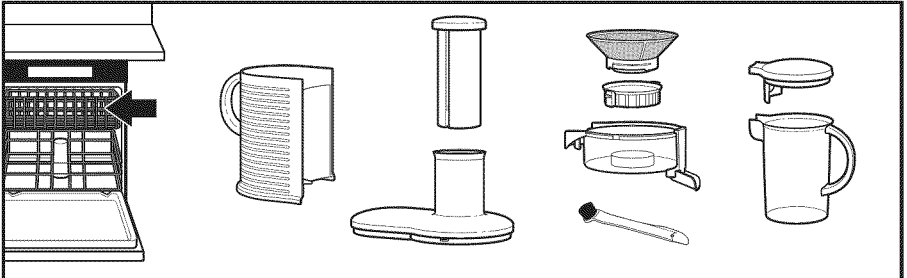

- 3 Ceramic Disc and all parts other than motor body may be washed in warm, sudsy water or placed in the top rack of the dishwasher for cleaning.

CARE AND CLEANING

Cleaning tips

- After each use, immediately rinse all removable parts in hot water to remove pulp and juice. It may be necessary to use the cleaning brush to remove pulp from the screen. Let parts air dry.
- To prevent staining of plastic parts from brightly colored fruit and vegetables, wash parts immediately after use.
- If discoloration from ingredients occurs, soak plastic parts in a solution of water and 10% lemon juice. You can also clean them with a non abrasive cleanser. Do not soak plastic parts or ceramic disc in bleach to remove stains.

TROUBLESHOOTING

Juicer does not operate when turned on

- Check to make sure the juicer has been assembled correctly, and the lid is in the locked position.

Motor sounds strained during operation

- The wrong speed was selected for ingredients being juiced, putting excess strain on motor.
- Refer to the Speed Selection Table in the “Tips for great results” section to determine the correct juicing speed for your ingredients.

Build-up of excess pulp in the ceramic disk

- Stop the juicing process and follow the directions in the “Care and cleaning” section to disassemble and clean the juicer lid. Scrape off pulp, reassemble, and resume juicing.
- Once excess pulp is removed, try alternating between soft and hard vegetables and fruit.

Pulp is too wet; not enough juice being extracted

- Juicing screen may be clogged. Follow directions in the “Care and cleaning” section to disassemble juicer and clean the screen.
- Check your pulp setting. You may need to change it based on your preferred juice thickness.

Juice is spraying out of the spout

- Try a slower speed and push ingredients more slowly through the feed tube.
- Make sure juice pitcher is pushed close to the juicer and fits snugly against it.

WARRANTY AND SERVICE

KitchenAid® Easy Clean Juicer Warranty for the 50 United States, the District of Columbia, Puerto Rico, and Canada

This warranty extends to the purchaser and any succeeding owner for Easy Clean Juicers operated in the 50 United States, the District of Columbia, Puerto Rico, and Canada.

Length of Warranty:	One Year Full Warranty from date of purchase.
KitchenAid Will Pay for Your Choice of:	Hassle-Free Replacement of your Easy Clean Juicer. See the next page for details on how to arrange for service, or call the Customer eXperience Center toll-free at 1-800-541-6390 . OR The replacement parts and repair labor costs to correct defects in materials and workmanship. Service must be provided by an Authorized KitchenAid Service Center.
KitchenAid Will Not Pay for:	<ul style="list-style-type: none">A. Repairs when Easy Clean Juicer is used in other than normal single family home use.B. Damage resulting from accident, alteration, misuse or abuse.C. Any shipping or handling costs to deliver your Easy Clean Juicer to an Authorized Service Center.D. Replacement parts or repair labor costs for Easy Clean Juicer operated outside the 50 United States, District of Columbia, Puerto Rico, and Canada.
DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES IMPLIED WARRANTIES, INCLUDING TO THE EXTENT APPLICABLE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED TO THE EXTENT LEGALLY PERMISSIBLE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO ONE YEAR, OR THE SHORTEST PERIOD ALLOWED BY LAW. SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS OR EXCLUSIONS ON HOW LONG AN IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. IF THIS PRODUCT FAILS TO WORK AS WARRANTED, CUSTOMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT ACCORDING TO THE TERMS OF THIS LIMITED WARRANTY. KITCHENAID AND KITCHENAID CANADA DO NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.	



Hassle-Free Replacement Warranty – 50 United States, District of Columbia, and Puerto Rico

We're so confident the quality of our products meets the exacting standards of KitchenAid that, if your Easy Clean Juicer should fail within the first year of ownership, KitchenAid will arrange to deliver an identical or comparable replacement to your door free of charge and arrange to have your original Juicer returned to us. Your replacement unit will also be covered by our one year limited warranty.

If your Easy Clean Juicer should fail within the first year of ownership, simply call our toll-

free Customer eXperience Center at **1-800-541-6390** Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address. (No P.O. Box numbers, please.)

When you receive your replacement Easy Clean Juicer, use the carton, packing materials, and prepaid shipping label to pack up your original Easy Clean Juicer and send it back to KitchenAid.

Hassle-Free Replacement Warranty – Canada

We're so confident the quality of our products meets the exacting standards of the KitchenAid brand that, if your Easy Clean Juicer should fail within the first year of ownership, KitchenAid Canada will replace your Easy Clean Juicer with an identical or comparable replacement. Your replacement unit will also be covered by our one year limited warranty.

If your Easy Clean Juicer should fail within the first year of ownership, simply call our

toll-free Customer eXperience Center at **1-800-807-6777** Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address.

When you receive your replacement Easy Clean Juicer, use the carton, packing materials, and prepaid shipping label to pack up your original Easy Clean Juicer and send it back to KitchenAid.

Arranging for Service after the Warranty Expires, or Ordering Accessories and Replacement Parts

In the United States and Puerto Rico:

For service information, or to order accessories or replacement parts, call toll-free at **1-800-541-6390** or write to: Customer eXperience Center, KitchenAid Small Appliances, P.O. Box 218, St. Joseph, MI 49085-0218

Outside the United States and Puerto Rico:

Consult your local KitchenAid dealer or the store where you purchased the Easy Clean Juicer for information on how to obtain service.

For service information in Canada:

Call toll-free **1-800-807-6777**.

For service information in Mexico:

Call toll-free **01-800-0022-767**.

KitchenAid®
FOR THE WAY IT'S MADE®

®/™ © 2014 KitchenAid. All rights reserved. Used under license in Canada.
®/™ © 2014 KitchenAid. Tous droits réservés. Utilisé sous licence au Canada.
®/™ © 2014 KitchenAid. Todos los derechos reservados. Usada en Canadá bajo licencia.