
Ersatzteilinformation Sparepart information	702_58300000174540_ABZ_EN_A
	7/24/2013
	Page 1/2

00752018

EN Installing dishwasher junction boxes


Each dishwasher comes with a junction box (with power cord) to be installed in a cabinet next to the dishwasher cutout. It can be installed by an installer, servicer, technician, electrician or other qualified professional and is intended for hard-wired installations.

The junction box is easily installed in the adjacent cabinet, left or right, using screws (provided by the installer). It must not be installed in the dishwasher cutout. When it's properly installed, no other electrical box is required.

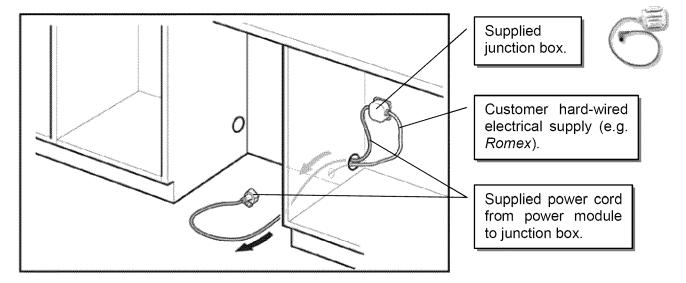

NOTE: Screws are not provided to mount the junction box inside the adjacent cabinet.


- The customer hard-wired electrical supply, supplied power cord and water / drain lines are to be fed together through a 2-1/2" (63.5mm) round hole in the adjacent cabinet. If the cabinet doesn't have a hole, one must be drilled into it.
- If the customer hard-wired supply isn't prepared for connecting to the terminal box in the supplied junction box, strip the outer casing to expose 2" 3" (51 76 mm) of inner wires and then strip 3/8" 1/2" (10 13 mm) of insulation from each wire.
- The customer hard-wired supply must be fed through the supplied strain relief when it's fed into the junction box. The strain relief must be tightened to secure the customer supply.

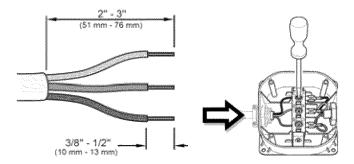


Ersatzteilinformation	702_58300000174540_ABZ_EN_A
Sparepart information	7/24/2013
Sparepart information	Page 2/2

00752018


• Attach the customer supply wires to the terminal block (below left): black − L (hot), white − N (neutral) & green − ½ (ground). Unscrew terminal screws, but don't remove them to avoid damage. Insert the wires into the terminals and tighten the screws onto the wires snugly, but not too tightly. Attach the junction box cover with the four (4) supplied screws (below right).

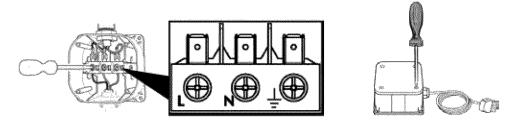

• Plug the dishwasher power cord into the rear of the power module until it "clicks".

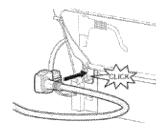

An optional power cord is available, which plugs into the power module and replaces the junction box with cord provided with the dishwasher (SMZPC002UC – service # 00747210). To install it, feed it through the adjacent cabinet hole, plug it into the rear of the power module until it "clicks" and plug it into the customer receptacle (outlet).

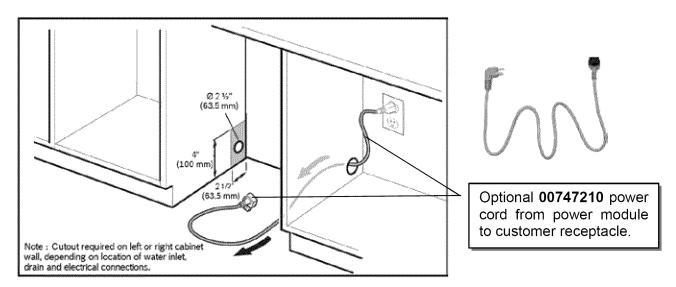



<u>CAUTION</u>: Follow the dishwasher installation instructions carefully and make sure all installations are done according to national and local codes.