

Channel Bar Press the OK button on the remote control, when OSD (On Screen display) is not used, the channel bar will appear on the bottom of the screen. It displays the current channel's information. The following list describes the items on the channel bar.

D14-1	ATSC-1	A2
Air 4:3	English Sat Jan-01 07:10 Sat	Air Stereo 480i CC Jan-01 07:10 Sat
DTV		

D14-1/A2 If the channel is analog, A is displayed. If it's a digital channel, D is displayed. For example, in the pictures above, A2 is an analog channel, and D14-1 is a digital channel (- 1 is a sub-channel number). Display the current TV signal type.

English/Stereo Display whether the current channel is being broadcasted in stereo or mono. If the current channel is digital, this space will be SAP (Second Audio Program) language.

480i/480i Display the signal resolution.

4:3/CC Display the screen aspect ratio. Display the CC status (on or off).

Jan-01 07:10 Sat Display current program date and time. If the channel is Dolby Digital AC-3, the double-D symbol is displayed.

Note: Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Adjusting Volume

Press the VOL+VOL- button on the remote control to adjust the volume. If you want to switch sound off, press MUTE. When OSD (On Screen Display) is not used, the arrows left/right can also work as VOL+VOL- buttons.

EPG (Electronic Program Guide)

Press EPG button on the remote control, the electronic program guide will appear in the center of the screen. The electronic program guide gives the TV program playing project. You can use left/right arrows to switch pages.

OSD Menu Operations

Adjust the OSD Screen










 
 









The OSD (On Screen Display) menu enables you to approach to the TV functions.

To use OSD menu system, press OK button on remote control, then use left/right arrow to highlight an option from QUICK, CHANNEL, PICTURE, AUDIO, TIME, SETUP or LOCK and press OK/down button.







 
 
 

 
 
 
 
 
 
 
 
 
 
Press the up and down arrow to move to a different option within each menu. If necessary, press OK or right arrow to display the choices of the option you've highlighted. If available, use the text at the bottom of each screen for help. To return to the previous menu, press the MENU button.

To exit the OSD menu:

- Press the EXIT button. The menu will clear from the screen.
- Press the MENU button repeatedly until the menus disappear.

      	      
PICTURE	QUICK MENU
<ul style="list-style-type: none">Picture Mode Color Mode Screen Size Noise Reduction Dynamic Contrast Video Style	<ul style="list-style-type: none">Closed Caption Sleep Timer Channel List
  	  

Channel Menu
The Channel Menu enables you to search, view and edit channels. It is available in TV mode only. Press MENU and choose CHANNEL from the Main menu. Press the OK/down button to proceed to CHANNEL menu.

      	      
CHANNEL	Auto Scan
	<ul style="list-style-type: none">Show / Hide Channel List Signal Type DTV Signal
  	  

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are shown below.

Auto Scan
Execute an auto channel search.

Show / Hide
Enter sub-menu and press OK to show or hide the TV channel.


Channel List
Display a channel list. It shows the current channels. Press OK to go to TV channel directly in sub-menu.

Signal Type
Select your TV signal type: Air or Cable.

DTV Signal(In DTV Mode)
Display how strong your TV signal is.

Picture Menu
The Picture Menu contains menus and controls to configure the way the picture appears. The Picture Menu options apply to the video for the main TV and VIDEO INPUT selections. All picture options can be applied to each input.

Press MENU on the remote. Select Picture from the Main menu. Press MENU on the remote. Select Picture from the Main menu. Press the OK/down button to proceed to PICTURE menu.

      	      
AUDIO	Sound Mode
	<ul style="list-style-type: none">Audio Language Analog Audio Output Digital Audio Output Surround Audio Only
  	  

How do I tell an analog channel from a digital channel?
Press the OK button to display the Channel Bar. when OSD (on-screen display) is not used, Look at the top right corner of the screen. An "A" is displayed for an analog channel. A "D" is displayed for a digital channel.

Note: Since the analog TV in America has been cut off, we reserve analog TV function only for some unexpected use.

Why are there bars on my screen, and can I get rid of them?
Most digital video is sent in a 16:9 format which fills your screen, but is sometimes sent in 4:3 which does not fill your screen. It depends on how the station or device connected to your TV is formatting the video. If there are bars on the screen, Check Screen size in the picture mode to try a different format that may eliminate the bars. Some bars can't be removed because of the way the format is sent by the broadcaster. The format changes as you choose screen size type in the picture mode and the format type is displayed at the bottom of the screen. For more information on screen size, go to page 9.

Why does channel search find a lot of channels, but when I try to tune to them, there's nothing there?
Some channels don't carry programming, such as video On Demand. When channels are unavailable, your TV screen is blank or appears like snow. You probably want to remove these channels from your channel list. Remove these in the Channel List Menu. Go to page 8 for more information.

There is no sound, but the picture is fine.

- The sound might be muted. Try pressing the MUTE button to restore sound.
- For using AV or Component, remember to connect the device's left and right audio output correctly. The left channel cable is white and the right channel cable is red. Please match the cables and jacks according to their colors.

- The sound settings may not be set correctly. Go to page 9 for more information.

- If your audio source has only one jack or is a (mono) audio source, make sure you have plugged the connection into the Audio L jack (white) on the TV.

The buttons on the side panel don't work.

- The side panel may be locked (disabled). Use the remote control to turn on the TV.

- Select the Keypad Lock function in the PARENTAL control Menu and press OK to uncheck the locking status.

- Unplug the TV from the AC power for 10 minutes and then plug it back. Turn the TV on and try again.

The TV turns off unexpectedly.

- The electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn the TV on again.

If this happens frequently, the voltage in your house may be abnormal.

Consult the other electronic equipment in your home can't work normally, consult a qualified service personnel.

Can't select a certain channel.

- The channel may be blocked or not approved in the PARENTAL control Menu.

- The channel may be skipped in channel list in CHANNEL Menu. Check the blocking and skipping status of channel.

The stereo sound performance is bad.

- Make sure the HDMI device (DVD, video gamer, etc.) is turned on and the cables are firmly connected.

If problems still occur, turn off your device and reconnect it. Reset the power by unplugging the power cord and plugging it again.

- If a "No Signal" message appears on screen , the HDMI device isn't responding. Contact the manufacturer of the HDMI device for further assistance.

- If you have black bars on each side of your picture (which means the TV can not display a full-screen image), the device you connected might have a switch or a menu option allowing you to change the picture quality output that will fix this. Choose either 720p or 1080i.

The sound is fine, but the picture is poor.
-If you can only get black and white pictures from external device that you've connected to your TV, maybe it is due to the video

cables is not connected well, or they are connected wrongly.

      	      
PICTURE	Sound Mode
	<ul style="list-style-type: none">Picture Mode Color Mode Screen Size Noise Reduction Dynamic Contrast Video Style
  	  

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are shown below. If available, use the text at the bottom of each screen for help.









 
 
 

 



 


 
Picture Mode
Choose the preset visual mode of your TV: Standard, Movie, User, Dynamic, Power Saving (Only in User mode you can adjust Brightness, Contrast, Color, Tint and Sharpness. Changes to Power Saving mode can decrease the power consumption).

• **Brightness:** Adjust the brightness of picture.
• **Contrast:** Adjust the contrast of color.
• **Color:** Adjust the richness of color.

• **Tint:** Adjust the balance between red and green level (only available in NTSC signal).

• **Sharpness:** Adjust the sharpness level of picture.

Note: Picture Mode is available in TV mode only. Press MENU and choose CHANNEL from the Main menu. Press the OK/down button to proceed to CHANNEL menu.

      	      
PICTURE	Auto Scan
	<ul style="list-style-type: none">Show / Hide Channel List Signal Type DTV Signal
  	  

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are shown below.

Auto Scan
Execute an auto channel search.

Show / Hide
Enter sub-menu and press OK to show or hide the TV channel.




Channel List
Display a channel list. It shows the current channels. Press OK to go to TV channel directly in sub-menu.

Signal Type
Select your TV signal type: Air or Cable.

DTV Signal(In DTV Mode)
Display how strong your TV signal is.

Picture Menu
The Picture Menu contains menus and controls to configure the way the picture appears. The Picture Menu options apply to the video for the main TV and VIDEO INPUT selections. All picture options can be applied to each input.

Press MENU on the remote. Select Picture from the Main menu. Press MENU on the remote. Select Picture from the Main menu. Press the OK/down button to proceed to PICTURE menu.

      	      
AUDIO	Sound Mode
	<ul style="list-style-type: none">Audio Language Analog Audio Output Digital Audio Output Surround Audio Only
  	  

How do I tell an analog channel from a digital channel?
Press the OK button to display the Channel Bar. when OSD (on-screen display) is not used, Look at the top right corner of the screen. An "A" is displayed for an analog channel. A "D" is displayed for a digital channel.

Note: Since the analog TV in America has been cut off, we reserve analog TV function only for some unexpected use.

Why are there bars on my screen, and can I get rid of them?
Most digital video is sent in a 16:9 format which fills your screen, but is sometimes sent in 4:3 which does not fill your screen. It depends on how the station or device connected to your TV is formatting the video. If there are bars on the screen, Check Screen size in the picture mode to try a different format that may eliminate the bars. Some bars can't be removed because of the way the format is sent by the broadcaster. The format changes as you choose screen size type in the picture mode and the format type is displayed at the bottom of the screen. For more information on screen size, go to page 9.

Why does channel search find a lot of channels, but when I try to tune to them, there's nothing there?
Some channels don't carry programming, such as video On Demand. When channels are unavailable, your TV screen is blank or appears like snow. You probably want to remove these channels from your channel list. Remove these in the Channel List Menu. Go to page 8 for more information.

There is no sound, but the picture is fine.

- The sound might be muted. Try pressing the MUTE button to restore sound.
- For using AV or Component, remember to connect the device's left and right audio output correctly. The left channel cable is white and the right channel cable is red. Please match the cables and jacks according to their colors.

- The sound settings may not be set correctly. Go to page 9 for more information.

- If your audio source has only one jack or is a (mono) audio source, make sure you have plugged the connection into the Audio L jack (white) on the TV.

The buttons on the side panel don't work.

- The side panel may be locked (disabled). Use the remote control to turn on the TV.

- Select the Keypad Lock function in the PARENTAL control Menu and press OK to uncheck the locking status.

- Unplug the TV from the AC power for 10 minutes and then plug it back. Turn the TV on and try again.

The TV turns off unexpectedly.

- The electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn the TV on again.

If this happens frequently, the voltage in your house may be abnormal.

Consult the other electronic equipment in your home can't work normally, consult a qualified service personnel.

Can't select a certain channel.

- The channel may be blocked or not approved in the PARENTAL control Menu.

- The channel may be skipped in channel list in CHANNEL Menu. Check the blocking and skipping status of channel.

The stereo sound performance is bad.

- Make sure the HDMI device (DVD, video gamer, etc.) is turned on and the cables are firmly connected.

If problems still occur, turn off your device and reconnect it. Reset the power by unplugging the power cord and plugging it again.

- If a "No Signal" message appears on screen , the HDMI device isn't responding. Contact the manufacturer of the HDMI device for further assistance.

- If you have black bars on each side of your picture (which means the TV can not display a full-screen image), the device you connected might have a switch or a menu option allowing you to change the picture quality output that will fix this. Choose either 720p or 1080i.

The sound is fine, but the picture is poor.
-If you can only get black and white pictures from external device that you've connected to your TV, maybe it is due to the video

cables is not connected well, or they are connected wrongly.

      	      
PICTURE	Sound Mode
	<ul style="list-style-type: none">Picture Mode Color Mode Screen Size Noise Reduction Dynamic Contrast Video Style
  	  

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are shown below. If available, use the text at the bottom of each screen for help.









 
 
 

 



 


 
Picture Mode
Choose the preset visual mode of your TV: Standard, Movie, User, Dynamic, Power Saving (Only in User mode you can adjust Brightness, Contrast, Color, Tint and Sharpness. Changes to Power Saving mode can decrease the power consumption).

• **Brightness:** Adjust the brightness of picture.
• **Contrast:** Adjust the contrast of color.
• **Color:** Adjust the richness of color.

• **Tint:** Adjust the balance between red and green level (only available in NTSC signal).

• **Sharpness:** Adjust the sharpness level of picture.

Note: Picture Mode is available in TV mode only. Press MENU and choose CHANNEL from the Main menu. Press the OK/down button to proceed to CHANNEL menu.

      	      
PICTURE	Auto Scan
	<ul style="list-style-type: none">Show / Hide Channel List Signal Type DTV Signal
  	  

Use up/down to choose the function you need, press OK or right arrow to adjust or enter a sub-menu. The detailed explanation are shown below.

Auto Scan
Execute an auto channel search.

Show / Hide
Enter sub-menu and press OK to show or hide the TV channel.

Channel List
Display a channel list. It shows the current channels. Press OK to go to TV channel directly in sub-menu.

Signal Type
Select your TV signal type: Air or Cable.