


5KVJ0111

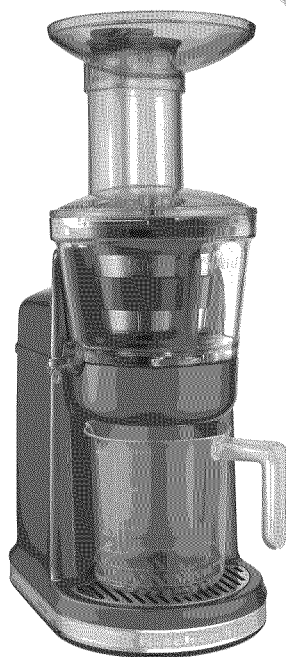

KitchenAid

English 5

TABLE OF CONTENTS

MAXIMUM EXTRACTION JUICER SAFETY	
Important safeguards.....	6
Electrical requirements	8
Electrical equipment waste disposal	8
PARTS AND FEATURES	
Parts and accessories.....	9
ASSEMBLING THE MAXIMUM EXTRACTION JUICER	
Assembling the Maximum Extraction Juicer parts.....	10
OPERATING THE MAXIMUM EXTRACTION JUICER	
Making juice.....	12
TIPS FOR GREAT RESULTS	
Quick tips	13
CARE AND CLEANING	
Cleaning the Maximum Extraction Juicer	14
TROUBLESHOOTING	16
WARRANTY AND SERVICE.....	17

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
3. Do not operate without the pulp container in place.
4. Always make sure Juicer lid is securely closed before motor is turned on. Do not remove the lid while the Juicer is in operation.
5. Do not attempt to defeat the cover interlock mechanism.
6. Be sure to turn the Juicer off and unplug it from the power outlet when not in use, after each use, before putting on or taking off parts, and before cleaning. Make sure the motor stops completely before disassembling.
7. Do not open until blades and rotating sieve stops.
8. Avoid contacting moving parts.

9. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
10. Do not put your fingers or other objects into the Juicer opening while it is in operation. If food becomes lodged in opening, use pusher or another piece of fruit or vegetable to push it down. Never feed by hand. Always use the pusher. When this method is not possible, turn the motor off and disassemble the Juicer to remove the remaining food.
11. Do not use outdoors.
12. Children should be supervised to ensure they do not play with the appliance. The appliance is not to be used by children. The appliance and cord should be out of reach of children. Children shall not clean or perform user maintenance on the appliance without supervision.
13. This appliance is not intended for use by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
14. Do not operate the appliance if the sieve or rotating parts are damaged. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
15. Do not operate the appliance if the cord or plug is damaged, after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
16. To protect against risk of electrical shock, do not immerse Juicer body in water or other liquids.
17. To prevent damage to gear assembly, do not immerse Juicer body in water or other liquids.
18. Do not let the cord hang over the edge of table or counter.

MAXIMUM EXTRACTION JUICER SAFETY

- 19.** This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices or other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

Electrical requirements

WARNING



Fire Hazard

**Do not use an extension cord.
Doing so can result in death
or fire.**


Volts: 220-240 VAC
Hertz: 50 Hz
Wattage: 230W

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

Electrical equipment waste disposal


Disposal of packing material

The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

Scrapping the product

- This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment


and human health, which could otherwise be caused by inappropriate waste handling of this product.

- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

PARTS AND FEATURES

Parts and accessories

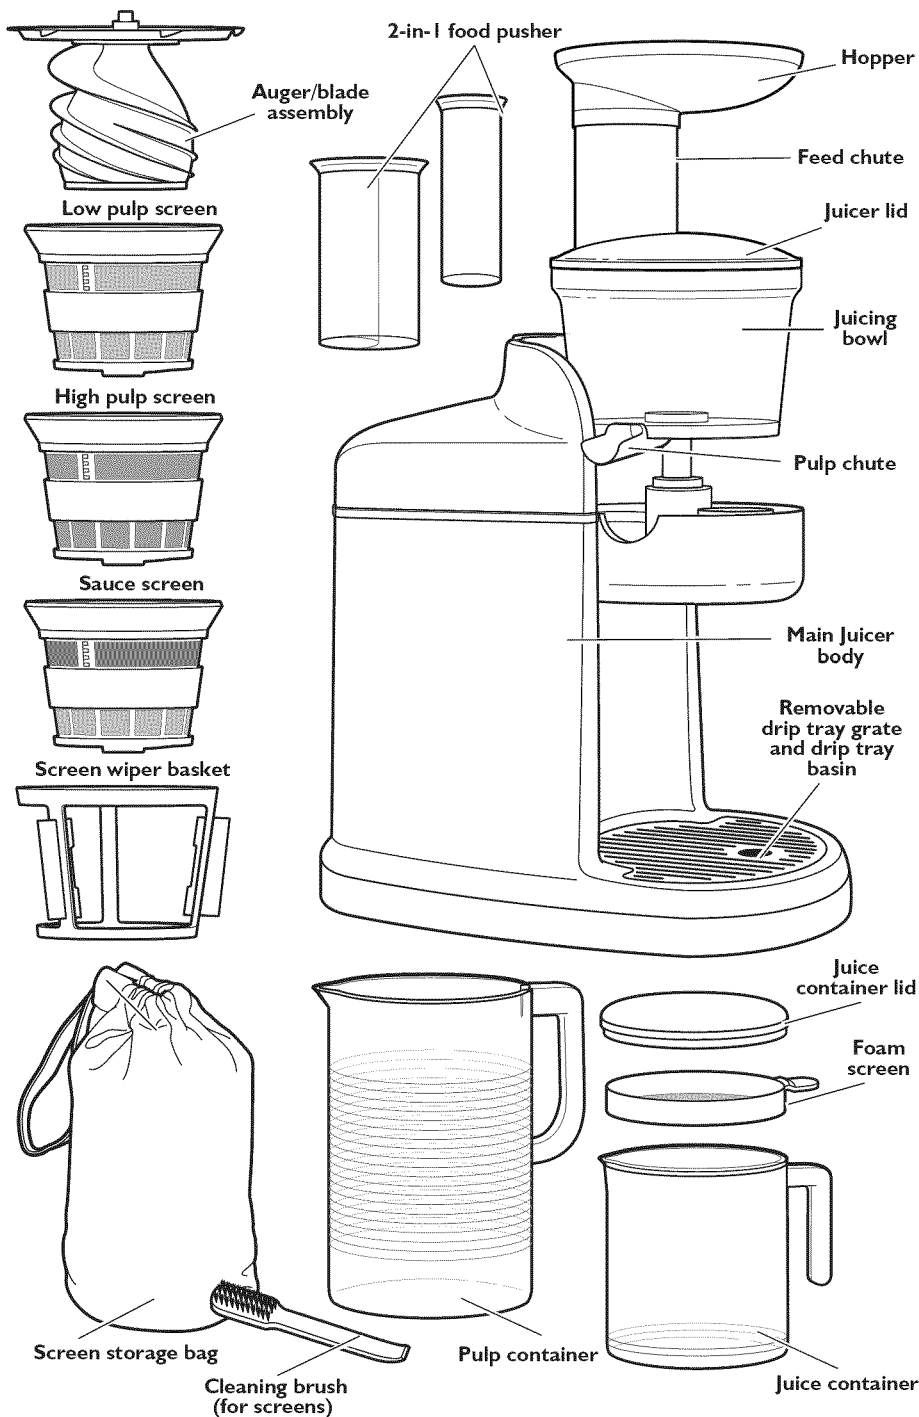


ASSEMBLING THE MAXIMUM EXTRACTION JUICER


Assembling the Maximum Extraction Juicer parts

Before First Use


Before using your Maximum Extraction Juicer for the first time, the Main Juicer body should be wiped clean with a damp cloth. All other parts should be washed by hand or in the top rack of the dishwasher. See “Care and Cleaning” section.

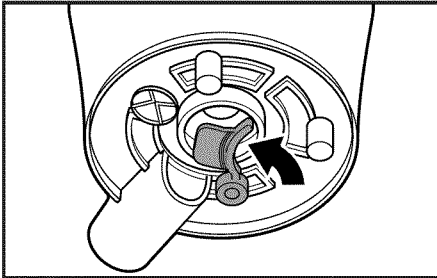


1 Slide the gasket into place behind the pulp chute.

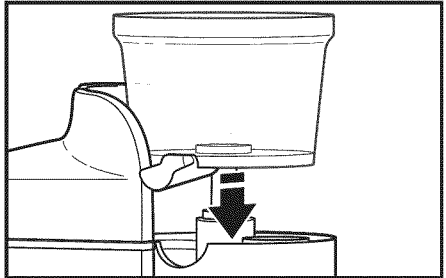

2 Place the bowl into the juicer body.

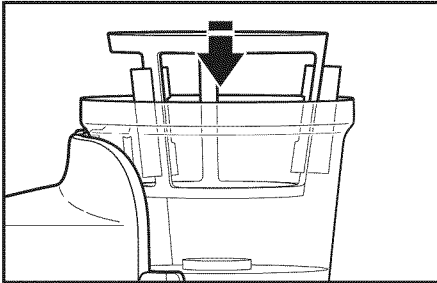


3 Put the screen wiper basket into the bowl.

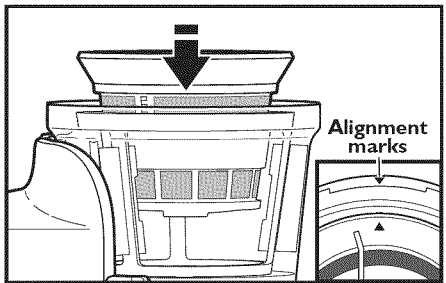


4 Place the screen of your choice into the screen wiper basket so that the alignment mark matches up with the mark on the bowl.


ASSEMBLING THE MAXIMUM EXTRACTION JUICER

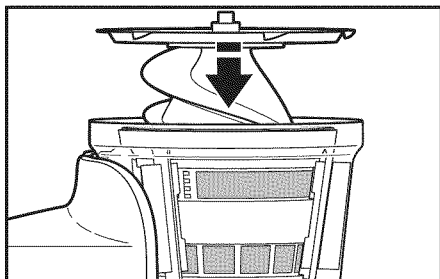


5 Place the auger/blade assembly inside the screen.

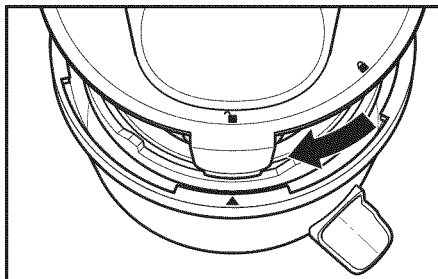

6 Place the lid on the juicer, aligning the unlocked icon on the lid with the red arrow on the juicing bowl. Rotate lid clockwise until lid locks into place.

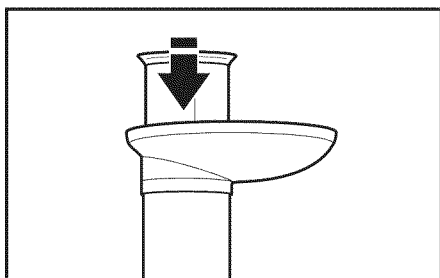

7 Place hopper on top of feed chute. Insert food pusher in feed chute.

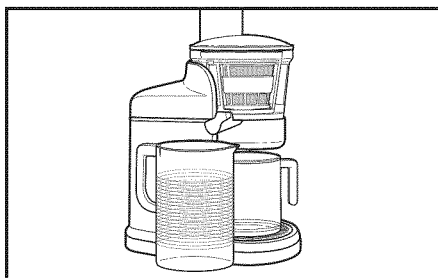

8 Place juice container under juice bowl, and pulp container beneath pulp chute.

OPERATING THE MAXIMUM EXTRACTION JUICER

Making juice

⚠ WARNING



Electrical Shock Hazard


Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.


Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

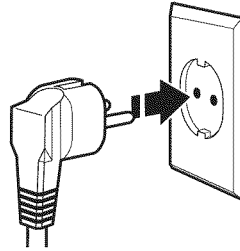


Plug into a grounded outlet.

BEFORE JUICING: Large seeds or pits need to be removed prior to juicing to avoid damage to the auger or screens. This includes fruits such as; nectarines, peaches, mangoes, apricots, plums, cherries, etc.

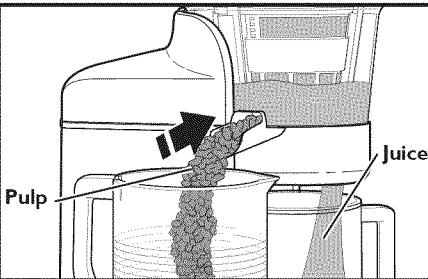


2 To make juice, the pulp chute should always be pushed in; this is the open position. When the pulp chute is open, pulp created while juicing will flow through the pulp chute, separating it from the juice.

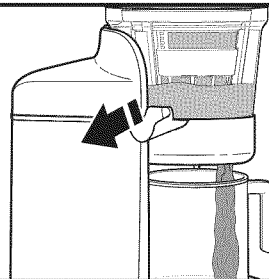

3 To make sauces, make sure the rubber gasket is in place, and sauce screen is installed. Pull the pulp chute out; this is the closed position. When the pulp chute is closed, the juice and fiber exit through the juice chute as a sauce.



OPERATING THE MAXIMUM EXTRACTION JUICER

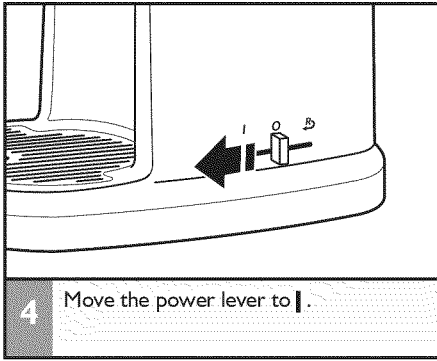

NOTE: Recommended maximum juicing time is 25 minutes. After juicer to cool for 10-15 minutes before resuming operation.

⚠ WARNING

Rotating Blade Hazard
Always use food pusher.
Keep fingers out of openings.
Keep away from children.
Failure to do so can result in amputation or cuts.

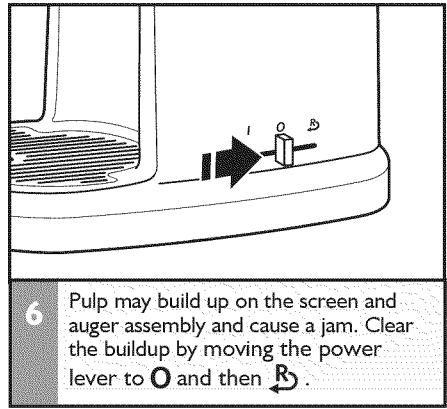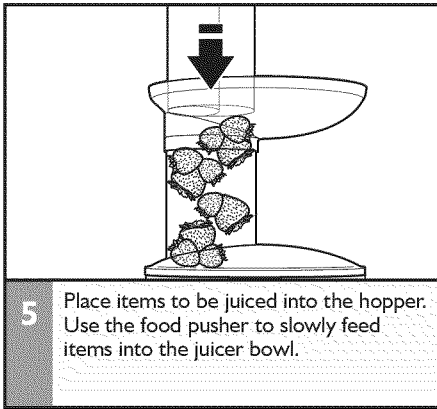

TIPS FOR GREAT RESULTS

Quick tips

Before juicing:

- Thoroughly wash your fruits and vegetables, making sure they are free of soil, leaves, and stems. Small leaves, such as on strawberries, do not have to be removed.
- To avoid damaging the juicer, do not juice frozen fruits or vegetables. For optimal performance, always use fresh fruits and vegetables.
- Large seeds or pits must be removed prior to juicing to avoid damage to the auger or screens. This includes fruits such as; nectarines, peaches, mangoes, apricots, plums, cherries, etc.
- Always peel fruits with hard or inedible skins. Examples include mangoes, citrus fruits, melons, and pineapples.

TIPS FOR GREAT RESULTS

- Some vegetables, such as cucumbers or yellow squash, do not have to be peeled first, depending on the softness of the skin and recipe requirements. Leaving the peels on will change the colour and flavour of the finished juices.

While juicing:

- For optimum results, insert one piece of ingredients at a time.
- When juicing celery with other fruits/vegetables, it is recommended to interchange the celery with other items to prevent pulp build-up inside the juice bowl.
- When juicing leafy greens like spinach and kale, it is recommended to juice with a combination of watery or fibrous fruits and vegetables to help with juice flow and to increase juice yield.

- You should not juice bananas.
- For less foam build-up and seeds/particles in your juice, use the foam screen to strain these sediments before they go into the juice.

After juicing:

- Saved pulp can be used for other recipes, as compost for your garden, or can be discarded.

For easy cleanup:


- As you juice, clean parts to avoid dried-on juice and pulp.
- After each use, immediately rinse removable parts in hot water to remove pulp and juice. It may be necessary to use the cleaning brush to remove pulp from the screen. Let parts air dry.

CARE AND CLEANING


Cleaning the Maximum Extraction Juicer

IMPORTANT: To avoid damaging the Juicer, do not wash or immerse the juicer body in water or other liquids. All other parts are top rack dishwasher safe.

Before cleaning, make sure juicer has been turned off and unplugged from the outlet.

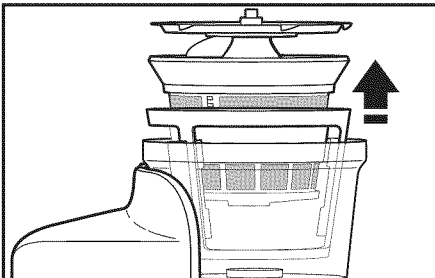


- 1 To disassemble juicing bowl:** Remove the lid. Remove the auger. Lift the assembled screen and screen wiper basket out of the bowl, and separate.

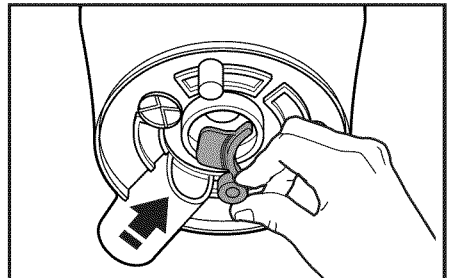


- 2 To disassemble pulp chute for cleaning:** Pull gasket out from back of chute. Slightly pinch gasket hinge while sliding chute in towards the center of the juicing bowl.

CARE AND CLEANING


NOTE: Juice may drip onto the drip tray grate after juicing. Both the grate and drip tray basin may be removed and washed in the top rack of the dishwasher for easy cleaning.

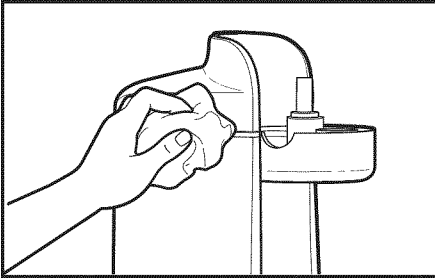

3 Wipe the juicer body with a warm, damp cloth. Avoid using abrasive cleaners or scouring pads as they may scratch the juicer. Thoroughly dry with a soft cloth. To avoid damaging the juicer, do not wash or immerse the juicer body in water or other liquids, or wash in the dishwasher.

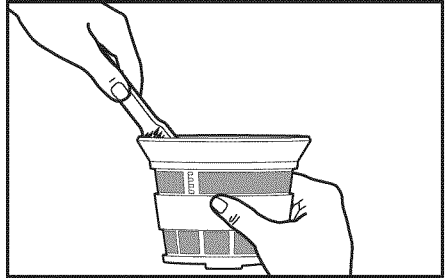

4 Use the brush with warm soapy water to clean out any stuck food or residue in the screens.

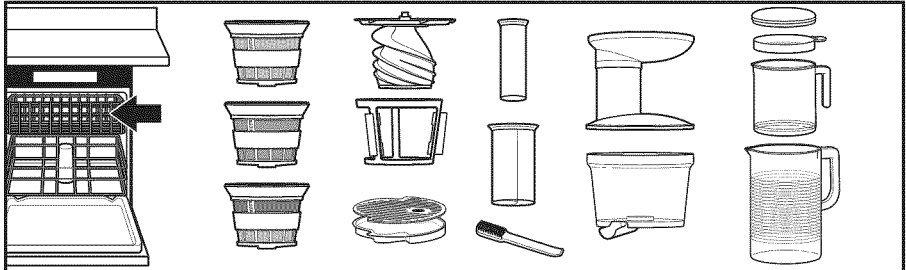

5 All parts other than the juicer body are top rack dishwasher safe.

TROUBLESHOOTING

Maximum Extraction Juicer does not operate

WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

- Check to see whether the Juicer is plugged into a grounded outlet. If it is, check the fuse or circuit breaker on the electrical circuit the Juicer is connected to and make sure the circuit is closed.
- Check to make sure the Juicer was assembled correctly. See “Assembling the Maximum Extraction Juicer” section.
- Check to see if the screen is clean and clear of pulp. Too much pulp on the screen may affect performance, and will need to be removed. See “Cleaning the Maximum Extraction Juicer” section.
- The juicer might be jammed. Turn Juicer off and reverse direction. Turn off Juicer again, unplug unit, and remove lid to clean out pulp build up. See “Cleaning the Maximum Extraction Juicer” section.

If the problem cannot be corrected: See the “Warranty and Service” section. Do not return the Juicer to the retailer; retailers do not provide service. The serial number for service is on the bottom of the Juicer body.

Juice does not flow sufficiently, or is flowing out of the pulp ejector

- Check to see whether the rubber gasket on the bottom of the Juicer is placed properly.

Makes a squeaking or clicking noise or shakes when making juice

- A squeaking noise is normal. It is the sound of juice being squeezed by the auger.
- Some shaking is normal. It is the sign of the motor working properly.

WARRANTY AND SERVICE

KitchenAid Maximum Extraction Juicer warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa: Five years full warranty from date of purchase.	The replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.	A. Repairs when Juicer is used for operations other than normal residential use B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

English

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Customer service

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorized Service Center, please find our contact details below.

NOTE: All service should be handled locally by an Authorized KitchenAid Service Center.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504.

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorized KitchenAid Service/Customer Center.

For more information, visit our website at:

www.KitchenAid.co.uk
www.KitchenAid.eu

© 2014. All rights reserved.
Specifications subject to change without notice.

KitchenAid