

5KVJ0333



KitchenAid

English	5
----------------------	----------



TABLE OF CONTENTS

CENTRIFUGAL JUICER SAFETY	
Important safeguards	6
Electrical Requirements	8
Electrical equipment waste disposal	8
PARTS AND FEATURES	
Parts and accessories	9
ASSEMBLING THE CENTRIFUGAL JUICER	
Before first use	10
Assembling the Centrifugal Juicer parts	10
OPERATING THE CENTRIFUGAL JUICER	
Making juice	12
TIPS FOR GREAT RESULTS	
Speed selector table	13
Quick tips	14
CARE AND CLEANING	
Disassembling the Centrifugal Juicer	14
Cleaning the Centrifugal Juicer	16
Cleaning tips	17
TROUBLESHOOTING	17
WARRANTY AND SERVICE	18

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Always make sure Juicer lid is securely closed before motor is turned on. Do not remove the lid while Juicer is in operation.
3. Avoid contacting moving parts.
4. Do not put your fingers or other objects into the feed tube while it is in operation. If food becomes lodged in opening, use food pusher or another piece of fruit or vegetable to push it down. Never push by hand. Always use the food pusher provided. When this method is not possible, turn the motor off and disassemble Juicer to remove the remaining food.
5. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock or injury.

6. Be sure to turn the Juicer OFF and unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Make sure the motor stops completely before disassembling.
7. Do not use outdoors.
8. Children should be supervised to insure they do not play with the appliance. The appliance is not to be used by children. The appliance and cord should be out of reach of children. Children shall not clean or perform user maintenance on the appliance without supervision.
9. This appliance is not intended for use by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.
11. Do not use the appliance if the disc or rotating parts are damaged or the Juicer lid is damaged or has visible cracks. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
12. To protect against risk of electrical shock, do not put Juicer's main body in water or other liquid.
13. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments

SAVE THESE INSTRUCTIONS

CENTRIFUGAL JUICER SAFETY

Electrical requirements

WARNING



Fire Hazard

Do not use an extension cord.

Doing so can result in death or fire.

Volts: 220-240 VAC

Hertz: 50-60 Hz


Wattage: 500 Watts

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

Electrical equipment waste disposal

Disposal of packing material

The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.


Scrapping the product

- This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment

and human health, which could otherwise be caused by inappropriate waste handling of this product.





- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

PARTS AND FEATURES

Parts and accessories

English

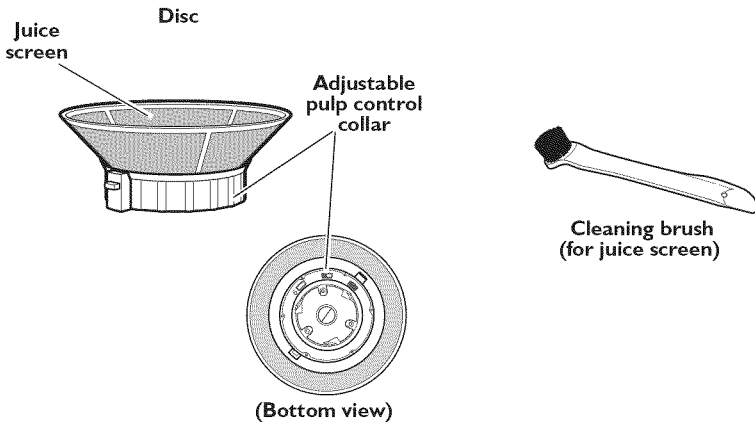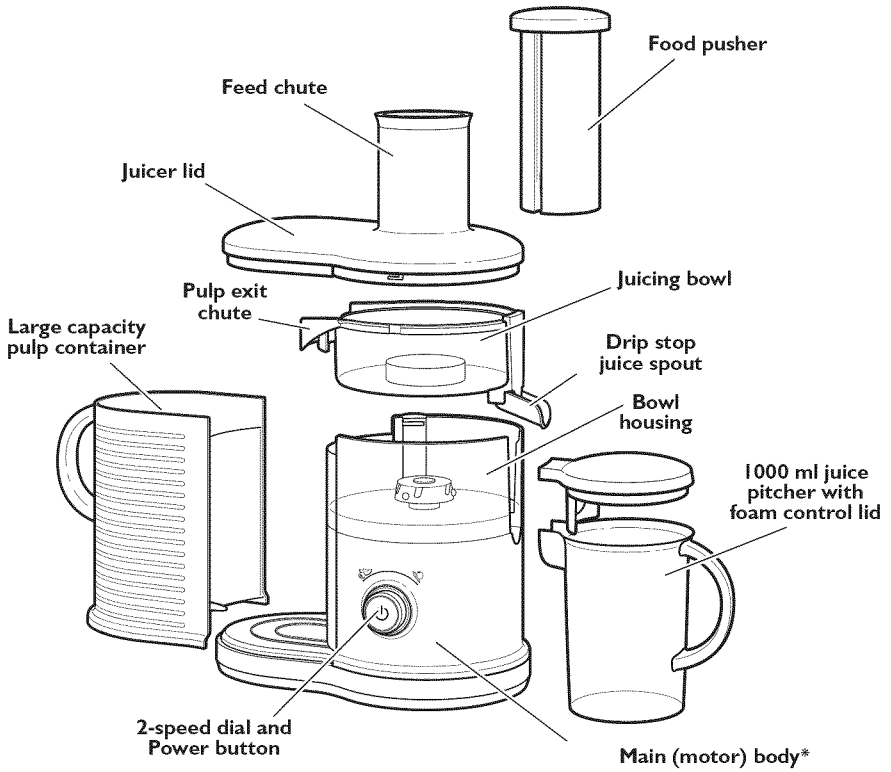


*Wipe clean only. See “Care and cleaning” section for more information.

ASSEMBLING THE CENTRIFUGAL JUICER

Before first use

Your Centrifugal Juicer will come fully assembled in the box. Before using your juicer for the first time, remove the pulp container first, and then disassemble the rest of the unit. The pulp container must be pulled out from the juicer before the lid can be removed. Once disassembled, wash all parts and accessories either by hand or in the dishwasher. See “Care and Cleaning” section for more detail.


NOTE: This product is designed for household use only.

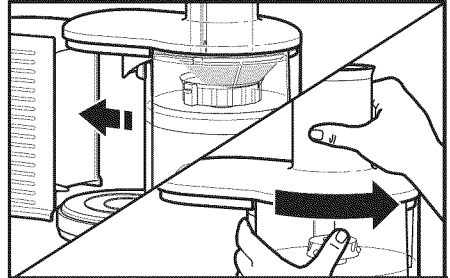


Remove pulp container: Grasp the feed chute on the Juicer lid and turn it counter-clockwise to remove it from the Juicer.

Assembling the Centrifugal Juicer parts

IMPORTANT: Place Juicer on a dry, level countertop with the 2-speed dial facing you. Do not plug in the Juicer until it is completely assembled.

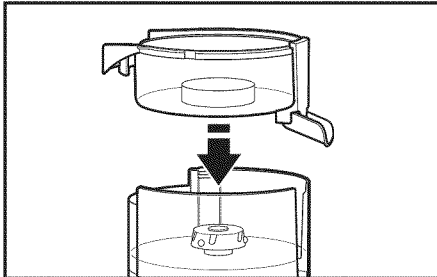


1 Place the juicing bowl inside of the bowl housing.

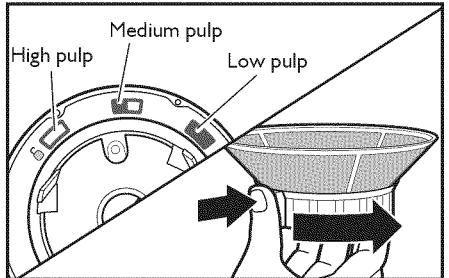


2 Adjust the pulp control collar to the appropriate pulp setting for High, Medium or Low pulp flow. To adjust, push in button on collar and rotate until you hear it lock into place at the desired setting.


ASSEMBLING THE CENTRIFUGAL JUICER

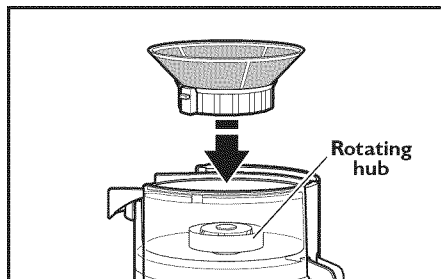


3 Place the disc inside the juicing bowl on top of the rotating hub. Rotate the disc until the tabs on the inside of the collar match up with the notches on the hub and the disc settles easily into place.

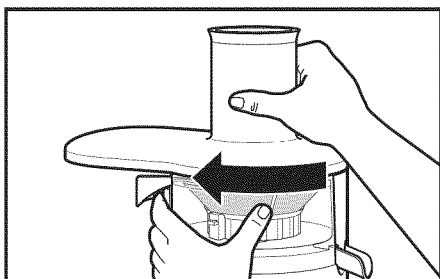


4 Place the juicer lid over the bowl housing so that the long lid section is slightly to the right of the pulp exit chute. Grip the feed chute, turning the lid clockwise until it locks into place.

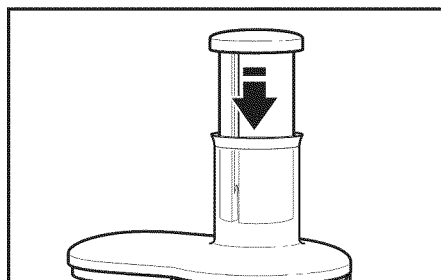

5 Slide the food pusher down the feed chute, aligning the groove in the food pusher with the protruding rib on the inside of the feed chute.

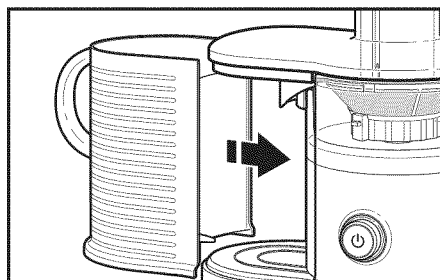

6 Slide the pulp basket into position under the long lid section until it rests against the motor body.

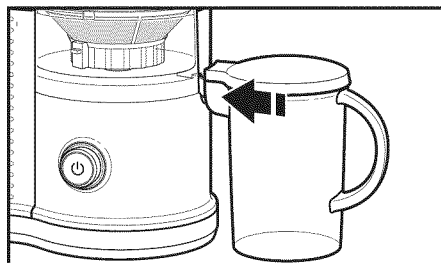

7 Place juice pitcher under the juice spout. Make sure juice spout is in the down position.

NOTE: The lid of the juice pitcher comes equipped with a foam guard. To include the foam with your juice, simply remove the lid before pouring juice into your glass.

OPERATING THE CENTRIFUGAL JUICER

Making juice

⚠ WARNING



Electrical Shock Hazard

- Plug into a grounded outlet.**
- Do not remove ground prong.**
- Do not use an adapter.**
- Do not use an extension cord.**
- Failure to follow these instructions can result in death, fire, or electrical shock.**

⚠ WARNING




Rotating Blade Hazard


- Always use food pusher.**
- Keep fingers out of openings.**
- Keep away from children.**
- Failure to do so can result in amputation or cuts.**

Before operating your Centrifugal Juicer, make sure the juicer is assembled correctly, and the adjustable pulp collar is set to the appropriate pulp level for your recipe (see “Assembling the Centrifugal Juicer”).

Plug the power cord into a grounded outlet.

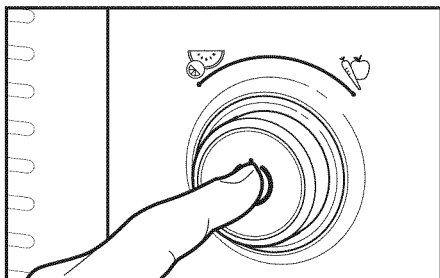

1 Adjust the speed dial to the desired setting. See the Speed Selector Table in the “Tips for great results” section for more information. Press POWER (⏻) to turn on Juicer.

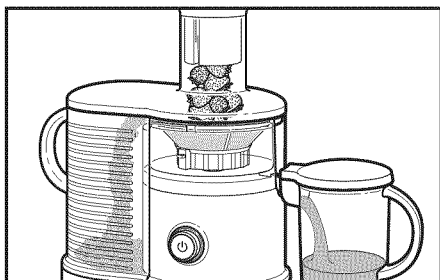

2 With motor running, place food into feed chute using the food pusher. As food is processed, the extracted juice will flow into the juice pitcher, and the separated pulp will flow into the pulp basket.

OPERATING THE CENTRIFUGAL JUICER















NOTE: Do not allow the pulp basket to overfill while juicing, as it may affect operation of the Juicer.
















To empty pulp basket while juicing, first turn off Juicer by pressing the Power button. Once the power is off, remove the pulp basket and empty its contents. Make sure to replace the empty pulp basket before turning power back on and continuing to juice.

TIP: To prevent drips to your counter, turn up the juice spout when removing the juice pitcher.

TIPS FOR GREAT RESULTS

Speed selector table

Food Item	Dial Speed
Apples	
Apricots (pit removed)	
Beets (trimmed)	
Blueberries	
Broccoli	
Brussels sprouts (trimmed)	
Carrots	
Cauliflower	
Celery	
Cucumber (peeled)	
Fennel	
Grapes (seedless)	
Kale	
Kiwi Fruit (peeled)	

Food Item	Dial Speed
Mangoes (peeled, pit removed)	
Melons (peeled)	
Nectarines (pit removed)	
Oranges (peeled)	 or 
Peaches (pit removed)	
Pears (stalks removed)	 for hard or  for soft
Pineapple (peeled)	
Plums (pit removed)	
Raspberries	
Spinach	
Strawberries	
Tomatoes	
Watermelon (peeled)	

TIP: When juicing hard foods, the recommended maximum quantity is 3 kg with a maximum operating time of 2 minutes. Some very hard foods may make the juicer slow down or stop. If this happens, turn off the juicer and unblock the screen.

TIPS FOR GREAT RESULTS

Quick tips

Before juicing:

- Thoroughly wash your fruits and vegetables, making sure they are free of soil, leaves, and stems. Small leaves, such as on strawberries, do not have to be removed.
- To avoid damaging the juicer, do not juice frozen fruits or vegetables. For optimal performance, always use fresh fruits and vegetables.
- Large seeds or pits must be removed prior to juicing to avoid damage to the disk. This includes fruits such as; nectarines, peaches, mangoes, apricots, plums, cherries, etc.
- Always peel fruits with hard or inedible skins. Examples include mangoes, citrus fruits, melons, and pineapples.
- Some vegetables, such as cucumbers or yellow squash, do not have to be peeled first, depending on the softness of the skin and recipe requirements. Leaving the peels on will change the color and flavour of the finished juices.

After juicing:


- There may be pieces of fruit or vegetables remaining in the pulp after juicing. These should be removed prior to using the pulp in any recipes.
- Saved pulp can be used for other recipes, as compost for your garden, or can be discarded.

For easy cleanup:


- As you juice, clean parts to avoid dried on juice and pulp.
- After each use, immediately rinse removable parts in hot water to remove pulp and juice. It may be necessary to use the cleaning brush to remove pulp from the screen. Let parts air dry.

CARE AND CLEANING

Disassembling the Centrifugal Juicer

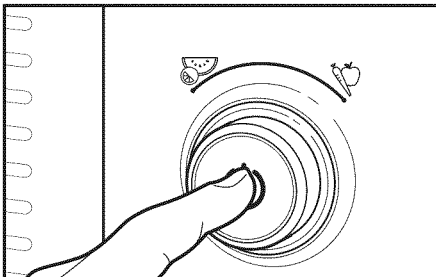


1 Turn off Juicer by pressing POWER (⏻). Unplug the power cord.

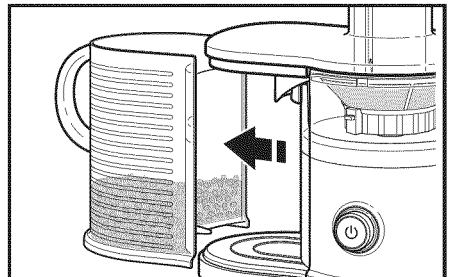


2 Remove pulp basket by sliding it away from the juicer.


CARE AND CLEANING

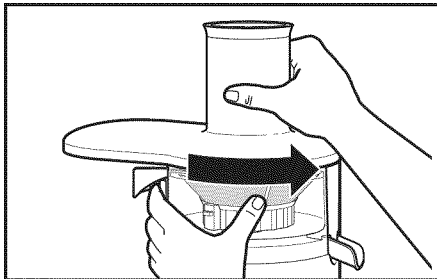

3 Grasp the feed chute on the Juicer lid and turn it counter-clockwise to unlock and remove it from the Juicer.

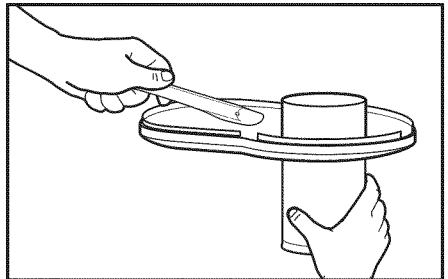


4 There may be pulp stuck to the underside of the lid. Use the flat side of the cleaning brush to carefully scrape the stuck pulp into the pulp container.

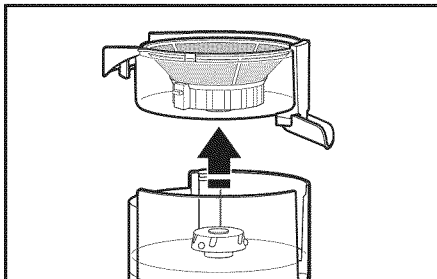


5 Gently lift juicing bowl out of bowl housing with disc still in place.

NOTE: For easy cleanup, it is recommended to remove the disc from the juicing bowl over a sink.

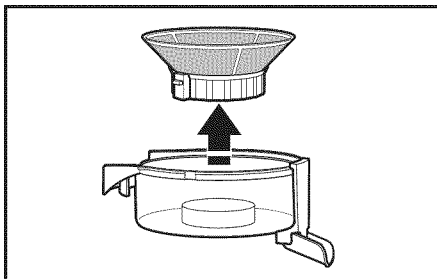

6 Lift disc out of juicing bowl.

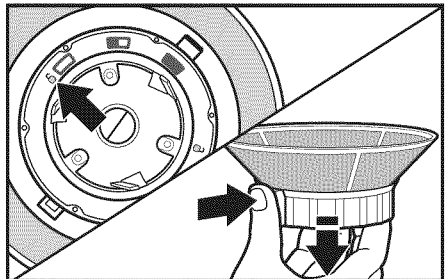


7 **Remove adjustable pulp collar from the juice screen for cleaning:** Turn collar to "unlock." Press spring button and pull collar down, removing it from the screen.

CARE AND CLEANING


Cleaning the Centrifugal Juicer

IMPORTANT: To avoid damaging the Juicer, do not wash or immerse the motor body in water or other liquids. All other parts are top rack dishwasher safe.

Before cleaning, make sure Juicer has been turned off, unplugged, and disassembled correctly. See “Disassembling the Centrifugal Juicer.”

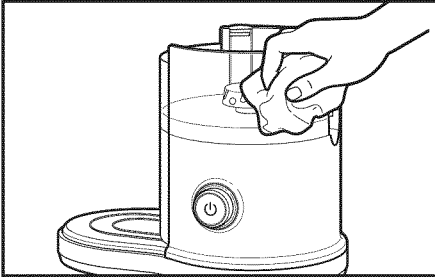


- 1 Wipe the motor body and power cord with a soft, damp cloth. Dry thoroughly. Do not use abrasive cleansers or scouring pads.

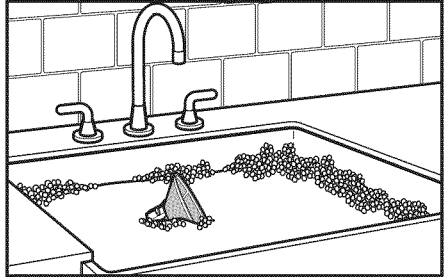

- 2 Soak juicer screen in hot, soapy water for 10 minutes. Hold screen under running water and use cleaning brush to clean out any stuck food or residue in the screen.

NOTE: The fine mesh of the juice screen may become clogged if pulp is left to dry on it. Clean immediately after usage.

After cleaning the juicer screen, check to see if the mesh holes are clear of debris by holding it up towards a light. If debris remains, repeat Step 2.

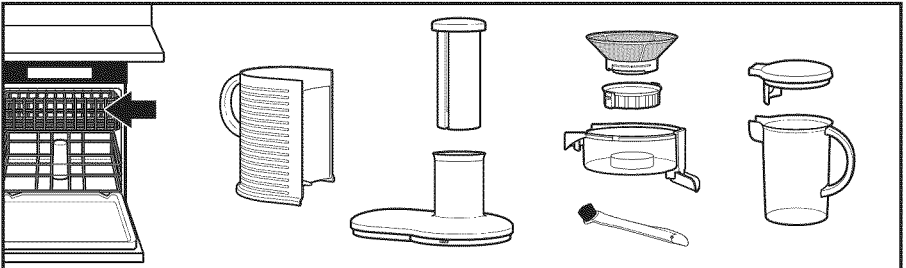

- 3 Disc and all parts other than motor body may be washed in warm, sudsy water or placed in the top rack of the dishwasher for cleaning.

CARE AND CLEANING

Cleaning tips

- After each use, immediately rinse all removable parts in hot water to remove pulp and juice. It may be necessary to use the cleaning brush to remove pulp from the screen. Let parts air dry.
- To prevent staining of plastic parts from brightly coloured fruit and vegetables, wash parts immediately after use.
- If discoloration from ingredients occurs, soak plastic parts in a solution of water and 10% lemon juice. You can also clean them with a non abrasive cleanser. Do not soak plastic parts or disc in bleach to remove stains.

TROUBLESHOOTING

Juicer does not operate when turned on

- Check to make sure the juicer has been assembled correctly, and the lid is in the locked position.

Motor sounds strained during operation

- The wrong speed was selected for ingredients being juiced, putting excess strain on motor.
- Refer to the Speed selector table in the “Tips for great results” section to determine the correct juicing speed for your ingredients.

Build-up of excess pulp in the disk

- Stop the juicing process and follow the directions in the “Care and cleaning” section to disassemble and clean the juicer lid. Scrape off pulp, reassemble, and resume juicing.
- Once excess pulp is removed, try alternating between soft and hard vegetables and fruit.

Pulp is too wet; not enough juice being extracted

- Juicing screen may be clogged. Follow directions in the “Care and cleaning” section to disassemble juicer and clean the screen.
- Check your pulp setting. You may need to change it based on your preferred juice thickness.

Juice is spraying out of the spout

- Try a slower speed and push ingredients more slowly through the feed tube.
- Make sure juice pitcher is pushed close to the juicer and fits snugly against it.

WARRANTY AND SERVICE

KitchenAid Centrifugal Juicer warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa: Two years full warranty from date of purchase.	The replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.	A. Repairs when Juicer is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Customer service

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorized Service Center, please find our contact details below.

NOTE: All service should be handled locally by an Authorized KitchenAid Service Center.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504.

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorized KitchenAid Service/Customer Center.

For more information, visit our website at:

www.KitchenAid.co.uk
www.KitchenAid.eu

© 2014. All rights reserved.

Specifications subject to change without notice.

KitchenAid

© 2014. All rights reserved.
Specifications subject to change without notice.