

INSTRUCTION SHEET

for Water Softener Tank Kit

Kit Contains:

- (1) Softener Tank
- (2) Nut - Tank
- (1) Flow Meter
- (1) Gasket
- (1) Nut - Inlet
- (1) Instruction Sheet

⚠ WARNING	
	Electrical Shock Hazard
	Disconnect power before servicing.
	Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.	

1. Unplug dishwasher or disconnect power.
2. Pull the dishwasher away from the wall, being sure to cover the floor with cardboard or hardboard to avoid floor damage.
3. Insert the handles of a pair of pliers into the water inlet nut and then turn counter clockwise to remove. See *Figure 1*.

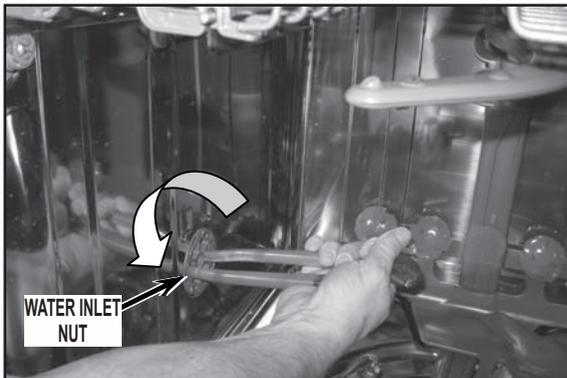


FIGURE 1

4. Remove the cap to the water softener tank and place the 2 ½ inch socket referenced in your dishwasher parts list over the nut on the water softener tank. Hold the socket firmly in place turn the socket counter clockwise to loosen the nut.

NOTE: Do not remove the nut. See *Figure 2*.

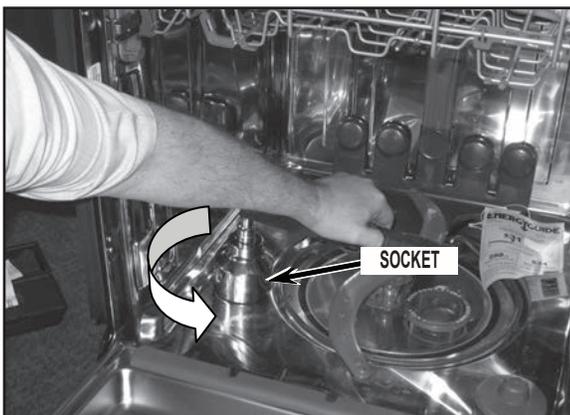


FIGURE 2

5. Lay the dishwasher on its back. Disconnect the wire from the flow meter on the water softener tank. See *Figure 3*.

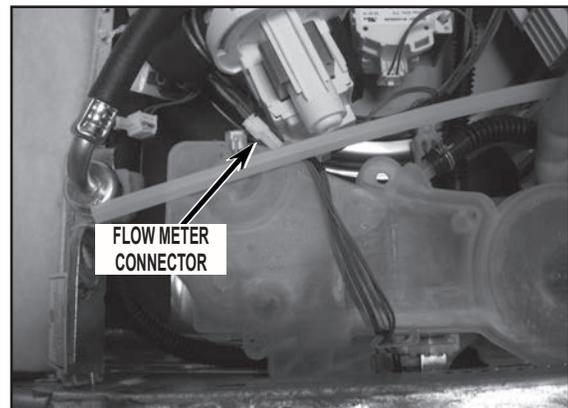


FIGURE 3

6. Remove the hoses from the water softener tank. See *Figure 4*.

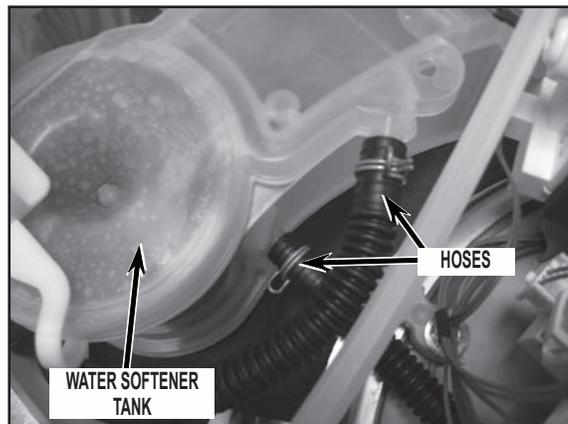


FIGURE 4

7. Remove the nut to the water softener tank loosened in Step 4, and remove the tank from the dishwasher.

(continued)

- Replace the new water softener tank on the dishwasher. Place the new gasket for the water softener tank inside the dishwasher and install the nut on the tank so that it's finger tight.

NOTE: Two gaskets have been provided for the water softener tank in case one gets damaged in installation. Only one gasket is required for installation.

- Install the new gasket and water inlet nut to the sidewall of the dishwasher.
- Reconnect the hoses and wires to the water softener tank.
- Set the dishwasher upright. Placing your finger in the water softener tank pull up on the tank to secure it to the bottom of the dishwasher tub and hand tighten the water softener nut down as firmly as possible. See *Figure 5*.



FIGURE 5

- Make a mark at the six o'clock position on the nut and the rim of the water softener tank for reference when tightening. See *Figure 6*.



FIGURE 6

- Place the socket on the water softener nut holding it down securely. Turn the nut clockwise another half to three quarter turn to secure it to the dishwasher tank.
- Reinstall the dishwasher.

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

- Plug in dishwasher or reconnect power.
- Run the dishwasher to check for leaks.

Universal Keywords: Div22 Src665 Whirlpool Mechtech

Document Specific Keywords: Tech Tip

Date: 112116

Document Name: W10424609A

Subject: Whirlpool Dishwasher Water Softener Tank Kit Instruction Sheet

Models: JDB9800CWP1 JDB9800CWP2 JDB9800CWS1 JDB9800CWS2

JDB9800CW2 KUDS30SXBL0 KUDS30SXBL1 KUDS30SXBL2 KUDS30SXBL3

KUDS30SXBL4 KUDS30SXBL8 KUDS30SXSS0 KUDS30SXSS1 KUDS30SXSS2

KUDS30SXSS3 KUDS30SXSS4 KUDS30SXSS8 KUDS30SXSS9 KUDS30SXWH0

KUDS30SXWH1 KUDS30SXWH2 KUDS30SXWH3 KUDS30SXWH4 KUDS30SXWH8

W10424609