

KJC32A
Instructions
Instruções
Instrucciones



KitchenAid

TABLE OF CONTENTS

TOASTER SAFETY

Important safeguards.....	3
Electrical requirements	4

PARTS AND FEATURES

Toaster parts and control panel features	5
--	---

OPERATING THE TOASTER

Preparing the Toaster for use	6
Making toast	6
Using the bagel function	7

CARE AND CLEANING

Cleaning the Toaster	8
----------------------------	---

TROUBLESHOOTING

If your Toaster fails to operate.....	9
---------------------------------------	---

TOASTER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

 **DANGER**

You can be killed or seriously injured if you don't immediately follow instructions.

 **WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plugs, or Toaster in water or other liquid.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Unplug Toaster from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended or sold by KitchenAid may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to "OFF", then remove plug from outlet.
12. Do not use Toaster for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if Toaster is covered with or touching flammable material, including curtains, draperies, walls and the like, when in operation.
15. Do not attempt to dislodge food when Toaster is plugged in.
16. **This product is designed for household use only.**

SAVE THESE INSTRUCTIONS

TOASTER SAFETY

Electrical requirements

WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 127 Volts A.C. only

Frequency: 60 Hz

Wattage: 900 watts

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

 
PARTS AND FEATURES

Toaster parts and control panel features

Extra-wide slots with automatic self-centering racks

Extra-wide slots with self-centering racks

Extra-wide slots allow you to easily toast bread, bagels, and English muffins up to 2.8 cm (1 1/8") thick. Self-centering racks help ensure even heating of thin or thick breads.

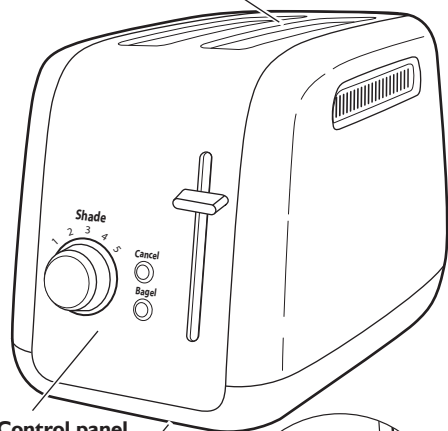

Control panel

Easy-to-use controls with one-touch buttons allow you to quickly select the desired settings.

Cord wrap

 
The cord wrap provides convenient storage of the cord when not in use.

Removable crumb tray

The removable crumb tray slides out for quick removal of crumbs. Hand-wash only.

Control panel (see below)


Cord wrap (not shown)

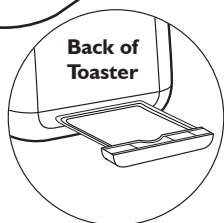

Removable crumb tray

Control panel

 High-lift lever

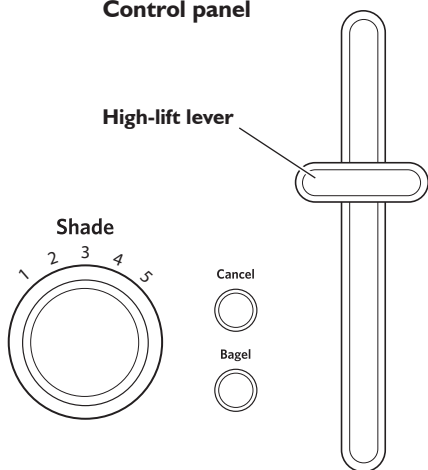

Shade control knob

Precisely sets the desired brownness level.

Bagel button

Your Toaster features a special setting for bagels, ensuring optimal heat and time for the best results. The heating elements will adjust to nicely toast the inside of a cut bagel without burning the outside surface.

Cancel button

Press the cancel button to stop a toasting cycle that is already in process.

High-lift lever

Press down to lower foods and start the toasting cycle. When toasting is complete, lever lifts food above toaster for easy removal.

 
OPERATING THE TOASTER

Preparing the Toaster for use

Before First Use

Before using your Toaster, check the extra-wide slots and remove any packing or printed material that might have fallen inside during shipping or handling. Do not probe inside the Toaster with a metal object.

You may see light smoke the first time you use the Toaster. This is normal. The smoke is harmless and will soon disappear.

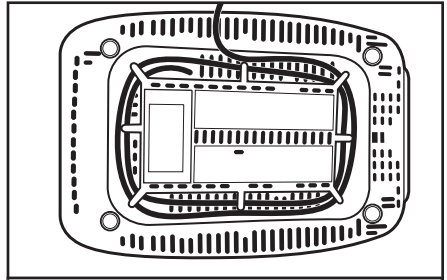

Shorten cord, if necessary, by wrapping cord under the base. The Toaster's feet are tall enough to allow the cord to exit from under any side of the Toaster.

Making toast

⚠️ WARNING

 


Electrical Shock Hazard

- Plug into a grounded outlet.
- Do not remove ground prong.
- Do not use an adapter.
- Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.


Shade

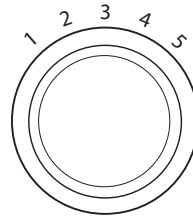

Plug the Toaster cord into a grounded outlet, then turn the shade control knob to select the degree of brownness you want. Turn to the right for darker toast or to the left for lighter toast.


NOTE: If toasting bagels, be sure to press the Bagel button. See “Using the bagel function”.

 OPERATING THE TOASTER

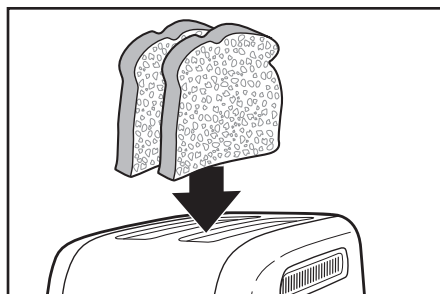

- 2** Insert bread or other food to be toasted in slot(s). For even toasting, toast only one bread type and thickness at a time.

 NOTE: Different types of bread and their moisture levels may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting.

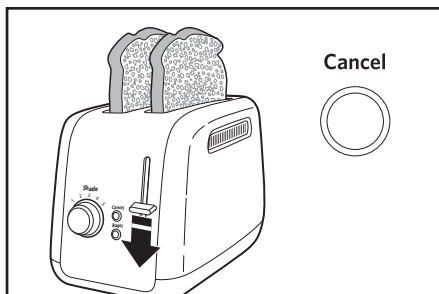


- 3** Press down on the lever to start the toasting cycle. The toast will rise automatically at the end of the cycle and the Toaster will turn off.

To cancel toasting at any time: press CANCEL. The Toaster will raise the toast and turn off.


NOTE: For smaller items, lift up on the lift lever to raise toast above the top of the Toaster for easier removal.

Using the bagel function

 Your Toaster features a special setting for bagels, ensuring optimal heat and time for the best results. The heating elements will adjust to nicely toast the inside of a cut bagel without burning the outside surface.

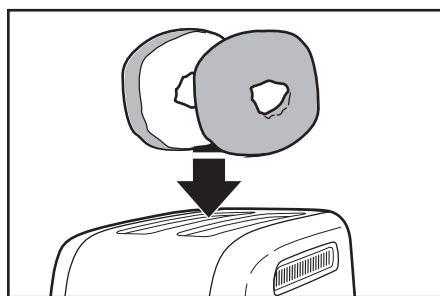

 - 1** Insert bagel with the cut side facing in, as shown, then turn the shade control knob to select the degree of brownness you want.

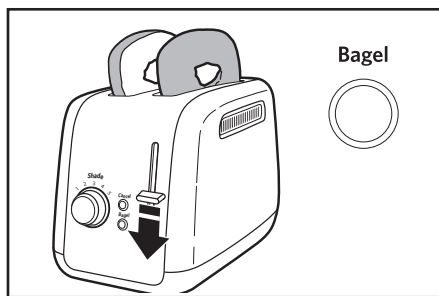


- 2** Press down on the lever to start the toasting cycle. Press the bagel button. The bagel will rise automatically at the end of the cycle and the Toaster will turn off.

To cancel toasting at any time: press CANCEL. The Toaster will raise the toast and turn off.


CARE AND CLEANING

 Cleaning the toaster

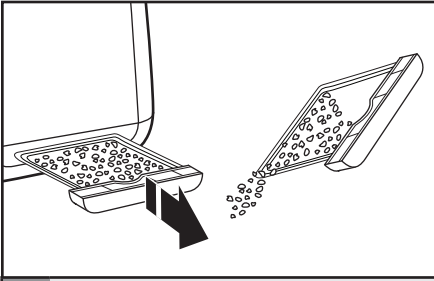


- 1 Unplug the Toaster and let it cool before cleaning. Push the center of the crumb tray, then grasp the tray and slide it out. It is recommended that the crumb tray be emptied after each use. Shake the crumbs into a waste container. Crumb tray is hand-wash only.

 IMPORTANT: The crumb tray will be hot immediately following a toasting cycle. Let it cool before handling.

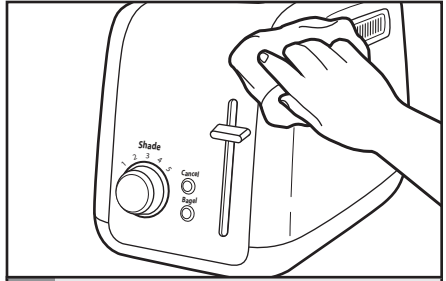

- 2 Wipe Toaster with a soft, damp cotton cloth. Do not use paper towels, abrasive cleansers or liquid cleaning products. Do not immerse Toaster in water.

 NOTE: If grease or oil splatters on the Toaster, wipe splatters away immediately using a clean, damp cotton cloth.

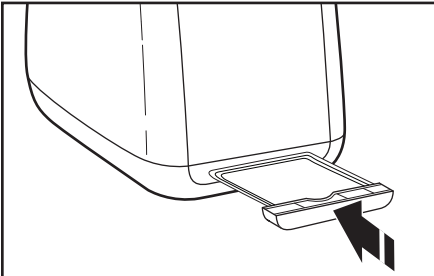

- 3 Return crumb tray to Toaster. Press it in firmly until it clicks into position. Do not use the Toaster without the crumb tray in the proper position.

NOTE: KitchenAid does not recommend the use of a toaster cover.

If your Toaster fails to operate

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Check the following:

1. Check that the Toaster is plugged into a grounded electrical outlet. If the Toaster is plugged in, unplug it, then plug in the toaster again.
2. If the Toaster still does not work, check the household fuse or circuit breaker.

If the problem cannot be corrected, contact an Authorized Service Center.

Do not return the Toaster to the retailer - they do not provide service.

KitchenAid

© 2014. All rights reserved.

Specifications subject to change without notice.

© 2014. Todos os direitos reservados.

Especificações sujeitas a mudança sem aviso.

© 2014. Todos los derechos reservados.

Las especificaciones están sujetas a cambio sin previo aviso.