

ATTENTION INSTALLER: FOR A QUALITY INSTALLATION, FOLLOW THESE INSTRUCTIONS.

1

ROLLERS

HEX-HEAD BOLTS (4)

REMOVE AND DISCARD SKID-BOARDS and hex-head bolts used to hold skidboards. Use padded hand truck to protect cabinet finish.

2

TAPE

USE FOLDED CARD BOARD UNDER STRAP TO PROTECT DOOR TRIM (IF USED)

LEAVE TAPE ON DOORS until refrigerator is in its final location. STRAP MUST NOT PASS THROUGH OR OVER HANDLES. Avoid over-tightening strap to prevent misaligning doors.

3

RAISE

ADJUST FRONT LEVELING ROLLERS so that refrigerator is in solid contact with floor and so doors swing closed when partially opened.

IMPORTANT: Check Door alignment and gasket seal. **MAKE SURE DOORS ARE EVEN AT TOP** after adjusting rollers.

4

A B C D E

OFF

SET TEMPERATURE CONTROLS TO "C" AND "5" POSITIONS. SET ICEMAKER OFF until water line is connected.

5

- **IMPORTANT:** IMMEDIATELY REMOVE CLEAR PROTECTIVE TAPE FROM SIDE DOOR TRIM (IF USED).
- APPLIANCE POLISH WAX IS RECOMMENDED FOR REMOVING TAPE RESIDUE AND HANDPRINTS FROM EXTERIOR.
- REMOVE ALL TAPE AND OTHER PACKAGING MATERIAL FROM REFRIGERATOR INTERIOR. DO NOT REMOVE SERIAL PLATE.

IF NECESSARY TO REMOVE DOORS...

HINGE COVER

NUT

CLAMP COUPLING

WIRING CONNECTORS

FLAT GAUGE

PENNY

ALIGN DOORS EVENLY ACROSS TOP

- At lower hinge - Remove tubing clamp. Loosen nut and pull tubing from coupling.
- At upper hinge - Remove cover and disconnect wiring connectors.
- Remove both hinges with the door to prevent damage to tubing or wiring.
- Reinstall doors. Tighten lower hinge screws **FIRMLY**. Leave upper hinge screws loose.
- Use flat gauge (or penny) at top to space doors 3/4" from cabinet.
- Align both doors **EVENLY** across the top. Tighten upper hinge screws **FIRMLY**.
- Reconnect all wiring and position wires to prevent pinching. Reinstall cover.
- Reinstall tubing into coupling and tighten nut. Reinstall tubing clamp.