

5KFP1335
5KFP1325



KitchenAid

English	5
Deutsch	35
Français	65
Italiano	95
Nederlands	125
Español	155
Português	185
Ελληνικά	215
Svenska	245
Norsk	275
Suomi	305
Dansk	335
Íslenska	365
Русский	395
Polski	425
Český	455
العربية	485

TABLE OF CONTENTS

FOOD PROCESSOR SAFETY	
Important safeguards.....	6
Electrical requirements	8
Electrical equipment waste disposal.....	8
PARTS AND FEATURES	
Parts and accessories.....	9
Important food processor features	10
ACCESSORIES	
Included accessories.....	11
Disc assembly overview	12
Accessories selection guide.....	13
PREPARING THE FOOD PROCESSOR FOR FIRST USE	
Before first use	14
Removing the work bowl cover from the work bowl.....	14
SETTING UP YOUR FOOD PROCESSOR	
Attaching the work bowl.....	15
Attaching the work bowl cover.....	16
Installing the adjustable slicing disc	17
Adjusting the slicing thickness.....	18
Installing the shredding disc.....	19
Installing the multipurpose blade or dough blade*.....	20
Installing the mini-bowl* and mini-blade*.....	21
Installing the egg whip*.....	22
Using the 3-in-1 feed tube.....	23
USING YOUR FOOD PROCESSOR	
Before use	24
Using the speed 1/speed 2 control.....	25
Using the pulse control.....	25
Removing processed foods.....	26
CARE AND CLEANING	27
TIPS FOR GREAT RESULTS	
Using the multipurpose blade.....	28
Using a slicing or shredding disc	29
Using the dough blade*	30
Helpful hints	30
TROUBLESHOOTING	32
WARRANTY AND SERVICE	33

* Included only in model 5KFP1335

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Food Processor in water or other liquid.
3. This appliance is not intended for use by persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
4. Children should be supervised to insure they do not play with the appliance. The appliance is not to be used by children. The appliance and cord should be out of reach of children. Children shall not clean or perform user maintenance on the appliance without supervision.

FOOD PROCESSOR SAFETY

5. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contacting moving parts.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the Food Processor. A scraper may be used but must be used only when the Food Processor is not running.
12. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
13. To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
14. Be certain cover is securely locked in place before operating appliance.
15. Never feed food by hand. Always use the food pusher.
16. Do not attempt to defeat the cover interlock mechanism.

FOOD PROCESSOR SAFETY

- 17.** This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices or other working environments.
 - farm houses.
 - by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments.
- 18.** Be careful if hot liquid is poured into the Food Processor as it can be ejected out of the appliance due to a sudden steaming.

SAVE THESE INSTRUCTIONS


Electrical requirements

Voltage: 220-240 Volts
Frequency: 50/60 Hertz
Wattage: 300 Watts

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Electrical equipment waste disposal

Disposal of packing material


The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

Scrapping the product

- This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment

and human health, which could otherwise be caused by inappropriate waste handling of this product.




- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.
- For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



PARTS AND FEATURES

Parts and accessories

English

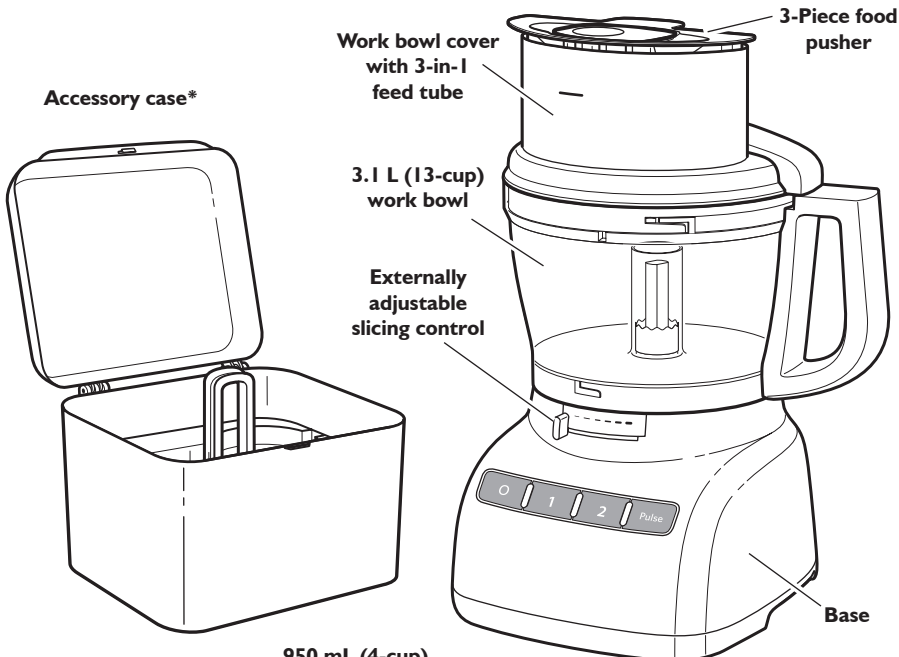


950 mL (4-cup) Mini-bowl* and mini-blade*

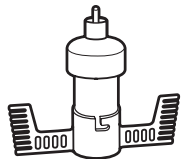
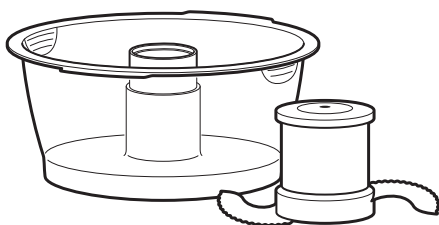


Egg whip*

 
Externally adjustable slicing disc (thin to thick)



 
Reversible (2 mm and 4 mm) shredding disc

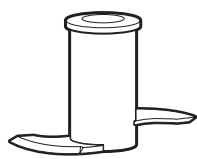


Dough blade*

 


Slicing adapter

 

Drive adapter

 

Disc adapter

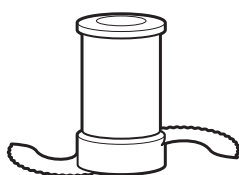

Stainless steel multipurpose blade

* Included only in model 5KFP1335

PARTS AND FEATURES

Important Food Processor features

Externally adjustable slicing control

KitchenAid's exclusive externally adjustable slicing disc allows you to adjust slicing thickness from thin to thick, without having to remove the blade assembly. With the slicing disc installed, simply slide the Slicing Thickness Control to the desired setting - no need to remove the cover or even turn off the Food Processor!

Speed 1/ speed 2 /pulse control

Two speeds and Pulse provide precise control to give great results with most any food.

Work bowl cover with 3-in-1 feed tube

The 3-in-1 feed tube accommodates large items – like tomatoes, cucumbers, and potatoes – with a minimum of sectioning or slicing.

3-Piece food pusher

Three pushers are nested inside of each other. Remove the medium pusher from the large pusher to reveal a medium-size feed tube for continuous processing.

For continuous processing of smaller items (like herbs, nuts, single carrots, and celery), remove the narrow pusher and use the narrow feed tube.

A small hole in the bottom of the narrow pusher makes it easy to drizzle oil into ingredients – just fill with the desired amount of oil or other liquid ingredient.

Heavy-duty base

The heavy, slip-resistant base helps provide improved stability and reduced vibration during tough food processing jobs.

Included accessories

3.1 L (13-Cup) Work bowl

The durable, large work bowl provides capacity for large jobs.

950 mL (4-Cup) Mini-bowl* and mini-blade*

Mini-bowl and stainless steel mini-blade are perfect for small chopping and mixing jobs.

Externally adjustable slicing disc

Disc is adjustable from approximately 1 to 6 mm (1/16 to 1/4 inch) for slicing most foods.

Reversible shredding disc

Shredding disc is reversible to allow coarse or finely shredded cheese or vegetables.

Drive adapter

The drive adapter is used with the appropriate adapter to connect the slicing/shredding discs and mini-blade* to the power shaft on the base.

Slicing adapter

Adapter fits over the drive adapter and into the bottom of the adjustable slicing disc.

Disc adapter

Adapter fits over the drive adapter and into the bottom of the shredding disc.

Stainless steel multipurpose blade

Versatile blade chops, minces, blends, mixes, and emulsifies in a matter of seconds.

Dough blade*

The dough blade is specially designed for mixing and kneading yeast dough.

Egg whip*

The egg whip will quickly whip egg whites for meringues, mousses, soufflés, and desserts.

Accessory case*

Stylish and durable case organizes and protects blades, discs, and accessories.

Spatula/cleaning tool*(not shown)


Special shape facilitates food removal from bowls, discs, and blades.

* Included only in model 5KFP1335

ACCESSORIES

Disc assembly overview

There are two different disc adapters included with the food processor. One is used exclusively with the adjustable slicing disc. The other is used with the Reversible Shredding Disc and all other optional discs.

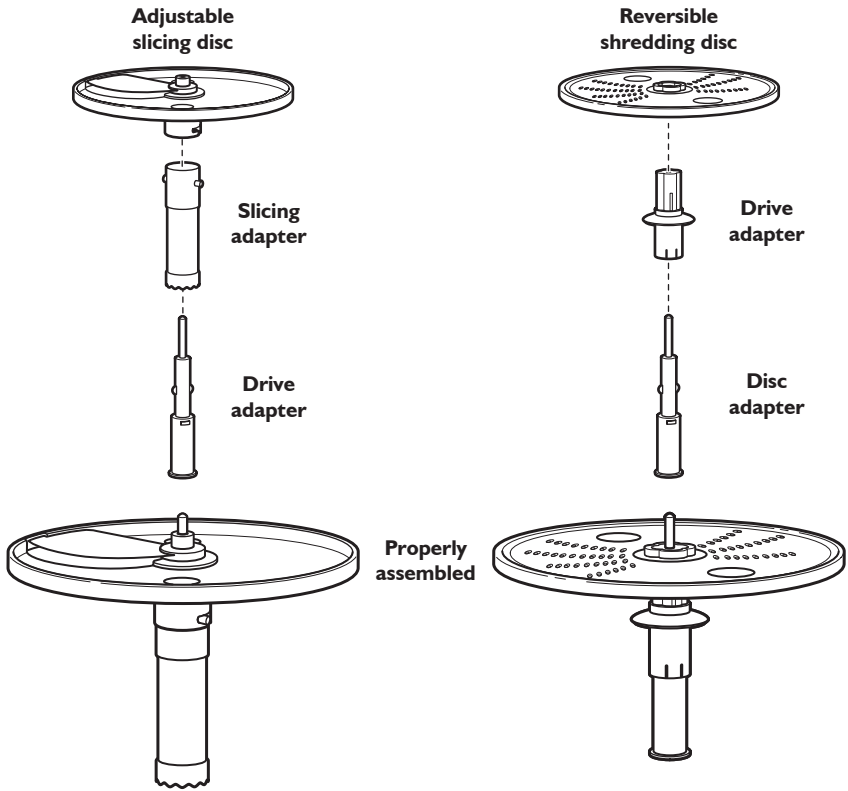

Accessories selection guide

Action



Mince

Chop

Puree



Mix

Setting



Food

Cheese
Chocolate
Fruit
Fresh Herbs
Nuts
Tofu
Vegetables
Meat

Pasta Sauce
Pesto
Salsa
Sauces
Cake Batter
Pie Dough

Fruit (soft)
Potatoes
Tomatoes
Vegetables (soft)

Cheese
Chocolate
Fruit (hard)
Vegetables (hard)

Potatoes
Vegetables (soft)

 
Cabbage
Cheese
Chocolate
Fruit (hard)
Vegetables (hard)

Yeast Dough

Eggs

Accessory

Multipurpose stainless steel blade




Or


Mini-bowl* and mini multipurpose stainless steel blade*



Adjustable slicing disc

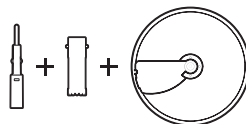


Reversible shredding disc

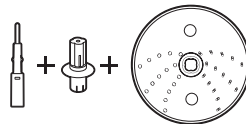

Plastic dough blade*



Egg whip*

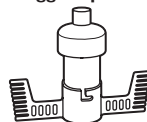

* Included only in model 5KFP1335

PREPARING THE FOOD PROCESSOR FOR FIRST USE


Before first use

Before using your Food Processor for the first time, wash the work bowl, work bowl cover, mini-bowl*, feed tube pushers, discs, and blades either by hand or in the dishwasher (see “Cleaning the Food Processor”).


Removing the work bowl cover from the work bowl

Your Food Processor is shipped with the work bowl cover installed on the work bowl, with the mini-bowl* inside the work bowl.


To remove the work bowl cover from the work bowl for initial cleaning:

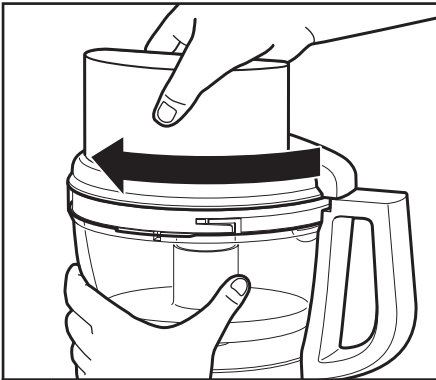

- 1 Grasp the feed tube on the work bowl cover and turn it clockwise to remove it from the work bowl.

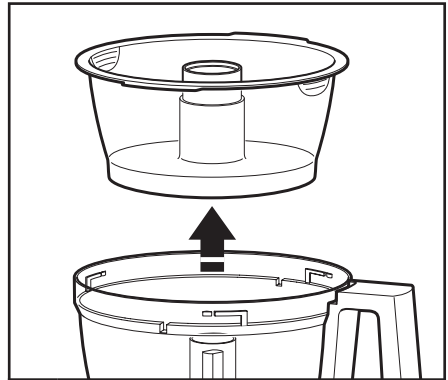

- 2 Lift out the mini-bowl*.

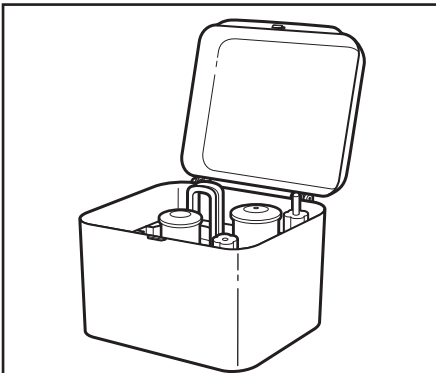

Once washed, disassembled discs, shafts, and blades should be stored in the provided storage case*, in a location out of the reach of children. The mini-bowl* can nest inside the work bowl for convenient storage.


* Included only in model 5KFPI 335

SETTING UP YOUR FOOD PROCESSOR


Attaching the work bowl

NOTE: Select the accessory you would like to use and install it according to the instructions on the following pages.


English

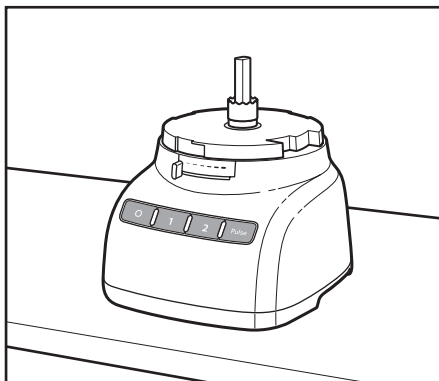

- 1 Place the Food Processor on a dry, level countertop with the controls facing forward. Do not plug in the Food Processor until it is completely assembled.

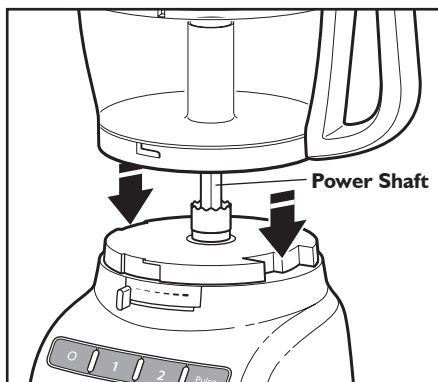

- 2 Place the work bowl on the base, aligning the raised portion with the indentation on the base. The center hole should fit over the power shaft.

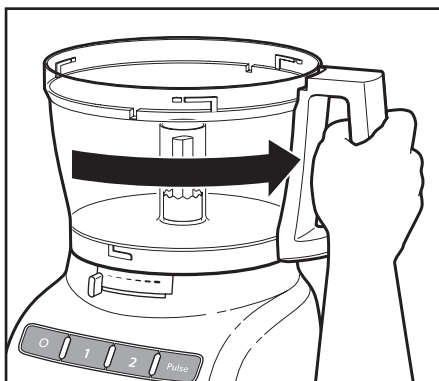


- 3 Grasp the work bowl handle and turn the bowl counterclockwise to lock it on the base.


SETTING UP YOUR FOOD PROCESSOR

Attaching the work bowl cover

NOTE: Your Food Processor will not operate unless the work bowl and work bowl cover are properly locked on the base, and the large pusher is inserted to the maximum fill line on the feed tube (approximately halfway down).

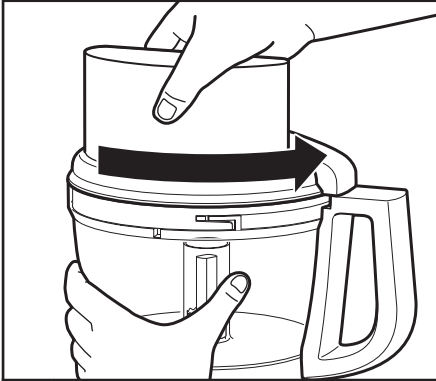

- 1 Place the work bowl cover on the work bowl with the feed tube just to the left of the work bowl handle. Grasp the feed tube and turn the cover to the right until it locks into place.

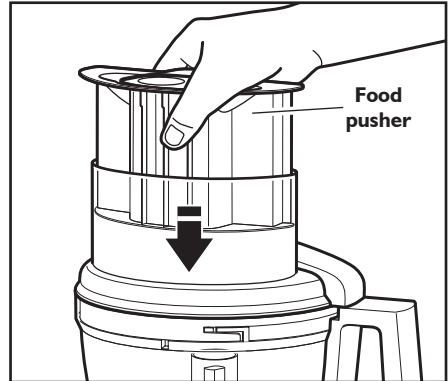

- 2 Fit the food pusher into the 3-in-1 feed tube. See "Using the 3-in-1 Feed Tube" for details on working with different sized foods.


NOTE: Be sure to install the desired accessory before attaching the work bowl cover.

SETTING UP YOUR FOOD PROCESSOR


Installing the adjustable slicing disc

IMPORTANT: The adjustable slicing disc can only be installed in one direction.


English

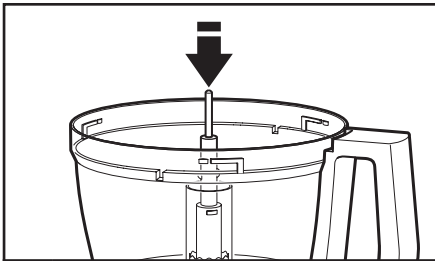


- 1** With the work bowl installed, place the drive adapter on the power shaft of the base.

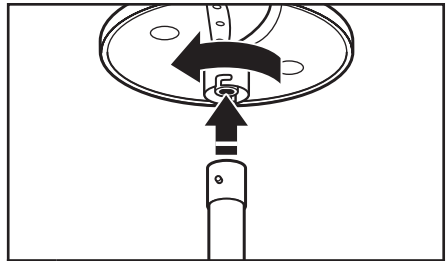

- 2** Holding the adjustable slicing disc by the 2 finger grips, align the pins onto the adjustable slicing disc adapter into the L-slots on the disc. Slide the disc down onto the adapter and turn to engage the pins in the L-slot.

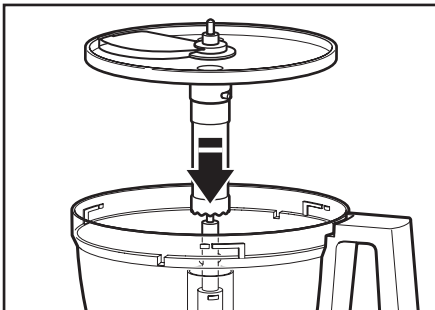

- 3** Lower the slicing blade and slicing adapter onto the drive adapter.

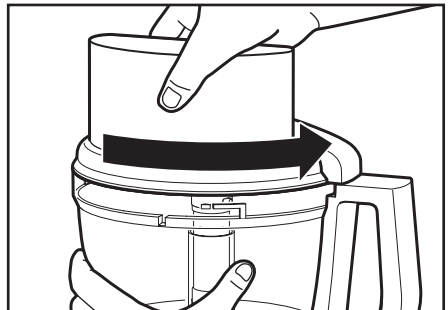


- 4** Install the work bowl cover, being sure it locks into place.

TIP: You may need to turn the disc/drive adapter until it drops down into place.

SETTING UP YOUR FOOD PROCESSOR

Adjusting the slicing thickness

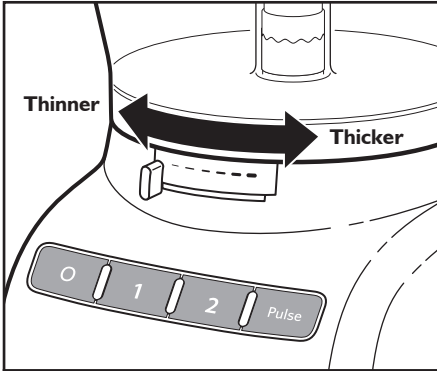

NOTE: The lever only works with the adjustable slicing disc. Changing thickness settings with other discs or blades installed will have no effect on operation.


Set the desired slicing thickness by moving the lever to the left for thinner slices or to the right for thicker slices.

SETTING UP YOUR FOOD PROCESSOR


Installing the shredding disc

IMPORTANT: When using the reversible shredding disc, have the desired side (medium/fine) facing UP.


English

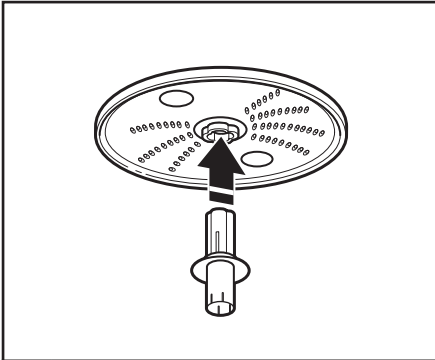

- 1** Holding the disc by the 2 finger grips, insert the disc adapter into the hole in the bottom of the disc.

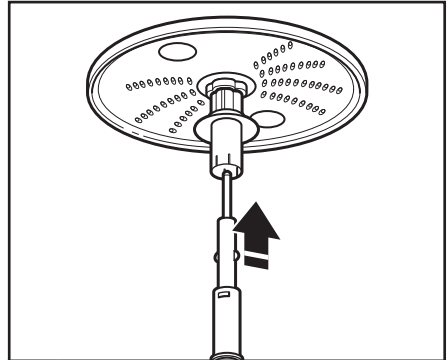

- 2** Slide the drive adapter into the disc adapter as far as it will go, until it clicks into place.

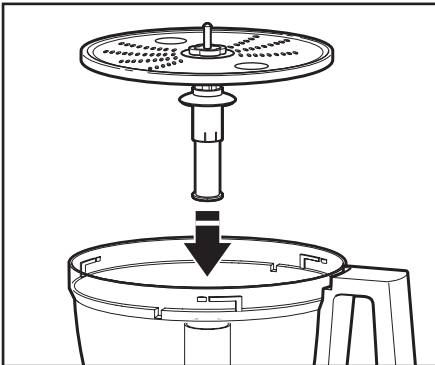

- 3** With the work bowl installed, slide the drive adapter onto the power shaft.




- 4** Install the work bowl cover, being sure it locks into place.


TIP: You may need to turn the disc/drive adapter until it drops down into place.

SETTING UP YOUR FOOD PROCESSOR

Installing the multipurpose blade or dough blade*

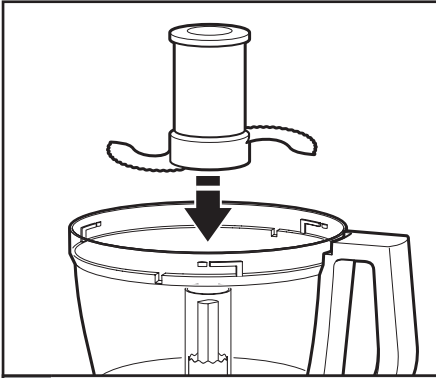

- 1** Place the blade on the power shaft. Rotate the blade so it falls into place on the power shaft.

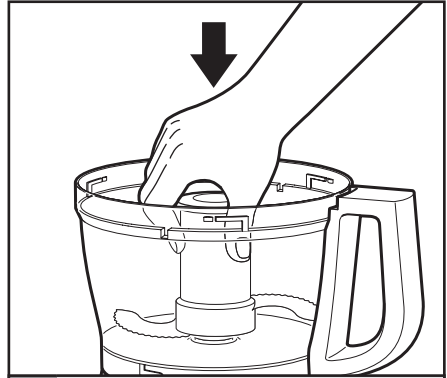


- 2** Push to lock. Press down firmly on the multipurpose blade until it is down as far as it will go. The multipurpose blade features an internal seal that fits tightly over the center of the work bowl. Install the work bowl cover, being sure it locks into place.

IMPORTANT: The multipurpose blade and dough blade* can only be used with the work bowl.


* Included only in model 5KFP1335

SETTING UP YOUR FOOD PROCESSOR


Installing the mini-bowl* and mini-blade*

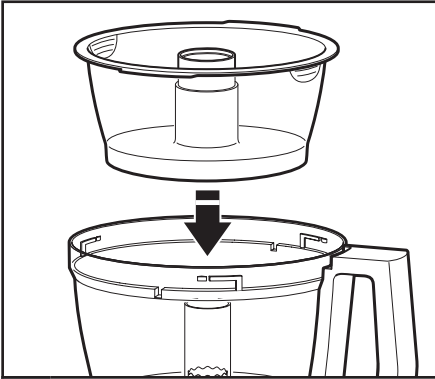


1 Place the mini-bowl inside the work bowl over the power shaft. Rotate the mini-bowl until the tabs on the top edge of the bowl drops into the indents on the top of the work bowl.

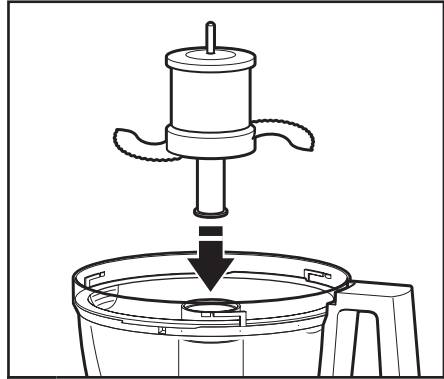

2 Insert the drive adapter into the mini-bowl, and place on the power shaft. It may be necessary to rotate the blade until it falls into place. Press down firmly to lock it into place.

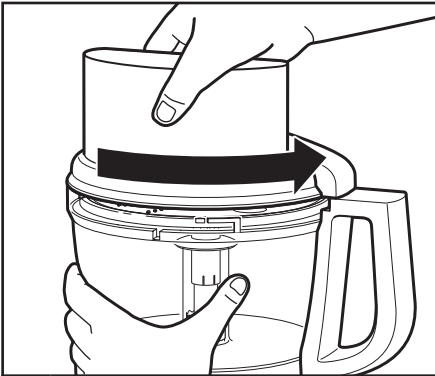

3 Install the work bowl cover, being sure it locks into place.

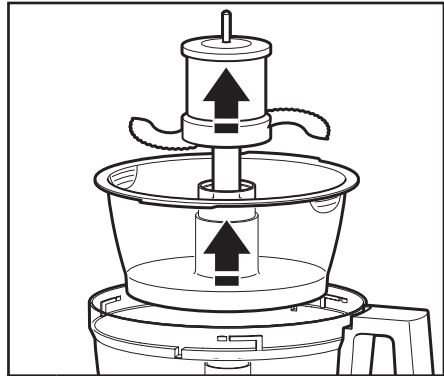


4 To remove the mini-bowl after processing, remove the mini-blade by pulling straight up on the cap. Then lift the bowl straight up and out, using the two finger grips located along the top edge of the bowl.

* Included only in model 5KFP1335


SETTING UP YOUR FOOD PROCESSOR

Installing the egg whip*


IMPORTANT: The egg whip can only be used with the work bowl.

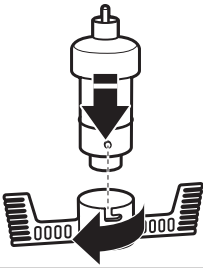

- 1 Be sure the egg whip is properly assembled. If the two pieces have been disassembled for cleaning, align the pin on the egg whip adapter with the slot on the egg whip, and rotate to lock into place.

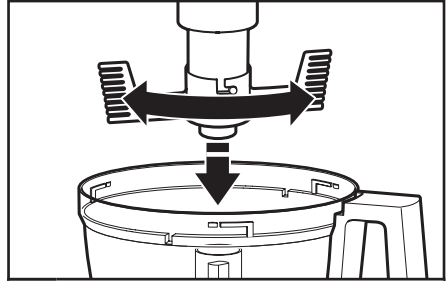

- 2 With the work bowl in place on the base, place the egg whip on the power shaft. Rotate the egg whip so it falls into place on the power shaft.

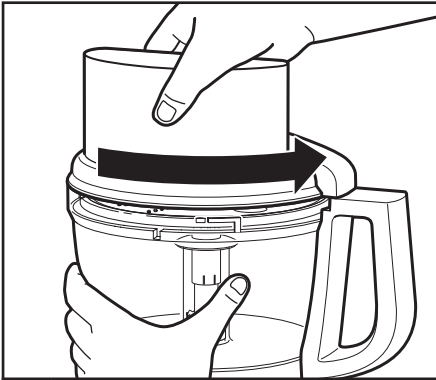

- 3 Install the work bowl cover, being sure it locks into place.

* Included only in model 5KFP1335


SETTING UP YOUR FOOD PROCESSOR

Using the 3-in-1 feed tube

The 3-in-1 feed tube features a 3-piece food pusher. Use the entire food pusher to process large items, or use the inner portions to create medium-sized or small feed tubes to process smaller items.

To slice or shred small items, insert the 3-piece food pusher into the feed tube, then lift out the small pusher to remove. Use the small feed tube and pusher to process small or slender items, like single carrots or celery stalks. When not using the small feed tube, be sure to lock the small pusher into place.

To slowly drizzle oil or other liquid ingredients into the work bowl, just fill the small pusher with the desired amount of liquid. A small hole in the bottom of the pusher will drizzle the liquid ingredient at a constant rate.

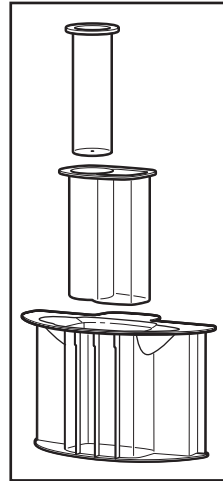

USING YOUR FOOD PROCESSOR

Before use

WARNING



Rotating Blade Hazard


Always use food pusher.

Keep fingers out of openings.

Keep away from children.

Failure to do so can result in amputation or cuts.

Before operating the Food Processor, be sure the work bowl, blades, and work bowl cover are properly assembled on the Food Processor base (see “Setting Up Your Food Processor”).

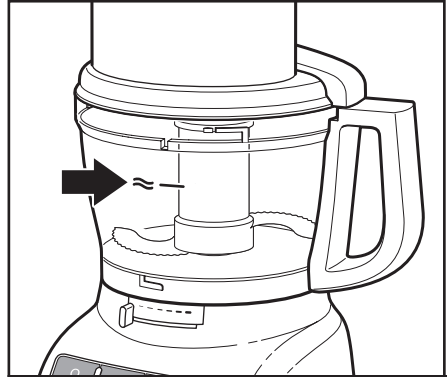


This line on the work bowl indicates the maximum level of liquid that can be processed by the Food Processor.

USING YOUR FOOD PROCESSOR


Using the speed 1/speed 2 control

IMPORTANT: Wait until the blade or disc comes to a complete stop before removing the work bowl cover. Be sure to turn off the Food Processor before removing the work bowl cover, or before unplugging the Food Processor.

English

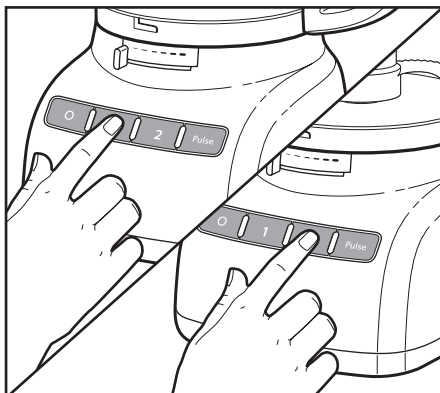

1 To turn on the Food Processor, press the Speed 1 button (low speed, for soft food) or the Speed 2 button (high speed, for hard food). The Food Processor will run continuously and the indicator light will glow.

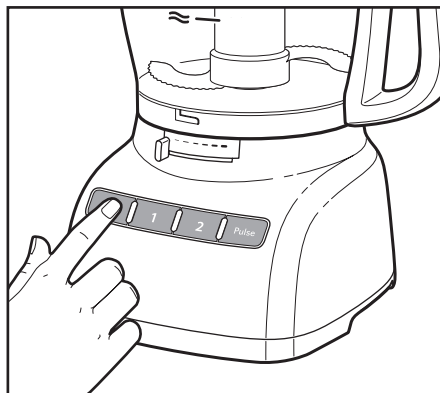


2 To stop the Food Processor, press the O (OFF) button. The indicator light will go out and the blade or disc will stop within a few seconds.

NOTE: If the Food Processor fails to operate, make sure the work bowl and cover are properly locked on the base (see "Setting Up Your Food Processor").


Using the pulse control

The pulse control allows precise control of the duration and frequency of processing. It's great for jobs which require a light touch. Just press and hold the PULSE Button to start processing at high speed, and release it to stop.

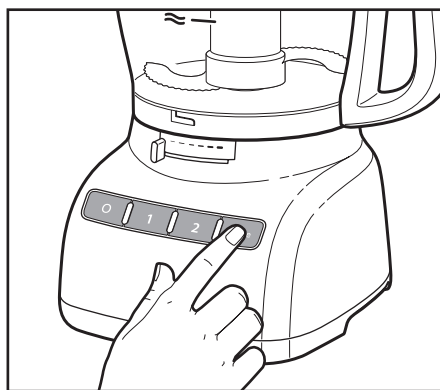

USING YOUR FOOD PROCESSOR


Removing processed foods

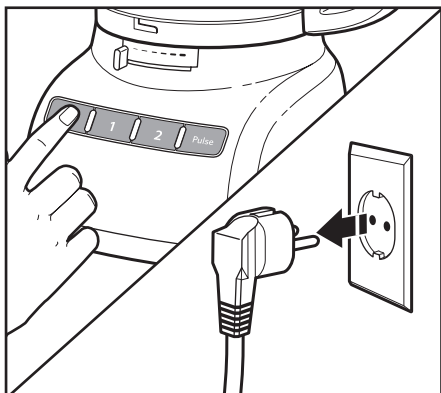


- 1** Press the O (OFF) button. Unplug the Food Processor before disassembling.



- 2** Turn the work bowl cover to the left and remove.

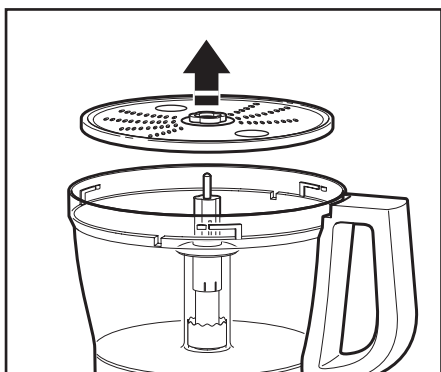


- 3** If using a disc, remove it before removing the bowl. Holding the disc by the 2 finger grips, lift it straight up. Remove the adapter.

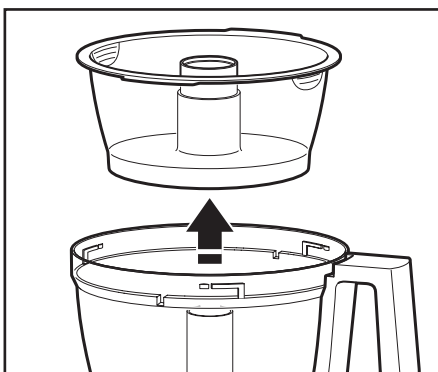


- 4** If using the mini-bowl*, grasp and remove the bowl using the finger grips located along the top edge of the bowl.

USING YOUR FOOD PROCESSOR

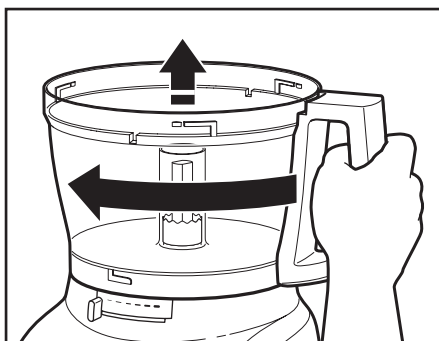

- 5** Turn the work bowl to the left to unlock it from the base. Lift to remove.

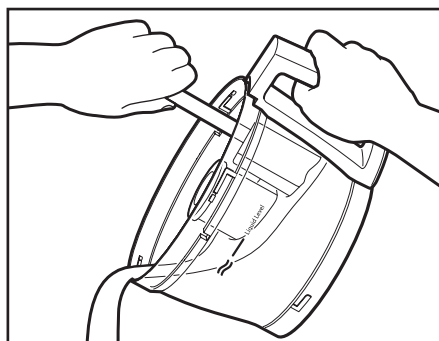

- 6** The multipurpose blade can be removed from the work bowl before the contents are emptied. You may also leave the blade locked in place. Then remove food from the bowl and blade with a spatula.

English

CARE AND CLEANING

1. Press the **O** (OFF) button.
2. Unplug the Food Processor before cleaning.
3. Wipe the base and cord with a warm, sudsy cloth, and wipe clean with a damp cloth. Dry with a soft cloth. Do not use abrasive cleansers or scouring pads.
4. Please note these BPA-free bowls require special handling. If you choose to use a dishwasher instead of hand washing, please follow these guidelines.
 - All parts are **top rack** dishwasher safe.
 - Avoid laying the bowl on its side.
 - Avoid using high temperature settings such as sanitize or steam settings.
5. If washing the Food Processor parts by hand, avoid the use of abrasive cleansers or scouring pads. They may scratch or cloud the work bowl and cover. Thoroughly dry all parts after washing.
6. To prevent damage to the locking system, always store the work bowl and work bowl cover in the unlocked position when not in use.
7. Wrap the power cord around the work bowl. Secure the plug by clipping it to the cord.
8. Disassembled discs, shafts, and blades should be stored in the provided storage case*, and in a location out of the reach of children.

* Included only in model 5KFP1335

TIPS FOR GREAT RESULTS

Using the multipurpose blade



To chop fresh fruits or vegetables:

Peel, core, and/or remove seeds. Cut food in 1 to 2.5-4 cm (1 1/2-inch) pieces. Process food to desired size, using short pulses, 1 to 2 seconds each time. Scrape sides of bowl, if necessary.

To puree cooked fruits and vegetables (except potatoes):

Add 60 mL (1/4 cup) liquid from recipe per 235 mL (1 cup) of food. Process food, using short pulses, until finely chopped. Then process continuously until reaching desired texture. Scrape sides of bowl, if necessary.

To prepare mashed potatoes:

Shred hot cooked potatoes using the shredding disc. Exchange shredding disc for multipurpose blade. Add softened butter, milk, and seasonings. Pulse 3 to 4 times, 2 to 3 seconds each time, until smooth and milk is absorbed. Do not over process.

To chop dried (or sticky) fruits:

The food should be cold. Add 60 mL (1/4 cup) flour from recipe per 120 mL (1/2 cup) dried fruit. Process fruit, using short pulses, until reaching desired texture.

To finely chop citrus peel:

With sharp knife, peel colored portion (without white membrane) from citrus. Cut peel in small strips. Process until finely chopped.

To mince garlic or to chop fresh herbs or small quantities of vegetables:

With processor running, add food through the feed tube. Process until chopped. For best results, make sure work bowl and herbs are very dry before chopping.

To chop nuts or make nut butters:

Process up to 710 mL (3 cups) of nuts to desired texture, using short pulses, 1 to 2 seconds each time. For a coarser texture, process smaller batches, pulsing 1 or 2 times, 1 to 2 seconds each time. Pulse more often for finer texture. For nut butters, process continuously until smooth. Store in refrigerator.

To chop cooked or raw meat, poultry or seafood:

The food should be very cold. Cut in 2.5 cm (1-inch) pieces. Process up to 455 g (1 pound) at a time to desired size, using short pulses, 1 to 2 seconds each time. Scrape sides of bowl, if necessary.

To make bread, cookie, or cracker crumbs:

Break food into 3.5-5.0 cm (1 1/2 to 2-inch) pieces. Process until fine. For larger pieces, pulse 2 to 3 times, 1 to 2 seconds each time. Then process until fine.

To melt chocolate in a recipe:

Combine chocolate and sugar from recipe in work bowl. Process until finely chopped. Heat liquid from recipe. With processor running, pour hot liquid through the feed tube. Process until smooth.

To grate hard cheeses, such as Parmesan and Romano:

Never attempt to process cheese that cannot be pierced with the tip of a sharp knife. You can use the multi-purpose blade to grate hard cheeses. Cut cheese in 2.5 cm (1-inch) pieces. Place in work bowl. Process, using short pulses, until coarsely chopped. Process continuously until finely grated. Pieces of cheese can also be added through the feed tube while the processor is running.


NOTE: Processing nuts and other hard foods may scratch the surface finish on the inside of the bowl.

TIPS FOR GREAT RESULTS

Using a slicing or shredding disc



To slice or shred fruits or vegetables that are long and relatively small in diameter, such as celery, carrots, and bananas:

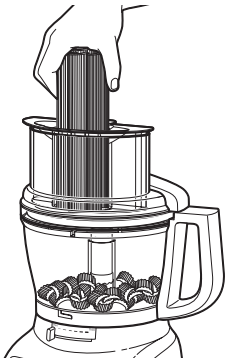

Cut food to fit feed tube vertically or horizontally, and pack feed tube securely to keep food positioned properly. Process using even pressure.

Or use the small feed tube in the two-piece food pusher. Position food vertically in the tube and use the small food pusher to process food.

To slice or shred fruits and vegetables that are round, such as onions, apples, and green peppers:

Peel, core, and remove seeds. Cut in halves or quarters to fit feed tube. Position in feed tube. Process using even pressure.

To slice or shred fruits and vegetables that are small, such as strawberries, mushrooms, and radishes:

Position food vertically or horizontally in layers within the feed tube. Fill feed tube in order to keep food positioned properly. Process, using even pressure. Or use the small feed tube in the two-piece food pusher. Position food vertically in the tube and use the small food pusher to process food.

To slice uncooked meat or poultry, such as stir-fry meats:

Cut or roll food to fit feed tube. Wrap and freeze food until hard to the touch, 30 minutes to 2 hours, depending on thickness of food. Check to be sure you can still pierce food with the tip of a sharp knife. If not, allow to thaw slightly. Process, using even pressure.

To slice cooked meat or poultry, including salami, pepperoni, etc.:

Food should be very cold. Cut in pieces to fit feed tube. Process food using firm, even pressure.

To shred spinach and other leaves:

Stack leaves. Roll up and stand up in feed tube. Process using even pressure.

 


To shred firm and soft cheeses:

Firm cheese should be very cold. For best results with soft cheeses, such as mozzarella, freeze 10 to 15 minutes before processing. Cut to fit feed tube. Process using even pressure.

TIPS FOR GREAT RESULTS

Using the dough blade*




The dough blade is specially designed for mixing and kneading yeast dough

quickly and thoroughly. For the best results, do not knead recipes which use more than 350 g (3 cups) of flour.

Helpful hints

- To avoid damage to the blade or motor, do not process food that is so hard or firmly frozen that it cannot be pierced with the tip of a sharp knife. If a piece of hard food, such as a carrot, becomes wedged or stuck on the blade, stop the processor and remove the blade. Gently remove food from the blade.
- Do not overfill work bowl or mini-bowl*. For thin mixtures, fill work bowl up to 1/2 to 2/3 full. For thicker mixtures, fill work bowl up to 3/4 full. For liquids, fill up to the maximum level as described in the section "Using Your Food Processor - Maximum Liquid Level". When chopping, the work bowl should be no more than 1/3 to 1/2 full. Use the mini-bowl* for up to 235 mL (1 cup) of liquid or 120 mL (1/2 cup) solids.
- Position slicing discs so the cutting surface is just to the right of the feed tube. This allows the blade a full rotation before contacting the food.
- To capitalize on the speed of the processor, drop ingredients to be chopped through the feed tube while the processor is running.
- Different foods require varying degrees of pressure for best shredding and slicing results. In general, use light pressure for soft, delicate foods (strawberries, tomatoes, etc.), moderate pressure for medium foods (zucchini, potatoes, etc.), and firmer pressure for harder foods (carrots, apples, hard cheeses, partially frozen meats, etc.).
- Soft and medium-hard cheese may spread out or roll up on the shredding disc. To avoid this, shred only well-chilled cheese.
- Sometimes slender foods, such as carrots or celery, fall over in the feed tube, resulting in an uneven slice. To minimize this, cut food in several pieces and pack the feed tube with the food. For processing small or slender items, the small feed tube in the two piece food pusher will prove especially convenient.

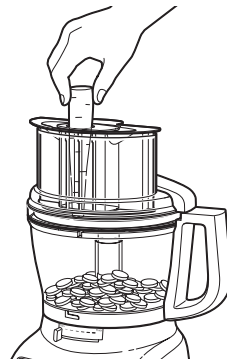


* Included only in model 5KFP1335

TIPS FOR GREAT RESULTS

- When preparing a cake or cookie batter, use the multipurpose blade to cream fat and sugar first. Add dry ingredients last. Place nuts and fruit on top of flour mixture to prevent overchopping. Process nuts and fruits, using short pulses, until blended with other ingredients. Do not overprocess.
- When shredded or sliced food piles up on one side of the bowl, stop the processor and redistribute the food using a spatula.
- When food quantity reaches the bottom of a slicing or shredding disc, remove the food.
- A few larger pieces of food may remain on top of the disc after slicing or shredding. If desired, cut these by hand and add to mixture.
- Organize processing tasks to minimize bowl cleanup. Process dry or firm ingredients before liquid ingredients.
- To clean ingredients from the multipurpose blade easily, just empty the work bowl, replace the lid, and pulse 1 to 2 seconds to spin the blade clean.
- After removing the work bowl cover, place it upside down on the counter. This will help keep the counter clean.

- Use a spatula to remove ingredients from the work bowl.

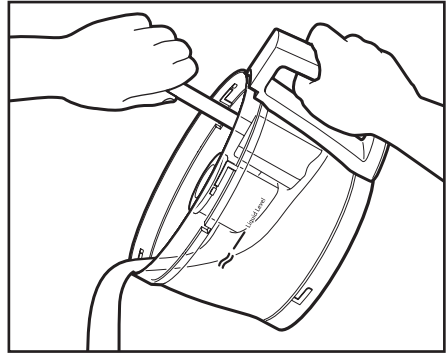


- Your Food Processor is **not** designed to perform the following functions:
 - Grind coffee beans, grains, or hard spices
 - Grind bones or other inedible parts of food
 - Liquefy raw fruits or vegetables
 - Slice hard-cooked eggs or unchilled meats.
- If any plastic parts should discolor due to the types of food processed, clean them with lemon juice.

TROUBLESHOOTING

If your Food Processor should malfunction or fail to operate, check the following:

Food Processor doesn't run:

- Make sure that the bowl and lid are properly aligned and locked in place and the large food pusher is inserted in the feed tube.
- When using the large feed tube opening, make sure that food is not above the Max. Fill line on the feed tube.

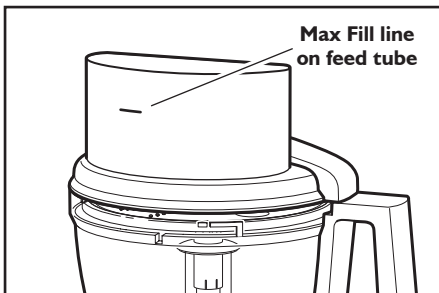


- Press only one button at a time. The Food Processor will not operate if more than one button is pressed at the same time.
- Is the Food Processor plugged in?
- Is the fuse in the circuit to the Food Processor in working order? If you have a circuit breaker box, be sure the circuit is closed.
- Unplug the Food Processor, then plug it back into the outlet.
- If the Food Processor is not at room temperature, wait until it reaches room temperature and retry.

Food Processor not shredding or slicing properly:

- Make sure the raised-blade side of the disc is positioned face up on the common adapter.
- If using the adjustable slicing blade, make sure it is set to the correct thickness.
- Make sure ingredients are suitable for slicing or shredding. See "Tips for great results."

If the work bowl cover won't close when using the disc:

- Make sure the disc is installed correctly, with the raised nub on top, and is positioned properly on the drive adapter.

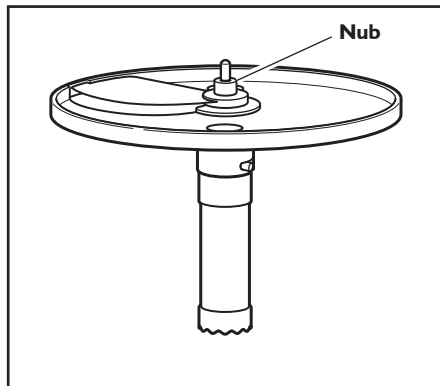

If the problem is not due to one of the above items, see "Warranty and service" section.

WARRANTY AND SERVICE

KitchenAid Food Processor warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa : For Model 5KFP1335, 5KFP1325: Three years Full Warranty from date of purchase.	The replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.	A. Repairs when Food Processor is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Customer service

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorized Service Center, please find our contact details below.

NOTE: All service should be handled locally by an Authorized KitchenAid Service Center.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504.

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorized KitchenAid Service/Customer Center.

For more information, visit our website at:

www.KitchenAid.co.uk

www.KitchenAid.eu

KitchenAid

© 2014. All rights reserved.
Specifications subject to change without notice.