



WINE CELLAR

Use & Care Guide

BODEGA DE VINO

Guía Para el uso y cuidado

VIN CAVE

Guide d'utilisation et d'entretien

Models / Modelos / Modèles 795.13483500

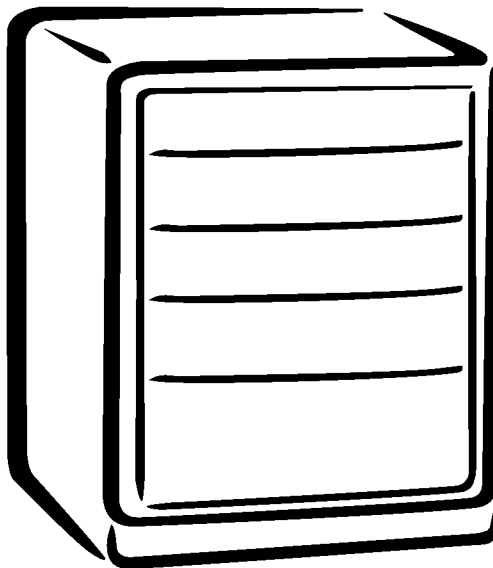 


TABLE OF CONTENTS

English Version	2~13
Spanish Version	14~25
French Version	26~37
PROTECTION AGREEMENTS	3
SAFETY INSTRUCTIONS.....	4-5
PARTS AND FEATURES	6
WINE CELLAR INSTALLATION.....	7
MOVEMENT AND TRANSPORTATION	8
IF THIS HAPPENS	8
USING YOUR WINE CELLAR	9
WINE SHELVES.....	10
WINE STORAGE GUIDE	10
CARE AND CLEANING.....	11
NORMAL OPERATING CONDITIONS	11
PLEASE CONFIRM THE FOLLOWING BEFORE CALLING FOR SERVICE	12
PRODUCT SPECIFICATIONS.....	13



Kenmore Elite Appliance Warranty

One Year Limited Warranty

When installed, operated and maintained according to all instructions supplied with the product, if this appliance fails due to a defect in material or workmanship within one year from the date of purchase, call 1-800-4-MY-HOME® to arrange for free repair.

If this appliance is used for other than private family purposes, this warranty applies for only 90 days from the date of purchase.

Five Year Limited Warranty on Sealed Refrigeration System

For five years from the date of purchase, when installed, operated, and maintained according to the Use & Care Guide, the sealed system (consisting of refrigerant, connecting tubing, and compressor) will be repaired free of charge if defective in material or workmanship.

This warranty covers only defects in material and workmanship. Sears will NOT pay for:

1. Expendable items that can wear out from normal use, including but not limited to filters, belts, light bulbs, and bags.
2. A service technician to instruct the user in correct product installation, operation or maintenance.
3. A service technician to clean or maintain this product.
4. Damage to or failure of this product if it is not installed, operated or maintained according to all instructions supplied with the product.
5. Damage to or failure of this product resulting from accident, abuse, misuse or use for other than its intended purpose.
6. Damage to or failure of this product caused by the use of detergents, cleaners, chemicals or utensils other than those recommended in all instructions supplied with the product.
7. Damage to or failure of parts or systems resulting from unauthorized modifications made to this product.

Disclaimer of implied warranties; limitation of remedies

Customer's sole and exclusive remedy under this limited warranty shall be product repair as provided herein. Implied warranties, including warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law. Sears shall not be liable for incidental or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, or limitations on the duration of implied warranties of merchantability or fitness, so these exclusions or limitations may not apply to you.

This warranty applies only while this appliance is used in the United States and Canada.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

Sears Canada Inc., Toronto, Ontario, Canada M5B 2B8

PROTECTION AGREEMENTS

In the U.S.A.

Master Protection Agreements

Congratulations on making a smart purchase. Your new Kenmore® product is designed and manufactured for years of dependable operation. But like all products, it may require preventive maintenance or repair from time to time. That's when having a Master Protection Agreement can save you money and aggravation.

Purchase a Master Protection Agreement now and protect yourself from unexpected hassle and expense.

The Master Protection Agreement also helps extend the life of your new product. Here's what's included in the Agreement:

- ✓ **Expert service** by our 12,000 professional repair specialists
- ✓ **Unlimited service and no charge** for parts and labor on all covered repairs
- ✓ **"No-lemon" guarantee**—replacement of your covered product if four or more product failures occur within twelve months
- ✓ **Product replacement** if your covered product can't be fixed
- ✓ **Annual Preventive Maintenance Check** at your request—no extra charge
- ✓ **Fast help by phone**—phone support from a Sears technician on products requiring in-home repair, plus convenient repair scheduling
- ✓ **Power surge protection** against electrical damage due to power fluctuations
- ✓ **Rental reimbursement** if repair of your covered product takes longer than promised

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment online.

Sears has over 12,000 professional repair specialists, who have access to over 4.5 million quality parts and accessories. That's the kind of professionalism you can

count on to help prolong the life of your new purchase for years to come. Purchase your Master Protection Agreement today!

Some limitations and exclusions apply.

For prices and additional information call 1-800-827-6655.

Sears Installation Service

For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, in the U.S.A. call 1-800-4-MY-HOME.®

In Canada

Maintenance Agreements

Your purchase has added value because you can depend on Sears HomeCentral® for service. With over 2400 Service Technicians and more than a million parts and accessories, we have the tools, parts, knowledge and skills to back our pledge: We Service What We Sell.

Your Kenmore® product is designed, manufactured and tested to provide years of dependable operation. But like all products, it may require service from time to time. The Sears Maintenance Agreement offers you an outstanding service program, affordably priced.

The Sears Maintenance Agreement:

- Is your way to buy tomorrow's service at today's price
- Eliminates repair bills resulting from normal wear and tear
- Provides phone support from a Sears technician on products requiring in-home repair
- Even if you don't need repairs, provides an annual Preventive Maintenance Check, at your request, to ensure that your product is proper running condition

Some limitations apply. For more information about Sears Canada Maintenance Agreements, call 1-800-361-6665

PRODUCT RECORD

In the space below, record the date of purchase, model and serial number of your product. You will find the model and serial number printed on an identification label located on the right-hand side of the wine cellar compartment. Have these items of information available whenever you contact Sears concerning your product.

Model No. _____

Date of Purchase _____

Serial No. _____

Dealer _____

Save these instructions and attach your sales receipt for future reference.

IMPORTANT SAFETY INSTRUCTIONS

This guide contains many important safety messages. Always **read and obey** all safety messages.



This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others, or cause damage to the product.

All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, CAUTION. These words mean:

DANGER

You **will** be killed or seriously injured if you don't follow instructions.

WARNING

You **can** be killed or seriously injured if you don't follow instructions.

CAUTION

Indicates a hazardous situation which, if not avoided, **may** result in minor or moderate injury, or product damage only.

All safety messages will identify the hazard, tell you how to reduce the chance of injury and tell you what can happen if the instructions are not followed.

WARNING

• Tipover hazard serious injury may occur...

- Do not climb or stand on product
- Do not climb or stand on racks
- Do not hang or stand on door
- Do not remove racks while wine is stored on them

CAUTION

- Impact or pressure on glass door may cause damage or injury
- Use caution when opening or closing the door to prevent injuries from pinching or scraping fingers and toes

WARNING

To reduce the risk of fire, electrical shock, or injury to persons when using your product, basic safety precautions should be followed, including the following:

Read all instructions before using this appliance.

- NEVER unplug your wine cellar by pulling on the power cord. Always grip the plug firmly and pull it straight out from the outlet.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either the plug or connector end.
- When moving your wine cellar away from the wall, be careful not to roll over or damage the power cord.
- DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- DO NOT allow children to climb, stand or hang on the wine cellar doors or shelves in the wine cellar. They could damage the wine cellar and seriously injure themselves.

- Keep fingers out of *pinch point* areas; clearances of the door and cabinet are narrow.
Be careful closing doors when children are in the area.
- Unplug your wine cellar before cleaning or making any repairs.
NOTE: We strongly recommend that any servicing be performed by a qualified individual.
- This wine cellar must be properly installed in accordance with the **Installation Instructions** that are in wine cellar.

SAVE THESE INSTRUCTIONS

⚠ DANGER: RISK OF CHILD ENTRAPMENT

Junked or abandoned wine cellars are dangerous...even if they will sit for just a few days. If you are getting rid of your old wine cellar, please follow the instructions on the right to help prevent accidental child entrapment.

BEFORE YOU THROW AWAY YOUR OLD WINE CELLAR

- Take off the door.
- Dismantle locking device.
- Leave the shelves in place so that children may not easily climb inside.

CFC DISPOSAL

If you are disposing of an old wine cellar it may have a cooling system that used CFCs (chlorofluorocarbons). CFCs are believed to harm stratospheric ozone.

If you are disposing of an old wine cellar, make sure the CFC refrigerant is removed for proper disposal by a qualified servicer. If you intentionally release this CFC refrigerant, you can be subject to fines and imprisonment under provisions of environmental legislation.

GROUNDING REQUIREMENTS

 
IMPORTANT: Please read carefully.

TO CONNECT ELECTRICITY

⚠ WARNING

Electrical Shock Hazard

FOR PERSONAL SAFETY, this appliance must be properly grounded. Have the wall outlet and the circuit checked by a qualified electrician to make sure the outlet is properly grounded.

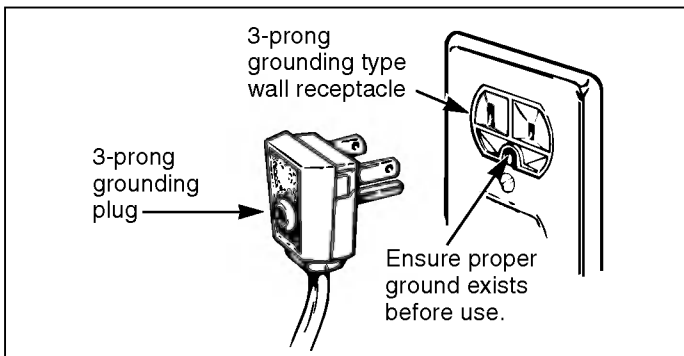

RECOMMENDED GROUNDING METHOD

The wine cellar should always be plugged into its own individual properly grounded electrical outlet rated for 115 Volts, 60 Hz, AC only, and fused at 15 or 20 amperes. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires. It is

recommended that a separate circuit serving only this appliance be provided. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

Where a standard two-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded three-prong wall outlet.

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord.

 
NOTE: Before performing any type of installation or cleaning, disconnect the wine cellar from the electrical source. When you are finished, reconnect the wine cellar to the electrical source and reset the control panel to the desired setting.

USE OF EXTENSION CORDS

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord. However, if you still elect to use an extension cord, it is absolutely necessary that it be a UL-listed (USA), 3-wire grounding type appliance extension cord having a grounding type plug and outlet, and that the electrical rating of the cord be 15 amperes (minimum) and 120 volts.


Use of an extension cord will increase the clearance needed for the back of the wine cellar.

PARTS AND FEATURES

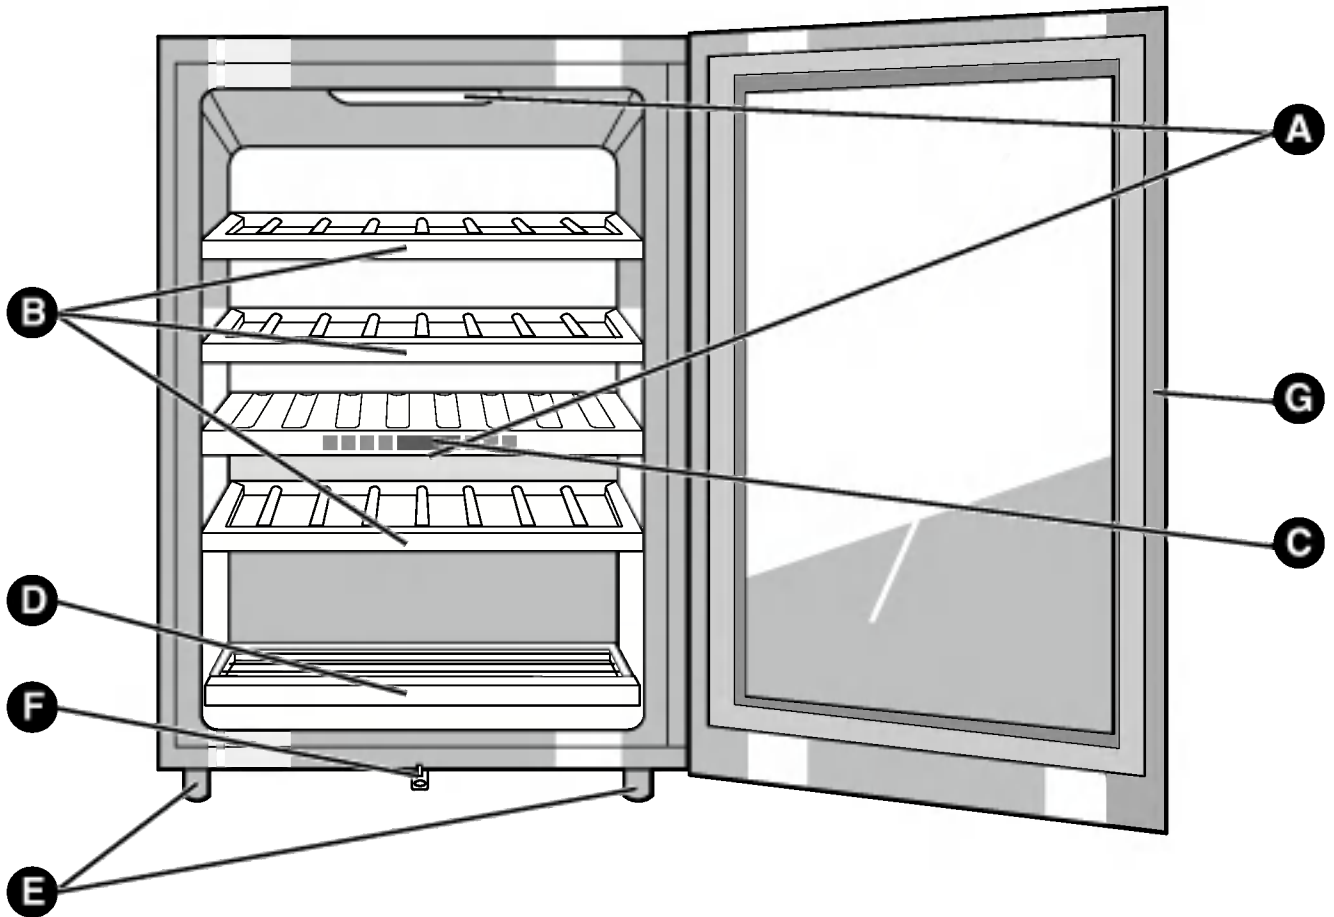

Use this page to become more familiar with the parts and features.

 - A** Interior Lights
- B** Wine Shelf (large)
- C** Control Panel
- D** Wine Shelf (small)
- E** Leveling Legs
- F** Latch
- G** Door (Non-Reversible)
- H** Key
- I** Lock

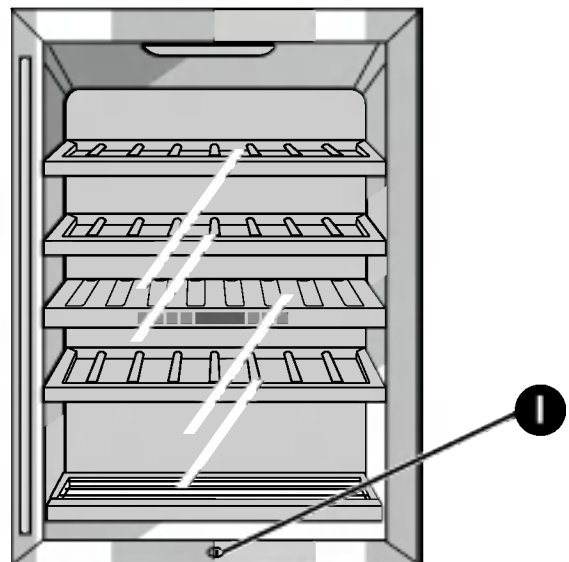

WINE CELLAR INSTALLATION

⚠ WARNING

Excessive Weight Hazard

Use at least two people to move and install wine cellar.
Failure to do so may result in back or other injury.

UNPACKING YOUR WINE CELLAR

Remove tape and any temporary labels from your wine cellar before using. Do not remove any warning-type labels, the model and serial number label, or the TechSheet that is attached to back wall of the wine cellar.

To remove any remaining tape or glue, rub the area briskly with your thumb. Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners to remove tape or glue. These products can damage the surface of your wine cellar.

⚠ WARNING

When Moving Your Wine Cellar:

Your wine cellar is heavy. When moving the wine cellar for cleaning or service, be sure to protect the floor. Always pull the wine cellar straight out when moving it. Do not wiggle or walk the wine cellar when trying to move it, as floor damage could occur.

⚠ WARNING



Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from wine cellar.
Failure to do so can result in death, explosion or fire.

INSTALLATION

1. To avoid vibration, the unit must be level. If required, adjust the leveling legs to compensate for unevenness of the floor. The front should be slightly higher than the rear to aid in door closing. Leveling legs can be turned easily by tipping the cabinet slightly. Turn the leveling legs clockwise (↻) to raise the unit, counterclockwise (↺) to lower it.
 2. Install this appliance in an area where the temperature is between 55°F (13°C) and 110°F (43°C.) If the temperature around the appliance is too low or high, cooling ability may be adversely affected.
 3. Allow the clearance of at least 4" from the top and 2" from the side walls for better cooling efficiency, ease of installation, proper air circulation and electrical connections.
- ⚠ **CAUTION:** Avoid placing the unit near heat sources, direct sunlight or moisture.
4. Clean your wine cellar thoroughly and wipe off all dust accumulated during shipping.

NEXT

1. Please connect with power supply.
Plug into a 115V grounded outlet.
2. Your wine cellar is now ready for use.
3. Set your temperature to your desired setting.(See page 9)

⚠ WARNING

- Do not put hands, feet or metal sticks into air vents, back cover or bottom of wine cellar. You may be injured or receive an electrical shock.

MOVEMENT AND TRANSPORTATION

 
MOVING THE WINE CELLAR

Before moving

1. Remove all contents from the wine cellar.
2. Disconnect the power plug.
3. Secure loose parts, such as shelves, with tape.
4. Raise the wine cellar a little and tighten the leveling legs in as far as possible.

During transportation

1. Hold onto the leveling legs while carrying.
2. Always carry the wine cellar in an upright position - never tipped to the front, back, or side.
3. Wine cellars are heavy. It must be lifted by at least 2 people.

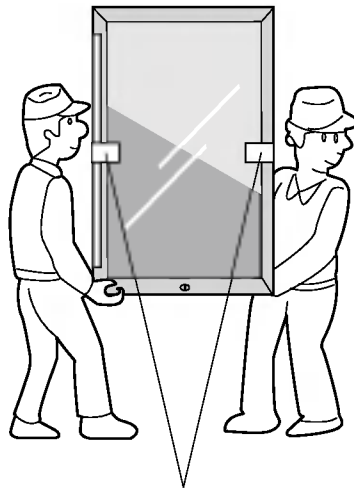

Fasten the door with a removable tape to prevent it from opening.

IF THIS HAPPENS

INSUFFICIENT COOLING

When a large amount of wine is placed into the wine cellar, more time is needed to reach the desired temperature and get stabilized. (Sudden changes in temperature are the main reason for damage to wine flavor)

POWER OUTAGE

Open and close the door as little as possible. After power is restored, the displayed temperature defaults to 57°F. Reset if needed. (see page 9)

INTERIOR LIGHT MALFUNCTIONS

Contact service center.

 
UNIT IS NOT IN USE

Disconnect power supply and clean wine cellar interior. Open the door for 2-3 days to dry the wine cellar (to prevent mold and bad odor). When the wine cellar is restarted, the displayed temperature defaults to 57°F. Reset if needed.

USING YOUR WINE CELLAR

WINE CELLAR TEMPERATURE CONTROL


- Temperature range is 46°F to 64°F.
- The temperature can be adjusted in 1°F increments.

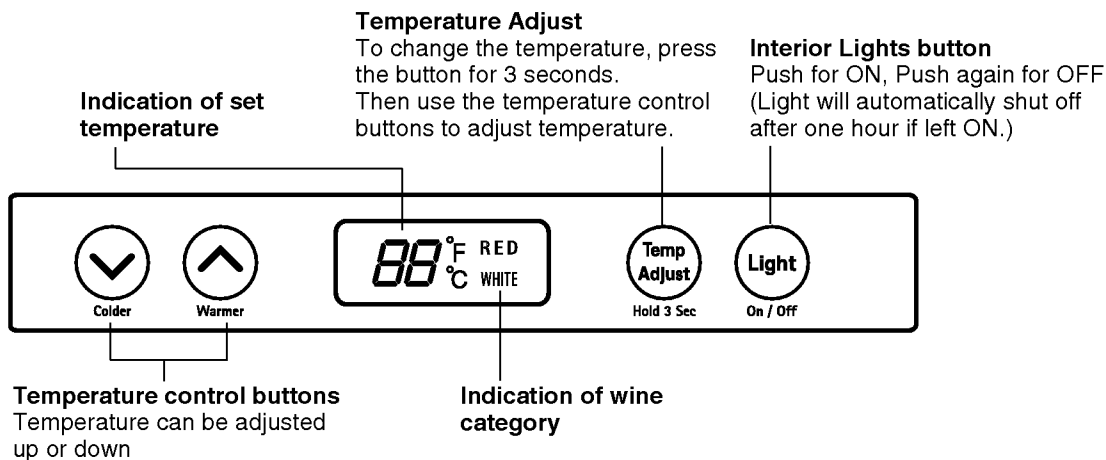


CHANGE THE TEMPERATURE

Default (factory) setting is 57°F.

 
- ① Press “Temp Adjust” button for 3 seconds. When “Temp Adjust” button is pressed, the temperature indicator blinks.



 - ② Each press of the warmer or colder temperature button will raise or lower the temperature by 1°F.



 
- ③ After the temperature is selected, the temperature display will stop flashing and lock the temperature setting in 10 seconds.



- ④ For the best results, select a temperature setting in the range specified for each type of wine.

RED 53°F~64°F
WHITE 46°F~52°F

 - ⑤ To change the temperature display from °C to °F or °F to °C, press and hold the “Temp Adjust” and “Light” buttons simultaneously for 3 seconds.



STORAGE TEMPERATURE FOR WINE

- Note that the temperature of the upper compartment cannot be set colder than the lower compartment.
- When it is first plugged in, the temperature is set to RED (57°F).
- The recommended temperature range for wine is:

WHITE 46°F~52°F

RED 53°F~64°F

- The time for the interior temperature to reach the set temperature varies with the specific usage of the wine cellar.
- The displayed temperature is the set temperature, which may be different from the actual temperature of the wine stored in the wine cellar.
- After a power outage, temperature resetting is needed. Resetting can be made in accordance with instructions above.

WINE SHELVES

 
1. CENTER SHELF WITH CONTROLS

It is not designed to pull out. Do not pull out.

2. WIRE SHELVES(3)

To Remove and Replace the Wine Shelves

1. Pull the wine shelves forward, lifting it up and out of supports.
2. Replace the shelf by inserting the shelf into the supports and sliding it toward the rear of the wine cellar.

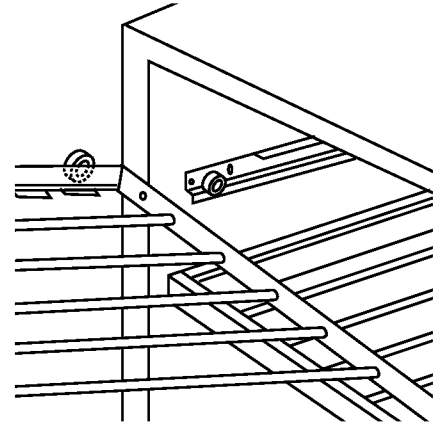

3. BOTTOM SHELF

It is not designed to pull out except for cleaning.

4. WOOD TRIM

 
IMPORTANT: To prevent permanent damage to the inner liner of your wine cellar, the wine shelf wood trim must be removed from the unit for staining or finishing. Allow the stain or finish to dry thoroughly for a minimum of 24 hours or in accordance with the manufacturers directions whichever is longer, prior to reinstalling the shelves. Failure to do so may cause the inner liner to have a permanent odor which is not covered under the warranty.

Your wine cellar has a natural wood trim on the wine shelves. You may choose to stain the wood trim or to apply a clear finish coat. If you opt to stain or coat the wood trim, remove the shelves from the wine cellar before staining. Allow the shelves to dry for a minimum of 24 hours or in accordance with the manufacturers directions, whichever is longer, before returning them to the wine cellar.


WINE STORAGE GUIDE

LOADING DIRECTION

- **Upper Shelves:** When loading the shelves, place the wine bottles in opposite directions as shown. Maximum 8 bottles.

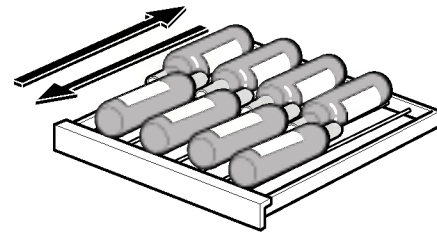

 - **Bottom Shelf:** When loading the shelf, place the wine bottles in opposite directions as shown. Maximum 9 bottles.

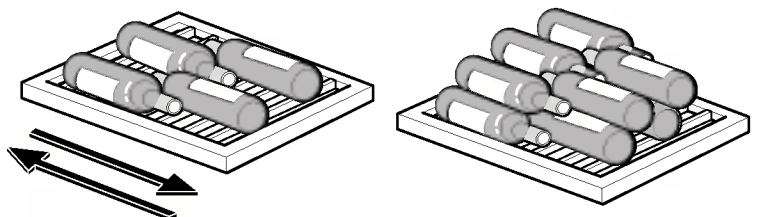

CARE AND CLEANING

 
Clean the shelves and the wine cellar interior thoroughly once every year.

1. Before cleaning

Disconnect power plug.

2. Cleaning wine cellar surfaces and door gasket

Clean with soft towels dipped in warm water or detergent. If mild detergent is used, wipe dry with a clean towel.

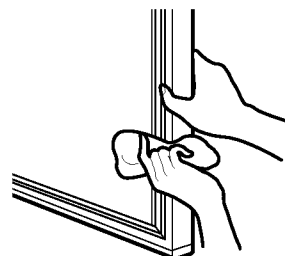

NORMAL OPERATING CONDITIONS

There are normal noises inside the wine cellar

- Sound of coolant flowing.
There are cooling lines in the rear, which often make a noise under normal operation.

Interior light does not come on when opening the door.

- There is an “on/off” button for interior light.
- The interior light will automatically shut off after one hour if left ON.

Moisture on the door gasket

- Moisture drops may appear on the door gasket when outdoor temperature and humidity are high.
Wipe them away with a dry cloth.

EXTERNAL MOISTURE

External moisture on the surface

- Same as what happens when icy water is filled into a glass, i.e. external moisture will appear on its outer surface.
External moisture may appear when warm and humid air touches the unit, especially in hot weather. Wipe it away with a dry cloth.

Internal moisture






- Internal moisture may appear if the door is opened frequently when it is hot and humid.
It will disappear automatically as product operates. It is recommended to wipe away moisture with a dry cloth.

ODOR

New product odor

- Same as a new car or new furniture which will give off an odor.
The odor from the new product may come from plastic components or other items used inside.

PLEASE CONFIRM THE FOLLOWING BEFORE CALLING FOR SERVICE

Situation	Please check	Measures
<p>The wine cellar does not operate</p> 	<ul style="list-style-type: none"> • Is power supply on? • Is power plug inserted into socket? 	<ul style="list-style-type: none"> • Check if other electric appliances operate or not. • Re-connect the plug properly.
<p>Inefficient cooling</p> 	<ul style="list-style-type: none"> • Is the door closed tightly? • Is it under direct sunlight or near heat sources such as gas stove? • Is the distance between the wine cellar and surrounding items appropriate? • Is the ambient temperature appropriate? 	<ul style="list-style-type: none"> • Raise the wine cellar front slightly using the leveling legs. • Move wine bottles away from the door to allow it to close tightly. • Check the installation location. • See wine cellar installation (page 7) for appropriate clearances. • Temperatures above 55°F and below 110°F are appropriate.
<p>Loud noise/ Abnormal sound</p> 	<ul style="list-style-type: none"> • Is the floor flat and firm and is it installed solidly (noise may be louder on wooden floor)? • Is there anything stacked on top or behind the wine cellar? 	<ul style="list-style-type: none"> • Please install wine cellar on flat and firm floor. • Clear away stacked items.
<p>Moisture appears in the interior</p> 	<ul style="list-style-type: none"> • Is the door closed tightly? 	<ul style="list-style-type: none"> • Make sure the door is closed and the gasket is sealing properly. The moisture will disappear after the door is closed tightly. It is recommended to wipe excessive moisture away with a dry cloth.
<p>The door can not be closed tightly</p> 	<ul style="list-style-type: none"> • Is the wine cellar tilted forward? • Are shelves placed correctly? 	<ul style="list-style-type: none"> • Please adjust the leveling legs (adjusting the wine cellar front slightly higher will allow the door to be closed tightly). • Place shelves properly.

PRODUCT SPECIFICATIONS

The items (appearance and specifications) listed in this guide may vary due to constant product improvements.

Model	795.13483500
Capacity	4.7 cu.ft
Storage	41 bottles
Width	23.4 in
Depth	25 in (with handle)
Height	32.3 in
Rated Voltage & Frequency	115V/60Hz
Net Weight	104 lbs

Get it fixed, at your home or ours!

Your Home

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call or go on-line for the location of your nearest

Sears Parts & Repair Center.

1-800-488-1222

Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

