

 
 
 
 
KitchenAid®

KHM72 & KHM92



PARTS AND FEATURES



PARTS AND ACCESSORIES

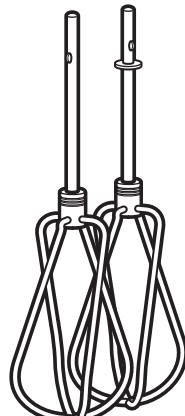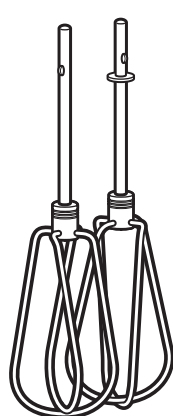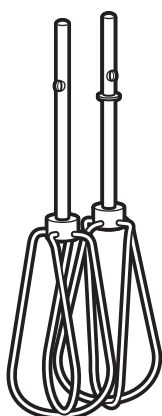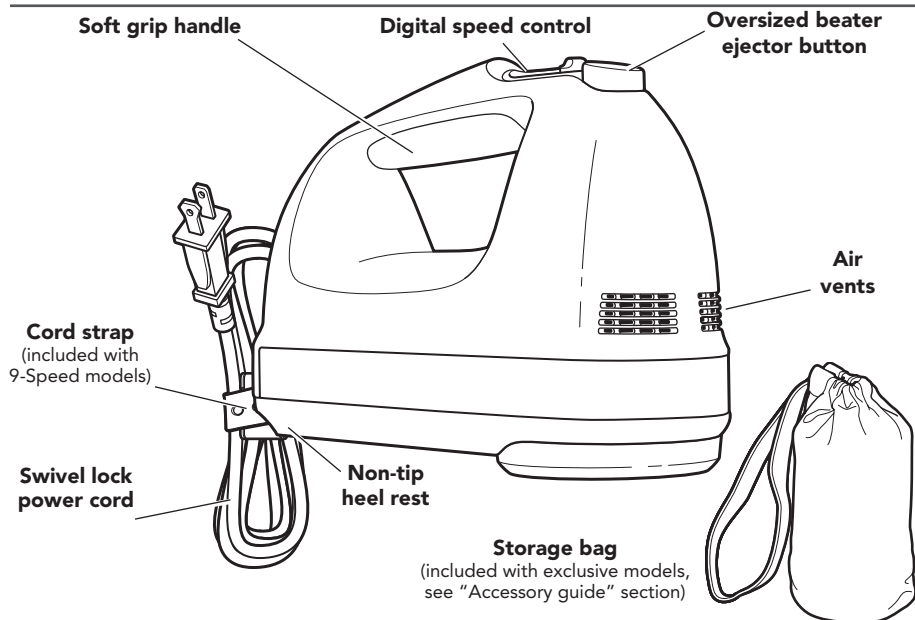

Turbo Beater™ accessory

Turbo Beater™ II accessory

  Artisan™ Beater accessory
(Included with Professional Models only)

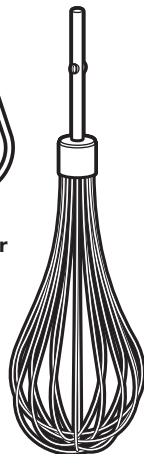

Liquid blender rod accessory
(included with 9-Speed models)

 
 
 




Dough hooks accessory

16-Tine pro whisk accessory



PARTS AND FEATURES

ACCESSORY GUIDE

Accessory	Uses	Included with Model				
		KHM7210	KHM7211	KHM926	KHM929	KHM9212
 <p>Turbo Beater™</p>	cookie dough cake batter		●		●	
 <p>Turbo Beater™ II</p>	cookie dough cake batter	●		●		
 <p>Artisan™ Beater †</p>	cookie dough cake batter					●
 <p>Liquid blender rod</p>	smoothies diet drink mixes chocolate milk iced tea milkshakes soups sauces			●	●	●
 <p>Dough hooks</p>	yeast bread doughs		●	●	●	●
 <p>16-Tine pro whisk</p>	whipped cream whipped egg whites sauces puddings	●		●	●	●
 <p>Storage bag †</p>	to store accessories		●	● ††		●

† Not sold as an accessory.

†† Please note, the storage bag referenced is not included with model KHM926Q.

To order these accessories

In USA: visit www.shopkitchenaid.com, or call 1-800-541-6390.

In Canada: call 1-800-807-6777



HAND MIXER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

 **DANGER**

You can be killed or seriously injured if you don't immediately follow instructions.

 **WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

State of California Proposition 65 Warnings:

WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put the Hand Mixer in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from all accessories during operation to reduce the risk of injury to persons and/or damage to the Hand Mixer.



HAND MIXER SAFETY

6. Do not operate the Hand Mixer with a damaged cord or plug, or after the Hand Mixer malfunctions, or is dropped or damaged in any manner. Return the Hand Mixer to the nearest Authorized Service Center for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
8. Do not use the Hand Mixer outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Remove any accessories from the Hand Mixer before washing.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.

ELECTRICAL REQUIREMENTS

Volts: 120 A.C. only.

 
Hertz: 60 Hz

NOTE: This Hand Mixer has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. This product is designed for household use only.



USING THE HAND MIXER

SPEED CONTROL GUIDE: 7-SPEED HAND MIXERS



The 7-Speed Hand Mixer always starts on the lowest speed (Speed 1). Move to higher speeds as needed, the speed setting indicator control will light up with the corresponding number for each speed.

Speed	Attachment	Description
1		For slow stirring, combining, and starting all mixing procedures. Use this speed to stir in nuts, chocolate chips, shredded cheese, onions, olives, and other chunky ingredients. Mix flour and other dry ingredients with liquids or other moist mixtures. Helps prevent ingredients from splashing out of bowl.
2		Mix pancake batter.
3		Combine heavy mixtures, such as cookie dough. Mix light cream cheese spreads. Stir batters and gelatin mixtures.
4		Combine heavy cream cheese mixtures. Mash potatoes or squash.
5		Mix muffins, quick breads, batter breads, cake batters, and frostings. Blend butter and sugar.
6		Whip heavy cream and mousse mixtures.
7		Beat egg whites and meringue mixtures.

NOTE: Beater accessories are not designed for mixing and kneading bread dough. Special dough hook attachments are available. See "Accessories" section for details and ordering information.












USING THE HAND MIXER

SPEED CONTROL GUIDE: 9-SPEED HAND MIXERS



         The 9-Speed Hand Mixer always starts on the lowest speed (Speed 1). Move to higher speeds as needed, the speed setting indicator control will light up with the corresponding number for each speed.

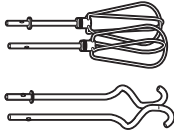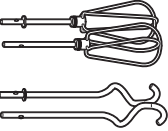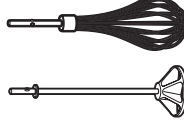Speed	Attachment	Description
1		For slow stirring, combining, and starting all mixing procedures. Use this speed to stir in nuts, chocolate chips, shredded cheese, onions, olives, and other chunky ingredients. Helps prevent ingredients from splashing out of bowl.
2		Mix flour and other dry ingredients with liquids or other moist mixtures.
3		Mix pancake batter.
4		Combine heavy mixtures, such as cookie dough. Mix light cream cheese spreads. Stir batters and gelatin mixtures.
5		Mix muffins and quick breads. Combine heavy cream cheese mixtures. Mash potatoes or squash.
6		Mix batter breads. Blend butter and sugar. Mix frostings.
7		Finish mixing cake and other batters. Whip heavy cream and mousse mixtures.
8		Beat egg whites. Whip heavy cream and mousse mixtures.
9		Beat meringue mixtures.

NOTE: Beater accessories are not designed for mixing and kneading bread dough. Special dough hook attachments are available. See "Accessories" section for details and ordering information.



USING THE HAND MIXER

OPERATING THE SPEED CONTROL

This KitchenAid® Hand Mixer will beat faster and more thoroughly than most other electric hand mixers. Therefore, the beating time in most recipes must be adjusted to avoid over beating. Beating time is faster due to larger beater sizes.

 
To help determine the ideal beating time, observe the batter or dough and beat only until it has the desired appearance described in your recipe, such as “smooth and creamy”. To select the best beating speeds, use the “Speed control guide” section.

⚠ WARNING


Injury Hazard

Unplug mixer before touching beaters.


Failure to do so can result in broken bones, cuts, or bruises.

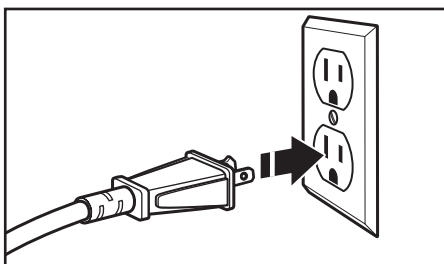

 
- 1 Plug the Hand Mixer into an electrical outlet.

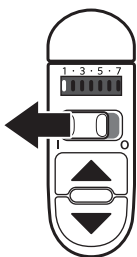

 - 2 Slide the Power switch to the “I” (ON) position. The motor will automatically start at Speed 1, and the “1” on the speed indicator control will light up.

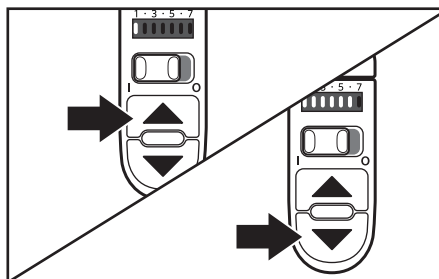

 - 3 Touch the “UP (arrow)” button to increase the mixing speed to the desired setting. If necessary, touch the “DOWN (arrow)” button to decrease the mixing speed. See the “Speed control guide” for more information.

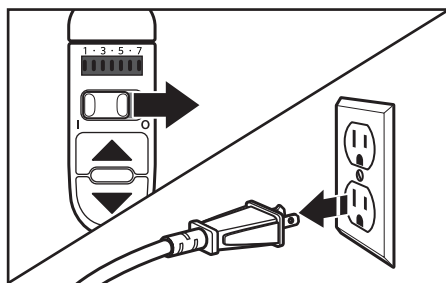

- 4 When mixing job is finished, slide the Power switch to the “O” (Off) position. Unplug the Hand Mixer before removing accessories.

NOTE: The Hand Mixer automatically starts at Speed 1 every time it is turned on, regardless of the Speed setting at the time the Hand Mixer is shut off.



SETTING UP THE HAND MIXER

ATTACHING THE ACCESSORIES

 
⚠ WARNING

Injury Hazard


Unplug mixer before touching beaters.

Failure to do so can result in broken bones, cuts, or bruises.


IMPORTANT: Be sure to read and follow the specific instructions in this manual for proper use of the Hand Mixer.

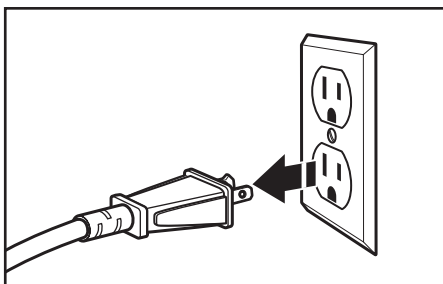

 
- 1 Unplug the Hand Mixer from the electrical outlet.

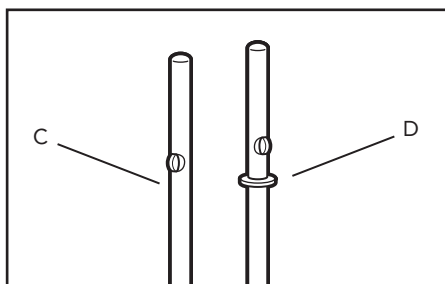

 Paired accessories (beaters, optional dough hooks) include one accessory with a collar (D), and one without (C). Single accessories come with a collar (D) (liquid blending rod) or without (C) (whisk).

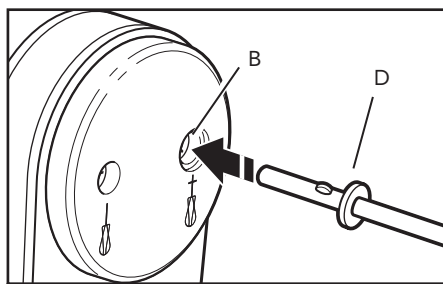

 - 2 Insert the accessory shaft with the collar (D) into the larger opening (B) of the Hand Mixer. Align the flanges on the shaft with the slots in the opening. Push to lock into place.

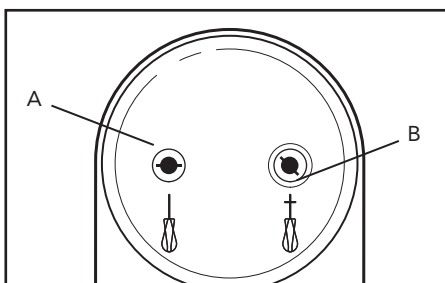


- 3 Insert the accessory without a collar (C) into the smaller opening (A). Align and push to lock into place.

NOTE: An accessory shaft without a collar may be used in either opening (A or B). Those with a collar may only be used in the larger opening (B).




SETTING UP THE HAND MIXER

 
REMOVING THE ACCESSORIES

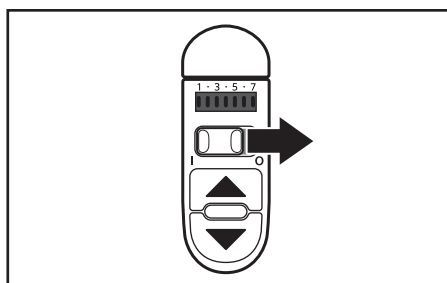

 - 1 If the Hand Mixer is running, stop the Hand Mixer by sliding the Power switch to the "O" (Off) position.

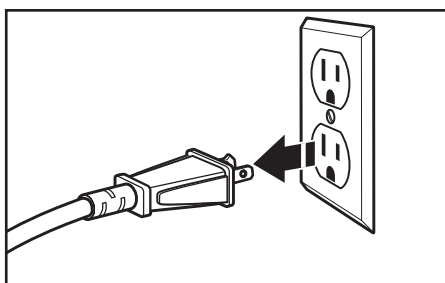

 - 2 Unplug the Hand Mixer from the electrical outlet.

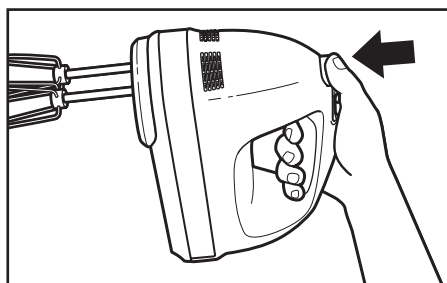

- 3 Press the Ejector Button to release the accessories from the Hand Mixer, then remove them.

CARE AND CLEANING

CLEANING THE HAND MIXER BODY

⚠ WARNING



Electrical Shock Hazard

Do not put in water.

Doing so can result in death or electrical shock.

⚠ WARNING

Injury Hazard

 
Unplug mixer before touching beaters.

Failure to do so can result in broken bones, cuts, or bruises.

NOTE: Do not immerse Hand Mixer in water.




CARE AND CLEANING

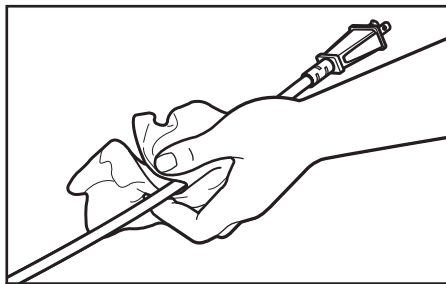

1

 Always unplug Hand Mixer before cleaning. Wipe power cord and cord strap with damp cloth. Dry with a soft cloth.

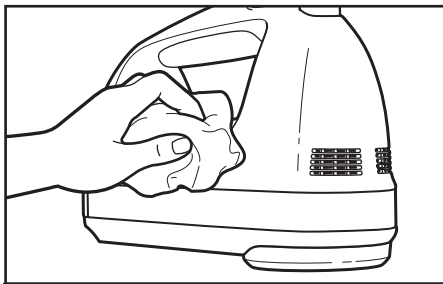


2

Wipe Hand Mixer with a damp cloth. Dry with a soft cloth.

ENGLISH

 CLEANING THE ACCESSORIES

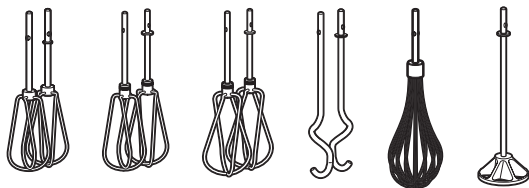

Always remove accessories from Hand Mixer before cleaning. Wash in dishwasher, or by hand in warm, soapy water. Rinse and wipe dry.

CLEANING THE ACCESSORIES



Machine wash warm, tumble dry low. Or wipe clean with a warm soapy cloth.

TROUBLESHOOTING

IF HAND MIXER MALFUNCTIONS OR FAILS TO OPERATE

First try the solutions suggested here and possibly avoid the cost of service.

1. Is the Hand Mixer plugged in?
2. Is the fuse in the circuit to the Hand Mixer in working order? If you have a circuit breaker box, make sure the circuit is closed.
3. Try unplugging the Hand Mixer, then plug it back in.

If the problem cannot be fixed with the steps provided in this section, then contact KitchenAid or an Authorized Service Center.

USA/Puerto Rico: 1-800-541-6390,

Canada: 1-800-807-6777,

Mexico: 01-800-024-17-17
(JV Distribuciones)

or

01-800-902-31-00
(Industrias Birtman)

See the "Warranty" section for additional details. Do not return the Hand Mixer to the retailer – they do not provide service.

TROUBLESHOOTING | 11



WARRANTY AND SERVICES

KitchenAid® Hand Mixer Warranty for the 50 United States, the District of Columbia, Puerto Rico, and Canada

This warranty extends to the purchaser and any succeeding owner for Hand Mixers operated in the 50 United States, the District of Columbia, Puerto Rico, and Canada.

Length of Warranty: One Year Full Warranty from date of purchase.

KitchenAid Will Pay for Your Choice of:



Hassle-Free Replacement of your Toaster. See the next page for details on how to arrange for service, or call the Customer Satisfaction Center toll-free at **1-800-541-6390**.

OR

The replacement parts and repair labor costs to correct defects in materials and workmanship. Service must be provided by an Authorized KitchenAid Service Center.

KitchenAid Will Not Pay for:

- A. Repairs when Toaster is used in other than normal single family home use.
 - B. Damage resulting from accident, alteration, misuse or abuse.
 - C. Any shipping or handling costs to deliver your Toaster to an Authorized Service Center.
 - D. Replacement parts or repair labor costs for Toasters operated outside the 50 United States, District of Columbia, Puerto Rico, and Canada.
-

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

IMPLIED WARRANTIES, INCLUDING TO THE EXTENT APPLICABLE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED TO THE EXTENT LEGALLY PERMISSIBLE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO ONE YEAR, OR THE SHORTEST PERIOD ALLOWED BY LAW. SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS OR EXCLUSIONS ON HOW LONG AN IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

IF THIS PRODUCT FAILS TO WORK AS WARRANTED, CUSTOMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT ACCORDING TO THE TERMS OF THIS LIMITED WARRANTY. KITCHENAID AND KITCHENAID CANADA DO NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.



WARRANTY AND SERVICES

Hassle-Free Replacement Warranty – 50 United States, District of Columbia, and Puerto Rico

We're so confident the quality of our products meets the exacting standards of KitchenAid that, if your Hand Mixer should fail within the first year of ownership, KitchenAid will arrange to deliver an identical or comparable replacement to your door free of charge and arrange to have your original Hand Mixer returned to us. Your replacement unit will also be covered by our one year limited warranty.

If your Hand Mixer should fail within the first year of ownership, simply call our

toll-free Customer Satisfaction Center at **1-800-541-6390** Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address. (No P.O. Box numbers, please.)

When you receive your replacement Hand Mixer, use the carton, packing materials, and prepaid shipping label to pack up your original Hand Mixer and send it back to KitchenAid..

Hassle-Free Replacement Warranty – Canada

We're so confident the quality of our products meets the exacting standards of the KitchenAid brand that, if your Hand Mixer should fail within the first year of ownership, we will replace your Hand Mixer with an identical or comparable replacement. Your replacement unit will also be covered by our one year limited warranty.

If your Hand Mixer should fail within the first year of ownership, simply call our toll-free Customer eXperience Center

at **1-800-807-6777** Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address.

When you receive your replacement Hand Mixer, use the carton, packing materials, and prepaid shipping label to pack up your original Hand Mixer and send it back to KitchenAid.

Arranging for Service after the Warranty Expires, or Ordering Accessories and Replacement Parts

In the United States and Puerto Rico:

For service information, or to order accessories or replacement parts, call toll-free at 1-800-541-6390 or write to:

Customer eXperience Center,
KitchenAid Small Appliances,
P.O. Box 218, St. Joseph, MI 49085-0218

Outside the United States and Puerto Rico:

Consult your local KitchenAid dealer or the store where you purchased the Hand Mixer for information on how to obtain service.

For service information in Canada:

Call toll-free **1-800-807-6777**.

For service information in Mexico:

Call toll-free **01-800-0022-767**.

®/™ ©2018 KitchenAid. All rights reserved. KITCHENAID and the design of the stand mixer are trademarks in the U.S. and elsewhere.



DISCOVER MORE. DÉCOUVREZ PLUS. DESCUBRA MÁS.
KITCHENAID.COM/QUICKSTART



PRODUCT QUESTIONS OR RETURNS
QUESTIONS SUR LE PRODUIT OU LES RETOURS
PREGUNTAS SOBRE EL PRODUCTO O DEVOLUCIONES

USA: 1.800.541.6390 | KitchenAid.com
CANADA: 1.800.807.6777 | KitchenAid.ca



KitchenAid®

®/™ ©2018 KitchenAid. All rights reserved. KITCHENAID and the design of the stand mixer are trademarks in the U.S. and elsewhere.

®/™ ©2018 KitchenAid. Tous droits réservés. KITCHENAID et la forme du batteur sur socle sont des marques de commerce aux É.-U. et dans d'autres pays.

®/™ ©2018 KitchenAid. Todos los derechos reservados. KITCHENAID y el diseño de la batidora con base son marcas registradas en EE.UU. y en otras partes.

