


CC631

USER'S GUIDE

8-57-04-838

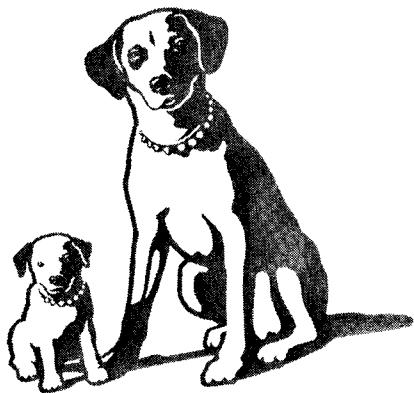

VHS

CAMCORDER

TRIST

Important Safety Information

Be sure to read all the safety information before you begin to use this product.

WARNING: To reduce the risk of fire or shock hazard, do not expose camcorder or AC adapter/charger to rain or moisture.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

ATTENTION

 
RISQUE DE CHOC
ELECTRIQUE NE PAS OUVRIR



This symbol indicates important instructions accompanying the product.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Cautions



CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

To reduce risk of injury, charge only rechargeable batteries recommended by the manufacturer for this camcorder. Other types of batteries may burst causing damage and personal injury.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt for proof of purchase to obtain warranty parts and service and attach it here. Record the serial and model numbers located on the bottom of the camcorder.

Model No: CC631

Serial No: _____

Purchase Date: _____

Purchased From: _____

Table of Contents

Safety Information	i	Powering Your Camcorder	
		• Using Adapter/Charger	11
Product Registration	i	• Using Rechargeable Battery	12-14
		• Using Optional Car Cord Adapter ...	15
Table of Contents	1-2		
		Video Cassettes	16-17
First-Time Operation			
• Assistance	3	Recording	
• Unpack Camcorder & Accessories	3	• Make a Recording	18-19
• Attach the Adapter/Charger	4	• Recording Tips	20
• Insert a Tape	4	• Traveling Tips	20
• Open Lens Cover	5	• Viewfinder	21
• Adjust Handstrap	5	• Viewfinder Displays	22-24
• Turn on Camcorder	5	• Tally Light	25
• Select a Recording Speed	6	• Microphone	25
• Set the <i>Scene Select AE</i> Dial	7	• Flying Erase Head	25
• Adjust Viewfinder and Eyepiece Focus Control	7	• Electronic Indexing	25
• Start and Stop Recording	8	• Quick Review	26
• Play Back Your Recording	8	• Auto Head Cleaner	26
• Turn off the Camcorder	8	• Tape Positioning	26
• Review Camcorder's Operating Controls	9-10	• Camera Edit	26
		• Time Counter With Memory Stop ...	27
		• Tape Time-Remaining Display	28

(continued on next page)

Table of Contents

Recording (continued)

- *Scene Select AE* Dial29
- White Balance30
- *MODE* Button.....31
- Fading In and Out.....32
- 16X9 Mode.....33
- Focusing (Auto and Manual)34-35
- Exposure Control (Iris).....36
- Zooming36
- Attaching the Shoulder Strap.....37
- Titler38-39
- Date and Time Display
 - Install the Clock's Cell.....40
 - Set the Time and Date41
 - Record the Date, Time, or Title42-43

Playback

- Viewfinder Playback44
- Visual Searching.....45
- Stop-Action Pause45
- Tracking.....45
- Using the Cassette Adapter46-47
- Playback on TV (or VCR) With *AUDIO/VIDEO IN* Jacks48-49
- Playback on TV Without Audio/Video Inputs.....50-51

Optional Accessories52-57

- Accessory Order Form55-57

Care and Maintenance58-59

Trouble Checks60-63

Specifications64

Information to User64

Limited Warranty65


Index (Alphabetical)66-69

First-Time Operation

This section describes only the basic steps necessary to set up your camcorder to record. Refer to the other sections for detailed operation and feature options.

1. Unpack the camcorder and accessories.

- Save the packing materials and box in case you ever need to ship or store your camcorder.
- The items shown below are packed with your camcorder. If any are missing or appear damaged, contact your dealer immediately.

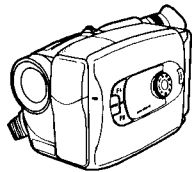


Model CC631*

*Your camcorder may look slightly different from the one shown in this manual.




**WARNING: NICKEL
CADMIUM BATTERY
MUST BE RECYCLED
OR DISPOSED OF
PROPERLY.**

Rechargeable 6-Volt Battery
Part No. FB1260

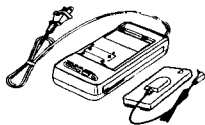

AC Adapter/Charger
Part No. 221400
and Power Connector
Part No. 220389

 Caution:
Do not use this adapter/charger for any purpose other than charging the FB1260 or FB120 battery pack or supplying power to the camcorder.



Cassette Adapter
Part No. 232845



**Cassette Adapter
Battery**
(Size "AA" 1.5 Volt)



Shoulder Strap
Part No. ACS091



Clock Cell
3-Volt Micro Lithium Cell – such as CR2025 – is available from most local drug stores and camera shops. Use of other cell presents a risk of fire or explosion.


Cautions: Lithium cell battery. Must be disposed of properly. Never handle punctured or leaking cell. May cause burns or personal injury.

Keep out of the hands of children. Can cause death or injury if swallowed. If swallowed, consult a physician immediately for emergency treatment.

The lithium cell used in this device may explode resulting in a fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate.

Never use metallic tweezers to hold the cell, and never short circuit the + and – sides of the cell.

First-Time Operation

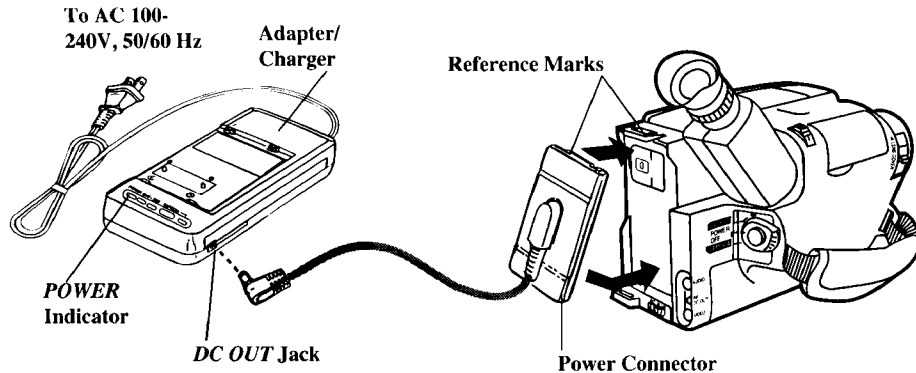

2. Attach the Adapter/Charger

Since the battery must be charged before it can be used the first time, attach the adapter/charger to the camcorder.


- A. Connect the power connector's small plug into the *DC OUT* jack on the adapter/charger.
- B. Align the reference mark on the power connector with the mark on the camcorder. Hold the top of the power connector flush against the back of the camcorder, and press the bottom of the power connector down until it locks into place.

- C. Plug the adapter/charger's plug into an operating outlet. The adapter/charger's *POWER* indicator will light.

3. Insert a tape.

- Slide *EJECT*.
- Turn the tape wheel on the cassette to remove any slack from the tape.
- Insert the cassette with the tape wheel facing up and the tape window facing out.
- Press on the area labeled *PUSH* until the cassette door locks into place.

First-Time Operation

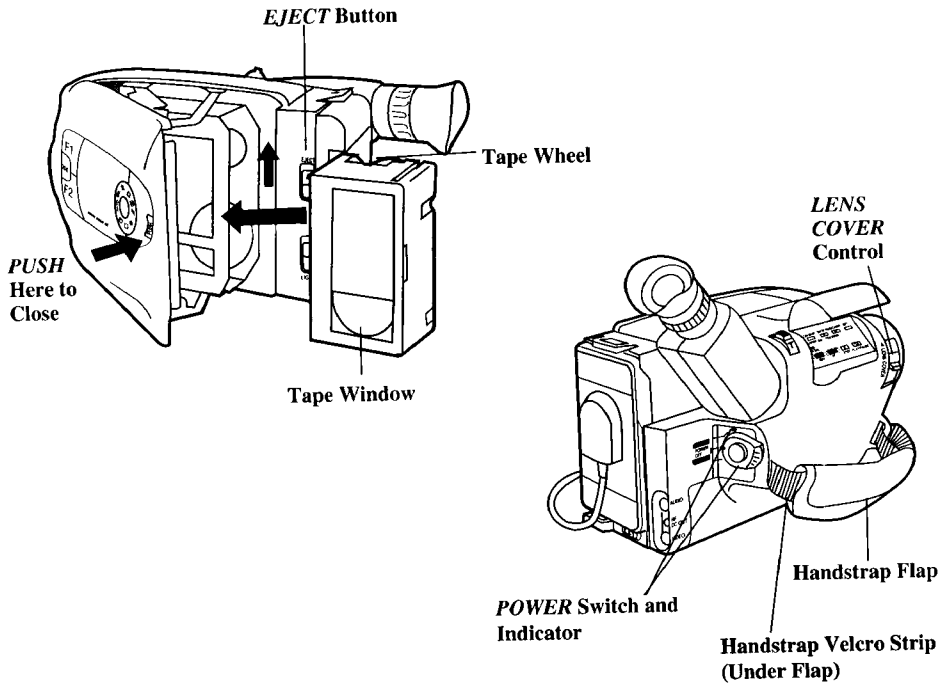

4. Slide **LENS COVER** control to open lens cover.

5. Adjust the handstrap to fit your hand.

- Lift the flap on the handstrap and separate the velcro strip.
- Insert your hand, adjust the strap to fit snugly, refasten the strap, and close the flap.


6. Place **POWER** switch in **CAMERA**.

The **POWER** indicator will light and the camcorder will enter record pause. \equiv PAUSE \equiv appears in the viewfinder when the camcorder is in record pause.

The position of the **POWER** switch tells the camcorder whether you want to record (**CAMERA**), turn the power off (**OFF**), or play back tapes (**VCR**).

The camcorder will automatically turn off if it remains in record pause for five minutes. Place **POWER** switch in **OFF** and then back in **CAMERA**.

(continued on next page)

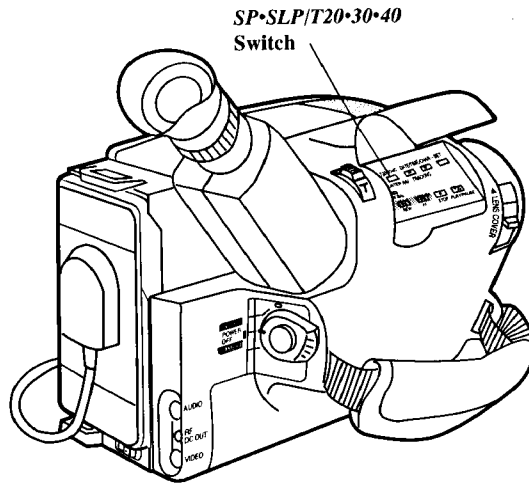

7. Select a recording speed and tape length using *SP•SLP/T20•30•40* switch.

Select SP or SLP recording speed.


- SP – Standard play provides the best picture, but the shortest recording time (20 minutes with a TC-20 tape).
- SLP – Extended play provides three times the recording time as SP (60 minutes with a TC-20 tape). SLP has slightly more picture noise in normal playback.

Set the length of the tape you are using so the camcorder can correctly calculate the recording time remaining on the tape.

Repeatedly press the *SP•SLP/T20•30•40* switch.

- Select *T20 SP* if you are using a tape with 20 minutes or less recording time and want to record in SP speed.
- Select *T20 SLP* if you are using a tape with 20 minutes or less recording time and want to record in SLP speed.
- Select *T30 SP* if you are using a tape with 30 minutes recording time and want to record in SP speed.
- Select *T30 SLP* if you are using a tape with 30 minutes recording time and want to record in SLP speed.
- Select *T40 SP* if you are using a tape with 40 minutes recording time and want to record in SP speed.
- Select *T40 SLP* if you are using a tape with 40 minutes recording time and want to record in SLP speed.

First-Time Operation

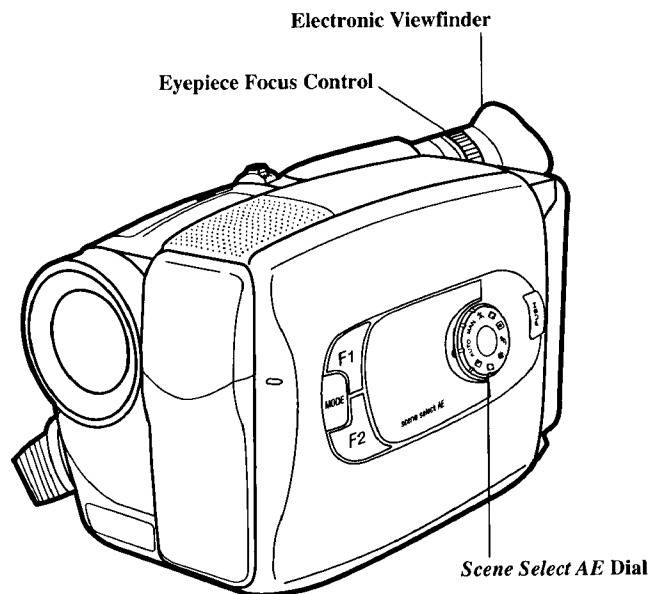

8. Set the *scene select AE* dial to *AUTO*.


- This places the camcorder in the *AUTO* mode.
- In the *AUTO* mode, the fade, 16X9, manual focus, exposure, display, and titler controls will not operate.

9. Adjust the viewfinder and eyepiece focus control.

- Pull out the viewfinder and rotate it into a comfortable operating position.
- Turn the eyepiece focus control to adjust the focus of the viewfinder for your vision.

(continued on next page)

First-Time Operation

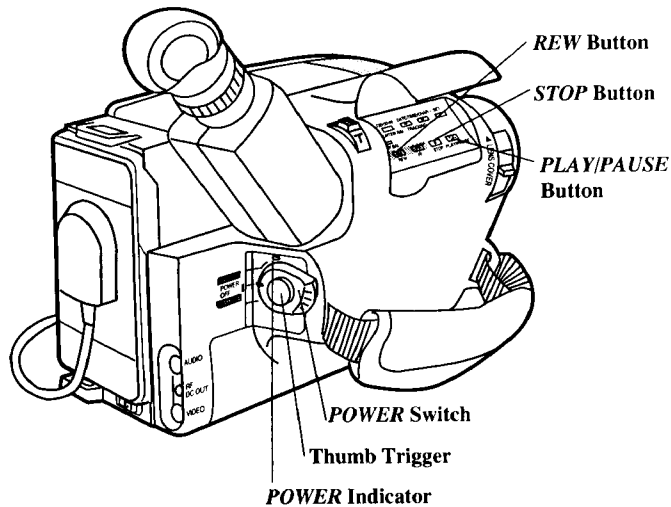

10. Start and stop recording.

- Press and release the thumb trigger to start recording. *REC* ►►► appears in the viewfinder, and the tally light will light when the camcorder is recording.
- Press and release the thumb trigger again to stop recording. The camcorder is now in the record-pause mode (≡ PAUSE ≡ appears in the viewfinder).

11. Play back what you have recorded.


- Place the *POWER* switch in *VCR*.
- Press *REW* to rewind the tape.
- Press *PLAY/PAUSE* to play back the tape in the viewfinder.
- Press *STOP* when you are finished playing back the tape.
- *Details on viewfinder playback are on page 44.*

12. Place the *POWER* switch in *OFF* to turn off the camcorder.

The power indicator will turn off.

First-Time Operation


13. Review camcorder's operating controls.

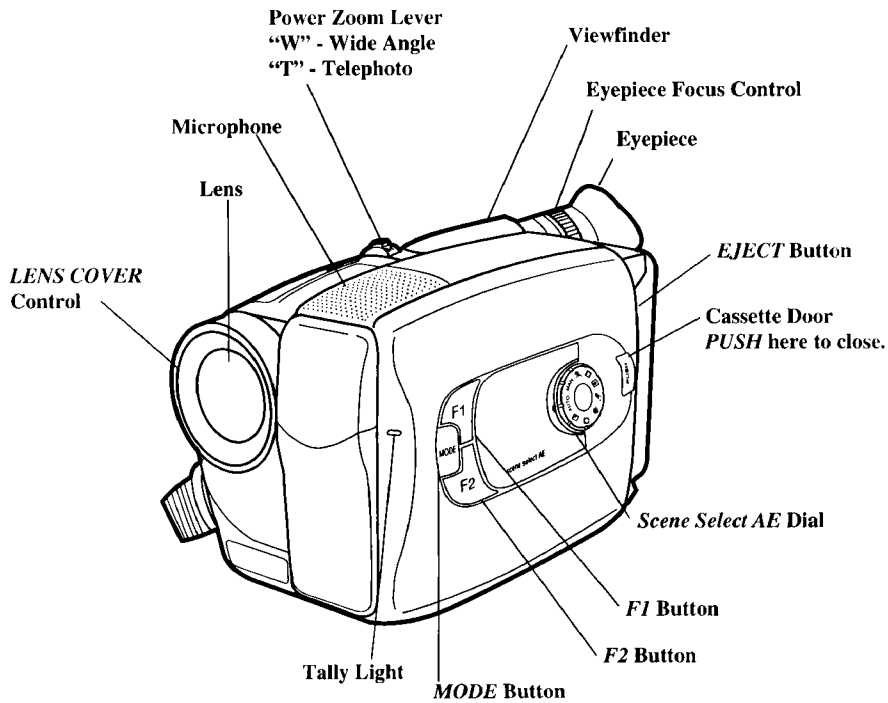

(continued on next page)

First-Time Operation


13. Review camcorder's operating controls. (continued)

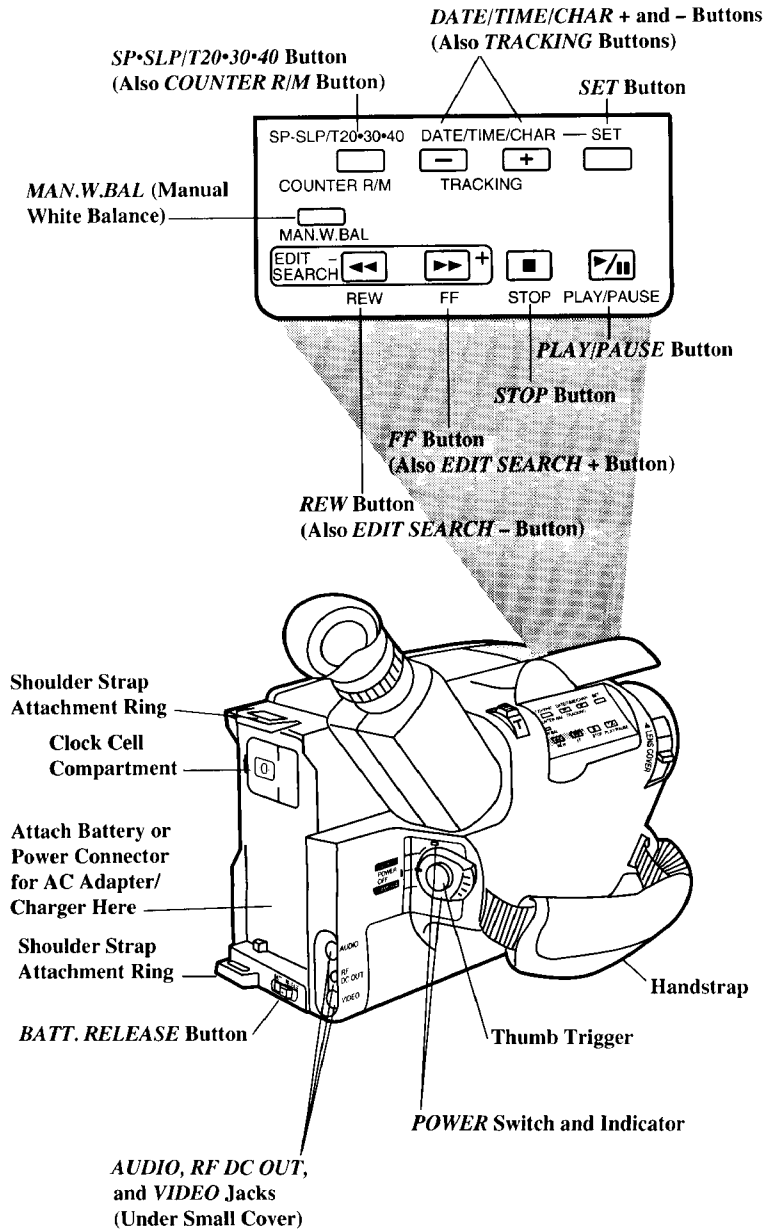

Powering Your Camcorder

Using the Adapter/Charger to Power Your Camcorder

The power connector attaches to the camcorder and lets you power your camcorder directly from standard household power. The adapter/charger operates on 100-240 volts, 50/60 Hz, so it can be used virtually anywhere in the world to power the camcorder or recharge the battery.

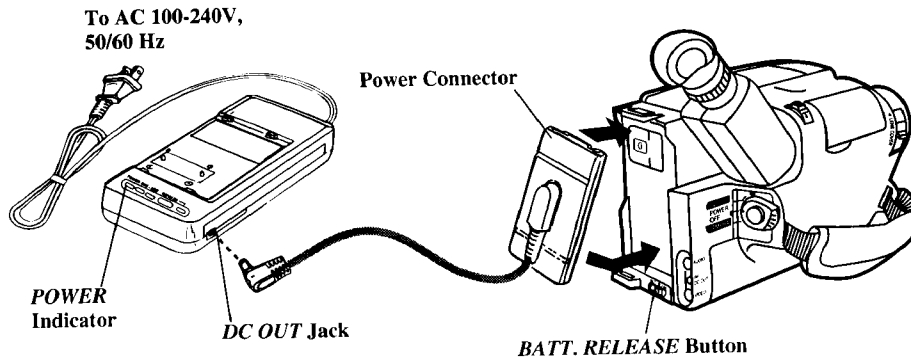

Attach Adapter/Charger

1. Plug power connector's plug into *DC OUT* jack on adapter/charger.
2. Align the reference mark on the power connector with the mark on the camcorder. Hold the top of the power connector flush against the back of the camcorder, and press the bottom of the power connector onto the camcorder until it locks into place.
3. Plug the adapter/charger's plug into the nearest AC outlet (100-240V, 50/60Hz).
4. If the adapter/charger is properly connected, its *POWER* indicator will light.

 
Caution: Do not use this adapter/charger for any other purpose other than charging the FB1260 or FB120 battery pack or supplying power to the camcorder.

Remove Adapter/Charger

1. Unplug the adapter/charger from the wall outlet.
2. Press and hold *BATT. RELEASE* on the camcorder while removing the power connector.

Using an Optional Plug Adapter


An optional plug adapter may be required in some countries.



1. Plug the adapter/charger's plug into the AC plug adapter.
2. Plug the AC plug adapter into the AC outlet.

Powering Your Camcorder

Using the Battery to Power Your Camcorder

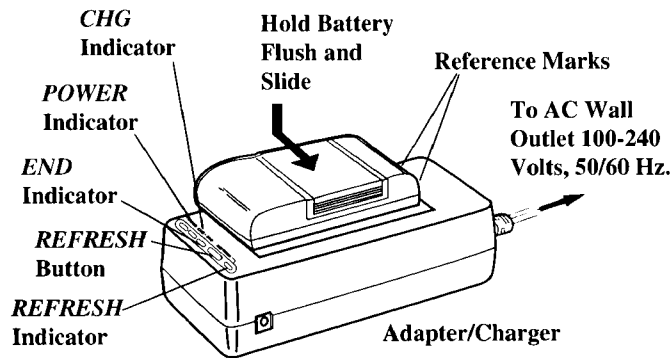

Caution

When a battery is attached to the adapter/charger, do not turn them upside down. The battery may fall off and be damaged or cause injury.

Charge the Battery

If the power connector is attached to the *DC OUT* jack on the adapter/charger, remove its plug.

1. Align reference mark on battery with mark on adapter/charger.
2. Hold the battery flush against the adapter/charger and slide it in the direction of the arrow.
3. Plug adapter/charger into nearest AC outlet (100-240V, 50/60Hz).
4. If the battery is properly connected, the adapter/charger's *CHG* (charge) indicator will light.

Note: If you try to charge a battery that has not been charged for a long period of time, it may take a few minutes for the *CHG* indicator to light.

5. After the battery is charged, the *END* indicator will light.
6. Remove the charged battery by sliding it off the adapter/charger.
7. Attach the charged battery to the camcorder.

Use the *REFRESH* Button

The battery will provide increased operation time if you “refresh” it after five chargings. The refresh feature “refreshes” the battery by completely discharging it.


1. Attach battery to adapter/charger.
2. Press *REFRESH*. The *REFRESH* indicator will light and the battery will begin discharging.
3. When discharging is completed, the *REFRESH* indicator will turn off, and the *CHG* indicator will light. The battery will then charge.
4. After the battery is charged, the *END* indicator will light. Remove the battery from the adapter/charger.

Powering Your Camcorder

Using the Battery to Power Your Camcorder

The battery must be charged *as described on the previous page* before it can be used the first time. Initial charging will take approximately 70 minutes. When fully charged, the battery should supply about 55 minutes of operating time (depending on how much you use the light, zoom, and pause). Conserve battery power by turning the camcorder off during recording breaks.

Note: The small marker switch on top of the battery is for use as a personal reminder to help you remember to recharge the battery. It has no other function.

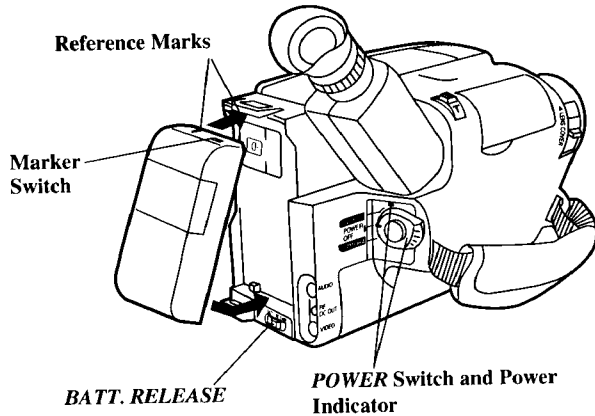

Battery Safety Precautions

Do not short the battery's terminals.

Do not attempt to disassemble or modify the battery. There are no user-serviceable parts inside.

Use the battery only with specified adapter/chargers and camcorders.

Throwing the battery into a fire or exposing to excessive heat — over 149°F (65°C) could be hazardous.

Attach the Charged Battery

If the power connector is attached to the camcorder, remove it before attaching the battery. Also, install the lithium clock cell before attaching the battery pack.

Details on page 40.

1. Align the reference mark on the battery with mark on back of camcorder.
2. Hold the top of the battery flush against the camcorder and press the bottom of

the battery down until it locks into place.

3. Place the *POWER* switch in *CAMERA*. The power indicator will light.

Remove the Battery

Press and hold *BATT. RELEASE* on the camcorder while removing the battery.


ATTENTION: The RBRC seal on the battery used in your Thomson Consumer Electronics product indicates that we are participating in a program to collect and recycle Nickel Cadmium batteries throughout the United States. Please call 1-800-8-BATTERY for information or contact your local recycling center.




Powering Your Camcorder


 
 
Battery Level Indicator

The battery level indicator appears in the viewfinder and shows you the amount of power in the rechargeable battery.

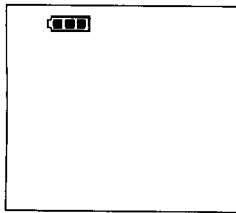

Battery Level Indicator
in Viewfinder

- When  appears, the battery is fully charged.

- As the power is used  and  appear.
- When the battery power is almost gone,  flashes in the viewfinder. The camcorder will turn off automatically after a few seconds. Place the *POWER* switch in *OFF* to turn off the camcorder before replacing the battery.

The battery level indicator will not be recorded on the tape when it appears in the viewfinder.

Battery Care and Storage

- Recharging takes approximately 70 minutes depending on the battery's condition.
- Refreshing takes approximately 210 minutes depending on the battery's condition.
- After repeated charging and use, operation time will gradually decrease. When operation time becomes too short to be useful, it is time to replace the battery.
- If the battery discharging must be stopped in the middle, remove the battery from the adapter/charger before unplugging it from the AC outlet.
- Let a hot battery cool down before attaching it to the adapter/charger.
- The battery will also provide better service if its power is completely drained before storing it for long periods of time (30 days or more).
- The battery should be charged in the temperature range of 50-95°F (10-35C) to prevent damage.
- Do not operate the battery at temperatures below 32°F (0C) or above 104°F (40C). The battery may be damaged if operated at temperatures above 122°F (50C). Operation time will decrease at extremely low temperatures.
- Store the battery at normal room temperature.

Powering Your Camcorder

Optional Car Cord Adapter


The optional DCC08 car cord *shown on page 52* allows you to power your camcorder from the cigarette lighter socket of a car, truck, or RV. It converts 12-volts to a 6-volt output.

Note: Consult the installation and operating instructions enclosed with the DCC08 for complete operating instructions.

Cautions: The DCC08 is designed to be used only with vehicles having negative ground electrical systems.

Use only car cord adapter DCC08 with this camcorder. Use of any other car cord adapter may damage the camcorder and void your warranty.

Using the DCC08 Car Cord Adapter

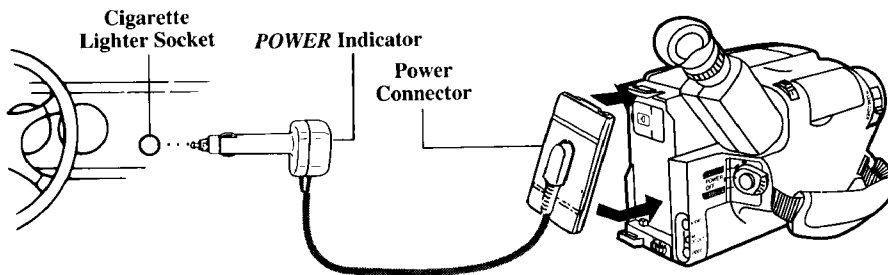

Optional DCC08 Car Cord Adapter

1. Place the *POWER* switch in *OFF* to turn off the camcorder. Power indicator turns off.
2. If the battery is attached to the camcorder, remove it.
3. Hold the power connector flush against the back of the camcorder and push the bottom of the power connector down until it locks into place..
4. Take the vehicle's cigarette lighter out of the socket.
5. Insert the car cord's cigarette lighter plug into the vehicle's cigarette lighter socket. The *POWER* indicator on the car cord adapter will light.
6. Place the *POWER* switch in *CAMERA* to turn on the camcorder. The power indicator lights.

Caution: Make sure the camcorder's power is turned off before removing the car cord's plug from the cigarette lighter socket.


Video Cassettes

We recommend that our cassettes be used with your camcorder. Use of poor quality tapes or tapes that have been damaged or mishandled can contaminate the video heads, resulting in a snowy picture or no picture at all during playback. Because there is no control over the type of tape purchased or rented by consumers, head cleaning is not covered under warranty. It is considered normal maintenance.

The automatic head-cleaning system minimizes the need for accessory cleaners or cleaning by a Servicenter. This system is activated whenever you insert or remove a cassette.

Erase Protection – Safety Tab

You can use your video cassettes over and over again. To erase a previous recording, just record over it.

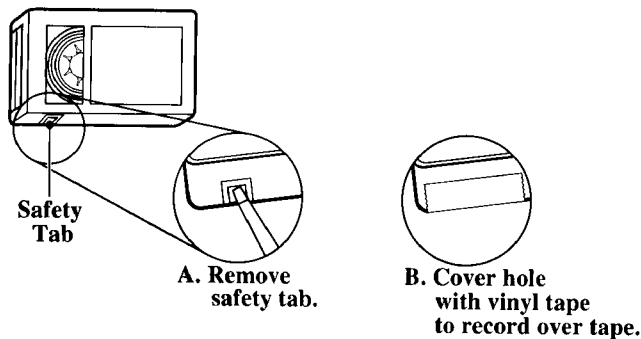

Recording and Playback Speeds and Times


The camcorder records and plays back in standard speed (SP) or extended play (SLP). Select the recording speed and tape length using the *SP•SLP/T20•30•40* switch. The selected speed and tape length will be displayed in the viewfinder. Listed below are the maximum SP and SLP recording times for popular VHS-C cassettes.

- SP – Standard play provides the best picture (less picture noise), but the shortest recording time (20 minutes with a TC-20 tape).
- SLP – Extended play provides three times the recording time as SP (60 minutes with a TC-20 tape). SLP has slightly more picture noise than SP in normal playback. This may not be noticeable.

Cassette	Recording Time	
	SP	SLP
TC-20	20 Min.	60 Min.
TC-30	30 Min.	90 Min.
TC-40	40 Min.	120 Min.


Video Cassettes

Inserting and Removing Cassettes

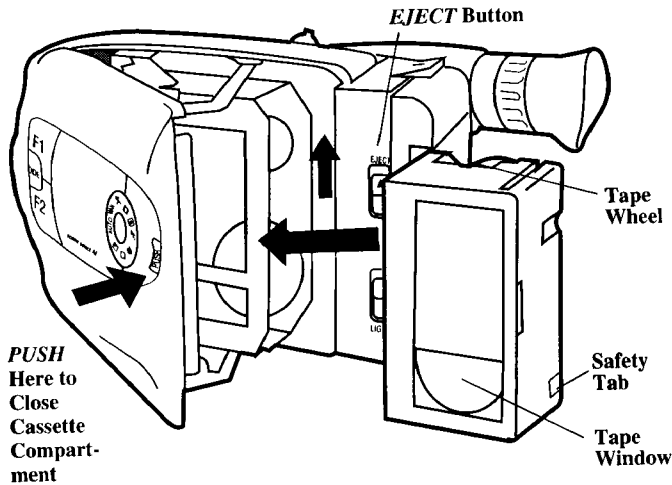

Caution:
Insert the cassette only one way only with the tape wheel facing up and the tape window facing out. The cassette should slide easily into the compartment. Do not force the cassette.

 Before inserting a cassette, turn the tape wheel on the side of the cassette in the direction shown to remove any slack in the tape.



1. Attach a power supply. Then slide and release *EJECT* to open the cassette compartment.
2. Insert or remove the cassette.
3. Close the cassette compartment door by pressing on the area labeled *PUSH* until it locks into place.


Cassette Care and Storage

- When you are finished with a cassette, rewind it, remove it from the camcorder, and label it.
- Store cassettes vertically in their protective cases at normal room temperatures. Do not leave your camcorder or cassettes in a car or outdoors for an extended period. Excessive heat or cold may damage your cassettes.
- Keep the cassette away from strong magnetic fields such as electric motors and other devices.
- Keep dust from entering the cassette compartment. All dust is abrasive and will cause excessive wear on the tape and the camcorder's recording or playback heads.
- Do not use cassettes with damaged or spliced tape.
- Do not use a cassette if it has been damaged or exposed to moisture. The tape may jam and/or damage your camcorder.

Recording

Making a Recording

The steps below tell you how to make a recording and suggest using some of the recording features. Each feature is described in detail on the following pages.

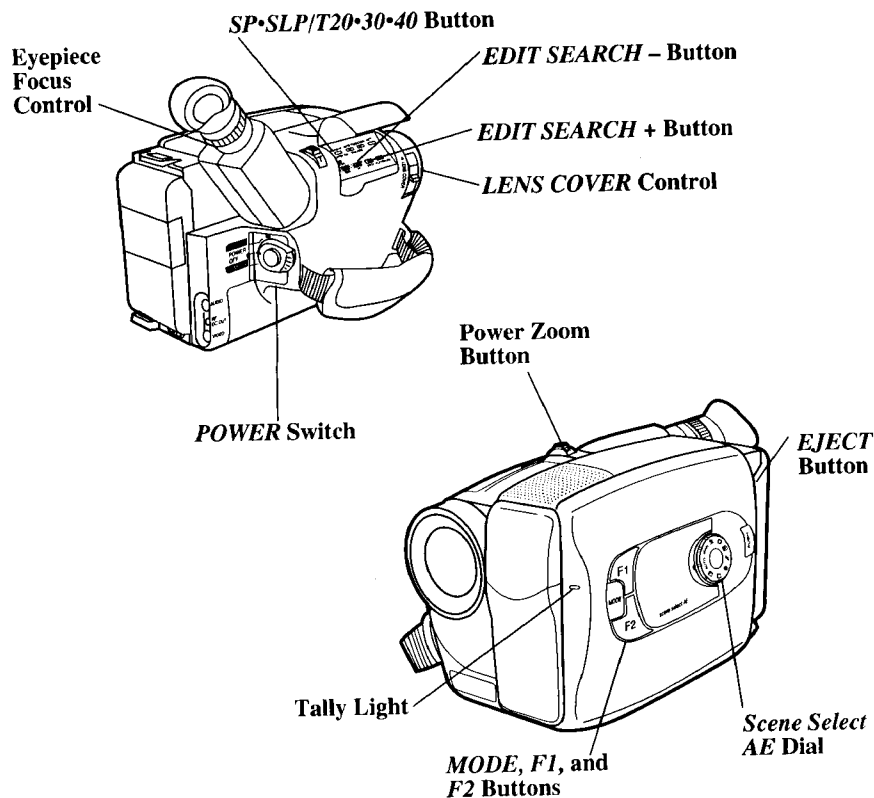

1. Attach a power supply.

Attach the adapter/charger, charged battery, or optional DC car cord.

2. Insert a tape.

- Slide *EJECT*.
- Turn the tape wheel on the cassette to remove any slack from the tape.
- Insert the cassette with the tape wheel facing up and the tape window facing out.

3. Slide the *LENS COVER* control to open the lens cover.

4. Place the *POWER* switch in *CAMERA*.

The power indicator will light and the camcorder will enter record pause.
≡ PAUSE ≡ appears in the viewfinder.




 



5. Adjust the viewfinder and eyepiece focus control for your vision.

Recording

6. Select a recording speed and tape length using the *SP•SLP/T20•30•40* switch.

- Select SP or SLP recording speed.
- Set the length of the tape you are using (*T20*, *T30*, or *T40*) so the camcorder can correctly calculate time remaining.

7. Set the scene select *AE* dial.

- Place the dial in *AUTO* to place the camcorder in the *AUTO* mode.
- Place the dial in () sports or () fast speed shutter to record fast moving action.
- Place the dial in () back light or () front light to compensate for unusual lighting situations.
- Place the dial in () spotlight to create the effect of the subject being in a spotlight.
- Place the dial in () portrait to create the effect of the subject being in a frame.
- Place the dial in () sepia to create the effect of an old movie.
- Place the dial in *MAN* and experiment with the *MODE* and *F1* and *F2* buttons.
 - Select *F1 FADE* to fade in and out of scenes.
 - Select *F2 16X9* to record using the 16X9 format.
 - Select *F1 FOCUS* to manually focus.
 - Select *F2 EXP.* to adjust the iris

(brightness).

- Select *F1 TITLE* to select and record one of the preset titles.
- Select *F2 DISP.* to display and record the date, time and date, or create and record your own title.

8. Start and stop recording.

- Press and release the thumb trigger to start recording. *REC ▶▶▶* appears in the viewfinder and the tally light will light when the camcorder is recording.
- Press and release the thumb trigger again to stop recording. The camcorder is now in record pause. *≡ PAUSE ≡* appears in the viewfinder.
- The camcorder will automatically turn off if it remains in record pause for five minutes. Place the *POWER* switch in *OFF* and then back in *CAMERA*.

9. Use the zoom feature.

- Zoom in and out using the power zoom *T* and *W* lever.

10. Review what you have recorded.

- Press and release *EDIT SEARCH* – to review the last few seconds of the recording.
- Press and hold *EDIT SEARCH* – or + to visually see what you have recorded. Release the button to begin recording at that point.

Recording

Recording Tips

- In case of fire or theft, make a video recording of your home and contents to store in a safe place.
- Try to make sure indoor scenes are well-lit.
- Do not move the camcorder rapidly from side-to-side while recording. A steady, gradual “pan” avoids blurring and “jitter”.
- Use the viewfinder to make sure the camcorder is level while recording or your scenes will appear “tilted”.
- Do not bump or tap the camcorder’s microphone while recording because this sound will be recorded.
- Include close-ups of individuals when taping family outings or group functions.
- Fading in and out of scenes will make your videos appear more professional.
- When recording fast-moving action in outdoor light that you plan to view in stop-action or slow motion on a 3-5 head VCR, place the *scene select AE* dial in sports (⌘) or shutter (⌘) to increase the shutter speed.
- Be aware of video and audio backgrounds. Background details barely noticed while you are taping may show up as visual “clutter” on your recording. Background noises (especially TV sets, radios, household appliances, traffic sounds, etc.) can detract from the sound you want to record.
- Avoid long “still” shots of landmarks and scenic attractions. Recordings are more interesting if they include people and details. “Local color” will give travel videos lasting appeal. Consider recording a familiar or landmark scene from an unfamiliar vantage point.


Traveling Tips

- Write down your camcorder’s serial number and keep it separate from the camcorder when traveling. If your camcorder is lost or stolen, you will be able to identify it.
- Use extra care to avoid damage to your camcorder and accessories when operating them at a beach or pool. Spray, sand, and dust should be avoided. If your lens has been exposed to the elements, clean it only with proper lens cleaning supplies.
- Make sure you have any plug adapters that you may need before taking your camcorder to other countries. Consult your dealer for advice.
- Carry your camcorder in a carrying case when traveling. See page 52 for a case designed especially for this camcorder. An ordinary suitcase or carry bag does not offer the protection your camcorder needs. Treat your camcorder as carry-on luggage to protect it from rough handling.

Recording

Viewfinder

The camcorder's viewfinder is a miniature monitor that displays the picture seen by the camcorder when recording.

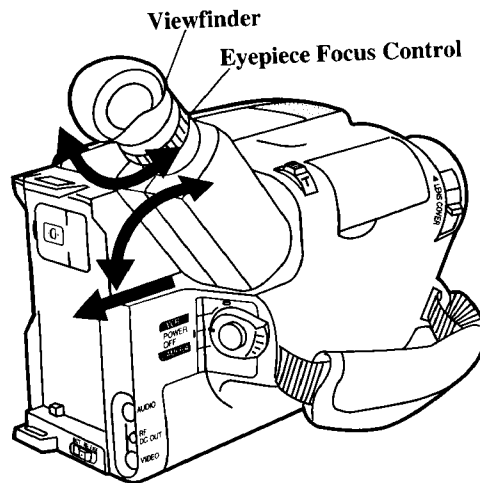

Adjust Viewfinder for Convenient Viewing

For convenient viewing, you can slide the viewfinder out from the camcorder and rotate it up and down.

Cautions

Do not force the viewfinder to rotate completely around. This will damage the viewfinder and/or the camcorder.

When carrying the camcorder with the shoulder strap, put the viewfinder down and slide it in. This helps prevent possible damage to the viewfinder from bumping against your body as you move.

Eyepiece Focus Control

The eyepiece focus control lets you set the focus of the viewfinder for your personal vision. If you wear eyeglasses, you probably can operate the camcorder without them.


It is easiest to set the correct focus by focusing on one of the viewfinder's on-screen displays.

Look through the viewfinder and adjust the eyepiece focus control for your vision.

The eyepiece focus control does not affect the focus of the picture actually recorded by the camcorder.

Recording

Viewfinder Displays

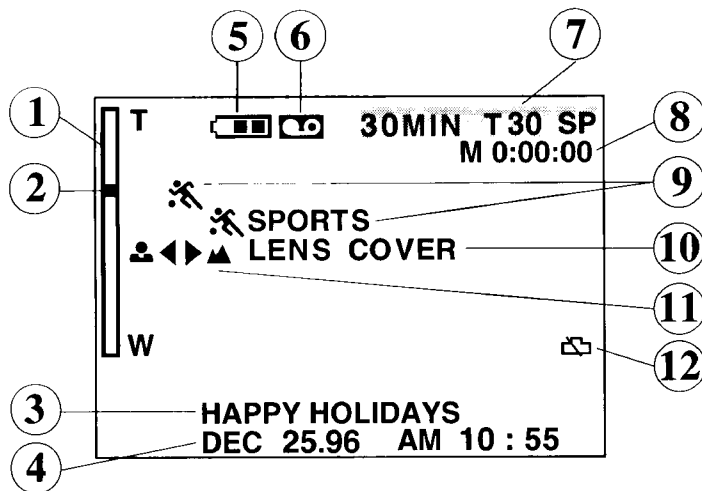

① Zoom Level

This indicator tells you whether you are zoomed in or zoomed out.

Details are on page 36.

② Exposure Indicator Bar

This indicator appears when you are adjusting brightness manually.

Details are on page 36.

③ Preset Title

- The preset title you select will appear in this area.
- This title will be recorded on your tape when it appears.
- *Details are on pages 38 and 42-43.*

④ Date, Date/Time, or Created Title



- The date, *AUTO DATE*, date and time, or title you created appears in this area of the viewfinder.
- These displays will be recorded on your tape when they appear.
- *Details are on pages 42-43.*

⑤ Battery Level Indicator

- This indicator shows how much power is left in the rechargeable battery.
- This indicator flashes when the battery is almost empty.
- *Details are on page 14.*

Recording

6 Cassette Warning

- The  indicator flashes when the *POWER* switch is set to *CAMERA* and the safety tab has been removed from the cassette.
- The  indicator also flashes when the *POWER* switch is set to *CAMERA* and there is no cassette in the camcorder.

7 Time Remaining, Tape Length and Tape Speed (SP or SLP)

Time Remaining: The approximate time remaining on the tape in the camcorder is automatically displayed. The correct tape length must be set.

- The time-remaining indicator will start flashing when the remaining tape time reaches two minutes.
- *Details are on page 28.*

Tape Length: The length of the tape in the camcorder (*T20*, *T30*, or *T40*) selected with the *SP•SLP/T20•30•40* switch appears here.

- *Details are on page 28.*

Recording Speed: The recording speed (*SP* or *SLP*) selected with the *SP•SLP/T20•30•40* switch appears here.

- *Details are on pages 16 and 28.*

8 Elapsed Time-Counter with Memory Stop

- The time counter appears during playback. It is not recorded on the tape.

- An “*M*” appears in front of the time counter when memory-stop is on.
- *Details are on page 27.*

9 Scene Select AE

- The indicator for the mode selected with the *scene select AE* dial appears here.
- The indicator and mode both appear briefly when the mode is selected, and then only the indicator appears.
- *Details are on page 29.*

10 LENS COVER

When you turn on the camcorder, this indicator briefly flashes to remind you to open the lens cover.

11 Manual Focus


- **Manual Focus Indicators** (▲ ▲) appear when focus is adjusted manually.
- **Manual Focus Lock Indicators** (◀▶) appear when manual focus is locked.
- **Low-Contrast Indicators** (·▲·▲·) flash when the auto-focus system cannot focus properly.
- *Details are on pages 34-35.*

12 Lithium Cell (⌘)

- This indicator appears when the clock cell has not been installed or it needs to be replaced.
- *Details are on page 40.*

(continued on next page)

Viewfinder Displays (continued)

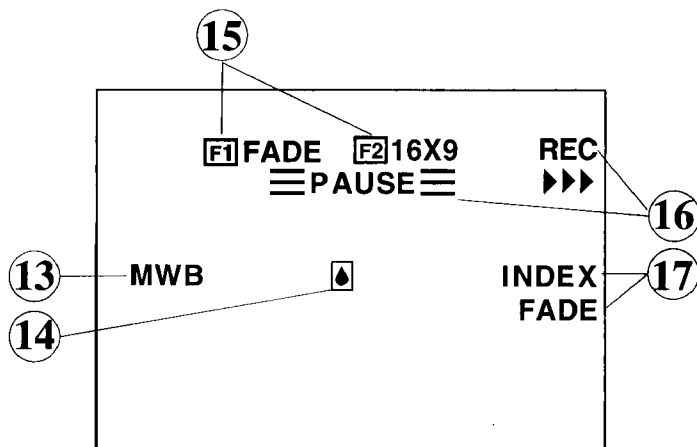

13 White Balance

- The indicator for the manual white balance selected with the *MAN.W.BAL* (manual white balance) button appears here.
- No indicator appears for automatic white balance.
- *Details are on page 30.*

14 Dew Warning ()

The dew indicator appears when excessive moisture (condensation) has entered the camcorder. The camcorder will not operate when this indicator appears. Place the camcorder in a warm, dry area until this indicator disappears. When the dew indicator disappears, the camcorder will operate.

15 *MODE* Features (*F1* and *F2*)

- The *scene select AE* dial may not be in *AUTO* to use these features.


- The *F1* and *F2* features selected with the *MODE* button appear here.
- *Details are on page 31.*

16 Status Displays

- The *REC* ►►► indicator appears here when the camcorder is recording.
- The ≡ *PAUSE* ≡ indicator appears when the camcorder is in record pause.
- *TAPE END* appears when the end of the tape is reached during recording or a cassette is inserted with its tape already at the end.

17 *INDEX* and *FADE*

- *INDEX* flashes when an index mark is being recorded. *Details are on page 25.*
- *FADE* appears when you select fade and flashes when fading is activated. *Details are on page 32.*

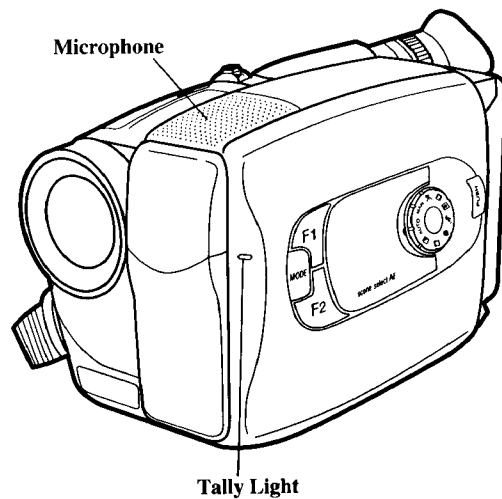

Tally Light

The tally light lights when the camcorder is recording.

Microphone

The microphone picks up the sound during a recording. It is more sensitive to sounds coming from the direction the lens is pointed.


Flying Erase Head

A separate erase head is mounted on the spinning headwheel (hence the term “flying”). This allows you to make clean edits without the “glitches” or “rainbow noise” that may occur at the beginning or the end of recordings.


Electronic Indexing

An index mark is automatically recorded at the beginning of a recording after the date advances and a cassette is inserted. When you play back the indexed tape in a VCR that has a compatible indexing feature called “VHS Index Search System”, the invisible marks can be located automatically. See VCR owner’s manual.

INDEX flashes in the viewfinder when an index mark is recorded.

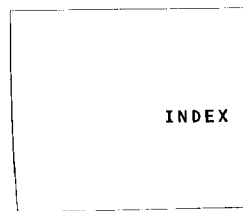

Note: No other function can be performed during index recording.

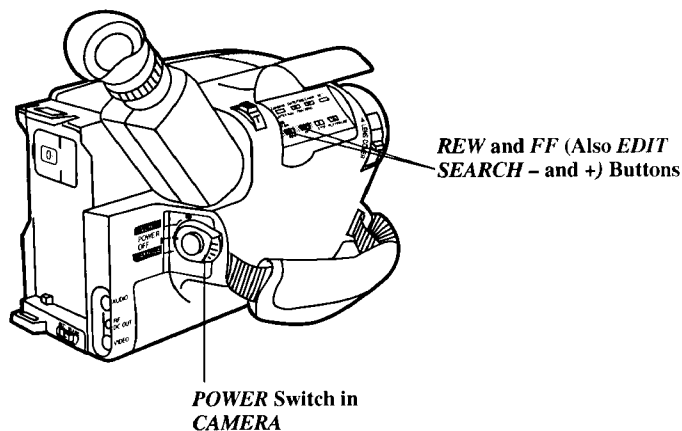

Quick Review Feature

Press and release *EDIT SEARCH -* when the camcorder is in record pause to review the last few seconds of a recording. The *POWER* switch must be in *CAMERA*.

The camcorder will play back the last few seconds of the recording, return the tape to its previous position, and return to record pause.

Auto Head Cleaner

The camcorder has an automatic head-cleaning system. Whenever a cassette is inserted or removed, this system is activated.

The head-cleaning system minimizes the need for accessory cleaners or cleaning by a Servicerter.

Tape Positioning

Place *POWER* switch in *VCR* and press *STOP*.

- Press and quickly release *REW* or *FF* to rewind or fast-forward the tape. Press *STOP* to stop the tape.

Camera Edit Feature

The camera edit feature allows you to position the tape when the camcorder is in record pause. Place *VCR/OFF/CAMERA* switch in *CAMERA*.

- Press and hold *EDIT SEARCH -* to visually search the recorded tape in reverse.
- Press and hold *EDIT SEARCH +* to visually search forward on the recorded tape.


Release the button to return camcorder to record pause at that point on the tape.

Press the thumb trigger to start recording at this point.

Recording

Time Counter

The time-counter display shows the actual time elapsed when playing back a segment of a prerecorded tape. The memory-stop feature helps locate a certain point on the tape. When memory stop is on, the tape will stop automatically during rewind or fast forward when the time counter reaches *M 0:00:00*.

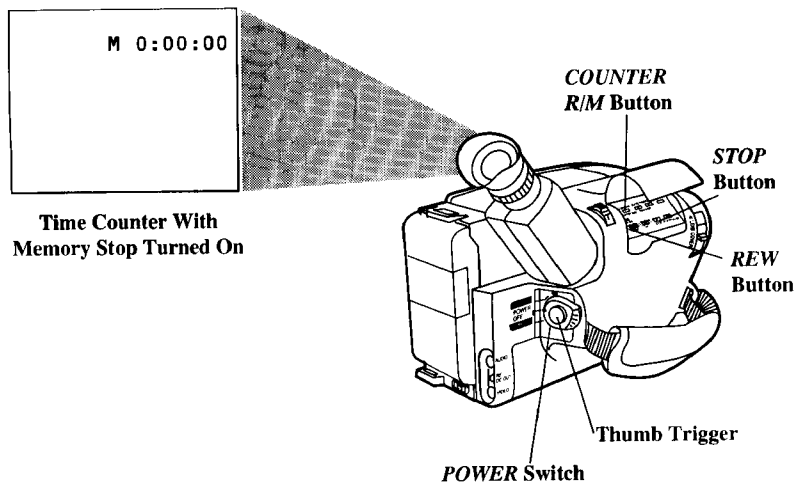


To Use the Memory-Stop Feature

1. Locate the place on the tape you want to return to, place the *POWER* switch in *VCR*, and press *COUNTER R/M* for more than two seconds to reset the counter to 0:00:00.
2. Press *COUNTER R/M* for less than one second to turn the time counter's memory-stop feature on or off. When memory stop is on, an *M* appears before the time counter in the viewfinder.
3. Continue to play the tape. When you want to return to the place you marked, press the *STOP* button.
4. Press *REW*. The tape will rewind to the time counter reading of *M 0:00:00*.

Recording

Tape Time-Remaining Display

The approximate time remaining on the tape in the camcorder is automatically displayed in the viewfinder. The *SP•SLP/T20•30•40* switch must be set for the correct recording speed and tape length before the camcorder can correctly calculate time remaining.

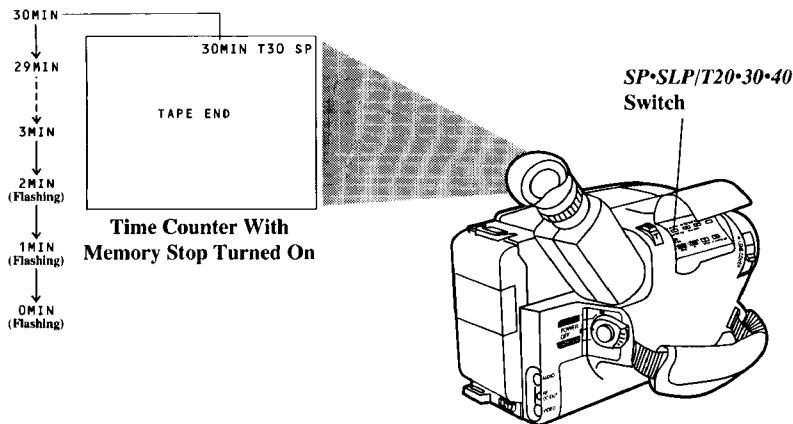

Set the Recording Speed and Tape Length

Before recording, repeatedly press the *SP•SLP/T20•30•40* switch to select the recording speed and length of tape you are using.

- Select *T20 SP* if you are using a tape with 20 minutes or less recording time and want to record in SP speed.
- Select *T20 SLP* if you are using a tape with 20 minutes or less recording time and want to record in SLP speed.
- Select *T30 SP* if you are using a tape with 30 minutes recording time and want to record in SP speed.
- Select *T30 SLP* if you are using a tape with 30 minutes recording time and want to record in SLP speed.
- Select *T40 SP* if you are using a tape with 40 minutes recording time and want to record in SP speed.
- Select *T40 SLP* if you are using a tape with 40 minutes recording time and want to record in SLP speed.


Notes: The time-remaining indicator will start flashing when the remaining tape time reaches two minutes.

TAPE END appears when the tape reaches its end during recording or a cassette is loaded whose tape is already at its end.

Recording

Scene Select AE Dial

The *scene select AE* dial lets you select one of several different effects. Turn the dial to select the effect you want. The indicator for the effect will appear in the viewfinder. Set the dial to *MAN* for normal recording.

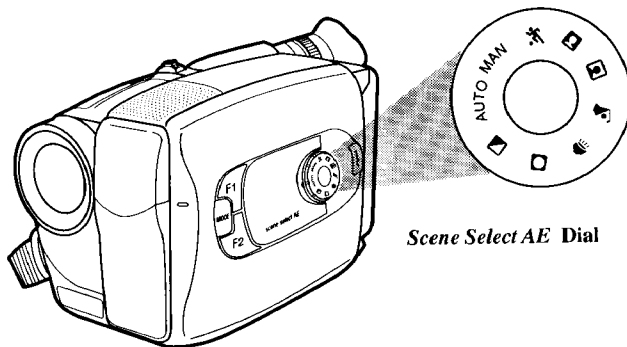


Scene Select AE Dial

Mode	Indicator	Uses
<i>AUTO</i>		Places camcorder in full auto mode. <i>16X9</i> , <i>FADE</i> , <i>FOCUS</i> , <i>EXPOSURE</i> , <i>DISPLAY</i> , <i>TITLE</i> , and <i>MAN.W.BAL</i> will not operate in this mode.
<i>MAN</i>		Use this mode for normal recording.
Sports 		Use when playing back recording on a VCR featuring special effects, such as pause or slow motion. Uses high shutter speeds to clearly capture fast-moving action with less blurring.
Back-Light 		Use when the subjects are in front of a window or with the sun to their back. Compensates for subjects appearing too dark because of backlighting.
Front-Light 		Use when there is a strong front light on the subject such as spotlights. Compensates for subjects appearing too light because of strong front lighting.
High Speed Shutter Speed 		Sets shutter speed to 1/2000. Use to record fast-moving action with less blurring. Can capture faster action than sports mode. Use outdoors and in well-lit situations when playing back recording on VCR featuring special effects, such as pause or slow motion.
Spotlight 		Use to give the effect of the subject being in a spotlight. Outer edges fade to black.
Portrait 		Gives the effect of the subject being framed. Outer edges are white while center subject remains clear.
Sepia 		Picture is recorded in sepia (brownish red) and offers the vintage look of old movies. Use it with the <i>16X9</i> mode to create an authentic movie theater look. See page 33.

Recording

White Balance

Making colors look natural is what white balance is all about. This is achieved by adjusting the way the camcorder “sees” and records the light source in the scene you wish to record. Your camcorder is equipped with automatic white balance. However, under certain conditions, such as recording an object with various shades of the same color or when recording a predominant red or brown object outdoors, you may want to adjust white balance manually.

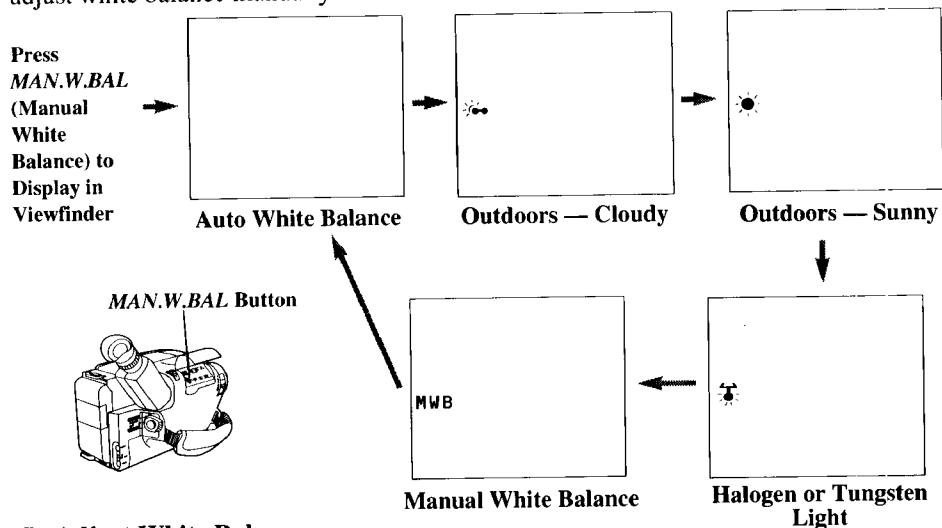


To Adjust White Balance

1. Place the **POWER** switch in **CAMERA**, and make sure the **scene select AE** dial is not set to **AUTO**.
2. Press **MAN.W.BAL** (manual white balance) until one of the manual white balance indicators appears in the viewfinder.
 - Select ☁ when recording outdoors on a cloudy day.
 - Select ☀ when recording outdoors on a sunny day.
 - Select ⚡ when recording using halogen or tungsten lighting.
 - Select **MWB** when shooting subjects with different color temperatures and adjust the white balance as follows:
 - A. Point camcorder at a white, flat object such as a piece of paper. Adjust the focus manually.
 - B. Press and hold **MAN.W.BAL** for at least three seconds. The **MWB** indicator flashes while adjusting and stops when finished.
3. To have camcorder automatically control white balance, repeatedly press **MAN.W.BAL** until no white balance indicator appears in viewfinder (or place **scene select AE** dial in **AUTO**).

Recording

MODE Button

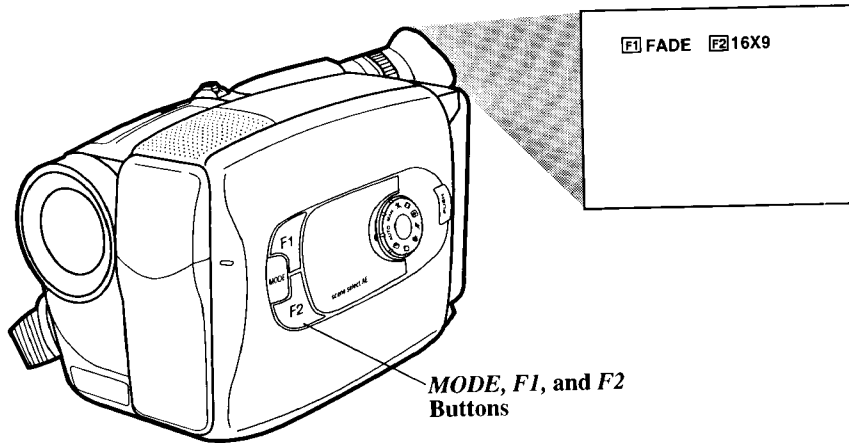

When the *scene select AE* dial is in any position except *AUTO*, you can select any one of six functions using the *MODE*, *F1*, and *F2* buttons. Repeatedly press *MODE* to select a function. The function selected appears in the viewfinder:


Repeatedly Press <i>MODE</i>	Functions Selected	
	<i>F1 — FADE</i>	<i>F2 — 16X9</i>
<i>F1 — FOCUS</i>	<i>F2 — EXP.</i>	
<i>F1 — TITLE</i>	<i>F2 — DISP.</i>	

When the function you want to use appears, press *F1* or *F2* to select it. Each of the functions is described in detail on the following pages.

Recording

Fading In and Out

You can add a professional touch to your recordings when you fade in and out of scenes. The picture will gradually appear or disappear. The speed of the fade is automatically controlled by the camcorder.

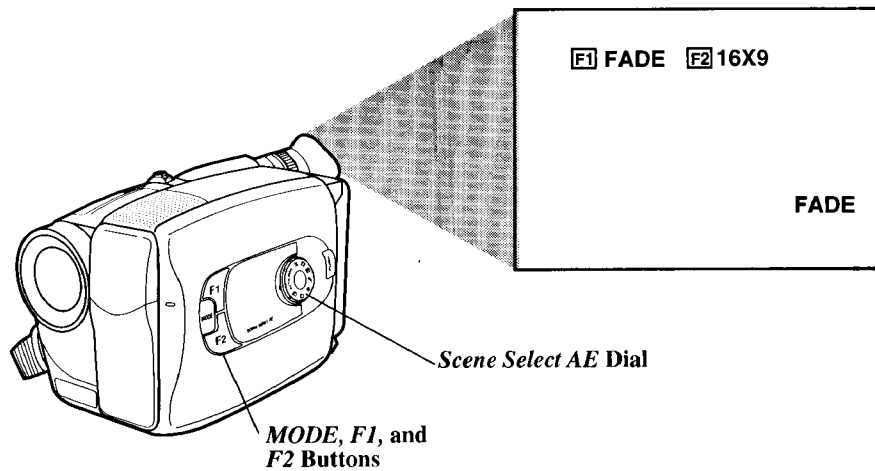

Fade In

1. Place the *POWER* switch to *CAMERA*. The power indicator will light. The camcorder will enter record pause. Center the subject or scene that you want to record in the viewfinder.
2. Make sure *scene select AE* dial is not set to *AUTO*.
3. Press *MODE* until **F1** *FADE* appears in the viewfinder.
4. Press *F1* to activate *FADE*. *FADE* appears in the lower right-hand corner of the viewfinder.
5. Press the thumb trigger to start recording. The screen turns blank and the camcorder will automatically fade into the scene you have selected.

Fade Out

1. Make sure *scene select AE* dial is not set to *AUTO*.
2. Press *MODE* until **F1** *FADE* appears in the viewfinder.
3. Press *F1* to activate *FADE*. *FADE* appears in the lower right-hand corner of the viewfinder.
4. Press the thumb trigger to stop recording. The camcorder will automatically fade out of the scene and enter record pause.


Note: When the *scene select AE* dial is set to *AUTO*, *FADE* will not operate.

Recording

16X9 Mode

The camcorder has a 16X9 recording mode that lets you make recordings compatible with the 16X9 format. When 16X9 is activated, the camcorder records black bars at the top and bottom of the picture to produce the wide-screen effect. This is also known as “letter box” recording.


New 16X9 TV Screen

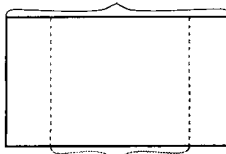

Standard Shape TV Screen

Do not use this mode unless you have a compatible 16X9 TV. When played on a regular TV, black bars appear in the picture.

To Record Using the 16X9 Mode

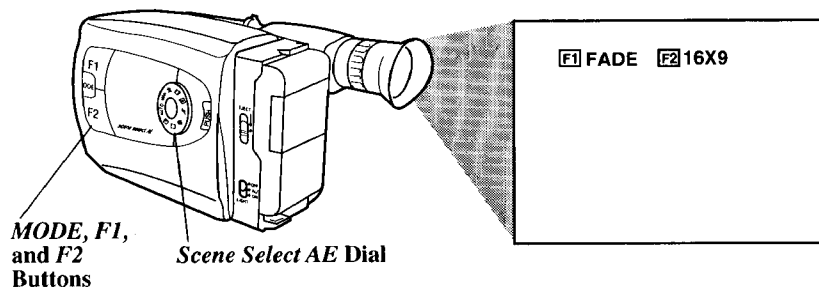

1. Place the *POWER* switch to *CAMERA*. The power indicator will light. The camcorder will enter record pause.
2. Make sure *scene select AE* dial is not set to *AUTO*.
3. Press *MODE* until **F2** 16X9 appears in the viewfinder.
4. Press *F2* to activate the 16X9 mode. Black bars appear at the top and bottom of the picture in the viewfinder.
5. Press the *F2* button again to turn off the 16X9 mode.

Note: When the *scene select AE* dial is set to *AUTO*, the 16X9 mode will not operate.




Normal Mode



16X9 Mode

Recording


Focusing the Camcorder

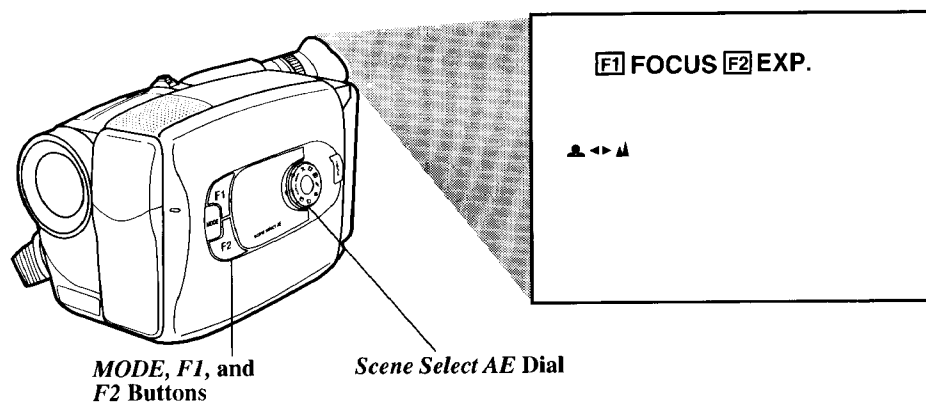

Auto Focus

During auto focus the camcorder will focus automatically on the object located in the center area of the viewfinder.

 
- Place the *scene select AE* dial in *AUTO* to turn on the auto focus feature.

Note: The low-contrast indicator () in the viewfinder indicates the auto-focus system may not operate correctly due to low illumination, low or no contrast, repeated patterns, or two subjects at different distances overlapping.

Caution: During recording pauses, light entering the camcorder will operate the auto-focus feature and consume battery power.

Focus Lock Feature

The focus lock feature is useful when objects pass between your subject and the camcorder or your main subject is not located in the center of the viewfinder.

1. Center the main object in the viewfinder.
2. Make sure the *scene select AE* dial is not set to *AUTO*.
3. Press *MODE* until **F1 FOCUS** appears in the viewfinder.
4. Press *F1* to activate focus lock.
The focus lock indicators () appear in the viewfinder.
5. Press the *F1* button again to turn on auto focus (or place *scene select AE* dial in *AUTO*).





 
 
Recording





Manual Focus

Under certain conditions, such as those listed, you may need to focus manually.

1. Make sure the *scene select AE* dial is not set to *AUTO*.
2. Slide the power zoom lever toward *T* to zoom in on your subject. To maintain proper focus throughout the zoom range, you must zoom in on the subject before adjusting the focus.
3. Press *MODE* until **F1** *FOCUS* appears in the viewfinder.
4. Press and hold *F1* while sliding the power zoom lever toward *T* or *W* to display a clear picture in the center of the viewfinder.

For slow focusing, slide the power zoom lever a small amount. For fast focusing, slide the lever all the way up or down.

  The   indicators appear in the viewfinder. The  or  indicator will flash. When the focus cannot be adjusted any farther, the  indicator will flash. When the focus cannot be adjusted any closer, the  indicator will flash.

5. Release the power zoom button to lock in the manual focus. The   indicators appear in the viewfinder.
6. To turn off manual focus, press *F1* or place the *scene select AE* dial to *AUTO*. The   indicators disappear from the viewfinder.


Conditions Requiring Manual Focus

- When recording a subject through a window.
- When recording a subject having a close foreground and a background that is far away.
- When recording two subjects at different distances that overlap in the same scene.
- When the subject is not in the center of the viewfinder.
- When recording in low-light situations.
- When recording a scene with fast motions, like a tennis swing.

Recording

Exposure Control (Iris)

The camcorder automatically adjusts the iris to provide the best picture. Under certain conditions, you may want to brighten or darken the image manually.

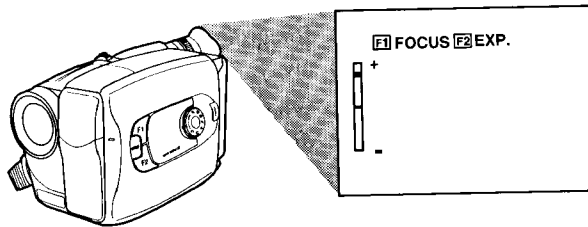


To Manually Control Brightness

1. Make sure the *scene select AE* dial is not set to *AUTO*.
2. Press *MODE* until **F2 EXP.** appears in the viewfinder.
3. Press and hold *F2* while sliding the power zoom lever toward *T* to brighten the image or toward *W* to darken the image.
4. To return to auto iris mode, press *F2* (or place the *scene select AE* dial in *AUTO*).

The exposure indicator bar appears in the viewfinder.

Zooming

The motorized zoom lens allows you to zoom in and out for close ups or wide-angle shots just by sliding the power zoom lever on the camcorder.

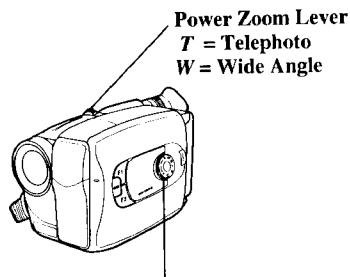


- To move the lens in the wide angle direction, slide the lever toward *W*.

Zoom speed varies according to how far you zoom in or out. The zoom level indicator appears in the viewfinder.

- To move the lens in the telephoto (close-up) direction, slide the power zoom lever toward *T*.

Zoom Level Indicator in Viewfinder

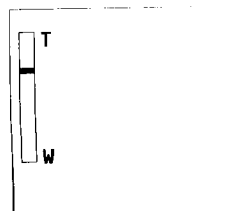


Recording

Attaching the Shoulder Strap


The camcorder's shoulder strap is designed to let you carry the camcorder from your shoulder and – when you are ready to shoot – bring the camcorder to shooting position in one quick movement.

To Attach the Shoulder Strap

1. If the strap keeper is over a double section of the strap, slide the strap keeper off the end of the strap. Replace the keeper on the strap between the buckle and the end of the strap as shown.

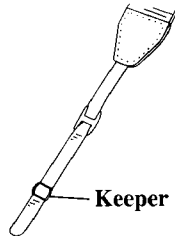


2. Loop the end of the strap over the top of the shoulder strap attachment ring.

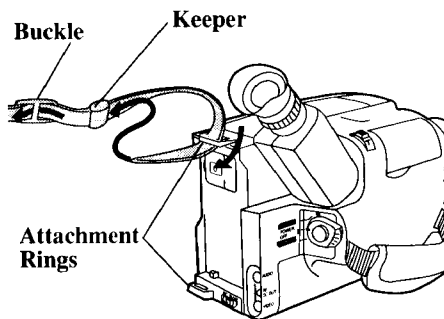

3. Thread the end of the strap back through the keeper and buckle making sure it is threaded **under** the outer strap. Make sure the strap is not twisted.

4. Attach the other end of the strap to the other shoulder strap attachment ring.

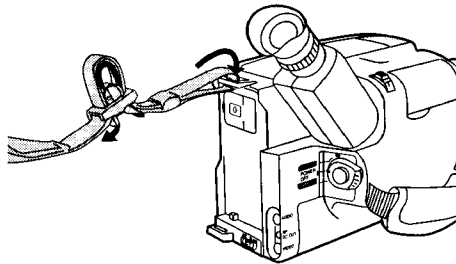

5. Adjust the shoulder strap to the desired length.
6. Slide both keepers up snugly against the shoulder strap attachment rings to prevent the strap from slipping.


Cautions: When carrying the camcorder with the shoulder strap, you may find it convenient to rotate the viewfinder down and slide it to the front. This helps prevent possible damage to the viewfinder from bumping against your body as you move.

Make sure the shoulder strap is firmly attached before using it to carry the camcorder.

Recording

Titler

You can superimpose one of the eight preset titles stored in memory over the scene being recorded. You can also create your own title (up to 18 characters), store it, and record it alone or with one of the preset titles.

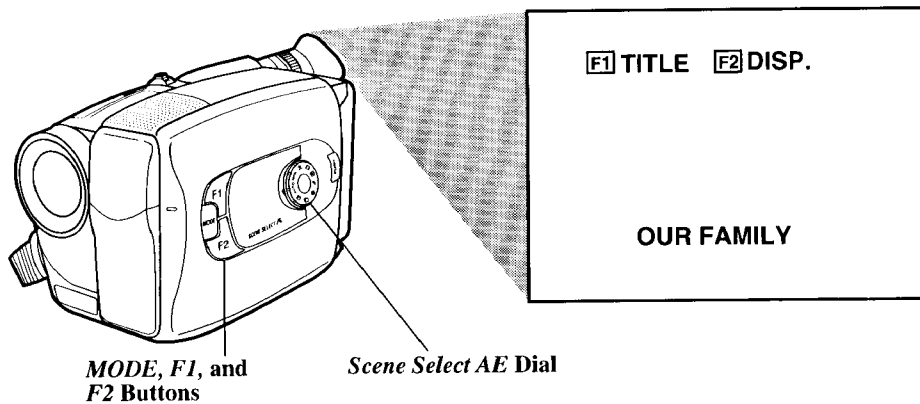

**MODE, F1, and
F2 Buttons**

Scene Select AE Dial

Recording a Title Stored in Memory

1. Place *POWER* switch in *CAMERA*.
Power indicator will light.
2. Make sure the *scene select AE* dial is not set to *AUTO*.
3. Press *MODE* until [F1] *TITLE* appears in the viewfinder.
4. Repeatedly press *F1* to display the title you want to record. The stored titles appear in the following order.
Title Off – No Title
HAPPY BIRTHDAY
HAPPY HOLIDAYS
CONGRATULATIONS
OUR FAMILY
SOMEONE SPECIAL
VACATION

SUPER STAR

FIRST

Title you Created

Title Off – No Title


- Note:** You can record the title you created along with one of the titles stored in memory making it possible to record a pair of identical titles.
5. Press the thumb trigger to start recording. The title will be superimposed over the scene you are recording.
 6. When you are finished recording the title(s), press *F1* to remove it from the viewfinder.

(continued on next page)


Recording

Creating Your Own Title

After you create a title you can store it and record it alone or with one of the preset titles *as described on pages 42-43*. The clock cell battery must be installed *as shown on the next page*.

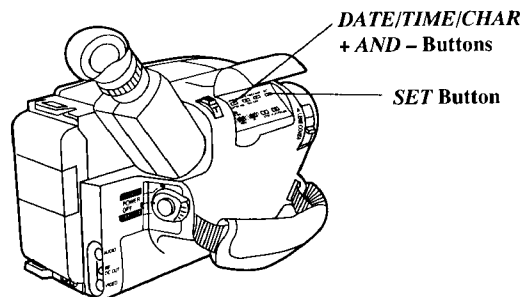


1. Place **POWER** switch in **CAMERA**. Power indicator will light.
2. Make sure the *scene select AE* dial is not set to **AUTO**.
3. Press **MODE** until **[F2] DISP.** appears in the viewfinder.
4. Repeatedly press **F2** to display **SET CHAR** (or a title you have previously stored) in the viewfinder.
5. Press **SET**. The **CHARACTER SET MODE** menu appears with a flashing cursor.

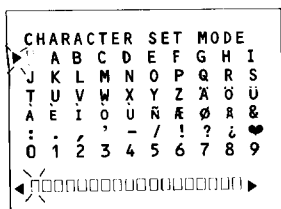

Notes: To leave a blank space, select the blank space in front of "A."

Press and hold the button to rapidly advance the flashing cursor.

7. Press **SET** to select the character.
8. Repeat steps 6 and 7 until you have selected up to 18 characters for a title.

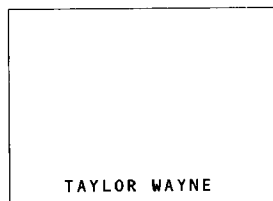

9. Repeatedly press **SET** to store the title and remove the **CHARACTER SET MODE** menu from the viewfinder.


Notes: Only one title can be stored. To create a new title, store it over the old one.


To erase a character or title, select the blank space in front of the "A" for each character you want to erase.

6. Repeatedly press **DATE/TIME/CHAR +** or **-** until the first character for your title is flashing.

Recording

Install the Clock Lithium Cell

The clock cell indicator  will appear in the viewfinder when the cell has not been installed or needs to be replaced. The cell should last approximately one year.

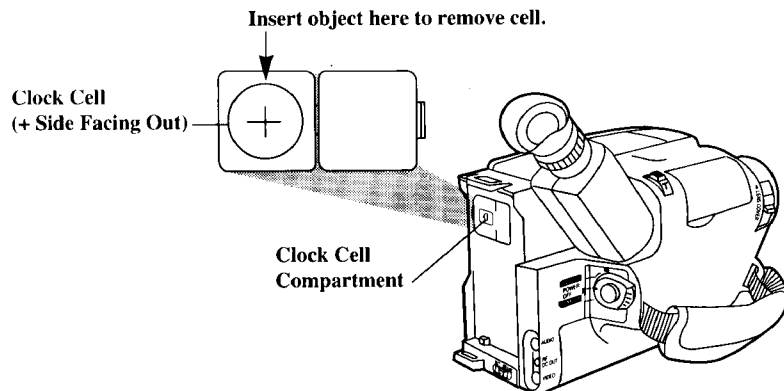

1. Make sure camcorder is turned off, and remove any power supply attached to the camcorder.
2. Press release tab of clock cell compartment cover and open the compartment.
3. Insert the clock cell with the “+” terminal facing out.
4. Close the compartment cover. It will click into place.

To remove battery

To remove battery, insert a pointed non-metallic object between battery and compartment and lift.

Cautions: Lithium cell battery. Replace only with 3-volt lithium cell – such as CR2025. Use of other cell presents a risk of fire or explosion. Must be disposed of properly. Never handle punctured or leaking cell. May cause burns or personal injury.

Keep out of the hands of children. Can cause death or injury if swallowed. If swallowed, consult a physician immediately for emergency treatment.


The lithium cell used in this device may explode resulting in a fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate.

Never use metallic tweezers to hold the cell, and never short circuit the + and – sides of the cell.

Recording

Set the Date and Time

After the date and time have been set, they can be displayed and recorded on your tapes. The clock cell must be installed.

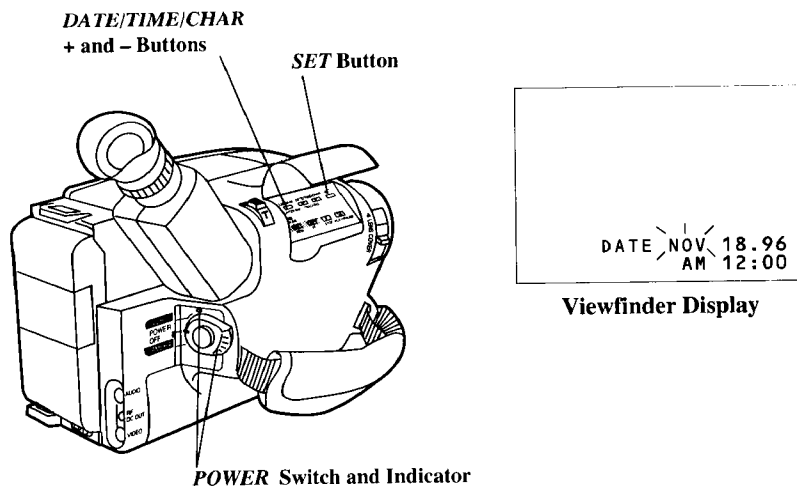

1. Make sure the clock cell is installed.
2. Attach a power supply.
3. Place the *POWER* switch in *CAMERA*. The power indicator will light.
4. Press the *SET* button. The date and time display appear with a flashing cursor on the month. The flashing cursor lets you know which part of the display you are setting.
5. Repeatedly press *DATE/TIME/CHAR* + or - until the correct month appears.
Note: Press and hold the button to rapidly advance the digits.
6. Press *SET* to move flashing cursor to the next part of the display.
Note: Press and hold the button to rapidly advance the flashing cursor.
7. Repeat steps 5 and 6 until you have entered the correct month, day, year,

hour (including *AM* or *PM*), and minutes.

8. Press *SET* to remove the flashing cursor and start the clock.

Note: The clock begins when the minute digits stop flashing. The clock does not keep time while any digits are flashing.

To Correct the Displays


Press *SET* to display the time and date and select the item you want to change. Use *DATE/TIME/CHAR* + or - to enter the correct digit(s).

Repeatedly press *SET* to remove the flashing cursor and start the clock.

Recording

Select the Date, Time, or Title You Want to Record on Your Tape


The clock cell must be installed, and the date and time set before they can be selected and recorded. When the *scene select AE* dial is in *AUTO*, the auto date mode is automatically selected.

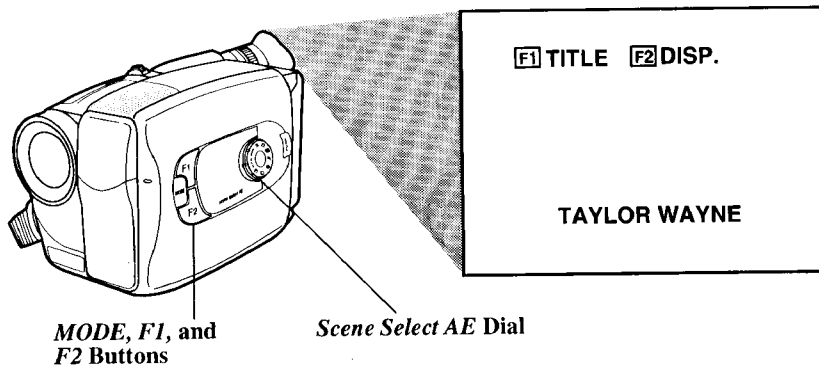

1. Attach a power supply and place *POWER* switch in *CAMERA*. The power indicator will light.
2. Make sure the *scene select AE* dial is not set to *AUTO*.
3. Press *MODE* until **[F2] DISP.** appears in the viewfinder.
 - **Date Display:** The date will be displayed and recorded.
 - **Auto Date:** The date will be automatically recorded for approximately five seconds.
 - **Date/Time Display:** The date and time will be displayed and recorded.
4. Repeatedly press *F2* to select the date, time, or title you want to record.
 - **TV On-Screen Display:** The viewfinder displays will appear on the screen of a TV connected to the camcorder during record pause. In this mode the date will be displayed and recorded.
 - Note:** This mode is not available during recording.
 - **Date Off:** No date or time will be displayed or recorded.
 - **Title Display:** The title you created will be displayed and recorded.
 - Note:** If no title has been created, *SET CHAR* appears and a title can be created. *Details are on page 39.*

Recording

Date and Time Displays

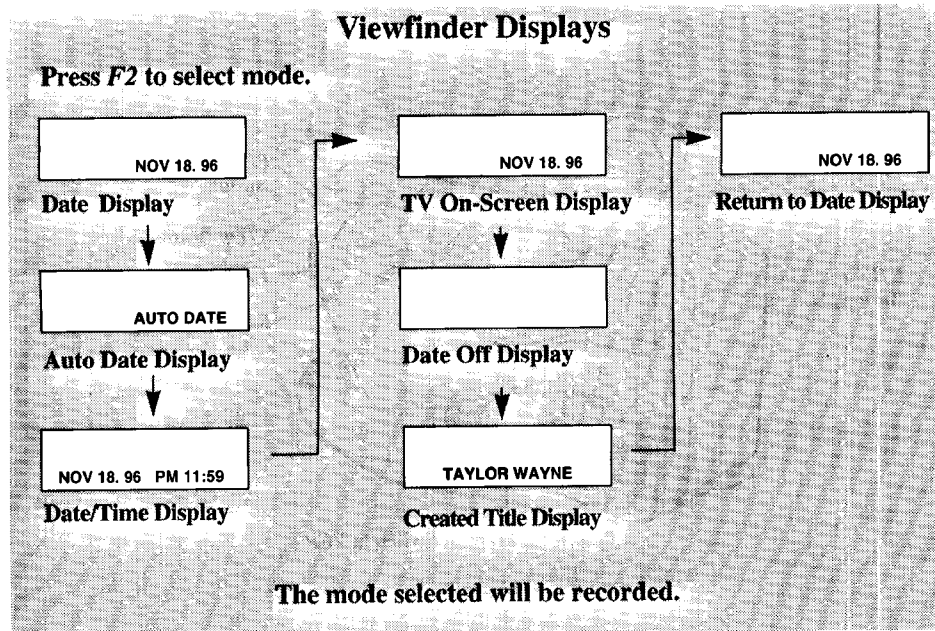


To Record the Date, Time, or Title Display on Your Tape

1. Place the camcorder in record pause.
2. Place *scene select AE* in *MAN*.
Note: Whenever the *scene select AE* dial is in *AUTO*, *AUTO DATE* is automatically selected.
3. Press *MODE* until **[F2] DISP.** appears in the viewfinder.
4. Repeatedly press *F2* to display the date, time, or title you have previously stored in the viewfinder. If you select *AUTO DATE*, it will automatically appear, be recorded for five seconds, and then disappear whenever:
 - The date has been set or changed.
 - This display mode has just been selected.
 - The tape has been changed or the tape compartment opened.
5. Press *F2* to remove the display from the viewfinder when you are finished recording it.
6. To record the display again, place the camcorder in record pause and press *F2*.

Playback

Viewfinder Playback and Playback Features

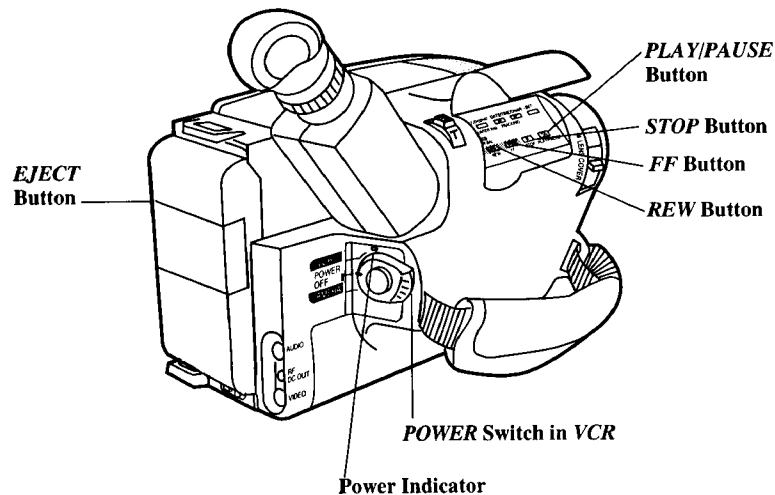

Viewfinder Playback

Viewfinder playback is the simplest way to watch tapes using the camcorder.

To Play Back a Tape

1. Place **POWER** switch in **VCR**. The power indicator will light.
2. Slide **EJECT** and insert the cassette you want to play back. Close the cassette compartment.
3. Press **PLAY/PAUSE** to begin playback. If necessary, adjust tracking. During playback, use the playback features.
4. Press **STOP** when you are finished.

Playback

Playback Features

Visual Searching

- During playback, press and release *FF* or *REW* if you want to search the tape visually in forward or reverse.
- Press *PLAY/PAUSE* to return to normal playback.
- For brief searching, press and hold *FF* or *REW* for more than two seconds.
- Release the button to return to normal playback.

Stop-Action Pause


- During playback, press *PLAY/PAUSE* to “stop the action” and view one frame of the tape.

Caution: Pause is designed for momentary interruptions and should not be used for an extended period of time. If the camcorder remains in pause for more than five minutes, it will automatically enter the stop mode and then turn off to prevent excessive tape wear.

- Press *PLAY/PAUSE* to return to normal playback.

Tracking

During playback, streaks may appear in the playback picture.

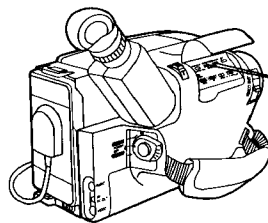

TRACKING Buttons

- Press either *TRACKING* button to move the streaks up or down and out of the picture.
- During stop-action playback, pressing one *TRACKING* button may reduce picture “jitter” (picture bouncing up and down). Some “jitter” is normal.
- Simultaneously press both *TRACKING* buttons to return tracking to its preset center.

Note: The *TRACKING* buttons may have no effect on tapes recorded on other camcorders or VCRs.


Playback

Using the Cassette Adapter

The camcorder uses a smaller size cassette, but records in standard VHS format. The cassette adapter allows you to play your VHS-C cassettes in a VCR just like other standard VHS cassettes.

Insert the VHS-C cassette into the cassette adapter. Insert the cassette adapter into the VHS VCR like a normal VHS cassette.


Install Cassette Adapter's Battery

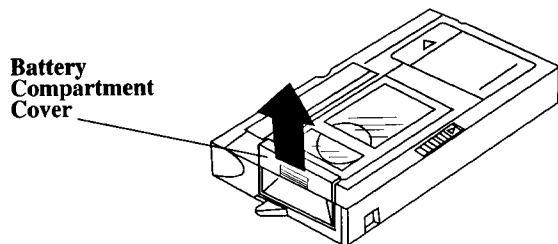

1. Remove battery compartment cover.
2. Install supplied "AA" battery so positive (+) and negative (-) ends align properly with (+) and (-) terminals in battery compartment.
3. Replace battery compartment cover.

Notes: Replace the battery when the load time becomes much longer than normal. Remove the battery from the cassette adapter if it will not be used for a month or more. This will prevent possible damage from battery leakage. If leakage occurs, wipe up the liquid inside the compartment and replace the battery with a new one.

Insert Cassette into Cassette Adapter

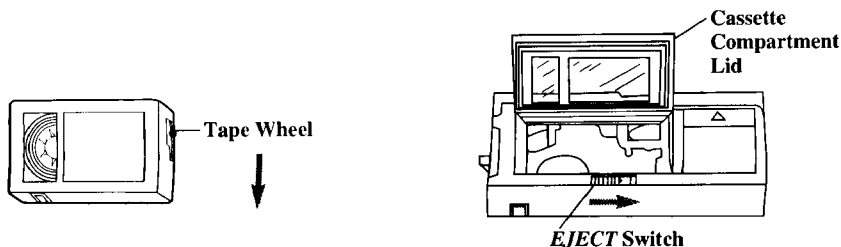


1. Before inserting the cassette into the adapter, remove any slack in the tape by turning the tape wheel on the side of the cassette.
2. Slide *EJECT* to the right to open the cassette compartment lid.

3. Insert the cassette with the tape window on the left and facing up. Allow the cassette to drop into the adapter. **Do not force the cassette.**

(continued on next page)

Playback

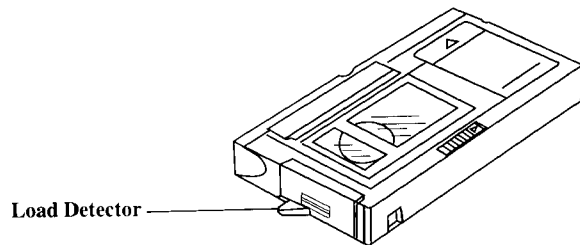


4. Gently close the cassette compartment lid until it locks into place. Make sure the cassette reel area under the adapter is free to turn while the cassette is loading.

Note: You should hear a whirring sound while the tape loads. The adapter's load detector will automatically retract into the adapter.

Caution: If the load detector is still extending from the side of the cassette adapter after you have attempted to load the cassette, loading is not complete. Try to load the cassette again. Attempting to insert the cassette adapter into a VCR with the load detector extending may cause damage to the adapter and/or VCR.

Remove Cassette from Cassette Adapter

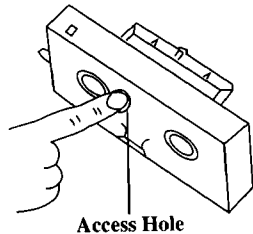


1. Slide the adapter's *EJECT* switch to the right. The load detector will extend from the side and the whirring sound indicates the tape is being released before the adapter's cassette compartment lid opens.
2. Use the access hole on the bottom of the adapter to push the cassette up and remove it from the adapter.
3. Gently close the adapter's cassette compartment lid.

Playback

Playback on TV (or VCR) with AUDIO/VIDEO IN Jacks

To connect your camcorder to a TV monitor (or VCR) with *AUDIO/VIDEO IN* jacks, you will need an optional audio/video cable such as VH83 shown on page 54.

If your TV is already connected to a VCR, you can attach the camcorder to the VCR and watch what the camcorder is recording or playing on the TV.

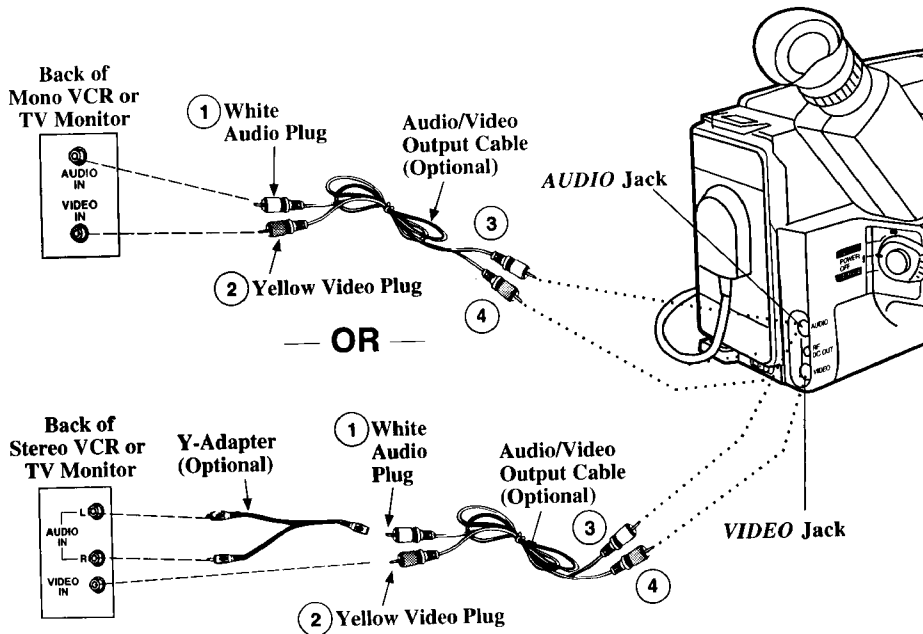

Installation

- 1 Attach the white plug on one end of the audio/video cable to the *AUDIO IN* jack on the TV (or VCR).

Notes: If your cable does not have white and yellow plugs, just be sure to attach the same color to the audio jacks.

If your TV (or VCR) has stereo *AUDIO IN* jacks, attach the plug to the one labeled *MONO*. If one is not labeled *MONO*, you may need a Y-adapter, such as AH25, shown on page 54 to hear both channels.

- 2 Attach the yellow plug to the *VIDEO IN* jack on the TV (or VCR).
- 3 Attach the white plug on the other end of the audio/video cable to the *AUDIO* jack (located under the small cover) on the back of the camcorder.
- 4 Attach the yellow plug to the yellow *VIDEO* jack on the camcorder.

(continued on next page)

Playback

Playback Operation and How to Copy Tapes on the VCR

1. A. Camcorder connected directly to TV: Turn on the TV and tune it to the video input channel.
B. Camcorder connected to VCR that is already connected to TV: Turn on VCR and place it in the "line" or "camera mode". (If your VCR does not have a "line" or "camera mode", consult the VCR owner's manual.) Operate the TV as you normally do to see the signal coming from the VCR.
2. Place the *POWER* switch in VCR to turn on the camcorder. The power indicator will light.
3. Press *PLAY/PAUSE*.
 - If noise bars appear on the screen, press *TRACKING* – or +.
4. To copy what the camcorder is playing, place a blank cassette in the VCR, and press the VCR's *RECORD* button.
Note: Make sure the memory-stop feature is turned off (press *COUNTER R/M*) or the camcorder will enter play pause when the counter reaches *M 0:00:00*.
5. Press *STOP* when you are finished.

Caution: The unauthorized recording of copyrighted material may infringe the rights of others.

Viewing What the Camcorder is Seeing (or Recording)


1. A. Camcorder connected directly to TV: Turn on the TV, and tune it to the video input channel.
B. Camcorder connected to VCR that is already connected to TV: Turn on VCR and place it in the "line" or "camera mode". (If your VCR does not have a "line" or "camera mode", consult the VCR owner's manual.) Operate the TV as you normally do to see the signal coming from the VCR.
2. Place the *POWER* switch in *CAMERA*.
Note: When the camcorder is used as a camera, turn the TV's volume down to prevent a high-pitched squeal caused by feedback.
3. Press the thumb trigger to begin recording. You can watch what the camcorder is seeing (or recording) on the TV screen.

Note: During record pause, you can use the display feature to see the camcorder's displays on the TV screen. *Details are on pages 42-43.*

Playback

Playback on a TV Without Audio/Video Inputs

To connect your camcorder to a TV without audio/video inputs, you will need an optional 1CVA147C RF output adapter and an optional coaxial RF cable, such as VH82 or VH84 shown on page 54. If your TV has *AUDIO* and *VIDEO IN* jacks (or is connected to a VCR), refer to pages 48-49.

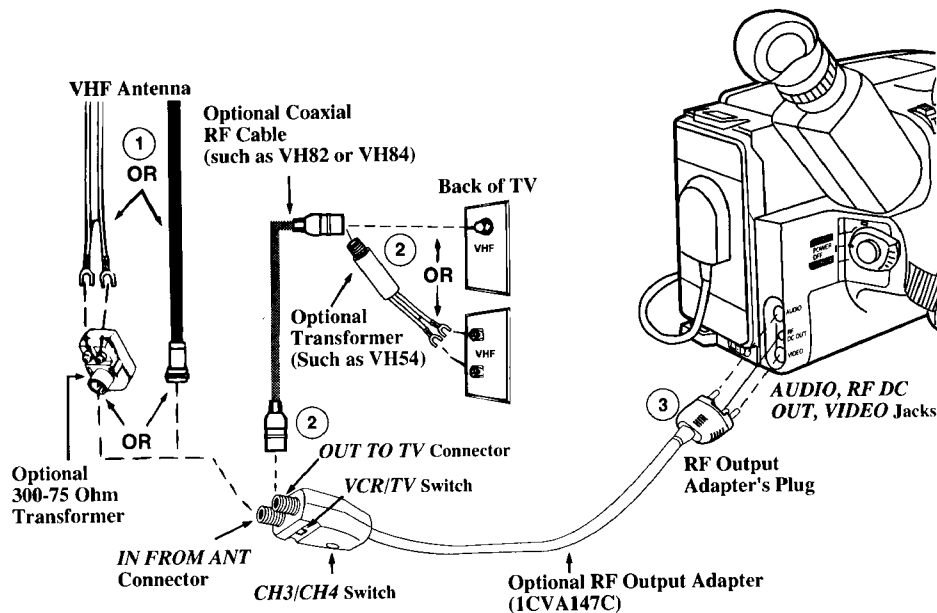

Installation

- 1 Disconnect the VHF antenna from your TV. Connect the antenna to the *IN FROM ANT* connector on the RF output adapter if you are going to leave the adapter connected to the TV.

Note: If your VHF antenna is the flat twin-lead type attached by two screws, you will also need an optional 300-to-75 ohm transformer.

- 2 Attach one end of the optional coaxial RF cable to the *OUT TO TV* connector on the adapter, and attach the other end to the VHF input on your TV as shown.

Note: If your TV has 300 ohm screw terminals, you will need a 75-to-300 ohm transformer, such as VH54, shown on page 54.

- 3 Attach the RF output adapter's plug to the *AUDIO*, *RF DC OUT*, and *VIDEO* jacks located under the small cover on the back of the camcorder.

Playback

Playback Operation

1. Set the *CH3/CH4* switch on the RF output adapter to channel 3 or 4.
2. Turn on the TV, and tune it to the same channel you selected with the RF output adapter's *CH3/CH4* switch.
3. Place adapter's *VCR/TV* switch in *VCR*.
4. Place the *POWER* switch in *VCR*. Power indicator will light.
5. Press *PLAY/PAUSE* on the camcorder.
 - During playback, use the playback features *described on page 45*.
 - If noise bars appear on the screen, adjust tracking *as described on page 45*.
6. Press *STOP* on the camcorder when you are finished.

Viewing What the Camcorder Is Recording

1. Turn on the TV and tune it to channel 3 or 4. When the camcorder is used as a camera, turn the TV's volume down to prevent a high-pitched squeal caused by feedback.
2. Set the *CH3/CH4* switch on the RF output adapter to the same channel you selected on the TV.
3. Place adapter's *VCR/TV* switch in *VCR*.
4. Place *POWER* in *CAMERA*. Power indicator will light.
5. Press the thumb trigger to begin recording. You can watch what the camcorder is seeing (or recording) on the TV screen.

Note: During record pause, you can use the display feature to see the camcorder's displays on the TV screen. *Details are on pages 42-43.*

Normal TV Viewing

For normal TV viewing, you may leave the RF output adapter hooked up to the TV. Disconnect the adapter's plug from

the camcorder and place the adapter's *VCR/TV* switch in *TV*.

Note to Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I), that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Optional Accessories


We invite you to take a look at some great ideas for sparking creativity and adding to the fun of using your compact VHS camcorder. The following pages have a selection of accessories to help make your memorable moments look and sound even better.

These accessories are designed to make the process of recording and watching your videos more enjoyable.

To order accessories, contact your local Dealer.


If a dealer is not nearby, all accessories are available through toll-free ordering or by using the order form *on page 55*.

AC201A Soft Carrying Case

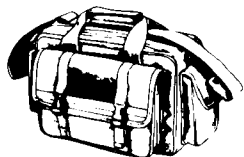

Custom compact soft case designed especially to provide protection and utility for your compact VHS camcorder and most accessories. Rugged fabric lined with soft non-abrasive material and generous padding. Has three outside pockets with storage for lens filters, adapters, batteries, and tapes.

DCC08 Car Cord Adapter

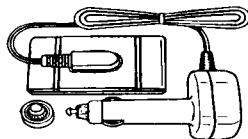


This car cord adapter enables you to operate your camcorder from your car, truck, or RV by plugging the car cord directly into the vehicle's cigarette lighter socket. The DCC08 is designed specifically to convert power from a 12-volt battery to a 6-volt output.

Do not use any other car cord with this camcorder.

All specifications and descriptions of accessories are subject to change without notice.


Optional Accessories

CPS91 AC Battery Charger

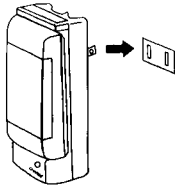

The CPS91 battery charger plugs directly into an AC outlet and charges the FB1260 and FB120 camcorder batteries. Because the CPS91 operates on 100-240 Volts, 50/60 Hz, it can be used virtually anywhere in the world. A plug adapter may be required in some countries. Charging takes approximately seven hours for the FB1260 (1-hour battery) and 13 hours for the FB120 (2-hour battery).

FB1260 and FB120 Rechargeable Batteries

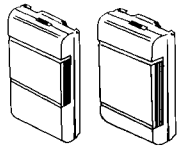


These rechargeable nickel-cadmium batteries are designed specifically for long life. The FB1260 is the same battery that came packed with your camcorder. The FB120 powers your camcorder twice as long as the FB1260 (depending on how much you use zoom and pause). Both can be recharged with the AC adapter/charger that came with your camcorder.

Using the Optional AC088 Tripod

Mounting the camcorder on a tripod, such as AC088, will keep the camcorder steady and produce excellent video results.

This tripod's fluid-effect head provides smooth camera pan and tilt. The quick-release mount makes it easy to attach or remove the camcorder. The grooved, tubular 3-section leg design folds down to 26" when not in use. Rubber feet allow for sure footing.

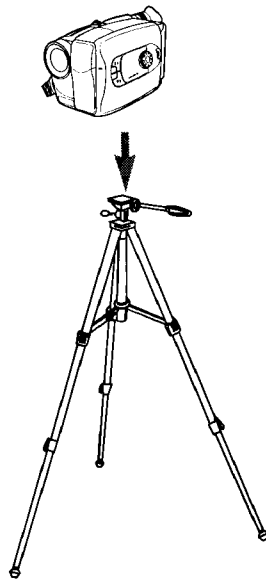


Cautions: Before using a tripod, make sure it is stable enough to hold the camcorder without falling over. Do not transport the camcorder attached to the tripod.

When attaching your camcorder to a tripod, be careful not to force the tripod screw into the camcorder's tripod mounting hole.

The tripod screw should not protrude into the camcorder more than approximately three-eighth (3/8) inch. Forcing the screw could damage the mounting hole on the bottom of the camcorder.


Optional Accessories

1CVA147C RF Output Adapter

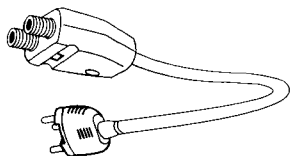

This RF output adapter is used with a coaxial RF cable, such as VH82 or VH90, to connect your camcorder to a standard TV (one without audio/video inputs) for playback. If your antenna cable is the flat twin-lead type attached by two screws, you will also need a 300-to-75 ohm transformer. If your TV has 300 ohm VHS screw terminals, you will need an optional 75-to-300 ohm transformer such as VH54.

 Coaxial RF Cables



VH82 (6-ft)
VH90 (12-ft)


These RF cables are used with the RF output adapter to connect your camcorder to a standard TV (one without audio/video input jacks) for playback. If your TV has 300 ohm VHS screw terminals, you will need an optional 75-to-300 ohm transformer such as VH54. If your antenna cable is the flat twin-lead type attached by two screws, you will also need an optional 300-to-75 ohm transformer.

VH54 Cable Transformer



This 75-to-300 ohm transformer is used to connect a standard 75-ohm antenna cable (such as VH82 or VH90) to the 300 ohm screw terminals on a TV.

 VH83 Audio/Video Cable



This six foot audio/video dubbing cable can be used for copying tapes from the camcorder to another VCR or camcorder.

AH25 Y-Adapter



This Y-adapter allows you to connect your camcorder's mono audio cable to a stereo TV or VCR.

All specifications and descriptions of accessories are subject to change without notice.

Accessory Order Form

Order Form for Camcorder Model CC631

Description	Part No.	Price	Qty.	Total
Super Lightweight Tripod	AC088	\$ 39.95		
Soft Camcorder Case	AC201A	\$ 39.95		
Shoulder Strap	ACS091	\$ 12.95		
Y-Adapter	AH25	\$ 2.95		
AC Battery Charger	CPS91	\$ 59.95		
Car Cord Adapter	DCC08	\$ 89.95		
Rechargeable Battery (Extended)	FB120	\$ 89.95		
Rechargeable Battery (Standard)	FB1260	\$ 49.95		
75-300 Cable Transformer	VH54	\$ 2.95		
Coaxial RF Cable	VH82	\$ 6.95		
Audio/Video Cable	VH83	\$ 5.95		
Coaxial RF Cable	VH90	\$ 7.95		
RF Output Adapter	1CVA147C	\$ 59.95		
AC Adapter/Charger and Power Connector	221400 220389	\$ 96.45 \$ 27.75		
Cassette Adapter	232845	\$ 49.95		

Prices are subject to change without notice.

Total Merchandise.....\$ _____

Sales Tax\$ _____

We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.

Shipping and Handling.....\$ **5.00**

Total Amount Enclosed\$ _____

Use VISA, MasterCard, or Discover.
Money order or check must be in U.S.
currency only. No COD or cash.

Detach Here



Please complete other side also

Accessory Order Form

Charge your order on your VISA,
MasterCard, or Discover Card by
filling in below

USE YOUR CREDIT CARD

IMPORTANT: Copy complete account number
from your VISA card



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

My card expires:

--	--

--	--

IMPORTANT: Copy complete account number
from your MasterCard



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Copy Number
above your
name on
MasterCard

--	--	--	--

My card expires:

--	--

--	--

IMPORTANT: Copy complete account number
from your Discover Card



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

My card expires:

--	--

--	--

AUTHORIZED SIGNATURE

Prices are subject to change without notice.

Print or type your name and
address clearly. This will be
your mailing label.




A complete and correct
order will save you days
of waiting.

Name: _____
Street: _____
_____ Apt: _____
City: _____
State: _____ Zip: _____

Please make sure that both sides of this form
have been filled out completely.

- Allow 4 weeks for delivery.
- All accessories are subject to availability.

Detach Here 

Accessory Order Form

To order accessories, contact your local Dealer.

If a dealer is not nearby, you can also follow the directions below to order by telephone or direct-by-mail.

United States and Canada Orders

To place your order by phone, have your Visa, MasterCard, or Discover card ready and call the toll-free number listed below between 8AM and 8PM (EST) Monday through Friday or between 9AM and 5PM (EST) Saturday.

Use this number only to place an order for accessory items listed on this order form.

1 – 800 – 338 – 0376

To place your order by mail, detach and mail the completed order form with credit card information, money order, or check in U.S. currency (made payable to Thomson Consumer Electronics, Inc.) to the following address:

Video Accessories
PO Box 8419
Ronks, PA 17573

Care and Maintenance


Cleaning the Camcorder

To clean the camcorder's exterior, remove any power source connected to the camcorder and gently wipe it with a clean soft cloth.

Caution: Use of strong cleaning products, such as those containing alcohol or benzine, may damage the camcorder.

Cleaning the Camcorder's Lens


To clean the camcorder's lens, blow it with a blower brush, and then gently wipe the lens with cleaning tissue and commercially prepared cleaning solution designed for use on camera lens. Improper cleaning may scratch the lens.

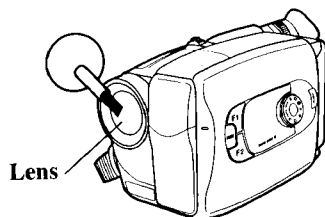

Caution: Do not touch the lens with your fingers. The oil from your skin can damage the lens.

Cleaning the Camcorder's Viewfinder

The viewfinder eyepiece can be removed for cleaning.

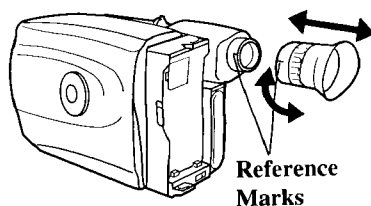

1. Turn the eyepiece counterclockwise and pull it out.
2. Remove dust using a blower brush.
3. Reattach the eyepiece by aligning the reference marks, and then turn the eyepiece clockwise until it clicks.

Care and Maintenance

Proper Care and Storage

- Keep dust and grit from entering the camcorder's cassette door. Dust and grit are abrasive and will cause excessive wear to both the camcorder's recording/playback heads and cassettes.
- Always close the lens cover when the camcorder is not in use.
- Before handling your camcorder, make sure your hands and face are free from any chemical products such as suntan lotion, as it may damage the finish.
- The camcorder can be damaged by improper storage or handling. Do not subject the camcorder to swinging, shaking, or dropping.
- Do not store the camcorder in temperatures below -22°F (-30°C) or above 149°F (65°C).
- When the camcorder is not in use, always remove the cassette and AC adapter/charger or battery.
- Retain the original carton for future storage or shipping purposes.

Things to Avoid

- Do not attempt to disassemble your camcorder. There are no user-serviceable parts inside.
- Avoid operating your camcorder immediately after moving it from a cold location to a warm location. Give the camcorder 1-1/2 to 2 hours to reach a stable temperature before inserting a cassette. When the camcorder is moved from cold to warm, condensation may cause the tape to stick to the headwheel and damage the headwheel or tape.
- Do not aim your camcorder at the sun or other bright objects.
- Do not leave your camcorder in direct sunlight for extended periods of time. The resulting heat buildup could permanently damage the camcorder's internal parts.
- Do not operate the camcorder in extremely humid environments.
- Do not operate the camcorder near the ocean as salt water or salt water spray may damage the internal parts of the camcorder.
- Do not operate the camcorder for extended periods in temperatures below 40°F (4°C) or above 95°F (35°C).
- Do not expose the camcorder or adapter/charger to rain or moisture. If either component becomes wet, turn off the power and take the unit to an Authorized RCA Camcorder Servicer.
- Do not use an adapter/charger or batteries other than the ones specified for the camcorder. Use of the wrong accessories may cause damage to the camcorder.

Trouble Checks

Troubles sometimes are caused by simple “faults” that you can easily correct without the help of a service technician by first checking a few basic remedies.

Before you call or take your camcorder to an Authorized RCA Camcorder Servicenter, look below for the type of trouble you are experiencing. Then perform the simple checks and adjustments listed for that trouble.

If service should be necessary, the warranty information lists what your warranty covers and explains how to get service.


 
 

Trouble	Checks and Adjustments
No power	<ul style="list-style-type: none">• Place the <i>POWER</i> switch in <i>CAMERA</i> or <i>VCR</i> to turn on the camcorder. The <i>POWER</i> indicator will light.• If using battery, it may need to be recharged.• If using AC adapter/charger, make sure it is plugged into a working outlet.
Won't record or playback	<ul style="list-style-type: none">• If using AC adapter/charger, make sure it is plugged into a working outlet.• If the dew indicator (☐) flashes in the viewfinder, there is moisture in the camcorder. Wait until the dew indicator no longer appears before operating the camcorder.• Make sure <i>POWER</i> switch is in correct position for desired operation.• There may not be a cassette in the camcorder.• Try ejecting and reinserting the cassette.• The cassette tape may be broken, try another cassette.• You may have reached the end of the cassette, try rewinding it.
Won't playback	<ul style="list-style-type: none">• <i>POWER</i> switch must be in <i>VCR</i> position.
Won't record	<ul style="list-style-type: none">• Safety tab has been removed. (See page 16.)• <i>POWER</i> switch must be in <i>CAMERA</i>.
No picture	<ul style="list-style-type: none">• Open lens cover.

Trouble Checks

Trouble	Checks and Adjustments
Camcorder turns itself off	<ul style="list-style-type: none"> Place <i>POWER</i> switch to <i>OFF</i> and then <i>CAMERA</i> or <i>VCR</i> to turn back on. If camcorder is left in record pause or play pause for several minutes, it will turn itself off to prevent tape wear.
Tape stops during rewind or fast forward	<ul style="list-style-type: none"> Time-counter memory may be on. Whenever an "M" appears with the time-counter display, the camcorder will stop rewinding (or fast forwarding) when counter reads <i>M 0:00:00</i>. Press <i>REW</i> or <i>FF</i> again to continue rewinding or fast forwarding, or press <i>COUNTER R/M</i> to turn off the memory-stop feature.
Camcorder remains in pause mode	<ul style="list-style-type: none"> Press <i>PLAY/PAUSE</i> to return to normal playback.
Sound is too low or distorted	<ul style="list-style-type: none"> Subject was too far from camcorder.
Dew Indicator flashing in viewfinder	<ul style="list-style-type: none"> If the dew indicator (☐) flashes in the viewfinder, there is moisture in the camcorder. Wait until this indicator no longer appears before operating the camcorder.
Poor auto-focus operation	<ul style="list-style-type: none"> Subject is dark or behind glass. Auto-focus may not work under these conditions. Place <i>scene select AE</i> dial in <i>MAN</i> and focus manually. See pages 34-35. Subject is not in center of viewfinder or two subjects are at different distances. Place <i>scene select AE</i> dial in <i>MAN</i> and focus manually. See pages 34-35. Auto focus is automatically turned off when some effects are selected with the <i>scene select AE</i> dial. Place <i>scene select AE</i> dial in <i>AUTO</i>. See page 29.
Vertical white lines appear when shooting bright object	<ul style="list-style-type: none"> This may occur when background extremely contrasts with the subject.

(continued on next page)

Trouble Checks

Trouble	Checks and Adjustments
Viewfinder displays are out of focus	<ul style="list-style-type: none"> • Lens is smudged, and image appears unfocused. • Eyepiece focus control is misadjusted.
Picture is too dark or subject too dark	<ul style="list-style-type: none"> • For best results, only use higher shutter speeds outdoors. Rotate <i>scene select AE</i> dial to sports () or Shutter (). See page 29. • Subject in front of a strong backlight. Rotate <i>scene select AE</i> dial to select back-lit (). See page 29. • Add more light using the exposure control. See page 36.
Picture recorded with special effect	<ul style="list-style-type: none"> • <i>Scene select AE</i> dial may be turned to special effect mode. Turn the <i>scene select AE</i> dial to <i>AUTO</i>. See page 29.
Picture recorded in brown tone	<ul style="list-style-type: none"> • <i>SEPIA</i> () selected with <i>scene select AE</i> dial. Turn the <i>scene select AE</i> dial to <i>AUTO</i>. See page 29.
Picture recorded with black bars at top and bottom	<ul style="list-style-type: none"> • Camcorder is set to the 16X9 mode. Turn off 16X9. See page 33.
Colors do not look natural on recording	<ul style="list-style-type: none"> • Try adjusting white balance. See page 30.
Title recorded on tape	<ul style="list-style-type: none"> • Title is recorded whenever it appears in viewfinder. Remove the title from viewfinder. See pages 42-43.
Power zoom lever does not operate zoom	<ul style="list-style-type: none"> • Check <i>MODE</i> selected. Zoom lever operates other features when some modes are selected. See page 31.

Trouble Checks

Trouble	Checks and Adjustments
Date and/or time were recorded on tape	<ul style="list-style-type: none"> • Displays will be recorded on tape whenever they appear in the viewfinder. Remove them from viewfinder when recording. <i>See pages 42-43.</i> • When <i>AUTO DATE</i> is selected (<i>scene select AE</i> dial in <i>AUTO</i>), display will automatically be recorded when you begin recording or change the cassette. <i>See pages 42-43.</i>
Date and/or time are incorrect	<ul style="list-style-type: none"> • Clock lithium cell battery may need replacing. <i>See page 40.</i> • Date or time may need to be set. <i>See pages 41.</i>
Error number (<i>E01, E02, etc.</i>) appears in viewfinder	<ul style="list-style-type: none"> • Try disconnecting power source. Wait ten seconds and then connect power source again. If error number does not disappear from viewfinder, consult your Authorized RCA Camcorder Servicer.
Battery runs down sooner than expected	<ul style="list-style-type: none"> • If camcorder has not been used for some time, charge the battery using the <i>REFRESH</i> feature on the adapter/charger. • Battery run times are measured when the camcorder is recording continuously. You can check your battery by first fully charging it and then aiming the camcorder at a clock and recording the picture of the clock. When the recording stops, play the last recorded section, and note the clock time. A one-hour battery should give you about 60 minutes of recording time. In practical use, you may not be able to record for the full time because the camera uses battery current when it is waiting between recordings (record-pause mode) and while you focus and zoom.

Specifications

General

Power requirement: 6VDC

Power consumption: 5.7 watts (normal)

Weight: 1.7 lbs. (770g)

Dimensions – Including Viewfinder

4-5/16"(W) x 4-1/2"(H) x 8-15/16"(D)

109 (W) x 113 (H) x 226(D) mm

Camera Section

Image Sensor: 1/4" CCD Imager

Lens: F1/1.2

14:1 (4.1-57.4 mm)

Filter Diameter: 46 mm

Tripod Mount

One 1/4" x 20 threaded hole

Viewfinder: .5" Black & White

Video Recorder Section

Format: VHS-C

Record/Playback System:

Four video record/playback heads

One flying erase head

Video Signal: EIA Standard NTSC color

AC Adapter/Charger

Power requirement: 100-240 V, 50/60 Hz.

Power consumption: 23 watts

Weight: .7 lbs. (320g)

Dimensions:

6"(W) x 1.7"(H) x 2.7"(D)

150 (W) x 42(H) x 68(D) mm

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Alterations or modifications carried out without appropriate authorization may invalidate the user's FCC right to operate the equipment.

This Class B digital apparatus meets all requirements of the Canadian Interference — Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Limited Warranty

What your warranty covers:

- Any defect in material or workmanship.

For how long after your purchase:

- Ninety days for labor charges.
- One year for parts.
The warranty period for rental units begins with the first rental.

What we will do:

- Pay any Authorized RCA Camcorder Servicenter the labor charges to repair your camcorder.
- Pay any Authorized RCA Camcorder Servicenter for the new or, at our option, refurbished replacement parts required to repair your camcorder.

How you get service:

- Check with your RCA Camcorder Dealer or call 1-800-336-1900 for the Authorized RCA Camcorder Servicenter nearest you. State that you have an RCA camcorder.

If an Authorized RCA Camcorder Servicenter is conveniently near you:

- Take your camcorder to the Authorized RCA Camcorder Servicenter of your choice.
- Show the service center representative your sales receipt or other evidence of purchase date.
- Pick up your camcorder when repairs are completed.

If an Authorized RCA Camcorder Servicenter is not located conveniently near you:

- Pack the camcorder so that it will not be damaged during shipping. (We recommend using the original carton and packing materials.) Include any cables and other accessories originally furnished with the camcorder.
- Include in the camcorder carton (1) a copy of your sales receipt or other evidence of purchase date, (2) your

name and address, and (3) a brief description of the problem.

- Ship the camcorder to an Authorized RCA Camcorder Servicenter.
- Pay any charges billed to you by the Servicenter for service not covered by the warranty.

What your warranty *does not* cover:

- Customer instruction. (Your owner's manual clearly describes how to install, adjust, and operate your camcorder. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Cleaning of video/audio heads.
- Damage from misuse or neglect.
- Battery for clock or other features.
- A camcorder that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A camcorder purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the *product registration card* packed with your camcorder. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights and you also may have other rights that vary from state to state.

If you purchased your camcorder outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

Index

16x9 Mode & Indicator33

-A-

Accessories, Included 3

Accessories, Optional52-57

Accessory, Order Form55-57

Adapter/Charger, Using4,11

AUDIO/RF DC/VIDEO OUT

Jacks10,11,15,48-50

Audio/Video Cable (Optional) 48-49,54

Auto Focus34

Auto Head Cleaner26

AUTO Mode7,29

-B-

Back-Light Mode29

BATT. RELEASE Button10,11,13

Battery, Care and Storage14

Battery, Clock3,40

Battery, Clock Display22-23

Battery Level Indicator14,22

Battery Marker Switch13

Battery Safety Precautions13

Battery, Using Rechargeable12-14

-C-

Camcorder, Cleaning58

Camcorder, Powering11-15

Camcorder, Turning On8

Camcorder, Unpacking3

CAMERA/OFF/VCR Switch &

Indicator5,8,10,11,13-14,

..18-19,26,30-36,38-40,44-45,47,49

Camera Edit Feature26

Car Cord Adapter, Optional15,52

Care and Maintenance58-59

Care and Storage of Battery14

Cassette Adapter46-47

Cassette Door4,9

Cassette, Inserting4,17

Cassettes, Inserting and Removing ..17

Cassette Warning Indicator22-23

CautionsInside Front Cover

Charging the Battery12

Checking Problems62-65

Cleaning Camcorder58

Clock Battery Indicator40

Clock Battery, Installing40

Clock Cell Compartment10,40

Contents1-2

Controls9-10

Copying Tapes48-49

COUNTER R/M Button ..10,27,49,51

-D-

Date and Time41-43

Date Displays22

DATE/TIME/CHAR + and -

Buttons10,39,40

DATE/TIME/CHAR SET

Button10,39,40

Design Specifications64

Dew Warning24,63

Displays, Viewfinder22-24

-E-

EDIT SEARCH + and –
 Buttons10,18-19,26
 Edit Search Feature18-19,26
EJECT Button4,9,17,18,44
 Electronic Indexing25
 Erase Protection16
 Exposure Control36
 Exposure Level Indicator22,36
 Eyepiece Focus Control7,9,18,21

-F-

F1 and *F2*
 Buttons9,18-19,31-36,38-39,42-43
FADE Indicators24,32
 Fading32
FF (Fast Forward) Button10,26,44-45
 First-Time Operation3-10
 Flying Erase Head25
 Focus Displays22-23
 Focus Lock Feature34
 Focusing34-35
 Front-Light Mode29

-H-

Hand Strap5,10
 High-Speed Shutter Mode29

-I-

Included Accessories3
INDEX Display24-25
 Indexing, Electronic24
 Information to User64

-L-

Lens9,58
 Lens, Cleaning58
LENS COVER Control5,9,18,22-23
 Limited Warranty65

-M-

Maintenance and Care58-59
MAN (Manual) Mode29
MAN.W.BAL (Manual White Balance)
 Button10,30
 Manual Focus35
 Memory Stop Feature27
 Microphone9,25
MODE
 Button9,18-19,31-36,38-39,42-43
 Mode Displays24
MWB Indicator30

-O-

Operation, First-Time3-10
 Optional Accessories52-57
 Order Form, Accessory55-57

-P-

- ≡ PAUSE ≡ Indicator5,8,19,24
- Pause, Stop-Action45
- PLAY/PAUSE Button .8,10,44-45,47,49
- Playback44-51
- Playback Features45
- Playback, First8
- Playback on a TV With
 - AUDIO/VIDEO IN Jacks48-49
- Playback on a TV Without
 - Audio/Video Inputs50-51
- Playback Speeds16,28
- Playback, Viewfinder44
- Plug Adapter11
- Portrait Mode29
- POWER CAMERA/OFF/VCR Switch &
 - Indicator5,8,10,11,13-14,
 - .18-19,26,30-36,38-40,44-45,47,49
- Power Connector11
- Powering the Camcorder11-15
- Problem Solving60-63
- Product Registration
 -Inside Front Cover
- Proper Care and Storage59

-Q-

- Quick Review26

-R-

- REC ►►► Indicator8,19,24
- Recording and Traveling Tips20
- Recording, First3-10
- Recording, Making a18-19
- Recording Speeds6,16,28
- Refreshing the Battery12
- Registration CardInside Front Cover
- REW (Rewind) Button8,10,26,44-45
- RF Output Adapter
 - (Optional)48-49,54

-S-

- Safety Tab16
- Scene Select AE
 - Dial . . .7,9,18-19,22-23,29-36,38-39
- Searching, Visual45
- Sepia Mode29
- Shoulder Strap3,37
- Shoulder Strap Attachment Rings 10,37
- Solving Problems60-63
- Specifications64
- Speeds, Recording and
 - Playback6,16,28
- Sports Mode29
- SP•SLP/T20•30•40
 - Switch6,10,16,18-19,22-23,28
- Status Displays24
- STOP Button8,10,25,44-45
- Stop-Action Pause45

-T-

Table of Contents	1-2
Tally Light	9,18,25
Tape Copying	48-49
<i>TAPE END</i> Display	24
Tape Length Display	22-23,28
Tape Positioning	26
Tape Time Remaining	28
Things to Avoid	59
Thumb Trigger	8,10,18-19
Tilt, Viewfinder	21
Time Counter	22-23,27
Time Counter Display	22-23
Time Remaining Display	22-23,28
Title Displays	22,38-39,42-43
Title, Creating New	39
Titler	38-39
Titles, Preset	38
Titles, Recording	42-43
<i>TRACKING</i> Buttons	10,45,49,51
Tracking Feature	45
Traveling and Recording Tips	20
Tripod, Using	53
Trouble Checks	60-63
Turning On the Camcorder	8

-U-

Unpacking the Camcorder	3
User Information	64
Using Cassette Adapter	46-47

-V-

<i>VCR/OFF/CAMERA</i> Switch & Indicator	5,8,10,11,13-14, 18-19,26,30-36,38-40,44-45,47,49
Video Cassettes	16-17
<i>VIDEO/RF DC/AUDIO OUT</i> Jacks	10,11,15,48,50
Viewfinder	7,9,21
Viewfinder, Cleaning	58
Viewfinder Displays	22-24
Viewfinder Playback	44
Visual Searching	45

-W-

Warranty, Limited	67
White Balance	24,30
White Balance Display	24,30

-Z-

Zoom Lever	9,18-19,36
Zoom Level Indicator	22,36

Need Assistance? We want to help!


U.S. Consumers:

Customer Service800-336-1900
Accessories800-338-0376

Canadian Consumers:

English800-522-0338
French800-522-0445

If your camcorder needs service, please contact your dealer or the nearest Servicenter from the yellow pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**
10330 N Meridian Street
Indianapolis, IN 46290

©1996 Thomson Consumer Electronics, Inc.
Trademark(s)[®] Registered
Marca(s) Registrada(s)
Printed in Japan
Part Number 96-CC631-1