


# ***Color Rear Video Projector***



---

Operating Instructions

*KP-46S55  
KP-53S55*

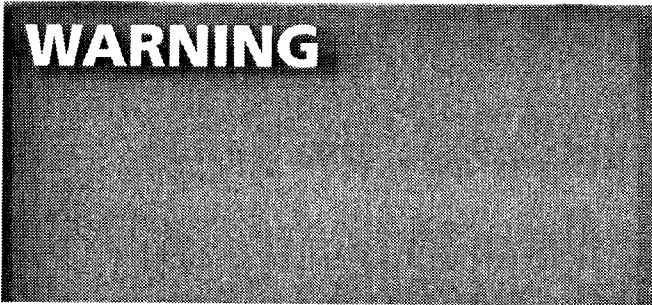

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**

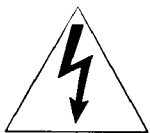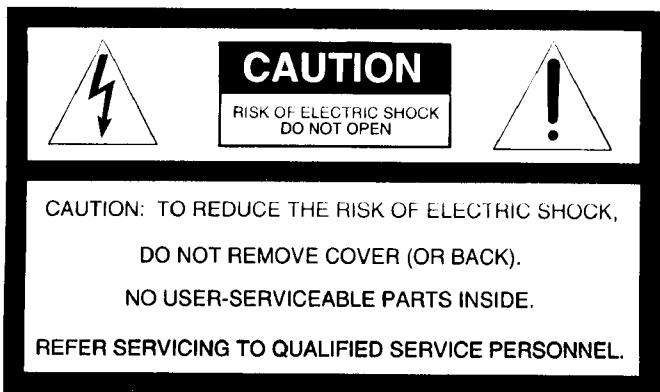

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### **CAUTION**

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### **CAUTION**

When using TV games, computers, and similar products with your projection TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. These types of imprints are not covered by your warranty because they are the result of misuse.

### **Note on Closed Caption**

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

### **Note on CATV system installer**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

### **Note on convergence adjustment**

Before you use your projection TV, make sure to adjust convergence. For the procedure, see page 10.

### **Note on cleaning**

Clean the cabinet of the projection TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth using vertical strokes only. Stubborn stains may be removed with a cloth slightly dampened with a mild detergent solution. Never use strong solvents such as thinner or benzene for cleaning. If the picture becomes dark after using the projection TV for a long period of time, it may be necessary to clean the inside of the projection TV. Consult qualified service personnel.

---

### **Owner's Record**

The model and serial numbers are located at the rear of the projection TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# Table of contents

- 4 Welcome!
- 4 Precautions

---

## **Getting Started**

- 5 Step 1: Installing the projection TV
- 6 Step 2: Connections
- 10 Step 3: Setting up the remote commander
- 10 Step 4: Adjusting convergence (CONVERGENCE)
- 11 Step 5: Setting cable TV on or off
- 12 Step 6: Presetting channels
- 14 Changing the menu language

---

## **Operations**

- 15 Watching TV programs
- 16 Watching two programs at one time –PIP
- 18 Selecting picture and sound effects (PROGRAM PALETTE)
- 19 Adjusting the picture (VIDEO)
- 20 Adjusting the color temperature (TRINITONE)
- 20 Reducing picture noise (NR)
- 21 Adjusting sound (AUDIO)
- 22 Listening to surround sound (SURROUND)
- 22 Selecting stereo or bilingual programs (MTS)
- 23 Setting the speaker switch (SPEAKER)
- 23 Displaying closed caption
- 24 Setting daylight saving time (DAYLIGHT SAVING)
- 25 Setting the clock (CURRENT TIME SET)
- 26 Turning the projection TV on and off automatically (ON/OFF TIMER)
- 27 Blocking a TV program from appearing on the screen (CHANNEL BLOCK)
- 28 Customizing channel names (CH CAPTION)
- 29 Setting video labels (VIDEO LABEL)
- 30 Selecting your favorite channels (FAVORITE CHANNEL)
- 31 Operating video equipment
- 33 Operating a cable box

---

## **Additional Information**

- 34 Troubleshooting
- 35 Specifications

### **Back cover Index**

The captions in parentheses indicate menu names.

## Welcome!

Thank you for purchasing the Sony Color Rear Video Projection TV. Here are some of the features you will enjoy with your projection TV:

- On Screen menus that let you set the picture quality, sound, and other settings
- Picture-in-Picture that allows you to watch another TV channel, video or cable image as a window picture
- On/off timer that allows you to make the TV program of your choice be displayed on the screen for a specified duration
- Dynamic Focus circuitry that automatically focuses the scanning electron beam for enhanced sharpness, especially at the corners
- Universal remote commander supplied that allows you to operate Sony and other manufacturers' video equipment

### About this manual

The instructions in this manual are for two models. There are no differences between these models in operation. The differences in specifications are indicated in the text.

Instructions in this manual are based on use of the remote commander. You can also use the controls on the projection TV if they have the same name as those on the remote commander.

## Precautions

This projection TV operates on extremely high voltage. To prevent fire or electric shock, please follow the precautions below.

### Safety

- Operate the projection TV only on 120 V AC.
- One blade of the plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- Should any liquid or solid object fall into the cabinet, unplug the projection TV and have it checked by qualified personnel before operating it further.
- Unplug the projection TV from the wall outlet if you are not going to use it for several days or more. To disconnect the cord, pull it out by the plug. Never pull the cord itself.

For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS."


### Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the projection TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- Avoid operating the projection TV at temperatures below 5°C (41°F).
- If the projection TV is transported directly from a cold to a warm location, or if the room temperature has changed suddenly, the picture may be blurred or show poor color. This is because moisture has condensed on the mirror or lenses inside. If this happens, let the moisture evaporate before using the projection TV.
- To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the projection TV in a room where the floor and walls are not of reflecting material. If necessary, cover them with dark carpeting or wall paper.


# Step 1: Installing the projection TV

For the best picture quality, install the projection TV within the areas shown below.

## Optimum viewing area (Horizontal)

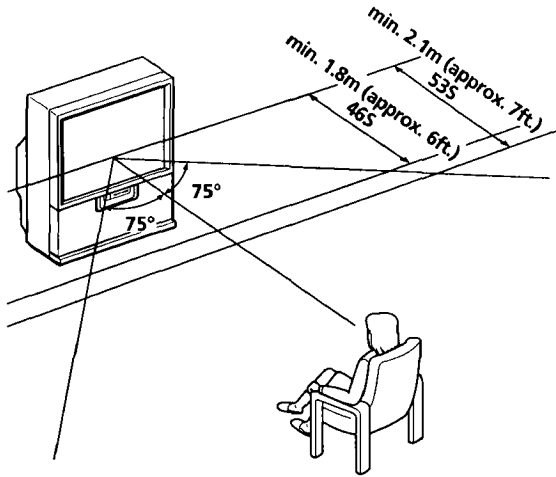

## Optimum viewing area (Vertical )

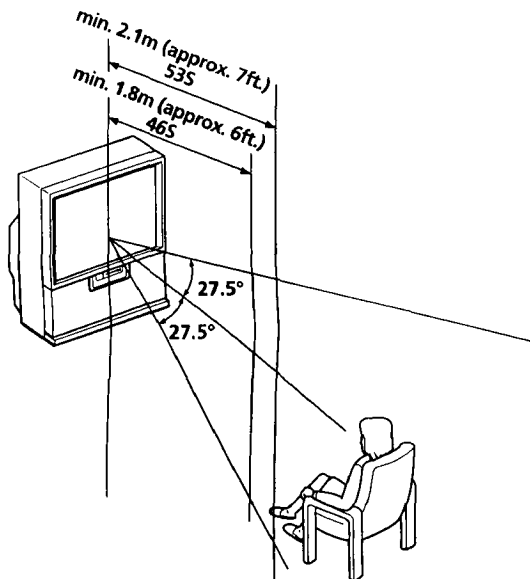

## Preparing for your projection TV




Before you use your projection TV, adjust convergence. For the procedure, see "Step 4: Adjusting convergence (CONVERGENCE)" on page 10.

# Step 2: Connections

Although you can use either an indoor antenna or outdoor antenna with your projection TV, we recommend connecting to an outdoor antenna or a cable TV system for improved picture quality.

## To an antenna

Connect your antenna cable to the VHF/UHF antenna terminal. If you cannot connect your antenna cable directly to the terminal, follow one of the instructions below depending on your cable type.

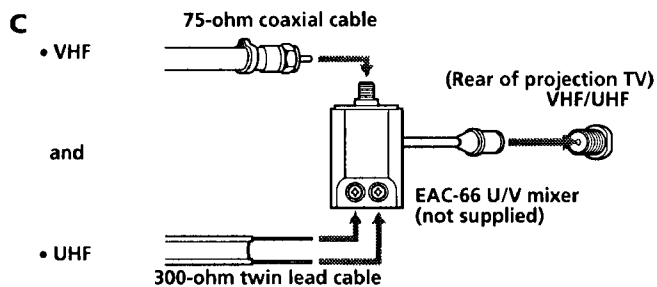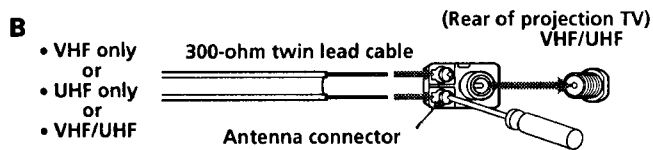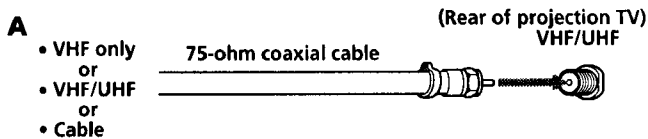


### Notes

- Most VHF/UHF combination antennas have a signal splitter. Remove the splitter before attaching the appropriate connector.
- If you use the U/V mixer, snow and noise may appear in the picture when viewing cable TV channels over 37(W+1).


## Connecting an antenna/cable TV system without a VCR
 
### To cable or antenna



### To cable box

If your cable company requires you to connect a cable box, make the connection as follows:

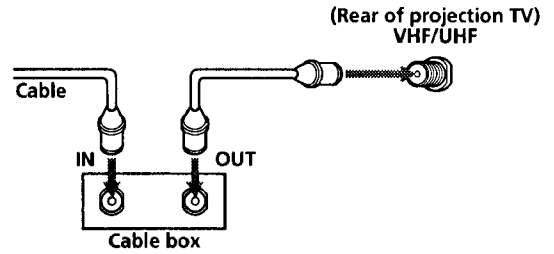

## Connecting an antenna/cable TV system with a VCR


For details on connection, see the instruction manual of your VCR. Before connecting, disconnect the AC power cords of the equipment to be connected.

After making these connections, you will be able to do the following:

- View the playback of video tapes
- Record one TV program while viewing another program
- Watch two TV programs at one time using a window picture (Picture-in-Picture)

### To a conventional VCR


#### Without a cable box

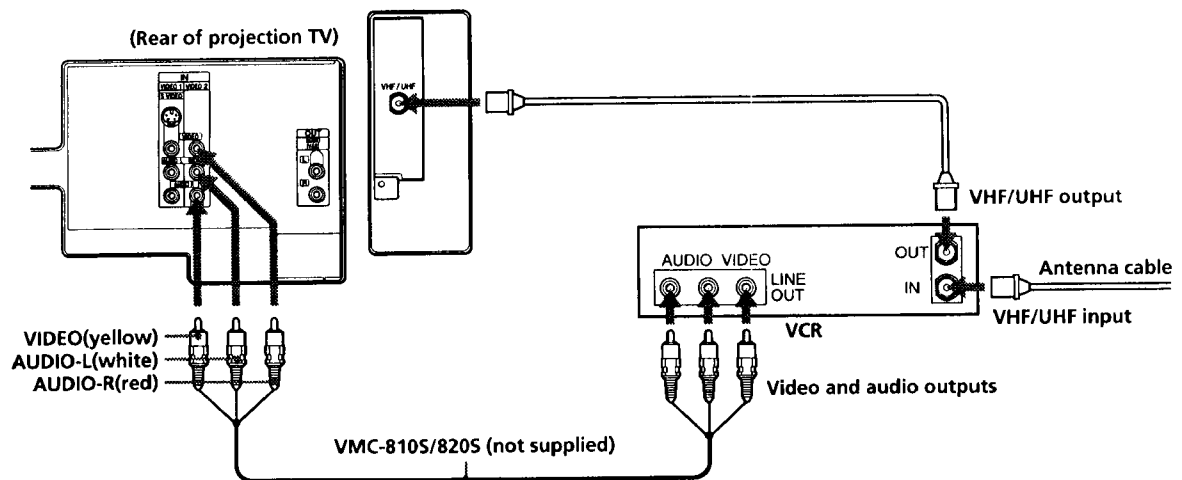

#### Note

- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (mono) of VIDEO 1/2 IN on the projection TV.


#### With a cable box

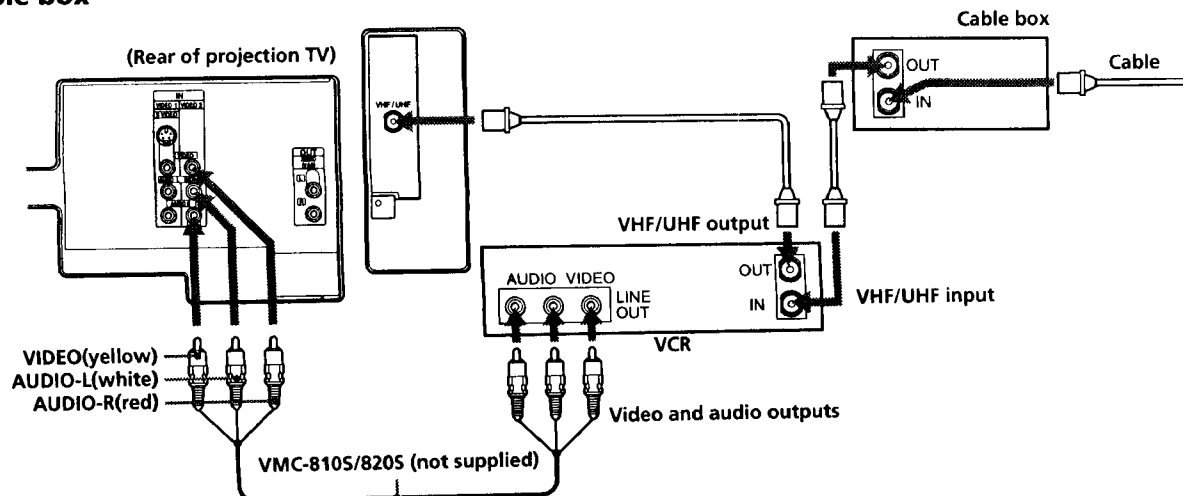

## To an S video equipped VCR

If your VCR has an S video output jack, make the connection as follows and then set S-VIDEO to ON on your projection TV. It is set to ON at the factory.


### Without a cable box

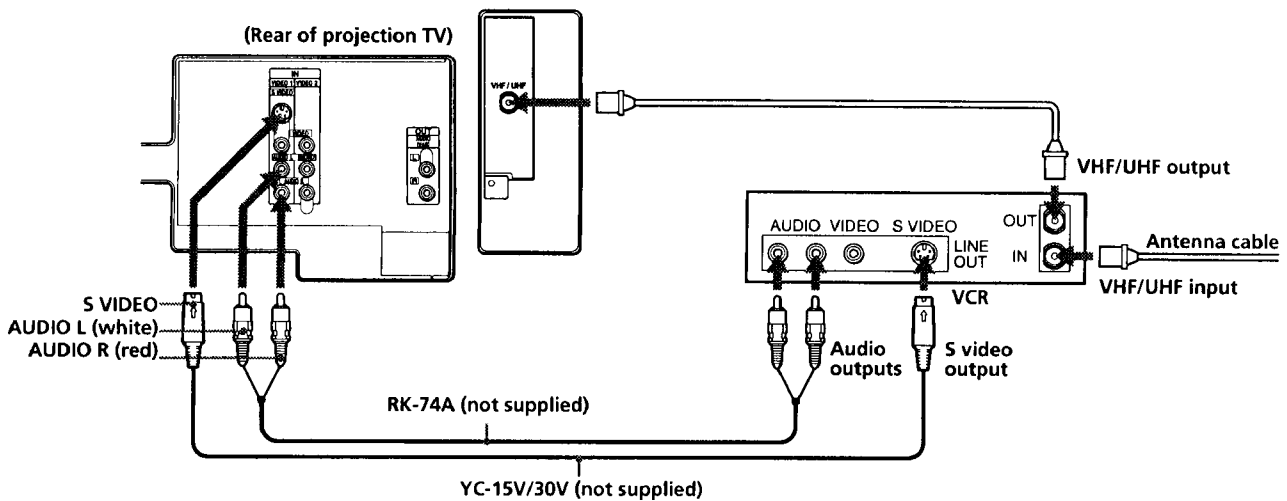

#### Note

- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connection.

### With a cable box

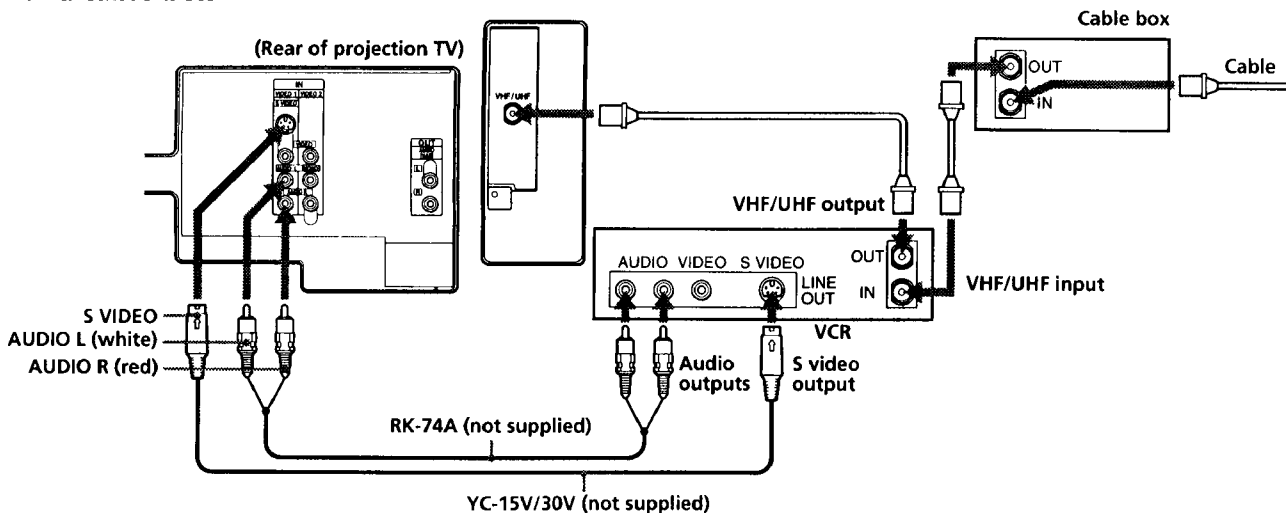

## Setting S video on or off

**1** Press **MENU**.

**2** Press **+ Δ** or **- ▽** to select **MODE SET** and press **RETURN**.

**3** Make sure the cursor (**▶**) is beside **S-VIDEO** and press **RETURN**.

If the cursor is not beside S-VIDEO, press **+ Δ** or **- ▽** to move the cursor and press **RETURN**.

#### Notes


- If S VIDEO appears in black, set a video input to VIDEO 1.
- If you set S VIDEO to ON, the TV automatically receive S video signals whenever a VCR with S video is connected.

**4** Press **+ Δ** or **- ▽** to select **ON** or **OFF** and press **RETURN**.



## Connecting a camcorder

This connection is convenient for watching the picture from a camcorder.

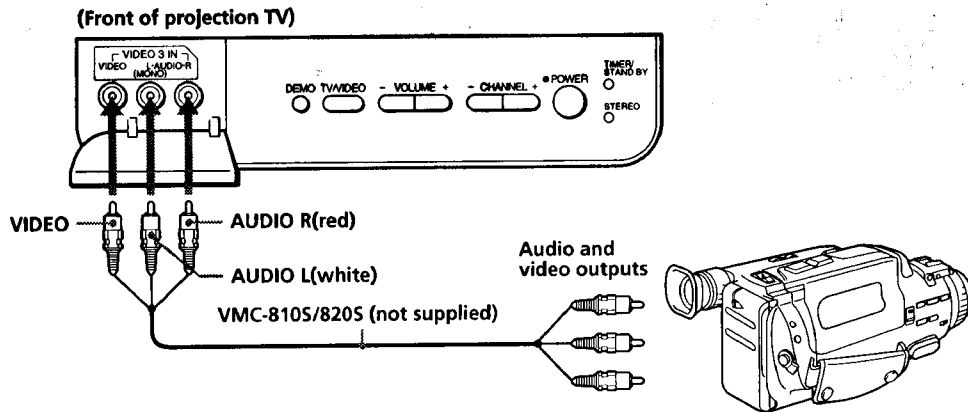


### Note

- To connect a monaural camcorder, connect the audio output of the camcorder to AUDIO-L (mono) of VIDEO 3 IN on the projection TV.

## Connecting an audio system

When connecting audio equipment, see page 23 for more information.

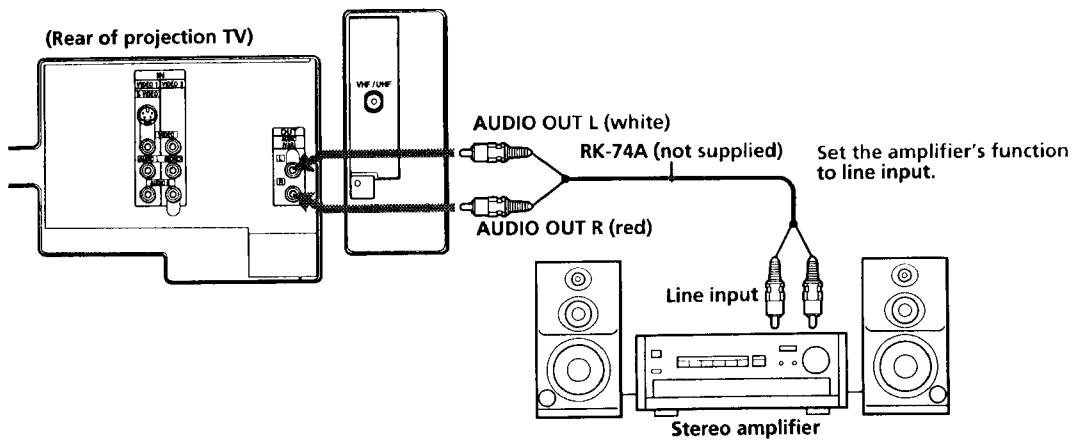


### Note

- You can adjust the bass, treble and balance, or select surround or an MTS (Multichannel TV Sound) mode with the supplied remote commander.

## Step 3: Setting up the remote commander

Insert one size AA (R6) battery (supplied) by matching the + and - on the battery to the diagram inside the battery compartment.

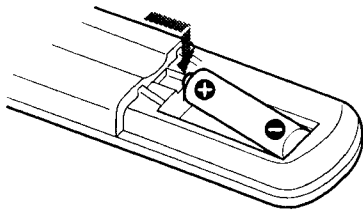


### Notes

- With normal use, the battery should last for approximately six months.
- If you do not use the remote commander for an extended period of time, remove the battery to avoid possible damage from battery leakage.
- Do not handle the remote commander roughly. Do not drop it, step on it or let it get wet.
- Do not place the remote commander in direct sunlight, near a heater, or where the humidity is high.

## Step 4: Adjusting convergence (CONVERGENCE)


The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs. To correct this, adjust convergence.

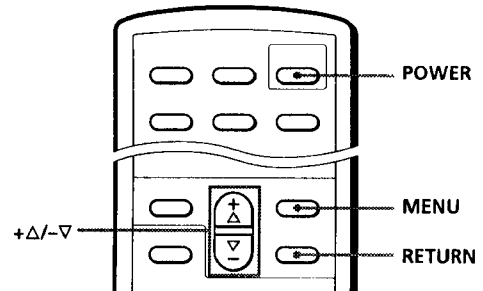


- 1 Press POWER to turn on the projection TV.**  
The TIMER/STAND BY indicator flashes until the picture appears.



- 2 Press MENU.**  
The main menu appears.

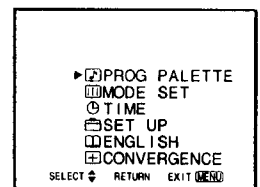


- 3 Press + Δ or - ∇ to move the cursor (▶) to CONVERGENCE and press RETURN.**  
The CONVERGENCE adjustment screen appears.

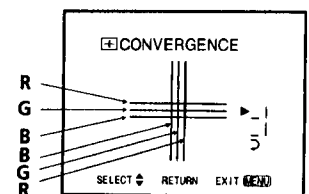


R=Red  
G=Green  
B=Blue

- 4** Press + Δ or - ▽ to move the cursor (▶) to the symbol showing the line you want to adjust, and press RETURN.

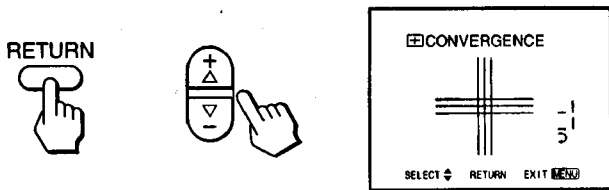


- ⊕: Red vertical line (left/right adjustment)
- ⊖: Red horizontal line (up/down adjustment)
- ⊕: Blue vertical line (left/right adjustment)
- ⊖: Blue horizontal line (up/down adjustment)

- 5** Press + Δ or - ▽ to move the line until it converges with the center green line, and press RETURN.

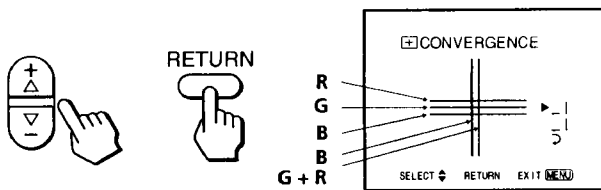

To move up/right, press + Δ.  
To move down/left, press - ▽.

- 6** Repeat steps 4 and 5 to adjust the other lines until all three lines converge and are seen as a white cross.

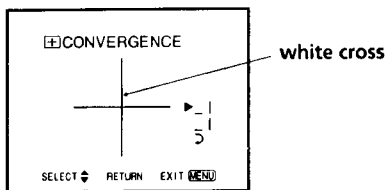

- 7** Press MENU to return to the original screen.




**Note**

- If more than 90 seconds elapse after you press a button, the menu disappears automatically.


## Step 5: Setting cable TV on or off

If you have connected the projection TV to a cable TV system, you should set the cable connection on or off. Set CABLE to ON, the factory setting, to preset or watch cable TV channels. Set to OFF to preset or watch VHF/UHF channels.

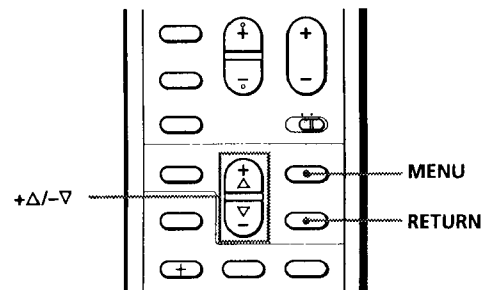



- 1** Press MENU.

The main menu appears.

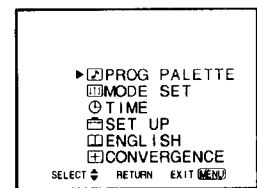

- 2** Press + Δ or - ▽ to move the cursor (▶) to SET UP and press RETURN.

 
The SET UP menu appears.

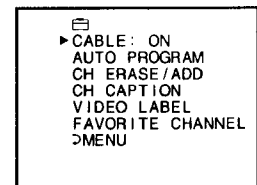


### 3 Set CABLE to ON or OFF:

(1) Make sure the cursor (▶) is beside CABLE and press RETURN.


If the cursor is not beside CABLE, press + Δ or - ▽ to move the cursor and press RETURN.

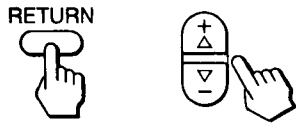

 (2) Press + Δ or - ▽ to select ON or OFF.



(3) Press RETURN.

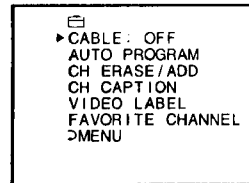

### 4 Press MENU to return to the original screen.




#### Note

- If CABLE appears in black, the projection TV is set to a video input and you cannot select CABLE. Press TV on the remote commander so that a channel number appears.

## Step 6: Presetting channels

You can preset TV channels easily: first store all the receivable VHF, UHF or cable TV channels automatically following the procedure below, then erase unnecessary channels or add the channels you want.

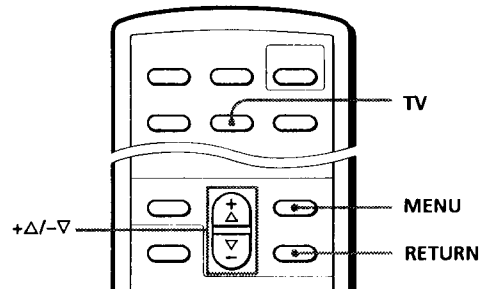


### Presetting all the receivable channels



Before you begin, set the cable TV on or off according to the channels you want to preset. (page 11)

#### 1 Press MENU.

The main menu appears.

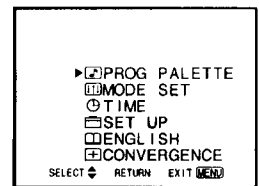

#### 2 Press + Δ or - ▽ to move the cursor (▶) to SET UP and press RETURN.

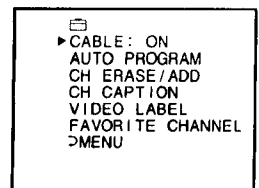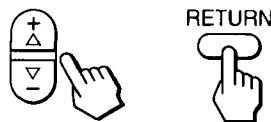

**3 Press + Δ or - ∇ to move the cursor (▶) to AUTO PROGRAM and press RETURN.**



“AUTO PROGRAM” appears on the screen and the projection TV starts scanning and presetting channels automatically. When all the receivable channels are stored, “AUTO PROGRAM” disappears and the lowest numbered channel is displayed.

**Notes**

- If AUTO PROGRAM appears in black in the SET UP menu, the projection TV is set to a video input and you cannot select AUTO PROGRAM. Press TV on the remote commander so that a channel number appears.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

**Erasing or adding channels**

**1 Press MENU.**


**2 Press + Δ or - ∇ to select SET UP and press RETURN.**

**3 Press + Δ or - ∇ to select CH ERASE/ADD and press RETURN.**

**4 Erase and/or add the channel you want:**

**To erase an unwanted channel**


- (1) Make sure the cursor (▶) is beside ERASE.
- (2) Press CH + or - to select the channel you want to erase.

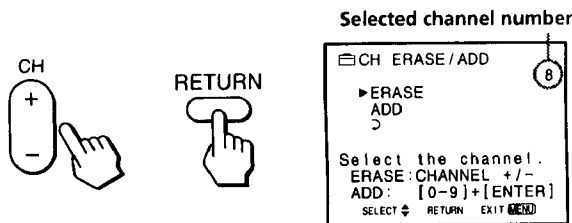

- (3) Press RETURN.  
The indication “-” appears beside the channel number, showing that the channel is erased from the preset memory.

**To add a channel that you want**

- (1) Press + Δ or - ∇ to select ADD.
- (2) Press 0 – 9 button to select the channel you want to add and press ENTER.

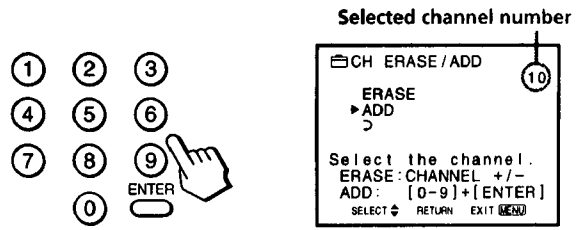

- (3) Press RETURN.  
The indication “+” appears beside the channel number, showing that the channel is added to the preset memory.

**5 To erase and/or add other channels, repeat step 4.**

**6 When you finish, press MENU.**

**Note**

- If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.

# Changing the menu language


**4** Press MENU to return to the original screen.



**Note**


- Even when you select Spanish or French language, certain parts of the menus remain in English.

If you prefer Spanish or French to English, you can change the menu language.


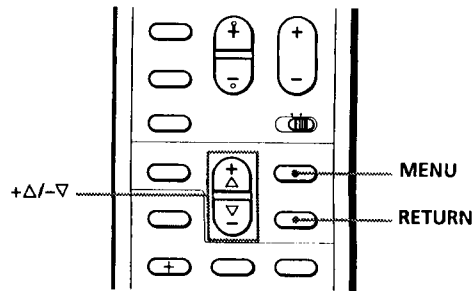


**1** Press MENU.

The main menu appears.

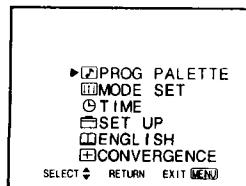


 **2** Press + Δ or - ∇ to move the cursor (▶) to ENGLISH and press RETURN.

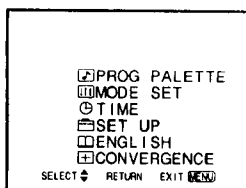


**3** Press + Δ or - ∇ to select the language and press RETURN.

The menu in selected language appears.

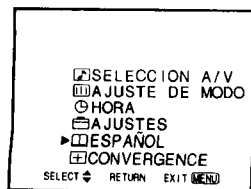

# Watching TV programs

Check that the CABLE BOX/TV selector is set to TV.

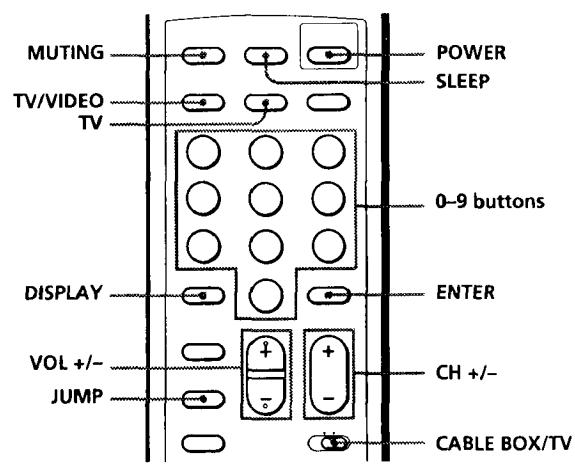

**1 Press POWER to turn on the projection TV.**  
 The TIMER/STAND BY indicator flashes until the picture appears.




If "VIDEO" appears on the screen, press TV so that a channel number appears.

**2 Select the channel you want to watch:**


**To select a channel directly**

Press the 0 - 9 buttons and then press ENTER. For example, to select channel 10, press 1, 0 and ENTER.


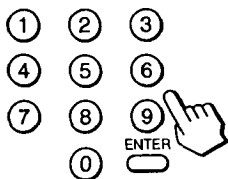


**To scan through channels**

Press CH +/- until the channel you want to watch appears.

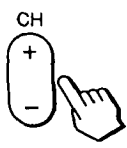

**3 Press VOL +/- to adjust the volume.**

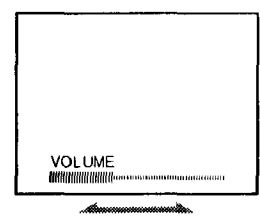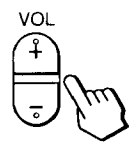

## Switching quickly between two channels

**Press JUMP.**  
 The channel you watched previously appears.



Pressing JUMP again switches back the channel.

## Muting the sound

**Press MUTING.**  
 "MUTING" appears on the screen.

 


To restore the sound, press MUTING again, or press VOL +.

## Displaying on-screen information

Use this feature to check the channel number, current time, channel caption (if set), and MTS mode (if SAP is selected).

**Press DISPLAY.**



To cancel the display, press DISPLAY again.

## Setting the Sleep Timer

The projection TV stays on for the length of time you specify and then shuts off automatically.

**Press SLEEP repeatedly until the time (in minutes) you want appears.**

Each time you press SLEEP, the time changes as follows: 30 → 60 → 90 → OFF.



“SLEEP” appears about one minute before the projection TV shuts off.

To cancel the Sleep Timer, press SLEEP repeatedly until “SLEEP OFF” appears, or turn off the projection TV.

## Watching a video input picture

**Press TV/VIDEO repeatedly until the desired video input appears.**

Each time you press TV/VIDEO, the display changes as follows: TV → VIDEO 1 → VIDEO 2 → VIDEO 3.



To return to TV picture, press TV.

## Previewing the menu displays

**Press DEMO on the front of the projection TV.**

Menus are displayed one by one.




To cancel Demo function, press any button.

## Watching two programs at one time — PIP



The Picture-in-Picture (PIP) feature allows you to watch both the main picture and a window picture simultaneously.

You can watch two TV channels at one time by connecting a VCR. See “Connecting an antenna/cable TV system with a VCR” (page 7) for connections.

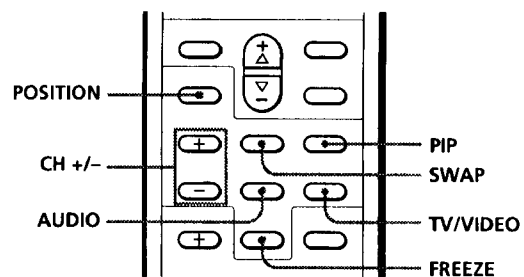


## Displaying a window picture

 **Press PIP.**

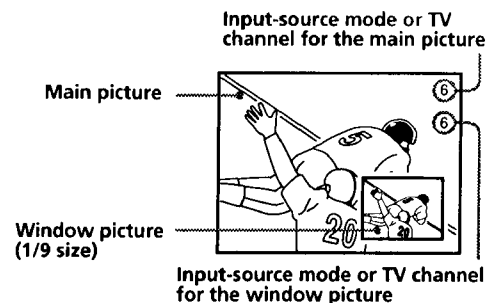

**Press PIP again to display a smaller window picture.**

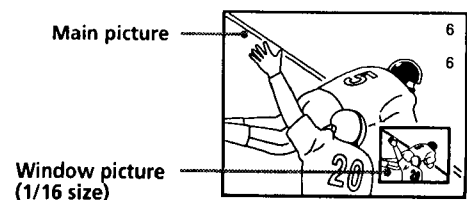

Each time you press PIP, the size of the window picture changes as follows: 1/9 size → 1/16 size → OFF.

To remove the window picture, press PIP repeatedly until the window picture disappears.




**Notes**

- If the main picture is not receiving an image, the window picture may be in black and white.
- The window picture sound is also output from the AUDIO OUT jacks when you listen to it.


**Changing the window picture input mode**

Press TV/VIDEO in the PIP control area of the remote commander to select the input mode. Each time you press TV/VIDEO, "TV," "VIDEO 1," "VIDEO 2" and "VIDEO 3" appear in sequence.

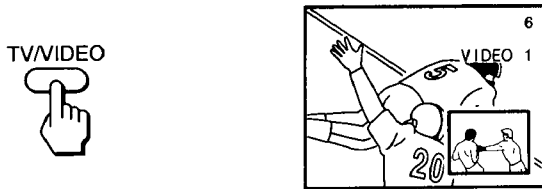


**Changing TV channels in the window picture**

Press CH +/- in the PIP control area.

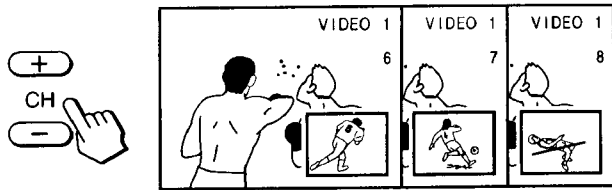

**Listening to the sound of the window picture**

Press AUDIO. "♪" appears for a few seconds, indicating that the window picture sound is being received.

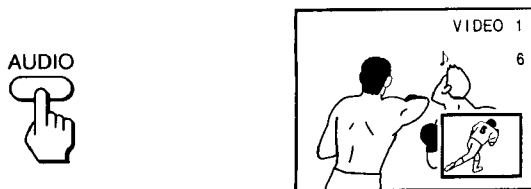


To restore the main picture sound, press AUDIO again.

**Changing the position of the window picture**

Press POSITION.


Each time you press POSITION, the window picture will move as illustrated.

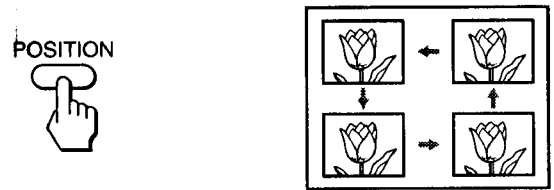

**Freezing the window picture**

This feature is useful when you want to write down a recipe from a cooking program, a displayed address or a phone number and so on.

Press FREEZE.

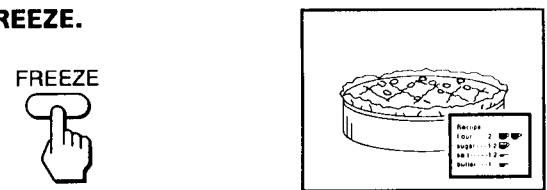


To restore the normal screen, press FREEZE again.

**Swapping the main and window pictures**


Press SWAP.

Each time you press SWAP, the images and sound from the main and window pictures switch places with another.

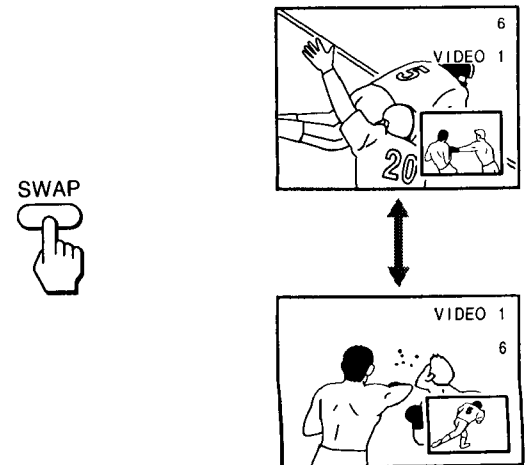

# Selecting picture and sound effects (PROGRAM PALETTE)

You can select one of four settings for picture and sound effects that best suits the program.

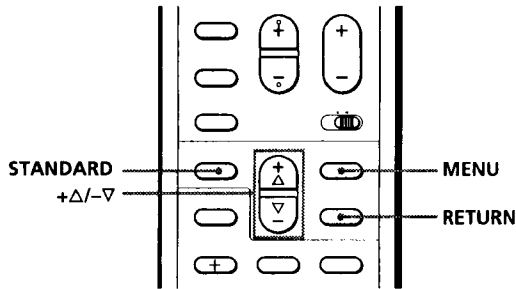

## Effect of four items

Item	Picture effect	Sound effect
STANDARD	Standard (factory preset levels)	Standard (factory preset levels)
MOVIE	Finely detailed picture	Theatrical audio effect
SPORTS	Vivid, bright picture	Sound with a sports stadium effect
NEWS	Reduced noise in picture	Clear voice reproduction

## Selecting STANDARD with a button on the remote commander


Press STANDARD.



**1 Press MENU.**


**2 Make sure the cursor (▶) is beside PROG PALETTE and press RETURN.**

If the cursor is not beside PROG PALETTE, press + Δ or - ∇ to move the cursor and press RETURN.

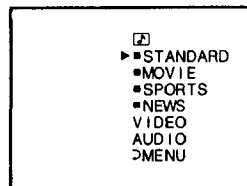

**3 Select the item you want. For example:**

(1) To select MOVIE, press + Δ or - ∇ to move the cursor to MOVIE.

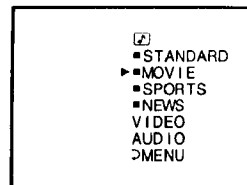


(2) Press RETURN.





For details on each item, see "Effect of four items" in the right column.

# Adjusting the picture (VIDEO)


When watching TV programs, you can adjust the quality of the picture to suit your taste. You can adjust the picture of video input(s) as well, and these settings are stored separately from those for the broadcast signal.

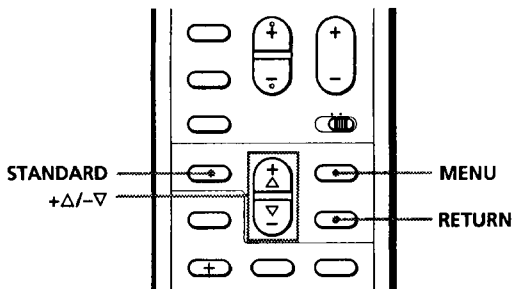


- 1 Press MENU.**
- 2 Make sure the cursor (▶) is beside PROG PALETTE and press RETURN.**
- 3 Press + Δ or - ∇ to move the cursor to VIDEO and press RETURN.**  
The VIDEO adjustment menu appears.

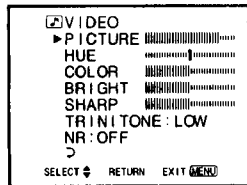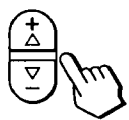


- 4 Select the item you want to adjust.**  
**For example:**  
(1) To adjust brightness, press + Δ or - ∇ to select BRIGHT.

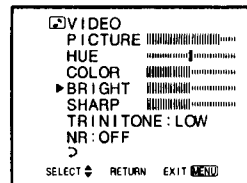


(2) Press RETURN.

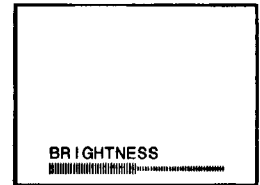

 - 5 Adjust the selected item:**  
(1) Press + Δ or - ∇ to adjust the item.



- (2) Press RETURN.  
The new setting appears in the VIDEO menu.

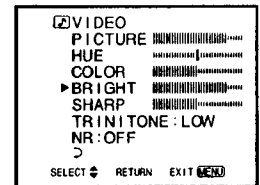

For details on each item, see "Description of adjustable items" below.

## 6 To adjust other items, repeat steps 4 and 5.

### Description of adjustable items


Item	Press + Δ to	Press - ∇ to
PICTURE	Increase picture contrast for vivid color	Decrease picture contrast for soft color
HUE	Make overall picture greenish	Make overall picture purplish
COLOR	Increase color intensity	Decrease color intensity
BRIGHT	Brighten the picture	Darken the picture
SHARP	Sharpen the picture	Soften the picture

### To restore the factory settings


Press STANDARD on the remote commander. You can also do this by selecting STANDARD in the PROG PALETTE menu.

# Adjusting the color temperature (TRINITONE)


The TRINITONE feature controls the color temperature, permitting white balance preference adjustment without affecting skin tones.

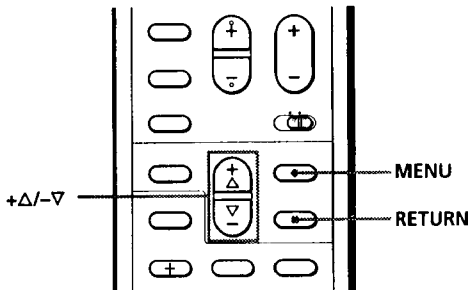

- 1** Press MENU.
- 2** Make sure the cursor (▶) is beside PROG PALETTE, and press RETURN.
- 3** Press + Δ or - ∇ to select VIDEO and press RETURN.
- 4** Press + Δ or - ∇ to select TRINITONE and press RETURN.

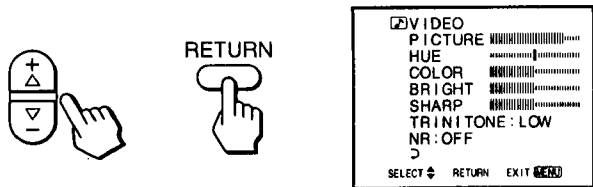


- 5** Press + Δ or - ∇ to select LOW or HIGH and press RETURN.

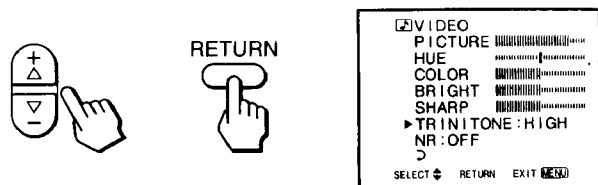


Choose	To
LOW	Make the white color reddish.
HIGH	Make the white color bluish.

# Reducing picture noise (NR)


You can reduce picture noise when NR is set to ON.

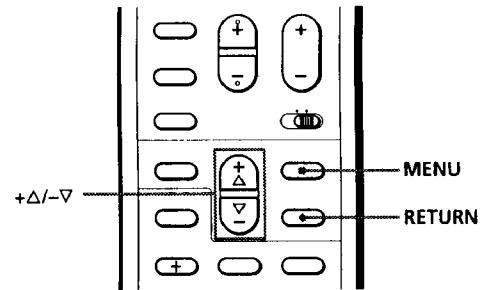

- 1** Press MENU.
- 2** Make sure the cursor (▶) is beside PROG PALETTE, and press RETURN.
- 3** Press + Δ or - ∇ to select VIDEO and press RETURN.
- 4** Press + Δ or - ∇ to select NR and press RETURN.

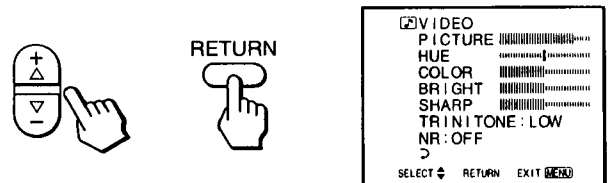


- 5** Press + Δ or - ∇ to select ON and press RETURN.

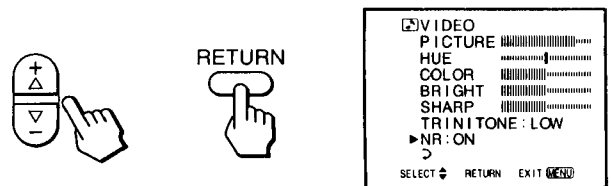


# Adjusting sound

## (AUDIO)


You can adjust the quality of the TV sound to suit your taste. You can adjust the sound of video input(s) as well, and these settings are stored separately from those for the broadcast signal.

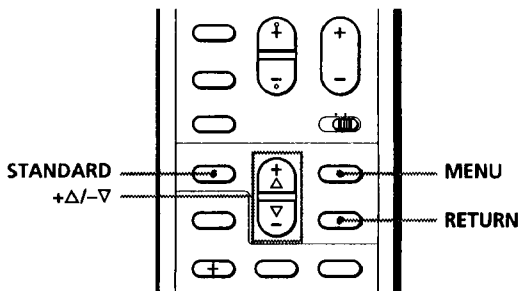


- 1 Press MENU.**
- 2 Make sure the cursor (▶) is beside PROG PALETTE, and press RETURN.**
- 3 Press + Δ or - ∇ to select AUDIO and press RETURN.**

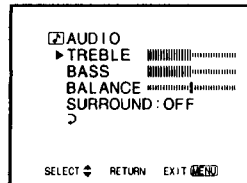

- 4 Select the item you want to adjust.**  
**For example:**  
 (1) To adjust bass, press + Δ or - ∇ to select BASS.


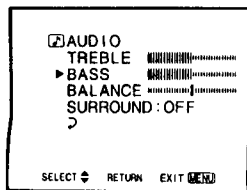


- (2) Press RETURN.

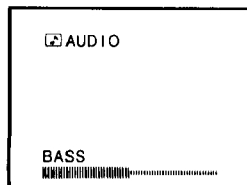


### 5 Adjust the selected item:

 - (1) Press + Δ or - ∇ to adjust the item.

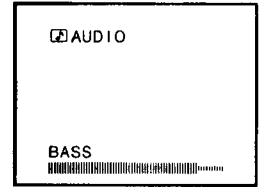

- (2) Press RETURN.

The new setting appears in the AUDIO menu.

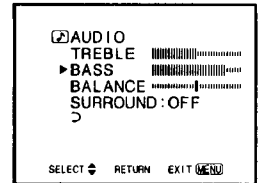

For details on each item, see "Description of adjustable items" below.

### 6 To adjust other items, repeat steps 4 and 5 above.

#### Description of adjustable items


Item	Press + Δ to	Press - ∇ to
TREBLE	Increase the treble response	Decrease the treble response
BASS	Increase the bass response	Decrease the bass response
BALANCE	Emphasize the right speaker's volume	Emphasize the left speaker's volume

#### To restore the factory settings


Press STANDARD on the remote commander. You can also do this by selecting STANDARD in the PROG PALETTE menu.

# Listening to surround sound (SURROUND)


The SURROUND feature simulates sound reproduction with the atmosphere of a movie theater or a concert hall. Surround sound is only effective for stereo programs.

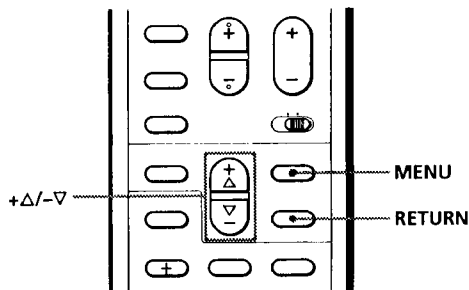

- 1 Press MENU.
- 2 Make sure the cursor (▶) is beside PROG PALETTE, and press RETURN.
- 3 Press + Δ or - ∇ to select AUDIO and press RETURN.
- 4 Press + Δ or - ∇ to select SURROUND and press RETURN.

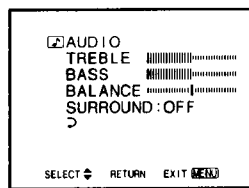


- 5 Press + Δ or - ∇ to select ON and press RETURN.


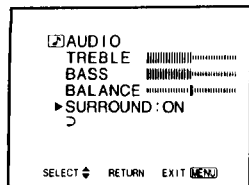


# Selecting stereo or bilingual programs (MTS)



The Multichannel TV Sound (MTS) feature gives you the choice to enjoy stereo sound or Second Audio Programs (SAP) when available. The initial setting is stereo sound (MAIN).

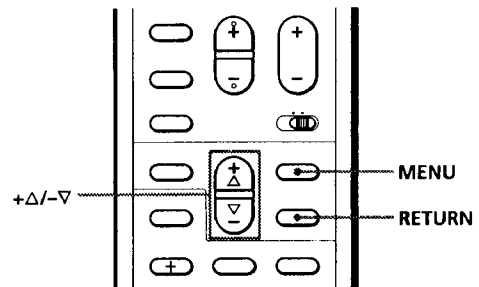

 - 1 Press MENU.
- 2 Press + Δ or - ∇ to select MODE SET and press RETURN.
- 3 Press + Δ or - ∇ to select MTS and press RETURN.

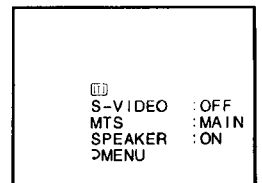

 - 4 Press + Δ or - ∇ to select MAIN, SAP or MONO and press RETURN.

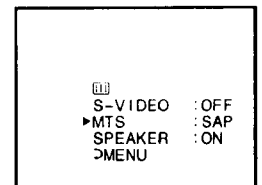


Choose	To
MAIN	Listen to stereo sound. The STEREO indicator on the projection TV lights up while a stereo broadcast is received.
SAP	Listen to bilingual programs. The sound of non-SAP programs will be muted when SAP is selected.
MONO	Reduce noise during stereo broadcasts.

### Note


- Stereo and SAP sounds are subject to program sources.

# Setting the speaker switch (SPEAKER)


You may switch off the projection TV speakers when, for example, you want to listen to the sound through a stereo system.

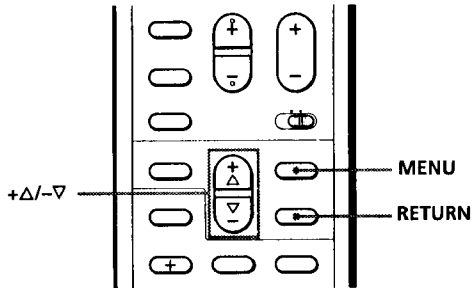

- 1 Press MENU.**
- 2 Press + Δ or - ∇ to select MODE SET and press RETURN.**
- 3 Press + Δ or - ∇ to select SPEAKER and press RETURN.**

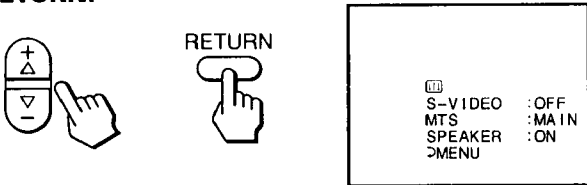


- 4 Press + Δ or - ∇ to select ON or OFF and press RETURN.**

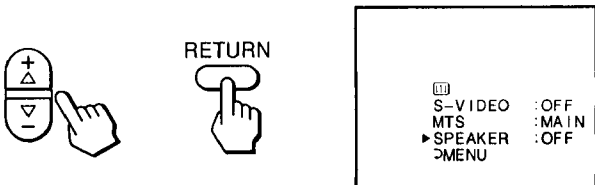

# Displaying closed caption

Some programs are broadcast with Closed Caption (Caption Vision). To display Closed Caption, select either CC1, CC2, TEXT1 or TEXT2 with the C.CAPTION button.


CC1 or CC2 shows you a caption, that is a printed version of the dialog or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1 or TEXT2 shows you text, that is information presented using either half or the whole screen. It is usually not related to the program.

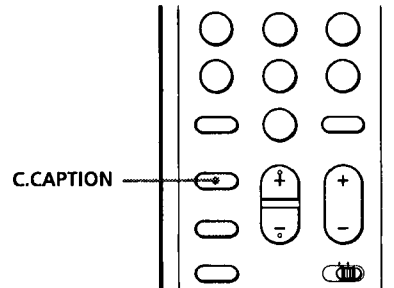

**Press C.CAPTION repeatedly to select the closed caption mode.**

Each time you press C.CAPTION, the mode changes as shown below.

CC OFF → CC 1 → CC 2 → TEXT 1 → TEXT 2

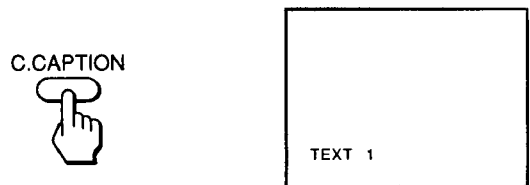

If you do not want to display Closed Caption or Text, select CC OFF.

### Note

- Captions may appear with a white box or another error instead of a certain word. Poor reception of TV programs can also cause errors in Closed Caption.

# Setting daylight saving time (DAYLIGHT SAVING)


If your area uses daylight saving time, change DAYLIGHT SAVING setting depending on the season, before setting the current time.

## Daylight saving start

- After the first Sunday in April, set DAYLIGHT SAVING to YES. Current time (page 25), On/off Timer (page 26) and Channel Block (page 27) settings automatically move one hour ahead.


## Daylight saving end

- After the last Sunday in October, set DAYLIGHT SAVING to NO. Current time, On/off Timer and Channel Block settings automatically move one hour back.

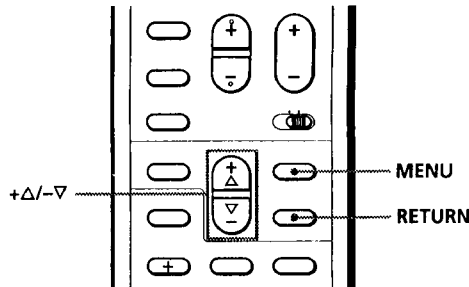

**1 Press MENU.**

 
**2 Press + Δ or - ∇ to move the cursor (▶) to TIME and press RETURN.**



```

Ⓞ
▶ CURRENT TIME SET
ON/OFF TIMER
CHANNEL BLOCK
DAYLIGHT SAVING: NO
>MENU
    
```


**3 Press + Δ or - ∇ to select DAYLIGHT SAVING and press RETURN.**

 

```

Ⓞ
CURRENT TIME SET
ON/OFF TIMER
CHANNEL BLOCK
DAYLIGHT SAVING: NO
>MENU
    
```

**4 Press + Δ or - ∇ to select YES or NO and press RETURN.**

 

```

Ⓞ
CURRENT TIME SET
ON/OFF TIMER
CHANNEL BLOCK
▶ DAYLIGHT SAVING: YES
>MENU
    
```


Choose	To
YES	Set for daylight saving start
NO	Set for daylight saving end



# Setting the clock

## (CURRENT TIME SET)

Set the current time before using On/off Timer (page 26) and Channel Block features (page 27). For example, set the clock to 3:15 p.m., Monday.

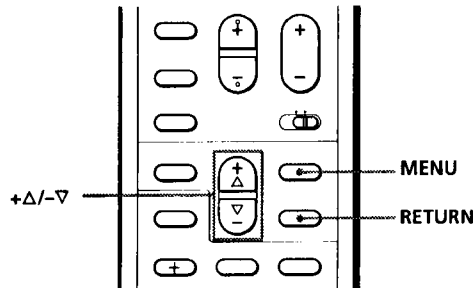


**1 Press MENU.**

**2 Press + Δ or - ∇ to select TIME and press RETURN.**

**3 Make sure the cursor (▶) is beside CURRENT TIME SET, and press RETURN.**

If the cursor is not beside CURRENT TIME SET, press + Δ or - ∇ to move the cursor and press RETURN.

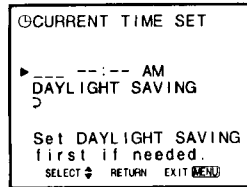



If you need to set DAYLIGHT SAVING, follow the procedure on the previous page.

**4 Set the current time.**

 
(1) Press RETURN to start setting the time.



(2) Press + Δ or - ∇ to select the day of the week and press RETURN.

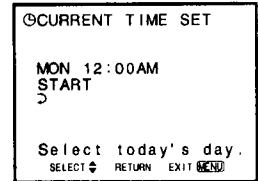

(3) Using + Δ or - ∇ and RETURN, select hour and minute in the same way as in step (2).

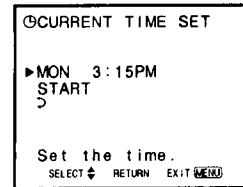

**5 Press + Δ or - ∇ to select START and press RETURN.**

The clock starts working.

### To correct the time

Display the CURRENT TIME SET screen and repeat steps above.

### To display the current time


Press DISPLAY.

### Note

- If you unplug the projection TV or a power interruption occurs, the clock will be erased. Reset the current time.

# Turning the projection TV on and off automatically (ON/OFF TIMER)



The ON/OFF TIMER feature allows you to make the TV program of your choice appear on the screen at your specified time.

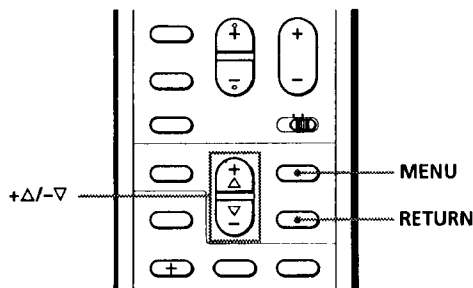

**1 Press MENU.**

**2 Press + Δ or - ∇ to select TIME and press RETURN.**

 **3 Press + Δ or - ∇ to select ON/OFF TIMER and press RETURN.**

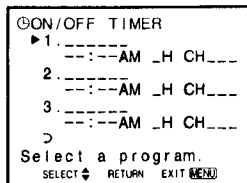


**4 Enter the ON/OFF TIMER setting.**

(1) To set program 1, press RETURN.  
To set program 2 or 3, press + Δ or - ∇ to select that program and press RETURN.



(2) Press + Δ or - ∇ to select the day of the week and press RETURN.

Each time you press + Δ or - ∇, the day of the week changes as shown below.


EVERY SUN-SAT → EVERY MON-FRI →  
SUNDAY → MONDAY → ... → SATURDAY →  
" -----(blank)" → EVERY SUN → EVERY MON  
→ ... → EVERY SAT

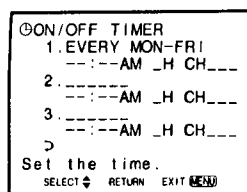

 
(3) Press + Δ or - ∇ to select the starting hour and press RETURN.

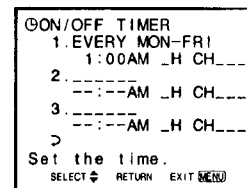



(4) Press + Δ or - ∇ to select the starting minute and press RETURN.

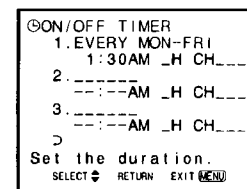

(5) Press + Δ or - ∇ to select the hour duration and press RETURN.

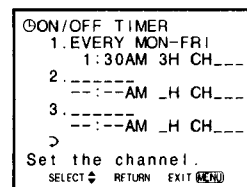

 (6) Press + Δ or - ∇ to select the channel and press RETURN.

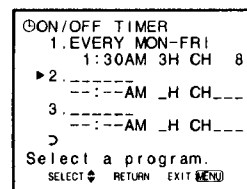

The TIMER/STAND BY indicator on the projection TV lights.

**5 To set other programs, press RETURN and repeat step 4.**

One minute before the projection TV switches to turn off, a message "TV WILL TURN OFF" is displayed on the screen.

### To cancel an ON/OFF TIMER setting

Display the ON/OFF TIMER screen, select the setting you want to cancel with + Δ or - ∇, and select the blank (----) for the day of the week.


### Note

- If you unplug the projection TV or a power interruption occurs, ON/OFF TIMER settings will be erased. Reset the current time, then set the timer.

# Blocking a TV program from appearing on the screen (CHANNEL BLOCK)

This feature allows you to prevent children from watching unsuitable programs.



For example, set CHANNEL BLOCK for every Saturday at 4:30 p.m. for one hour, on channel 12.

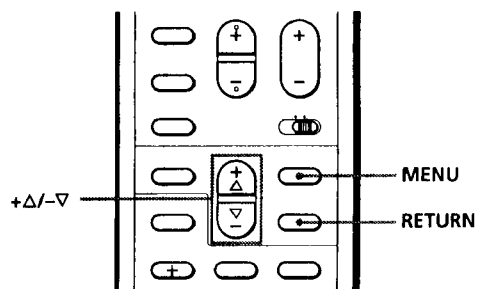

**1 Press MENU.**

**2 Press + Δ or - ∇ to select TIME and press RETURN.**

 **3 Press + Δ or - ∇ to select CHANNEL BLOCK and press RETURN.**

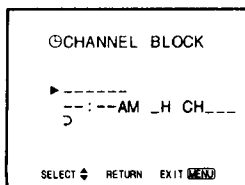


**4 Enter a CHANNEL BLOCK setting.**

(1) Press RETURN to start setting.



(2) Press + Δ or - ∇ to select the day of the week and press RETURN.

Each time you press + Δ or - ∇, the day changes as shown below.


EVERY SUN-SAT → EVERY MON-FRI → SUNDAY → MONDAY → ... → SATURDAY → "----- (blank)" → EVERY SUN → EVERY MON → ... → EVERY SAT

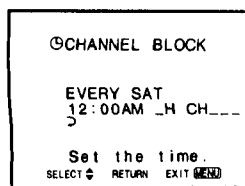

(3) Press + Δ or - ∇ to select the hour to start the channel block and press RETURN.

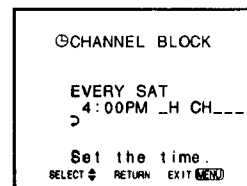
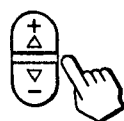


(4) Press + Δ or - ∇ to select the minute and press RETURN.


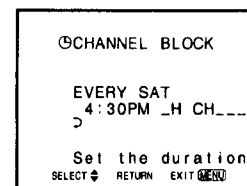


(5) Press + Δ or - ∇ to select the hour duration you want to block and press RETURN.

 Each time you press RETURN, the hour duration increases by one hour up to a maximum of six hours.

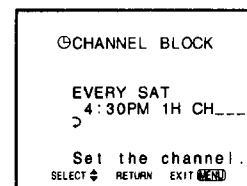

 (6) Press + Δ or - ∇ to select the channel and press RETURN.

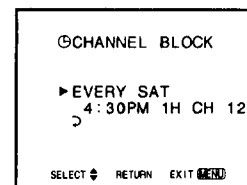

At the preset time, a message "BLOCKED" is displayed in red on the screen if the blocked channel is selected. During the preset duration, the picture of the preset channel is blocked and the sound is muted.

## To cancel a CHANNEL BLOCK setting


Display the CHANNEL BLOCK screen and select a blank (-----) for the day of the week.

## Note

- If the CHANNEL BLOCK and ON/OFF TIMER settings are overlapped, the later time setting has priority over the other setting.

# Customizing channel names (CH CAPTION)


You can caption each channel number using up to four letters or numbers to be displayed on the screen. This feature allows you to easily identify which channel you are watching. For example, you can name channel 20 "ESPN."

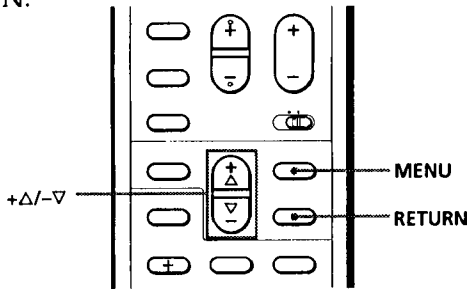



**1 Press MENU.**

**2 Press + Δ or - ∇ to select SET UP and press RETURN.**

**3 Press + Δ or - ∇ to select CH CAPTION and press RETURN.**

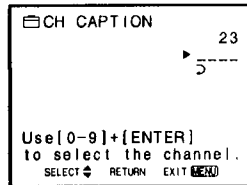


**4 Press CH +/- or press 0-9 buttons and ENTER to enter the channel number that you want to caption, and press RETURN.**

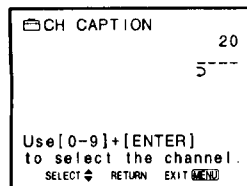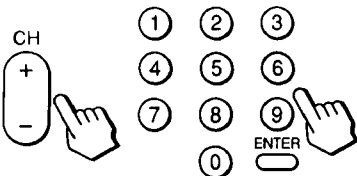


**5 Enter the letters or numbers (up to four) to caption the channel:**

- (1) Press + Δ or - ∇ to select the first letter (number).  
Each time you press + Δ or - ∇, the letter (number) changes as shown below.

 
0→1→...→9→A→B→...→Z→&→/→\_(blank space)



(2) Press RETURN.

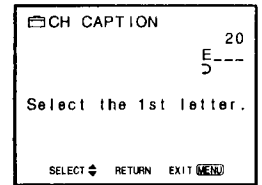

- (3) Repeat steps (1) and (2) to select the remaining letters (numbers) and press RETURN.  
For the caption space you want to leave blank, select "\_ (blank)."

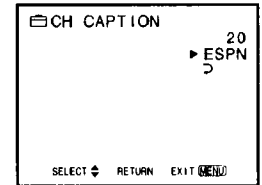

**6 Repeat steps 4 and 5 to caption other channels.**

### To erase a caption


Select the channel number with the caption you want to erase in the CH CAPTION screen, select "\_ (blank)" for the caption, and press RETURN.

### Notes


- You can set up to 32 channel captions. If 32 captions have been set, "The memory is full, sorry" appears on the screen.
- If the CH CAPTION menu appears in black, the projection TV is set to a video input, and you cannot select CH CAPTION. Press TV so that a channel number appears.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

# Setting video labels (VIDEO LABEL)



This feature allows you to label each input mode so that you can easily identify the connected equipment. For example, you can label VIDEO 1 IN as VHS.

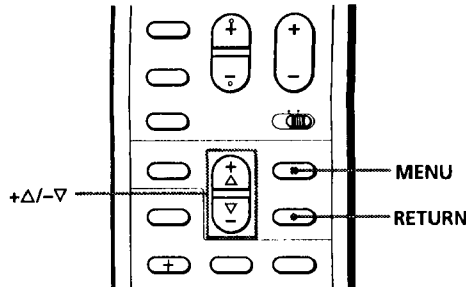



- 1 Press **MENU**.
- 2 Press **+ Δ or - ∇** to select **SET UP** and press **RETURN**.
- 3 Press **+ Δ or - ∇** to select **VIDEO LABEL** and press **RETURN**.

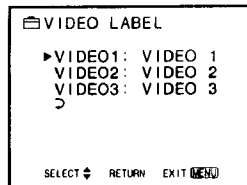

 - 4 Press **+ Δ or - ∇** to select the input mode you want to label and press **RETURN**.

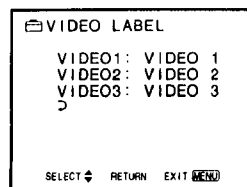

- 5 Press **+ Δ or - ∇** to select the label and press **RETURN**.

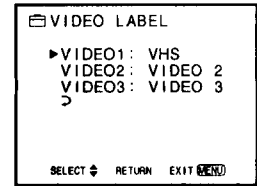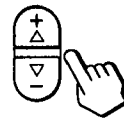

Each time you press **+ Δ or - ∇**, the label changes as shown below.

VIDEO 1  
VIDEO 1→BETA→8mm→VHS→LD→S-VIDEO  
↑

VIDEO 2  
VIDEO 2→BETA→8mm→VHS→LD  
↑

VIDEO 3  
VIDEO 3→BETA→8mm→VHS→LD  
↑

- 6 Repeat steps 4 and 5 to label other input modes.

#### Note


- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

# Selecting your favorite channels


## (FAVORITE CHANNEL)

This feature allows you to select the channels (up to seven channels) you use frequently by pressing RETURN (FAVORITE).



### Setting the favorite channels

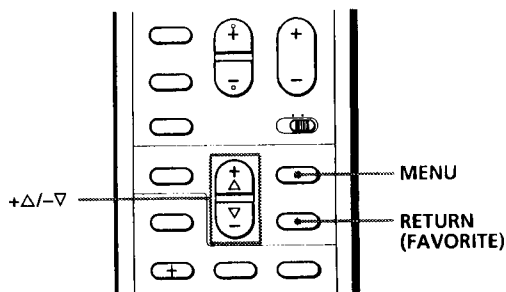

- 1 Press MENU.**
- 2 Press + Δ or - ∇ to select SET UP and press RETURN.**
- 3 Press + Δ or - ∇ to select FAVORITE CHANNEL and press RETURN.**

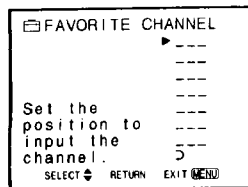

- 4 Press + Δ or - ∇ to select the position (up to seven) and press RETURN.**
- 5 Press 0 - 9 and ENTER to set your favorite channel number and press RETURN.**

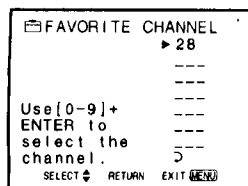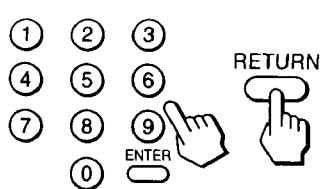


- 6 Repeat steps 4 and 5 to set other favorite channels.**


### To erase a favorite channel setting

Press + Δ or - ∇ to select the channel number you want to erase and press RETURN. Then press the 0 button and ENTER.


### Selecting a favorite channel

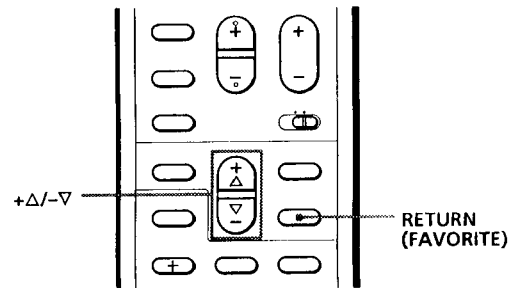

- 1 Press RETURN.**  
The FAVORITE CHANNEL list appears showing the channel numbers you set with the captions (if set.)

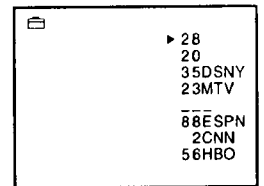

 
- 2 Press + Δ or - ∇ to select the channel you want to watch and press RETURN.**




# Operating video equipment

You can operate a piece of video equipment that has an infrared remote sensor with the supplied remote commander. Before operating, set the manufacturer's code number.

## Setting the manufacturer's code

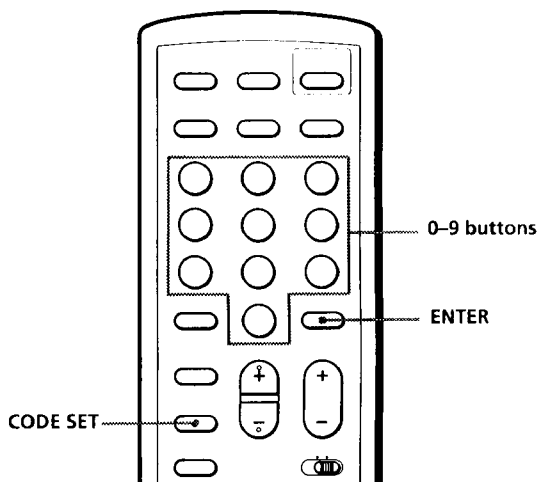

**While pressing CODE SET, press 0 – 9 to enter the manufacturer's code number (see the chart in the right column) and press ENTER. For example, to operate a Sony 8 mm VCR, press 0, 2 and ENTER.**

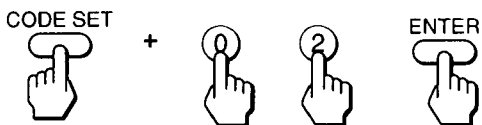

## Manufacturer code numbers

Manufacturer	Code number
SONY	01, 02, 03, 04
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06
PHILCO	05, 06
PHILIPS	05, 06, 09
QUASAR	05, 06
RCA	07, 08
SAMSUNG	24, 32
SANYO	11, 15
SCOTT	21
SHARP	13, 14
SHINTOM	34
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	28, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

### Notes


- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- In some rare cases, you may not be able to operate your non-Sony video equipment with this remote commander. This is because your equipment may use a code that is not provided with this remote commander. In this case, please use the equipment's own remote control unit.
- The code numbers for Sony equipment are assigned at the factory as follows:
 

Beta, ED Beta VCRs	01
8 mm VCR	02
VHS VCR	03 (preset code for this remote commander)
MDP	04

### Caution

When you remove a battery from the remote commander, the code may revert to 03. Reset the codes each time you replace the battery, if necessary.

## Operating video equipment

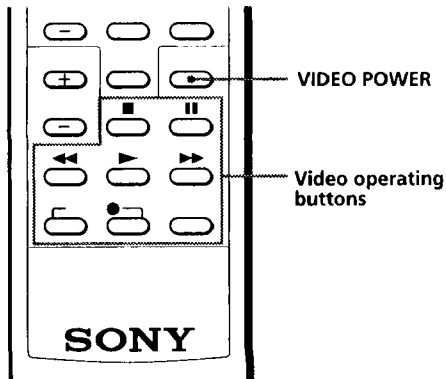

Use the video operating buttons on the remote commander to operate the video equipment.

Operating a VCR	Buttons on the remote commander
To turn on or off	Press VIDEO POWER
To change channels	Press CH +/-
To record	Press ● and REC simultaneously
To play	Press ►
To stop	Press ■
To fast forward	Press ►►
To rewind the tape	Press ◄◄
To pause	Press
To search the picture forward and backward	Press ►► or ◄◄ during playback

Operating a laser-disc player	Buttons on the remote commander
To play	Press ►
To stop	Press ■
To pause	Press    To resume normal playback, press again.
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback To resume normal playback, release the button.
To search the chapter forward and backward	Press CH +/-


### Note

- If the video equipment does not have a certain function, the corresponding button on this remote commander will not operate.




# Operating a cable box


You can operate a connected cable box with the supplied remote commander. Before operating, set the manufacturer's code number.

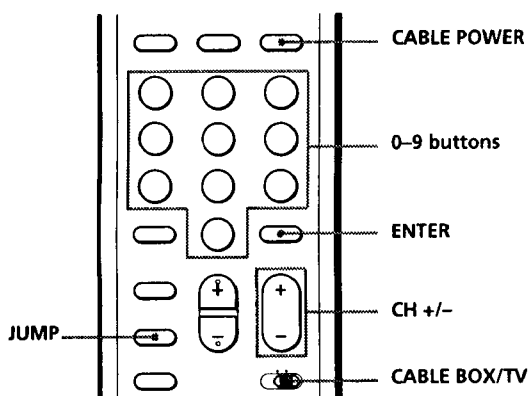


**1 Set the CABLE BOX/TV selector to CABLE BOX.**

 

**2 While pressing CODE SET, press 0 - 9 to enter the manufacturer's code number (see the chart below) and press ENTER. For example, to operate a Zenith cable box, press 6 and 8 and press ENTER.**

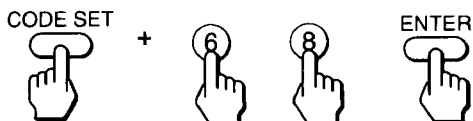

**3 Use CABLE POWER and the TV control buttons (0 - 9, ENTER, JUMP and CH +/-) to operate the cable box.**

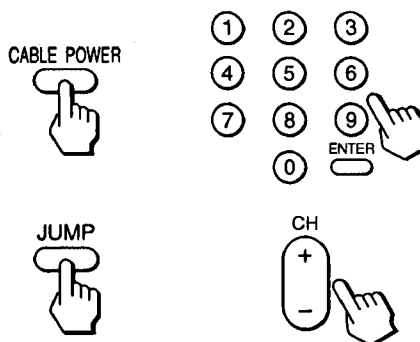

## To operate the TV

Set the CABLE BOX/TV selector to TV. Then use the TV control buttons to control the TV.

## For more details on operating the cable box

Refer to the operating instructions that come with the cable box.

## Manufacturers and code numbers (cable box)

Manufacturer	Code number
JERROLD	60, 61, 62, 63, 64, 65, 73
PIONEER	69, 70
SCIENTIFIC ATLANTA	66, 67
TOCOM	71, 72
ZENITH	68

## Notes

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this remote commander and you may not be able to operate your cable box with the supplied remote commander. In this case, use the equipment's own remote control unit.
- When you remove a battery from the remote commander, the code may be erased. Reset the code each time you replace the battery, if necessary.

# Troubleshooting

After trying the methods below, if the problem persists, contact your nearest Sony dealer.

## No picture (screen not lit), no sound

- ➔ Make sure the power cord is connected securely.
- ➔ Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video tapes, set to VIDEO. (page 16)
- ➔ Make sure the CABLE BOX/TV selector is in the correct position. (page 15)
- ➔ Try another channel. It could be station trouble.

## Poor or no picture (screen lit), good sound

- ➔ Adjust PICTURE in the VIDEO menu. (page 19)
- ➔ Adjust BRIGHT in the VIDEO menu. (page 19)
- ➔ Adjust the convergence. (page 10)
- ➔ Check antenna/cable connections. (page 6)
- ➔ Make sure S VIDEO is set to ON in the MODE SET menu, when watching video tapes with an S video type VCR. (page 8)

## Good picture, no sound

- ➔ Press MUTING so that "MUTING" disappears from the screen. (page 15)
- ➔ Check the MTS setting in the MODE SET menu. (page 22)
- ➔ Make sure SPEAKER is set to ON in the MODE SET menu. (page 23)

## No color

- ➔ Adjust COLOR in the VIDEO menu. (page 19)
- ➔ Confirm that black and white program is not being broadcast.

## Only snow and noise appear on the screen

- ➔ Check the CABLE setting in the SET UP menu. (page 11)
- ➔ Check the antenna/cable connections. (page 6)
- ➔ Make sure the channel is broadcasting programs.

## Dotted lines or stripes

- ➔ Adjust the antenna.
- ➔ Move the TV away from noise sources such as cars, neon signs, and hair-dryers.

## Double images or ghosts

- ➔ Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings.)

## Cannot operate menu

- ➔ If the item you want to choose appears in black, you cannot select it. Press TV.
- ➔ Check the CABLE setting in the SET UP menu. (page 11)

## Cannot receive upper channels (UHF) when using an antenna

- ➔ Check if CABLE is OFF in the SET UP menu. (page 11)
- ➔ Use AUTO PROGRAM to add receivable channels that are not presently in the memory. (page 12)

## Cannot receive any channels when using cable TV

- ➔ Check if CABLE is ON in the SET UP menu. (page 11)
- ➔ Use AUTO PROGRAM to add receivable channels that are not presently in the memory. (page 12)

## Remote commander does not operate

- ➔ Battery could be weak. Replace the battery. (page 10)
- ➔ Make sure the projection TV's power cord is connected securely to wall outlet.
- ➔ Are fluorescent lights too close to the projection TV? Move lights at least 3 – 4 feet away from the projection TV.

## Commander's power, channel up/down, channel buttons do not function

- ➔ Set the CABLE BOX/TV selector to the correct position. (page 15)

## Cannot gain enough volume when using a cable box

- ➔ Increase the volume at the cable box. Then set the CABLE BOX/TV selector to TV and adjust the TV's volume. (page 32)

# Specifications

<b>Projection system</b>	3 picture tubes, 3 lenses, horizontal in-line system
<b>Picture tube</b>	7 inch high-brightness monochrome tubes (5.5 raster size), with optical coupling and liquid cooling system
<b>Projection lenses</b>	High performance, large-diameter hybrid lens F1.0
<b>Screen size</b>	KP-46S55: 46 inches (measured diagonally) KP-53S55: 53 inches (measured diagonally)
<b>Screen brightness</b>	KP-46S55: 1,600 cd/m <sup>2</sup> KP-53S55: 1,250 cd/m <sup>2</sup>
<b>Television system</b>	American TV standards
<b>Channel coverage</b>	VHF: 2 – 13 / UHF: 14 – 69 / CATV: 1 – 125
<b>Antenna</b>	75 ohm external antenna terminal for VHF/UHF
<b>Inputs/output</b>	VIDEO IN 1 S VIDEO IN (4-pin mini DIN): Y: 1 Vp-p, 75-ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal) 75 ohms VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync negative AUDIO (phono jacks): 500 mVrms (100% modulation) Impedance : 47 kilohms VIDEO IN 2 and 3 VIDEO (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative AUDIO (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilohms AUDIO OUT (phono jacks): 900 mVrms (100% modulation) Impedance: 5 kilohms

<b>Speaker</b>	Full range speaker 160 mm (6.3 inches) diameter
<b>Speaker output</b>	10 W × 2
<b>Power requirement</b>	120 V, 60 Hz
<b>Power consumption</b>	Max. 310 W Average: 255 W Standby mode: 7 W
<b>Dimensions(W/H/D)</b>	KP-46S55: 1,029 × 1,287 × 538 mm (40 <sup>5</sup> / <sub>8</sub> × 50 <sup>3</sup> / <sub>4</sub> × 21 <sup>1</sup> / <sub>4</sub> inches) KP-53S55: 1,164 × 1,336 × 644 mm (45 <sup>7</sup> / <sub>8</sub> × 52 <sup>5</sup> / <sub>8</sub> × 25 <sup>3</sup> / <sub>8</sub> inches)
<b>Mass</b>	KP-46S55: 77 kg (170 lbs 4 oz) KP-53S55: 92 kg (203 lbs 12 oz)
<b>Supplied accessories</b>	Remote commander RM-Y125 (1) Size AA (R6) battery (1)
<b>Optional accessories</b>	U/V mixer EAC-66 Connecting cables RK-74A, VMC-810S/820S, YC-15V/30V, VMC-720M VCR tray SU-PJT1

Design and specifications are subject to change without notice.

# Index

## Adjusting

- convergence **10**
- sound **21**
- the picture **19**

## Antenna **6**

## AUTO PROGRAM **13**

## Battery **10**

## Cable box **33**

## Cable TV **11**

## Changing the menu language **14**

## Channel block **27**

## Channel caption **28**

## Closed caption **23**

## Daylight saving **24**

## DEMO **16**

## Erase/add **13**

## Connection

- with a VCR **7**
- with an antenna **6**
- without a VCR **6**

## Favorite channel **30**

## Jump **15**

## MTS (Multichannel TV Sound) **22**

## Muting **15**

## Picture-in-picture (PIP) **16**

## Presetting channels **12**

## PROGRAM PALETTE **18**

## Remote commander **10**

## S video **8**

## SAP (Second Audio Program) **22**

## Setting

- daylight saving time **24**
- the clock **25**

## Sleep timer **16**

## STANDARD **18, 19**

## STEREO indicator **22**

## Surround **22**

## TIMER/STAND BY indicator **10, 26**

## Video label **29**

## Watching

- TV **15**
- video tapes **16**

## Names of controls

- +  $\Delta$  / -  $\nabla$  buttons **10**
- AUDIO button **17**
- AUDIO L(MONO)/R IN jacks **7, 8**
- AUDIO L/R OUT jacks **9**
- C.CAPTION button **23**
- CABLE BOX/TV selector **15, 33**
- CABLE POWER button **33**
- CH(channel) +/- buttons **13, 15**
- CODE SET button **31**
- DISPLAY button **15**
- ENTER button **15**
- FAVORITE button **30**
- FREEZE button **17**
- JUMP button **15**
- MENU button **10**
- MUTING button **15**
- PIP button **16**
- POSITION button **17**
- POWER button **10**
- RETURN button **10**
- S VIDEO input jack **8**
- SLEEP button **16**
- STANDARD button **18**
- SWAP button **17**
- TV button **16**
- TV/VIDEO button **16**
- VIDEO (VIDEO POWER, CH +/-,  $\blacktriangleright$ ,  $\blacksquare$ ,  $\blacktriangleright\blacktriangleright$ ,  $\blacktriangleleft\blacktriangleleft$ ,  $\blacksquare$ ,  $\blacktriangleleft$ ,  $\blacksquare$ ,  $\blacktriangleleft$ ) buttons **32**
- VHF/UHF antenna terminal **6, 7**
- VIDEO 1 IN jack **7, 8**
- VIDEO 2 IN jack **8**
- VIDEO 3 IN jack **9**
- VOL (volume) +/- buttons **15**