

 
Important Information

WARNING

To prevent fire or shock hazard, do not expose this TV to rain or moisture.



WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
<p>This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.</p>	<p>This symbol indicates important instructions accompanying the product.</p>

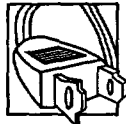

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Cautions



Do not defeat the safety feature of the plug. The wide blade fits into the wall socket only one way. If you need an extension cord, make sure it matches the plug of the TV.

Operate TV only on 120 volts, 60 Hz AC power (normal house power).

For safety reasons, make sure any equipment or accessories connected to this product bears the UL listing mark or CSA certification mark. If in doubt, contact qualified service personnel.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Note To Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you ever need them. The numbers are located on the back of the TV.

Model No. _____

Serial No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

Table of Contents

Important Information	Warning, Product Registration _____	i
Quick Guide to Your TV	Startup _____	2-3
	Hook up your TV, Plug in the TV, Put Batteries in the Remote, Turn on the TV, Place Channels in Memory, Set the Time	
	Basic Tour of the Remote _____	4
	Power, Volume, Channel, Special, and Menu Buttons	
	Menu Basics _____	5
	Colors, Menu Buttons, Moving through the Menus	
Using Your Remote	With Remote Buttons _____	6
Adjusting Your TV	Overall Picture _____	7
	Picture Settings _____	8
	Color, Tint, Brightness, Sharpness, Autocolor, Picture Reset	
	Sound Settings _____	9-10
	Stereo, Tone, Speakers	
Using Advanced Features	Placing Channels in Memory/Autoprogram _____	11
	Naming the Channels _____	12
	Setting the Sleep Timer _____	13
	Setting the Alarm Clock _____	14
	Watching Closed Captioning _____	15
	Setting Your TV for Antenna or Cable _____	16
References	Front Panel Buttons _____	17
	Displays on the Screen _____	18
	Trouble Checks _____	19-20
	Order Form for Parts _____	21-22
	Glossary _____	23
	Limited Warranty _____	24
	Index _____	25

 
Quick Guide to Your TV

Startup

The steps below will get your TV connected and ready for watching.
For more details, see the page numbers listed.


1. Hook up your TV

Details are in the Connections Guide.

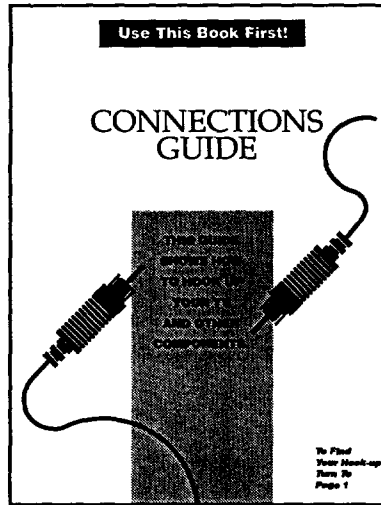


Hook up any antennas, cables or other equipment to your TV before you follow the steps below.

 2. Plug in the TV

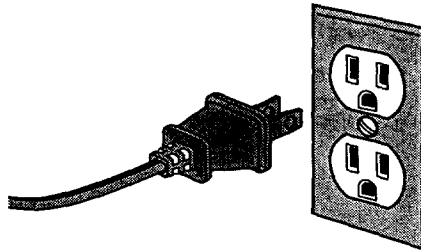

Plug the cord into the outlet, matching the wide and the small end of the plug with the outlet.

 3. Put Batteries in the Remote

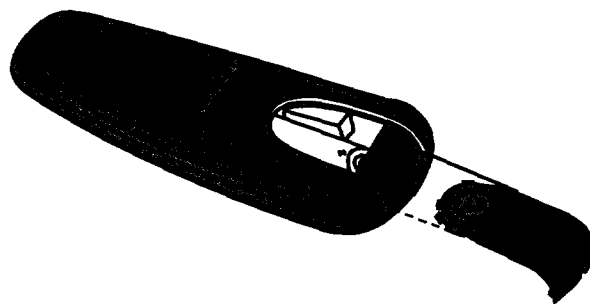


- Pull off the cover of the battery compartment.
- Place the two AAA batteries as shown, matching the + and - end of each battery in the compartment.
- Replace the cover.

Quick Guide to Your TV


Startup

 4. Turn on the TV

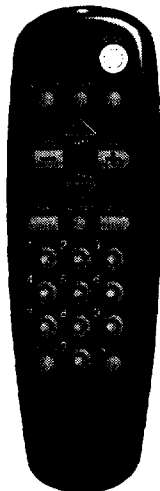

Press POWER on the remote.

 
OR

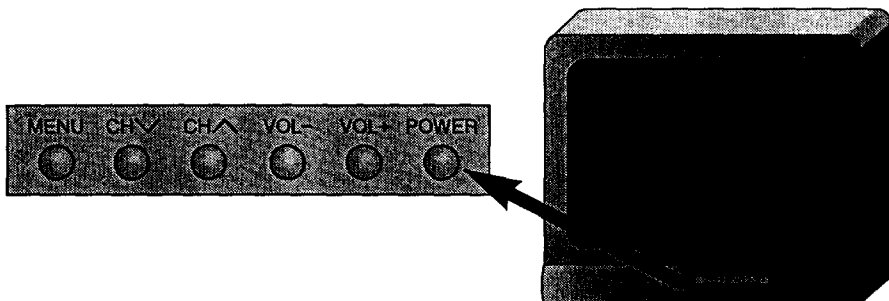

Press POWER on the TV.


5. Place all available channels in memory (AutoProgram)

 Details for adding and deleting channels are on page 11.

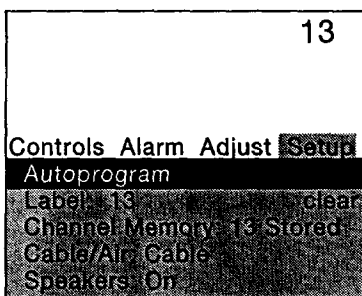

- A. Press MENU until the Setup menu is selected. This menu is white.
- B. Press + to place channels in the TV's memory (Autoprogram).
- C. Wait until TV has cycled through all the channels and returns to original channel.
- D. Press DONE.

 6. Set the Time

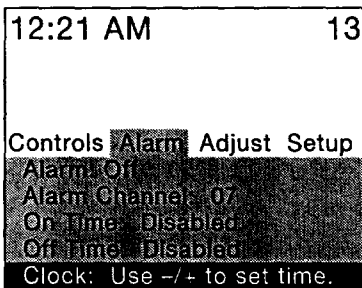


- A. Press MENU until the Alarm menu is selected. This menu is green.
- B. The Clock is automatically highlighted the first time you set it. If it is not, press CHANNEL down to highlight it.
- C. Press -- to set the hour.
- D. Press + to set the minutes.
- E. Press DONE.

Quick Guide to Your TV

Basic Tour of the Remote

Basic information about your remote is shown below. This will give you a general idea of how your remote works. *For more details, see page 6.*

 Power Button

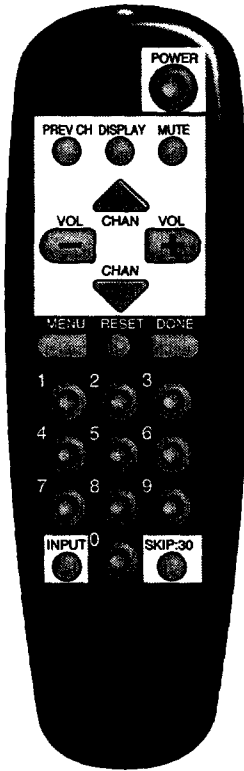

Turns the TV on and off.

Volume, Channel, and Special Buttons

 
Details are on page 6.

Operates the TV.

Operates special features of the TV.

Menu Buttons

See next page for details.

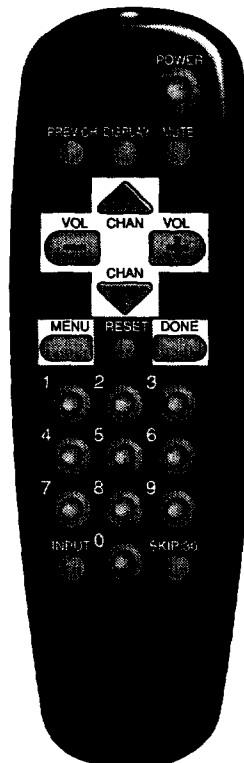


Changes the menus and features on the screen.

Quick Guide to Your TV

Menu Basics

General information about using the on-screen menu system is shown below. *Details on using the remote buttons are on page 6. Many menu items are explained in detail in Adjusting Your TV starting on page 7 and Using the Advanced Features starting on page 11.*

 
Colors

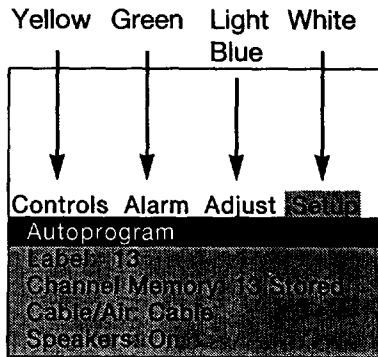


Press MENU repeatedly to see each of the four menu colors. Each menu has a different color background as shown at the left.

Menu Buttons

 These buttons are used with the TV's menus to adjust the features. You can use the menu buttons on the remote or the front of the TV.

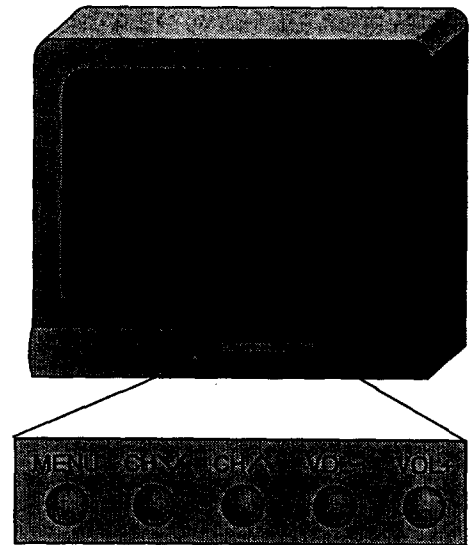

Moving through the Menus

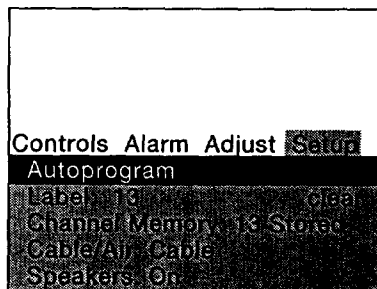 

1. Press MENU to move from menu to menu.
2. Press CHANNEL up and down to move up and down through the features in the menu.
3. Press VOLUME + and - to move left and right on the menu lines.

Using Your Remote

With Remote Buttons



POWER

Turns the TV on and off.

PREV CHAN (Previous Channel)

Changes back and forth between two channels.

Select a channel and then select another. Press PREV CHAN to switch between the two channels.

DISPLAY

Shows displays on the screen.

Clears menus from the screen.

MUTE

Switches the TV sound on or off.

CHAN Δ and ∇ (Channel up and down)

Scans up and down through channels in the TV's memory.

Moves up and down menus. *See Menu Basics on page 5.*

VOL + and - (Volume up and down)

Raises and lowers sound.

Moves left and right on a menu line. *See Menu Basics on page 5.*

Changes a feature setting.

MENU

Shows menus on the screen and moves from menu to menu.

RESET

Returns the picture adjustments to the original settings.

DONE

Saves the setup of a feature and removes the menu from the screen.

INPUT

Switches between the TV channels and Video 00/S-VID 00.

SKIP:30 (Commercial Skip)

Allows you to look at other channels during commercials.

Each press adds 30 seconds. Use the CHANNEL or number buttons to scan the other channels. TV switches back to original channel when time runs out. Press DONE to cancel SKIP.

Number Buttons

Selects any channel number.

Two numbers must be pressed for each channel. Press 0 and 6 for channel 6.

 
For three digit channels, press and hold 1 until 1- appears on the screen. Then press the other two numbers.

Adjusting Your TV

Overall Picture


Follow the steps below to lighten or darken the overall picture without changing the color levels.

1. Select the Controls Menu

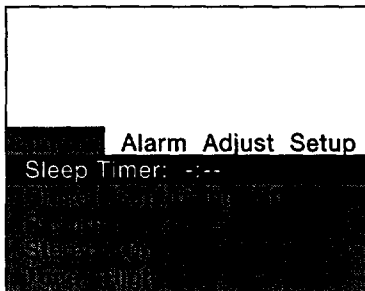


Press **MENU** to select the Controls menu. This menu is yellow.

 2. Highlight Picture

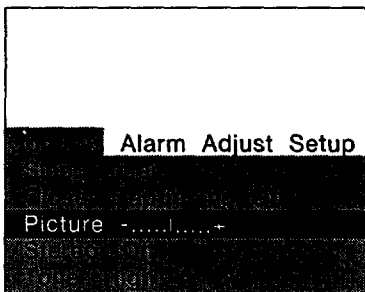

Press **CHANNEL** down to highlight Picture.

 3. Use **VOLUME +** and **-** to adjust the Picture

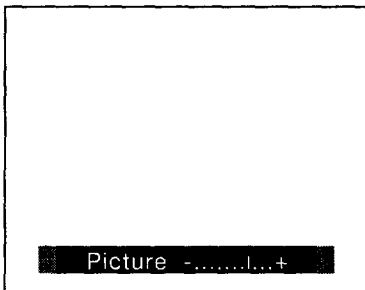

Press **+** to lighten the picture.

OR

Press **-** to darken the picture.

4. Press **DONE**

 
Press **DONE** to save the setting.

Adjusting Your TV

Picture Settings


Follow the steps below to change the picture on the screen to your personal setting. The chart below explains your options.

1. Select the Adjust Menu

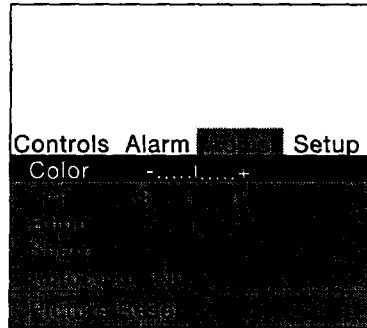

Press MENU repeatedly to select the Adjust menu. This menu is light blue.

 2. Highlight item to change

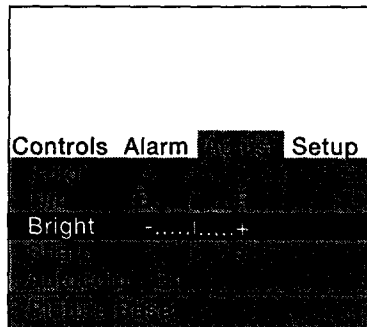

Press CHANNEL down to highlight the picture item you want to adjust.

3. Use VOLUME + or - to adjust each item

Press + or - to adjust each item.

4. Press DONE

Press DONE to save the setting.


	Press VOLUME + to:	Press VOLUME - to:
Color	Increase color richness	Lower color to black and white
Tint	Give red tint to skin color	Give green tint to skin color
Bright (Brightness)	Add more light to dark parts of the picture	Add more dark to light parts of the picture
Sharp (Sharpness)	Show cleaner, clearer images	Make picture more smooth
Autocolor	Turn on to keep Color and Tint in proper balance each time you change channels	Turn off for manual adjustment of Color and Tint
Picture Reset	Reset the picture back to the original settings	Reset the picture back to the original settings

Adjusting Your TV

Sound Settings: Stereo and Tone


Follow these steps to adjust the Stereo or Tone of your TV. The chart below explains your options.

 1. Select the Controls Menu

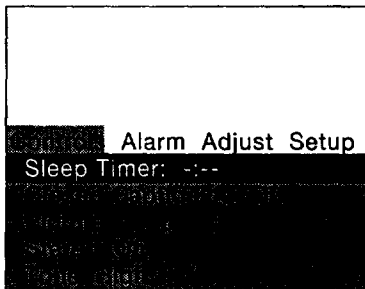


Press **MENU** to select the Controls menu. This menu is yellow.

 2. Highlight item to change

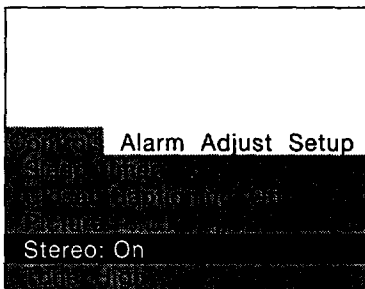

Press **CHANNEL** down to highlight the sound item you want to adjust.

 3. Use **VOLUME +** or **-** to adjust each item

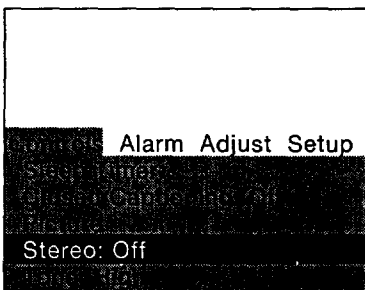

Press **+** or **-** to adjust each item.

4. Press **DONE**

Press **DONE** to save the setting.


Stereo	On Sound is automatically reproduced in stereo or mono, whichever the TV station is broadcasting.	Off Sound is reproduced in mono.
Tone	High High pitched sounds are louder.	Low Low pitched sounds are louder.

Adjusting Your TV

Sound Settings: Speakers


Follow the steps below to turn the speakers on or off in your TV. The chart below explains your options.

 1. Select the Setup Menu

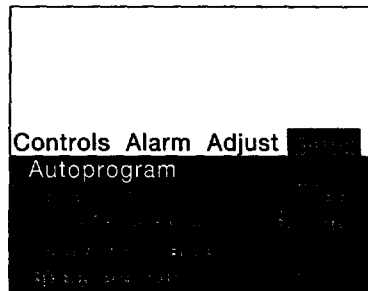


Press **MENU** repeatedly to select the Setup menu. This menu is white.

 2. Highlight speakers

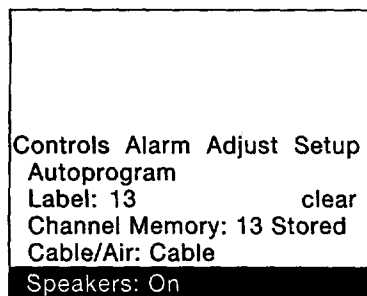

Press **CHANNEL** down until Speakers is highlighted.

 3. Turn Speakers on or off

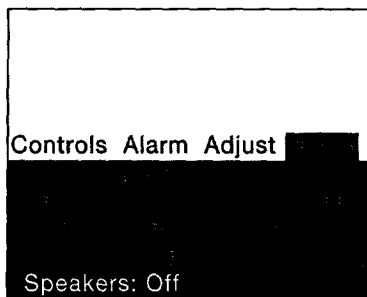

Press **+** or **-** to turn the speakers on or off.

4. Press **DONE**



Press **DONE** to save the setting.

Speakers	On	Off
	The sound comes from the TV's internal speakers.	No sound comes from the TV.

 
Using Advanced Features

Placing Channels in Memory (Autoprogramming)

Only channels 2–13 appear in the TV's memory when you first turn it on. The channels available in your area must be programmed into the TV's memory when you hook up your TV. Using CHANNEL up or down allows you to scan through these channels.



You may want to add or delete a few channels if some stations have weak signals or were off the air when the TV was programmed. *Refer to the Add or Delete Channels section below.*

1. Place channels in memory (AutoProgram)

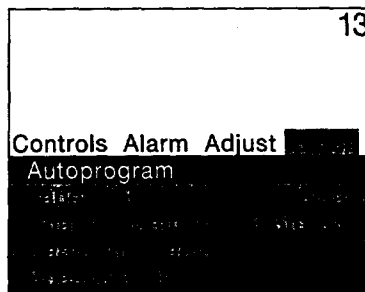

- A. Hook up an antenna, cable or components before you begin these steps or you will not be able to add channels into memory.
- B. Press MENU repeatedly to select the Setup Menu and highlight Autoprogram. This menu is white.
- C. Press + to start the TV adding all active channels into memory.
- D. Wait until the TV has cycled through all the channels and returns to the original channel.
- E. Press DONE.

  2. Add or delete channels

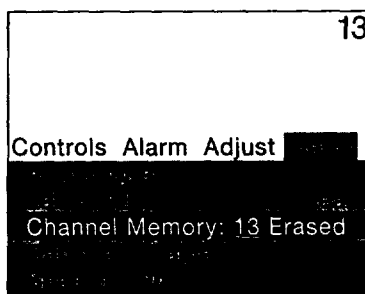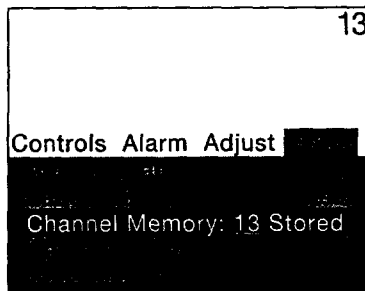


- A. Press MENU repeatedly to select the Setup menu. This menu is white.
- B. Press CHANNEL down to highlight Channel Memory.
- C. Press + to underline the channel number.
- D. Select the channel number you want to add or delete with the number buttons.
- E. Press + to add or delete a channel (you will see Stored on the screen when added and Erased when deleted).
- F. Repeat D and E for more channels.
- G. Press DONE.

Using Advanced Features


Naming the Channels

You can name the channels using the character list below. **Full** appears beside Label when the memory is used up. **Fixed** appears beside Label for channel 00--it cannot be named.

 
1. Name a channel

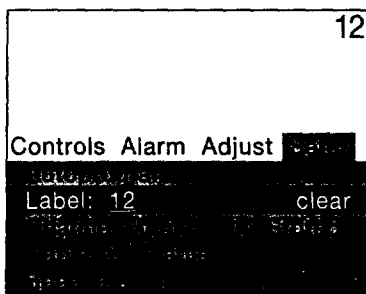

 - A. Press MENU repeatedly to select the Setup menu. This menu is white.
- B. Press CHANNEL down to highlight Label.
- C. Press + to underline the channel number.
- D. Select the channel number with the number buttons.
- E. Press + to underline the first character of the name.
- F. Choose the character using CHANNEL up or down.
- G. Repeat E-F to complete the name.
- H. Press - to move backward if you want to change an item.
- I. Press DONE.

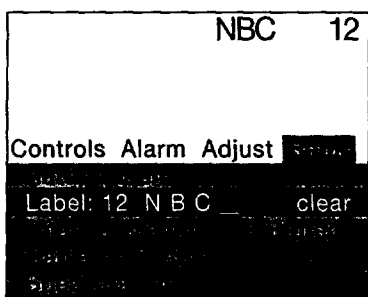

 2. Erase a name

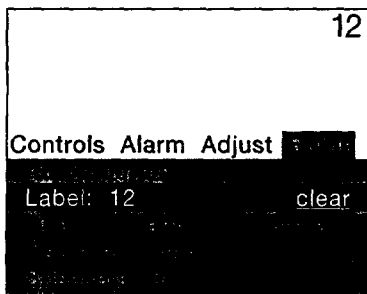

- A. Follow A and B above.
- B. Press + until clear is underlined.
- C. Press CHANNEL up or down to clear the name.
- D. Press DONE to clear the name.

Character List

 
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z &
' () á + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ blank space

Using Advanced Features


Setting the Sleep Timer

You can set your TV to turn itself off. If you're watching TV at night and fall asleep, the TV will turn off for you.


1. Set Sleep Timer

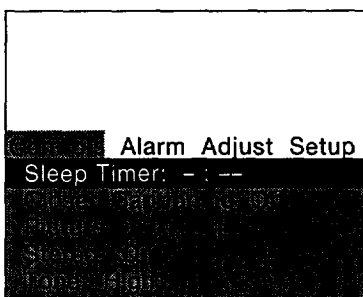

 - A. Press MENU to select the Controls menu and highlight Sleep Timer. This menu is yellow.
- B. Press + enter the amount of time you want to watch TV before it shuts off. Each press equals 15 minutes.
- C. Press - to subtract time from the sleep timer.
- D. Press DONE.

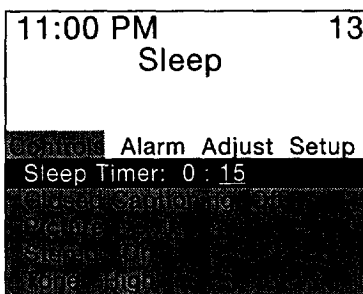


 2. Add more time

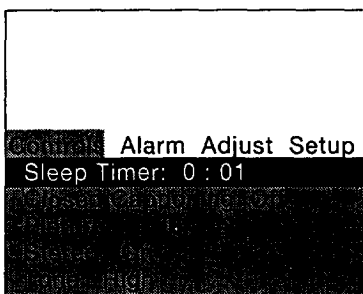

- A. When 0:01 appears on the screen, the TV will shut off in one minute. Press + to add more time.
- B. Press DONE.

 3. Cancel the Timer

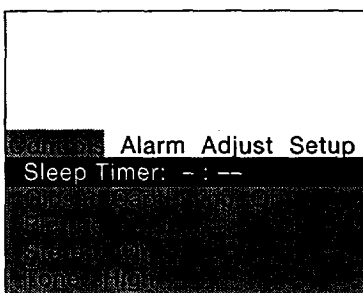


- A. Press MENU to select the Controls menu and highlight Sleep Timer.
- B. Press - until the time reaches - : --.
- C. Press DONE.

Using Advanced Features

Setting the Alarm Clock


The TV can be set to turn on each day like your alarm clock. You can set it to turn on to your favorite channel at a certain time. You can also set it to turn itself off again. The Alarm cannot be used until the clock is set.

 1. Turn on the Alarm

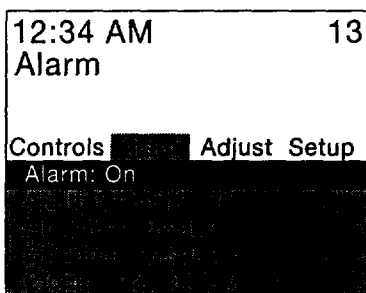


- A. Press MENU to select the Alarm menu and highlight Alarm. This menu is green.
- B. Press + or - to select On or Off.
- C. Press DONE.

 2. Set the Alarm Channel

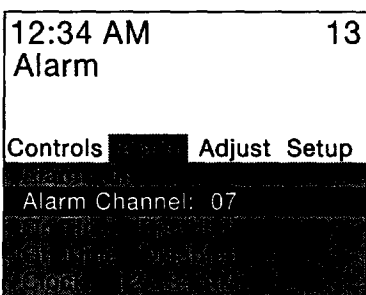


- A. Press CHANNEL down to highlight the Alarm Channel.
- B. Press + to highlight the channel number.
- C. Enter the channel that you want the TV to turn on to with the number buttons.
- D. Press DONE.

 3. Set On and Off Times

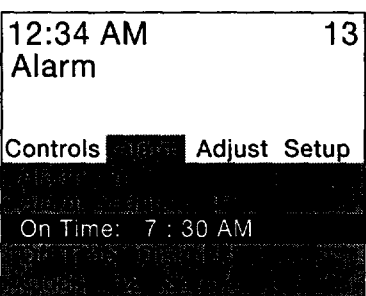

 - A. Press CHANNEL down to highlight the On or Off Time.
- B. Press - to set the hour.
- C. Press + to set the minutes.
- D. Press and hold - to choose Disabled. This turns the TV only on or only off at a certain time each day.
- E. Press DONE.

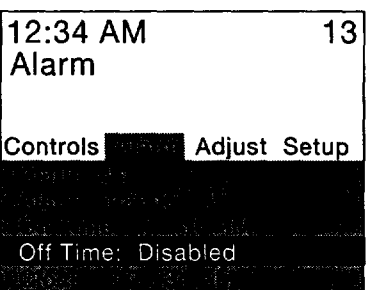

Using Advanced Features

 
Watching Closed Captioning

Closed captioning displays the audio portion of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound.

If you have turned Closed Captioning on and it does not appear on the screen, it is not available on the channel you are watching.


This TV does not support the text mode. Text information typically consists of program information, weather bulletins, local activities, etc.

1. Select the Controls Menu

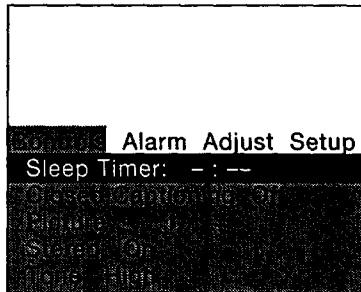


Press MENU to select the Controls menu. This menu is yellow.

 2. Highlight Closed Captioning

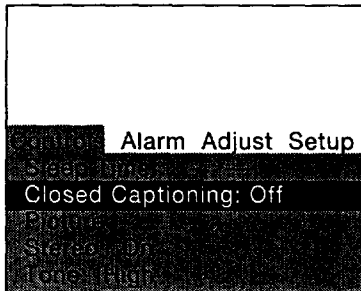

Press CHANNEL down to highlight Closed Captioning.

 3. Select Setting

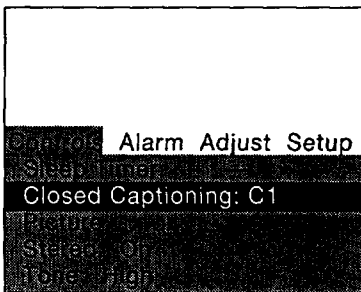

A. Press + or - to select Off, C1, or C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

4. Press DONE

 
B. Press DONE to save the setting.

Using Advanced Features

Setting Your TV for Antenna or Cable


Your TV automatically adjusts this feature when the TV places channels in memory (autoprogram). Follow the steps below to change the setting as needed.

1. Select the Setup menu

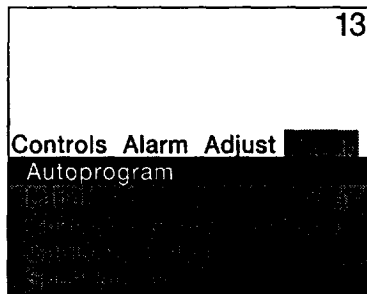


Press MENU repeatedly to select the Setup menu. This menu is white.

 2. Highlight Cable/Air

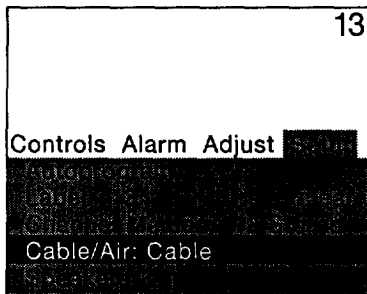

Press CHANNEL down to highlight Cable/Air.

 3. Select Cable or Air

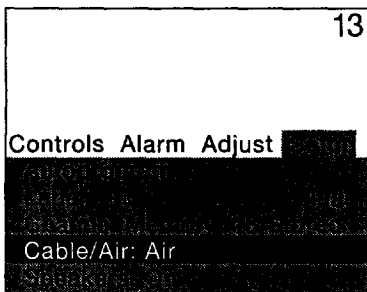

A. Press + or - to select Cable or Air. Select Cable if you have cable. Select Air if you have a home antenna connected to your TV.

 
B. Press DONE to save the setting.

4. Press DONE

References

Front Panel Buttons

For details on using buttons with menus, see Menu Basics on page 5.

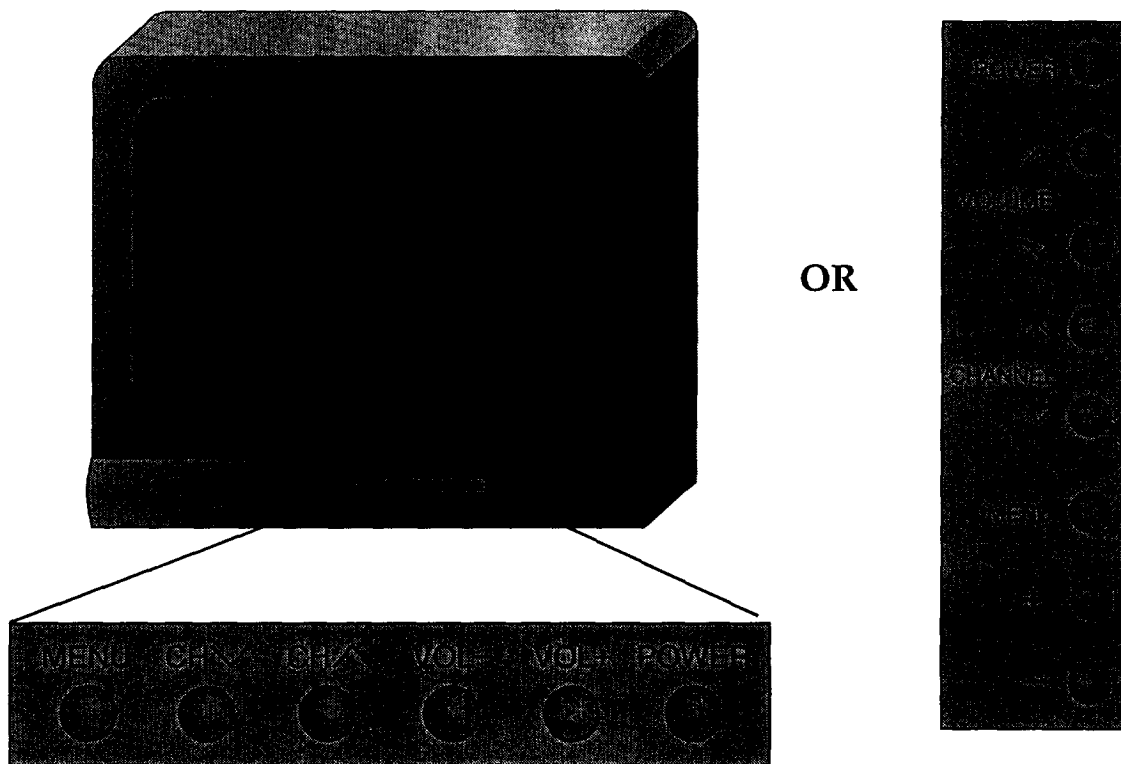

MENU

Shows menus on screen.
Moves from menu to menu.

CH ^ and v

Channel up and down.
Scans up and down through channels in the TV's memory.
Moves up and down menus.

VOL + and - (Also **VOL ^** and **VOL v**)

Volume up and down
Raises and lowers sound.
Moves left and right on a menu line.
Changes a feature setting.

POWER

Turns the TV on or off.

 
+ and - (Not on all models)

Same as VOL + and - buttons.

References

Displays on the Screen

Your TV shows the settings of several features on the screen. To see what features have been set on your TV, press DISPLAY on the remote.

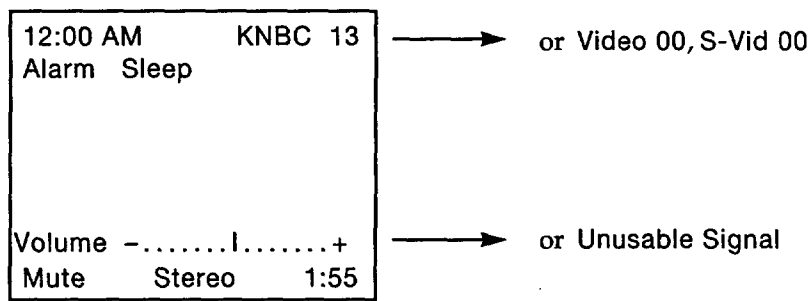

Screen Display

Description

12:00 AM

Time of the clock. *Details are on page 3.*

KNBC

Name you chose to describe the channel. *Details are on page 12.*

13

Channel number you are watching.

S-Vid 00

Indicates that a component is connected to the S-VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Video 00

Indicates that a component is connected to the VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Alarm

Alarm clock is set to turn on or off. *Details are on page 14.*

Sleep

Sleep Timer is set to turn off the TV. *Details are on page 13.*

Volume

Sound level of the TV.

Unusable Signal

No signal is coming in on video input channel 00.

Mute

There is no sound. *See MUTE button on page 6.*

Stereo

The sound is being broadcast in stereo. *Details are on page 9.*

1:55

The time remaining for commercial skip. *Details are on page 6.*

References

Trouble Checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again. *For warranty information see page 24.*

Trouble	Checks and Adjustments
Power	
TV will not turn on	Plug TV in. Plug something else into the outlet to make sure it is working. Make sure batteries in the remote are not dead. Aim the remote at the TV and press POWER. Make sure batteries are placed in the remote the right way. <i>See batteries on page 2.</i> Unplug TV for a few minutes and then turn it on again.
No picture, no sound but TV has power	Check antenna connections. Check position of Cable/Air feature. <i>See page 16.</i> Try another channel. Inactive channel may be tuned. Make sure component connected to the VIDEO INPUT jacks is turned on if you choose channel 00. Make sure TV is tuned to the same channel as the switch on back of VCR if watching a VCR. Make sure TV/VCR button on VCR is in correct position when using VCR.
Picture	
Blank screen or Unusable Signal appears on screen	Try another channel. Inactive channel may be tuned. Scan the channels.
Picture poor, sound okay	Check antenna connections. Adjust TV picture. <i>See pages 7-8.</i>
Sound	
Noisy stereo reception	Turn Stereo off. The stereo broadcast may not be clear. <i>See page 9.</i>
Picture okay, no sound	Press VOLUME + or MUTE to restore sound. Make sure TV's speakers are on. <i>Details are on page 10.</i>
Picture okay, sound poor	Try another channel. Try adjusting the Stereo or Tone. <i>See page 9.</i> Change Stereo to off. The stereo broadcast may not be clear. <i>See page 9.</i>
No stereo on stereo station	Make sure Stereo is turned on. <i>See page 9.</i>

References

Trouble Checks

Trouble

Checks and Adjustments

Remote

Works part or none of the time

Clear the path between the remote and TV of any objects.
Aim the remote at the component you are trying to control.
Make sure batteries in the remote are not dead.
See if batteries are placed in remote correctly. *See batteries, page 2.*

Can't select certain channel

Press number buttons. Channel may not be in memory. *See autoprogram on page 11.*
Make sure TV/VCR switch on VCR is in the TV position if using VCR.
For numbers over 100, press and hold 1 until 1-- appears, then press the other two numbers.
Set Cable/Air feature to Cable for channels higher than 69. *See page 16.*

TV Turns on or off

Turns off by itself

Check Sleep Timer. *See sleep timer on page 13.*
Wait 30 seconds and turn on again, a power surge may have occurred.
Check Alarm Off time. *See alarm clock on page 14.*

Turns on by itself

Check Alarm On Time. *See alarm clock on page 14.*
Check clock time. *See clock on page 3.*

Does not turn off at Alarm Time

Make sure alarm is turned on or off. *See alarm clock on page 14.*
Check clock time. *See clock on page 3.*
Make sure Clock time is set correctly, including AM and PM.
Check Alarm Off time.

References

Order Form for Parts

Remote #213722

This is the remote that came packed with your TV. You can use the order form at the right to order it by mail.



Cleaner #AHO35

To clean your TV cabinet, we recommend Murphy's® Oil Soap or Cleaner #AH035. You **should not** use cleaners such as Windex® with vinegar, Lenox® Furniture Polish spray or Heinz® Cleaning Vinegar to clean your TV cabinet. Using these cleaners will permanently mar the surface of the cabinet. Such damage is not covered under your purchase warranty.

Order Form				
Book No. 1Q57 372-05A				
Part	Part Number	Price	Qty	Total
Cleaner	AH035	\$ 6.95		
Remote--CRK63A1	213722	\$59.95		
Total (\$10 Minimum Order)			\$	_____
Sales Tax			\$	_____
We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.				
Shipping, Handling, and Insurance			\$	5.00
Total Amount Enclosed			\$	_____
VISA or MasterCard preferred. Money order or check must be in U.S. currency only. No COD or CASH.				




Detach Here

All specifications and descriptions of parts are subject to change without notice.


References

Order Form for Parts

USE YOUR CREDIT CARD

Copy complete account number 

Card expires:

Copy complete account number 

Copy Number above the name
on your MasterCard

Card expires:

AUTHORIZED SIGNATURE

Prices are subject to change without notice.

PLEASE



Print or type your name and address.
This will be your mailing label.

A complete and correct order will
save you days of waiting.

Name: _____

Street: _____

_____ Apt: _____

City: _____

State: _____ Zip: _____

Make sure that both sides of this
form have been filled out.

U.S. and Canadian Orders

By Phone:

1 - 800 - 338 - 0376

Call this toll-free number between
8AM and 8PM Eastern Standard Time
and place your order using your Visa
or MasterCard. **Use this number
only to place an order for accessory
items listed on this order form.**

By Mail:

Detach the information at the left and
mail the payment to Thomson
Consumer Electronics, Inc., at:

Video Accessories
PO Box 8419
Ronks, PA 17573

Most orders are shipped UPS within
72 hours. If it is not possible to ship
within 30 days, we will notify you.

**For more current information on
these accessories, write to the
following address:**

Video Accessories Customer Service
Thomson Consumer Electronics, Inc.
Distributor & Special Products
2000 Clements Bridge Rd
Deptford, NJ 08096-2088

International Orders

This offer is valid only in the U.S.
Send your request for price quotation
(not orders) to:

International Customer Service
Thomson Consumer Electronics, Inc.
Distributor & Special Products
2000 Clements Bridge Rd
Deptford, NJ 08096-2088 USA

References

Glossary

Antenna

A device used to receive broadcast signals from TV stations.

Audio

Sound reproduced by the TV.

Audio/video cables

Cables that carry sound and picture signals from one component to another.

Autocolor

Adjusts the Color and Tint of the picture signals to the proper balance for all channels.

AutoProgram

A procedure that automatically adds only the active channels in your area to the TV's memory.

Brightness

Light and dark areas of a picture.

Channel Label

A name that is given to a specific channel number.

Channel Memory

Where channels are stored after they have been placed in memory. Channels can be added or deleted from channel memory.

Commerical Skip

A feature that allows the viewer to scan other channels during commercials, and return to the original channel after a timed break.

Disabled

Turns off feature.

Display

A word, words or graphics that appear on the TV screen.

Inputs

Located on back of the TV for connection of a component to the TV. Used to route signals into the TV from components.

Jacks

Connectors located on the back of the TV for connecting antennas or other components.

Menu

A listing of features, controls, and adjustments shown on the TV screen that can be changed.

Mono

Slang for monaural. Sound comes through one channel.

On-Screen Display

See Display.

Outputs

Located on back of the TV for connection of another component. Signals are routed out of the TV into the other component.

Picture Reset

Returns all of your TV picture adjustments back to the factory setting.

S-VHS

Super Video. A format used by some VCRs and Camcorders which improves the picture quality. S-VIDEO appears on the TV screen when you use this feature.

S-VIDEO

See S-VHS.

Sharpness

Clearness of a picture.

SKIP:30

See Commerical Skip.

Signal

Electrical waves that are sent or received through cables or through the air.

Sleep Timer

A feature where the TV can be set to turn off at a specific time within four hours.

Stereo

Sound signals that come through two channels (left and right).

Tone

Quality of the sound.

Unusable Signal

A message that shows no signal is coming in on the video input.

Video

Picture reproduced by the television.

References

Limited Warranty

What your warranty covers:	Any defect in material or workmanship.
How long after your purchase:	90 days for labor charges. One year for parts. Two years for picture tube. The warranty period for rental units begins with the first rental.
What we will do:	Pay any Authorized RCA Television Servicenter the labor charges to repair your television. Pay any Authorized RCA Television Servicenter for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.
How you get service:	For screen sizes of 20" and smaller: Take your RCA television to any Authorized RCA Television Servicenter. For screen sizes larger than 20": Request in-home service from any Authorized RCA Television Servicenter. To identify your nearest Authorized RCA Television Servicenter, ask your Dealer, look in the Yellow Pages, or call 1-800-336-1900. Show the service technician your evidence of purchase date.
What your warranty <i>does not</i> cover:	Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your Dealer.) Installation and related adjustments. Signal reception problems not caused by your television. Damage from misuse or neglect. Remote control batteries. A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes. A television purchased or serviced outside the USA.
What to do with the Product Registration Card:	Please complete and mail the Product Registration Card packed with your set. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
How state law relates to this warranty:	This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
Canadian Purchases:	The Canadian Warranty applies in place of this Warranty.

References

Index

- A**
- Adding Channels to Memory3,11
 - Adjust Menu
 - Autocolor8
 - Bright8
 - Color8
 - Picture Reset8
 - Sharpness8
 - Tint8
 - Adjusting
 - Picture7
 - Picture Settings8
 - Sound Settings9,10
 - Alarm Channel14
 - Alarm Clock14
 - Alarm Display18
 - Alarm Menu14
 - Alarm14
 - Alarm Channel14
 - Off Time14
 - On Time14
 - Set Clock3
 - Antenna16
 - Audio23
 - Audio/video cables23
 - Autocolor8,23
 - Autoprogram3,11,23
- B**
- Batteries (Remote)2
 - Brightness8,23
 - Buttons
 - + and -2,3,4,5,6
 - Menu4,5,6
 - Number6
 - Remote Control4,6
 - TV Front Panel4,17
- C**
- Cable or Air Feature16
 - Cancelling Sleep Timer13
 - Captioning, Closed15
 - Cautionsi
 - Channel Label12,23
 - Channel Memory3,11,23
 - Channel Name Display18
 - Channel Number Display18
 - CHANNEL Up/Down Buttons
 - Remote4,6
 - TV17
 - Channels
 - Adding11
 - Deleting11
 - Naming12,18
 - Placing in Memory3,11
 - Checks and Adjustments19,20
 - Cleaner21
 - Clock3,14
 - Closed Captioning15
 - Color8
 - Colors (Menus)5
 - Commerical Skip6,23
 - Button6
 - Display18
 - Contents1
 - Controls
 - TV Front Panel17
 - Remote6
 - Controls Menu
 - Closed Captioning15
 - Picture7
 - Sleep Timer13
 - Stereo10
 - Tone10
- D**
- Delete Channels from Memory11
 - Disabled23
 - DISPLAY Button6,18
 - Displays (On-Screen)18
 - Alarm, Channel Name, Channel Number, Commerical Skip, Mute, Sleep, Stereo, S-VIDEO 00, Time, Unusable Signal, VIDEO 00, Volume
 - DONE Button6
- E**
- Erase a Name12
 - Erasing Channels from Memory11
- F**
- Front Panel Controls4,17
- G**
- Glossary23
- H**
- Hook up TVConnections Guide
- I**
- INPUT Button6
 - Inputs23
- J**
- Jacks23
- L**
- Limited Warranty24
- M**
- Menu Buttons4,5,6
 - Menu Colors5
 - Mono9,23
 - Moving through the Menus5
 - MUTE Button6
 - Mute Display18
- N**
- Naming the Channels12
 - Number Buttons6
- O**
- Off Time (Alarm)14
 - On-Screen Displays18,23
 - On Time (Alarm)14
 - Order Form for Parts21,22
 - Outputs23
- P**
- Picture7,8
 - Picture Adjustments7,8
 - Picture Settings7,8
 - Picture Reset8
 - Place Channels in Memory3,11
 - POWER Button3,4,6
 - PREV CHAN Button6
 - Previous Channel Button6
 - Product Registrationi
 - Put Batteries in Remote2
- Q**
- Quick Guide to Your TV2,3,4,5
- R**
- References17-25
 - Glossary23
 - Order Form for Parts21,22
 - Trouble Checks19,20
 - Warranty24
 - Registration Cardi
 - Remote Control
 - Batteries2
 - Buttons6
 - Order Form19
 - RESET Button6
- S**
- S-VHS23
 - S-VIDEO Connector18,19,23
 - Safety Informationi
 - Screen Displays18
 - Service24
 - Set Clock3
 - Set Time3
 - Setting Cable/Air16
 - Setting the Sleep Timer13
 - Setup Menu
 - Autoprogram3,11,23
 - Cable/Air16
 - Channel Label12
 - Channel Memory3,11
 - Speakers10
 - Sharpness8
 - Signal23
 - SKIP:30 Button6,23
 - Sleep Display13,18
 - Sleep Timer13
 - Sharpness8
 - Sound9,10
 - Speakers10
 - Startup2,3
 - Stereo9,23
 - Stereo Display18
 - S-VID 00 Display18
- T**
- Time
 - Alarm14
 - Clock3
 - Sleep Timer13
 - Time Display18
 - Tint8
 - Tone9,23
 - Tour of the Remote4
 - Trouble Checks19,20
 - Turn on Alarm14
 - TV
 - Buttons4,17
 - Guide to2,3,4
 - Time3
- U**
- Unusable Signal Display18,23
- V**
- Video23
 - VIDEO 00 Display18
 - Volume Display18
 - VOL + and - Buttons
 - Remote4,6
 - TV17
- W**
- Warningi
 - Warranty24
 - Watching Closed Captioning15

Thomson Consumer Electronics is one of the first corporations to take part in a special program to improve our environment.

Thomson has committed itself to a voluntary initiative program through the U.S. Environmental Protection Agency. The program's purpose is to reduce toxic air emissions and to promote pollution prevention.

Thomson's involvement includes a concentrated effort to phase in new water-based paints to replace solvent-based paints normally used in our manufacturing operations. The key benefit of these new paints is to significantly reduce air pollution.

Thomson Consumer Electronics remains committed to improving our manufacturing process through changes like these to help our environment. At Thomson, on-going efforts to maintain our valuable natural resources will continue to be a priority.

If your TV needs service, please contact your dealer or the nearest servicer from the yellow pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product. *See how to get service on page 24.*

©1993 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
Printed in the U.S.A.
Part Number 1Q57 372-05A

Thomson Consumer Electronics
600 N Sherman Dr, PO Box 1976
Indianapolis, IN 46206-1976