

# REAL

## COLOR TV OWNERS' MANUAL



### IMPORTANT INFORMATION

### TABLE OF CONTENTS

### QUICK GUIDE TO YOUR TV

### USING YOUR TV AND REMOTE

### ADJUSTING YOUR TV

### USING ADVANCED FEATURES

### REFERENCES

1

2-5

6-10

16-19

20-27

28-37


# Important Information

## WARNING

To prevent fire or shock hazard, do not expose this TV to rain or moisture.



<b>WARNING</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	<b>TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b>
<p>This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.</p>	<p>This symbol indicates important instructions accompanying the product.</p>

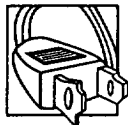

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

## Cautions



Do not defeat the safety feature of the plug. The wide blade fits into the wall socket only one way. If you need an extension cord, make sure it matches the plug of the TV.

Operate TV only on 120 volts, 60 Hz AC power (normal house power).

For safety reasons, make sure any equipment or accessories connected to this product bears the UL listing mark or CSA certification mark. If in doubt, contact qualified service personnel.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

## Note To Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you ever need them. The numbers are located on the back of the TV.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/ Address/Phone: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

# Table of Contents

<b>Important Information</b>	Warning, Product Registration _____	i
<b>Quick Guide to Your TV</b>	Startup _____	2-3
	Hook up your TV, Plug in the TV, Put Batteries in the Remote, Turn on the TV, Place Channels into Memory, Set the Time	
	Basic Tour of the Remote _____	4
	Basic Button Layout and Functions	
	Menu Basics _____	5
	Colors, Menu Buttons, Moving through the Menus	
<b>Using Your TV and Remote</b>	With Remote Buttons _____	6-7
	With VCRs _____	8-11
	With a Cable Box _____	12-13
	With a Laserdisc Player _____	14
	With Audio Equipment _____	15
<b>Adjusting Your TV</b>	Overall Picture _____	16
	Picture Settings _____	17
	Color, Tint, Brightness, Sharpness, Autocolor, Picture Reset	
	Sound Settings _____	18-19
	Stereo, Tone, Speakers	
<b>Using Advanced Features</b>	Placing Channels in Memory/ Autoprogram _____	20
	Naming the Channels _____	21
	Setting the Sleep Timer _____	22
	Setting the Alarm Clock _____	23
	Watching Picture-in-Picture _____	24-25
	Watching Closed Captioning _____	26
	Setting Your TV for Antenna or Cable _____	27
<b>References</b>	Front Panel Buttons _____	28
	Displays on the Screen _____	29
	Trouble Checks _____	30-31
	Limited Warranty _____	32
	Order Form for Parts _____	33-34
	Glossary _____	35
	Index _____	36-37


# Quick Guide to Your TV

## Startup

The steps below will get your TV connected and ready for watching.  
*For more details, see the page numbers listed.*


### 1. Hook up your TV

*Details are in the Connections Guide.*

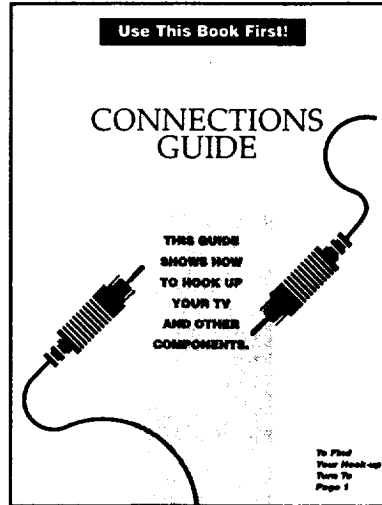


Hook up any antennas, cables or other equipment to your TV before you follow the steps below.

### 2. Plug in the TV

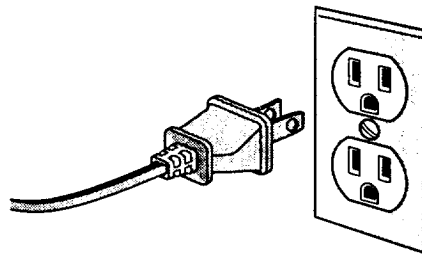

Plug the cord into the outlet, matching the wide and the small end of the plug with the outlet.

### 3. Put Batteries in the Remote

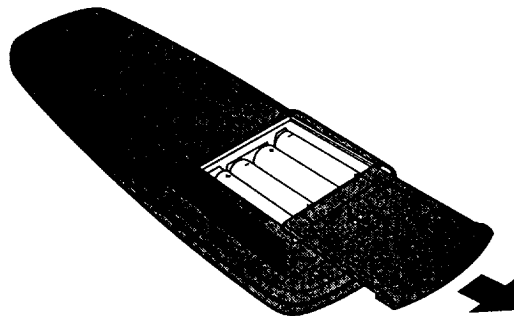


- A. Pull off the cover of the battery compartment.
- B. Place the four AAA batteries as shown, matching the + and - end of each battery in the compartment.
- C. Replace the cover.

# Quick Guide to Your TV


## Startup

### 4. Turn on the TV

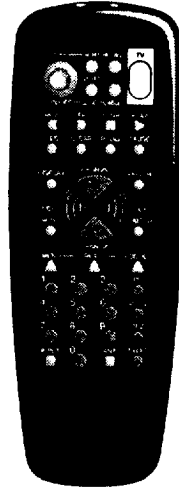

Press TV on the remote.


OR

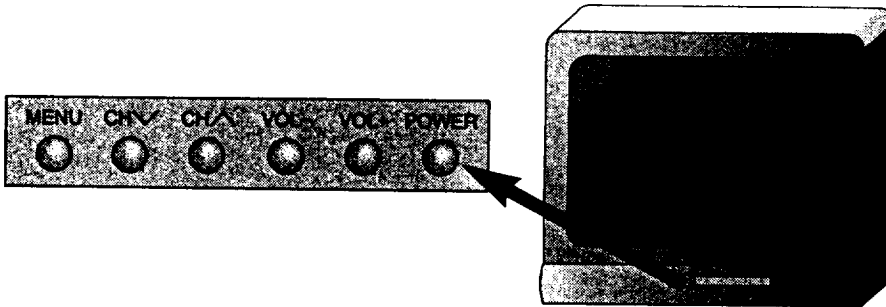

Press POWER on the TV.


### 5. Place all available channels in memory (AutoProgram)

*Details for adding and deleting channels are on page 20.*

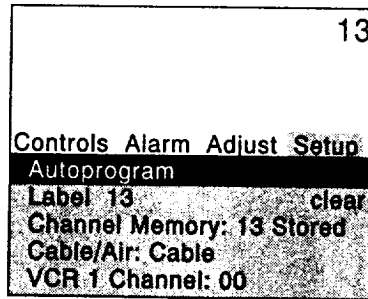

- A. Press MENU until the Setup menu is selected. This menu is white.
- B. Press + to start placing channels in the TV's memory.
- C. Wait until TV has cycled through all the channels and returns to original channel.
- D. Press DONE.

### 6. Set the Time

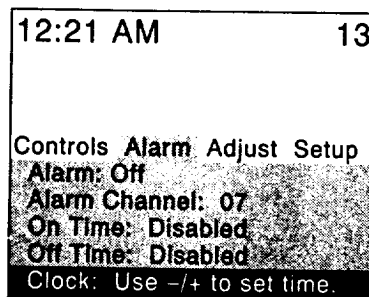

- A. Press MENU until the Alarm menu is selected. This menu is green.
- B. The Clock is automatically highlighted the first time you set it. If it is not, press CHANNEL down to highlight it.
- C. Press - to set the hour.
- D. Press + to set the minutes.
- E. Press DONE.

# Quick Guide to Your TV

## Basic Tour of the Remote

Basic information about your remote is shown below. This will give you a general idea of how your remote works. *For more details, see pages 6–15.*

### TV Power Button

Turns the TV on.  
Sets the remote to control the TV.

### Volume and Channel Controls

*Details are on page 6.*

Operates TV when remote is set to control the TV.  
Operates the TV and advanced features.



### Component Buttons

*Details are on pages 8–15.*

Controls components such as a VCR, laserdisc player, audio equipment, and a cable box.

### Menu Buttons

*See next page for details.*

Changes the menus and features on the screen.

### Picture-in-picture buttons (Not on all models)

*Details are on pages 7 and 24–25.*

Used to watch two pictures on the TV at the same time.




# Quick Guide to Your TV

## Menu Basics

General information about using the on-screen menu system is shown below. Details on using the remote buttons are on pages 6-7. Many menu items are explained in detail in *Using the Advanced Features* starting on page 20.

### Colors

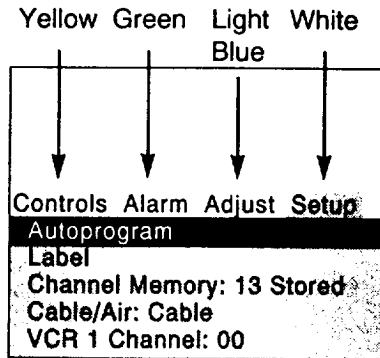


Press **MENU** repeatedly to see each of the four menu colors.


Each menu has a different color background as shown at the left.

### Menu Buttons

These buttons are used with the TV's menus to adjust the features. You can use the menu buttons on the remote or the front of the TV.

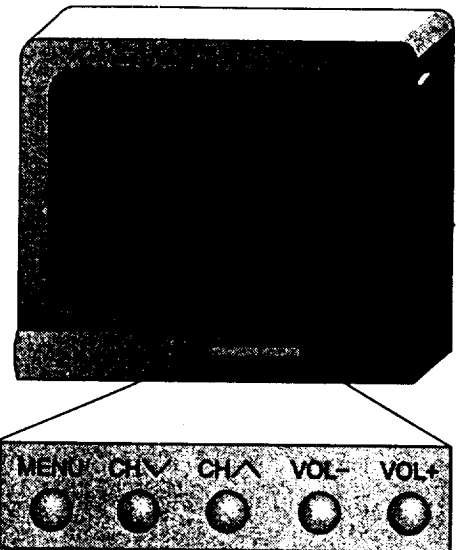

### Moving through the Menus

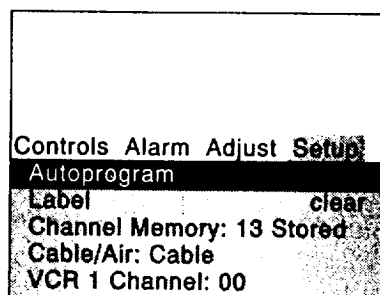

1. Press **MENU** to move from menu to menu.
2. Press **CHANNEL** up and down to move up and down through the features in the menu.
3. Press **VOLUME +** and **-** to move left and right on the menu lines.

# Using Your TV and Remote

## With Remote Buttons



### 1. Power Buttons

#### OFF

Turns off the TV.

Turns off compatible VCRs.

#### ON/OFF

Turns on a component after a component button is pressed.

Turns off components except audio equipment.

#### TV

Turns on the TV.

Shows the displays on the screen.

Sets the remote to control the TV.

*See Using the Remote with a VCR, Cable Box, Laserdisc Player and Audio equipment on pages 8–15.*

### 2. TV Buttons

#### CLEAR

Clears menus and displays from the screen.

#### DISPLAY

Shows displays on the screen.

Clears menus from the screen.

#### SKIP:30 (Commercial Skip)

Allows you to scan other channels during commercials.

Each press adds 30 seconds. TV switches back to original channel when time runs out. Press CLEAR to cancel SKIP.

#### VOL + and -

(Volume up and down)  
Raises and lowers sound.

Moves left and right on a menu line. *See Menu Basics on page 5.*

Changes a feature setting.

#### MUTE

Switches the TV sound on or off.

#### CHAN ^ and v

(Channel up and down)

Scans up and down through channels in the TV's memory.

Moves up and down menus. *See Menu Basics on page 5.*

Moves through channels in VCR's memory.

#### PREV CHAN (Previous Channel)

Changes back and forth between two channels.

Select a channel and then select another. Press PREV CHAN to switch between the two channels.

#### MENU

Shows menus on the screen and moves from menu to menu.

#### RESET

Returns the picture adjustments to the original settings.

#### DONE

Saves the setup of a feature and removes the menu from the screen.

### 3. Number Buttons (0-9)

Selects any channel number.

Two numbers must be pressed for each channel. Press 0 and 6 for channel 6.

For three digit channels, press and hold 1 until 1- appears on the screen. Then press the other two numbers.



# Using Your TV and Remote

## With Remote Buttons



### 4. Component Buttons

AUDIO, VCR1, VCR2, LDISC, CABLE, TV

Sets the remote to control the component.

VCR2 and LDISC can only be programmed for one component: either a Laserdisc Player or a VCR.

*See Using the Remote with a VCR, Cable Box, Laserdisc Player and Audio equipment on pages 8-15.*

### 5. VCR, Laserdisc Player, and Audio Equipment Buttons

**REW (Rewind)**

Rewinds a tape or laserdisc.

Searches backward while tape or laserdisc is playing.

**FF (Fast Forward)**

Fast forwards a tape or laserdisc.

Searches forward while tape or laserdisc is playing.

**STOP**

Stops tape or laserdisc.

**PLAY**

Plays tape or laserdisc.

**REC (Record)**

Starts recording onto tape.

**CLEAR**

Clears items from timer programs and VCR's clock.

**PROG (Program)**

Sets clock and programs timer on VCR.

**PAUSE**

Pauses tape or laserdisc.

### 6. Signal Buttons

**INPUT**

Switches between the TV channels and Video 00/S-VID 00.

**ANT (Antenna)**

Used as TV/VCR button when remote is set to control the VCR.

### 7. Picture-in-Picture Buttons (Not on all models)

**PIP (Picture-in-Picture)**

Turns the small picture on or off.

**MOVE**

Moves the small picture to the next corner.

**FRZ (Freeze)**

Freezes or unfreezes the small picture.

**SWAP**


Switches the channel in the small picture with the big picture.

# Using Your TV and Remote

## With VCRs: Programming the Remote

Refer to the Connection Book or the VCR's owners manual to hook up your VCRs. The remote may need to be programmed for your VCR. Use the codes below or on the sheet packed in with your remote.

### 1. Test the remote

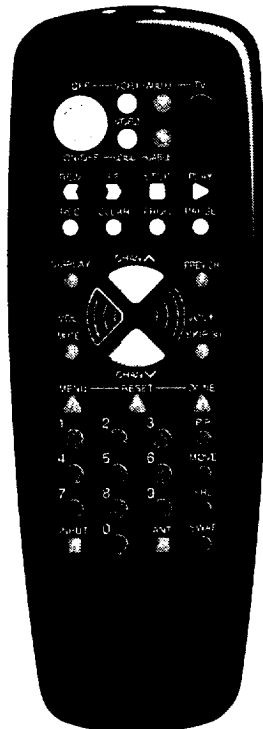

- A. Press VCR1 or VCR2 to turn the VCR on.
- B. Press the VCR buttons shown at the left. If your VCR does not work, program VCR1 or VCR2 with a VCR code from the list below.

### 2. Program the remote for your VCRs

- A. Point the remote at the VCR and hold VCR1.
- B. Enter the code for your brand from the code list below.
- C. Release VCR1.
- D. Press ON/OFF. If nothing happens, try pressing VCR1 and then ON/OFF.
- E. Repeat A–D with another code if the first one does not work or if a second VCR is connected.

### VCR Codes


Aiwa .....	15	Lloyd .....	15	Sanyo.....	02,12
Akai .....	03,22,23	Magnavox .....	08,29	Scott.....	04,13,41
Audio Dynamics.....	14,16	Marantz .....	02,08,14,16,29,30	Sears .....	02,05,09,12,18,19,35,43
Broksonic .....	10	Marta .....	09	Sharp .....	06,24,39
Canon .....	08	MEI .....	08	Shintom .....	17,26,31
Capehart.....	01	Memorex.....	08,09,12,15	Sony.....	17,26,38
Citizen .....	09	MGA .....	04,27	Sylvania .....	08,15,29
Craig.....	07,12	Minolta .....	05,35	Symphonic .....	02,15
Curtis Mathes.....	00,08,15	Mitsubishi .....	04,05,27,35,40	Tashiko .....	09
Daewoo .....	13	Montgomery Ward.....	06	Tatung.....	30
dbx .....	14,16	MTC.....	07,15	Teac.....	15,30
Dimensia .....	00	Multitech.....	07,15,31,32	Technics.....	08
Dynatech.....	15	NEC .....	02,14,16,30	Teknika .....	08,09,15,21
Emerson ...	09,10,13,15,20,23,24,34,41	Panasonic.....	08	Toshiba .....	05,13,19
Fisher .....	02,12,18,19,43	Pentax.....	05,35	Totevision.....	07,09
Funai.....	15	Philco .....	08,29	Unitech .....	07
GE .....	00,07,08,32,37	Philips.....	08,29	Vector Research.....	14,16
Goldstar.....	09,14	Pioneer .....	05,16,33	Victor .....	16
Harman Kardon.....	14	ProScan.....	00	Video Concepts .....	14,16
Hitachi.....	05,15,35,36	Quartz .....	02	Videosonic.....	07
Instant Replay .....	08	Quasar .....	08	Wards.....	
JCL .....	08	RCA .....	00,05,07,08,28,35,37	.....	05,06,07,08,12,13,15,25,31,35
JCPenney.....	02,05,07,08,14,16,30,35	Realistic .....	02,06,08,09,12,15,19,43	Yamaha.....	02,14,16,30
JVC.....	02,14,16,30	Samsung.....	07,13,22,32,42	Zenith.....	11,17
Kenwood.....	02,14,16,30	Sansui .....	16		

# Using Your TV and Remote

## With VCRs: Setting the VCR1 Channel


The VCR 1 Channel works with VCR1 on the remote. If the VCR 1 Channel is set, pressing VCR1 selects the channel to see the VCR picture. The VCR 1 Channel setting depends on which diagram you have used from the Connection Guide. If you want to turn this feature off, set the VCR 1 Channel to Disable. Refer to the chart below for your setting.

### 1. Select the Setup Menu

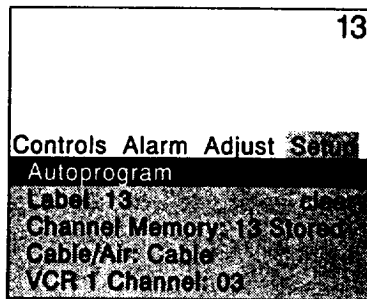


- A. Press TV to set the remote to control the TV.
- B. Press MENU to select the Setup menu. This menu is white.

### 2. Highlight VCR1 Channel

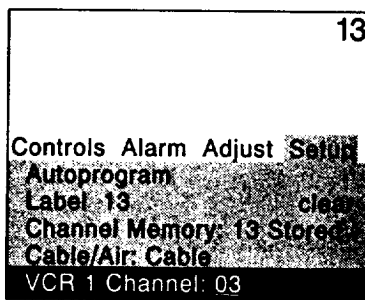

- A. Press CHANNEL down to highlight the VCR 1 Channel.
- B. Press + to highlight the channel.

### 3. Enter channel number

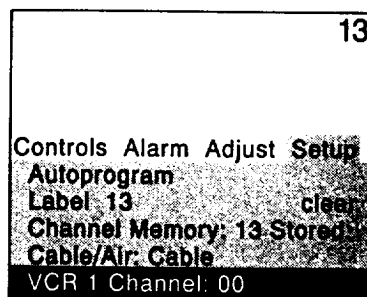

- A. Enter channel 00, 03, or 04. Choose your setting from the chart below. Press CHANNEL down until "Disabled" is displayed to turn the feature off.
- B. Press DONE to save the setting.

### 4. Press DONE to save the setting


Diagram used from the Connection Guide:	Set VCR1 Channel to:
1B, 1C, 2B, 2C, 3B, 3C, 4C, 5C	00
4B, 5B	3 or 4 (same as 3/4 switch)

# Using Your TV and Remote

## With VCRs: Basic Operation

If the remote operates your VCR, this page and the next will show you how to use it for basic functions. See page 7 for more details on buttons used with your VCR.

### Turn on the VCR

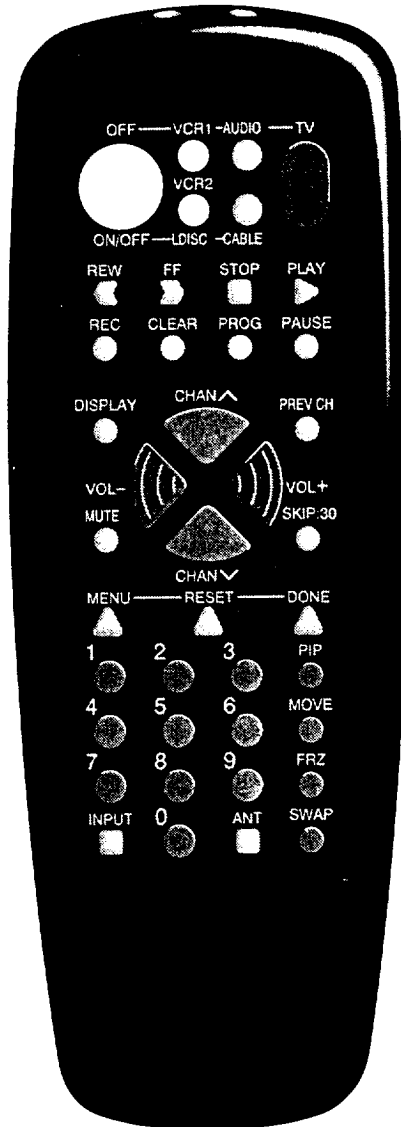

### Turn off the VCR

- A. Press channel 00 on the TV to see what the VCR is doing.
- B. Press VCR1 or VCR2 to set the remote to control the VCR.
- C. Press ON/OFF to turn on the VCR if it did not turn on when you pressed VCR1 or VCR2.

- A. Press VCR1 or VCR2 to set the remote to control the VCR.
- B. Press ON/OFF.

# Using Your TV and Remote

## With VCRs: Basic Operation

If the remote operates your VCR, this page and page 10 will show you how to use it for basic functions. See page 7 for more details on buttons used with your VCR.

### Record one TV program and watch another



- A. Press VCR1 or VCR2 to set the remote to control the VCR.
- B. Tune the VCR to the channel you want to record using CHANNEL up and down or pressing two number buttons.
- C. Press RECORD to start recording.
- D. Press TV/VCR on the VCR.
- E. Press TV to set the remote to control the TV.
- F. Press CHANNEL up or down to change channels on the TV.
- G. To see the channel you are recording, tune the TV back to channel 00.

### Watch a tape in your VCR

- A. Turn on VCR.
- B. Insert a tape in the VCR.
- C. Press PLAY to start the tape playing.
- D. Press STOP when you are finished.
- E. Press REW to rewind the tape.

# Using Your TV and Remote

## With a Cable Box: Programming and Basic Operation

Refer to the Connection Book or contact your cable company to hook up your cable box. If you have a cable box with its own remote, then you may also be able to use the TV's remote with your cable box. Use the codes below or on the sheet packed in with your remote.

### Program the remote for your cable box



- A. Point the remote at the cable box and hold CABLE.
- B. Enter the code numbers for your brand from the list below.
- C. Release CABLE.
- D. Press ON/OFF to turn it on. If nothing happens, try pressing CABLE and then ON/OFF.
- E. Repeat A-D with another code if the first one does not work.

### Basic Operation: Turn on the Cable Box

- A. Tune TV to channel 02, 03, 04, 05, or 06--the cable box channel.
- B. Point remote at the cable box and press CABLE.
- C. Press ON/OFF to turn it on.
- D. Press CHANNEL up or down to change channels on the cable box.

### Turn off the Cable Box

- A. Press CABLE.
- B. Press ON/OFF to turn it off.

### Cable Box Codes


ABC.....	22,46	NSC.....	09	Sprucer.....	27
Anvision.....	07,08	Oak.....	01,16,38	Starcom.....	46
Cablestar.....	07,08	Oak Sigma.....	16	Sylvania.....	11
Eagle.....	08	Panasonic.....	03,27,39	Teknika.....	06
Eastern International.....	02	Philips.....	07,08,19,21,26,28,29,32,33,40,41	Texscan.....	10,11
General Instrument.....	04,05,15,23,24,25,30,36,46	Pioneer.....	18,20,44	Tocom.....	17,21,49,50
Hamlin.....	12,13,34,48	Randtek.....	07,08	Unika.....	31,32,41
Hitachi.....	37,43,46	RCA.....	00,27	Viewstar.....	07,08,19,21,26,28,29,32,33,40,41
Jerrold.....	04,05,15,23,24,25,30,36,45,46,47	Regal.....	12,13	Warner Amex.....	44
MACOM.....	37,43	Regency.....	02,33	Zenith.....	14,42
Magnavox.....	07,08,19,21,26,28,29,32,33,40,41	Samsung.....	44		
		Scientific Atlanta.....	03,22,35		
		Signature.....	46		

# Using Your TV and Remote

## With a Cable Box: Setting the Cable Channel


The Cable Channel works with **CABLE** on the remote. If the Cable Channel is set, pressing **CABLE** selects the channel to see cable channels. The Cable Channel setting depends on which channel your cable box must be on to see cable channels. The channels usually used are 02, 03, 04, 05 or 06. *Consult your cable company for more information.*

### 1. Select the Setup menu

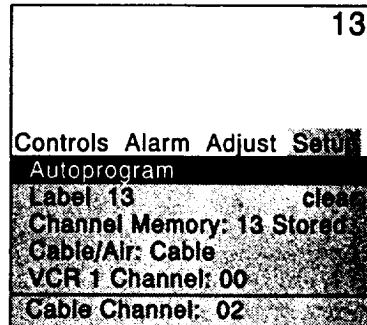


- A. Press **TV** to set the remote to control the TV.
- B. Press **MENU** to select the Setup menu. This menu is white.

### 2. Highlight Cable Channel

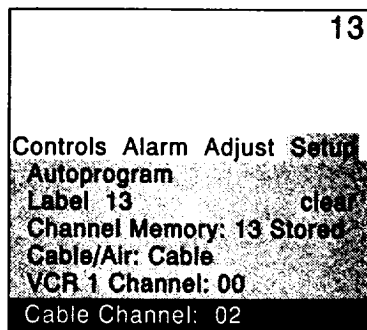

- A. Press **CHANNEL** down to move down the menu until Cable Channel is highlighted.
- B. Press **+** to underline the channel.

### 3. Enter channel number

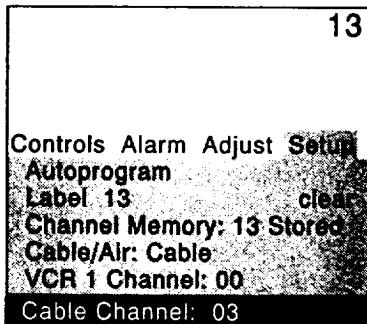

- A. Enter the number for your cable box, either 02,03,04,05, or 06. Press **CHANNEL** down until "Disabled" is displayed to turn this feature off.
- B. Press **DONE** to save the setting.

### 4. Press **DONE**

# Using Your TV and Remote

## With a Laserdisc Player: Programming and Basic Operation

Refer to your Laserdisc Player owner's manual to hook up your Laserdisc Player. The remote may need to be programmed for your laserdisc player. Use the codes below or on the sheet packed in with your remote.

### Program the remote for your Laserdisc Player

### Basic Operation

### Laserdisc Player Codes

Pioneer .....	33
Proscan .....	33
RCA .....	33



- A. Point the remote at the laserdisc player and hold LDISC.
- B. Enter the code for your brand from the code list below.
- C. Release LDISC.
- D. Press ON/OFF. If nothing happens, try pressing LDISC and then ON/OFF.

- A. Tune TV to channel 00, 03, or 04.
- B. Point the remote at the laserdisc player and press LDISC.
- C. Press ON/OFF to turn it on.
- D. Use the buttons on the remote that relate to laserdisc player functions. Not all buttons highlighted may work with your laserdisc player.
- E. Press ON/OFF to turn it off.



# Using Your TV and Remote

## With Audio Equipment: Programming and Basic Operation

Refer to the Connection Book or your Audio equipment owner's manual to hook up your audio equipment. Your remote controls only RCA audio equipment such as a radio, CD player, tape player, turntable, or amplifier. The remote may need to be programmed for your equipment. Use the codes below or on the sheet packed in with your remote.

### Program the remote for audio equipment

### Basic Operation

### Audio Codes

#### RCA/ Dimensia

AM/FM.....	.03
CD.....	.07
Tape.....	.06
Phono.....	.05
Aux.....	.04



- Point the remote at the audio equipment and hold AUDIO.
- Enter the code from the code list.
- Release AUDIO.
- Press ON/OFF to turn it on. If nothing happens, try pressing AUDIO and then ON/OFF.
- Repeat A-D with another code if the first one does not work.


- Point the remote at the audio equipment and press AUDIO.
- Press ON/OFF to turn it on.
- Use the buttons on the remote that relate to audio functions. Not all buttons highlighted may work with your equipment.
- Turn the audio equipment off using the audio component's power off button.

# Adjusting Your TV

## Overall Picture


Follow the steps below to lighten or darken the overall picture without changing the color levels.

### 1. Select the Controls Menu

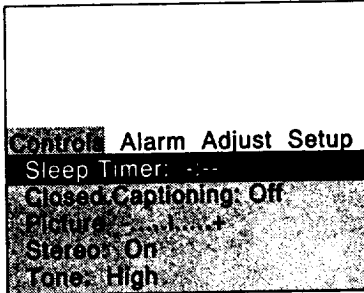


Press MENU to select the Controls menu. This menu is yellow.

### 2. Highlight Picture

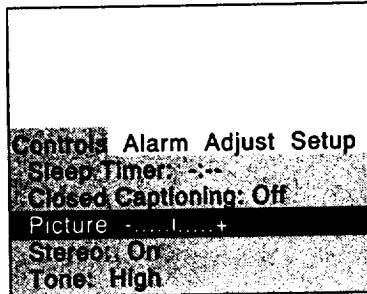

Press CHANNEL down to highlight Picture.

### 3. Use VOLUME + and - to adjust the Picture

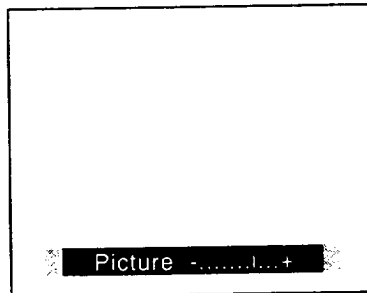

Press + to lighten the picture.

OR

Press - to darken the picture.

### 4. Press DONE


Press DONE to save the setting.

# Adjusting Your TV

## Picture Settings

Follow the steps below to change the picture on the screen to your personal setting. The chart at the bottom of the page explains your options.

### 1. Select the Adjust Menu

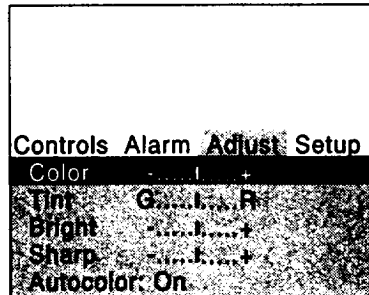


Press **MENU** repeatedly to select the Adjust menu. This menu is light blue.

### 2. Highlight item to change

Press **CHANNEL** down to highlight the picture item you want to adjust.

### 3. Use **VOLUME** + or – to adjust each item

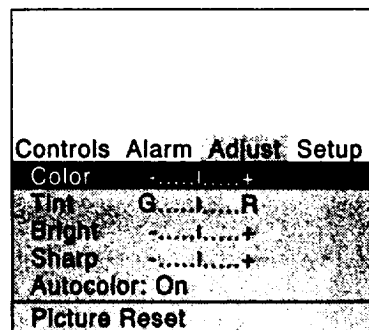

Press **+** or **–** to adjust each item.

### 4. Press **DONE**

Press **DONE** to save the setting.


	Press <b>VOLUME</b> + to:	Press <b>VOLUME</b> – to:
<b>Color</b>	Increase color richness	Lower color to black and white
<b>Tint</b>	Give red tint to skin color	Give green tint to skin color
<b>Bright (Brightness)</b>	Add more light to dark parts of the picture	Add more dark to light parts of the picture
<b>Sharp (Sharpness)</b>	Show cleaner, clearer images	Make picture more smooth
<b>Autocolor</b>	Turn on to keep Color and Tint in proper balance each time you change channels	Turn off for manual adjustment of Color and Tint
<b>Picture Reset</b>	Reset the picture back to the original settings	Reset the picture back to the original settings

# Adjusting Your TV

## Sound Settings: Stereo and Tone


Follow these steps to adjust the Stereo or Tone of your TV. The chart below explains your options.

### 1. Select the Controls Menu

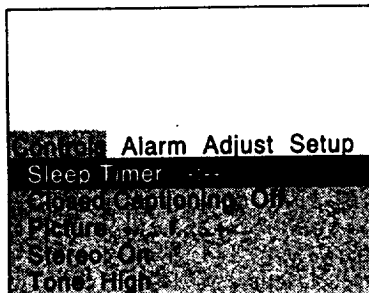


Press **MENU** to select the Controls menu. This menu is yellow.

### 2. Highlight item to change

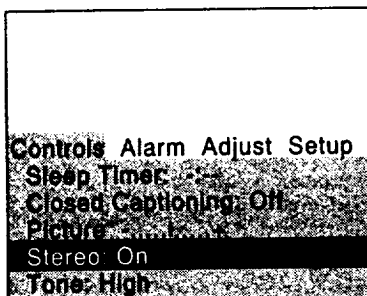

Press **CHANNEL** down to highlight the sound item you want to adjust.

### 3. Use **VOLUME** + or - to adjust each item

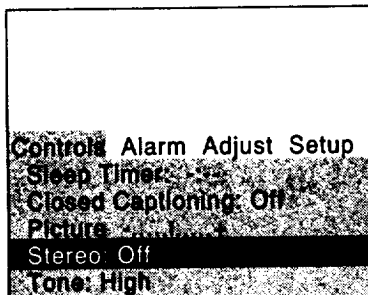

Press **+** or **-** to adjust each item.

### 4. Press **DONE**

Press **DONE** to save the setting.


<b>Stereo</b>	<b>On</b> Sound is automatically reproduced in stereo or mono, whichever the TV station is broadcasting.	<b>Off</b> Sound is reproduced in mono.
<b>Tone</b>	<b>High</b> High pitched sounds are louder.	<b>Low</b> Low pitched sounds are louder.

# Adjusting Your TV

## Sound Settings: Speakers


Follow the steps below to turn the speakers on or off in your TV. The chart below explains your options.

### 1. Select the Setup Menu

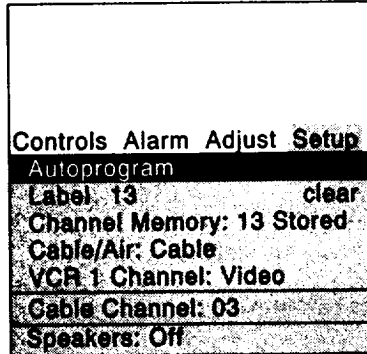


Press MENU repeatedly to select the Setup menu. This menu is white.

### 2. Highlight speakers

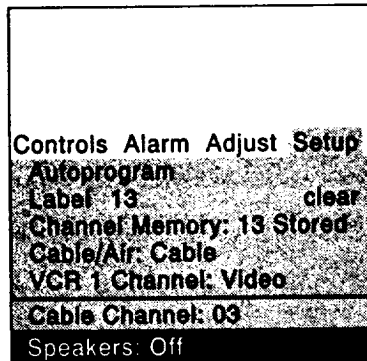

Press CHANNEL down until Speakers is highlighted.

### 3. Turn Speakers on or off

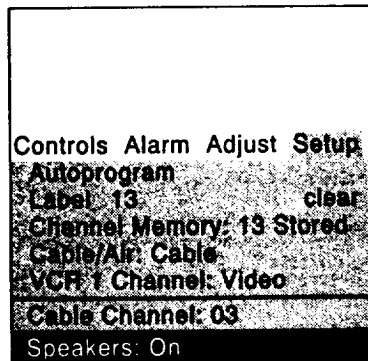

Press + or - to turn the speakers on or off.

### 4. Press DONE

Press DONE to save the setting.

Speakers	On	Off
	The sound comes from the TV's internal speakers.	No sound comes from the TV.


# Using Advanced Features

## Placing Channels in Memory (Autoprogramming)


Only channels 2-13 appear in the TV's memory when you first turn it on. The channels available in your area must be programmed into the TV's memory when you hook up your TV. Using CHANNEL up or down allows you to scan through these channels.

You may want to add or delete a few channels if some stations have weak signals or were off the air when the TV was programmed. Refer to the *Add or Delete Channels* section below.


### 1. Place channels in memory (AutoProgram)

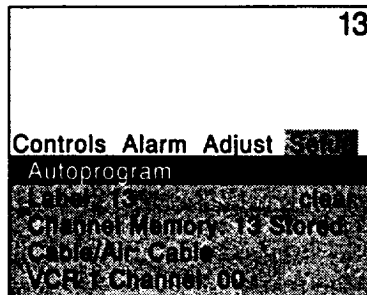


- A. Hook up an antenna, cable or components before you begin these steps or you will not be able to add channels into memory.
- B. Press MENU repeatedly to select the Setup Menu and highlight Autoprogram. This menu is white.
- C. Press + to start the TV adding all active channels into memory.
- D. Wait until the TV has cycled through all the channels and returns to the original channel.
- E. Press DONE.

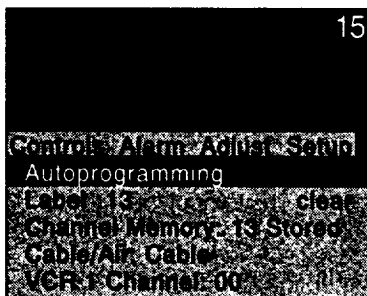

### 2. Add or delete channels

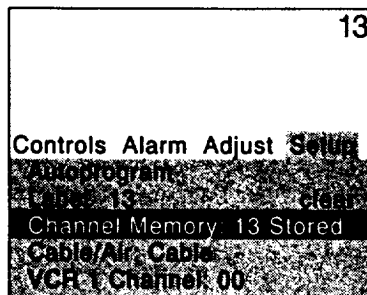

- A. Press MENU repeatedly to select the Setup menu. This menu is white.
- B. Press CHANNEL down to highlight Channel Memory.
- C. Press + to underline the channel number.
- D. Select the channel number you want to add or delete with the number buttons.
- E. Press + to add or delete a channel (you will see Stored on the screen when added and Erased when deleted).
- F. Repeat D and E for more channels.
- G. Press DONE.

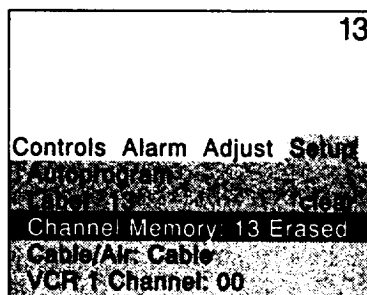


# Using Advanced Features


## Naming the Channels

You can name the channels using the character list below. **Full** appears beside Label when the memory is used up. **Fixed** appears beside Label for channel 00--it cannot be named.


### 1. Name a channel

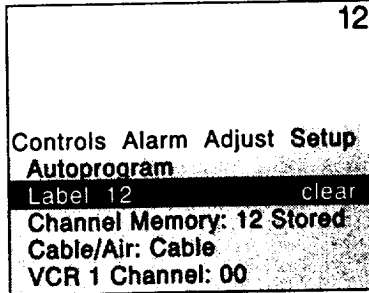

- A. Press MENU repeatedly to select the Setup menu. This menu is white.
- B. Press CHANNEL down to highlight Label.
- C. Press + to underline the channel number.
- D. Select the channel number with the number buttons.
- E. Press + to underline the first character of the name.
- F. Choose the character using CHANNEL up or down.
- G. Repeat E-F to complete the name.
- H. Press - to move backward if you want to change an item.
- I. Press DONE.

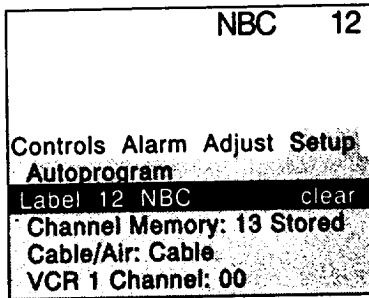

### 2. Erase a name

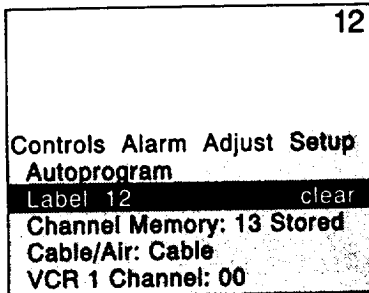

- A. Follow A and B above.
- B. Press + until clear is underlined.
- C. Press CHANNEL up or down to clear the name.
- D. Press DONE to clear the name.

### Character List


A B C D E F G H I J K L M N O P Q R S T U V W X Y Z &  
' ( ) á + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ blank space

# Using Advanced Features


## Setting the Sleep Timer

You can set your TV to turn itself off. If you're watching TV at night and fall asleep, the TV will turn off for you.


### 1. Set Sleep Timer

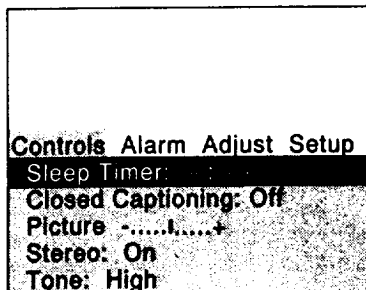

- Press MENU to select the Controls menu and highlight Sleep Timer. This menu is yellow.
- Press + enter the amount of time you want to watch TV before it shuts off. Each press equals 15 minutes.
- Press - to subtract time from the sleep timer.
- Press DONE.

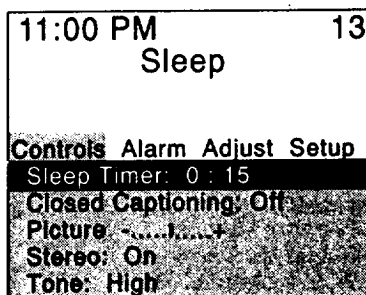


### 2. Add more time

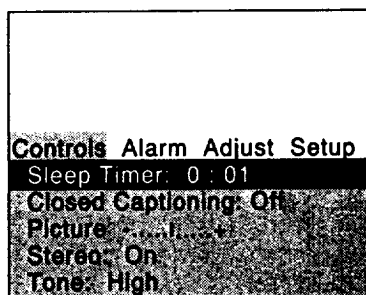

- When 0:01 appears on the screen, the TV will shut off in one minute. Press + to add more time.
- Press DONE.

### 3. Cancel the Timer

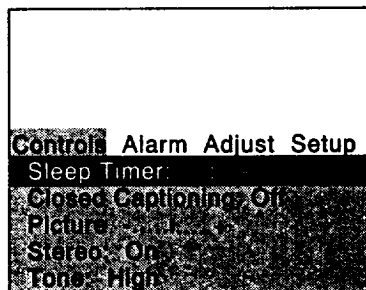

- Press MENU to select the Controls menu and highlight Sleep Timer.
- Press - until the time reaches -:--.
- Press DONE.




# Using Advanced Features

## Setting the Alarm Clock


The TV can be set to turn on each day like your alarm clock. You can set it to turn on to your favorite channel at a certain time. You can also set it to turn itself off again. The Alarm cannot be used until the clock is set.

### 1. Turn on the Alarm

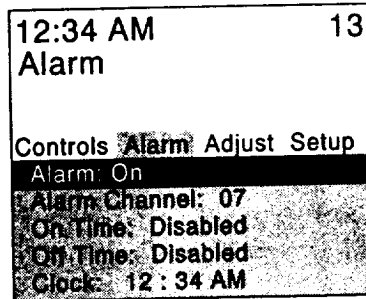


- A. Press MENU to select the Alarm menu and highlight Alarm. This menu is green.
- B. Press + or - to select On or Off.
- C. Press DONE.

### 2. Set the Alarm Channel

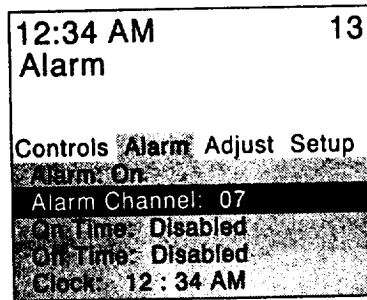


- A. Press CHANNEL down to highlight the Alarm Channel.
- B. Press + to highlight the channel number.
- C. Enter the channel that you want the TV to turn on to with the number buttons.
- D. Press DONE.

### 3. Set On and Off Times

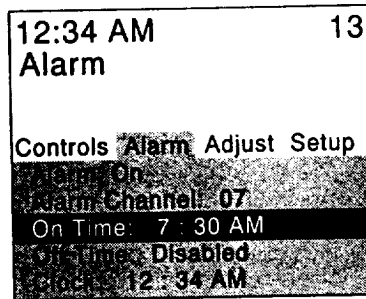

- A. Press CHANNEL down to highlight the On or Off Time.
- B. Press - to set the hour.
- C. Press + to set the minutes.
- D. Press and hold - to choose Disabled. This turns the TV only on or only off at a certain time each day.
- E. Press DONE.

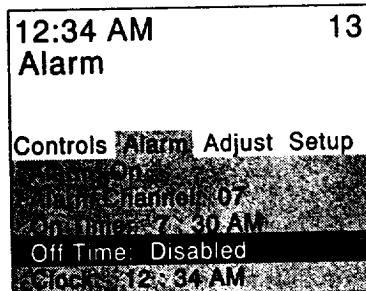


# Using Advanced Features

## Watching Picture-in-Picture (Not on all models)


Picture-in-Picture allows you to display a small picture within the big picture of the TV screen. To watch two different programs at once, you must connect a VCR, Laserdisc Player or Camcorder. You may need to disable the VCR1 Channel if you can not get two different programs at once.

### Turn on Picture-in-Picture

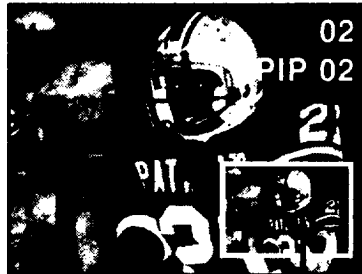

TV Picture

TV Picture

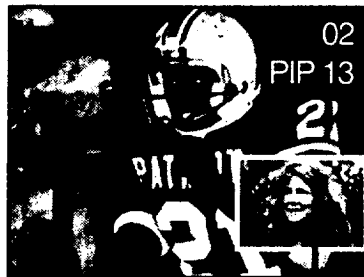

TV Picture

VCR, Laserdisc  
Player, or  
Camcorder  
Picture

- A. Hook up a VCR, Laserdisc Player, or Camcorder to the video jacks on the back of the TV. See the Connections Guide.
- B. Press TV to turn the TV on.
- C. Press CHANNEL up or down to select the channel you want to watch on the big picture.
- D. Turn on the VCR, Laserdisc Player, or Camcorder.
- E. Press PIP to put the small picture on the screen. It is the same as the big picture.
- F. Press 00 to see the signal from the VCR, Laserdisc Player, or Camcorder connected to the video jacks.

### Change channels on the large picture



Press CHANNEL up and down or two number buttons to change channels on the large picture.

### Change channels on the small picture



Change channels on your VCR, Laserdisc Player, or Camcorder to change channels on the small picture.

# Using Advanced Features

## Watching Picture-in-Picture (Not on all models)

**Move the small picture**




Press **MOVE** to move the small picture to the next corner.

**Swap the big picture with the little picture**




Press **SWAP** to switch the small picture with the big picture.

**Freeze the small picture**

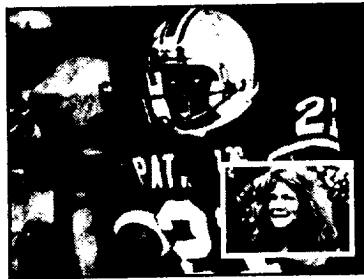

- A. Press **FREEZE** to stop action in the small picture.
- B. Press **FREEZE** again to return to an action picture.

**Turn off Picture-in-Picture**

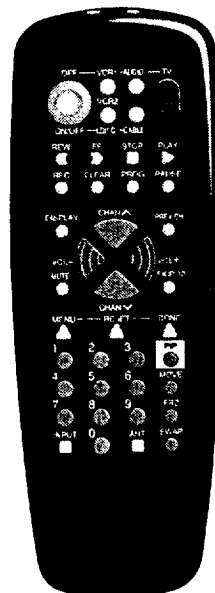

Press **PIP** to turn off picture-in-picture.

# Using Advanced Features


## Watching Closed Captioning

Closed captioning displays the audio portion of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound.

If you have turned Closed Captioning on and it does not appear on the screen, it is not available on the channel you are watching.


This TV does not support the text mode. Text information typically consists of program information, weather bulletins, local activities, etc.

### 1. Select the Controls Menu

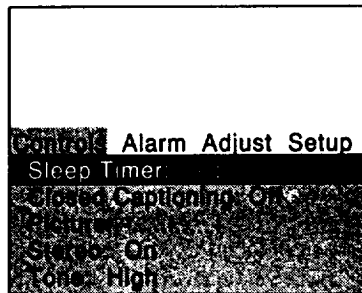


Press **MENU** to select the Controls menu. This menu is yellow.

### 2. Highlight Closed Captioning

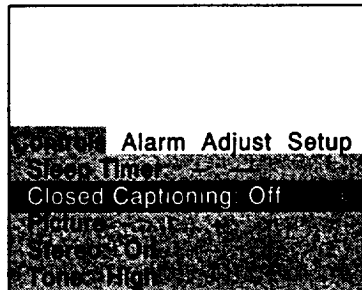

Press **CHANNEL** down to highlight Closed Captioning.

### 3. Select Setting

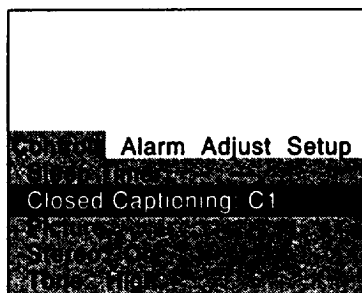

A. Press **+** or **-** to select Off, C1, or C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

### 4. Press **DONE**


B. Press **DONE** to save the setting.

# Using Advanced Features

## Setting Your TV for Antenna or Cable


Your TV automatically adjusts this feature when the TV places channels in memory (autoprogram). Follow the steps below to change the setting as needed.

### 1. Select the Setup menu

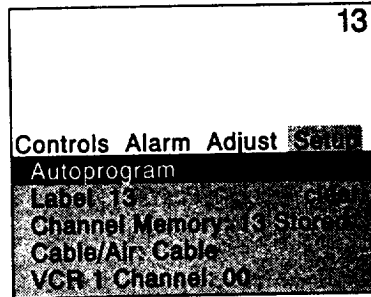


Press MENU repeatedly to select the Setup menu. This menu is white.

### 2. Highlight Cable/Air

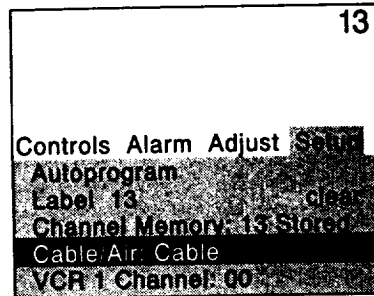

Press CHANNEL down to highlight Cable/Air.

### 3. Select Cable or Air

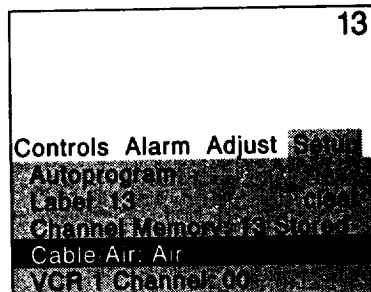

A. Press + or - to select Cable or Air. Select Cable if you have cable. Select Air if you have a home antenna connected to your TV.


B. Press DONE to save the setting.

### 4. Press DONE

# References

## Front Panel Buttons

For details on using buttons with menus, see *Menu Basics* on page 5.

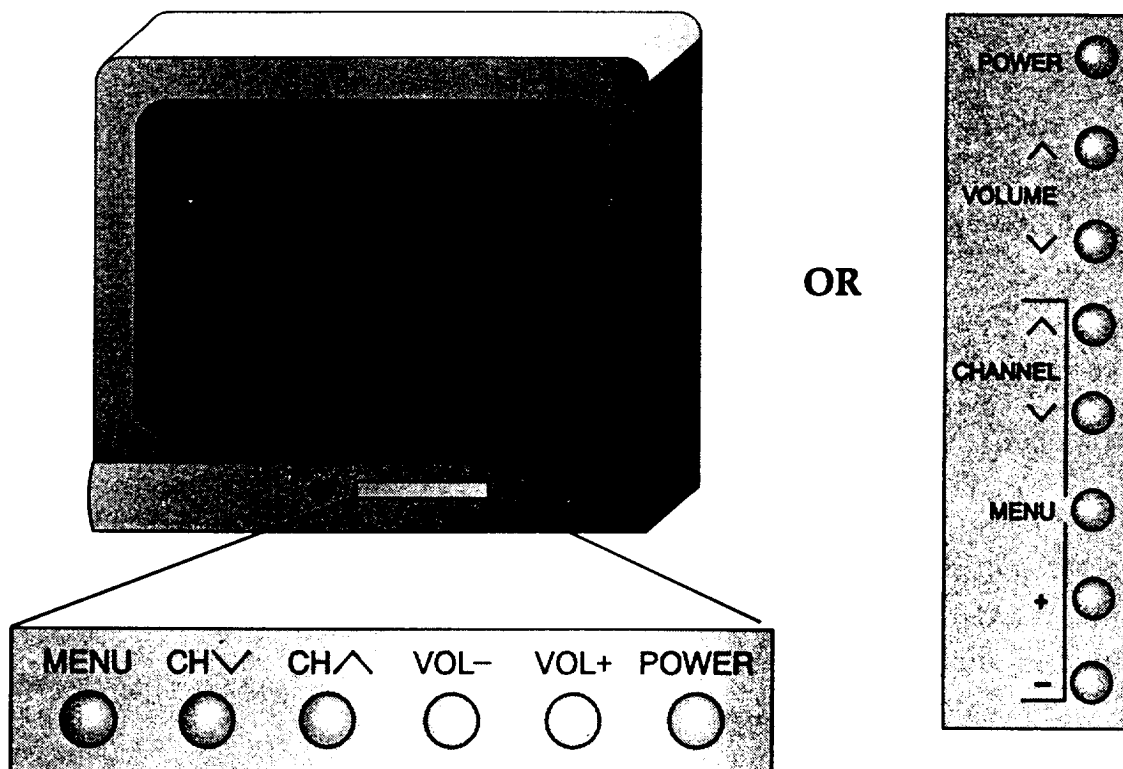

### **MENU**

Shows menus on screen.  
Moves from menu to menu.

### **CH ^ and v**

Channel up and down.  
Scans up and down through channels in the TV's memory.  
Moves up and down menus.

### **VOL + and -** (Also VOL ^ and VOL v)

Volume up and down  
Raises and lowers sound.  
Moves left and right on a menu line.  
Changes a features setting.

### **POWER**

Turns the TV on or off.


### **+ and -** (Not on all models)

Same as VOL + and - buttons.

# References

## Displays on the Screen

Your TV shows the settings of several features on the screen. To see what features have been set on your TV, press DISPLAY on the remote.

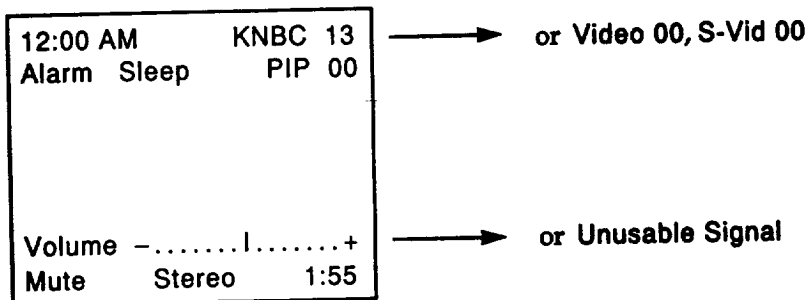

### Screen Display

**12:00 AM**

**KNBC**

**13**

**S-Vid 00**

**Video 00**

**Alarm**

**Sleep**

**PIP 00**

**Volume**

**Unusable Signal**

**Mute**

**Stereo**

**1:55**

### Description

Time of the clock. *Details are on page 3.*

Name you chose to describe the channel. *Details are on page 21.*

Channel number you are watching.

Indicates that a component is connected to the S-VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Indicates that a component is connected to the VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Alarm clock is set to turn on or off. *Details are on page 23.*

Sleep Timer is set to turn off the TV. *Details are on page 22.*

Picture-in-picture is turned on to channel 00. *Details are on pages 24-25.*

Sound level of the TV.

No signal is coming in on video input channel 00.

There is no sound. *See MUTE button on page 6.*

The sound is being broadcast in stereo. *Details are on page 18.*

The time remaining for commercial skip. *Details are on page 6.*

# References

## Trouble Checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again. *For warranty information see page 32.*

Trouble	Checks and Adjustments
<b><u>Power</u></b>	
TV will not turn on	Plug TV in. Plug something else into the outlet to make sure it is working. Make sure batteries in the remote are not dead. Aim the remote at the TV and press TV. Make sure batteries are placed in the remote the right way. <i>See batteries on page 2.</i> Unplug TV for a few minutes and then turn it on again.
No picture, no sound but TV has power	Check antenna connections. Check position of Cable/Air feature. <i>See page 27.</i> Try another channel. Inactive channel may be tuned. Make sure component connected to the VIDEO INPUT jacks is turned on if you choose channel 00. Make sure TV is tuned to the same channel as the switch on back of VCR if watching a VCR. Make sure TV/VCR button on VCR is in correct position when using VCR.
<b><u>Picture</u></b>	
Blank screen or Unusable Signal appears on screen	Try another channel. Scan the channels.
Picture poor, sound okay	Check antenna connections. Adjust TV picture. <i>See pages 16–17.</i>
<b><u>Picture-in-Picture</u></b>	
Can't get two different channels in picture-in-picture	Make sure small picture is tuned to channel 00. Make sure the component connected to the back of the TV is turned on. Make sure a video cable is also connected to the TV's VIDEO INPUT jack if using an S-VHS component. Make sure the AUDIO and VIDEO OUT jacks on the VCR, Laserdisc player, or Camcorder are connected to the TV's VIDEO and AUDIO IN jacks. Make sure VCR 1 Channel is set to Disabled. <i>See page 9.</i>
No picture while using picture-in-picture with S-VHS VCR or camcorder	Make sure a video cable is also connected to the TV's VIDEO INPUT jack.



# References

## Trouble Checks

Trouble	Checks and Adjustments
<b>Remote</b>	
Buttons don't work when you press them	Press TV to set the remote to control the TV. <i>See buttons on page 6-7.</i>
Works part or none of the time	Clear the path between the remote and TV of any objects. Aim the remote at the component you are trying to control. Press TV so remote will control TV. Make sure batteries in the remote are not dead. See if batteries are placed in remote correctly. <i>See batteries, page 2.</i>
Can't select certain channel	Press number buttons. Channel may not be in memory. <i>See autoprogram on page 20.</i> Make sure TV/VCR switch on VCR is in the TV position. For numbers over 100, press and hold 1 until 1-- appears, then press the other two numbers. Set Cable/Air feature to Cable for channels higher than 69. <i>See page 27.</i>
<b>Sound</b>	
Noisy stereo reception	Turn Stereo off. The stereo broadcast may not be clear. <i>See page 18.</i>
Picture okay, no sound	Press VOLUME + or MUTE to restore sound. Make sure TV's speakers are on. <i>Details are on page 19.</i>
Picture okay, sound poor	Try another channel. Try adjusting the Tone. <i>See page 18.</i> Change Stereo to off. The stereo broadcast may not be clear. <i>See page 18.</i>
No stereo on stereo station	Make sure Stereo is turned on. <i>See page 18.</i>
<b>TV Turns on or off</b>	
Turns off by itself	Check Sleep Timer. <i>See sleep timer on page 22.</i> Wait 30 seconds and turn on again, a power surge may have occurred. Check Alarm Off time. <i>See alarm clock on page 23.</i>
Turns on by itself	Check Alarm On Time. <i>See alarm clock on page 23.</i> Check clock time. <i>See clock on page 3.</i>
Does not turn off at Alarm Time	Make sure alarm is turned on or off. <i>See alarm clock on page 23.</i> Check clock time. <i>See clock on page 3.</i>

# References

## Limited Warranty


<b>What your warranty covers:</b>	Any defect in material or workmanship.
<b>How long after your purchase:</b>	90 days for labor charges. One year for parts. Two years for picture tube. The warranty period for rental units begins with the first rental.
<b>What we will do:</b>	Pay any Authorized RCA Television Servicenter the labor charges to repair your television. Pay any Authorized RCA Television Servicenter for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.
<b>How you get service:</b>	For screen sizes of 20" and smaller: Take your RCA television to any Authorized RCA Television Servicenter. For screen sizes larger than 20": Request in-home service from any Authorized RCA Television Servicenter. To identify your nearest Authorized RCA Television Servicenter, ask your Dealer, look in the Yellow Pages, or call 1-800-336-1900. Show the service technician your evidence of purchase date.
<b>What your warranty <i>does not</i> cover:</b>	Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your Dealer.) Installation and related adjustments. Signal reception problems not caused by your television. Damage from misuse or neglect. Remote control batteries. A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes. A television purchased or serviced outside the USA.
<b>What to do with the Product Registration Card:</b>	Please complete and mail the Product Registration Card packed with your set. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
<b>How state law relates to this warranty:</b>	This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
<b>Canadian Purchases:</b>	The Canadian Warranty applies in place of this Warranty.

# References

## Order Form for Parts


### Remote #215419

If your TV has the picture-in-picture feature, this is the remote that came packed with your TV. You can use the order form at the right to order it by mail.

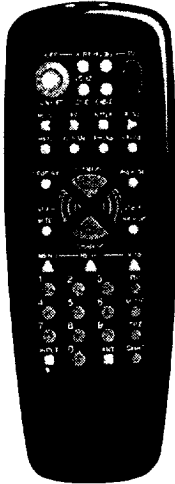

### Remote #215420

If your TV does not have the picture-in-picture option, then your TV came with this remote. You can use the order form at the right to order it by mail.

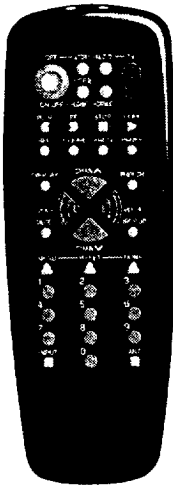

### Cleaner #AH035

To clean your TV cabinet, we recommend Murphy's® Oil Soap or Cleaner #AH035. You **should not** use cleaners such as Windex® with vinegar, Lenox® Furniture Polish spray or Heinz® Cleaning Vinegar to clean your TV cabinet. Using these cleaners will permanently mar the surface of the cabinet. Such damage is not covered under your purchase warranty.

Detach Here

Order Form				
Book No. 1Q57 368-05A				
Part	Part Number	Price	Qty	Total
Cleaner	AH035	\$ 6.95		
Remote--CRK71A	215419	\$59.95		
Remote--CRK 71B	215420	\$59.95		
Total (\$10 Minimum Order) .....			\$	_____
Sales Tax .....			\$	_____
We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.				
Shipping, Handling, and Insurance .....			\$	5.00
Total Amount Enclosed.....			\$	_____
VISA or MasterCard preferred. Money order or check must be in U.S. currency only. No COD or CASH.				


**Fill out both sides of the information**

All specifications and descriptions of parts are subject to change without notice.


# References

## Order Form for Parts

**USE YOUR CREDIT CARD**

Copy complete account number 

Card expires:

Copy complete account number 

Copy Number above the name on your MasterCard

Card expires:

---

**AUTHORIZED SIGNATURE**

Prices are subject to change without notice.

**PLEASE**



Print or type your name and address.  
This will be your mailing label.

A complete and correct order will  
save you days of waiting.

Name: \_\_\_\_\_

Street: \_\_\_\_\_

\_\_\_\_\_ Apt: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_ Zip: \_\_\_\_\_

Make sure that both sides of this  
form have been filled out.

### U.S. and Canadian Orders

#### By Phone:

**1 - 800 - 338 - 0376**

Call this toll-free number between 8AM and 8PM Eastern Standard Time and place your order using your Visa or MasterCard. **Use this number only to place an order for accessory items listed on this order form.**

#### By Mail:

Detach the information at the left and mail the payment to Thomson Consumer Electronics, Inc., at:

Video Accessories  
PO Box 8419  
Ronks, PA 17573

Most orders are shipped UPS within 72 hours. If it is not possible to ship within 30 days, we will notify you.

**For more current information on these accessories, write to the following address:**

Video Accessories Customer Service  
Thomson Consumer Electronics, Inc.  
Distributor & Special Products  
2000 Clements Bridge Rd  
Deptford, NJ 08096-2088

### International Orders

This offer is valid only in the U.S. Send your request for price quotation (not orders) to:

International Customer Service  
Thomson Consumer Electronics, Inc.  
Distributor & Special Products  
2000 Clements Bridge Rd  
Deptford, NJ 08096-2088 USA

**Detach Here**

# References

## Glossary

### Antenna

A device used to receive broadcast signals from TV stations.

### Audio

Sound reproduced by the TV.

### Audio/video cables

Cables that carry sound and picture signals from one component to another.

### Autocolor

Adjusts the Color and Tint of the picture signals to the proper balance for all channels.

### AutoProgram

A procedure that automatically adds only the active channels in your area to the TV's memory.

### Brightness

Light and dark areas of a picture.

### Channel Label

A name that is given to a specific channel number.

### Channel Memory

Where channels are stored after they have been placed in memory. Channels can be added or deleted from channel memory.

### Commerical Skip

A feature that allows the viewer to scan other channels during commercials, and return to the original channel after a timed break.

### Component

Device such as VCR, laserdisc player, audio equipment, camcorder, etc.

### Disabled

Turns off feature.

### Display

A word, words or graphics that appear on the TV screen.

### Inputs

Located on back of the TV for connection of a component to the TV. Used to route signals into the TV from components.

### Jacks

Connectors located on the back of the TV for connecting antennas or other components.

### Menu

A listing of features, controls, and adjustments shown on the TV screen that can be changed.

### Mono

Slang for monaural. Sound comes through one channel.

### On-Screen Display

See Display.

### Outputs

Located on back of the TV for connection of another component. Signals are routed out of the TV into the other component.

### Picture-in-picture

A feature that allows you to watch two channels at the same time, a small picture within a big picture. The smaller picture comes from a VCR or other component connected to the TV.

### Picture Reset

Returns all of your TV picture adjustments back to the factory setting.

### PIP

Short for picture-in-picture.

### S-VHS

Super Video. A format used by some VCRs and Camcorders which improves the picture quality. S-VIDEO appears on the TV screen when you use this feature.

### S-VIDEO

*See S-VHS.*

### Sharpness

Clearness of a picture.

### Skip:30

*See Commerical Skip.*

### Signal

Electrical waves that are sent or received through cables or through the air.

### Sleep Timer

A feature where the TV can be set to turn off at a specific time within four hours.

### Source(s)

Components or devices that are connected to the TV.

### Stereo

Sound signals that come through two channels (left and right).

### Tone

Quality of the sound.

### Tuner

A device that receives and selects signals. The desired signal is selected by the tuner.

### Unusable Signal

A message that shows no signal is coming in on the video input.

### Video

Picture reproduced by the television.

# References

## Index

### A

Adding Channels to Memory	20
Adjust Menu	
Autocolor	17
Bright	17
Color	17
Picture Reset	17
Sharpness	17
Tint	17
Adjusting	
Picture	16
Picture Settings	17
Sound Settings	18,19
Air or Cable Feature	27
Alarm Channel	23
Alarm Clock	23
Alarm Display	28
Alarm Menu	23
Alarm	23
Alarm Channel	23
Off Time	23
On Time	23
Set Clock	3
ANT Button	7
Antenna	27
Audio	7,15,18,19,35
AUDIO Button	7,15
Audio Codes	15
Audio Equipment Buttons	15
CLEAR	
FF/Fast Forward	
PAUSE	
PLAY	
REC/Record	
REW/Rewind	
STOP	
Audio/video cables	35
Autocolor	17,35
Autoprogram	3,20,35

### B

Batteries (Remote)	2
Bright	17
Brightness	17,35
Buttons	
+ and -	2,3,4,5,6,7
Audio Equipment	15
Component	4
Laserdisc	14
Menu	4,5
Number	6
Picture-in-Picture	4,7,24,25,35
Power	6
Remote Control	4,6,7
Signal	7
TV	4,12
TV Front Panel	28
VCR	13

### C

CABLE/ANTENNNA Jack	15
Cable Box	12,13
Cable Box Codes	12
CABLE Button	7,12,13
Cable Channel	13
Cable or Air Feature	27
Cancelling Sleep Timer	22
Captioning, Closed	26
Cautions	i
Channel Label	21,35
Channel Memory	3,20,35
Channel Name Display	29
Channel Number Display	29
CHANNEL Up/Down Buttons	
Remote	4,5,6
TV	28
Channels	
Adding	20
Deleting	20
Naming	21,29
Placing in Memory	3,20
Checks and Adjustments	30,31
Cleaner	33
CLEAR Button	6,7
Clock	3,23
Closed Captioning	26
Codes	
Audio	15
Cable Box	12
Laserdisc Player	14
VCR	8
Color	17
Colors (Menus)	5
Commerical Skip	6,29,35
Button	6
Display	29
Component	35
Component Buttons	13
AUDIO, CABLE, LDISC, VCR1, VCR2, Components	
Audio Equipment	15
Cable Box	12,13
Laserdisc Player	14
VCR	8,9,10,11
Contents	1
Controls	
TV Front Panel	28
Remote	6,7
Controls Menu	
Closed Captioning	26
Picture	16
Sleep Timer	22
Stereo	18
Tone	18

### D

Delete Channels from Memory	20
Disabled	35
DISPLAY Button	6,23
Displays (On-Screen)	29
Alarm, Channel Name, Channel Number, Commerical Skip, Mute, PIP 00, Sleep, Stereo, S-VIDEO 00, Time, Unusable Signal, VIDEO 00, Volume	
DISPLAY Button	6,29
DONE Button	5,6

### E

Erase a Name	21
Erasing Channels from Memory	20

### F

FF/Fast Forward Button	7
Front Panel Controls	4,28
FRZ/Freeze Button	7,25

### G

Glossary	35
Guide	
Colors	5
Menu Buttons	4,5
Moving through the Menus	5
TV	2,3,4,5

### H

Hook up TV...Connections Guide	
--------------------------------	--

### I

INPUT Button	7
Inputs	35

### J

Jacks	35
-------	----

### L

Laserdisc Player Codes	14
Laserdisc Player Buttons	7,14
FF/Fast Forward, PAUSE, PLAY, PROG/Program, REW/Rewind, STOP	
Laserdisc Player	14

<b>M</b>	
Menu .....	35
MENU Buttons .....	4,5
Menus.....	5
Menu Colors.....	5
Mono.....	18,35
MOVE Button.....	7,25
Moving through the Menus.....	5
MUTE Button.....	6
Mute Display.....	29

<b>N</b>	
Naming the Channels .....	21
Number Buttons .....	6

<b>O</b>	
OFF Button .....	6
Off Time (Alarm).....	23
ON/OFF Button .....	6
On-Screen Displays.....	29,35
On Time (Alarm).....	23
Order Form for Parts.....	33,34
Outputs .....	35

<b>P</b>	
PAUSE Button.....	7,8,14
Picture .....	16,17
Picture Adjustments.....	16,17
Picture-in-Picture.....	4,7,24,25
Change Channels.....	24
Turn on.....	24
Turn off .....	25
Use PIP Buttons .....	7,25
Picture-in-Picture Buttons.....	7,25
FRZ/Freeze, MOVE, PIP, SWAP	
Picture Settings .....	16,17
Picture Reset.....	17
PIP.....	4,7,24,25
PIP Button.....	4,7,24,25
PIP 00 Display .....	29
Place Channels in Memory .....	3,20
PLAY Button .....	7,8,14,15
Plug in TV.....	2
POWER Button .....	2,6
Power Buttons.....	2,6
PREV CHAN Button.....	6
Previous Channel Button .....	6
Problem Solving .....	31,32
Product Registration.....	i
PROG /Program Button.....	7
Programming the Remote	
Audio Equipment.....	15
Cable Box.....	12,13
Laserdisc Player.....	14
VCR .....	8,9,10,11
Put Batteries in Remote .....	2

<b>Q</b>	
Quick Guide to Your TV .....	2,3,4,5

<b>R</b>	
REC/Record Button.....	7,11,15
References .....	28-37
Glossary .....	35
Order Form for Parts.....	33,34
Trouble Checks .....	30,31
Warranty.....	32
Registration Card .....	i
Remote Control	
Batteries .....	2
Buttons .....	6,7
Order Form.....	33
Tour .....	4
With Components.....	7,8-15
RESET Button.....	6
REW/Rewind Button .....	7,8,11,14,15

<b>S</b>	
S-VHS.....	35
S-VIDEO Connector .....	29,30,35
Safety Information .....	i
Screen Displays.....	29
Service .....	32
Set Clock .....	3
Set Time .....	3
Setting Cable/ Air.....	27
Setting the Cable Channel.....	12
Setting the Sleep Timer.....	22
Setup Menu	
Autoprogram .....	3,20,35
Cable/ Air .....	27
Cable Channel.....	13
Channel Label .....	21
Channel Memory.....	3,20
Speakers.....	9
VCR 1 Channel.....	8
Sharpness.....	17
Signal.....	7,35
SKIP:30 .....	6,35
Sleep Display.....	22,28
Sleep Timer.....	22
Sharpness.....	17
Sound .....	18,19
Source .....	35
Speakers.....	19
Startup.....	2,3Stereo.
18,35	
Stereo Display .....	29
STOP Button.....	7,8,11,15
S-VID 00 Display .....	29
SWAP Button .....	4,7,24,25

<b>T</b>	
Table of Contents.....	1
Time	
Alarm .....	23
Clock.....	3
Sleep Timer.....	22
Time Display .....	29
Tint.....	17
Tone.....	18,35
Tour of the Remote.....	4

Trouble Checks.....	30,31
Turn on Alarm .....	23
Turn on Picture-in-Picture .....	24,25
Turn on TV .....	2
TV	
Buttons .....	4,6,28
Guide to .....	2,3,4
TV Button .....	3,4,6
Time.....	3
Two Pictures at one time .....	24,25

<b>U</b>	
Unusable Signal Display .....	29,35
Using Advanced Features.....	20-27
Naming the Channels .....	21
Place Channels in Memory .....	20
Setting Cable or Air.....	27
Setting the Alarm Clock .....	23
Setting the Sleep Timer.....	22
Watching Closed Captioning.....	26
Watching Two Pictures .....	24,25
Using the Remote	
Audio Equipment.....	15
Laserdisc Player.....	14
Cable Box .....	12,13
VCR .....	8,9,10,11

<b>V</b>	
VCR	
Turn on.....	10
Turn off .....	10
Record one TV program and	
watch another .....	11
Watch a tape.....	11
VCR1 Button .....	7,8,9,10
VCR1 Channel.....	8
VCR2 Button .....	7,8,9,10
VCR Codes .....	8
VCR Buttons.....	7,8
CLEAR, FF/Fast Forward,	
PAUSE, PLAY, PROG/Program,	
REC/Record, REW/Rewind,	
STOP	
Video .....	35
VIDEO 00 Display .....	29
Volume Display .....	29
VOL + and - Buttons	
Remote .....	4,6
TV .....	28

<b>W</b>	
Warning.....	i
Warranty.....	32
Watching Closed Captioning.....	26
Watching Picture-in-Picture .....	24,25

Thomson Consumer Electronics is one of the first corporations to take part in a special program to improve our environment.

Thomson has committed itself to a voluntary initiative program through the U.S. Environmental Protection Agency. The program's purpose is to reduce toxic air emissions and to promote pollution prevention.

Thomson's involvement includes a concentrated effort to phase in new water-based paints to replace solvent-based paints normally used in our manufacturing operations. The key benefit of these new paints is to significantly reduce air pollution.

Thomson Consumer Electronics remains committed to improving our manufacturing process through changes like these to help our environment. At Thomson, on-going efforts to maintain our valuable natural resources will continue to be a priority.

If your TV needs service, please contact your dealer or the nearest servicenter from the yellow pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

©1993 Thomson Consumer Electronics, Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Printed in the U.S.A.  
Part Number 1Q57 368-05A  
FL69608

Thomson Consumer Electronics  
600 N Sherman Dr, PO Box 1976  
Indianapolis, IN 46206-1976