

OPERATING GUIDE

&

WARRANTY



THE QUALITY GOES IN BEFORE THE NAME GOES ON[®]

¡Aviso para nuestros
clientes de habla hispana:
consulte la información que
aparece al final de este manual!

SENTRY 2
Direct-View Color TV
Stereo Audio



Return the Product Registration
Card, and your TV could be free!



WARNING

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety Tips

Refer to the "Safety Tips" booklet that came with your product for important safety considerations.

Note to Cable TV System Installer

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

Power-Cord Polarization

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

CAUTION

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

CONTENTS

INTRODUCTION

Welcome	ii
Installation Considerations	ii

CONNECTIONS FOR YOUR TV

Connection Center on Back of TV	1-1
Step 1. Make Basic Connection to TV	1-2
Step 2. Make VCR Connections to TV	1-3

THE FIRST TIME YOU OPERATE YOUR TV

Step 1. Connect the Power	2-1
Step 2. Use Auto Program	2-1
Step 3. Set the Clock	2-1
Step 4. Use Other Options	2-1

GETTING TO KNOW YOUR TV

Typical Control Panel	3-1
Sleep Timer	3-1

REMOTE CONTROL MODEL SC3390

OPERATION	4-1
Preparation for Use	4-2
Installing Batteries	4-2

REMOTE CONTROL MODEL MBR3420

Introduction	5-1
Choosing Operating Mode	5-1
TV Operations	5-2
VCR Operations	5-3
Cable-TV Operations	5-4
Preparation for Use	5-5
Installing Batteries	5-5
Programming Brand Codes	5-6
TV, VCR and Cable-TV Brand Codes	5-7

QUICK REFERENCE TO ON-SCREEN MENUS

Available Menus	6-1
Basic Menu Operation	6-1
Menu Operation Example	6-2

SETUP MENU

Auto Program	7-1
Ch. (Channel) Add/Del	7-1
Tuning Band	7-2
Auto Tuning	7-2
Clock Set	7-2
Captions	7-3
Audio	7-3

VIDEO MENU

Contrast	8-1
Brightness	8-1
Color	8-1
Tint	8-1
Sharpness	8-1
Picture Pref. (Preference)	8-1

MAINTENANCE AND TROUBLESHOOTING

Caring for Your TV	9-1
Extended Absence	9-1
TV Picture Interference	9-1
Before Calling for Service	9-2

Product Registration Card

Recommended Accessories for Your Television

Aviso para nuestros clientes de habla hispana

Your Zenith Warranty

HOW TO USE YOUR OPERATING GUIDE

This operating guide describes a family of TV models. Some models have features that are not provided on other models. Different control panels and remote controls may be used from model-to-model. Refer to the applicable sections of this operating guide for the features and items provided with your TV.

INTRODUCTION

WELCOME

Welcome into the family of Zenith Color Television owners. This guide provides instructions on how to operate your new TV. It is supplemented by a booklet containing Safety Tips. We urge you to read these publications carefully so that you will receive full enjoyment from your new Zenith TV for many years to come.

Your new TV has been designed and built to give you the very best in quality, features and performance. There are many regional Zenith distributors and thousands of distributor-approved Zenith service centers throughout the U.S., Canada and Mexico who can attend promptly and effectively to ordinary service needs.

If you should have an unusual performance or service problem that cannot be satisfactorily resolved by your distributor-approved Zenith service center, contact the regional Zenith distributor in your area, or write:

Zenith Electronics Corporation
Customer Service Department
1900 N. Austin Avenue
Chicago, Illinois 60639-5079
Telephone: (312) 745-5152
Mon-Fri, 8:00 a.m. - 4:30 p.m. Central Time

Send the model number, serial number, and date of purchase or original installation, with a full explanation of the problem and the service history. We will welcome the opportunity to look into your specific question or problem and to be of assistance in resolving it promptly.

The model and serial numbers of your new TV are located on the back of the TV cabinet. For your future convenience and protection, we suggest that you record these numbers here:

Model No. _____

Serial No. _____

INSTALLATION CONSIDERATIONS

Before you install your TV...



Ventilation — Proper ventilation keeps your TV running cool. Air circulates through perforations in the back and bottom of the cabinet. Do not block these vents or you will shorten the life of your TV.



Power Source — Your TV is designed to operate on normal household current, 120 volt 60 Hertz AC. Do not attempt to operate it on DC current.



Power Cord — Your power cord has a polarized plug as required by Underwriters' Laboratories. It has one regular blade and one wide blade and fits only one way into a standard electrical outlet. If the blades will not enter either way, your outlet is very old and non-standard. A new outlet should be installed by a qualified electrician.



Safe Operation — Your TV is manufactured and tested with your safety in mind. However, unusual stress caused by dropping or mishandling, exposure to flood, fire, rain or moisture, or accidental spilling of liquids into the TV, can result in potential electrical shock or fire hazards. If this happens, have your TV checked by a service technician before using it again.

 
Please read and observe each safety point in the "Safety Tips" folder when installing and using your TV.

FIXED PATTERN DISPLAY CAUTION — If you use your TV for video games, teletext or other fixed displays, avoid setting the BRIGHTNESS control for an excessively bright picture. A bright, fixed pattern, if used for long periods of time, can result in a permanent imprint on the TV picture tube. You can reduce this possibility by alternating the use of the fixed pattern display with normal TV picture viewing, by turning down the CONTRAST control for sustained fixed pattern use, and by turning off the fixed pattern display when not in use.

CONNECTIONS FOR YOUR TV

CONNECTION CENTER ON BACK OF TV


Your television will have one of two types of connection centers on the back. Refer to the illustrations below to determine which connection center is on your TV model.

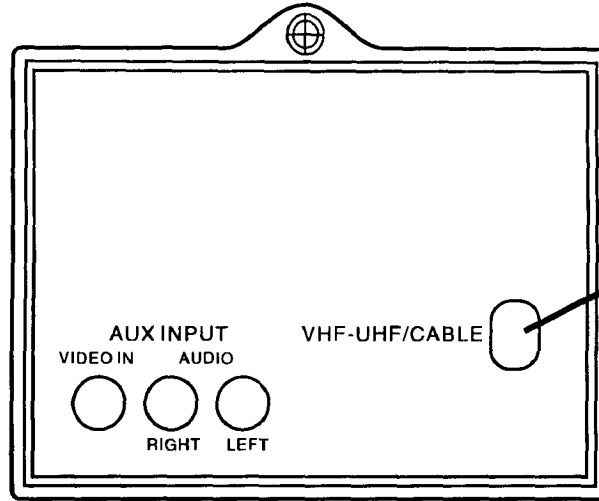

VHF-UHF/CABLE
Jacks for 75-ohm antenna-type connections to your TV. Attach your antenna, cable-TV line or VCR to this jack.

AUX (Auxiliary) INPUT
Jacks for baseband audio and video (A/V) input from a VCR or other component.

 Connection Center With Auxiliary Jacks

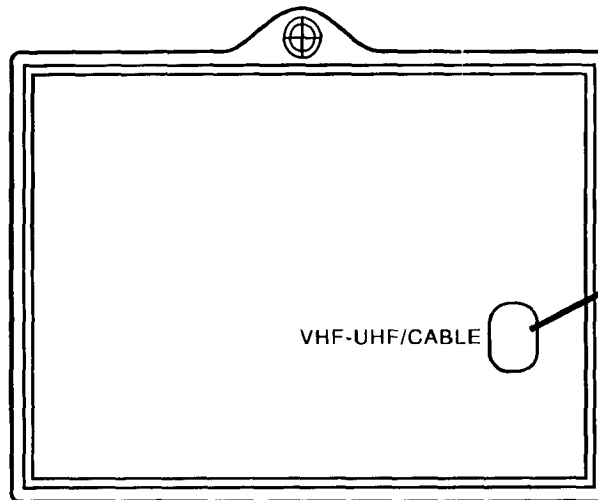


VHF-UHF/CABLE
Jacks for 75-ohm antenna-type connections to your TV. Attach your antenna, cable-TV line or VCR to this jack.

Connection Center Without Auxiliary Jacks


CONNECTIONS FOR YOUR TV

STEP 1. MAKE BASIC CONNECTION TO TV

 
Select the hook up that best fits your needs.

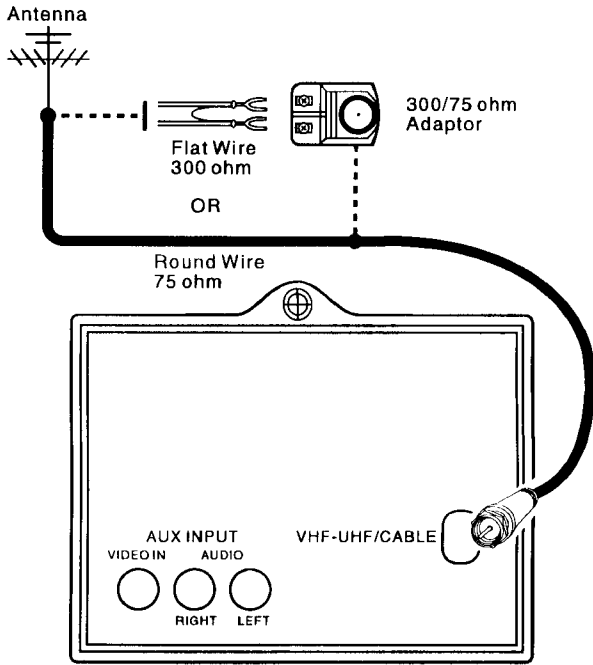


Antenna Direct to TV

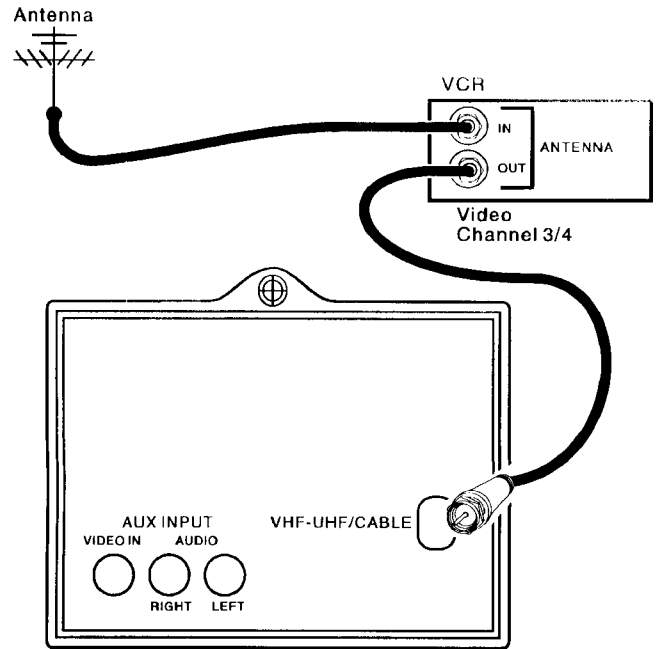 

Antenna Through VCR to TV

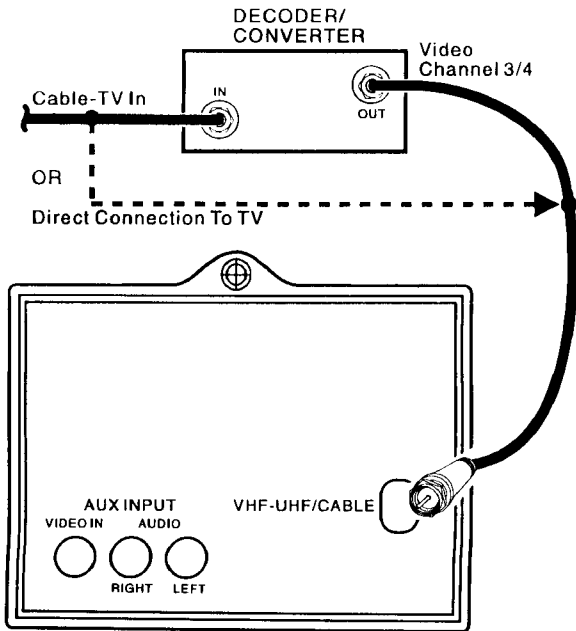 

Cable Direct to TV

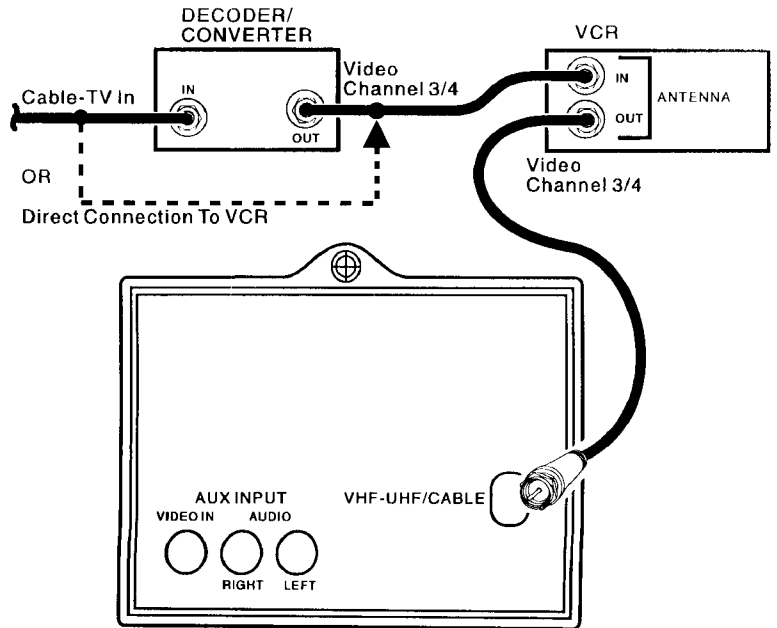 

Cable Through VCR to TV

 
CONNECTIONS FOR YOUR TV

STEP 2. MAKE VCR CONNECTIONS TO TV

If you have a stereo VCR, you must make the A/V connections shown below in order to hear stereo sound while playing a tape.

NOTE: The Auxiliary connections are only valid for those TVs which have auxiliary jacks.


To use these VCR connections, you must watch the AUX channel on the TV. To select the AUX channel, press CHANNEL (CH) Up/Down until you select the next channel after the highest/lowest channel.

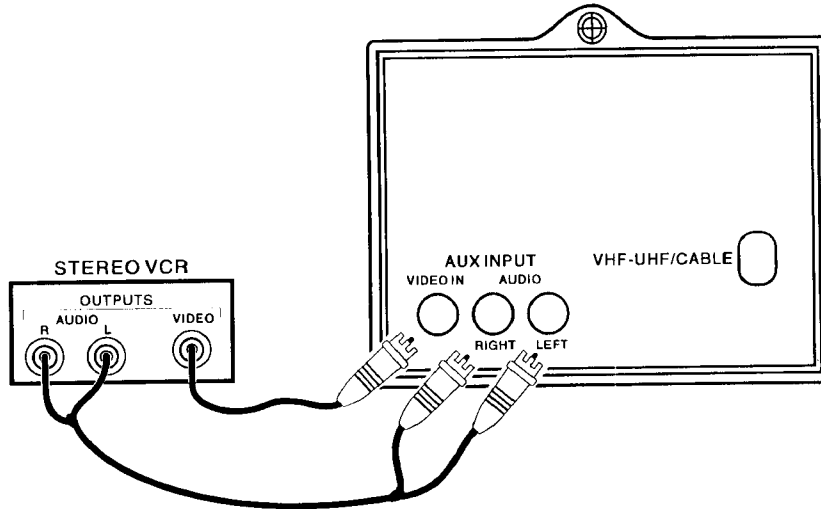

THE FIRST TIME YOU OPERATE YOUR TV

STEP 1. CONNECT THE POWER

 
- A. Plug your TV into an unswitched AC power source.
- B. Turn the TV on by pressing OFF-ON.

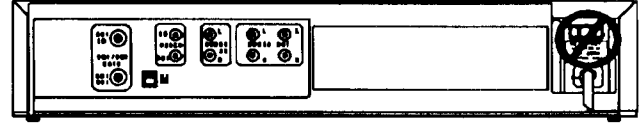


Do not plug TV into switched outlet on a VCR or cable-TV decoder

STEP 2. USE AUTO PROGRAM

 When your TV is first powered up you will see the AUTO PROGRAM reminder display. AUTO PROGRAM finds all available channels and stores them in the memory of the TV. To activate AUTO PROGRAM, press ADJUST (ADJ) Left/Right.

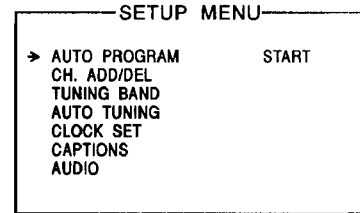


 Setup Menu with Auto Program Highlighted

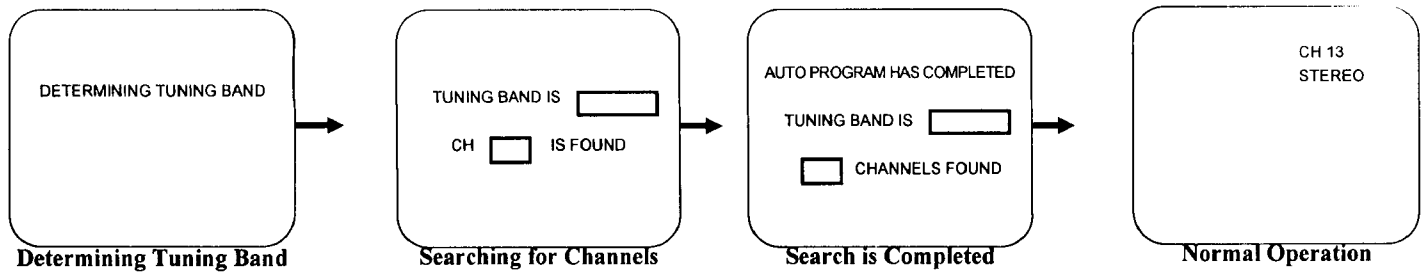

STEP 3. SET THE CLOCK

 1. Press MENU repeatedly until the SETUP MENU is shown.
2. Press SELECT (SEL) to highlight CLOCK SET.
3. Use numbered buttons on remote control to enter correct time or use ADJUST (ADJ) Left/Right to advance the clock.
4. Press ENTER (ENT) to start the clock and return to normal viewing.

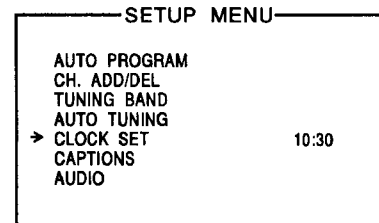

Setup Menu with Clock Set Highlighted

STEP 4. USE OTHER OPTIONS

You may want to consider using the following options:

- Program the channels accessed by using CHANNEL (CH) Up/Down. Refer to the CH. (Channel) ADD/DEL option for details.
- Turn on Closed Captions using the CAPTIONS option.

GETTING TO KNOW YOUR TV

TYPICAL CONTROL PANEL

The control panel on your TV may differ from the one shown.

NOTE: Some TVs have a vertical control panel — the operation is the same as described for the control panel shown.

ENTER (ENT)

Press to see the Channel/Time display, or to remove any on-screen display or menu.

SELECT (SEL)

 
Press during on-screen menu operations to select a menu option.

VOLUME (VOL) Up/Down

Press to increase or decrease the sound level.

OFF-ON

Press to turn TV power ON or OFF.

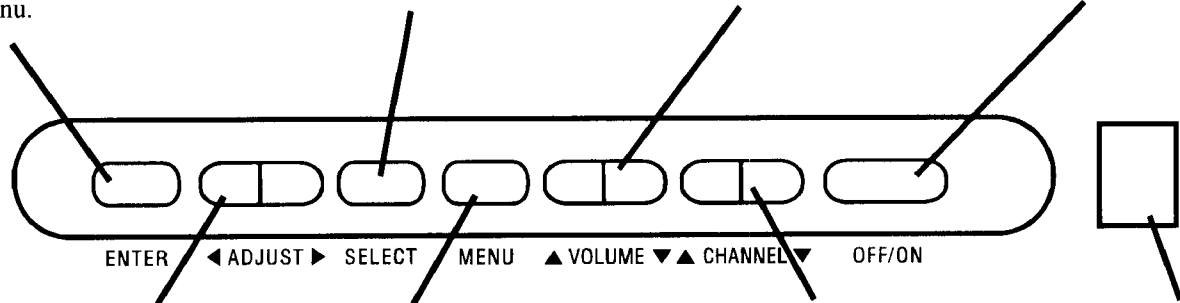

ADJUST (ADJ) Left/Right

Press during on-screen menu operation to see information/status display for selected option. Press again to adjust the selected menu option.

MENU

Press once to see a menu. Press repeatedly to sequence through the available menus.

CHANNEL (CH) Up/Down

Press to select channels higher or lower than the channels being viewed. You can add channels to or delete channels from the scanning sequence stored in memory of the TV. See CH. ADD/DEL option for channel programming information.

Remote Window

Point the remote control towards this window to operate the TV.

SLEEP TIMER

Some remote controls are equipped with a **TIMER** button that provides access to the **SLEEP TIMER** available with some TV models. By using the **SLEEP TIMER**, you can program the TV to automatically shut off after a period from 15 minutes up to 4 hours.

To Set SLEEP TIMER

1. Press **TIMER** to see **SLEEP TIMER** display.
2. Press **TIMER** repeatedly until you reach desired shut-off time.

 
 
One minute before the TV shuts off, the **GOOD NIGHT** display appears on the screen. At this time you have a choice of the following three actions.

1. Do nothing. The **GOOD NIGHT** display remains on the screen. The TV will shut off in one minute.
2. Remove the **GOOD NIGHT** display by pressing **ENTER (ENT)**. The TV will still shut off in one minute.
3. Delay the shut off by using **TIMER** to select a new shut off time.

To Cancel the SLEEP TIMER

You can cancel the **SLEEP TIMER** by setting the **SLEEP TIMER** status to **OFF**. Press **TIMER** repeatedly until **OFF** is selected.

NOTE: The **SLEEP TIMER** resets to **OFF** when you turn off the TV.

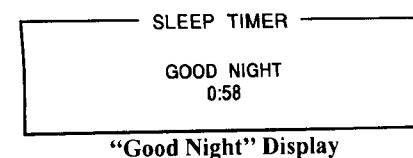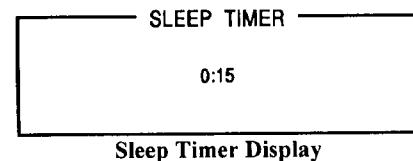

REMOTE CONTROL MODEL SC3390

OPERATION

This remote control provides access to all on-screen menus, as well as, access to special features that cannot be accessed by using the control panel on the TV.

PREPARATION FOR USE

Batteries are provided with this remote, but you must install them before using the remote.

For optimum performance, point the remote control toward your Zenith TV.

MENU, SELECT and ADJUST

Used with on-screen menus to see menu, select an option, and adjust that option.

Numbered Buttons

Used to select a TV channel.

ENTER

Used to view the Channel/Time Display or to remove any on-screen menu or display.

TIMER

Used to activate the SLEEP TIMER.

OFF-ON

Used to turn TV ON or OFF.

FLSHBK (Flashback)

Used to return to the last TV channel you were watching.

CHANNEL Up/Down

Used to select a TV channel by going Up or Down through channels programmed in your FAV. (Favorite) CHANNELS scan sequence.

VOLUME Up/Down

 
Used to adjust the volume level of the TV.

MUTE

Used to turn off sound while the picture remains. Press again to restore the sound.

CAPTIONS

Used to view closed captions broadcast with some television programs.

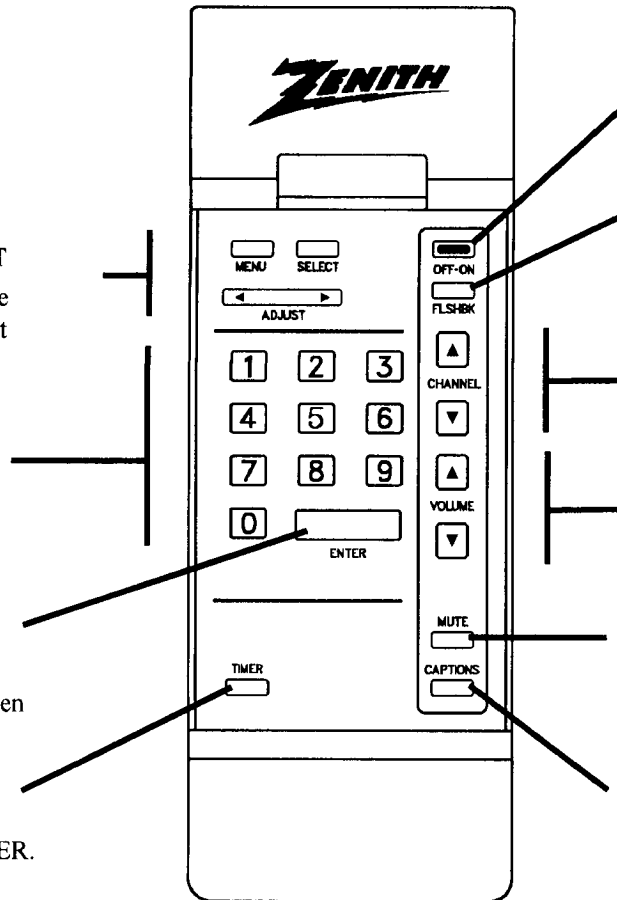


SC3390


INSTALLING BATTERIES

When the effective operating range of your remote becomes noticeably shorter, replace the batteries with two (2) high quality, alkaline, size AAA batteries.

 
NOTE: Zenith is not responsible for damage caused by battery leakage.

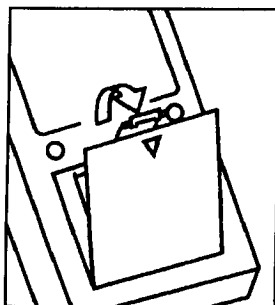

 Step 1.

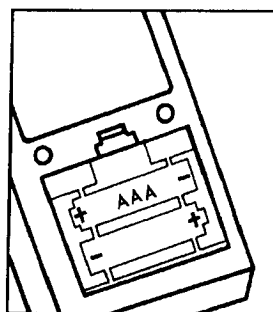

 Step 2.

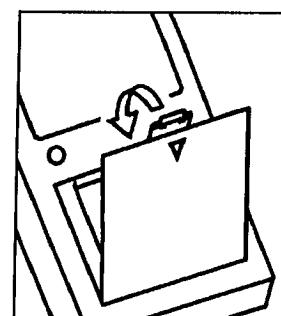

Step 3.

REMOTE CONTROL MODEL MBR3420

INTRODUCTION

 
The multi-brand remote control supplied with your new Zenith TV allows you to operate most models of infra-red (IR) remote-controlled TVs, VCRs, and cable-TV decoders, even if they are all different brands.

Your multi-brand remote has already been programmed to operate your Zenith TV, a Zenith cable-TV decoder and a Zenith VHS VCR. It must be programmed to operate other brands of equipment. Refer to the "Programming Brand Codes" section for more information.

CHOOSING OPERATING MODE

To use the remote to operate your TV, a cable-TV decoder or a VCR, you must first choose the mode of operation of the remote control. To select the mode of operation, press MODE repeatedly until the corresponding indicator lights.

Some controls on the remote will always operate a particular appliance. For example, VOLUME always operates the TV and PLAY always operates the VCR. The functions of some controls depends on the selected operating mode of the remote.

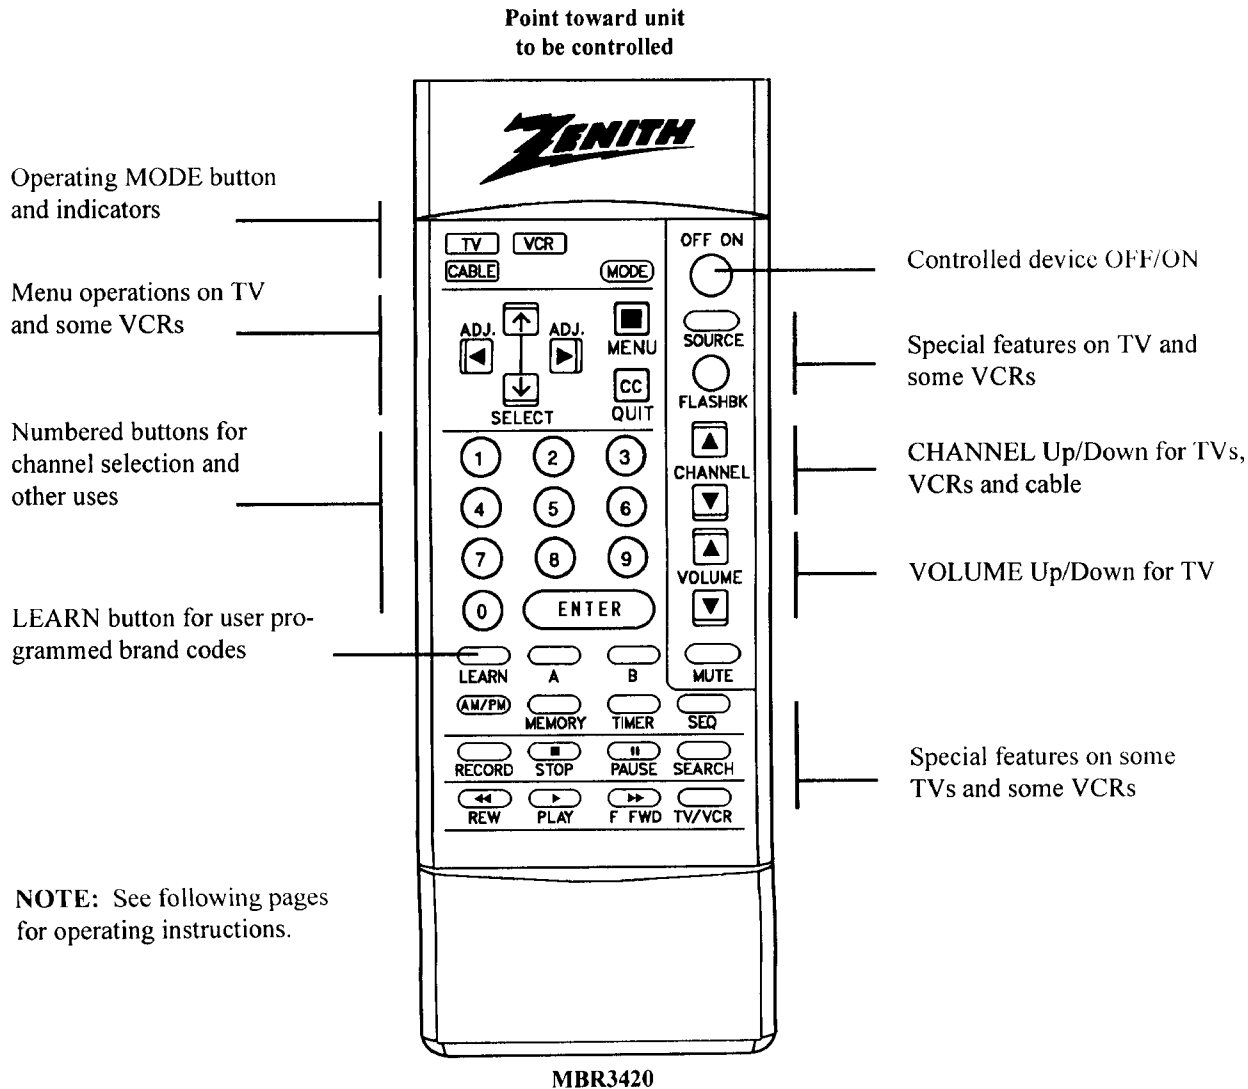

NOTE: See following pages for operating instructions.

REMOTE CONTROL MODEL MBR3420

TV OPERATIONS

The following functions and operations apply to your Zenith TV. The remote control must be in the TV mode to operate your TV.

MODE

Press repeatedly to select the TV mode of operation.

TV

Lights when TV mode of operation is selected.

CC (Closed Captions)

Used to view closed captions broadcast with some television programs.

MENU, SELECT and ADJUST

Used with on-screen menus to see menu, select an option, and adjust that option.

Numbered Buttons

Used to select a TV channel.

 
ENTER

Used to view the Channel/Time display or to remove any on-screen menu or display.

TIMER

Used to activate SLEEP TIMER and ON/OFF TIMER.

↑
Point toward your TV.

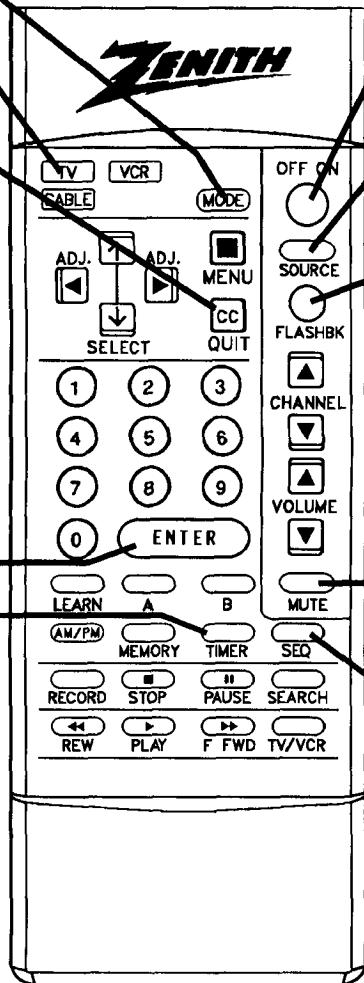

OFF/ON

Used to turn TV ON or OFF.

SOURCE

Used to display the menu of TV sources for some TVs. Press SOURCE again to step through the source selections. On some TVs, press SOURCE to select the AUX (Auxiliary) channel.

FLASHBK (Flashback)

Used to return to the last TV channel you were watching.

CHANNEL Up/Down

Used to sequence through the TV channels.

VOLUME Up/Down

Used to adjust the volume level of the TV.

MUTE

Used to turn off sound while the picture remains. Press again to restore the sound.

SPATIAL EQUALIZATION (SEq)

Used to select SEq audio mode on TVs equipped with SEq feature.

 
TV Operations

REMOTE CONTROL MODEL MBR3420

VCR OPERATIONS

The following functions and operations apply to Zenith VCR models built after 1988. The remote control must be in the VCR mode to operate your VCR.

The remote control supplied with your VCR may have keys not duplicated on the new remote. If these functions are desired, the original remote control will have to be used.

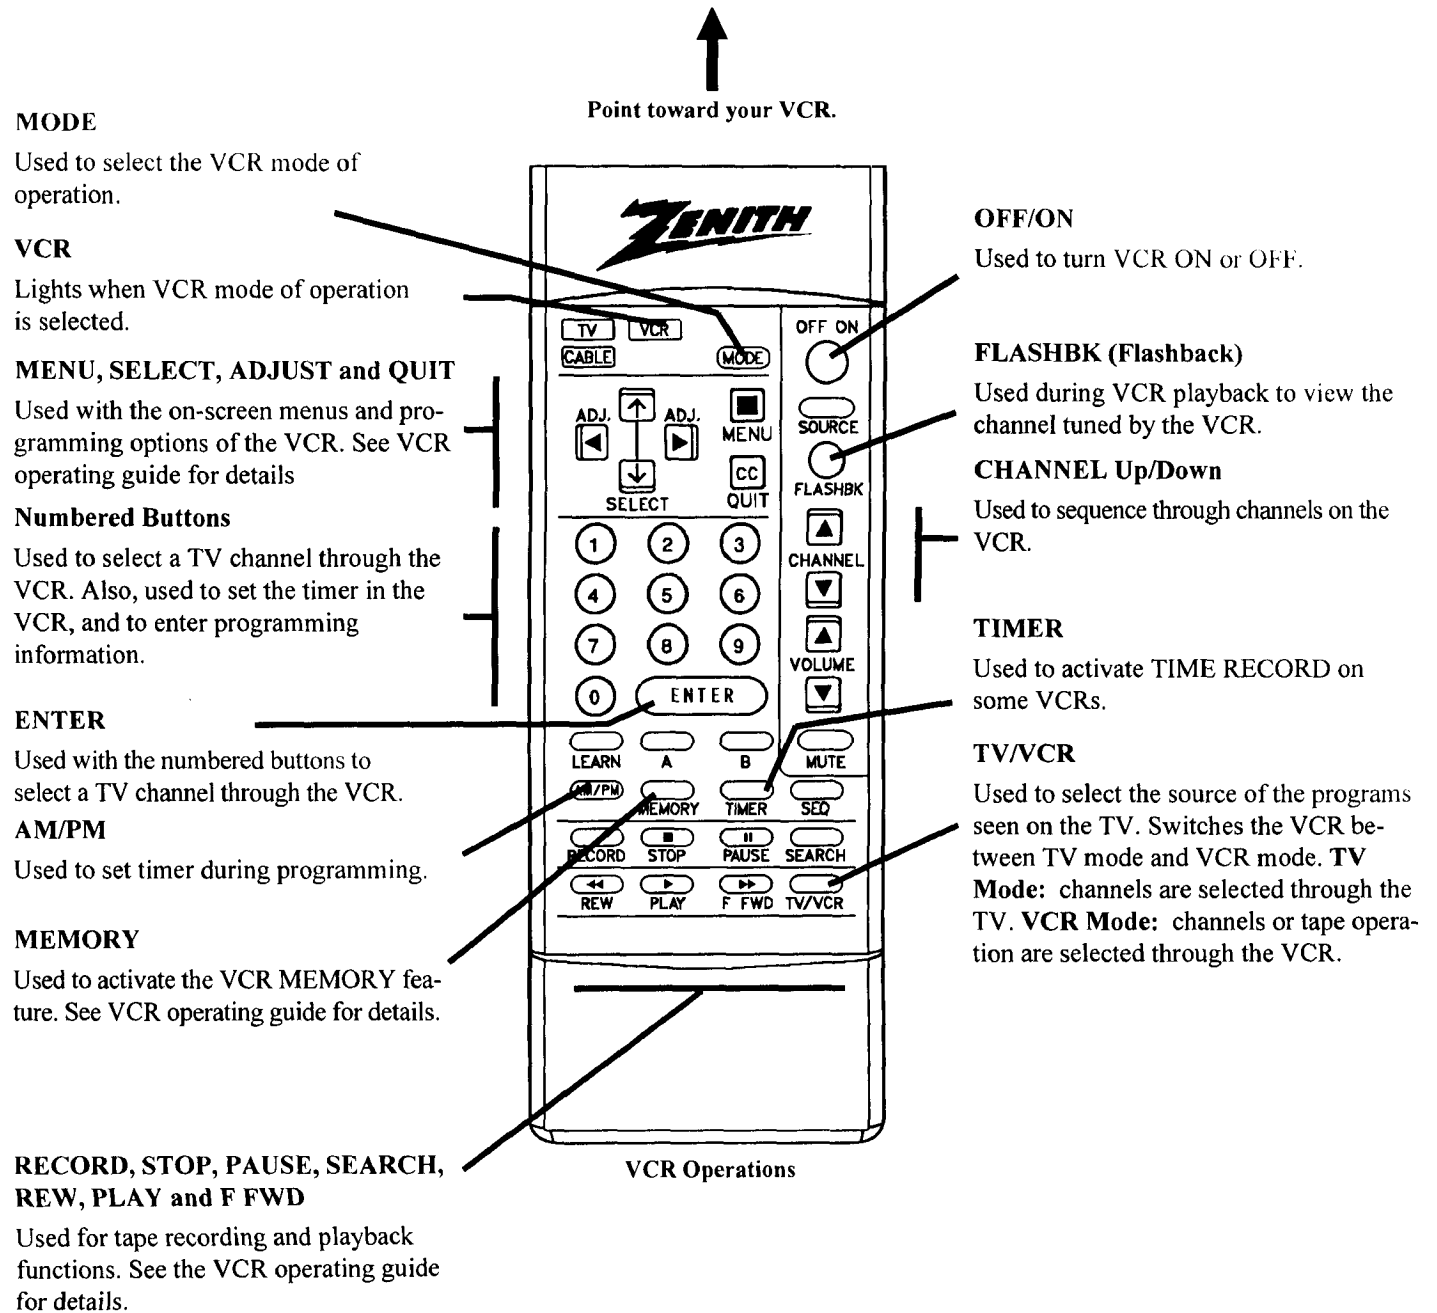

REMOTE CONTROL MODEL MBR3420

CABLE-TV OPERATIONS

The following functions and operations apply to a Zenith cable-TV decoder. The remote control must be in the CABLE mode to operate your cable-TV decoder.

The remote control supplied with your cable-TV decoder may have keys not duplicated on the new remote. If these functions are desired, the original remote control will have to be used.

MODE

Used to select the CABLE mode of operation.

CABLE

Lights when CABLE mode of operation is selected.

MENU, SELECT, ADJUST and QUIT

Function depends on the cable-TV system. See cable-TV operating guide for details.

 
Numbered Buttons

Used to select channels through cable-TV decoder

ENTER

Used with the numbered buttons to select a TV channel through the cable-TV decoder.

Point toward your cable-TV decoder.

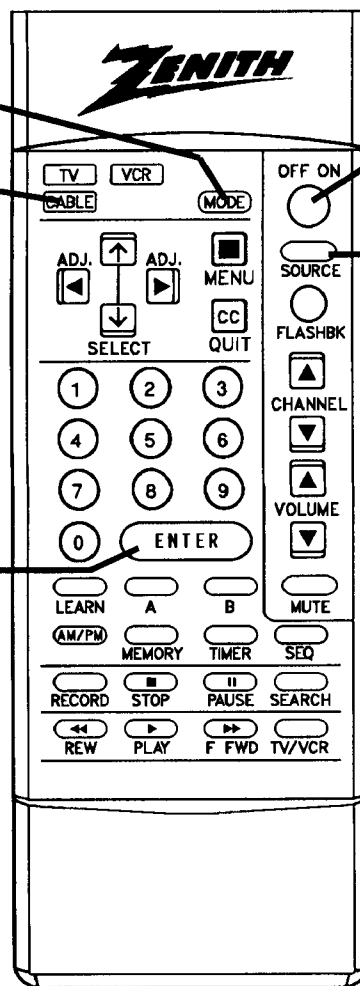

OFF/ON

Used to turn cable-TV decoder ON or OFF.

SOURCE

Used to select "A" or "B" cable channels.

CHANNEL Up/Down

Used to sequence through channels on the cable-TV decoder.

Cable-TV Decoder Operations

REMOTE CONTROL MODEL MBR3420

PREPARATION FOR USE

Batteries are provided with this remote, but you must install them before using the remote.

 
INSTALLING BATTERIES

When the effective operating range of your remote becomes noticeably shorter, replace the batteries with two (2) high quality, alkaline, size AAA batteries.


After installing new batteries, the remote control will set itself to Zenith brand codes, as follows: TV=101, VCR=201 and CABLE=301.

If you are going to operate equipment that uses different codes, the remote must be reprogrammed for those codes.


NOTE: Zenith is not responsible for damage caused by battery leakage.

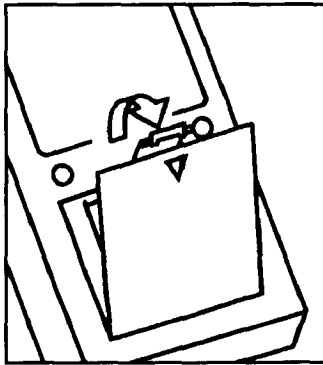

 Step 1.

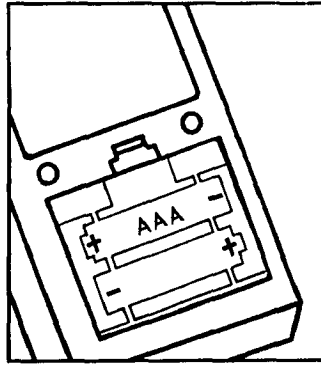

 Step 2.

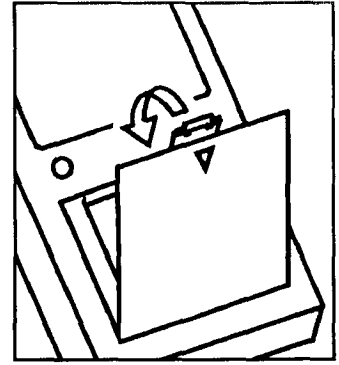

Step 3.

REMOTE CONTROL MODEL MBR3420

PROGRAMMING BRAND CODES

Before using your new remote control, it must be programmed to recognize the brands of equipment it will be used to operate. If you are using a Zenith TV, Zenith VHS VCR or a Zenith cable-TV decoder, it has already been programmed for you.

Find the code that corresponds to each brand and type of equipment you are going to operate. Refer to Tables 1, 2 and 3.

For example, if you were programming the remote for use with a Zenith TV, you would look up "Zenith" in "Table 1," and find code "101."

Write the brand codes for your equipment on the following lines.

TV CODE: _____

 
CABLE CODE: _____

VCR CODE: _____

1. Press MODE repeatedly to select the desired TV, VCR or CABLE operating mode for the remote.
2. Press LEARN for about 5 seconds until the MODE indicator lights for the selected TV, VCR or CABLE mode of operation.
3. Enter the proper brand code number for the equipment to be controlled.
4. Press LEARN. All three mode indicators should light briefly, then turn off to indicate the brand code has been programmed.
5. If all three mode indicators fail to light briefly, an error has occurred. Repeat steps 1-4 to try again.
6. Repeat steps 1-4 to program the remote for the other equipment you are using.

NOTE: CABLE mode can be programmed to operate a second TV or second VCR, if desired.

When batteries are removed: It will be necessary to reprogram the proper VCR and cable-TV decoder codes.

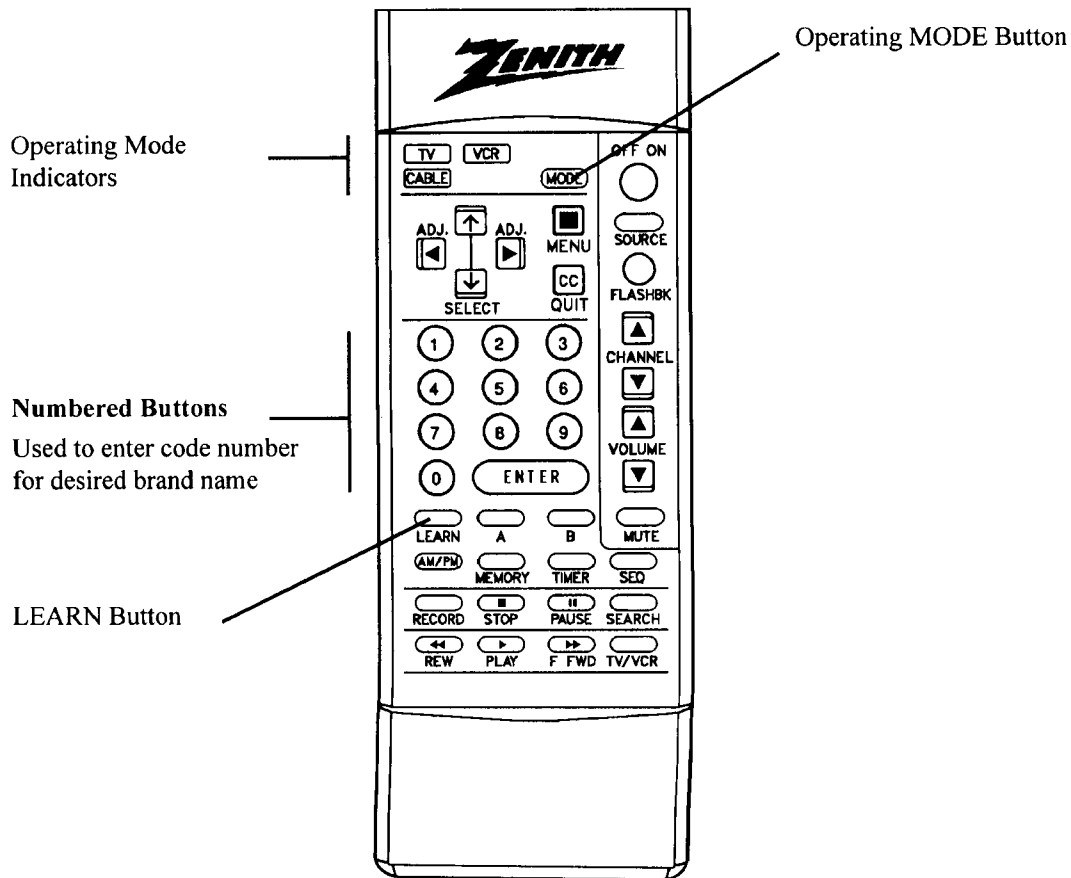

MBR3420 is Shown

REMOTE CONTROL MODEL MBR3420

TV, VCR AND CABLE-TV BRAND CODES

Table 1. TV Codes by Brand

TV Brand Name	Code	TV Brand Name	Code
Admiral	116	Montgomery Ward	119
Admiral	121	Montgomery Ward	121
Akai	104	Montgomery Ward	130
Amark	103	NEC	104
AOC	104	NEC	119
Bell & Howell	121	Panasonic	106
Centurion	119	Panasonic	107
Coronado	103	Philco	103
Curtis Mathes	116	Philco	104
Curtis Mathes	119	Philco	112
Curtis Mathes	121	Philco	113
Daytron	119	Philips	112
Emerson	103	Philips	113
Emerson	104	Pioneer	135
Emerson	123	Portland	103
Emerson	124	Quasar	106
Emerson	131	Quasar	107
Emerson	136	Realistic	105
Fisher	109	Realistic	123
Fisher	118	Realistic	124
General Electric	106	RCA	104
General Electric	107	RCA	116
General Electric	114	RCA	126
General Electric	116	Sampo	119
Goldstar	103	Samsung	103
Goldstar	104	Samsung	119
Goldstar	119	Samsung	134
Hitachi	102	Sanyo	108
Hitachi	103	Sanyo	109
Hitachi	129	Sanyo	118
JVC	125	Scott	119
JVC	132	Sears	103
J.C. Penney	104	Sears	108
J.C. Penney	110	Sears	109
J.C. Penney	114	Sears	110
J.C. Penney	117	Sears	111
J.C. Penney	119	Sears	118
KMC	103	Sears	134
KTV	103	Sharp	103
KTV	104	Sharp	105
Lodgenet	121	Sharp	122
Logik	121	Sharp	133
LXI	133	Sharp	137
LXI	137	Sony	115
Magnavox	103	Sylvania	112
Magnavox	112	Sylvania	113
Magnavox	113	Sylvania	117
Magnavox	119	Sylvania	119
Magnavox	127	Sylvania	127
Magnavox	128	Sylvania	128
Majestic	121	Tatung	106
Marantz	104	Teknika	103
Marantz	120	Teknika	112
Memorex	121	Teknika	121
MGA/Mitsubishi	104	Teknika	124
MGA/Mitsubishi	119	Telerent	103
MGA/Mitsubishi	120	Telerent	121
MGA/Mitsubishi	130	Toshiba	110
Montgomery Ward	103	Toshiba	111
Montgomery Ward	104	Toshiba	134
Montgomery Ward	105	Yorx	119
Montgomery Ward	113	Zenith	101
Montgomery Ward	114		

Table 2. VCR Codes by Brand

VCR Brand Name	Code	VCR Brand Name	Code
Akai	223	Pentax	215
Audio Dynamics	202	Philco	214
Audio Dynamics	218	Philips	214
Broksonic	221	Philips	227
Canon	214	Pioneer	210
Citizen	209	Pioneer	215
Craig	212	Pioneer Laser Disk	228
Curtis Mathes	214	Quasar	214
Curtis Mathes	216	RCA	215
DBX	202	RCA	216
DBX	218	RCA	220
Emerson	203	RCA	227
Emerson	221	Realistic	206
Emerson	223	Realistic	208
Emerson	226	Realistic	212
Emerson	233	Realistic	214
Emerson	235	Realistic	231
Fisher	211	Samsung	220
Fisher	212	Samsung	230
Fisher	213	Sanyo	206
Funai	231	Sanyo	212
General Electric	214	Scott	204
General Electric	216	Scott	205
General Electric	220	Scott	233
Goldstar	209	Sears	206
Hitachi	215	Sears	209
Instant Replay	214	Sears	211
Instant Replay	227	Sears	212
JVC	202	Sears	215
JVC	225	Sharp	208
J.C. Penney	214	Sony VHS	232
J.C. Penney	218	Sony Video 8	217
J.C. Penney	227	Sylvania	207
Kenwood	202	Sylvania	214
Magnavox	207	Sylvania	227
Magnavox	214	Symphonic	231
Marantz	207	Tashiko	209
Marantz	218	Tatung	202
Marta	209	Teac	202
Memorex	212	Teac	231
Memorex	214	Teknika	234
Memorex	231	Toshiba	205
MGA/Mitsubishi	204	Toshiba	215
MGA/Mitsubishi	222	Vector Research	204
Montgomery Ward	208	Vector Research	218
Montgomery Ward	214	Yamaha	202
Montgomery Ward	219	Yamaha	218
NEC	202	Zenith VHS	201
NEC	218	Zenith VHS	225
Panasonic	214	Zenith VHS	229


Table 3. Cable Decoder Codes by Brand

Cable Decoder Brand Name	Code	Cable Decoder Brand Name	Code
Drake Satellite	312	Pioneer	315
Drake Satellite	330	Regency	329
Gemini	305	Samsung	335
Gemini	331	Scientific Atlanta	316
General Instrument	305	Scientific Atlanta	323
General Instrument	306	Scientific Atlanta	336
Hamlin	302	Sprucer	
Hamlin	303	(Panasonic)	313
Jerrold	304	Standard	
Jerrold	307	Components	335
Jerrold	308	STS Satellite	324
Jerrold	309	Telecaption 4000	325
Jerrold	310	Tocom	317
Kale Vision	335	Tocom VIP	318
Macom	314	Toshiba	322
Macom	321	Toshiba Satellite	319
Macom Satellite	322	Zenith	301
Magnavox	334	Zenith	322
NSC	335	Zenith AV3000	327
Oak	311	Zenith Satellite	312
Oak	332	Zenith Satellite	330
Panasonic	313	Zenith Satellite	328
Panasonic	320	Zenith Laser Disk	326
Paragon (Zenith)	333		

QUICK REFERENCE TO ON-SCREEN MENUS


AVAILABLE MENUS

 Your TV is menu operated, that is, adjustments that can be made to the TV appear on the screen in a list of choices you can make.

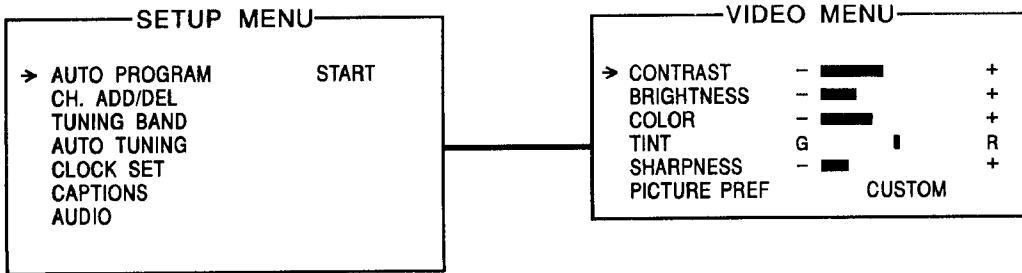

BASIC MENU OPERATION

 
1. Press MENU repeatedly to choose between available menus.
2. Press SELECT (SEL) Up/Down repeatedly until the desired option is highlighted.
3. Press ADJUST (ADJ) Left/Right to adjust an option.
4. Press ENTER (ENT) or wait a few seconds and the TV will return automatically to normal operation.

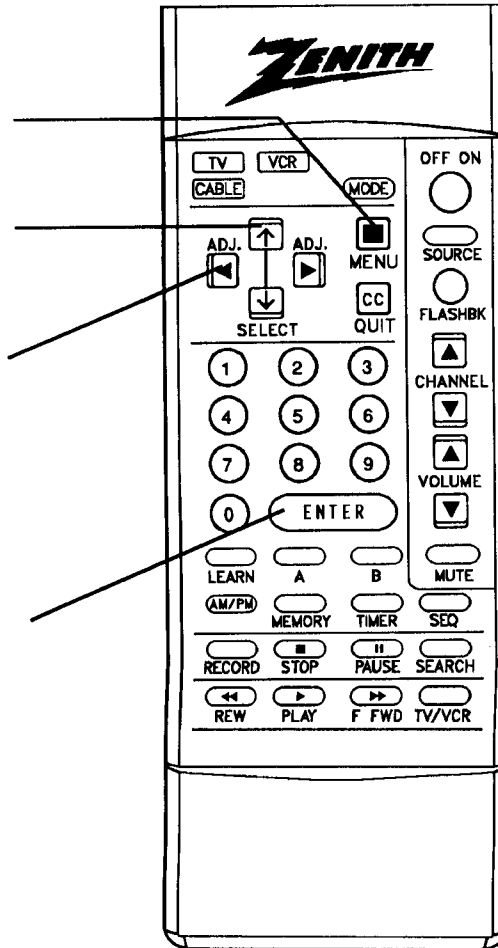



Typical Remote Control Shown

QUICK REFERENCE TO ON-SCREEN MENUS


 
MENU OPERATION EXAMPLE

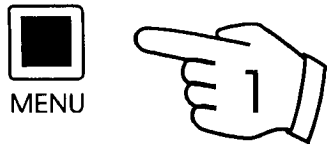

 
 
Press MENU repeatedly until the desired menu is shown. This example shows choosing the SETUP MENU.

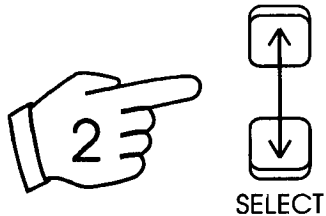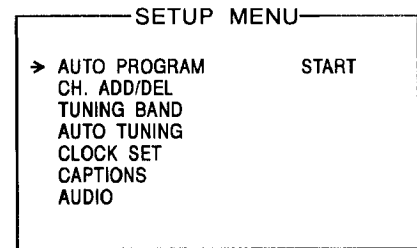

  
Press SELECT (SEL) Up/Down repeatedly until the desired option is highlighted. This example shows choosing TUNING BAND.

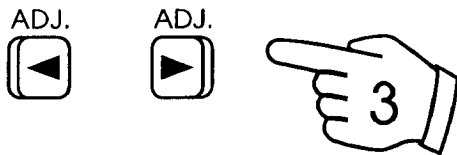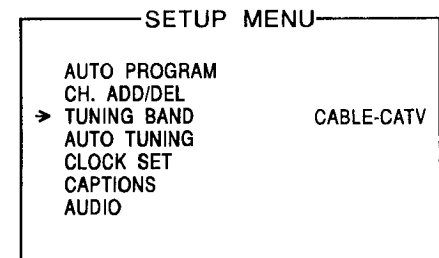

  Press ADJUST (ADJ) Left/Right to adjust an option. This example shows the various choices you have for TUNING BAND.

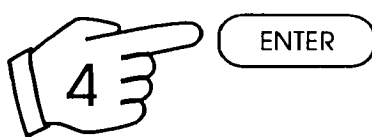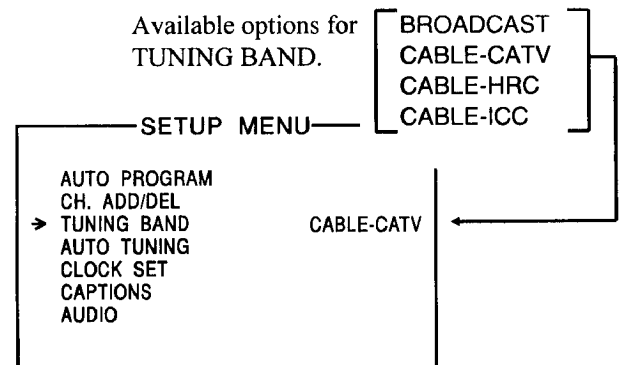

 Press ENTER (ENT) or wait a few seconds and the TV will return to normal operation.

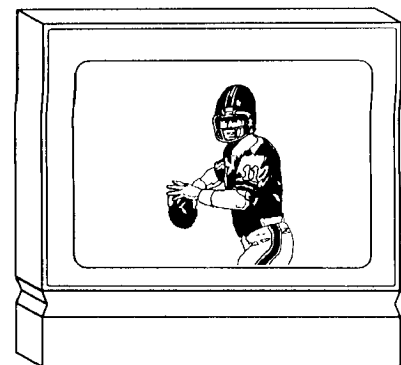



SETUP MENU

To Access SETUP MENU

Refer to the "Quick Reference to On-Screen Menus" section for details.

Before Using SETUP MENU

  Connect and turn ON all external equipment, such as cable TV decoder, VCR, etc. before using any item on the SETUP MENU.

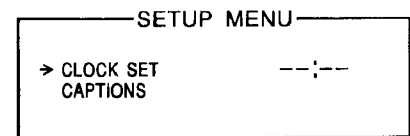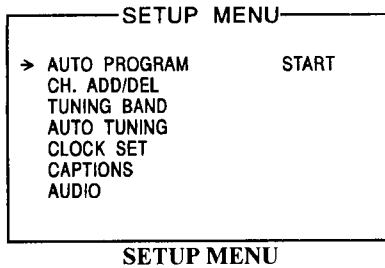

SETUP MENU While
AUX Channel is Chosen

AUTO PROGRAM

 
Purpose

Finds all available channels and stores them in the memory of the TV for access by CHANNEL (CH) Up/Down.


Use AUTO PROGRAM only when you first install your TV, or when you permanently change the connections to the TV. For example, when you replace the antenna with a cable-TV system.

To Use AUTO PROGRAM

Press ADJUST (ADJ) Left/Right to start AUTO PROGRAM.

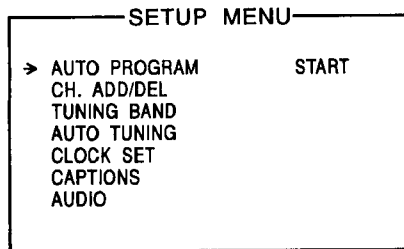

Selecting Auto Program

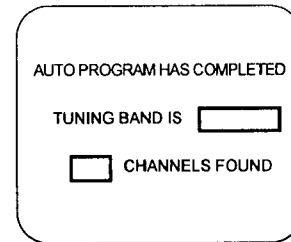 

Status When Search is Complete

When Some Channels Are Not Found

AUTO PROGRAM finds only active channels and stores them in the favorite channel memory. You can add channels to those stored in memory by using the CH. ADD/DEL option.

CH. (Channel) ADD/DEL

Purpose

 
Lets you add channels to and remove channels from the active channels found when using the AUTO PROGRAM option. In this way you can customize the channels that are accessed through CHANNEL (CH) Up/Down.

To Add a Channel to Scan Sequence

1. Use numbered buttons to select the channel you wish to add.
2. Add channel by pressing ADJUST (ADJ) Left/Right until the display shows ADD.

To Delete a Channel from Scan Sequence

1. Use numbered buttons to select the channel you wish to delete.
2. Delete channel by pressing ADJUST (ADJ) Left/Right until the display shows DEL.

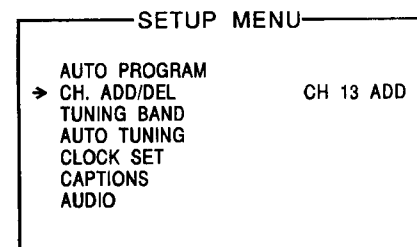

Selecting Ch. Add/Del

 
SETUP MENU

TUNING BAND

Purpose

Allows for setting the TV channel selector (tuner) to match your antenna or cable-TV system.

If you are having difficulty tuning channels, the TUNING BAND may have to be set manually to match your viewing needs.

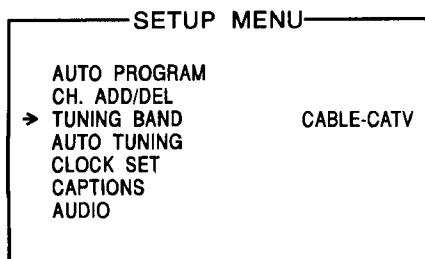

Selecting Tuning Band

To Use TUNING BAND

Press ADJUST (ADJ) Left/Right to select the tuning band that gives you the most channels:

- BROADCAST — is used for standard “over-the-air” broadcasts.
- CABLE — CATV is used for most standard cable-TV (CATV) systems.
- CABLE — HRC is used for cable-TV systems that use HRC (Harmonically Related Carrier).
- CABLE — ICC is used for cable-TV systems using ICC (Incremental Coherent Carrier).

Available Channels per Band

 
The channels that are available in the broadcast and cable tuning bands are shown below:

- BROADCAST Band — VHF 2 to 13, UHF 14 to 69
- CATV, HRC and ICC Bands — 1 to 125

AUTO TUNING

Purpose

Lets your TV compensate for variations in broadcast and cable-TV frequencies.

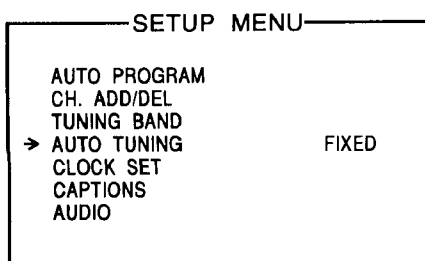

Selecting Auto Tuning

If you are having difficulty tuning channels, the AUTO TUNING may have to be set manually to match your viewing needs.

To Use AUTO TUNING

 
Press ADJUST (ADJ) Left/Right to select the mode of operation that gives you the most channels:

- FIXED is used to receive “over-the-air” TV stations, and with many cable-TV systems.
- SEARCH is used only when the TV must search to find the frequency being received, such as when used with certain cable-TV systems, VCRs and video game controllers.

CLOCK SET

Purpose

Sets the clock in the TV to the correct time.

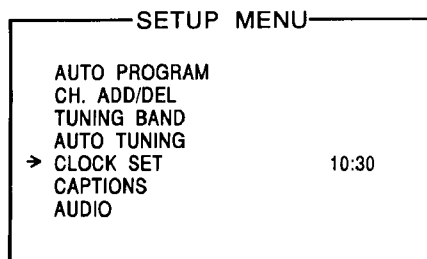


Selecting Clock Set

To Use CLOCK SET from Remote Control

Use the numbered buttons on the remote control to enter the correct time. Press ENTER (ENT) to start the clock.

To Use CLOCK SET from Control Panel

 Use ADJUST (ADJ) Left/Right to advance the clock. Press ENTER (ENT) to start the clock.

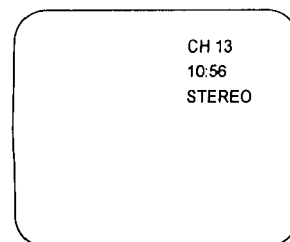


Channel/Time Display

SETUP MENU

CAPTIONS

Purpose

 Displays closed captions (CC) or informational text when available on the selected channel.

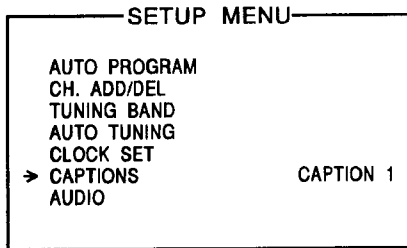


Selecting Captions

To Use CAPTIONS


Press ADJUST (ADJ) Left/Right to select desired mode of operation. Five different selections can be made: OFF, CAPTION 1, CAPTION 2, TEXT 1 or TEXT 2.

 At the time of this writing, very little appears in any selection except CAPTION 1. Therefore you should select CAPTION 1 and leave it in that selection unless you know there is something you want to see in one of the other selections. Once you make a selection, that selection is remembered until you change it.

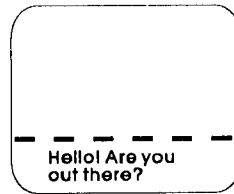

Typical Captions Display

 Captions may be shown anywhere on the screen.

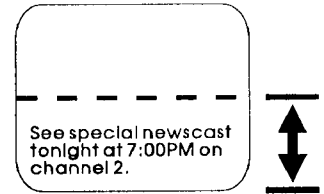


Typical Text Display

Fixed size text window fills lower half of screen. May be all black when no information is shown.

AUDIO

Purpose

 Determines whether your TV is operating in STEREO mode or MONO mode.

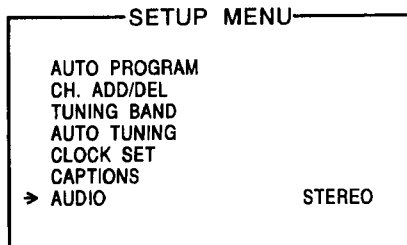

Selecting Audio

To Use AUDIO

Press ADJUST (ADJ) Left/Right to select one of the following options:

STEREO: Directs the sound to the left and right speakers as supplied by the program source (broadcast TV, VCR, etc.).

 
MONO: Directs the same sound to both the left and right speakers even if the source being received is in stereo.

We recommend that you use the STEREO option. The TV will switch automatically between the STEREO and MONO modes dependent on the signal being received.

When STEREO is selected but is not being received on the channel, a message appears stating that "THIS PROGRAM IS NOT IN STEREO."

The Channel/Time display shows whether the current program is in STEREO or MONO.

VIDEO MENU

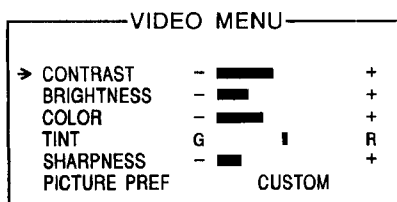

CONTRAST	Adjusts the overall contrast and color level of the picture.
BRIGHTNESS	Adjusts the brightness level of black areas in the picture.
COLOR	Adjusts the intensity of the colors in the picture.
TINT	Adjusts the color of the flesh tones, where G is Green and R is Red.
SHARPNESS	Adjusts the clarity of the edges of objects for the clearest picture quality.
PICTURE PREF. (Preference)	Lets you decide if you want to use your own CUSTOM video settings, or the factory PRESET video settings.

To Access VIDEO MENU

Refer to the “Quick Reference to On-Screen Menus” section for details.

NOTE: All adjustments on the VIDEO MENU are optional. You do not have to use these features in order to use your TV.

To Use Video Settings

1. Select video setting to be adjusted.
2. Press ADJUST (ADJ) Left/Right until the most pleasing picture is seen.

NOTE: Any adjustment made to these settings while PICTURE PREF. is in PRESET mode will automatically store the current settings as the CUSTOM setting.

To Use PICTURE PREF. (Preference)

Press ADJUST (ADJ) Left/Right to select status.

MAINTENANCE AND TROUBLESHOOTING

CARING FOR YOUR TV

Your TV will look better, have a longer life and perform better if you care for it properly.



First check to see that the TV is off. For added safety, unplug the TV from the power outlet.

NOTE: If you unplug your TV, you will have to reset the clock to the current time.

Picture Glass Cleaning

The picture tube face attracts dust particles and should be cleaned regularly. To clean the face, spray a small amount of glass cleaner on a cleaning cloth and wipe the picture tube glass face until clean. Repeat if necessary.

To delay new dust accumulation, wet a soft cloth in lukewarm water in which a little fabric softener or Ivory dishwashing detergent has been mixed. Wring the cloth almost dry. Wipe the glass face. Make sure no drops of moisture are squeezed onto the glass. Do not wipe the glass dry. Allow the glass to air-dry before you turn the TV on again.

Cabinet Care

Non-Wood Cabinet or Cabinet Components.

Moisten a soft cloth with a mild soap solution or Ivory dishwashing detergent. Wipe the surface with a damp cloth. Then rinse the cloth in clean water and wipe the surface again. Allow the TV to air-dry before turning it on.

Wood Cabinets or Cabinet Components.

Use any good furniture cleaner and polish. Regular care will help preserve the finish.

EXTENDED ABSENCE

Before an extended absence (such as a vacation) you may want to unplug the power cord from the electrical wall outlet. This will protect the TV from possible damage from lightning or power line surges. If you have an outdoor antenna, you may also want to disconnect the antenna lead-in wires on the back of the TV.

NOTE: If you unplug your TV, you will have to reset the clock to the current time.

TV PICTURE INTERFERENCE

Your TV picture may be affected by interference caused by one or a number of factors. These include:

Nearby Automobile Ignition, Electrical Appliances, etc.

Which causes a speckled, streaked picture. This is most noticeable in weak signal areas.

Snow in Picture Caused by insufficient signal. Usually caused by the TV being located too far from the TV station or by an improper antenna installation.

Ghosts or Reflections Caused by signals being reflected from surrounding buildings, water tanks, or other high structures.

Radio Signal Police, amateur or CB radio transmitters may cause interference.

These interference problems can often be corrected through the use of a better antenna, signal amplifiers, or various filter devices. See your TV dealer for additional information, and available TV accessories.

MAINTENANCE AND TROUBLESHOOTING

BEFORE CALLING FOR SERVICE

Check these items and see if you can correct the trouble by changing the adjustment of a control or the setting of a switch.

By making these simple checks before calling for service, you may save time and money.

Problem

Try This

Picture OK. Poor sound.	Re-orient antenna. Try another channel — possible station trouble. Check for local interference. Check AUTO TUNING and TUNING BAND options on SETUP MENU.
Sound OK. Poor picture.	Re-orient antenna. Try another channel — possible station trouble. Adjust VIDEO MENU options with PICTURE PREF. in CUSTOM mode. Trouble with cable-TV system?
No picture or sound.	Is TV on? Is there power in wall outlet? Is TV plugged in? Is antenna hooked up? Is cable hooked up? Trouble with cable-TV system? Check auxiliary audio/video equipment. Check channel selection. Check TUNING BAND and AUTO TUNING options on SETUP MENU.
Picture blurred or distorted. Ghost in picture.	Check antenna or cable hook up for broken wires. Try another channel — possible station trouble. Check for local interference.
No color, or poor color.	Is it a color program? Check antenna or cable hook up for broken wires. Adjust VIDEO MENU options with PICTURE PREF. in the CUSTOM mode.
No sound.	VOLUME (VOL) setting may be too low. Check MUTE button operation on remote control.
Cannot select certain channels.	Channels may be skipped in CH. ADD/DEL option on SETUP MENU. Check TUNING BAND and AUTO TUNING options on SETUP MENU.
No closed captions	Are captions available? Is CAPTION 1 or CAPTION 2 selected using the CAPTIONS option on the SETUP MENU?
Black or blue box covers half of screen.	Is TEXT 1 or TEXT 2 selected using the CAPTIONS option on the SETUP MENU and is text information available?
No picture or sound when AUX channel is selected.	Is audio/video source hooked up properly? Are all wires connected to AUX INPUT jacks on connection center?
No stereo sound or weak stereo sound when using a stereo VCR.	Check AUDIO mode. Was stereo sound present before selecting AUX channel?
Remote control does not work.	Are batteries okay? Is TV turned ON? Is TV plugged in?

Always request that your technician use only genuine Zenith exact replacement parts for continued Quality and Safety performance. Keep your Zenith **ALL** Zenith.

NOTE: If your TV fails to respond to the PICTURE PREF. selection, or to any other menu selection, you must reset the TV. Simply disconnect the AC power cord from the power outlet. Wait a few minutes, then plug the TV back into the power outlet. You will have to reset the clock to the current time.

PRODUCT REGISTRATION CARD

You could win a full refund on your new Zenith product.

Look for the Product Registration Card on your new video product.

Each month a drawing is held by Zenith from the completed Product Registration Cards received during the preceding month. Zenith will reimburse the winner for the full purchase price of the product purchased.

In order to participate, simply complete and return the Product Registration Card at once, even if you choose not to complete the information and interests portion of the questionnaire.

Product Card lost or misplaced?

The Product Registration Card furnished with your video product is pre-printed with its Model and Serial numbers. Please fill out the card and mail it at your earliest convenience. It is imperative that Zenith know how to reach you promptly if we discover a safety problem that would affect you. If the original card has been lost or misplaced, you may use the replacement card provided below. Either card will qualify you for the free drawing, but you are limited to only one entry in the drawing. Complete the card, place it in an envelope and mail it to:

**Zenith Electronics Corporation
P. O. Box 173257
Denver, CO 80217-3257**

Use the replacement Product Registration Card only if the original card has been misplaced or lost.

The odds of winning the free drawing described above, depend on the number of participants. Free drawing offer is void in Canada and other places where restricted or prohibited by law. Offer is void for Hotel/Motel and Institutional models. Rental models are not eligible.


PHOTOCOPY AND CUT ALONG DASHED LINE

Zenith Product Registration Card		H5Z01-01						
① Please Print Clearly or Type		② Area Code Telephone						
1. <input type="checkbox"/> Mr.	2. <input type="checkbox"/> Mrs.	3. <input type="checkbox"/> Ms.	4. <input type="checkbox"/> Miss	<input type="text"/>	<input type="text"/>	-	<input type="text"/>	<input type="text"/>
First Name		Initial		Last Name				
<input type="text"/>		<input type="text"/>		<input type="text"/>				
Street							Apt. No.	
<input type="text"/>							<input type="text"/>	
City								
<input type="text"/>								
State			Zip Code			③ Date of Purchase		
<input type="text"/>			<input type="text"/>			Mo. Day Yr.		
<input type="text"/>			<input type="text"/>			<input type="text"/>		
MODEL NUMBER	<input type="text"/>							
Copy Numbers Here From Label on Set								
SERIAL NUMBER	<input type="text"/>							

← Please record the model number and serial number from the sticker on the back of your set.

BROKEN OR LOST REMOTE CONTROL?

 
Makes a great
spare remote
control too!!!

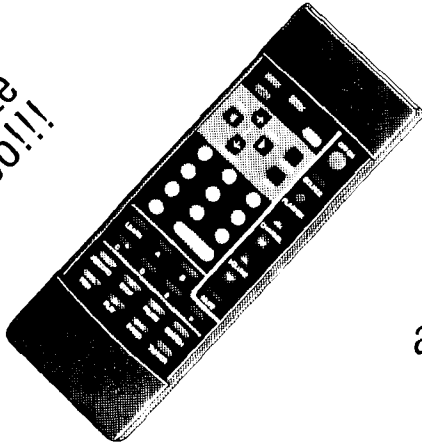

For an **Exact Replacement Remote Control** for your new Zenith Television, see your local Zenith Dealer or order direct by calling 1-800-255-6790. To assure the correct remote for your new Zenith, please have your television's model and serial number and date of purchase ready!

ONLY \$39.95

 OTHER FINE ACCESSORIES FOR YOUR TELEVISION.

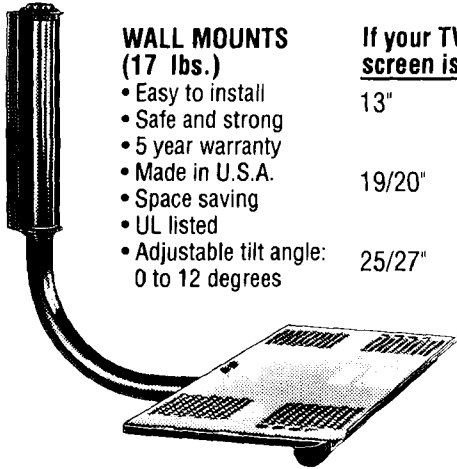

WALL MOUNTS (17 lbs.)

- Easy to install
- Safe and strong
- 5 year warranty
- Made in U.S.A.
- Space saving
- UL listed
- Adjustable tilt angle: 0 to 12 degrees

If your TV screen is:

13" CWM013

 
ONLY \$69.95

19/20" CWM020

ONLY \$89.95

25/27" CWM027

ONLY \$99.95

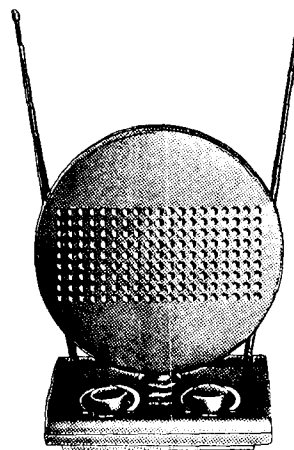

DELUXE AMPLIFIED 75 OHM INDOOR TV ANTENNA.

- Provides sharp, clear pictures
- VHF/UHF color & FM stereo reception
- VHF/UHF signal combiner circuitry
- Includes:
 - Matching transformer
 - 4 ft. coaxial cable with connectors
- Designed and built in the U.S.A.

ATS 750 **ONLY \$59.95**

PHOTOCOPY PAGE AND DETACH HERE

To order these fine accessories, please fill out this card and return a photocopy to:

Attn: Accessory Offers
Zenith Video Tech Corporation
1900 N. Austin Avenue
Chicago, IL 60639

or call 1-800-255-6790

Check or money order
(Made payable to Zenith Video Tech Corp.)

Visa Mastercard

Account #

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Expiration Date: _____ Signature: _____

IMPORTANT: PLEASE BE SURE TO COMPLETE THE INFORMATION BELOW.

TV Model Number _____ TV Serial Number _____ Mo. Day Yr.
(from sticker on back of unit) (from sticker on back of unit) (Approx. date of purchase.)

PLEASE ALLOW UP TO 3 WEEKS FOR DELIVERY. THANK YOU!

ITEM NUMBER	DESCRIPTION	QUANTITY	PRICE PER ITEM	TOTAL PRICE
Sales Tax: Please add your state sales tax if you live in one of the following states.			SUBTOTAL	
CA 7 3/4%, GA 4%, IL 8 3/4%, KS 4.9%, KY 6%, ME 8%, PA 8%, RI 7%, TX 7 3/4%, VA 4 1/2%, WA 6 1/2%.			STATE SALES TAX	
			SHIPPING & HANDLING	\$4.50
			TOTAL AMOUNT OF ORDER	

SHIP TO:

Telephone: () _____

Name: _____

Address: _____

Apt. # _____ City _____

State _____ Zip Code _____

NOTE: Price and availability subject to change.

YOUR ZENITH WARRANTY

Consumer Protection Plan for Zenith TV

Welcome into the Zenith family! We believe that you will be pleased with your new Zenith Color TV. Please read this Consumer Protection Plan carefully. It is a "LIMITED WARRANTY" as defined under Federal Law. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A.

Zenith's Responsibility

Service Labor — During a period of 90 days from effective warranty date, Zenith will pay for service labor by a U.S. or Canadian distributor-approved Zenith service center when needed as a result of manufacturing defects.

Parts — New or remanufactured replacements for factory-defective parts will be supplied by a U.S. or Canadian distributor-approved service center for one year from effective warranty date (color picture tube — two years). Such replacement parts are warranted for the remaining portion of the original warranty period.

Home Service — Warranty service for 19" diagonal (U.S.A.) or larger screen size models is provided in the home.

Not Covered — This warranty covers manufacturing defects and does not cover installation, adjustment of customer controls in the home, installation or repair of home antenna systems, cable converters or cable company-supplied equipment; it also does not cover damage due to misuse, abuse, negligence, acts of God or other causes beyond the control of Zenith. Any alteration of the product after manufacture voids this warranty in its entirety.

Owner's Responsibility

Effective Warranty Date — Warranty begins on the date of original consumer installation. For your convenience, keep the dealers dated bill of sale or delivery ticket as evidence of the purchase date.

Operating Guide — Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls.

Carry-In Service — Models under 19" diagonal (U.S.A.) screen size must be taken to a distributor-approved Zenith service center for warranty service and must be picked up by the owner.

Antenna — Reception problems caused by inadequate home antennas or faulty antenna connections are the owner's responsibility.

Important: Product Registration — Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you.

Warranty Service — For warranty service information, contact your Zenith dealer preferably, or any distributor-approved Zenith service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, write:

Zenith Electronics Corporation

Customer Service Department

1900 N. Austin Avenue

Chicago, Illinois 60639-5079

Telephone: (312) 745-5152

Mon-Fri, 8:00 a.m. - 4:30 p.m. Central Time

NOTE: Before you ask for Warranty service, check the Operating Guide section entitled, "MAINTENANCE AND TROUBLESHOOTING." It may be possible to avoid a service call.

ZENITH ELECTRONICS CORPORATION
1000 MILWAUKEE AVENUE
GLENVIEW, ILLINOIS 60025

Part No. 206-2733
Printed in U.S.A.
EP-EDCBAO
