 


MAGNAVOX
Smart. Very smart.®

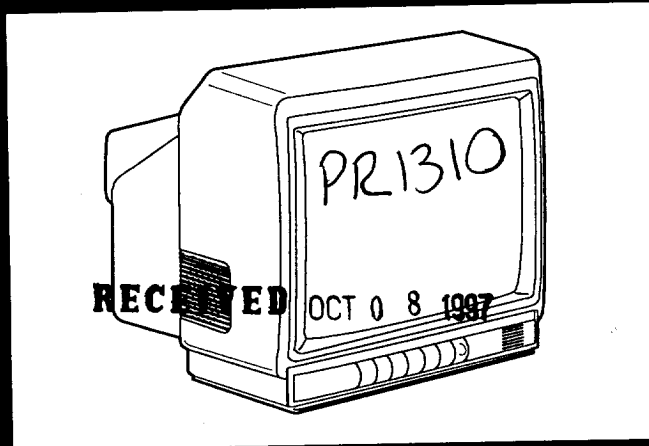

OWNER'S MANUAL

QUESTIONS ABOUT THIS PRODUCT?
CALL OUR INFORMATION CENTER.

1-800-541-5411

WARRANTY
Return Your
Registration Card
Within 10 Days.
See Why Inside

MAGNAVOX

Smart.Very smart.®

WARRANTY REGISTRATION CARD

Return your Warranty Registration Card today to ensure you receive all the benefits you're entitled to.

With your MAGNAVOX purchase, you receive a complete record of the privileges of owning a MAGNAVOX product. Be completely satisfied with the quality, performance, and price of your purchase all year long. And have your own copy of these important benefits.

Warranty

Registration

Home

Shopping Network

Model

Registration

Fill in the information provided on this card to ensure you receive all the benefits you're entitled to. Be completely satisfied with the quality, performance, and price of your purchase all year long. And have your own copy of these important benefits.

Fill in the information provided on this card to ensure you receive all the benefits you're entitled to. Be completely satisfied with the quality, performance, and price of your purchase all year long. And have your own copy of these important benefits.

Fill in the information provided on this card to ensure you receive all the benefits you're entitled to. Be completely satisfied with the quality, performance, and price of your purchase all year long. And have your own copy of these important benefits.

HURRY!
Registration
Needed
Within 10
Days.

MAGNAVOX

Smart.Very smart.®

Congratulations on your purchase -and welcome to the "family!"

Dear MAGNAVOX product owner:

Thank you for your confidence in MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers which you qualify for, plus easy access to accessories from our convenient home shopping network.

And most important of all, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a MAGNAVOX product.

Sincerely,

Robert Minkhorst
President and Chief Executive Officer

P.S. Remember, to get the most from your MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

KNOW THESE SAFETY SYMBOLS

CAUTION



This sign indicates hazardous conditions exist which could cause an electrical shock. For the safety of yourself and your investment, please do not remove product covering.

As the temperature falls, call attention to features for which you should read the attached literature in order to prevent freezing and maintenance problems.

WARNING: TO PREVENT FIRE (UPPER FLAMMABLE) DO NOT EXPOSE THIS EQUIPMENT TO FLAME OR HIGH TEMPERATURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT touch with hands or plug or wire, slip, and trip.

ATTENTION: Your safety glasses should always be worn in areas where you are likely to be struck by falling objects or the press of power (upward force).

For equipment that has a power cord, the power cord should be plugged into the back of the cabinet. Please do not use the power cord for other purposes.

MAGNAVOX
Safety Note

TABLE OF CONTENTS

Getting Started



Warning/Precautions2-3
Antenna/Cable Connections4-5
VCR to TV Antenna Connections5
Basic TV and Remote Control Operation6-7

On-Screen Features



How to Use On-Screen Feature Controls .8-9
◇ Setting the TV for Cable TV Operation10
◇ Adding Channels in Memory (Automatically) .11
◇ Adding Channels in Memory (Manually)12
◇ How to Set the TV for Closed Captioning13
◇ Using the TV Channel Reminder14
◇ Adjusting the TV Color15
◇ Using the On-Screen Language Option16
◇ Using the TV Volume Bar Control17

Remote Control Operation



Using the Remote with the TV18
Setting the TV Sleep Timer Control19

General Information



Tips if Something Isn't Working20
Glossary of TV Terms21
Index22
Warranty23

FEATURES

Infrared Remote Control which works your TV as well as all on-screen feature controls.

Standard broadcast (VHF/UHF) or Cable TV (CATV) channel capability.

Closed Captioning which allows the viewer to read TV program dialogue or voice conversations as on-screen text.

Automatic Programming of channels for quick and easy selection of favorite stations available in your area.

On-Screen Features (in either English, French or Spanish) which show helpful messages for setting of TV controls (such as color adjustment, timer settings, and channel memory.)

Sleep-Timer which automatically turns the TV OFF at preset times.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.

**QUESTIONS ABOUT THIS PRODUCT?
CALL OUR INFORMATION CENTER.**

800-531-0039

The Model and Serial Numbers are found on the back of this TV set. Please record these numbers and purchase date in the space below. Refer to them whenever you ask your dealer about this TV set.

Model No. _____

Serial No. _____

Purchase Date _____

Please attach your sales receipt to this book and keep it for future reference.



ANTENNA/CABLE TV CONNECTIONS

First let's connect your Antenna or Cable TV signal to your TV. This will be easy since there is only one 75Ω antenna plug on the back of your TV - and that's where the antenna goes.

BEGIN

1 IF your antenna (or CABLE TV signal) has a round cable (75 ohm) with a metal prong (F-connector) on the end, then you're ready to connect it to the TV.



IF your antenna has flat twin-lead wire (300ohm), you first need to attach the antenna wires to the screws on a 300 to 75 ohm adapter.

2 Push the round end of the adapter (or cable) onto the ANTENNA plug on the rear of the TV. If the round end of the cable connector is threaded, screw it down tight.



Try it out. Press **POWER** to turn the TV ON. Press the **CHANNEL UP** button. You should see local channels flash by.

 
Certain channel numbers have been added to the TV's memory at the factory. To set the TV to select only the channel numbers in your area, see page 11.



Remember. If the TV is connected to a Cable TV (CATV) signal, be sure to set the TV for that type signal (see page 10.)

To order any optional accessory contact your dealer or call the toll-free accessory ordering number (1-800-292-6066):


- UHF/VHF CombinerSBV1133A01
- 75-300 Ohm AdapterSBV1113A01
- 300-75 Ohm Adapter483521827003
- Indoor Dipole Antenna483530337001

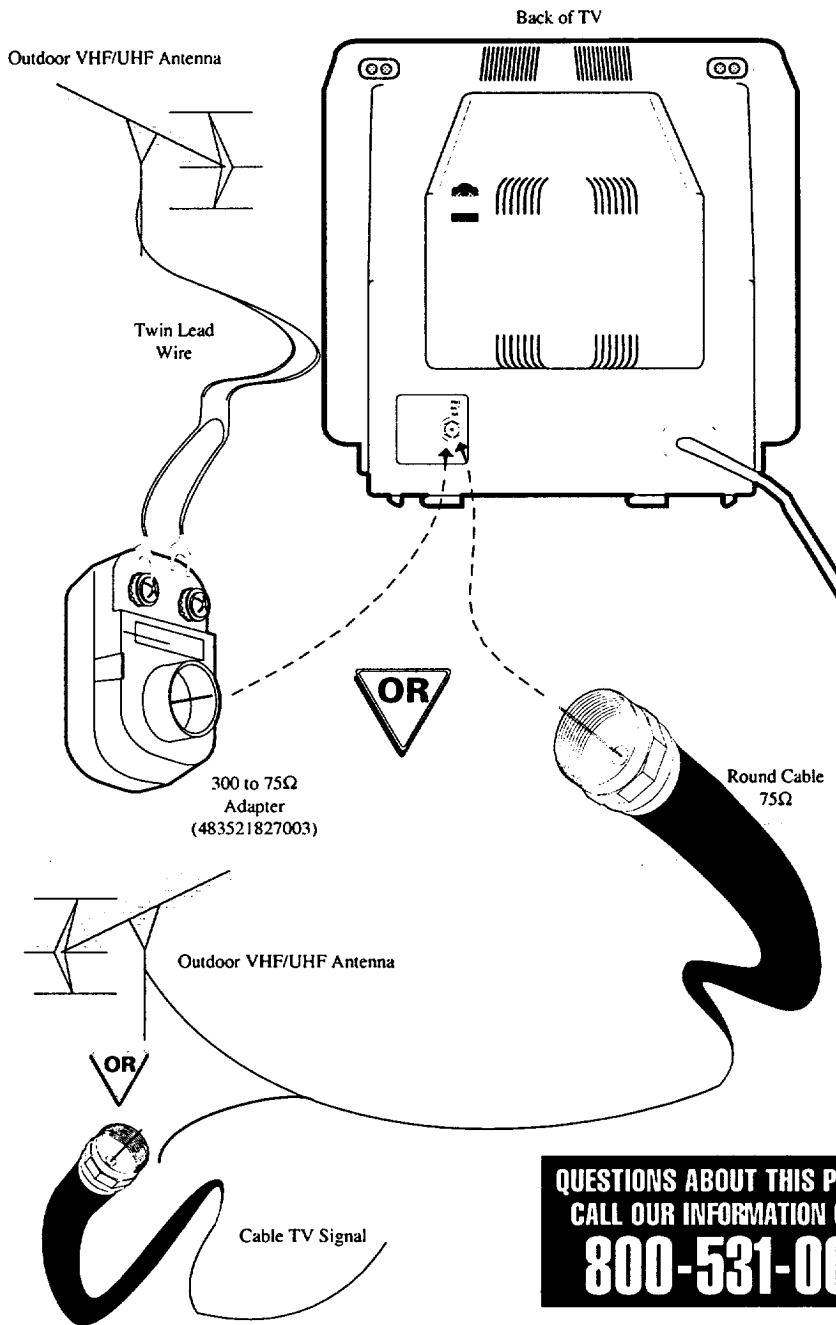

**QUESTIONS ABOUT THIS PRODUCT?
CALL OUR INFORMATION CENTER.
800-531-0039**

OPTIONAL INDOOR ANTENNA & ADAPTER (KIT # 4835 310 57354)

 1. Insert base of dipole antenna into socket on back of TV.
2. Attach antenna wires to screws on the adapter (300 to 75 ohm.)
3. Push the round end of the adapter onto the TV Antenna.

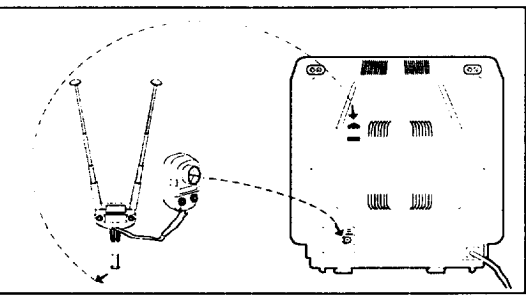



Some of you may have two separate antennas. For instance, one antenna is for VHF channels (2-13) and the other antenna is for UHF channels (14-69).


BEGIN

For homes with two separate antennas you will need an optional "combiner" before you can connect to the TV. See previous page for ordering details.

1 Attach the separate antennas to the correct screws on the combiner.

2 Push the round end of the combiner onto the ANTENNA plug on the rear of the TV.

 STOP

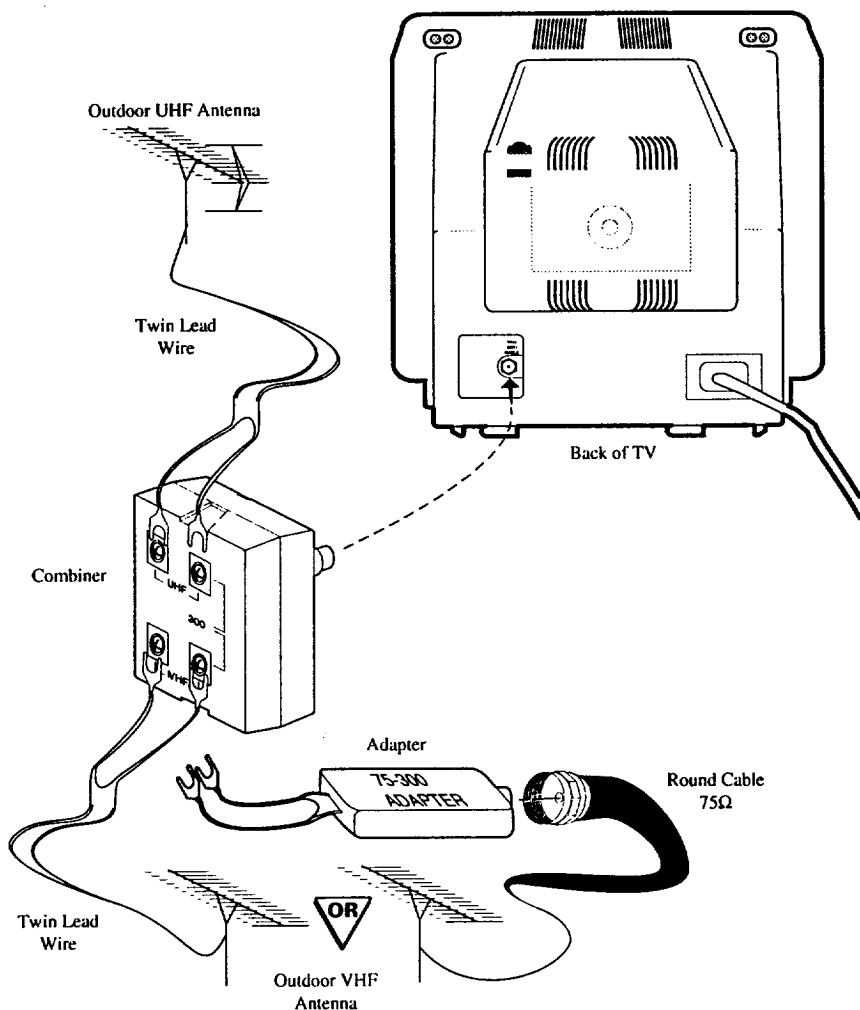

VCR TO TV ANTENNA CONNECTION

 
To connect a VCR to the TV:

BEGIN

1 Connect your Antenna or Cable TV signal to the IN FROM ANT. plug on the VCR.

2 Connect the OUT TO TV plug on the VCR to the ANTENNA plug on the TV. (connecting cable supplied with the VCR.)

STOP

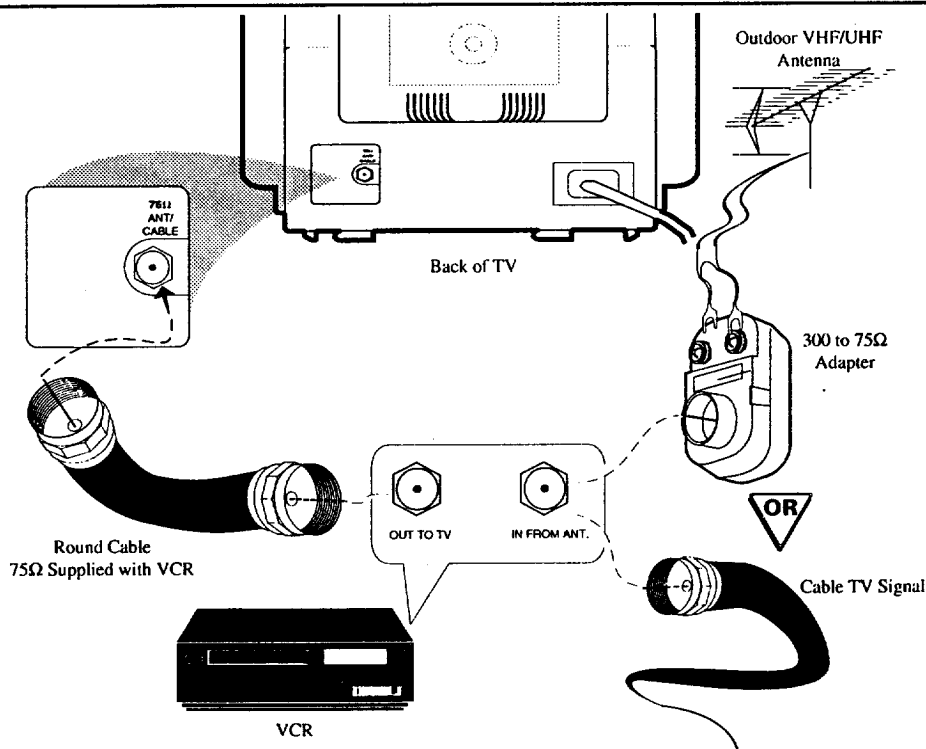




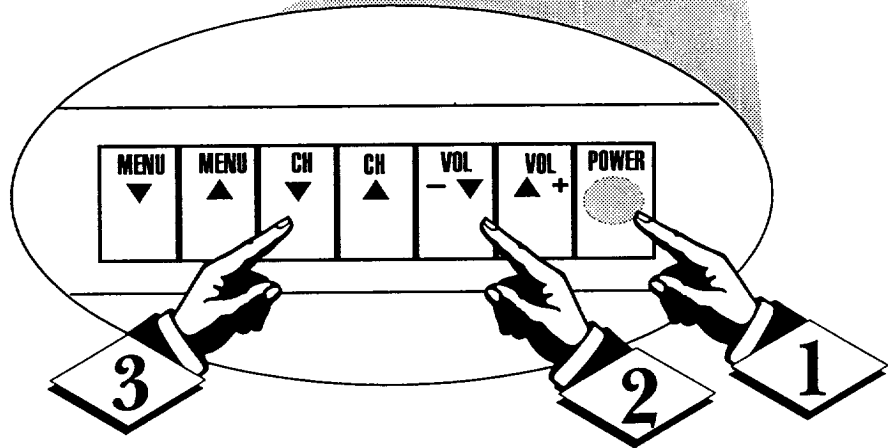 
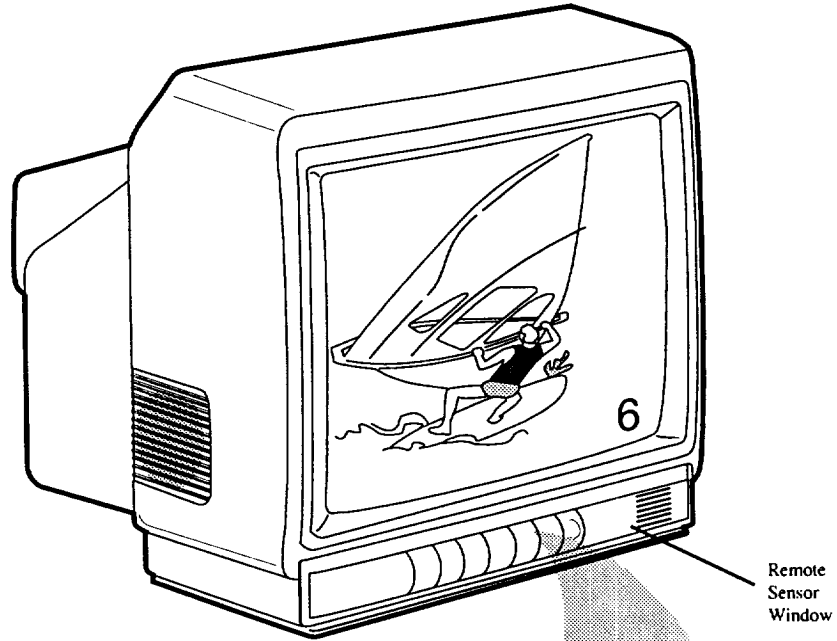 
BASIC TV OPERATION

BEGIN

- 1 Press the **POWER** button to turn the TV ON. (Note: you can press any button on the front of the TV to turn the TV ON.)
The tuned channel number will always briefly appear when the TV is first turned ON (and with channel changes). You can also press the **STATUS** button (on the remote) to see what channel the TV is ON.
- 2 Press the **VOLUME UP** (▲) or **DOWN** (▼) button to adjust the sound level.
- 3 Press the **CHANNEL UP** (▲) or **DOWN** (▼) button to select TV channels.
- 4 Point the remote control toward the remote sensor window on the TV when operating the TV with the remote.
- 5 Always press **two number buttons** on the remote when selecting channels. For example: press "0" then "6" for channel 6.



 Remember. If the TV is connected to a Cable TV (CATV) signal, be sure to set the TV for that type signal. See page 10.

 
 




To load the supplied batteries into the remote:

BEGIN

- 1 Remove the battery compartment lid on the back of the remote.
- 2 Place the batteries in the remote. Be sure to line the (+) and (-) ends of the batteries up correctly.
- 3 Reattach the battery lid.

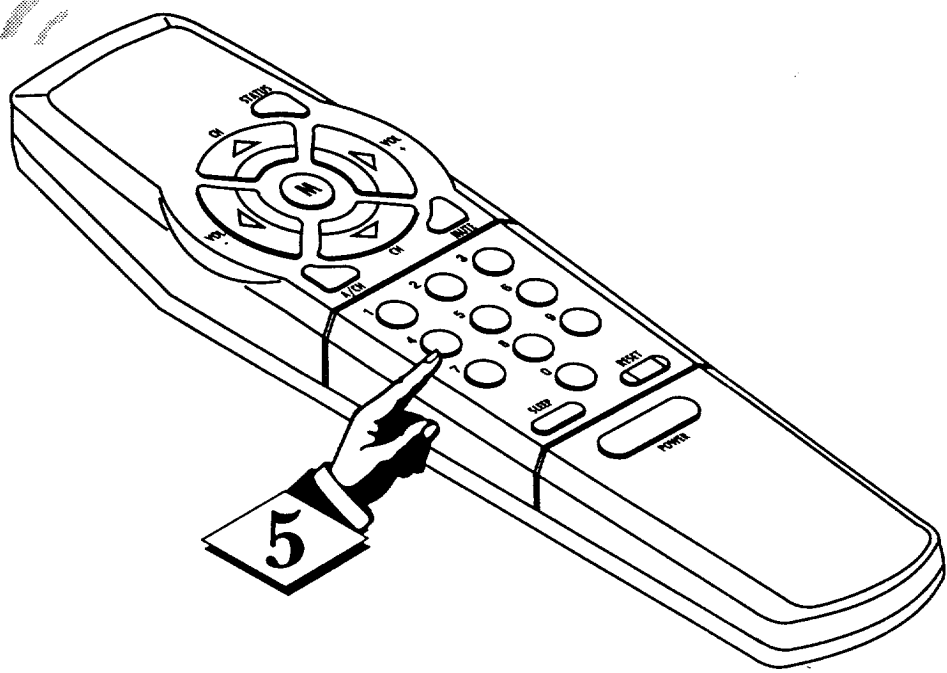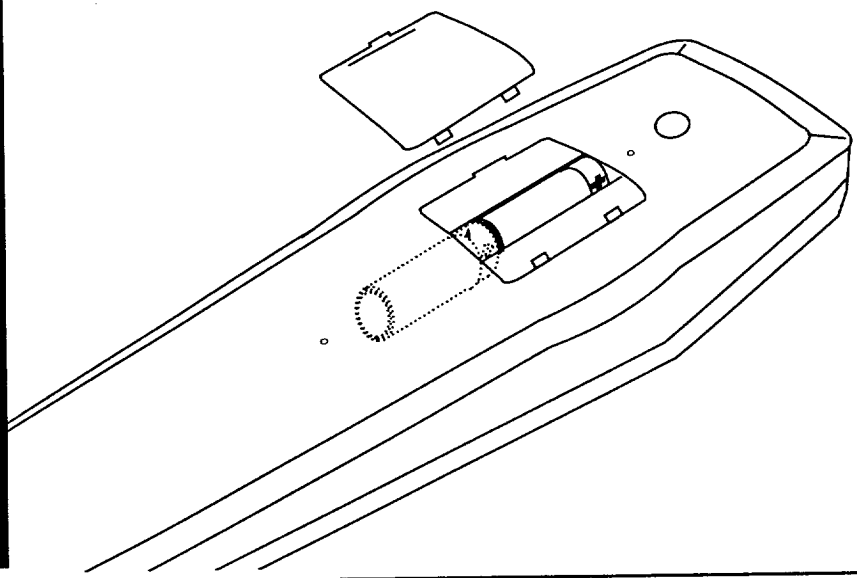

HOW TO USE ON-SCREEN FEATURES

Features for your TV can be adjusted from a MENU screen shown on the TV. A MENU is nothing more than an on-screen list of features. Each MENU item can be adjusted by viewing the screen and pressing a button.

BEGIN

1 Press MENU▲ or ▼ on the TV (or M button on the remote). An on-screen list of features appears on the TV screen.

2 Press MENU ▲ or ▼ (or M ▲ ▼ on the remote) to pick any of the on-screen features.

IF you pass the feature you want, you can press the M▲ button to back up through the MENU. (Press the M▼ button to go down through the MENU items).


3 Press (+) or (-) to adjust the selected on-screen feature.

4 Press STATUS button on the remote to clear the screen after an adjustment

 
 
OR

Use the "MENU EXIT" item and press "+ - ON" to clear the screen. You can also just wait and after a minute the MENU will drop from the screen.

STOP

 Remember. If the on screen MENU disappears and you are not finished working with it, just press MENU (or M button) and the feature list will return to the screen.

Selection ARROW points to the active MENU item. An adjustment scale (or box) also shows next to the selected MENU item.

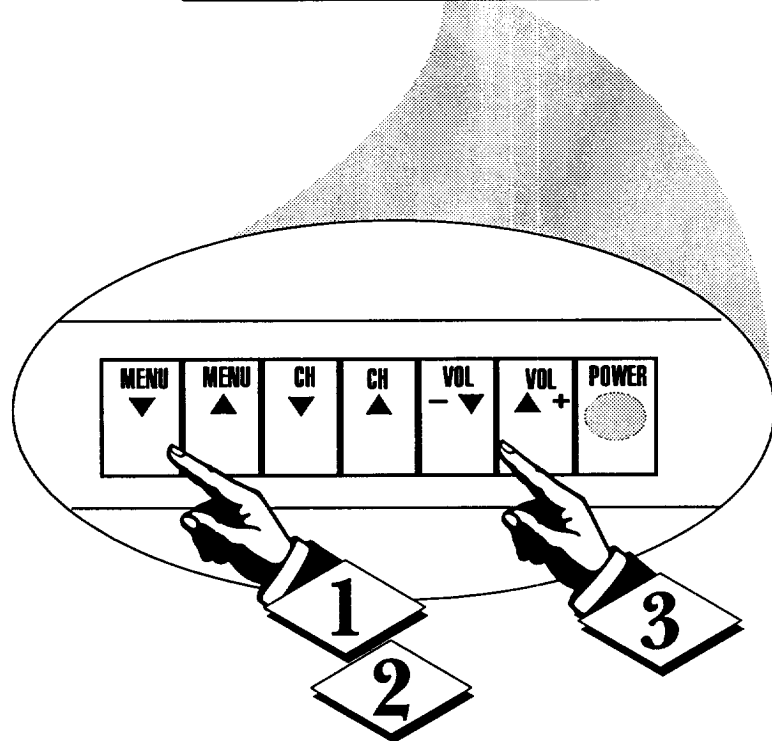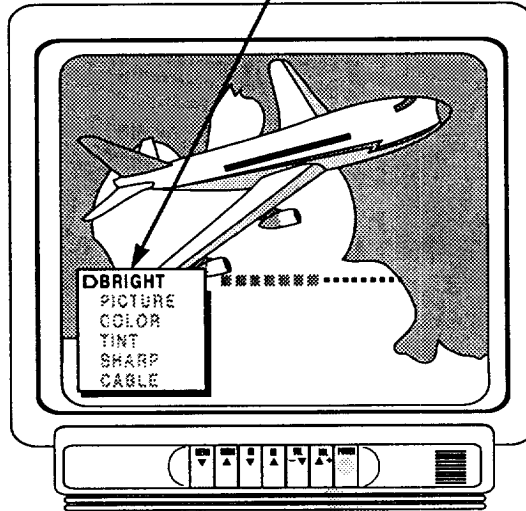


ON THE TELEVISION OR ON THE REMOTE

On-screen features that come with your TV:

- Six MENU items will show on the TV screen at one time. An ARROW will point to the active item.
- Just press MENU ▲ or ▼ buttons to move up or down through the MENU item list. Note: If you continue to press the MENU ▼ button after the last (“EXIT MENU”) item, you will start again at the beginning of menu item list. This also works in the opposite direction.
- See the following section for details on how to work each MENU item.

 BRIGHT
PICTURE
COLOR
TINT
SHARP
CABLE
PROGRAM
CHANNEL
SLEEP
REMINDER
CAPTION
VOL. BAR
LANGUAGE
EXIT MENU

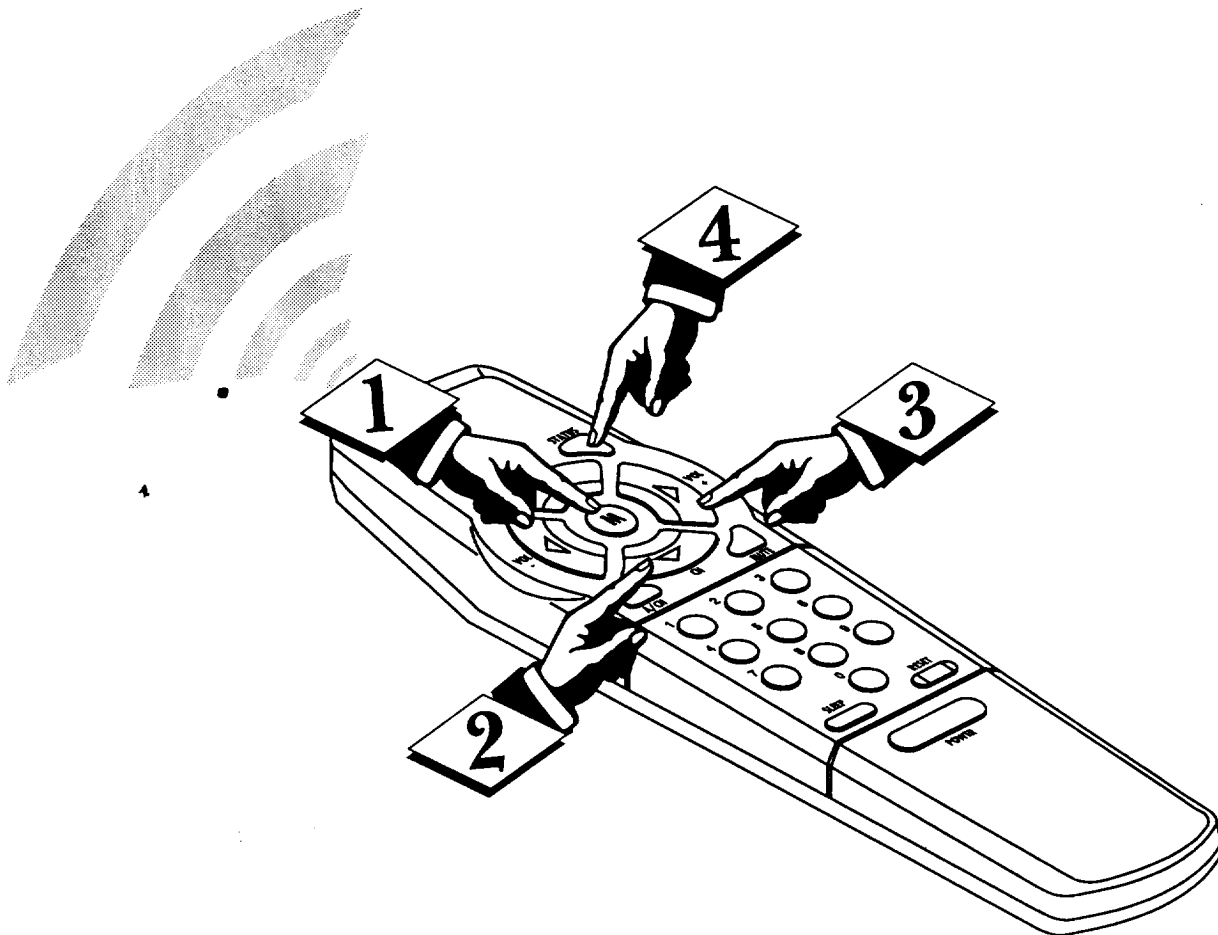

HOW TO SET THE TV FOR CABLE TV OPERATION

You need to make sure that the TV is set to pick up either Cable TV stations or Antenna signals. In other words, the TV needs to know whether you have connected a Cable TV signal or a normal antenna to its ANTENNA plug.

BEGIN

1 Press MENU ▲ or ▼ on the TV (or on the remote press M ▲▼ buttons.)

Select the word CABLE with the TV's on-screen Arrow.

2 Press the (+) or (-) buttons (on the TV or the remote) to select either:

YES- If you **DO** have Cable TV connected to the TV. Channels 1-125 can be selected.

NO- If you have an Antenna connected to the TV. Channels 2-69 can be selected.

3 Press STATUS to clear the screen

 
 
OR

Wait for the on-screen control to automatically drop from the screen.

STOP

Try it out. Press CHANNEL ▲▼ buttons and scan the channels. CH▲▼ on the remote works only after STATUS button is pressed (or Menu times out.)

Remember. The TV has been set at the factory to select certain channel numbers. See the following page on how to set the TV to select the channels in your area.

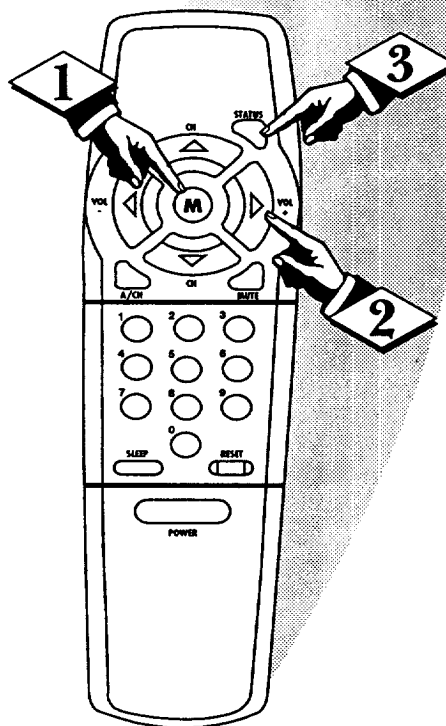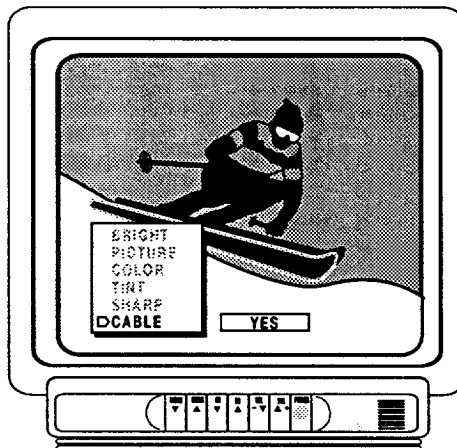

ADDING CHANNELS IN MEMORY (AUTO PROGRAMMING)

Your TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in your area when the CH(annel) ▲▼ buttons are pressed.

Please check and be sure the TV is set for the type of signal you have connected to the TV - Antenna or Cable TV (see previous page.)

BEGIN

1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons.)
Select the word PROGRAM with the TV's on-screen Arrow.

2 Press the (+) button (on the TV or the remote) to PROGRAM.

3 Press the (+) button again to start the TV search for area channels.

Flashing channel numbers will count upward on the screen as the TV looks for channels to "ADD".

You may press any button (on the TV or remote) to stop the channel search at any time. When the channel search is completed the TV will return to the last viewed channel.

 
 
4 Press STATUS button to clear the screen






Try it out. Press CHANNEL ▲▼ buttons and see which channels have been added.

Remember. If you want to drop any unwanted channels from the TV's memory, see the next page on how to "Manually" add and delete channels.

Note: As the TV searches for channels to "ADD" into memory the on-screen display may move (or jitter slightly). This is normal operation and does not indicate a need for service.

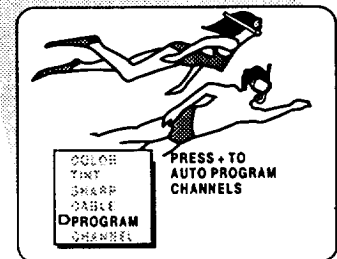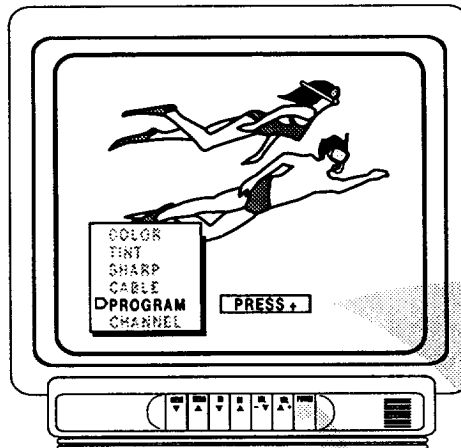

   "RED" channel numbers have been added to the TV's memory.
"WHITE" channel numbers are not present in the TV's program memory.

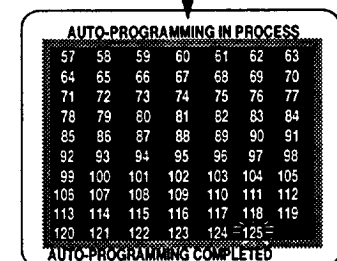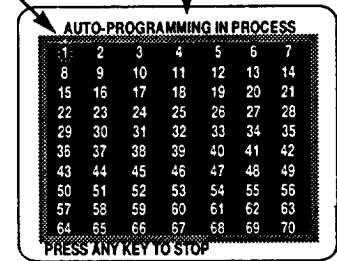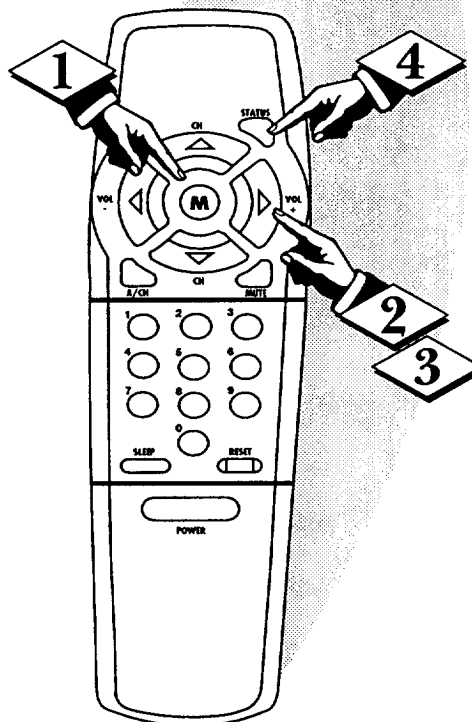

The TV screen will be blocked off until the search for channels is done.

ADDING CHANNELS IN MEMORY (MANUALLY)

Auto Programming (see previous page) adds all the channels it can find (on your Antenna or Cable TV system) into the TV's memory. Add/Delete Channels makes it easy for you to add other channels, or drop unwanted channels, from the list of channels in the TV's memory.

BEGIN

- 1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons.)

Select the word CHANNEL with the TV's on-screen Arrow.

- 2 Press CHANNEL NUMBER buttons on the remote (or CH ▲▼ buttons on the TV) to select the channel you want to SAVE (or DELETE.)

- 3 Press (+) button to SAVE the selected channel number into memory.

 
 
Press (-) button to DELETE a channel from memory.

- 4 Press the STATUS button to clear the screen after adding all the channels you want.



Try it out. Press the CHANNEL ▲ or ▼ buttons and "scan" from channel to channel. The channels you SAVED should appear. The channels you DELETED should not appear.

Remember. If you need to SAVE (or DELETE) a channel above 100, use the CH ▲▼ buttons at the TV. The remote control number buttons can select only up to channel 99.

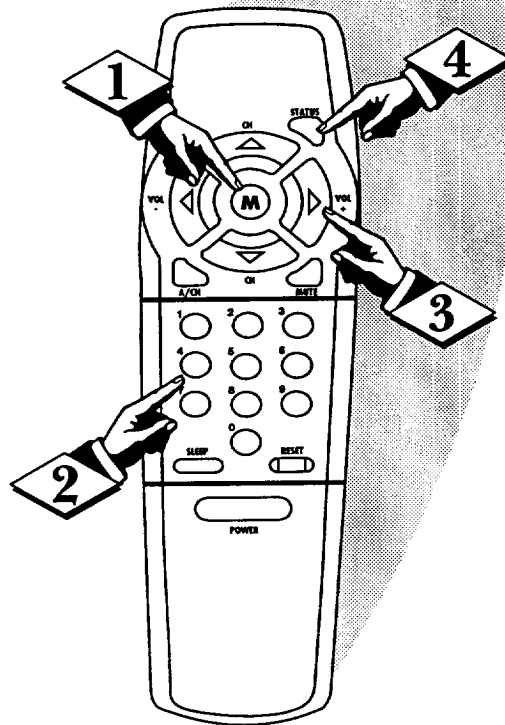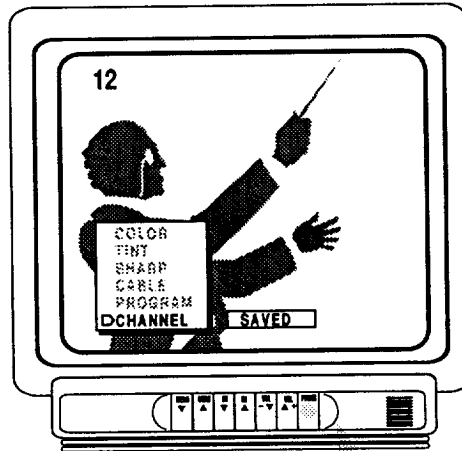

HOW TO SELECT THE CLOSED CAPTION FEATURE

Closed Captioning allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

BEGIN

1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons.) Select the word CAPTION with the TV's on-screen Arrow.

2 Press (+) or (-) buttons to select the desired Closed Caption (CC) mode - For Example: CAPTION 1.

CAPTION 1, 2, 3, or 4 mode:

dialogue (and descriptions) for the action on the captioned TV program shows on-screen. (See important note on this page.)

TEXT 1, 2, 3, or 4 mode:

often used for channel guide, schedules, or bulletin board information for CC programs.

 
3 Press the STATUS button after making your Caption mode selection. The TV display will clear and the selected Caption mode will be active.

To cancel, set the CAPTION feature to OFF when finished viewing.





4 Remember. Broadcast stations will often use spelling abbreviations, symbols, dropouts and other grammatical shortcuts in order to keep pace with the on-screen action. These type factors vary upon the source of the captioned text material and do not indicate a need for service on the part of the TV.

NOTE: Not all TV programs and product commercials are made for broadcast with Closed Caption (CC) information included. Neither are all Closed Caption modes (CAPTION 1-4, or TEXT 1-4) necessarily being used by a broadcast station during the transmission of a closed caption program. Refer to your area's TV program listings for the stations and times of Closed Caption shows.

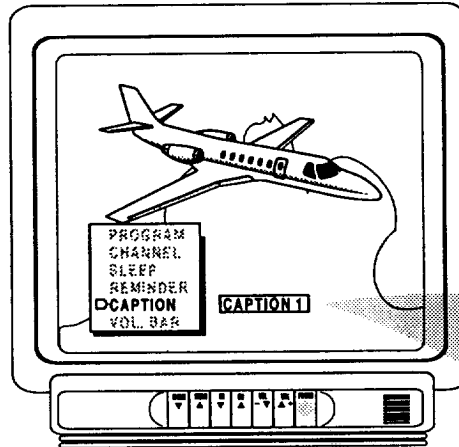

CAPTION mode
Example Display

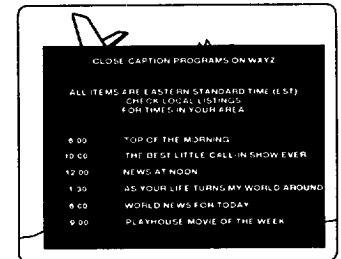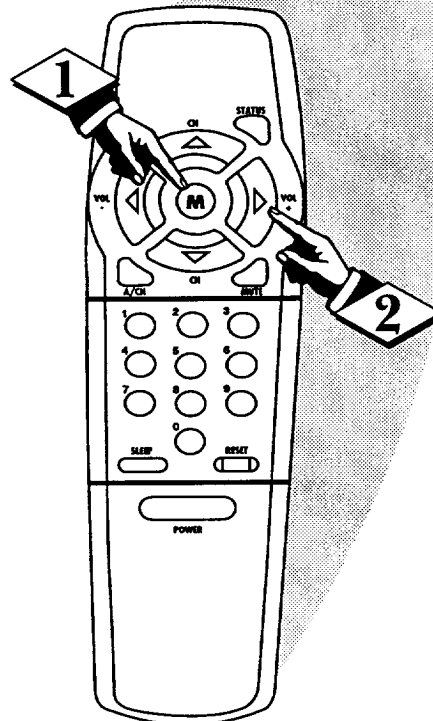  

TEXT mode
Example Display
TV screen will be blocked from viewing

HOW TO SET THE CHANNEL REMINDER

The channel number for a selected program can remain on the TV screen by using the REMINDER feature.

BEGIN

1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons.)
Select the word REMINDER with the TV's on-screen Arrow.

 
 
2 Press (+) or (-) button to turn REMINDER ON.

3 Press STATUS button to clear the screen.

You should now see the channel number at the bottom of the screen.



Remember. If Closed Captioning is ON, neither the Channel Reminder or the "MUTE" sound indicator will show on the TV screen.

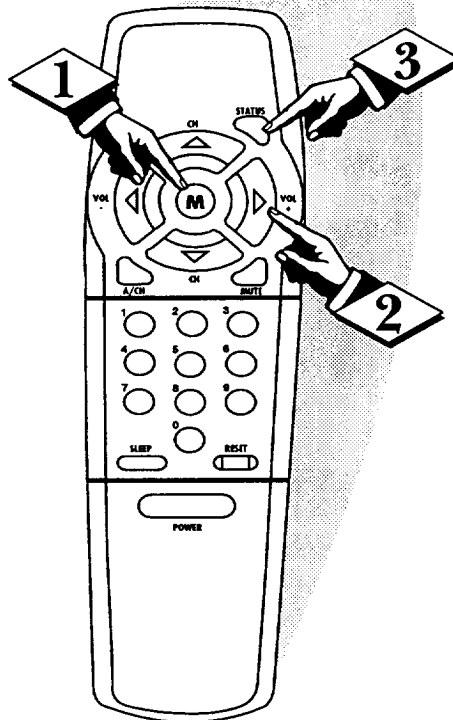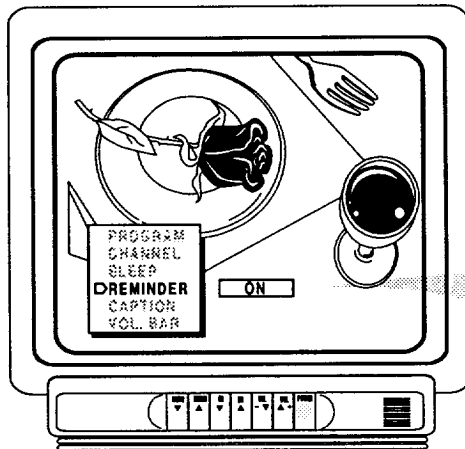


HOW TO ADJUST THE TV COLOR

To adjust your TV color and picture controls, select a channel and follow the steps shown below:

BEGIN

- 1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons) until the desired control shows on-screen.
- 2 Press (+) and (-) to adjust the selected color control.
- 3 Press STATUS button (or EXIT Menu) to clear the screen when picture adjustments are completed.



 Remember. When the bar scale is centered, the control settings are at normal mid-range levels.



BRIGHTNESS Press (-) or (+) until whitest parts of the picture are as bright as you prefer.

PICTURE Press (-) or (+) until dark parts of the picture show good detail.

COLOR Press (-) or (+) to add or eliminate color.

TINT Press (-) or (+) to obtain natural skin tones.

  SHARPNESS Press (-) or (+) to improve detail in the picture.

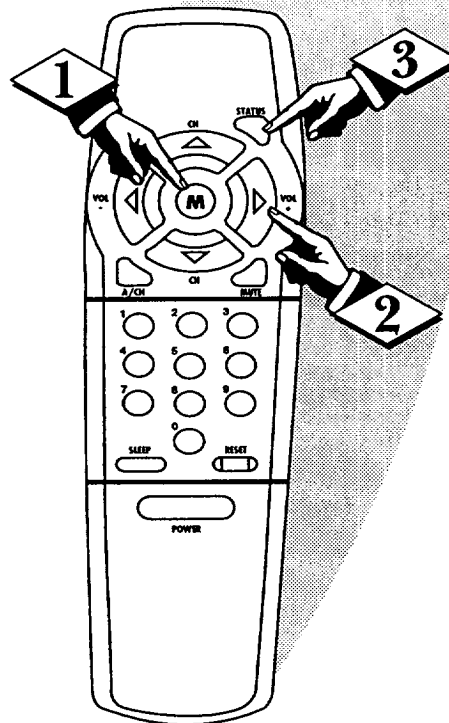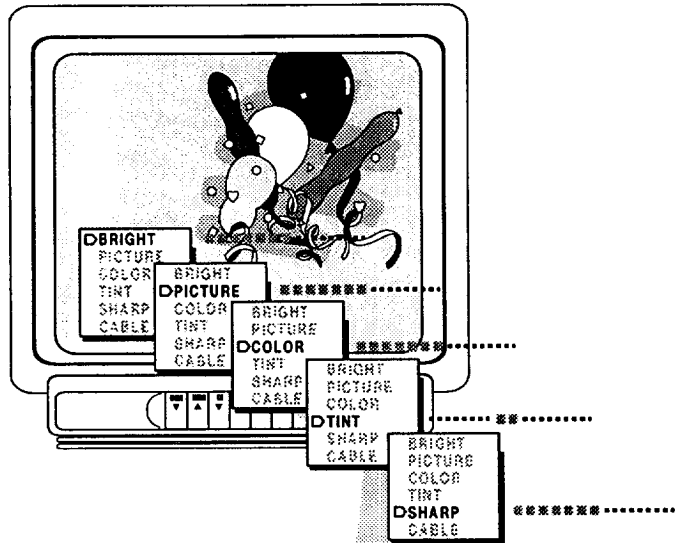

HOW TO USE THE ON-SCREEN LANGUAGE OPTION

For our French and Spanish speaking TV owners an on-screen LANGUAGE option is present. With the LANGUAGE control you can set the TV's on-screen features to be shown in either English, French, or Spanish text.

BEGIN

- 1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons.)


Select the word LANGUAGE with the TV's on-screen Arrow.

 
 
- 2 Press (+) or (-) buttons to select either the English, French (FRANCAIS), or Spanish (ESPANOL) language option.

Text for the on-screen Menu will change to the selected language.

- 3 Press STATUS to clear the screen.



 Remember. The Language control only makes the TV's on-screen (MENU) items appear in French or Spanish text. It does not change the language of other on-screen text features such as Closed Captioned (CC) TV shows.

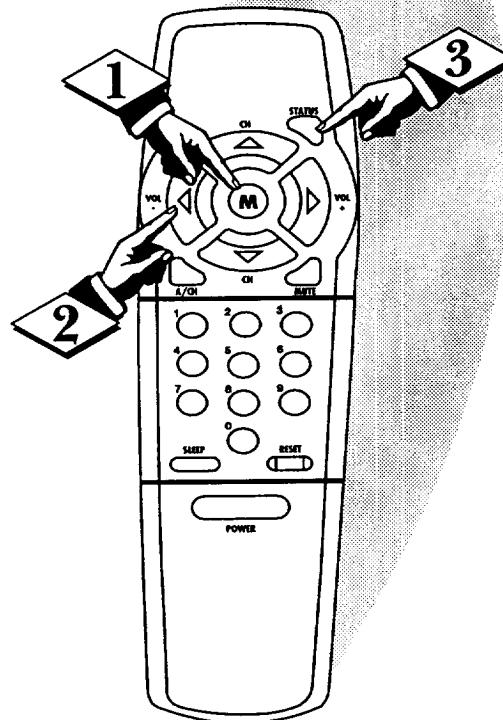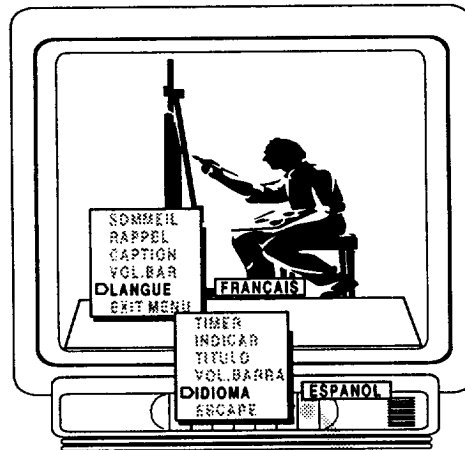

USING THE TV VOLUME BAR CONTROL

Use the Volume Bar control to see the TV's volume level settings on the TV screen. Once set the Volume Bar will be seen each time the VOLUME buttons (on the TV or remote) are pressed.

BEGIN

- 1 Press MENU ▲ or ▼ on the TV (or on the remote press M button and then M ▲▼ buttons.)

 
Select the word VOL.BAR with the TV's on-screen Arrow.

- 2 Press (+) or (-) buttons to turn the VOL BAR control ON.

- 3 Press STATUS button to clear the screen.



- 4 Try it out. Press the VOL▲▼ buttons. The VOLUME BAR should appear at the bottom of the screen.

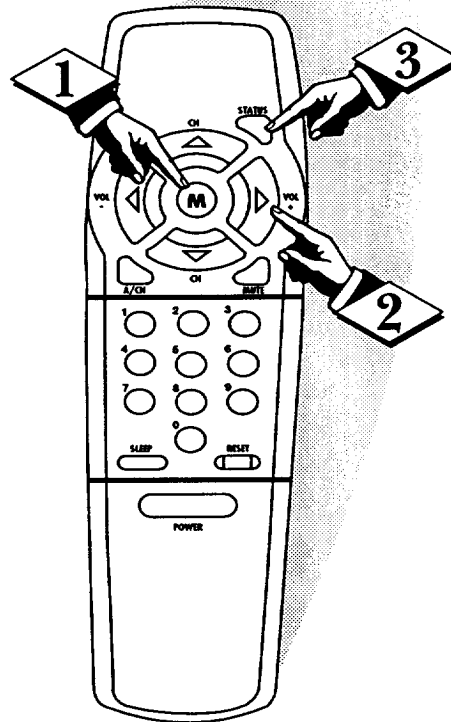



BASIC REMOTE CONTROL OPERATION

After installing the batteries into the remote, point the remote toward the front of the TV (remote sensor window) when pressing buttons.

Channel Scan Buttons

Press to scan up (▲) or down (▼) through channel numbers.

Volume (-,+) Buttons

Press to increase (VOL+) or decrease (VOL-) the TV sound level.

Alternate Channel Button

Press to select the previously viewed channel.

 
For example: You are watching channel 4 and change to channel 10 (using the channel number buttons). Press A/CH and your TV will return to channel 4. Press A/CH again and your TV will return to channel 10.

Number Buttons

Press the number buttons to select TV channels. Press two number buttons to select channels. For example: to select channel 6...press "0" first and then "6".

Sleep Timer Button

Set the TV to automatically turn itself OFF. See Sleep Timer section for details.

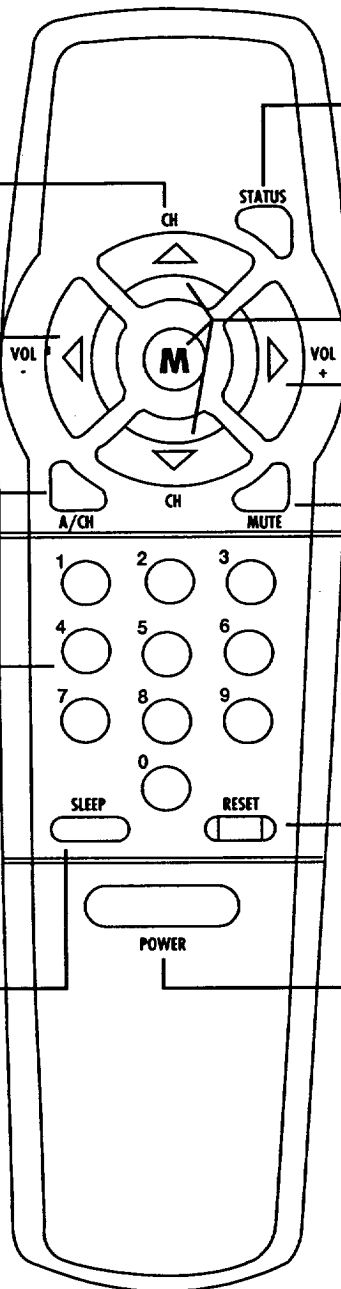

Status Button

Press to see the current channel number on the TV screen. Also press this button to clear the screen after control adjustments.

Menu (▲▼) Buttons

Press the M button to display on-screen feature controls. Press ▲ or ▼ buttons to move forward and backward through the list of on-screen controls.

(+) and (-) Buttons

Press to adjust the selected on-screen feature control.

Mute Button

Press to turn the sound OFF on the TV. Press again to return the sound to its previous level.

Reset Button

Press to return the TV to certain factory set levels for picture and color controls.

Power Button

Press to turn the TV ON and OFF.

 
4

IMPORTANT REMINDER NOTE

The Menu (M) button controls how certain buttons on the remote are used.

When the M button is pressed: the MENU, (M)▲▼, and (+,-) buttons are used to select and adjust on-screen TV features.

During normal TV viewing: the buttons that surround the Menu button are used to select CH(annels) and adjust the TV VOL(ume.)

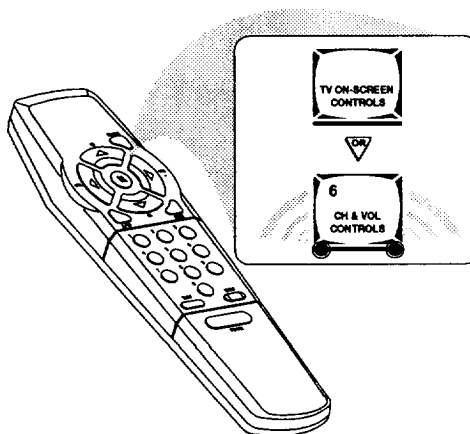



Have you ever fallen asleep in front of the TV only to have it wake you up at two in the morning with a test pattern screeching in your ears? Well, your TV can save you all that trouble by automatically turning itself off.

BEGIN

 
- 1 Press the **SLEEP** button on the remote (or **MENU**▲▼ button on the TV) to select the **SLEEP TIMER**.
- 2 Press the **SLEEP** button repeatedly (or +, - buttons on the TV) to pick the amount of time (15 minutes to 2 hours ahead) before the TV will turn itself off.
If you pass up the time setting you want, just keep pressing the **SLEEP** button and the desired time will come around again.
- 3 Press the **STATUS** button to clear the screen after you have set the time for the TV to turn off.



Remember. If you ever want to see how many minutes are left before the TV shuts itself off, press the **SLEEP** (or **STATUS**) button on the remote.

If you want to **stop** a **SLEEP TIMER** setting, reset the timer back to **OFF**. You could also turn the TV off, and then back on again, to cancel a setting.

A few seconds before the TV is to shut off a message will come on the screen telling you **GOOD NIGHT**.

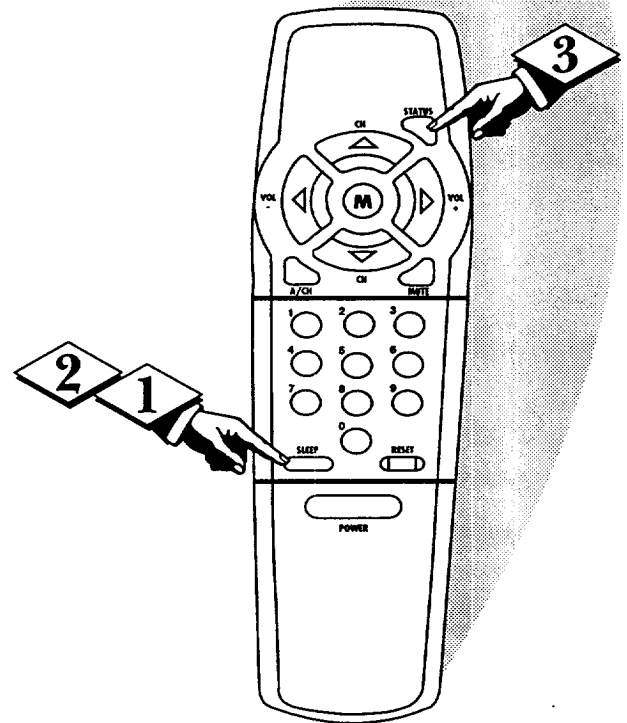

TIPS IF SOMETHING ISN'T WORKING

Please make these simple checks before calling for service. These tips can save you time and money since charges for TV installation and adjustment of customer controls are not covered under your warranty.

No Power

CAUTION: A video source (such as a video game, Compact Disc Interactive - CDI, or TV information channel) which shows a constant non-moving pattern on the TV screen, can cause picture tube damage. When your TV is continuously used with such a source the pattern of the non-moving portion of the game (CDI, etc.) could leave an image permanently on the picture tube. When not in use, turn the video source OFF. Regularly alternate the use of such video sources with normal TV viewing.

- Check the TV power cord. Unplug the TV, wait 1 minute, then reinsert plug into outlet and push POWER button again.
- Check to be sure outlet is not on a wall switch.

No Picture

- Check antenna connections on the rear of the TV. Are they properly secured to the antenna plug on the TV?
- Check the CABLE/ YES NO control for correct position.

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.

Remote Does Not Work

- Check batteries. Replace with two Heavy Duty (Zinc Chloride) or Alkaline AAA batteries if necessary.
- Clean the remote and the remote sensor window on the TV.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add desired channel numbers (CHANNELS control) into TV memory.
- Check CABLE/ YES NO control for correct position.

**QUESTIONS ABOUT THIS PRODUCT?
CALL OUR INFORMATION CENTER.**

800-531-0039

This TV is equipped with protective circuitry that shuts the TV off in case of moderate power surges. Should this occur turn the TV back on by pressing the POWER button once or twice, or unplug and then replug the power cord at the AC outlet. This feature is NOT designed to prevent damage due to high power surges such as those caused by lightning, which is not covered by your warranty.

Cleaning and Care

- To avoid possible shock hazard be sure the TV is unplugged from the electrical outlet before cleaning.
- When cleaning the TV screen take care not to scratch or damage the screen surface (avoid wearing jewelry or using anything abrasive). Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool clear water and a mild soap or detergent. Use a clean dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the cabinet back.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



Coaxial Cable * A single solid antenna wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75 Ohm input found on the Television or VCR.

Display * An on screen message or graphics that help the user operate and adjust his Television feature controls. See On Screen Displays (OSD).

On Screen Displays (OSD) * Refers to the wording or messages generated by the television (or VCR) to help the user with specific feature controls (color adjustment, programming, etc.).

Menu * An on-screen listing of feature controls shown on the Television screen that are made available for user adjustments.

Programming * The procedure of adding or deleting channel numbers into the Television's memory circuits. In this way the Television "remembers" only the locally available or desired channel numbers and skips over any unwanted channel numbers.

Remote Sensor Window * A window or opening found on the Television control panel through which infrared remote control command signals are received.

Status * Allows the user to quickly confirm what channel number is currently being viewed. Status can also be used to clear the Television of on screen displays or information (rather than waiting for the displays to "time out" or automatically disappear from the screen).

Twin Lead Wire * The more commonly used name for the two strand 300 Ohm antenna wire used with many indoor and outdoor antenna systems. In many cases this type of antenna wire requires an additional adapter (or balun) in order to connect to the 75 Ohm Input terminals designed into the more recent Televisions and VCRs.



INDEX

Accessories/Optional	4, 5	Precautions/Safety	3, 20
Adapter Connector	4, 5	Programming Channels	11, 12
Add/Delete Channels	11, 12	Remote Control	7, 9, 18-19
Battery Installation	7	Reset	18
Cable TV Connections/Settings	4, 5, 10	Requesting Service	18, 20
Channel Display	6, 14	RF Coaxial Cable	4, 5
Channel Memory	11, 12	Reminder Channel	15
Channel Reminder	14	Safety/Precautions	3, 20
Closed Captioning	13	Sensor Remote	6, 18
Controls/TV	6, 8	Set Up/First Time Use	4, 5, 6, 8
Controls/Remote	7, 9, 18-19	Sleep Timer	19
Features	3	Status Button	8, 18
Glossary/TV Terms	21	VCR/TV Connections	5
Language Option	16	Tips for Service	20
Memory/Program Channels	11, 12	Volume Bar	17
Menu Button	8, 18	Warranty	23
Minus(-)/Plus (+) Buttons	8, 18		

LIMITED WARRANTY

LIMITED WARRANTY

Color Television

- 90 Day Carry-In Service Labor Warranty
- One (1) Year Exchange On Warranty Parts
- Two (2) Year Exchange Warranty on Color Picture Tube

This warranty gives you specific legal rights and you may have other rights which vary from state/province to state/province.

Parts and Labor During First 90 Days

For Ninety (90) Days from the date of purchase, a Factory Service Center or an Authorized Service Center will repair any product defect and replace any defective part, including the picture tube without charge to you for parts or labor.

Replacement Parts After 90 Days

If within one (1) year - two (2) years for a picture tube- after the date of purchase, a part is found defective and needs to be replaced, a Factory Service Center or an Authorized Service Center will supply to you a new or, at our option, rebuilt part without charge to you for the replacement part. After 90 days from the date of purchase, you must pay for all labor, transportation, and service charges. Replacement parts and picture tubes installed during the TV warranty period are warranted only for the balance of the original TV warranty period.

What the Purchaser Must Do

Before you call for service, check your operating instruction booklet. A slight adjustment of the customer controls discussed in your instruction booklet may save you a service call.

If you require service during the warranty period, you must take your TV to a Factory Service Center or an Authorized Service Center and pick it up after completion of service. The Service Center must be allowed to keep defective parts. After the first 90 days of the warranty period, the cost of service labor is your responsibility.

Warranty service will be performed by a Factory Service Center or an Authorized Service Center. You may contact the nearest Philips Factory Service Center (see the Factory Service Center address directory supplied with your product literature) to obtain both In and Out-of-Warranty repair for your product.

YOU MUST PRESENT PROOF OF THE DATE ON WHICH THE TV WAS FIRST PURCHASED (SALES RECEIPT OR OTHER EVIDENCE) WHEN REQUESTING SERVICE OR REPLACEMENT PART WARRANTY PERFORMANCE.

Warranty Exclusions

Your Warranty Does Not Cover:

Labor charges for set installation or set-up, adjustment of customer or preference controls, and installation or repair of antenna systems outside the TV set.

Product repair and/or part replacement because of misuse, accident, unauthorized repair, or other cause not within the control of Philips Consumer Electronics Company.

Reception problems caused by signal conditions or cable or antenna systems outside the TV.

A television purchased, used or serviced outside the U.S.A., Canada, Puerto Rico, and the Virgin Islands, or used for commercial or institutional purposes.

Incidental or consequential damages resulting from the product. Some states/provinces do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

ALL IMPLIED WARRANTIES INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IMPORTANT REMINDER

PLEASE FILL OUT AND MAIL YOUR WARRANTY REGISTRATION CARD PROMPTLY. IT WILL BE EASIER FOR US TO NOTIFY YOU IF IT SHOULD EVER BE REQUIRED.

Please write your model and serial numbers below. The numbers are located on the back of your unit. Please remember to have these numbers on hand any time you call.

MODEL NO. _____

SERIAL NO. _____

QUESTIONS ABOUT THIS PRODUCT?
CALL OUR INFORMATION CENTER.

800-531-0039

IN U.S.A.: Philips Service Company
P.O. Box 555
Jefferson City, TN 37760
(615) 475-8869

IN CANADA: Montreal (514) 342-2043
5930 Cote de Liesse, Montreal, Quebec H4T 1E1
Toronto (416) 754-6064
601 Milner Avenue, Scarborough, Ontario M1B 1M8
Vancouver (604) 435-4411
3695 Grandview Hwy., Vancouver, BC V5M 2G7

Maximize your viewing pleasure with State-Of-The-Art accessories designed specifically for your CTV.

 
The optional accessories shown in this booklet may be purchased from your local dealer, or may be ordered direct from Philips Consumer Electronics Company.

Call toll free:
1-800-292-6066

Or Write:
Philips Consumer Electronics Company Accessories Marketing Dept. P.O. Box 967 Greeneville, TN 37744-0967

Prices subject to change without notice. Availability subject to change at time of purchase. When ordering accessories outside the U.S.A., please refer to the accessories material, address, and prices for that country.

"The Easy One"

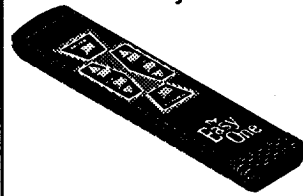


AK9000GY01

The Easy One:

The ideal secondary remote for your television. The Easy One is preprogrammed to operate virtually all remote controlled TVs and includes only the most used commands: Volume Control, Channel Change, ON/OFF, and Mute.

AK9000GY01
Your Cost **\$16.95**

 "The Smart One"

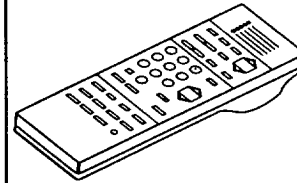


AK9033GY03

The Smart One:

Why use several remotes when you can have one remote that does it all? The Smart One universal remote is preprogrammed to operate most TVs, VCRs, and cable boxes. It also can "learn" to operate virtually any infrared component such as CD Players, Audio Systems, and Satellite Systems, etc. The Smart One allows you to operate up to five different components with one remote.

AK9033GY03
Your Cost **\$49.95**

 Indoor Color TV Antenna

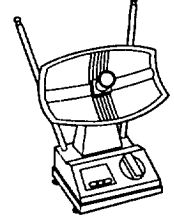


SBV2021A01

Indoor Color TV Antenna with Amplifier:

Solve your reception problems with this Color TV Antenna with built-in Amplifier. Features fully directional telescoping VHF Rods with 180 degree tilt, rotating UHF Antenna, and 12 position Tuning Control.

SBV2021A01
Your Cost **\$24.95**

 Audio/Video Select Power Switch

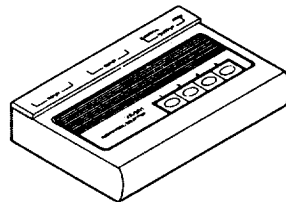


SBA2010A01

Audio/Video Select Switch Box:

With the convenience of the push of a button, this Audio/Video selection allows you to choose any one of four different components without changing complicated wires. It comes with everything you need to get started and has four selector switches to select the desired viewing source (i.e., Television, VCR, Laser Disc, or Satellite.)

SBA2010A01
Your Cost **\$39.95**

 Two-Way Tape Rewinder

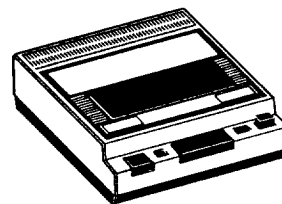


MAG9000

Two-Way Tape Rewinder and Fast Forwarder:

Why wait to start the next movie? This two-way, VHS tape Rewinder/Fast Forwarder will save you time as well as wear and tear on your VCR. Features a see-thru, pop-up lid, built-in tape counter and power light to indicate rewind or fast forward function.

MAG9000
Your Cost **\$26.95**

 Surge Suppressor

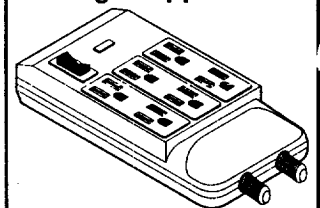

SRG9110

Surge Suppressor:

Protect your investment from damaging power surges coming through your cable or electrical line. Features coaxial cable input/output, six receptacles, power light, and reset switch. Plugs directly into wall outlet.

SRG9110
Your Cost **\$39.95**