


---


# Color Television Operating Instructions

# Panasonic®

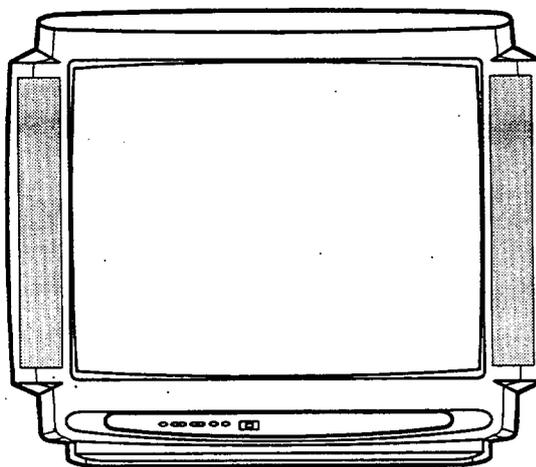

Read these instructions completely before operating this set.  
Contents subject to change without notice or obligation.

# Safety Instructions

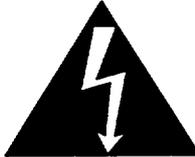	<b>WARNING</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<b>WARNING: To reduce the risk of electric shock do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.</b>		



The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.




The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

**Note To CATV System Installer:** This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Safety Instructions For Television Receivers

1. Read and apply the operating instructions provided with your television receiver.
2. Read all of the instructions given here and retain them for later use.
3. Unplug this television receiver from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards.
5. Do not use this television receiver near water. For example: Avoid placing it near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
6. Do not place this television receiver on an unstable cart, stand, or table. The television receiver may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn. 
7. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the television receiver on a bed, sofa, rug or other similar surface. This television receiver should never be placed near or over a radiator or heat register. This television receiver should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
8. Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company. For television receivers designed to operate from battery power, refer to the operating instructions.
9. This television receiver is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
10. Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.
11. Follow all warnings and instructions marked on the television receiver.
12. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
13. Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television receiver.

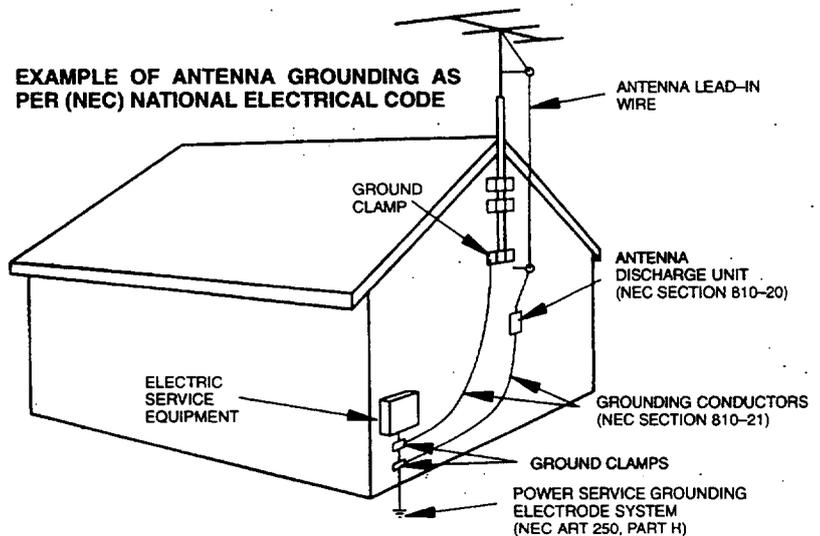

14. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810 of the National Electrical Code and in Canada Part 1 of the Canadian Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.
  15. For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.
  16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
  17. Unplug this television receiver from the wall outlet, and refer servicing to qualified service personnel under the following conditions:
    - a. When the power cord or plug is damaged or frayed.
    - b. If liquid has been spilled into the television receiver.
    - c. If the television receiver has been exposed to rain or water.
    - d. If the television receiver does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the television receiver to normal operation.
    - e. If the television receiver has been dropped or the cabinet has been damaged.
    - f. When the television receiver exhibits a distinct change in performance – this indicates a need for service.
  18. Do not attempt to service this television receiver yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
  19. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
  20. Upon completion of any service or repairs to this television receiver, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
  21. **WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.**
  22. **CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**
- NOTE:** This equipment is designed to operate in the U.S.A., Canada and other countries where the broadcasting system and AC house current is exactly the same as in the U.S.A. and Canada.

**Important Information Regarding Use of Video Games, Computers, Teletext or Other Fixed Image Displays.**

The extended use of fixed image program material can cause a permanent "shadow image" on the picture tube. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible picture tube deterioration can be limited by observing the following steps:

- A. Reduce the brightness/contrast setting to a minimum viewing level.
- B. Do not display the fixed image for extended periods of time.
- C. Turn the power off when not in actual use.

**NOTE:** The marking or retained image on the picture tube resulting from fixed image use is not an operating defect and as such is not covered by Warranty. This product is not designed to display fixed image patterns for extended periods of time.

## Specifications

- Power Source:** 120V 60Hz, AC
- Channel Capability:** 181 channels (See chart)  
VHF 2-13, UHF 14-69, Cable 125 channels
- Video Input Jacks (2):** 1V p-p, 75 ohm, phono jack type
- Audio Input Jacks (2):** High impedance – 10K ohm , 500mV rms
- To Audio AMP Jacks:** 0-4.0V rms 10K ohm
- S-VHS Input Jack:** S-Video (Y-C) Connector
- Stereo Sound**
- Surround Sound**
- Closed Caption Display**
- Picture in Picture:** Two Tuner

## Channel Capability Chart

BAND	USA/CAN
VHF	12
UHF	56
CABLE (Mid-Band)	15
CABLE (Super Band)	14
CABLE (Hyper Band)	28
CABLE (Ultra Band)	56
<b>TOTAL CHANNELS</b>	<b>181</b>

Specifications are subject to change without notice or obligation.

# Introduction

## Congratulations on Your New Purchase

Your new video component features an all solid state chassis which is designed to give you many years of enjoyment. It was thoroughly tested and adjusted at the factory for best performance.

In order for you to take full advantage of your new video component, please read and follow the installation and operating instructions supplied with this product.

### Customer's Record

The model and serial number of this product may be found on its back cover. You should note the model and serial number in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: \_\_\_\_\_ Serial Number: \_\_\_\_\_

## Table of Contents

<b>Safety Instructions</b> .....	2	Picture .....	15
<b>Specifications</b> .....	3	Sharpness .....	15
<b>Introduction</b> .....	4	Picture Norm .....	15
<b>Installation</b> .....	5	Game Guard .....	16
Receiver Location .....	5	Game Guard (Lockout) .....	16
Optional External Equipment Connections .....	5	Game Guard (Unlock) .....	17
AC Power Supply Cord .....	5	Timer Features .....	18
Battery Installation .....	5	Sleep Timer .....	18
Antenna/Cable Connections .....	6	Program Timer .....	19
Picture in Picture External Video & Ant Connection ..	7	Set-Up Features .....	20
<b>Location of Controls (Remote)</b> .....	8	Menu .....	20
<b>Location of Controls (Receiver)</b> .....	9	CC (Closed Caption) On Mute .....	21
Quick Reference Control Operation .....	9	Set Time (Clock) .....	22
<b>Control Operation</b> .....	10	Antenna Tuning Mode .....	23
Power Button .....	10	Auto Programming .....	24
Volume (Vol) Buttons .....	10	Manual Programming .....	25
Mute Button .....	10	CC (Closed Caption) Mode .....	26
Channel Change Features .....	10	Channel Caption (Station Identifier) .....	27
Channel (Ch) Buttons .....	10	Audio Adjustments .....	28
Keyboard "0 through 9" Buttons .....	10	Bass, Treble & Balance Adjustments .....	28
VCR Function Buttons .....	10	Audio Norm .....	28
TV/Video Button .....	11	Audio Mode Selection (Stereo/SAP/Mono) .....	29
Recall Button .....	11	[TV] Speaker .....	29
R-Tune (Rapid Tune) Button .....	11	Surround Sound .....	30
Multi Button .....	11	AI Sound .....	30
Cable (TV) Power Button .....	12	Input Select .....	31
PIP (Picture in Picture) Button .....	12	Main (Picture) Input Selection .....	31
PIP Channel Buttons .....	12	PIP Input Selection .....	31
PIP Swap Button .....	12	<b>Programming The Universal Remote Control</b> ....	32
PIP Size Button .....	13	<b>VCR, LDP &amp; Cable Converter Box</b>	
PIP Freeze Button .....	13	<b>Infra-Red Codes</b> .....	33
PIP Move Button .....	13	<b>Optional Equipment Connection &amp; Operation</b> ...	34
PIP Search Button .....	13	Stereo Connection (To Audio AMP) .....	34
<b>Main Menu (Icons)</b> .....	14	Video/Audio Connection .....	34
Picture Adjustments .....	15	S-Video Connection .....	35
Color .....	15	<b>Care &amp; Cleaning</b> .....	35
Tint .....	15	<b>Power Loss</b> .....	35
Brightness .....	15	<b>Troubleshooting Chart</b> .....	36

# Installation

## Receiver Location

Locate for comfortable viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen.

Use of some types of fluorescent lighting can reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

To insure optimum color purity do not position magnetic equipment (motors, fan, other speakers, etc.) nearby.


## Optional External Equipment Connections

The Video/Audio connections between components can be made with shielded video and audio cables. For best performance, video cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply house.

Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.

## AC Power Supply Cord

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT. DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

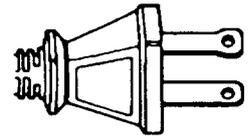

Polarized Plug

## Remote Control Battery Installation & Replacement

### Battery Installation

Batteries: Use two "AA" batteries.


1. Turn the Transmitter face down. To remove bottom cover, press down on marking and slide cover off in the direction indicated.
2. Install the batteries as shown in the battery compartment. (Polarity (+) or (-) must be correct.)
3. Replace the cover and slide in reverse until the lock snaps.

### Precaution on Battery Use

Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control Transmitter.


### Observe the Following Precautions:

1. Batteries must be replaced as a pair.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (Example: "Zinc Carbon" with "Alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when Remote Control reacts sporadically or stops operating the Receiver.

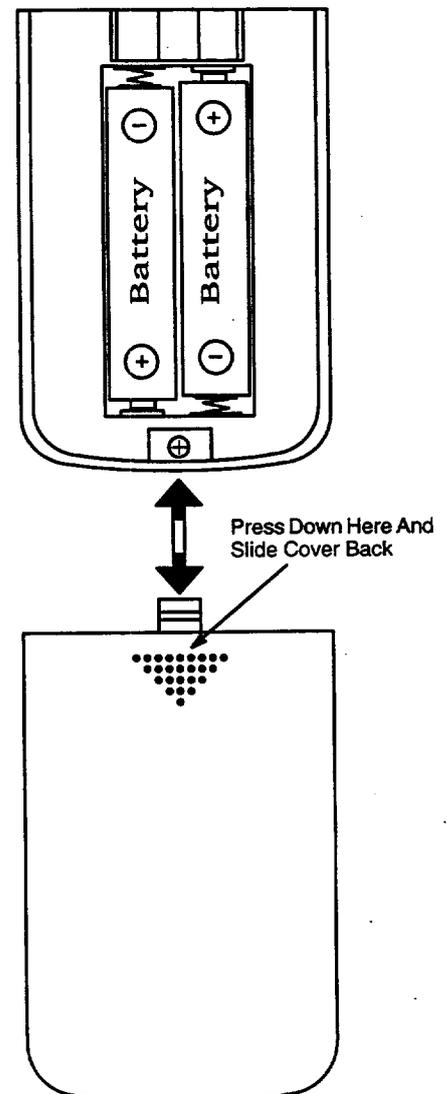


## Antenna/Cable Connections


**Antenna Connection** – For proper reception of VHF/UHF channels an external antenna is required. For best reception an outdoor antenna is recommended. Antenna Mode must be set to TV. (Refer to Antenna Mode section.)

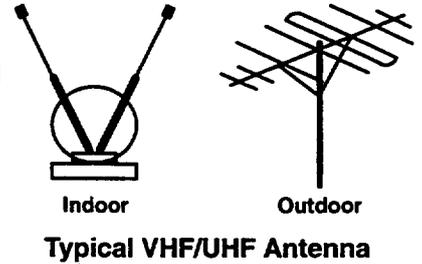

### Incoming Cable From Home Antenna (75 Ohm)

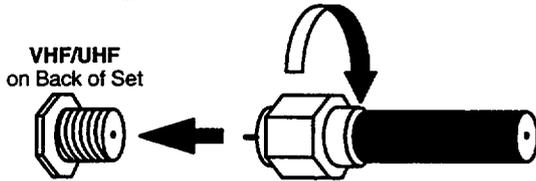


### Incoming Cable From Home Antenna (300 Ohm)

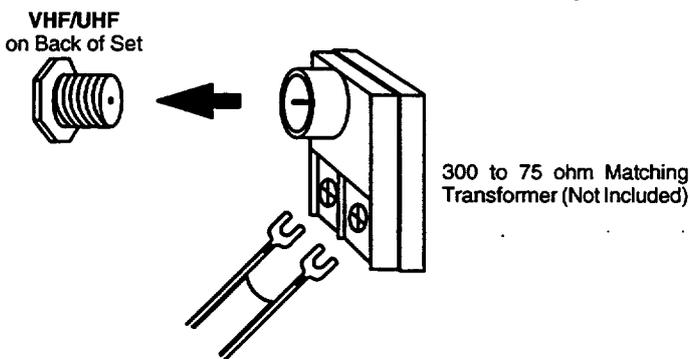

**Cable Connection** – For reception of cable channels (01–125) connect the cable supplied by your local Cable company. Antenna Mode must be set to CABLE. (Refer to Antenna Mode section.)

### Incoming 75 Ohm Cable (From Cable Company)

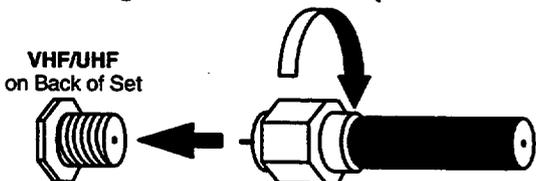

**NOTE:** Certain cable systems offset some channels to reduce interference or have Premium (scrambled) channels. A Cable Converter box is required for proper reception. Check with your local Cable company for its compatibility requirements.


## Other Video Equipment

VCRs, Video Disc Players, Computers, TV games and Teletext equipment can also be connected to the antenna input connection.


# Picture in Picture (Two Tuner) Antenna and External Video Connection

This Receiver has the "PICTURE IN PICTURE" feature that uses two tuners. This allows you to watch 2 live broadcasts at the same time without an external video source. (See Antenna Connection, Detail 1.) If you wish an external video source (VCR, Laser Disc Player or Camcorder) may be monitored in the PIP Frame. (See External Video Connection, Detail 2.)

**Detail 1 – PIP Antenna Connection**

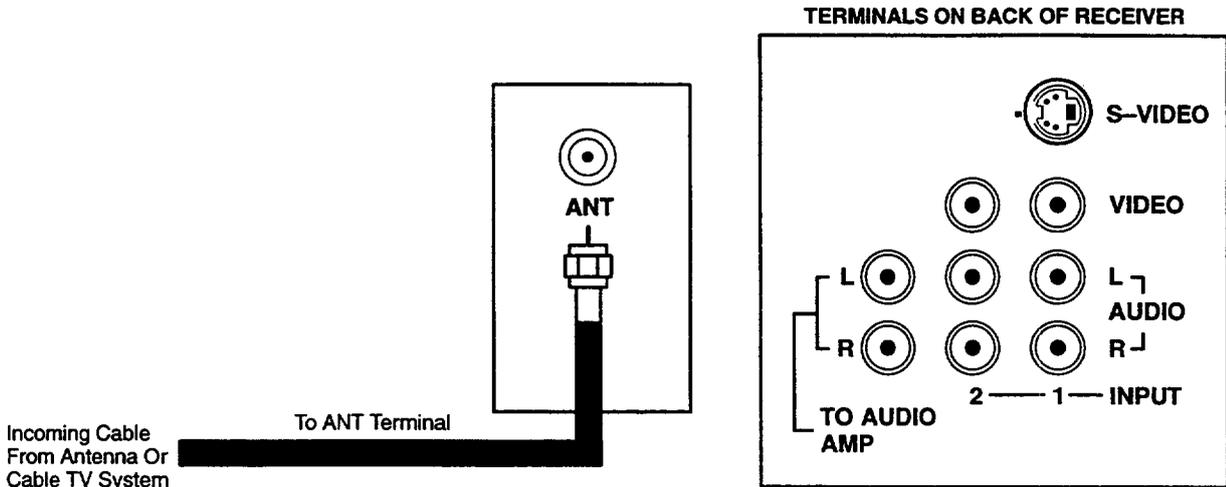

**Detail 2 – PIP External Video Connection**

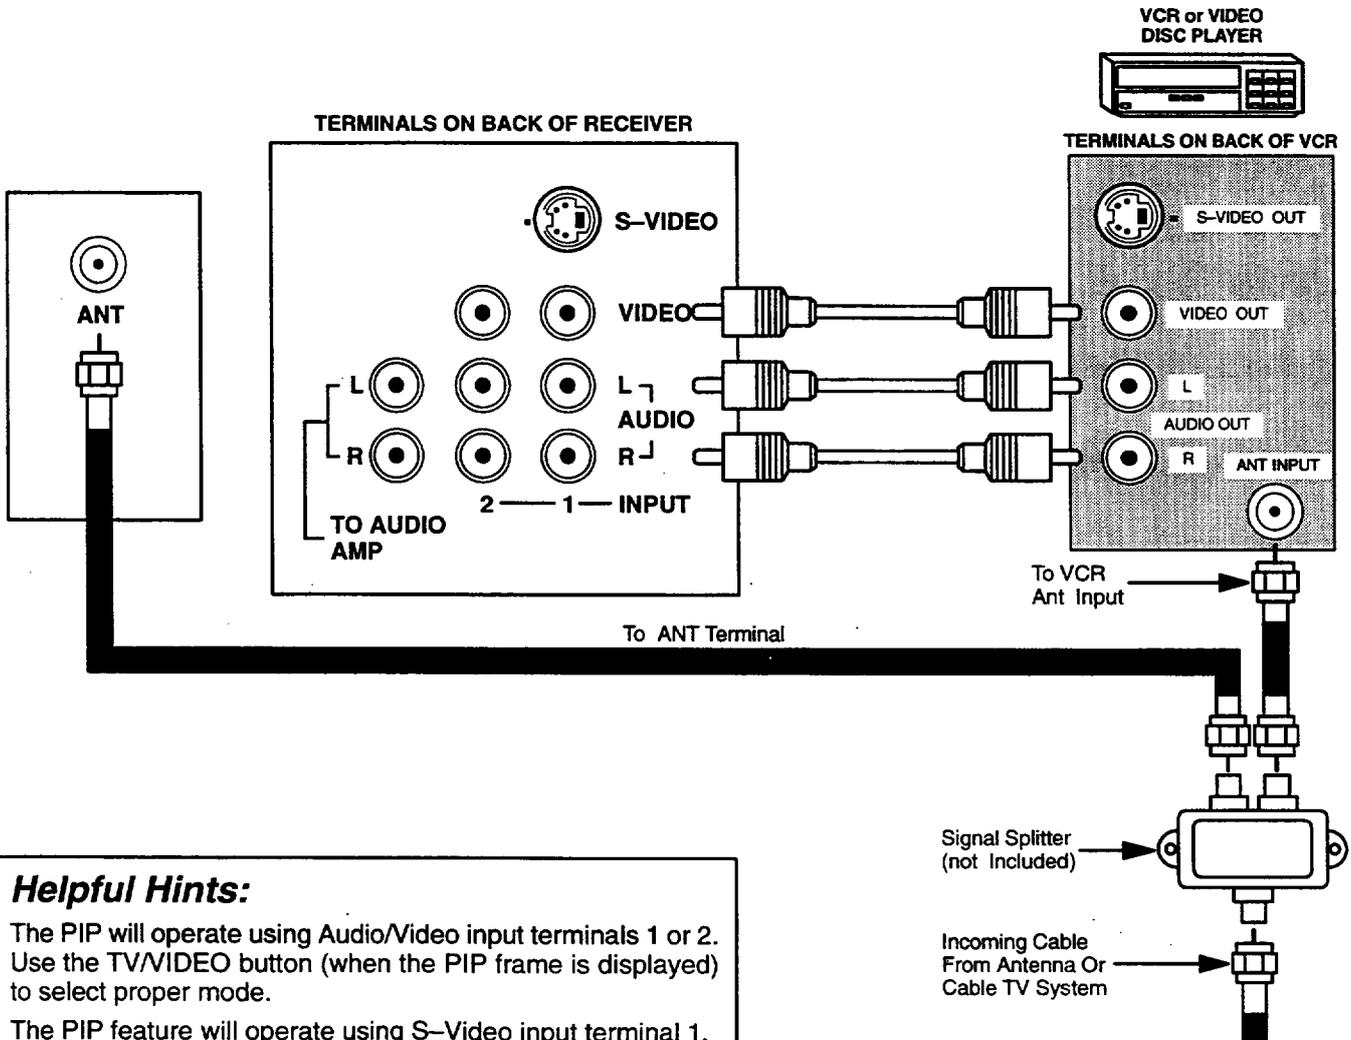


**Helpful Hints:**


The PIP will operate using Audio/Video input terminals 1 or 2. Use the TV/VIDEO button (when the PIP frame is displayed) to select proper mode.

The PIP feature will operate using S-Video input terminal 1.

# Location of Controls (Remote Control)

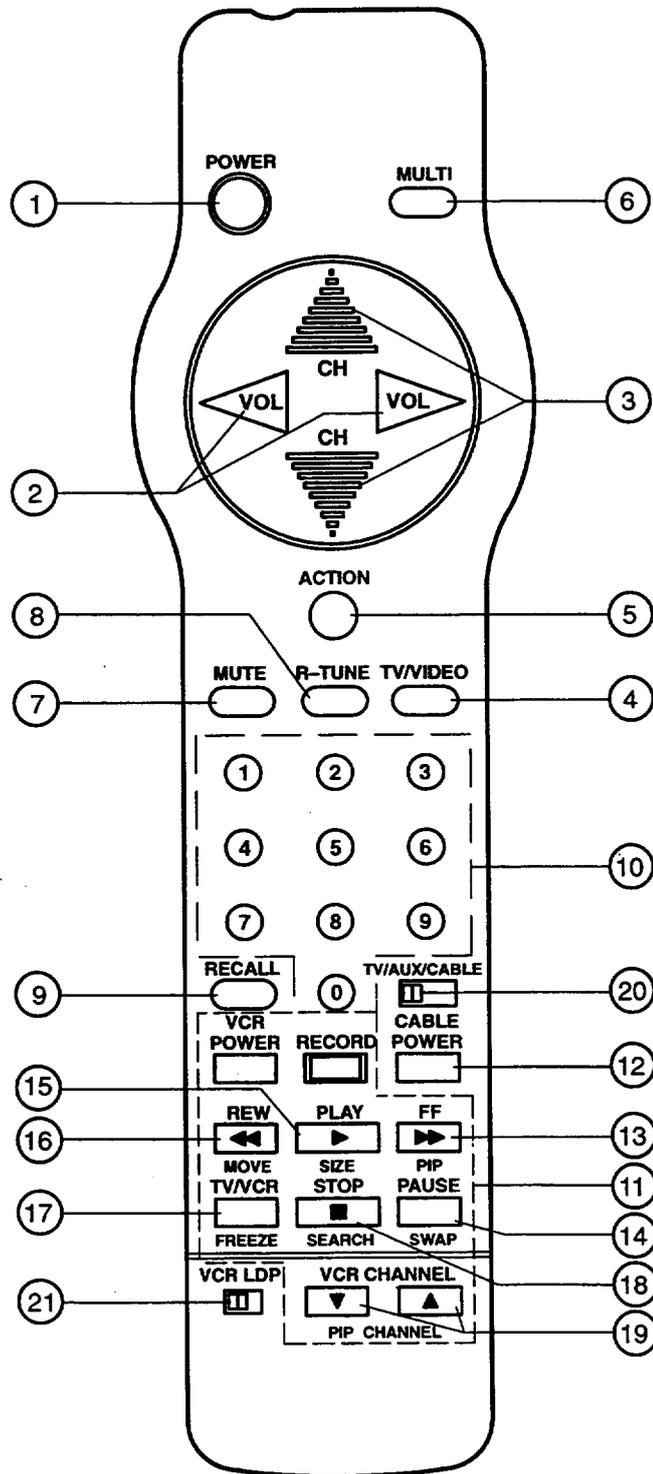

## Location of Controls (Receiver)

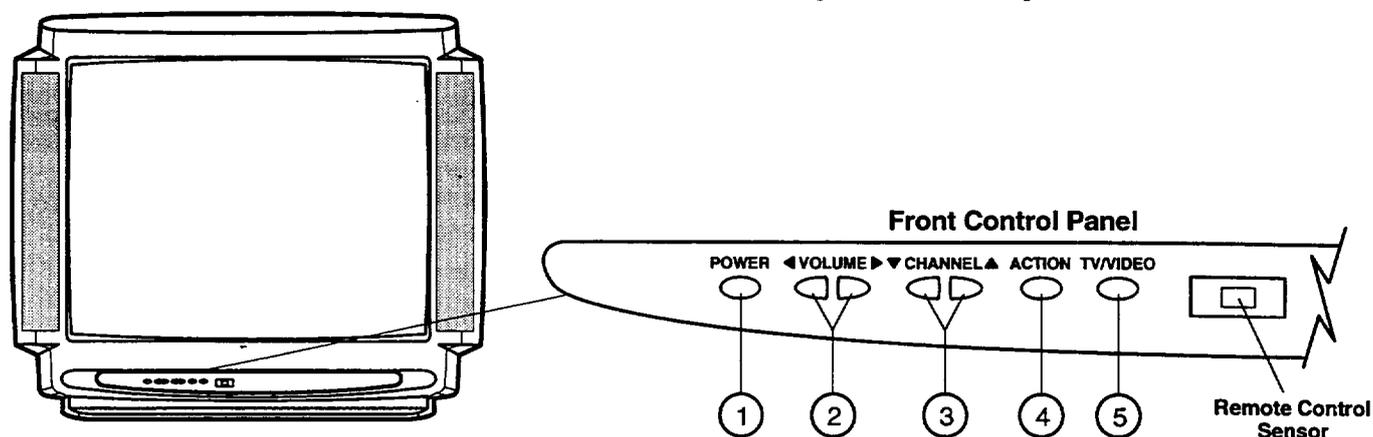

### Quick Reference Control Operation (Remote & Receiver)

- ① **Power Button** – Press to turn ON or OFF. (pg.10)
- ② **Volume Buttons** – Press to adjust Sound Level. Press to adjust Audio Menus, Video Menus and select operating features when menus are displayed. (pg.10)
- ③ **Channel Buttons** – Press to select programmed channels. Press to highlight desired features when menus are displayed. Also used to select Cable Converter box channels after programming Remote Control Infra-red codes (the TV/AUX/CABLE switch must be set in CABLE position). (pg.10)
- ④ **TV/Video Button** – Press to select TV or one of two Video Inputs, for the Main Picture or the PIP frame (when PIP frame is displayed). (pg.11)
- ⑤ **Action Button** – Press to display Main Menu and access or exit On Screen feature and Adjustment Menus. (pg.14)
- ⑥ **Multi Button** – Programmable to operate up to six Remote Function buttons. (pg.11)
- ⑦ **Mute Button** – Press to mute sound. A second press returns sound. (pg.10)
- ⑧ **R-Tune (Rapid Tune) Button** – Press to switch between two channels. (pg.11)
- ⑨ **Recall Button** – Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier) and Audio Mode. (pg.11)
- ⑩ **Keyboard “0 through 9” Buttons** – Press desired channel number to access any channel. (pg.10)
- ⑪ **VCR Function Buttons** – Programmable to operate many brands of VCRs. (pg.10)
- ⑫ **Cable Power Button** – Programmable to operate selected CATV converter boxes. (pg.12)
- ⑬ **PIP (Picture In Picture) Button** – Press to display the PIP frame, press again to remove PIP frame. (pg.12)
- ⑭ **Swap Button** – Press to interchange PIP frame with Main Picture (when the PIP frame is displayed). (pg.12)
- ⑮ **Size Button** – Press to select size of PIP frame (when the PIP frame is displayed). (pg.13)
- ⑯ **Move Button** – Press to position PIP frame to any corner of the Main Picture (when PIP frame is displayed). (pg.13)
- ⑰ **Freeze Button** – Press to stop action in the Main Picture or PIP frame (when the PIP frame is displayed). (pg.13)
- ⑱ **Search Button** – Press the SEARCH button to automatically scan channels which are programmed into memory. Press the SEARCH button again to delete Search frame. (pg.13)
- ⑲ **PIP Channel Buttons** – When the PIP frame is displayed, press the PIP Channel (CH) UP button to select the next higher programmed channel in the PIP frame. Press the Channel (CH) DOWN button to select the next lower programmed channel in the PIP frame. (pg.12)
- ⑳ **TV/AUX/CABLE Switch** – This switch is used to select the proper mode when programming Remote Control Infra red codes or operating the TV or external equipment (VCR, LDP or Cable TV Converter box).
- ㉑ **VCR/LDP Switch** – This switch is used to select the proper mode when the TV/AUX/CABLE switch is in the AUX position to program the Remote Control Infra red codes or operate the auxiliary equipment (VCR, LDP).


# Control Operation

**Power Button** – Press the POWER button to turn ON. Press again to turn OFF.



**Volume Button** – Press the VOLUME (VOL) LEFT or RIGHT button for desired listening level (when On Screen Menus are not displayed).

Located On Remote Control

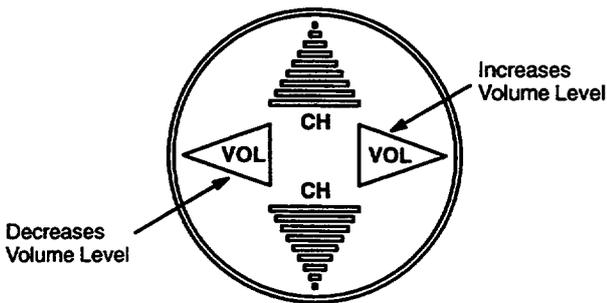

**Channel Change – (Two options)**


**Option 1.**

Press the CHANNEL (CH) UP or DOWN button to sequentially scan through programmed channels (when On Screen Menus are not displayed).

**NOTE:** TV/AUX/CABLE switch (located on Remote)


must be set in TV position. TV/AUX/CABLE

Located On Remote Control

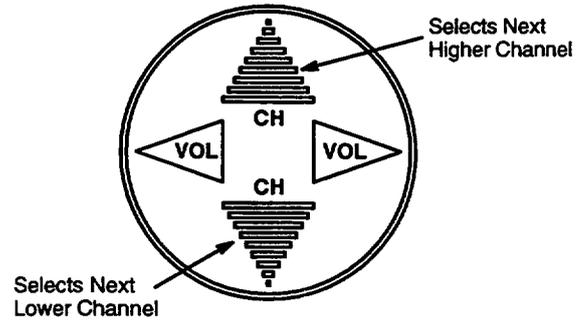

**Option 2.**

Press two digits on keyboard (Example press 0, then 5 for channel 05). For channels over 99, press three digits on keyboard.

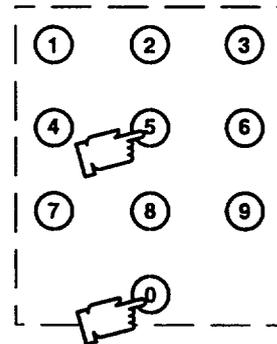

**Mute Button** – Press the MUTE button to quickly reduce sound level (Mute will appear on screen). Press again to restore sound.




## Helpful Hints:

- Helpful information will display On Screen momentarily when Receiver is first turned on and when the channel is changed.
- When using keyboard entry for channels 10, 11 and 12 in the CABLE mode there is a slight delay before channel change because of the capability of tuning cable channels 100 to 125.
- If you do not receive channels above 13, confirm the type of signal at ANT Input (TV or Cable) and set the TV or Cable Tuning Mode accordingly. (Refer to Set Up Feature, Antenna selection.)

**NOTE:** If "SPEAKER OFF" is displayed On Screen after pressing the VOLUME button, refer to Audio Menu to turn Speakers "ON".

**VCR Function Buttons** – The VCR FUNCTION buttons have been designed to operate numerous brands of VCRs. The infra-red code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.)


**NOTE:** The TV/AUX/CABLE switch (located on Remote) must be in the AUX position (Center). The VCR-LDP switch must be in the VCR position.

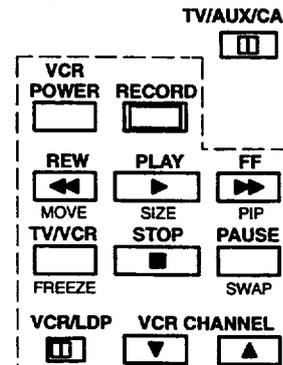


**TV/Video Button** – Press the TV/VIDEO button to select desired input for Main Picture or PIP frame (when PIP frame is displayed).



Signal connected to:

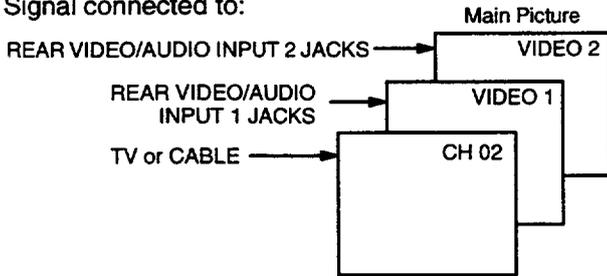


Signal connected to:

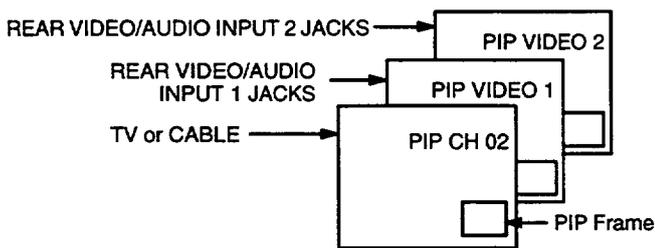


**Recall Button** – Press the RECALL button to review:

- Audio Mode status
- CH number or Video Input selected
- Sleep Timer status
- Clock time
- Channel Caption (Station Identifier)

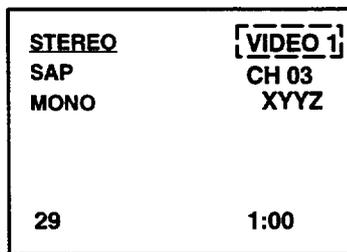


**R-Tune (Rapid Tune) Button** – Press the R-TUNE (RAPID TUNE) button to instantly switch between the last two channels selected (without any On Screen display being activated).

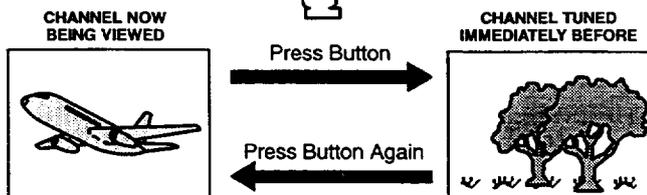

**Multi Button** – The MULTI button can be programmed to operate up to 6 Remote function buttons at the same time. For Example: TV Power/On, VCR Power/On (selected brands) can be operated at the same time with one press of the MULTI button.

**Procedure**

1. First program the Remote for the selected VCR Infra-red access code. Confirm that the Remote Control is compatible with the equipment.
2. Face the Remote Control transmitter away from all equipment remote sensors.
3. Press and hold Remote TV Power button, then press and hold the MULTI button down simultaneously. (All previous commands are erased.)

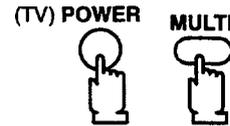


**PRESS SIMULTANEOUSLY**

4. Press a maximum of 6 Function buttons on the Remote. Each button you press is equal to one function. If six Remote button functions are entered, all will register in the MULTI button memory in the sequence entered. When less than six Remote button functions are entered, press the MULTI button to end the program mode. (Waiting more than 30 seconds without pressing another button will also end the program mode.)


The following is an example of Remote functions that can be programmed into the MULTI button.

- TV Power – For turning TV ON and OFF.
  - VCR Power – For turning VCR ON and OFF (selected brands after programming its Infra-red access code, if necessary).
- Both can be turned ON or OFF with one press of the MULTI button.

**NOTE:** To activate VCR Power or Cable box Power or other VCR/Cable box functions, the TV/VCR/CABLE switch must be put into the proper mode during Multi button program.

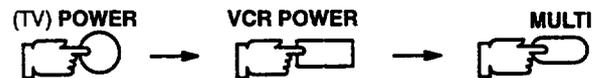

To delete entered functions – Press the Remote TV POWER and MULTI buttons simultaneously. Now you can enter from one to six different Remote functions.

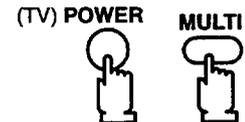

**PRESS SIMULTANEOUSLY**


**NOTE:**

You can also program the MULTI button to perform most individual Remote Control button functions. Buttons which continuously perform a function as long as pressed (Volume Up/Down, Channel Up/Down, etc.) cannot be programmed. Only those buttons which perform a function when initially pressed (Power On/Off, Mute, Direct Channel Entry, etc.) can be programmed.

**Cable Power Button** – The CABLE Power button on the Remote Control has been designed to operate selected brands of Cable Converter Boxes. The proper Cable Converter Box infra-red code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.) The TV/AUX/CABLE switch should be in the cable position.


**NOTE:** Use the Channel UP and DOWN buttons on the Remote for selecting Cable Converter Box Channels.

Located On Remote Control

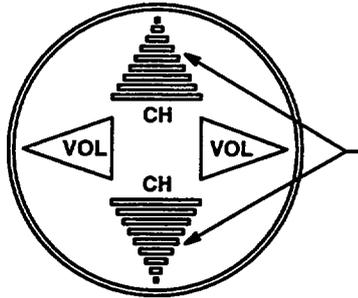


Use to select Cable Box Channels after programming Infra-red Code.

**PIP Channel Buttons** – Press the (PIP) CH (CHANNEL) UP or DOWN button while the PIP frame is displayed to sequentially scan through Channels.

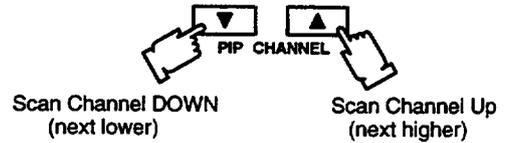

**PIP Swap Button** – Press the SWAP button (when the PIP frame is displayed) to interchange what is being viewed on the Main Picture with that of the PIP frame.

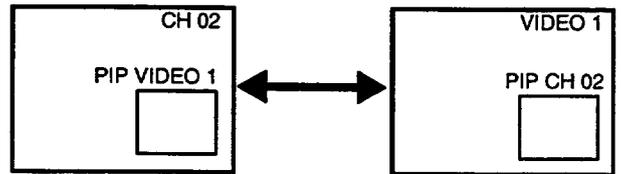

- Audio will be that of the Main Picture.

**PIP (Picture in Picture) Button** – This feature allows the viewer to monitor one channel program while watching another. The monitored source (PIP) can be a different channel or a different video source (such as a VCR) when connected to the input jacks.


- The TV/AUX/CABLE Switch should be in the TV position (LEFT) before operating PIP buttons.
- S-Video connection will also operate the PIP feature (refer to OPTIONAL S-VIDEO VHS CONNECTION section).
- When the Main Picture is in Video mode with no signal, the PIP will not operate properly.




**PIP Operation**

1. Press the PIP button. The PIP frame will appear at the position it was last displayed. The Main Picture channel and PIP channel will display momentarily. Audio will be that of Main Picture.
2. To select CHs for the Main Picture, use the Remote Control Keyboard or Channel UP/DOWN buttons. To select CHs for the PIP frame use the Remote Control PIP Channel UP/DOWN buttons.
3. Press the PIP button again to cancel PICTURE IN PICTURE feature.


**NOTE:** For PIP Video source connection, refer to PIP Antenna and External Video connection section.

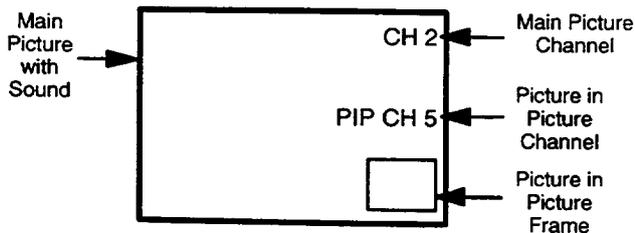

**PIP Size Button** – Press the SIZE button (when the PIP frame is displayed) to choose either the large or small PIP frame.

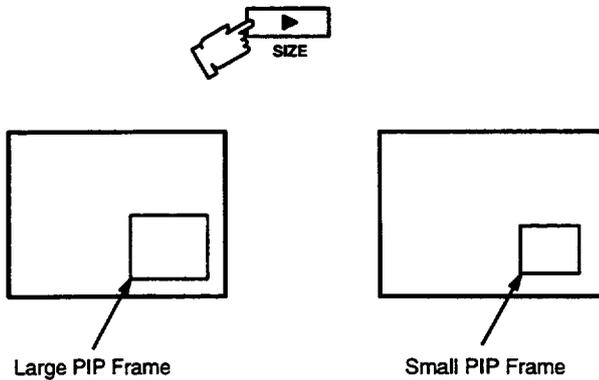

**PIP Freeze Button** – Press the FREEZE button to stop action in the Main Picture or PIP frame.

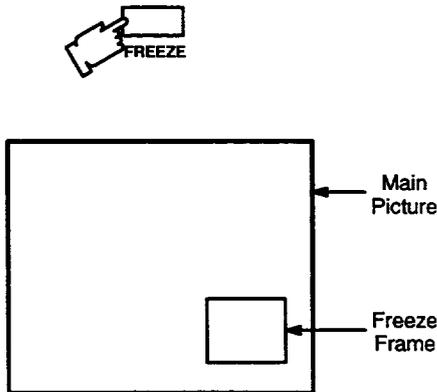


**NOTE:**

- Pressing the FREEZE button when the PIP frame is not displayed will stop action in the Main Picture and display it on the PIP frame.
- Pressing the FREEZE button when PIP frame is displayed will stop action in the PIP frame, press the FREEZE button again to continue action.
- Press the PIP button to delete PIP frame.


**PIP Move Button** – The PIP frame may be located at any corner of the Main Picture by pressing the PIP MOVE button (when the PIP frame is displayed).



**NOTE:** Each time MOVE button is pressed (when the PIP frame is displayed), the PIP frame will move (counterclockwise) as illustrated.

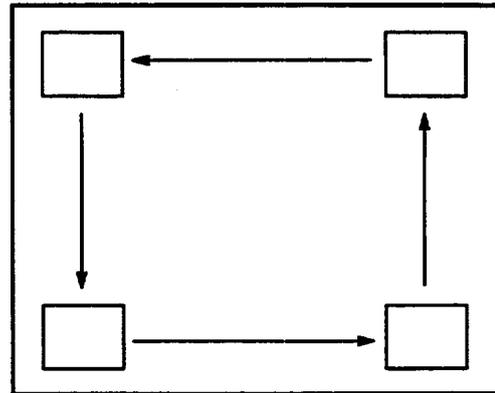


**PIP Search Button** – The SEARCH button allows you to scan channels in “Channel Scan memory” one at a time. This feature will work with or without an external video signal as the Main Picture.

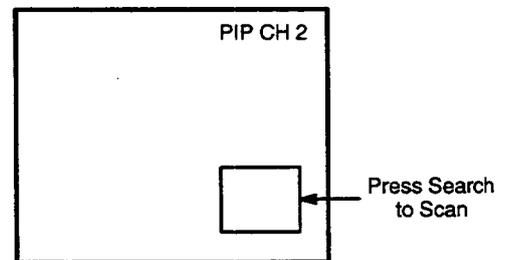

**Search Operation**

1. Press the SEARCH button. A PIP frame will appear on the Main Picture. (The PIP frame will continuously scan channels in sequence as programmed into channel memory.)
2. **Two Options:**
  - Option 1.** Press the SEARCH button again, the Search frame will disappear.
  - Option 2.** Press the PIP button to stop Search feature on desired picture for PIP frame. (Press the SWAP button to interchange what is being viewed on the Main Picture with that of the PIP frame.)

## Main Menu (Icons)

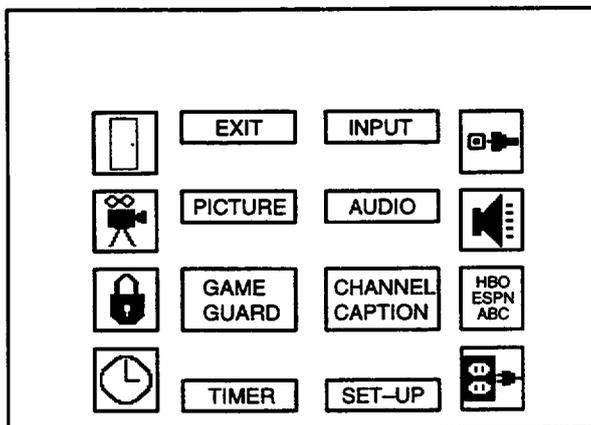


### ACTION



Displays and Exits Menu

Located On Remote Control

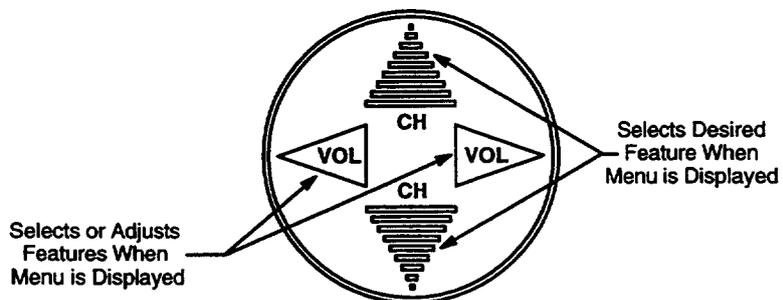

1. Press the ACTION button to display the Main Menu with Icons.
2. Press the CH UP or DOWN and the VOL LEFT or RIGHT buttons to select the desired Icon when the Main Menu is displayed (selected Icon will be indicated in Red).
3. Press the VOL buttons for left and right movement and the CH buttons for up or down movement.
4. To exit the Main Menu first select the EXIT icon, then press the ACTION button.

# Picture Adjustments


- Color
- Tint
- Brightness
- Picture
- Sharpness
- Picture Norm

**ACTION**




Displays and Exits Menus

Located On Remote Control

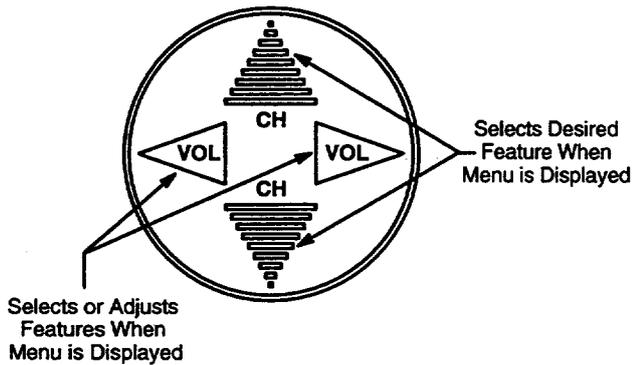

# Color, Tint, Brightness, Picture & Sharpness Adjustments


1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN button to select the Picture Icon.
3. Press the ACTION button to display the Picture Adjustment Menu.

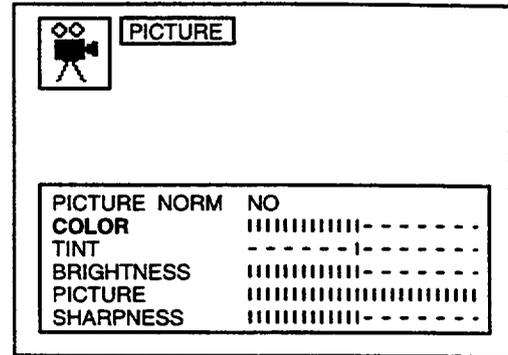

4. Press the CH UP or DOWN button to select the desired Picture Adjustment (Color, Tint, Brightness, Picture or Sharpness).
5. Press the VOL LEFT or RIGHT button to adjust your selection. (The selected Picture Adjustment will be displayed).
6. Repeat steps 4 and 5 for the remaining Picture Adjustments.
7. Press the ACTION button twice to exit the Picture Adjustment Menu.

**Picture Norm** – This feature is used to reset Color, Tint, Brightness, Picture and Sharpness adjustments back to a factory preset level.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN button to select the Picture Icon.
3. Press the ACTION button to display the Picture Adjustment Menu.

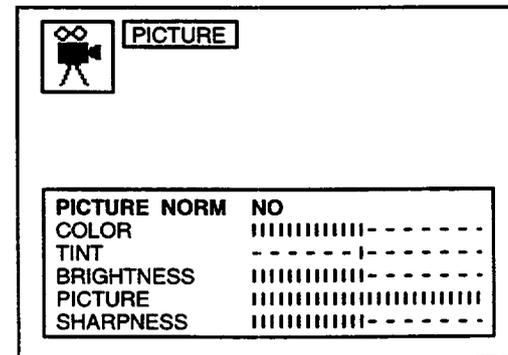

4. Press the CH UP or DOWN button to highlight "PICTURE NORM" (if necessary).
5. Press the VOL LEFT or RIGHT button to select "SET" to Normalize Color, Tint, Brightness, Picture and Sharpness.
6. Press the ACTION button twice to exit the Picture Adjustment Menu.

## Helpful Hints:

Picture Adjustments:

COLOR – adjust for desired color intensity.

TINT – adjust for natural flesh tones.

BRIGHTNESS – adjust so dark areas of picture just become black for a crisp detail.

PICTURE – adjust so the white areas of the picture are to your liking.

SHARPNESS – adjust for best clarity of outline detail.


# Game Guard

**ACTION**



Displays and Exits Menus

Located On Remote Control

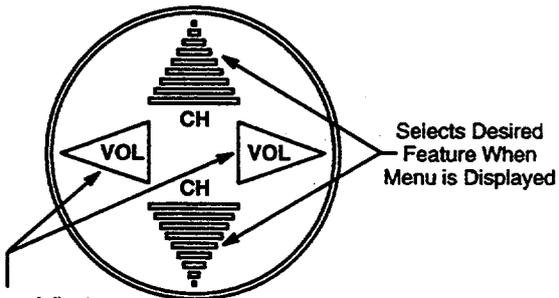


Selects or Adjusts Features When Menu is Displayed

Selects Desired Feature When Menu is Displayed

**Game Guard (Lockout)** – Prevents video games and other video sources from being viewed. Channel 3, 4 and all video inputs are locked out for 12, 24 or 48 hours.

**NOTE:** Be sure to understand this feature before attempting its use. **Use a code that you will easily remember.**


1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN button to select the Game Guard Icon.
3. Press the ACTION button to display the Game Guard Menu.

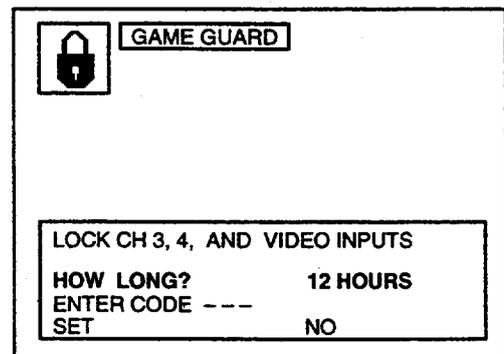

4. Press the VOL RIGHT button to select the desired hours (12, 24 or 48) for Game Guard (Lockout) to be activated.
5. Press the CH DOWN button to select "ENTER CODE". Then enter a 3 digit code with the Remote Control Keyboard.

**IMPORTANT NOTE:** Use a code you can easily remember.


6. Press the VOL LEFT or RIGHT button after entering three digit code. "Game Guard Locked" will display On Screen.

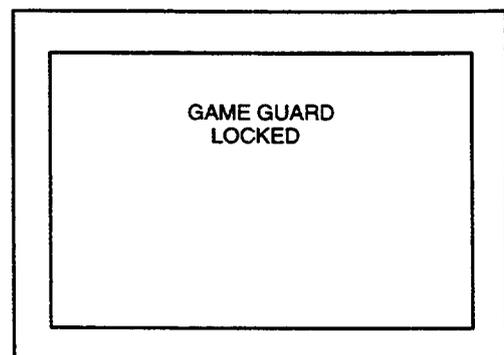


Game Guard Activated

## Game Guard (Unlock)


To unlock the Game Guard feature, repeat steps 1 through 3. Enter the same 3 digit code previously used in step 5 with Remote Control Keyboard.

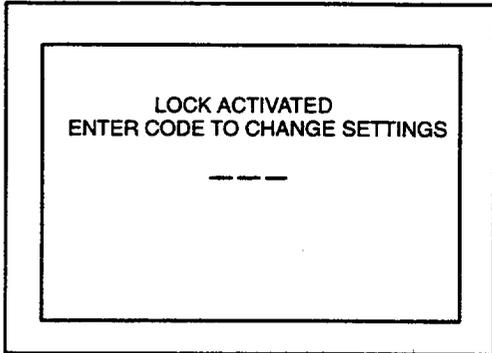

Enter Same 3 Digit Code Previously Used

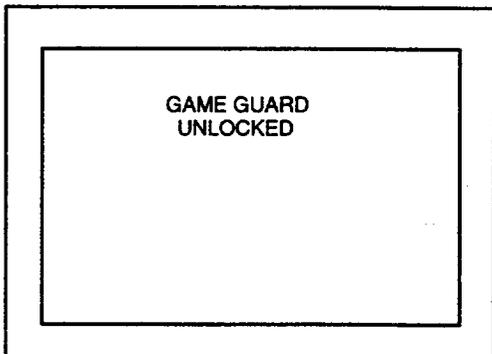


If 3 Digit Code Is The Same

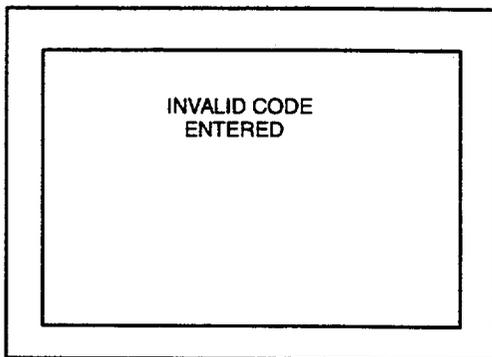

If 3 Digit Code Is Not The Same


# Timer Features

- Sleep Timer
- Program Timer

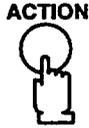

Displays and Exits Menus

Located On Remote Control

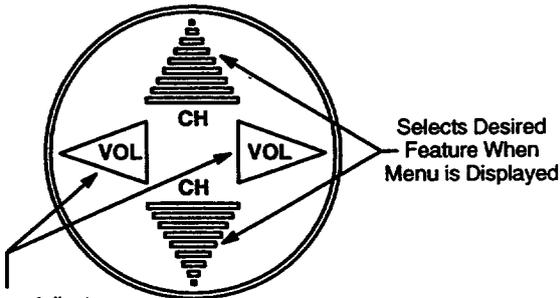


Selects or Adjusts Features When Menu is Displayed

Selects Desired Feature When Menu is Displayed

**Sleep Timer**— This feature is used for automatic turn off in 30, 60 or 90 minutes.

**NOTE:** Display will flash 3, 2 and 1 to indicate the last three remaining minutes prior to turn off. The Recall display will also appear.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN button to select the Timer Icon.
3. Press the ACTION button to display the Timer Control Menu.

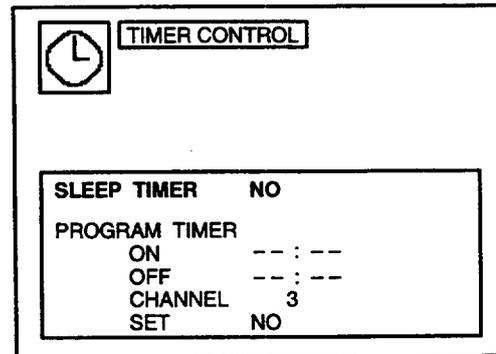

4. Press the VOL RIGHT button to select 30, 60 or 90 minutes (Sleep Timer will be activated).
5. Press the ACTION button twice to exit the Timer Control Menu.

**NOTE:** To deactivate Sleep Timer repeat steps 1 through 4. In step 4 select "NO" instead of minutes.

## Helpful Hints:

Press the RECALL button to display the remaining minutes for Sleep Timer, the time will display in the bottom left corner.


# Program Timer

**ACTION**



Displays and Exits Menus


Located On Remote Control

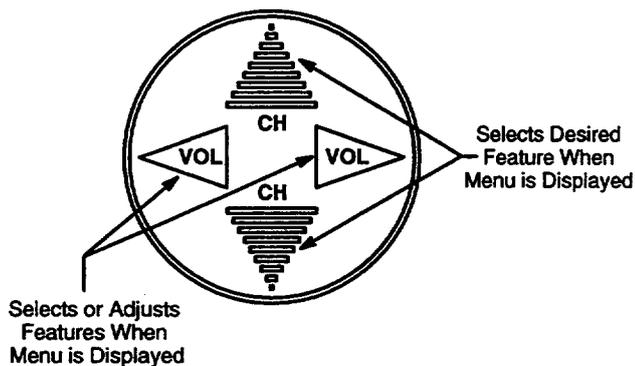

**Program Timer** — This feature is capable of turning the TV on, tuned to a desired channel and off at a predetermined time (one day or everyday).

**NOTE:** The clock must be set for this feature to operate. (Refer to the Set-Up Menu to set time.)

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN button to select the Timer Icon.
3. Press the ACTION button to display the Timer Control Menu.

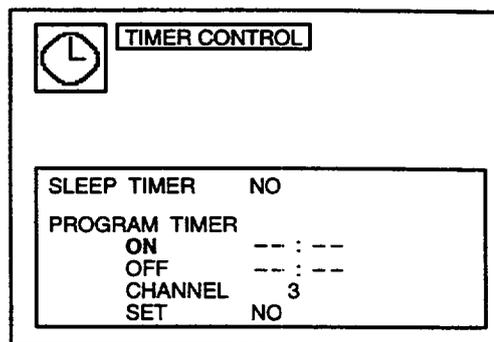

4. Press the CH DOWN button to select "ON" (time).
5. Press the VOL LEFT or RIGHT button repeatedly to set hours (set AM/PM accordingly).
6. Press the CH DOWN button to select the minutes position.
7. Press the VOL LEFT or RIGHT button repeatedly to set minutes.
8. Press the CH DOWN button to select "OFF" (time).
9. Repeat steps 5 through 7 for setting "OFF" (time).
10. Press the CH DOWN button to select "CHANNEL".
11. Press the VOL LEFT or RIGHT button or use the Remote Control Keyboard to enter the channel number desired when the set turns "ON".
12. Press the CH DOWN button to select "SET".
13. Press the VOL RIGHT button to select:
  - NO – not activated.
  - ONE DAY – activated.
  - EVERY DAY – activated.

**NOTE:** To deactivate Program Timer select "NO" in step 13.

14. Press the ACTION button twice to exit the Timer Control Menu.

## Helpful Hints:

- If you see "GAME GUARD" in the upper right hand corner, the channel or Video Input you have selected has been locked out.
- If the Program Timer "ON" functions while the set is operating, the set will automatically tune to the channel designated in the Timer Program.

# Set-Up Features


- Menu
- CC (Closed Caption) on Mute
- Set Time
- Antenna (TV or Cable)
- Auto Program
- Manual Program
- CC (Closed Caption) Mode

**ACTION**



Displays and Exits Menus

Located On Remote Control

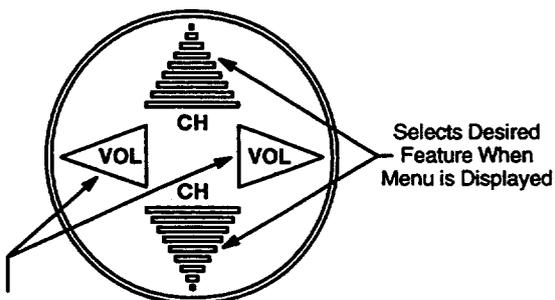


Selects or Adjusts Features When Menu is Displayed


Selects Desired Feature When Menu is Displayed

**Menu** – The Main Menu can be displayed in two formats. Icon with Text or Icon without Text for those familiar with the Icon system.


1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
3. Press the ACTION button to display the Set-Up Menu.

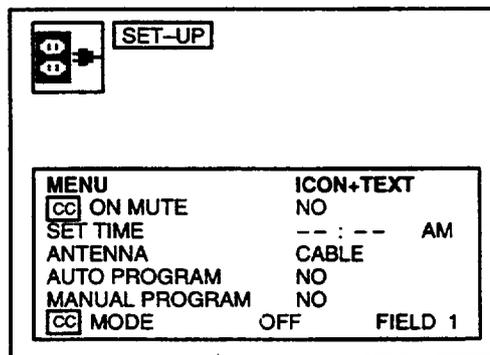

4. Press the VOL LEFT or RIGHT button to select ICON with TEXT or ICON only.
5. Press the ACTION button twice to exit the Set-Up Menu.

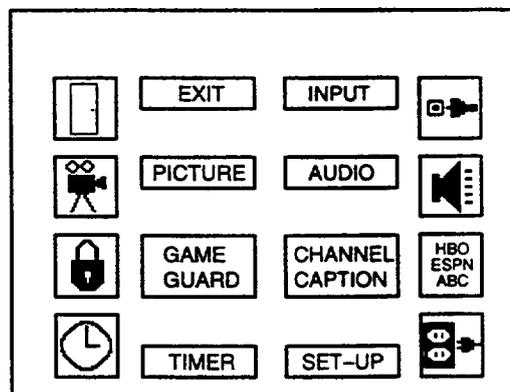

Icon with Text

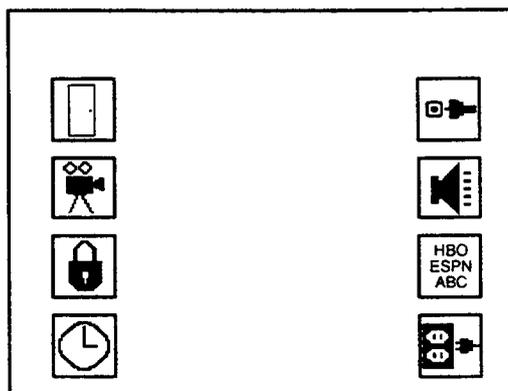

Icon (Only)


# CC On Mute

**ACTION**



Displays and Exits Menu

Located On Remote Control

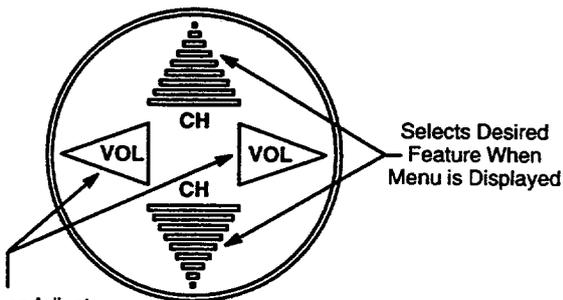

Selects or Adjusts Features When Menu is Displayed


Selects Desired Feature When Menu is Displayed

## Closed Caption with Mute Button

Activates the On Screen Closed Captioning when the MUTE button on the Remote Control is pressed. To deactivate press the MUTE button again.

**NOTE:** This feature only functions when the Close Caption Mode is in the "OFF" position. The program being viewed must be broadcast with Closed Caption. (Refer to your local TV guide.)


1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
3. Press the ACTION button to display the Set-Up Menu.

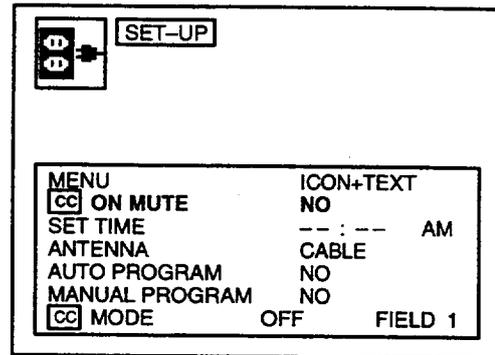

4. Press the CH DOWN button to select "CC ON MUTE".
5. Press the VOL RIGHT button to select NO (OFF), CAP C1 or CAP C2.

### Recommended Set-Up:

1. Place CC ON MUTE into the CAP C1 Mode.
2. Press the CH DOWN button to select "CC MODE".
3. Press the VOL RIGHT button to select "OFF".
4. Press the CH DOWN button to select the Field position.
5. Press the VOL LEFT or RIGHT button to select "FIELD 1".

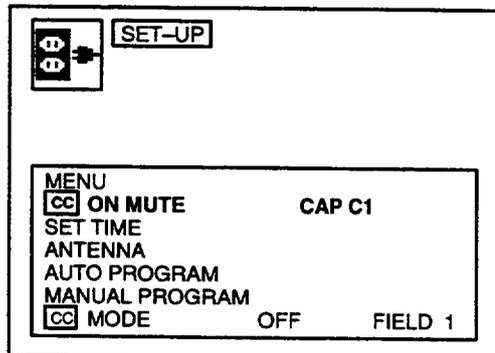

6. Press the ACTION button twice to exit the Set-Up Menu.
7. Press the MUTE button when the program being viewed is broadcast with Closed Caption to activate. Press again to deactivate.


# Set Time (Clock)

**ACTION**



Displays and Exits Menus

Located On Remote Control

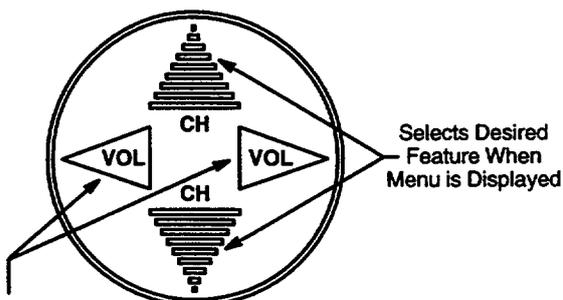


Selects or Adjusts Features When Menu is Displayed

Selects Desired Feature When Menu is Displayed

**Set Time** – Clock (when set) will display on screen at initial “Turn On”, after a channel change and when pressing the RECALL button. The time must be set first in order to operate the Program ON/OFF Timer.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
3. Press the ACTION button to display the Set-Up Menu.

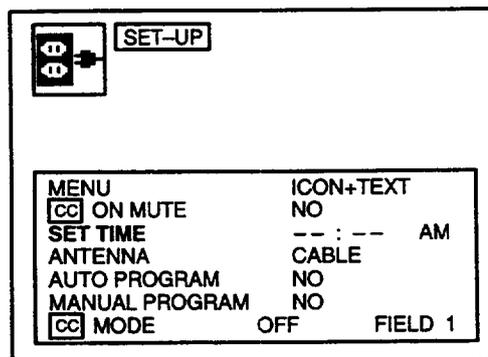

4. Press the CH DOWN button to select “SET TIME”.
5. Press the VOL LEFT or RIGHT button to set hours (set AM/PM accordingly).
6. Press the CH DOWN button to select minutes position.
7. Press the VOL LEFT or RIGHT button repeatedly to set minutes.
8. Press the ACTION button twice to exit the Set-Up Menu.


# Antenna Mode

**ACTION**




Displays and Exits Menus

Located On Remote Control

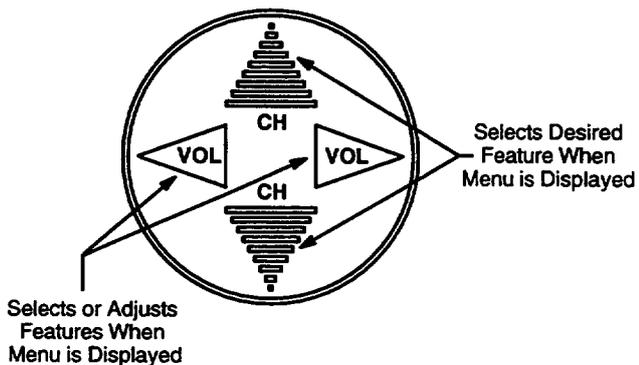

**TV or Cable Tuning Mode** – The proper Input mode must be selected for the type of signal at the antenna input.

- TV mode is used when the Receiver is not connected to a cable TV system, for example when using a VHF/UHF antenna (channels 02 – 69).
  - Cable mode is used when the Receiver is connected to a Cable TV system and you are not using a cable company converter box (channels 01 – 125).
1. Press the ACTION button to display the Main Menu.
  2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
  3. Press the ACTION button to display the Set-Up Menu.

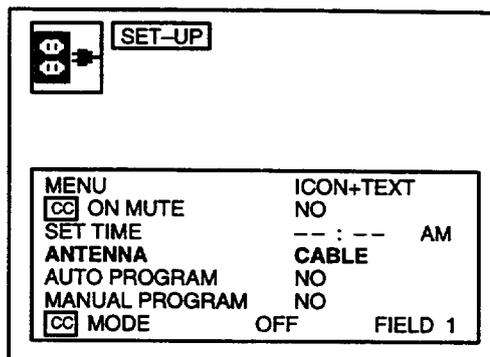

4. Press the CH DOWN button to select "ANTENNA".
5. Press the VOL LEFT or RIGHT button to select TV or CABLE.
6. Press the ACTION button twice to exit the Set-Up Menu.


# Auto Program

**ACTION**



Displays and Exits Menus


Located On Remote Control

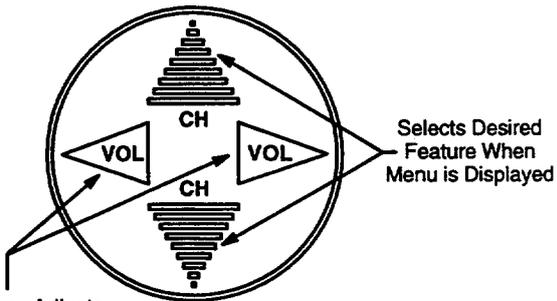

Selects or Adjusts Features When Menu is Displayed

**Auto Programming** — This feature allows you to place all channels with a video signal into Channel Scan Memory.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
3. Press the ACTION button to display the Set-Up Menu.

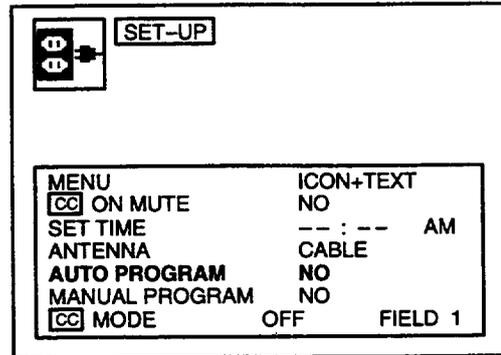

4. Press the CH DOWN button to select "AUTO PROGRAM".
5. Press the VOL LEFT or VOL RIGHT button to start Auto Programming. Channels will automatically advance until all channels have been scanned.
6. Press the ACTION button twice after completion of Auto Programming to exit the Set-Up Menu.

**NOTE:** Channel numbers with signal present will turn blue which indicates stored in Channel Scan Memory.


# Manual Program

**ACTION**



Displays and Exits Menus

Located On Remote Control

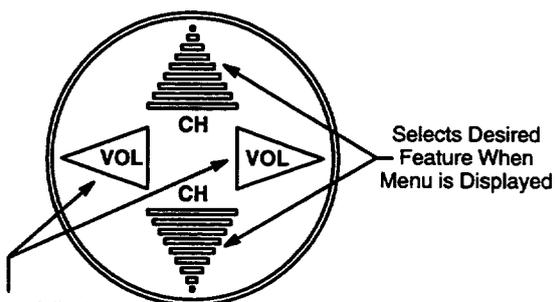


Selects or Adjusts Features When Menu is Displayed


Selects Desired Feature When Menu is Displayed

**Manual Programming** – This feature allows you to select which channels are placed into Channel Scan Memory.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
3. Press the ACTION button to display the Set-Up Menu.

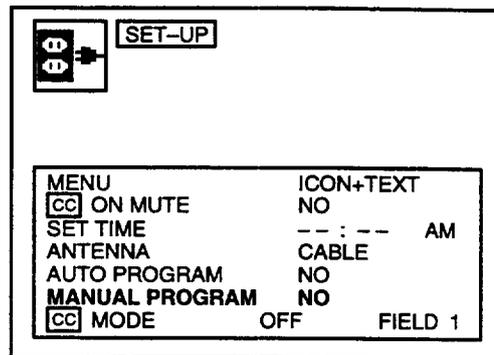

4. Press the CH DOWN button to select "MANUAL PROGRAM".
5. Press the VOL LEFT or RIGHT button to display the Manual Programming Menu.

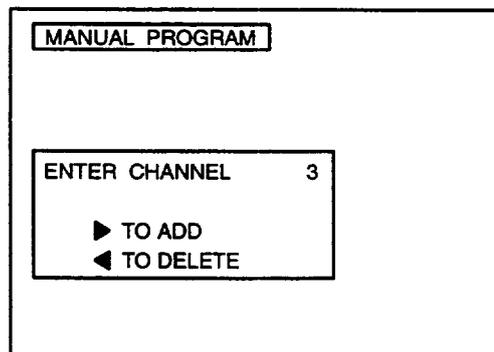

6. Use the CH UP or DOWN button or the Remote Keyboard "0 through 9" buttons to select channels.
7. Press the VOL RIGHT button to add channel(s) to memory (Blue). Press the VOL LEFT button to delete channels from memory (Yellow).
8. Repeat steps 6 and 7 to continue adding or deleting channels.
9. Press the ACTION button twice to exit the Manual Programming Menu.


## CC Mode

ACTION



Displays and Exits Menu

Located On Remote Control

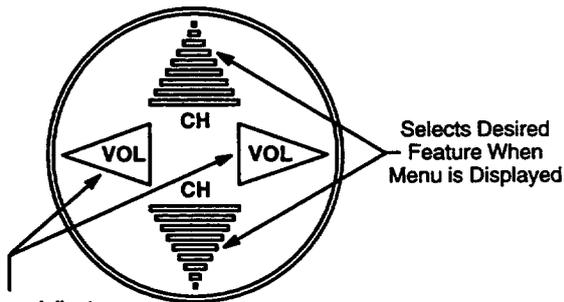


Selects or Adjusts Features When Menu is Displayed

Selects Desired Feature When Menu is Displayed

## Closed Caption Mode

This Receiver has a built in decoder that provides a visual depiction of the audio portion of a television program in the form of written words across the screen (White or Colored letters on a black background). It allows the viewer to read the dialogue of a television program or other information.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Set-Up Icon.
3. Press the ACTION button to display the Set-Up Menu.

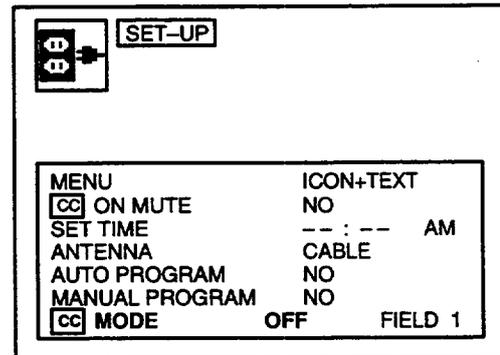

4. Press the CH DOWN button to select "CC MODE".
  5. Press the VOL RIGHT button to select OFF, CAP C1, TEXT C1, CAP C2 or TEXT C2.
  6. Press the CH DOWN button to select the Field position.
  7. Press the VOL LEFT or RIGHT button to select "FIELD 1" or "FIELD 2".
  8. Press the ACTION button twice to exit the Set-Up Menu.
- CAPTION OFF – Recommended mode when you do not wish to view Closed Caption.
  - CAPTION C1 – For video related information that can be displayed (up to 4 lines of script strategically placed on the television screen so that it does not obstruct relevant parts of the picture). Script can be in any language.
  - TEXT C1 – Blanks out a large portion of the picture on the television screen, and displays program guide or any other information currently being transmitted.
  - CAPTION C2 – Another mode used for video related information that can be displayed (up to 4 lines of script strategically placed on the television screen so that it does not obstruct relevant parts of the picture).
  - TEXT C2 – Another mode which displays information and blanks out a large portion of the picture on the television screen.

### Helpful Hints:

- Closed Caption information may be transmitted on either or both Caption Fields.
- Most Closed Caption information is transmitted on Field 1 in Cap C1 Mode.
- De-select Text mode if large portion of the picture is blanked out.


# Channel Caption

**ACTION**



Displays and Exits Menus


Located On Remote Control

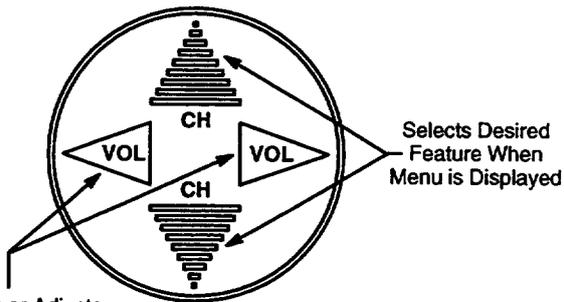


Selects or Adjusts Features When Menu is Displayed

## Channel Caption (Station Identifier)

This feature allows you to enter the call names of up to 30 stations into memory (using up to 4 characters for each station). The call name will then display along with the channel number when changing channels or pressing RECALL.

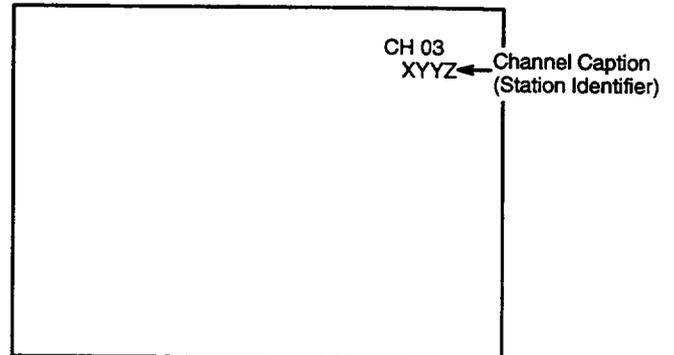

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Channel Caption Icon.
3. Press the ACTION button to display the Channel Caption Menu.

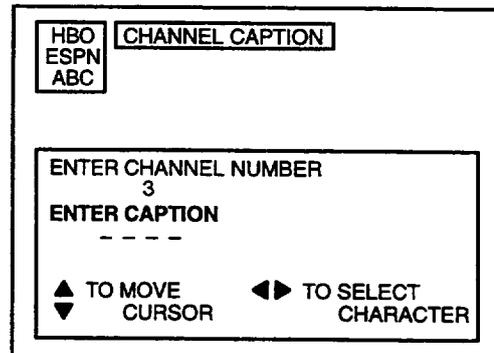

4. Press the VOL LEFT or RIGHT button, or use the Remote Control Keyboard, to enter channel number you wish to assign a Station Identifier.
5. Press the CH DOWN button to select "ENTER CAPTION".
6. Press the VOL LEFT or RIGHT button to select first character in Station Identifier. Then press the CH DOWN button to move cursor to the second position and repeat until the complete Station Identifier is entered (up to 4 characters).
7. Press the CH UP or DOWN button to select "ENTER CHANNEL NUMBER". Then repeat steps 4 through 6 to continue adding Channel Station Identifier(s).
8. Press the ACTION button twice to exit the Channel Caption Menu.

**NOTE:** To delete a Channel Caption (Station Identifier) from memory all four character positions must display dash mark (-).

### Helpful Hints:

When the Maximum amount of station identifiers are entered, "FULL" will be displayed in the characters position.

# Audio Adjustment


- Audio Norm
- Bass
- Treble
- Balance
- (Audio) Mode
- Speaker
- Surround
- AI Sound

**ACTION**



Displays and Exits Menus

Located On Remote Control

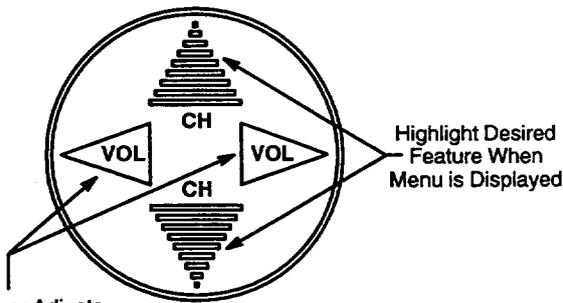


Selects or Adjusts Features When Menu is Displayed

Highlight Desired Feature When Menu is Displayed

# Bass, Treble & Balance Adjustment


1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

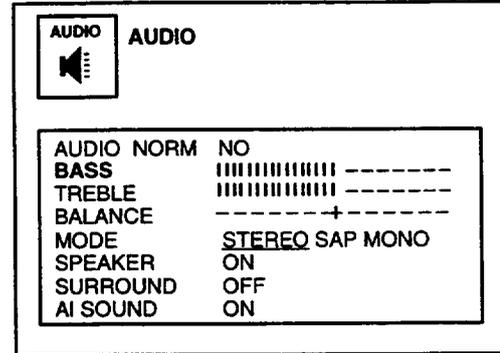

4. Press the CH UP or DOWN button to highlight BASS, TREBLE or BALANCE.
5. Press the VOL LEFT or RIGHT button to adjust for desired audio response.
6. Repeat steps 4 and 5 for remaining Audio functions.
7. Press the ACTION button twice to exit the Audio Adjustment Menu.

**Audio Norm** – This feature is used to reset BASS, TREBLE and BALANCE back to a factory preset level.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

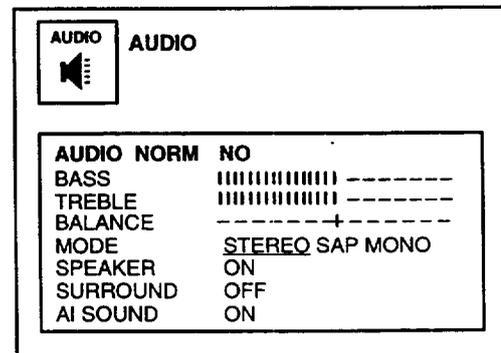

4. Press the CH UP or DOWN button to highlight "AUDIO NORM".
5. Press the VOL LEFT or RIGHT button to select "YES" to Normalize Bass, Treble and Balance.
6. Press the ACTION button twice to exit the Audio Adjustment Menu.

## Helpful Hints:

**BASS** – To increase or decrease the Bass response.  
**TREBLE** – To increase or decrease the Treble response.  
**BALANCE** – To emphasize the Right and Left Speaker's volume.


# Audio Mode (Stereo SAP Mono) and [TV] Speaker

**ACTION**



Displays and Exits Menus

Located On Remote Control

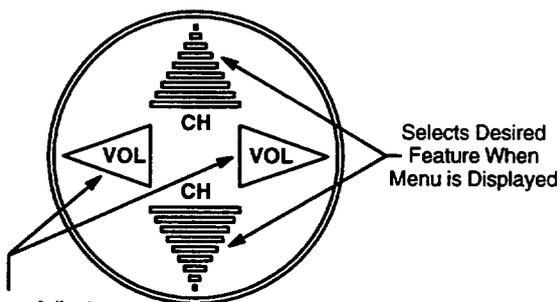


Selects or Adjusts Features When Menu is Displayed

Selects Desired Feature When Menu is Displayed

## (Audio) Mode Stereo/SAP/Mono

When Audio is broadcast in Stereo or SAP an ON Screen display will appear on initial "Turn On" and "Channel Change". The available choices will be indicated in red.


1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

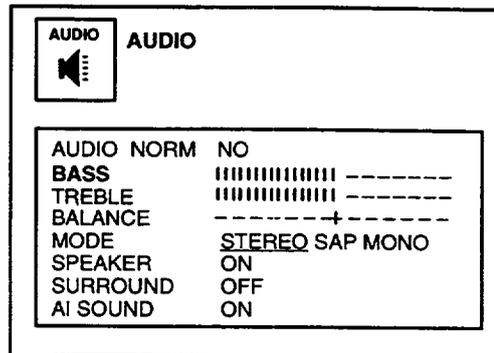

4. Press the CH UP or DOWN button to select "MODE".
5. Press the VOL LEFT or RIGHT button to select Stereo, SAP (Second Audio Programming) or Mono. The selected mode will be underlined.
6. Press the ACTION button twice to exit the Audio Adjustment Menu.

**[TV] Speaker** – This feature is used to turn the internal speakers "ON" or "OFF". It is used when the Receiver is connected to an External Audio Amplifier. (Refer to "To Audio Amp" section for further information.)

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

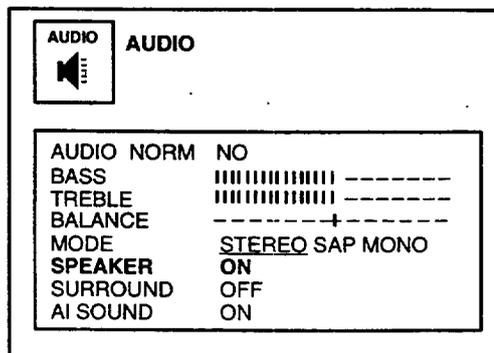

4. Press the CH UP or DOWN button to select "SPEAKER".
5. Press the VOL LEFT or RIGHT button to select Speaker "ON" or "OFF".
6. Press the ACTION button twice to exit the Audio Adjustment Menu.

### Helpful Hints:

STEREO – Two channel Audio reception.  
 SAP – Second Audio Programming (typically used for bilingual audio).  
 MONO – Use when stereo signal is weak.


# Surround and AI Sound

**ACTION**



Displays and Exits Menu

Located On Remote Control

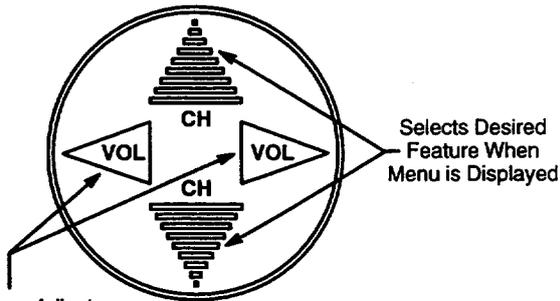


Selects or Adjusts Features When Menu is Displayed

Selects Desired Feature When Menu is Displayed

**Surround** — Use the Surround Feature to enhance audio response when listening to Stereo broadcasts.


1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

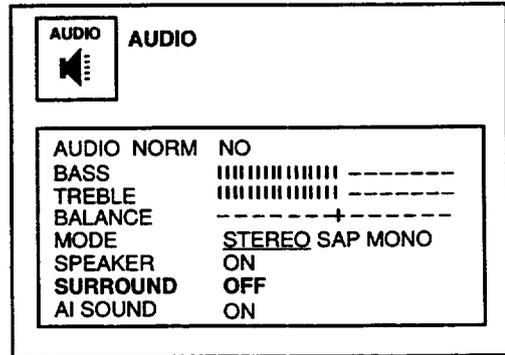

4. Press the CH UP or DOWN button to highlight "SURROUND".
5. Press the VOL LEFT or RIGHT button to select SURROUND OFF or ON.
6. Press the ACTION button twice to exit the Audio Adjustment Menu.

**AI Sound** — This feature regulates the volume between programs and commercial audio to maintain a constant sound output level.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to select the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

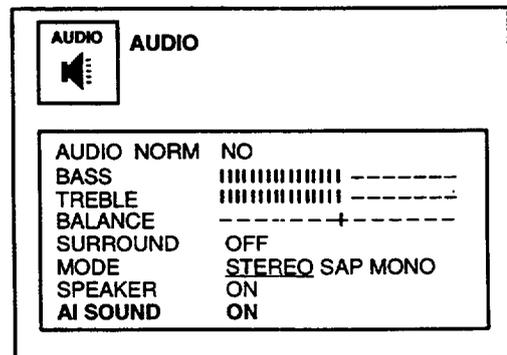

4. Press the CH UP or DOWN button to highlight "AI SOUND".
5. Press the VOL LEFT or RIGHT button to select AI SOUND "ON" or "OFF".
6. Press the ACTION button twice to exit the Audio Adjustment Menu.

# Input Select


- Main Picture Input Selection
- PIP (Picture in Picture) Input Selection

ACTION



Displays and Exits Menu

Located On Remote Control

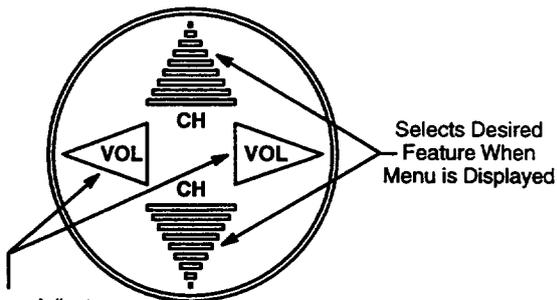


Selects or Adjusts Features When Menu is Displayed

## Main (Picture) Input Selection

This feature is used to select TV Mode Operation or one of two Video Inputs for the Main Picture. (Used with optional accessory Video equipment.)

1. Press the ACTION button to display the Main Menu.
2. Press the VOL RIGHT button to select the Input Icon.
3. Press the ACTION button to display the Input Select Menu.

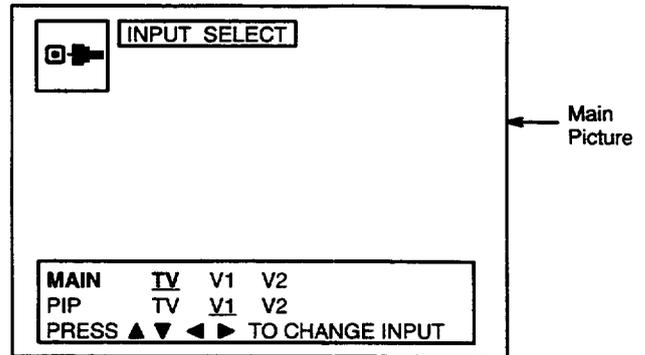


4. Press the CH UP or DOWN button to select "MAIN".
5. Press the VOL LEFT or RIGHT button to select TV, V1 (VIDEO 1) or V2 (VIDEO 2) for Main Picture. The selected mode will be underlined.
6. Press the ACTION button twice to exit the Input Select Menu.

## PIP Input Selection

This feature is used to select TV Mode Operation or one of two Video Inputs for the PIP (Picture in Picture) frame. (Used with optional accessory Video equipment.)

1. Press the ACTION button to display the Main Menu.
2. Press the VOL RIGHT button to select the Input Icon.
3. Press the ACTION button to display the Input Select Menu.

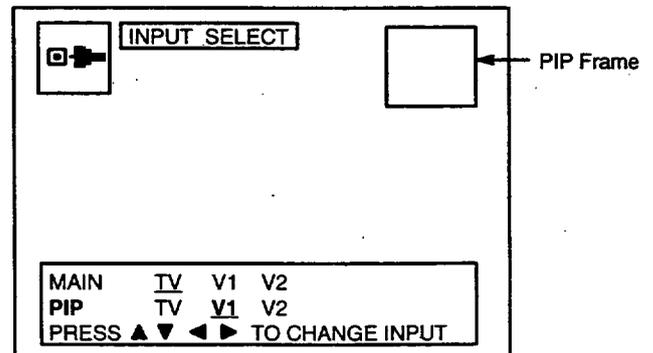

4. Press the CH UP or DOWN button to select "PIP" (the PIP frame will appear in the top right corner).
5. Press the VOL LEFT or RIGHT button to select TV, V1 (VIDEO 1) or V2 (VIDEO 2). The selected mode will be underlined.
6. Press the ACTION button twice to exit the Input Select Menu.

**NOTE:** The PIP frame will remain on screen, if desired press the PIP button to delete PIP frame.

### Helpful Hints:

The Game Guard feature must be deactivated before selecting Video Input for Main picture or PIP frame.

# Programming The Universal Remote Control

## VCR

### **Preferred Procedure – Code Known**

#### **Programming Universal Remote Using Infra-Red Access Codes for VCRs**

- Determine brand of VCR.
- Identify code(s) associated with the brand in the infra-red code index for VCRs.

#### **Procedure**

1. Place the remote TV/AUX/CABLE switch into the AUX position (Center). 
2. Place the Remote VCR/LDP switch into the VCR position (LEFT). 
3. Press and hold VCR POWER button down on Universal Remote.
4. Enter two digit code using keyboard "0 through 9" buttons. The Universal Remote is now programmed.

**NOTE:** Some brands have multiple codes. Repeat procedure using each code listed until VCR responds correctly.

### **Alternate Procedure – Code Unknown**

#### **Programming Universal Remote Using the "Sequence Method" for VCRs**

- Confirm VCR is plugged in and operating properly, then turn OFF.

#### **Procedure**

1. Place the Remote TV/AUX/CABLE switch into the AUX position (Center). 
2. Place the Remote VCR/LDP switch into the VCR position (LEFT). 
3. Press and hold VCR POWER button down on Universal Remote.
4. Press VOL RIGHT button repeatedly. Check for the VCR to turn ON after each press. Stop pressing the button when the VCR turns ON. The proper infra-red code has now been accessed.

#### **NOTE:**

- It may take several attempts before the correct code is found.
- The VOL LEFT button can be used to return to a code that was accidentally passed by.
- Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the VCR OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the VCR ON and repeatedly press the VOL RIGHT button until the VCR turns OFF.

## Laser Disc Player

For programming the Universal Remote for Laser Disc Players use the same procedure as programming VCR's.

**NOTE:** Place the Remote VCR/LDP switch into the LDP position. 

**NOTE:** When operating equipment (VCR, Laser Disc Player or Cable Converter box) with the Universal Remote Control, the TV/AUX/CABLE switch should be set to the same position where the Access Code was first programmed for the equipment. Otherwise, leave the switch in the TV position.

## Cable Converter Box

### **Preferred Procedure – Code Known**

#### **Programming Universal Remote Using Infra-Red Access Codes for Cable Television Converter Boxes**

- Determine brand of Cable Television Converter.
- Identify code(s) associated with the brand in the infra-red code index for Cable Television Converter boxes.

#### **Procedure**

1. Place the Remote TV/AUX/CABLE switch into the CABLE position. 
2. Press and hold the CABLE POWER button down on Universal Remote.
3. Enter two digit code using keyboard "0 through 9" buttons. The Universal Remote is now programmed. **Use the Remote CH UP and DOWN buttons for selecting Cable Channels.**

**NOTE:** Some brands have multiple codes. Repeat procedure using each code listed until Cable Television Converter box responds correctly.

### **Alternate Procedure – Code Unknown**

#### **Programming Universal Remote Using the "Sequence Method" for Cable Television Converter Boxes**

- Confirm Cable Television Converter box is plugged in and operating properly, then turn OFF.

#### **Procedure**

1. Place the Remote TV/AUX/CABLE switch into the CABLE position. 
2. Press and hold the CABLE POWER button down on Universal Remote.
3. Press VOL RIGHT button repeatedly. Check for the Cable Television Converter box to turn ON after each press. Stop pressing the button when the Cable Television Converter box turns ON. The proper infra-red code has now been accessed.

#### **NOTE:**

- It may take several attempts before the correct code is found.
- The VOL LEFT button can be used to return to a code that was accidentally passed by.
- Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the Cable Television Converter box OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the Cable Television Converter box ON and repeatedly press the VOL RIGHT button until the Cable Television Converter box turns OFF.

TV/AUX/CABLE




# VCR, LDP and Cable Converter Box Infra-Red Codes Index

The Universal infra-red Remote Control is capable of operating many brands of VCRs, Laser Disc Players and Cable Television Converter Boxes after entering the proper infra-red code.

**NOTE:** The Universal Remote Control memory is limited. Some models of VCRs, Laser Disc Players and Cable Television Converter Boxes may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

## Infra-Red Code Index For VCRs

VCR Brand	Code(s)	VCR Brand	Code(s)
Audio Dynamics	14, 16	NEC	02, 14, 16, 30
Broksonic	10	Panasonic	00, 01
Canon	00, 01	Pentax	05
Capehart	01	Philco	00, 29
Citizen	09	Philips	00, 29
Craig	12	Pioneer	05
Curtis Mathes	00, 08, 15	Quasar	00, 01
DBX	14, 16	RCA	05, 07, 08, 28, 35
Emerson	10, 20, 34, 35, 36, 37	Realistic	00, 02, 06, 12, 15
Fisher	12, 18, 19	Samsung	07, 32
Funai	15	Sanyo	02, 12
GE	00, 07, 08, 32	Scott	04, 13, 33, 36
Goldstar	09	Sears	02, 05, 18, 19
Hitachi	05, 35, 36	Sharp	06, 24
Instant Replay	00	Sony	17, 26, 33, 34
JCPenney	00, 02, 05, 14, 16, 30	Sylvania	00, 29
JVC	02, 14, 16, 30	Symphonic	15
Kenwood	02, 14, 16, 30	Tashiko	09
Magnavox	00, 29	Tatung	30
Marantz	02, 14, 16, 29, 30	Teac	15, 30
Marta	09	Teknika	21
Memorex	00, 12	Toshiba	05, 13
MGA	04, 27	Vector Research	14, 16
Minolta	05	Video Concepts	14, 16
Mitsubishi	04, 27	Wards	06
Montgomery Ward	06	Yamaha	02, 14, 16, 30
Multitech	07, 15, 32	Zenith	11, 17

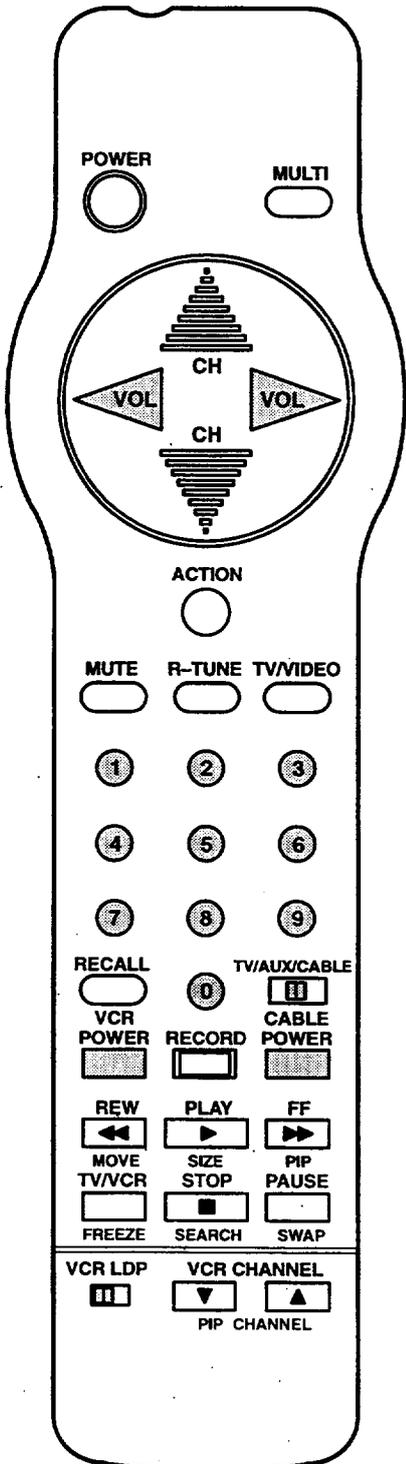

Remote Control

## Infra-Red Code Index For Cable Television Converter Box


Brand of Cable-TV Box	Code(s)	Brand of Cable-TV Box	Code(s)
G.I.	04, 05, 15, 23, 24, 25, 30, 36	Pioneer	18, 20
Hamlin	12, 13, 34	RCA	27
Jerrold	04, 05, 15, 23, 24, 25, 30, 36	Regency	02
Macom	27	Scientific Atlantic	03, 22
Magnavox	19, 26, 28, 29, 32, 33, 40, 41	Sylvania	11
Oak	14, 16, 18	Texscan	10, 11
Oak Sigma	16	Tocom	17, 21
Panasonic	27, 39	Unika	31
Philips	19, 26, 28, 29, 32, 33, 40, 41	Viewstar	19, 26, 28, 29, 32, 33, 40, 41
		Zenith	01, 42

## Infra-Red Code Index For Laser Disc Player

Brand of Laser Disc Player	Code(s)	Brand of Laser Disc Player	Code(s)
Kenwood	01	Quasar	05
Magnavox	02	RCA	04
Marantz	03	Sayo	06
Mitsubishi	04	Sharp	07
Panasonic	05	Sony	08
Philips	02	Yamaha	09
Pioneer	04		

# Optional Equipment Connection and Operation

## To Audio AMP Connection (Stereo)

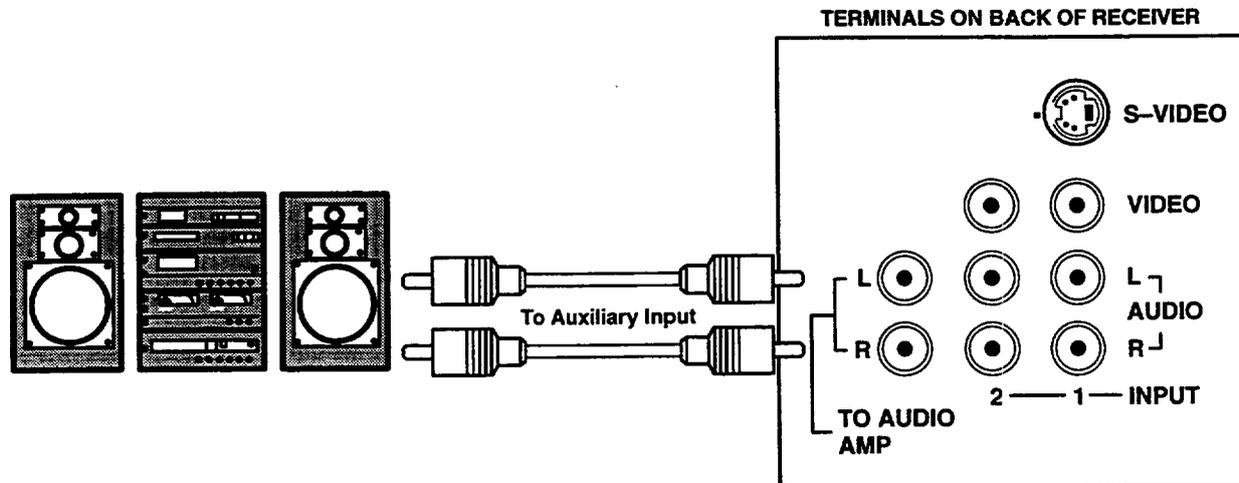

### • To Audio AMP


Connect to an external audio amp auxiliary input for monitoring sound through a stereo system.

**NOTE:** "TO AUDIO AMP" terminals cannot be used for external speakers.

**Adjustment** – When an audio amp is connected to "TO AUDIO AMP" terminals:

1. Select INT. SPEAKERS "ON" Mode. (Refer to the Audio Menu [TV] Speakers section.)
2. Set volume of audio amp to near minimum.
3. Adjust volume of TV to desired listening level.
4. Adjust volume of audio amp to match the level of TV.
5. Select INT. SPEAKERS "OFF" Mode. (Refer to the Audio Menu [TV] Speakers section.)
6. Audio bass, treble, balance, volume and mute can now be controlled by the TV Remote Control.


## Video/Audio Connection

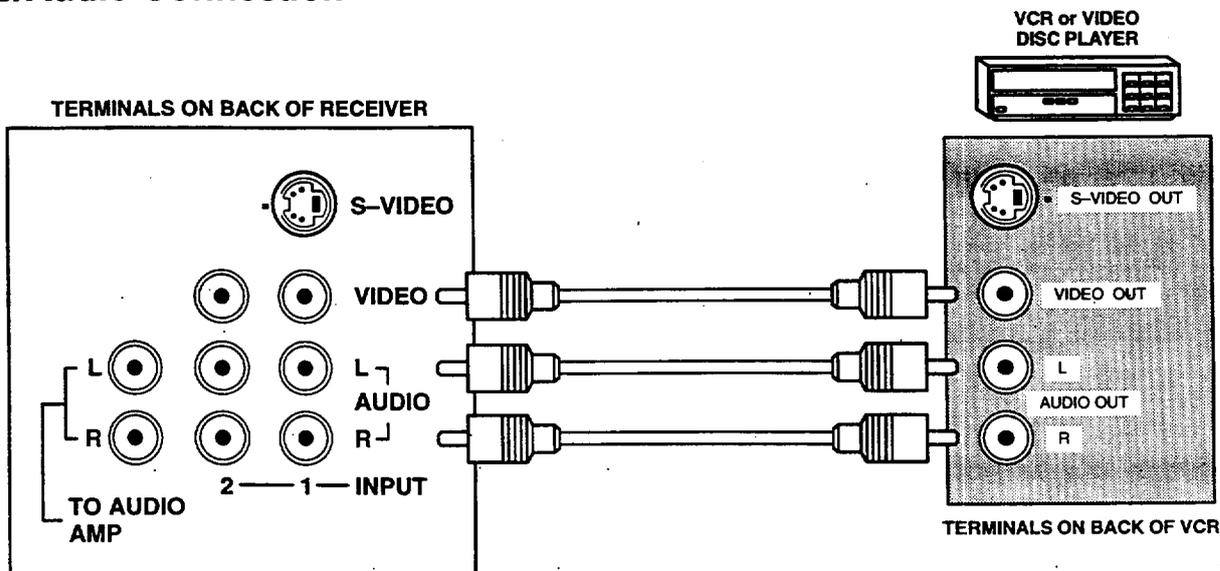

### Operation

1. Connect optional equipment as shown to INPUT 1 or 2.
2. Select the desired Video mode by pressing the TV/VIDEO button (or refer to the Input Selection Menu).  
**NOTE:** You must select the same VIDEO Mode that the equipment is connected to.
3. Operate optional equipment (VCR–VDP) as instructed in Optional Equipment manual.

## S-Video Connection

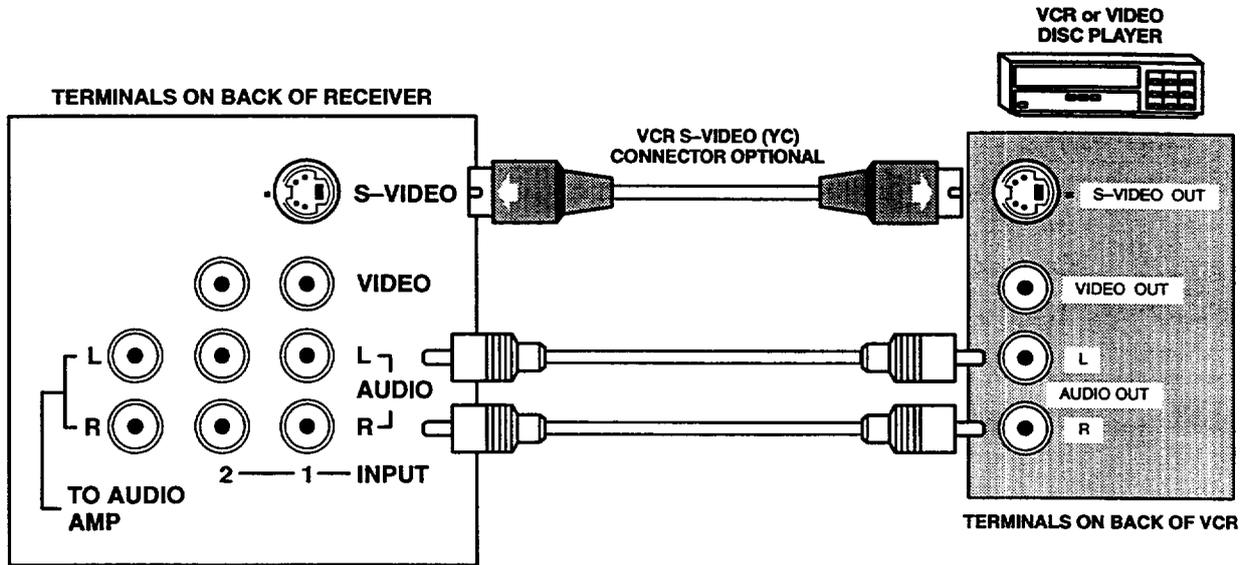

### Operation

1. Connect S-Video (YC) connector to S-Video Terminal.
2. Make connections to L and R Input 1 Audio jacks.
3. Select Video1 mode by pressing the TV/VIDEO button (or refer to the Input Selection Menu).
4. Operate optional equipment (VCR-VDP) as instructed in Optional Equipment manual.

### NOTE:

- You must select the same VIDEO Mode that the equipment is connected to.
- Connection of optional S-VIDEO jack automatically disconnects the Normal Video Input 1 jack.

## Care and Cleaning

### Picture Tube (Turn set off)

Use a mild soap solution or window cleaner and a clean cloth. DO NOT USE ABRASIVE CLEANERS. Avoid excessive moisture and wipe dry.

### Plastic Cabinets

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Avoid excessive moisture. Do not use benzene, thinners or other petroleum based cleaners.

### Wood Cabinets

When dusting or polishing the cabinet, use a clean soft cloth and stroke straight with the grain. An occasional coat of furniture polish will help preserve the finish. Do not use benzene, thinners or other petroleum based cleaners. Do not place objects made of plastic or rubber directly on top of the cabinet. A chemical reaction could result causing permanent marring of the finish.

### Remote Control Transmitter

Do not use benzene, thinners or other petroleum based cleaners to clean the Remote Control Transmitter. To clean, wipe with a soft cloth slightly moistened with a mild detergent and then wipe dry with a soft clean cloth.



## Power Loss

Prolonged power interruption causes the following features to reset to their factory preset state.

FEATURE	FACTORY PRESET STATE	FEATURE	FACTORY PRESET STATE
POWER	OFF	SLEEP TIMER	OFF
VOLUME	APPROX. 1/3	TIMER	OFF
CHANNEL	CH 03	ANTENNA (TV or CABLE)	CABLE
AUDIO MENUS	NORMALIZED	PIP FEATURES	OFF
STEREO/SAP/MONO	STEREO	CLOCK	NOT SET
VIDEO MENUS	NORMALIZED		

# Troubleshooting Chart

Before you call for service, determine the symptoms and make a few simple checks shown below.

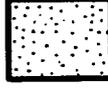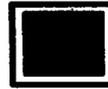Symptoms		Check
Picture	Sound	
 SNOWY PICTURE	 NOISY SOUND	<ul style="list-style-type: none"> <li>- ANTENNA LOCATION AND/OR CONNECTION</li> </ul>
 MULTIPLE IMAGE	 NORMAL SOUND	<ul style="list-style-type: none"> <li>- ANTENNA DIRECTION AND/OR LOCATION</li> <li>- ANTENNA LEAD-IN WIRE</li> </ul>
 INTERFERENCE	 NOISY SOUND	<ul style="list-style-type: none"> <li>- ELECTRICAL APPLIANCES, LIGHTS, CARS AND TRUCKS</li> <li>- DIATHERMY AND OTHER MEDICAL EQUIPMENT</li> </ul>
 NORMAL PICTURE	 NO SOUND	<ul style="list-style-type: none"> <li>- VOLUME CONTROL SETTING</li> <li>- MUTE CONTROL (IF APPLICABLE)</li> <li>- TRY ANOTHER CHANNEL</li> <li>- TV SPEAKERS (IF APPLICABLE) IN THE OFF MODE</li> </ul>
 NO VIDEO	 NOISY SOUND	<ul style="list-style-type: none"> <li>- TV OR CABLE TUNING MODE SET TO PROPER SETTING</li> <li>- ANTENNA INPUT CORRECT (IF APPLICABLE)</li> </ul>
 NO PICTURE	 NO SOUND	<ul style="list-style-type: none"> <li>- CHECK THAT AC POWER LINE IS PLUGGED INTO AC OUTLET</li> <li>- BRIGHTNESS &amp; AUDIO CONTROLS SET PROPERLY</li> <li>- TRY ANOTHER CHANNEL</li> </ul>
 NO COLOR	 NORMAL SOUND	<ul style="list-style-type: none"> <li>- COLOR CONTROL SETTINGS</li> <li>- TRY ANOTHER CHANNEL</li> </ul>
 BLUE PICTURE	 NO SOUND	<ul style="list-style-type: none"> <li>- RECEIVER IN VIDEO MODE WITH NO SIGNAL</li> </ul>
 BLACK BOX IN PICTURE	 SOUND	<ul style="list-style-type: none"> <li>- CC (CLOSED CAPTION) IN TEXT MODE</li> <li>- SELECT CAPTION OFF MODE TO ELIMINATE BLACK BOX</li> </ul>

Should this unit turn ON momentarily and then turn OFF, or fail to operate, unplug the AC cord and contact your Authorized Servicer for repairs.

Matsushita Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America  
One Panasonic Way  
Secaucus, New Jersey 07094

Matsushita Electric of Canada Limited  
5770 Ambler Drive  
Mississauga, Ontario L4W 2T3  
Canada

Panasonic Sales Company,  
Division of Matsushita Electric  
of Puerto Rico Inc. ("PSC")  
Ave. 65 de Infanteria, Km 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985  
Tel. (809) 705-4300  
FAX. (809) 768-2910