
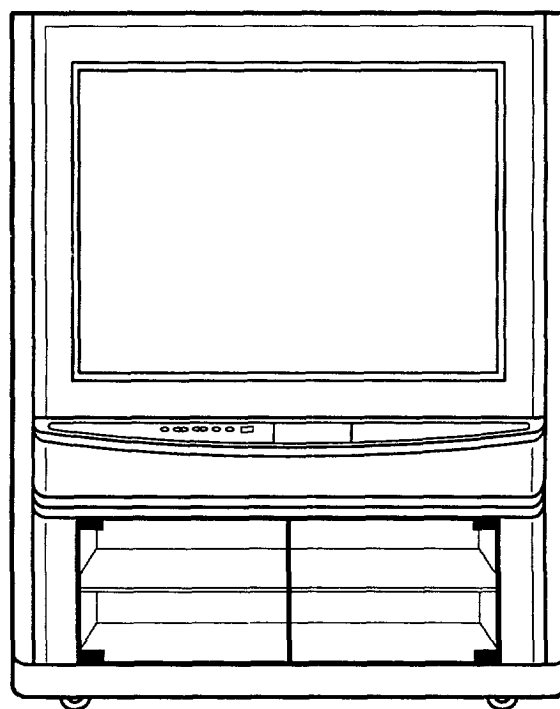



Color Television Operating Instructions

Panasonic®

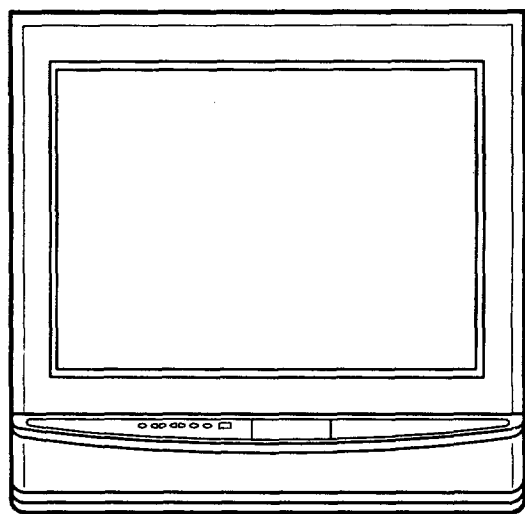

Read these instructions completely before operating this set.
Contents subject to change without notice or obligation.

Safety Instructions

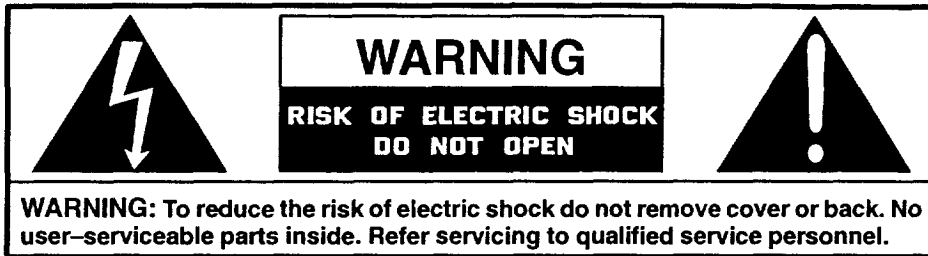

The lightning flash with arrow-head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.




The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

Note To CATV System Installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Safety Instructions For Television Receivers

1. Read and apply the operating instructions provided with your television receiver.
2. Read all of the instructions given here and retain them for later use.
3. Unplug this television receiver from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use attachments not recommended by the television receiver manufacturer as they may cause hazards.
5. Do not use this television receiver near water. For example: Avoid placing it near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
6. Do not place this television receiver on an unstable cart, stand or table. The television receiver may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the television receiver. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the television receiver and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the television receiver on a bed, sofa, rug or other similar surface. This television receiver should never be placed near or over a radiator or heat register. This television receiver should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
8. Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company. For television receivers designed to operate from battery power, refer to the operating instructions.
9. This television receiver is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
10. Do not allow anything to rest on the power cord. Do not locate this television receiver where the cord will be abused by persons walking on it.
11. Follow all warnings and instructions marked on the television receiver.
12. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
13. Never push objects of any kind into this television receiver through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television receiver.

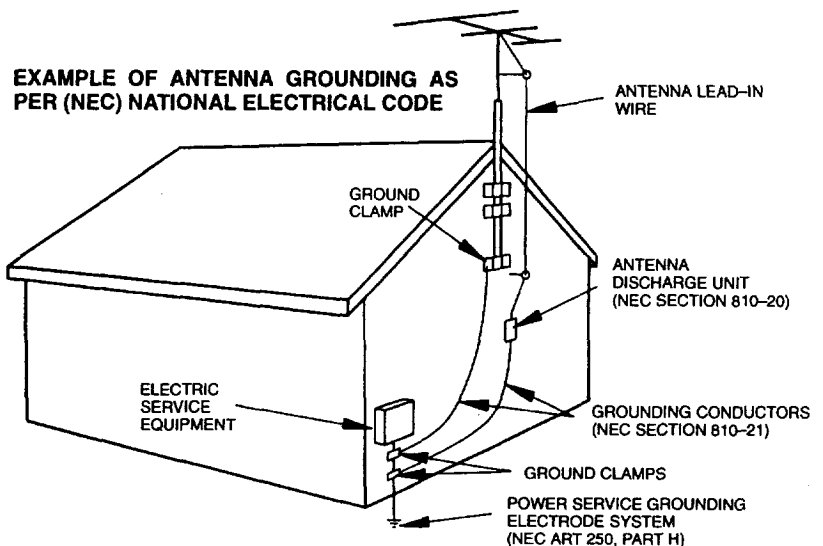

14. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810 of the National Electrical Code and in Canada Part 1 of the Canadian Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.
 15. For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.
 16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
 17. Unplug this television receiver from the wall outlet, and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the television receiver.
 - c. If the television receiver has been exposed to rain or water.
 - d. If the television receiver does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the television receiver to normal operation.
 - e. If the television receiver has been dropped or the cabinet has been damaged.
 - f. When the television receiver exhibits a distinct change in performance – this indicates a need for service.
 18. Do not attempt to service this television receiver yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
 19. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
 20. Upon completion of any service or repairs to this television receiver, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.
 21. **WARNING: To prevent fire or shock hazard, do not expose this appliance to rain or moisture.**
 22. **CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**
- NOTE:** This equipment is designed to operate in the U.S.A., Canada and other countries where the broadcasting system and AC house current is exactly the same as in the U.S.A. and Canada.

Important Information Regarding Use of Video Games, Computers, Teletext or Other Fixed Image Displays.

The extended use of fixed image program material can cause a permanent "shadow image" on the picture tube. This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible picture tube deterioration can be limited by observing the following steps:

- A. Reduce the brightness/contrast setting to a minimum viewing level.
- B. Do not display the fixed image for extended periods of time.
- C. Turn the power off when not in actual use.

NOTE: The marking or retained image on the picture tube resulting from fixed image use is not an operating defect and as such is not covered by Warranty. This product is not designed to display fixed image patterns for extended periods of time.

Specifications

Power Source:	120V 60Hz, AC
Channel Capability:	181 channels (See chart) VHF 2~13, UHF 14~69, Cable 125 channels
Video Input Jacks (2):	1V p-p, 75 ohm, phono jack type
Audio Input Jacks (2):	High impedance – 10K ohm , 500mV rms
To Audio AMP Jacks:	0~4.0V rms 10K ohm
S-VHS Input Jack:	S-Video (Y-C) Connector
Stereo Sound	
Surround Sound	
Closed Caption Display	
Picture In Picture:	One Tuner

Specifications are subject to change without notice or obligation.

Channel Capability Chart

BAND	USA/CAN
VHF	12
UHF	56
CABLE (Mid-Band)	15
CABLE (Super Band)	14
CABLE (Hyper Band)	28
CABLE (Ultra Band)	56
TOTAL CHANNELS	181

Introduction

Congratulations on Your New Purchase

Your new video component features an all solid state chassis which is designed to give you many years of enjoyment. It was thoroughly tested and adjusted at the factory for best performance.

In order for you to take full advantage of your new video component, please read and follow the installation and operating instructions supplied with this product.

Customer's Record

The model and serial number of this product may be found on its back cover. You should note the model and serial number in the space provided and retain this book as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: _____ Serial Number: _____

Table of Contents

Safety Instructions	2	Sharpness	18
Specifications	3	Auto Color	19
Introduction	4	Video NR (Noise Reduction)	19
Installation	5	Audio Adjustments	20
Receiver Location	5	Audio Norm	20
Optional External Equipment Connections	5	Bass, Treble & Balance Adjustment	20
AC Power Supply Cord	5	Surround	20
Battery Installation	5	[TV] Speaker	21
Antenna/Cable Connections	6	Audio Mode Selection (Stereo/SAP/Mono)	21
Picture in Picture External Video and		PIP Features	22
Antenna Connections	7	PIP Frame (Off/On)	22
Location of Controls (Receiver)	8	PIP Frame Size (Large/Small)	22
Quick Reference Control Operation (Receiver) ...	9	Input Select	23
Location of Controls (Remote)	10	Main (Picture) Input Selection	23
Quick Reference Control Operation (Remote)	11	PIP (Picture in Picture) Input Selection	23
Control Operation	12	Timer Features	24
Power Button	12	Sleep Timer	24
Volume (Vol) Buttons	12	Program Timer	24
Mute Button	12	Lockout Features	26
Channel Change Features	12	Lockout Game, Channel or All	26
Channel (Ch) Buttons	12	Favorite Channel Feature	28
Keyboard "0 through 9" Buttons	12	Channel Scan	28
VCR Function Buttons	12	Favorite Channel Select	29
TV/Video Button	13	Channel Caption (Station Identifier)	30
Recall Button	13	Closed Caption	31
R-Tune (Rapid Tune) Button	13	Closed Caption/Field Mode	31
Multi Button	13	CC (Closed Caption) On Mute	32
Cable Power Button	14	3 - Language Menu System	
PIP (Picture in Picture) Button	14	(English/Spanish/French)	33
PIP Swap Button	14	Set-Up Features	34
PIP Size Button	14	Set Time (Clock)	34
PIP Move Button	15	Set Day	34
PIP Freeze Button	15	Antenna Tuning Mode	35
Main Menu (Icons)	16	Auto Program	36
Language Menu (English/Spanish/French)	16	Manual Program	37
AI (Artificial Intelligence)	17	Programming The Universal Remote Control	38
AI Sound	17	Infra-Red Remote Control Codes	39
Picture Adjustments	18	Optional Equipment Connection & Operation ...	40
Picture Norm	18	Stereo Connection (To Audio AMP)	40
Color	18	Video/Audio Connection	40
Tint	18	S-Video Connection	41
Brightness	18	Care & Cleaning	42
Picture	18	Troubleshooting Chart	43
		Power Loss	43

Installation

Receiver Location

Locate for comfortable viewing. Avoid placing where sunlight or other bright light (including reflections) will fall on the screen.

Use of some types of fluorescent lighting can reduce remote control transmitter range.

Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat or moisture.

To insure optimum color purity do not position magnetic equipment (motors, fan, other speakers, etc.) nearby.


Optional External Equipment Connections

The Video/Audio connections between components can be made with shielded video and audio cables. For best performance, video cables should utilize 75 ohm coaxial shielded wire. Cables are available from your dealer or electronic supply house.

Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.

AC Power Supply Cord

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT. DO NOT USE THIS (POLARIZED) PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

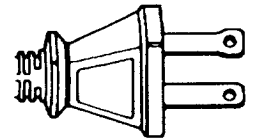

Polarized Plug

Remote Control Battery Installation & Replacement

Battery Installation

Batteries: Use two "AA" batteries.


1. Turn the Transmitter face down. To remove bottom cover, press down on marking and slide cover off in the direction indicated.
2. Install the batteries as shown in the battery compartment. (Polarity (+) or (-) must be correct.)
3. Replace the cover and slide in reverse until the lock snaps.

Precaution on Battery Use


Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control Transmitter.

Observe the Following Precautions:

1. Batteries must be replaced as a pair.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (Example: "Zinc Carbon" with "Alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when Remote Control reacts sporadically or stops operating the Receiver.

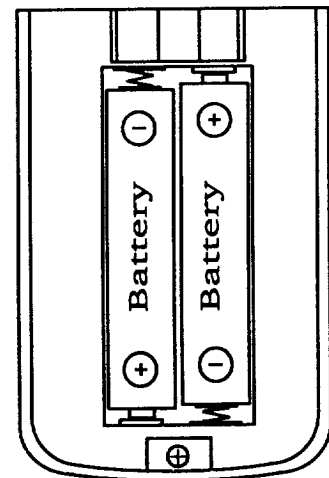


Press Down Here And Slide Cover Back

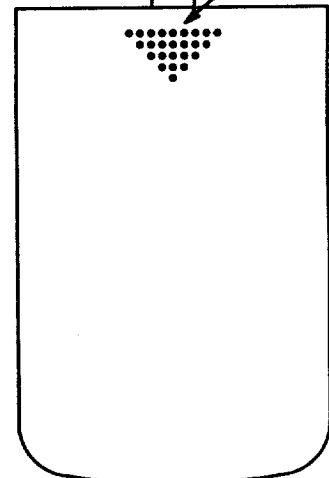


Antenna/Cable Connections


Antenna Connection – For proper reception of VHF/UHF channels an external antenna is required. For best reception an outdoor antenna is recommended. Antenna Mode must be set to TV. (Refer to Antenna Mode section.)

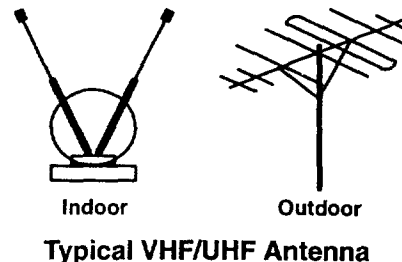

Incoming Cable From Home Antenna (75 Ohm)

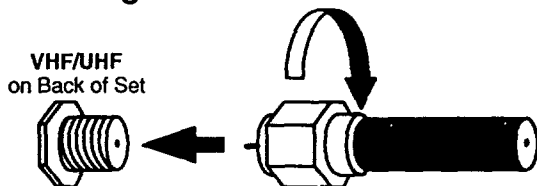


Incoming Cable From Home Antenna (300 Ohm)

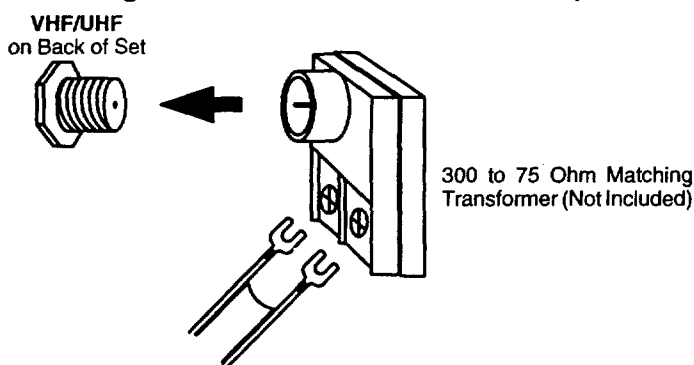

Cable Connection – For reception of cable channels (01~125) connect the cable supplied by your local cable company. Antenna Mode must be set to CABLE. (Refer to Antenna Mode section.)

Incoming 75 Ohm Cable (From Cable Company)

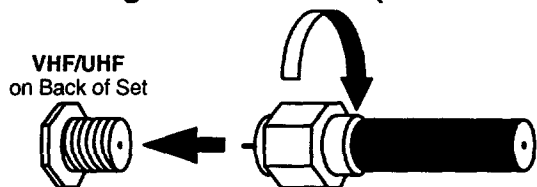


NOTE: Certain cable systems offset some channels to reduce interference or have Premium (scrambled) channels. A cable converter box is required for proper reception. Check with your local Cable company for its compatibility requirements.

Other Video Equipment

VCRs, Video Disc Players, Computers, TV games and Teletext equipment can also be connected to the antenna input connection.


Location of Controls (Receiver)

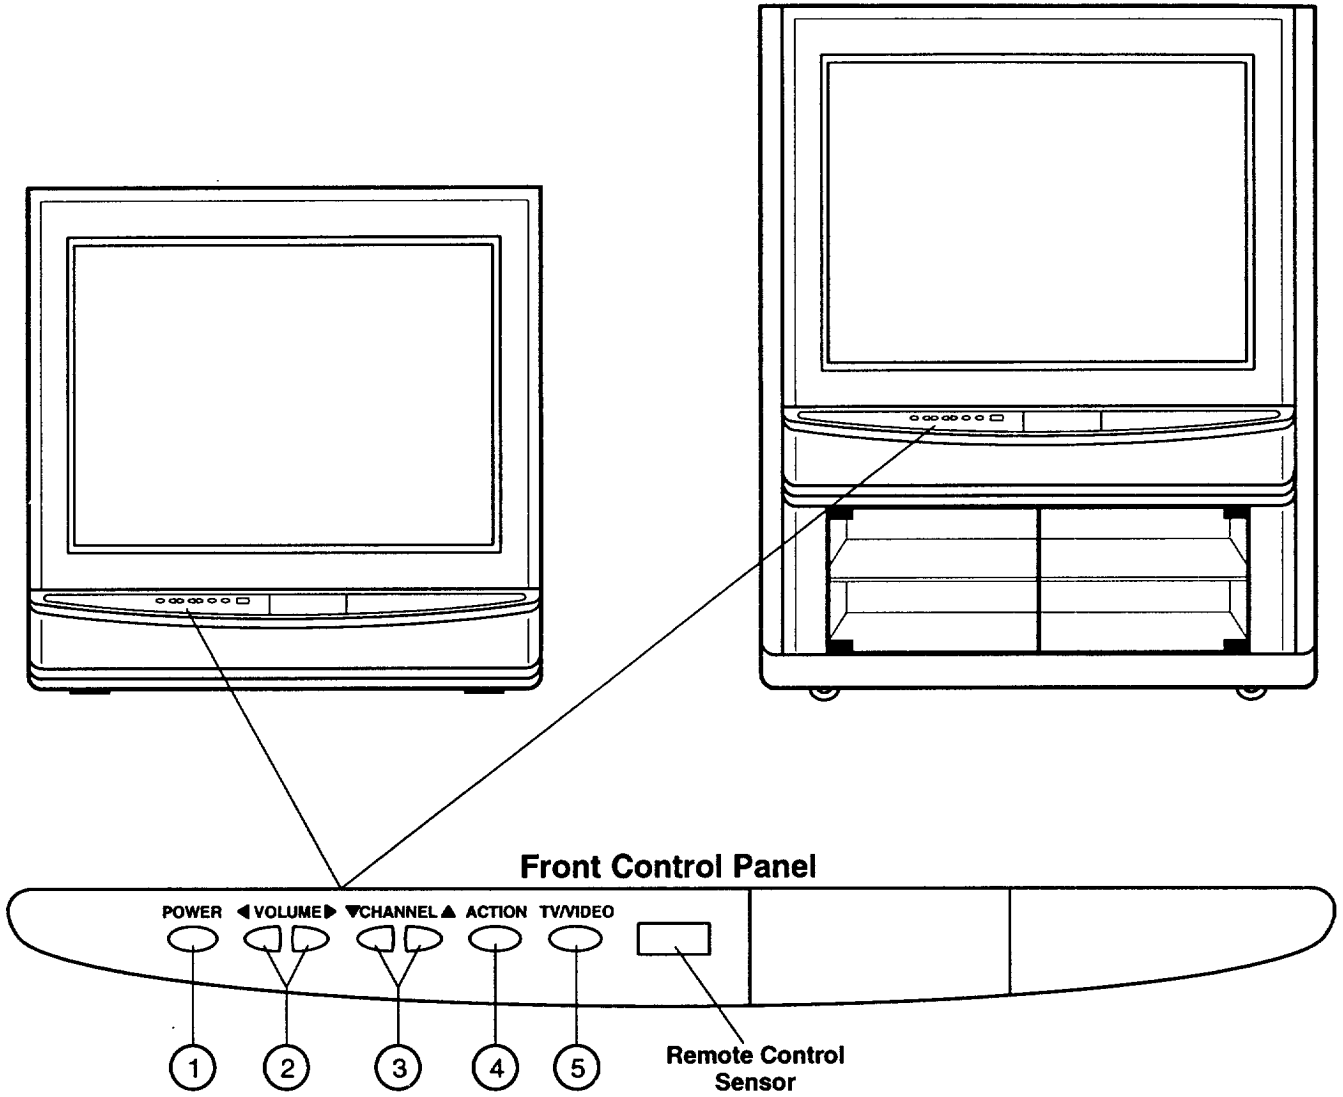

Quick Reference Control Operation (Receiver)

- ① **Power Button** – Press to turn ON or OFF. (pg.12)
- ② **Volume Buttons** – Press to adjust Sound Level. Press to adjust Audio Menus, Video Menus and select operating features when menus are displayed. (pg.12)
- ③ **Channel Buttons** – Press to select programmed channels. Press to highlight desired features when menus are displayed. (pg.12)
- ④ **Action Button** – Press to display Main Menu and access or exit On Screen feature and Adjustment Menus. (pg.16)
- ⑤ **TV/Video Button** – Press to select TV or one of two (2) Video Inputs, for the Main Picture or the PIP frame (when the PIP frame is displayed). (pg.13)

Location of Controls (Remote Control)

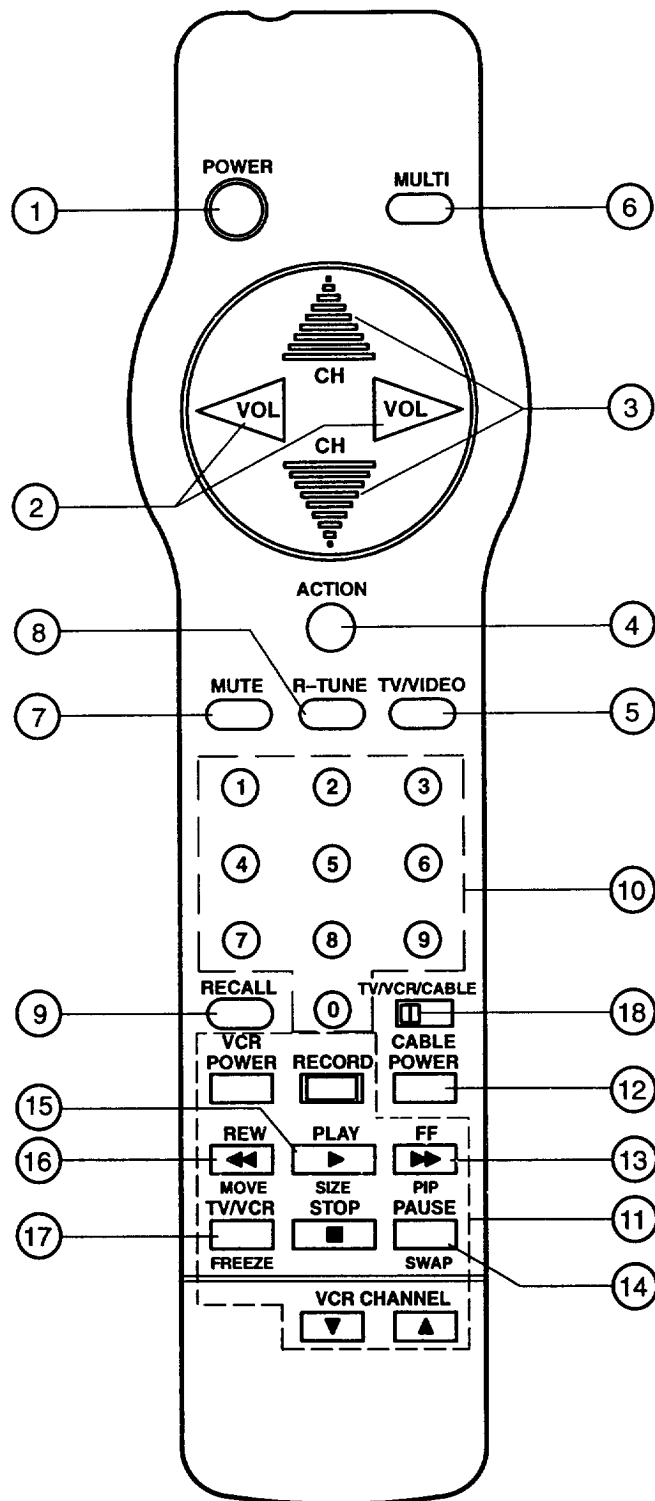

Quick Reference Control Operation (Remote Control)


- ① **Power Button** – Press to turn ON or OFF. (pg.12)
- ② **Volume Buttons** – Press to adjust Sound Level. Press to adjust Audio Menus, Video Menus and select operating features when menus are displayed. (pg.12)
- ③ **Channel Buttons** – Press to select programmed channels. Press to highlight desired features when menus are displayed. Also used to select Cable Converter box channels after programming Remote Control Infra-red codes (the TV/VCR/CABLE switch must be set in CABLE position). (pg.12)
- ④ **Action Button** – Press to display Main Menu and access or exit On Screen feature and Adjustment Menus. (pg.16)
- ⑤ **TV/Video Button** – Press to select TV or one of two (2) Video Inputs, for the Main Picture or the PIP frame (when the PIP frame is displayed). (pg.13)
- ⑥ **Multi Button** – Programmable to operate up to six Remote Function buttons. (pg.13)
- ⑦ **Mute Button** – Press to mute sound. A second press returns sound. (pg.12)
- ⑧ **R-Tune (Rapid Tune) Button** – Press to switch between two channels. (pg.13)
- ⑨ **Recall Button** – Press to display Time, status of Sleep Timer, Channel, Video Mode, Channel Caption (Station Identifier) and Audio Mode. (pg.13)
- ⑩ **Keyboard “0 through 9” Buttons** – Press desired channel number to access any channel. (pg.12)
- ⑪ **VCR Function Buttons** – Programmable to operate many brands of VCR’s. (pg.12)
- ⑫ **Cable Power Button** – Programmable to operate selected CATV converter boxes. (pg.14)
- ⑬ **PIP (Picture In Picture) Button** – Press to display the PIP frame, press again to remove PIP frame. (pg.14)
- ⑭ **PIP Swap Button** – Press to interchange PIP frame with Main Picture (when the PIP frame is displayed). (pg.14)
- ⑮ **PIP Size Button** – Press to select size of PIP frame (when the PIP frame is displayed). (pg.14)
- ⑯ **PIP Move Button** – Press to position PIP frame to any corner of the Main Picture (when PIP frame is displayed). (pg.15)
- ⑰ **PIP Freeze Button** – Press to stop action in the Main Picture or PIP frame (when the PIP frame is displayed). (pg.15)
- ⑱ **TV/VCR/CABLE Switch** – This switch is used to select the proper mode when programming Remote Control Infra red codes or operating the TV or external equipment (VCR or Cable TV Converter box). (pg.38)

Power Button — Press the POWER button to turn ON. Press again to turn OFF.



Volume Buttons — Press the VOLUME (VOL) LEFT or RIGHT button for desired listening level (when On Screen menus are not displayed).

Located On Remote Control

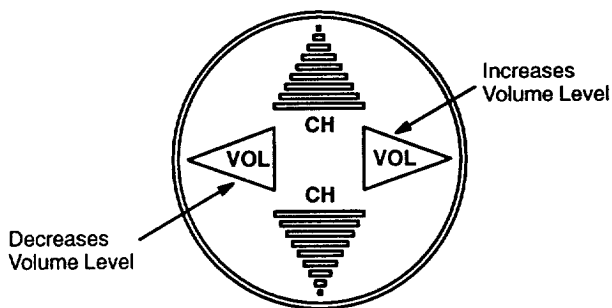

Mute Button — Press the MUTE button to quickly reduce sound level (Mute will appear on screen). Press again to restore sound.




Channel Change – (Two options)

Option 1.

Press the CHANNEL (CH) UP or DOWN button to sequentially scan through programmed channels (when On Screen menus are not displayed).


NOTE: TV/VCR/CABLE switch (located on Remote) must be set in TV position.

Located On Remote Control

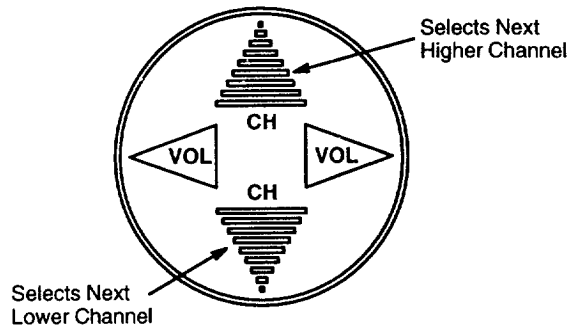


Option 2.

Press two digits on keyboard (Example press 0, then 5 for channel 05). For channels over 99, press three digits on keyboard.

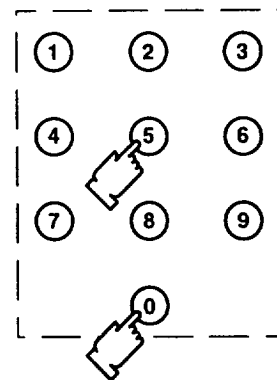

VCR Function Buttons — The VCR FUNCTION buttons have been designed to operate numerous brands of VCRs. The infra-red code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.)

NOTE: The TV/VCR/CABLE switch (located on Remote) must be in the VCR position (Center).

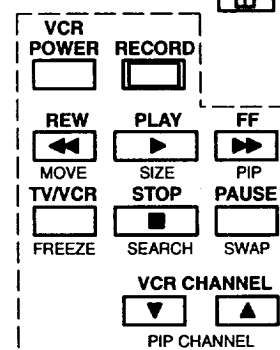

Helpful Hints:


- Helpful information will display On Screen momentarily when Receiver is first turned on and when the channel is changed.
- When using keyboard entry for channels 10, 11 and 12 in the CABLE mode there is a slight delay before channel change because of the capability of tuning cable channels 100 to 125.

NOTE: If "SPEAKER OFF" is displayed On Screen after pressing the VOLUME button, refer to Audio menu to turn Speakers "ON".


TV/Video Button – Press the TV/VIDEO button to select desired input for Main Picture or PIP frame (when the PIP frame is displayed).



Signal connected to:

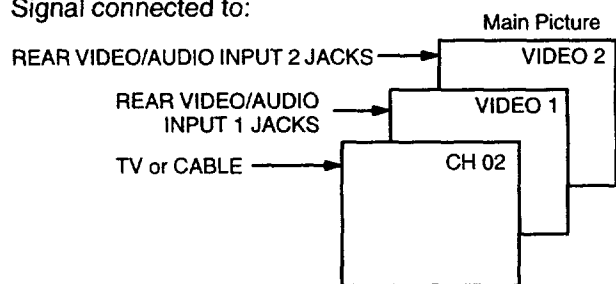


Signal connected to:

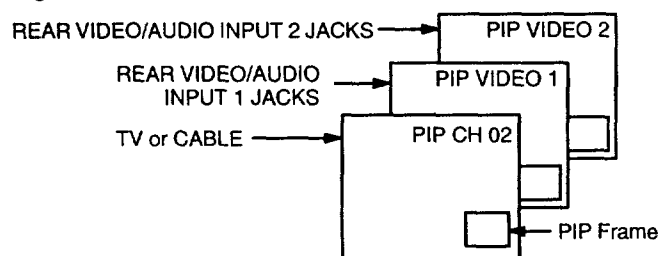


Recall Button – Press the RECALL button to review:

- Audio Mode status
- CH number or Video Input selected
- Sleep Timer status
- Clock time
- Channel Caption (Station Identifier)

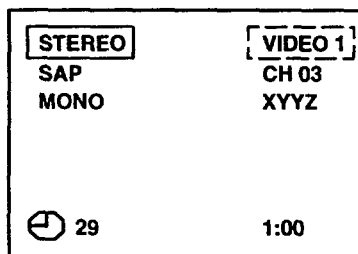

R-Tune (Rapid Tune) – Press the R-TUNE (RAPID TUNE) button to instantly switch between the last two channels selected (without any On Screen display being activated).

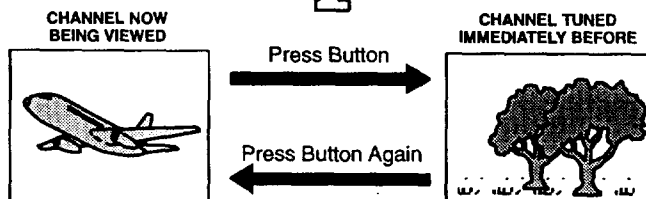


Multi Button

The MULTI button can be programmed to operate up to 6 Remote function buttons at the same time.

For Example: TV Power/On, VCR Power/On (selected brands) can be operated at the same time with one press of the MULTI button.

PROCEDURE

1. First program the Remote for the selected VCR Infra-red access code. Confirm that the Remote Control is compatible with the equipment.
2. Face the Remote Control transmitter away from all equipment remote sensors.
3. Press the Remote TV POWER button and the MULTI button simultaneously. (All previous commands are erased.)

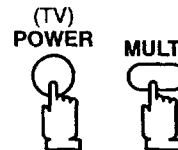


PRESS SIMULTANEOUSLY

4. Press a maximum of 6 Function buttons on the Remote. Each button you press is equal to one function. If six Remote button functions are entered, all will register in the MULTI button memory in the sequence entered. When less than six Remote button functions are entered, press the MULTI button to end the program mode. (Waiting more than 30 seconds without pressing another button will also end the program mode.)


The following is an example of Remote functions that can be programmed into the MULTI button.

- TV Power – For turning TV ON and OFF.
- VCR Power – For turning VCR ON and OFF (selected brands after programming its Infra-red access code, if necessary).

Both can be turned ON or OFF with one press of the MULTI button.

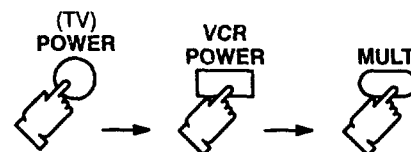

To delete entered functions – Press the Remote TV POWER and MULTI buttons simultaneously. Now you can enter from one to six different Remote functions.

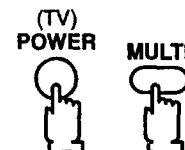

PRESS SIMULTANEOUSLY

NOTE:


You can also program the MULTI button to perform most individual Remote Control button functions. Buttons which continuously perform a function as long as pressed (Volume Up/Down, Channel Up/Down, etc.) cannot be programmed. Only those buttons which perform a function when initially pressed (Power On/Off, Mute, Direct Channel Entry, etc.) can be programmed.

Cable Power Button — The CABLE Power button on the Remote Control has been designed to operate selected brands of Cable Converter Boxes. The proper Cable Converter Box infra-red code must be obtained prior to use. (Please refer to Programming the Universal Remote for programming instructions.) The TV/VCR/CABLE switch should be in the cable position.

NOTE: Use the Channel UP and DOWN buttons on the Remote for selecting Cable Converter Box Channels.



Located On Remote Control

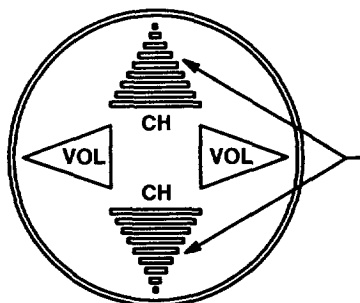

Use to select Cable Box Channels after programming Infra-red Code.

PIP (Picture in Picture) Button — This feature allows monitoring one channel while watching another when a second video source with a tuner is connected (such as a VCR) to the television.

- The TV/VCR/CABLE Switch should be in the TV position (LEFT) before operating PIP buttons.
- S-Video connection will also operate the PIP feature (refer to OPTIONAL S-VIDEO VHS CONNECTION section).
- When the Main Picture is in Video mode with no signal, the PIP will not operate properly.




PIP Operation

1. Turn VCR ON and select a desired channel.
2. Press the PIP button (television must be ON). The PIP frame will appear at the position it was last displayed. The Main Picture Video Source and PIP Video Source will display on screen momentarily. Audio will be that of Main Picture.
3. Press the PIP button again to cancel PICTURE IN PICTURE feature (if desired).


NOTE: For PIP Video source connection, refer to PIP External Video and Antenna Connections section.

PIP Swap Button — Press the SWAP button (when the PIP frame is displayed) to interchange what is being viewed on the Main Picture with that of the PIP frame.

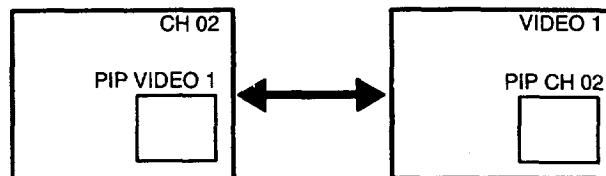


- Audio will be that of the Main Picture.

PIP Size Button — Press the SIZE button (when the PIP frame is displayed) to choose either the large or small PIP frame.

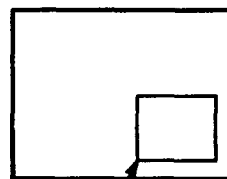

Large PIP Frame

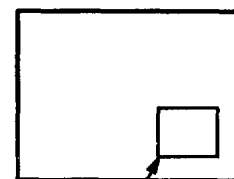


Small PIP Frame


PIP Move Button — The PIP frame may be located at any corner of the Main Picture by pressing the MOVE button.



NOTE: Each time MOVE button is pressed (when the PIP frame is displayed), the PIP frame will move (counterclockwise) as illustrated.

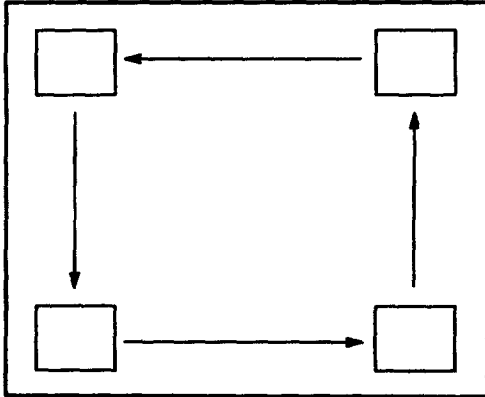


PIP Freeze Button — Press the FREEZE button to stop action in the Main Picture or PIP frame.

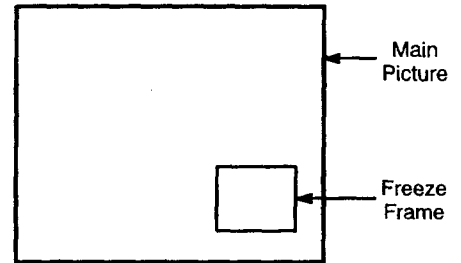


- Pressing the FREEZE button when the PIP frame is not displayed will stop action in the Main Picture and put it into a PIP frame.
- Pressing the FREEZE button when PIP frame is displayed will stop action in the PIP frame, press the FREEZE button again to continue action.
- Press the PIP button to delete PIP frame.

Main Menu (Icons)

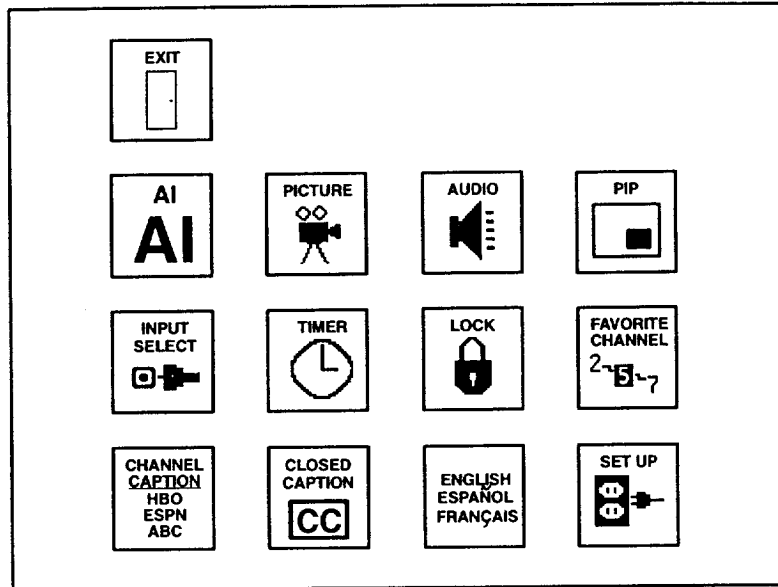

Displays and Exits Menus


Located On Remote Control

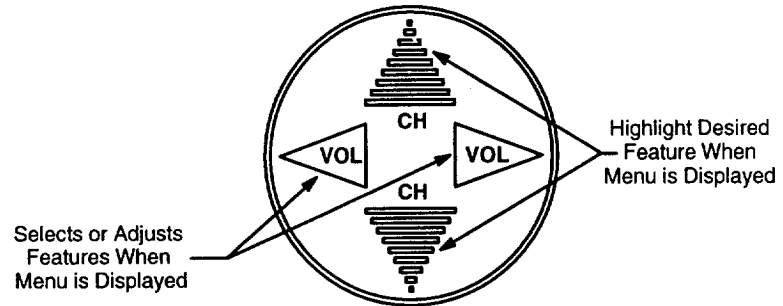

1. Press the ACTION button to display the Main Menu with Icons.
2. Press the CH UP or DOWN and the VOL LEFT or RIGHT buttons to select the desired Icon when the Main Menu is displayed (selected Icon will be indicated in Red).
3. Press the VOL buttons for left and right movement and the CH buttons for up or down movement.
4. To exit the Main Menu first select the EXIT Icon, then press the ACTION button.

The Language Menu is factory set to ENGLISH. Follow these instructions to change the Language Menu to Spanish or French and back to English.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Language ENGLISH/ESPAÑOL (Spanish)/FRANÇAIS (French) Icon.
3. Press the ACTION button to display the Language select Menu.

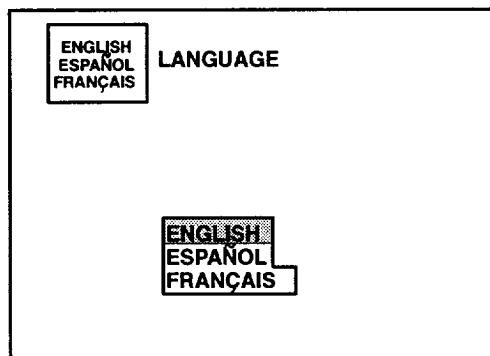

4. Press the CH UP or DOWN button to select ENGLISH, SPANISH or FRENCH from the Language Menu.
5. Press the ACTION button twice to EXIT.

AI (Artificial Intelligence)


- AI Sound

ACTION




Displays and Exits Menu

Located On Remote Control

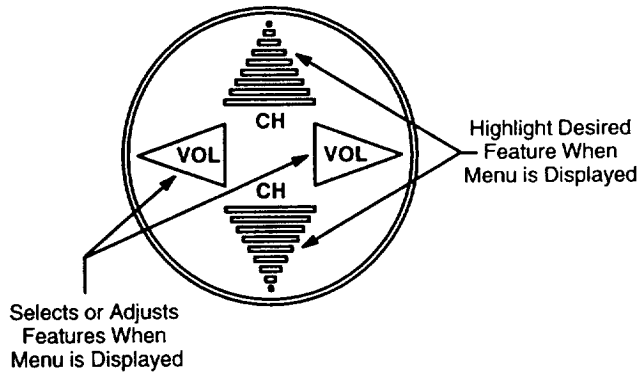

AI Sound — This feature is used to enhance sound quality through automatic adjustment of Bass and Treble during Speech or Music segments of the audio broadcast. It also regulates the volume between program and commercial audio to maintain a constant sound output level.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the AI Icon.
3. Press the ACTION button to display the AI (Artificial Intelligence) Selection Menu.

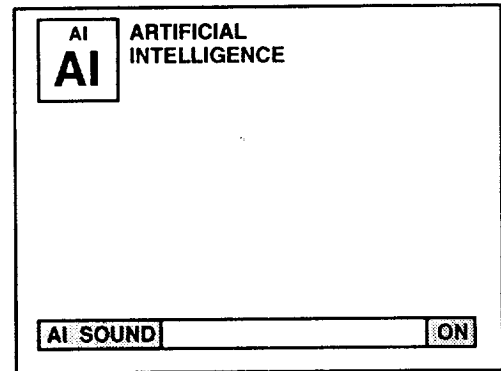

4. Press the CH UP or DOWN button to highlight "AI SOUND".
5. Press the VOL LEFT or RIGHT button to select AI SOUND ON or OFF.
6. Press the ACTION button twice to exit.

Picture Adjustments


- Picture Norm
- Color
- Tint
- Brightness
- Picture
- Sharpness
- Auto Color
- Video NR (Noise Reduction)

ACTION



Displays and Exits Menus

Located On Remote Control

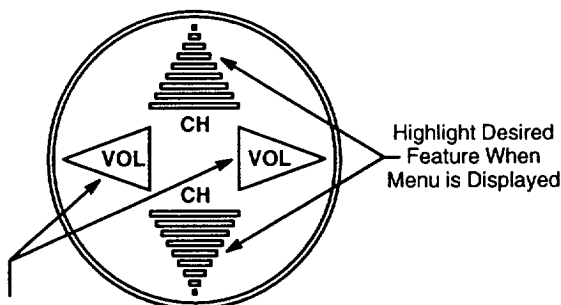


Selects or Adjusts Features When Menu is Displayed

Highlight Desired Feature When Menu is Displayed

Color, Tint, Brightness, Picture & Sharpness Adjustments

Before setting the following Picture Adjustments select the desired mode of AI Picture (ON or OFF). Picture Adjustments may require re-adjustment when changing between AI Picture ON or OFF.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon.
3. Press the ACTION button to display the Picture Video Menu.

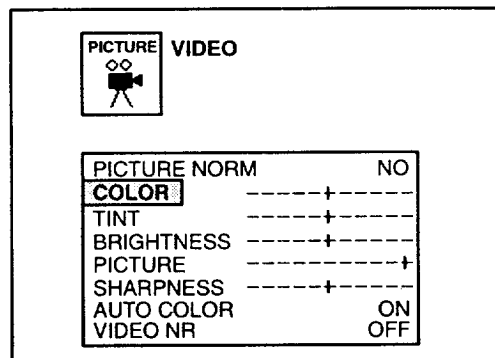


4. Press the CH UP or DOWN button to select the desired Picture Adjustment (Color, Tint, Brightness, Picture or Sharpness).
5. Press the VOL LEFT or RIGHT button to adjust your selection. The Selected Picture Adjustment will be displayed.
6. Repeat steps 4 and 5 for the remaining Picture Adjustments.
7. Press the ACTION button twice to exit.

NOTE: Pressing the ACTION button again will return you to the Picture Icon.

Picture Norm – This feature is used to reset Color, Tint, Brightness, Picture and Sharpness adjustments back to a factory preset level.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon.
3. Press the ACTION button to display the Picture Video Menu.

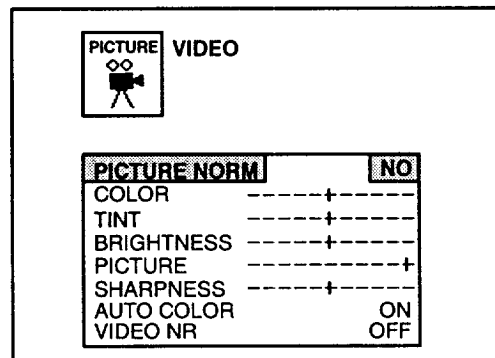

4. Press the CH UP or DOWN button to highlight "PICTURE NORM".
5. Press the VOL LEFT or RIGHT button to select "YES" to Normalize Color, Tint, Brightness, Picture and Sharpness.
6. Press the ACTION button twice to exit.

Helpful Hints:

COLOR – adjust for desired color intensity.

TINT – adjust for natural flesh tones.

BRIGHTNESS – adjust so dark areas of picture just become black for a crisp detail.

PICTURE – adjust so the white areas of the picture are to your liking.


SHARPNESS – adjust for best clarity of outline detail.

Auto Color and Video NR




Displays and Exits Menu

Located On Remote Control

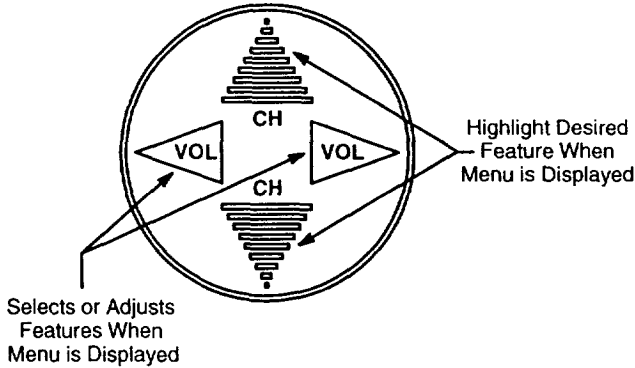

Auto Color – This feature automatically optimizes color adjustment to compensate for signal variations.


1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon.
3. Press the ACTION button to display the Picture Adjustment Menu.

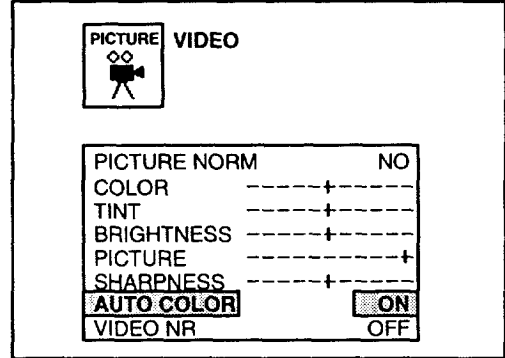

4. Press the CH UP or DOWN button to highlight "AUTO COLOR".
5. Press the VOL LEFT or RIGHT button to turn Auto Color feature ON or OFF.
6. Press the ACTION button twice to exit the Picture Adjustment Menu.

Video NR (Noise Reduction) – This feature reduces video noise (snow in picture) due to weak signal.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Picture Icon.
3. Press the ACTION button to display the Picture Adjustment Menu.

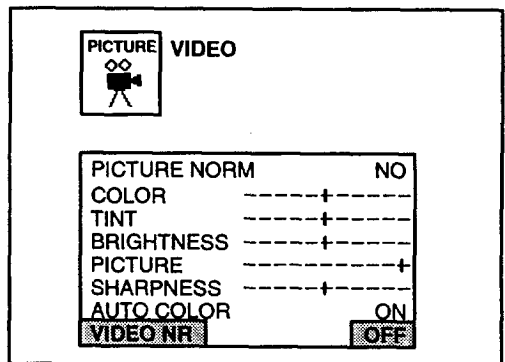

4. Press the CH UP or DOWN button to highlight "VIDEO NR".
5. Press the VOL LEFT or RIGHT button to turn Video NR feature ON or OFF.
6. Press the ACTION button twice to exit the Picture Adjustment Menu.

Audio Adjustment


- Audio Norm
- Bass
- Treble
- Balance
- Surround
- [TV] Speaker
- Audio Mode

ACTION



Displays and Exits Menus

Located On Remote Control

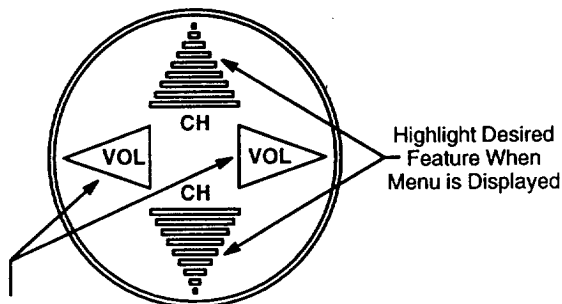


Selects or Adjusts Features When Menu is Displayed

Highlight Desired Feature When Menu is Displayed

Bass, Treble & Balance Adjustment

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

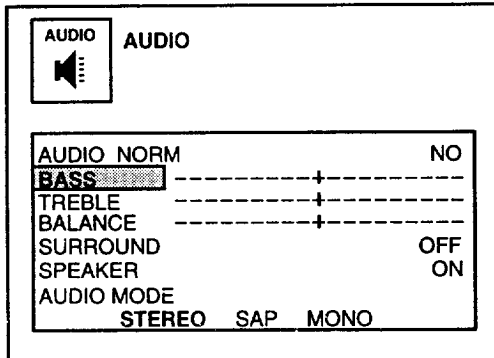

4. Press the CH UP or DOWN button to highlight BASS, TREBLE or BALANCE.
5. Press the VOL LEFT or RIGHT button to adjust for desired audio response.
6. Repeat steps 4 and 5 for remaining Audio functions.
7. Press the ACTION button twice to exit.

NOTE: Pressing the ACTION button again will return you back to the Audio Icon.

Helpful Hints:


BASS – To increase or decrease the Bass response.
TREBLE – To increase or decrease the Treble response.

BALANCE – To emphasize the Right and Left Speaker's volume.

While the AI (Artificial Intelligence) Sound is "ON" the Bass and Treble can not be adjusted.

Audio Norm – This feature is used to reset BASS, TREBLE and BALANCE back to a factory preset level.


1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

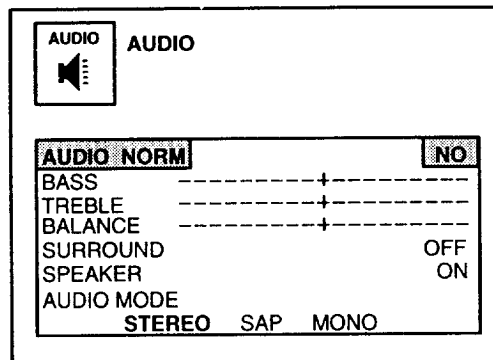

4. Press the CH UP or DOWN button to highlight "AUDIO NORM".
5. Press the VOL LEFT or RIGHT button to select "YES" to Normalize Bass, Treble and Balance.
6. Press the ACTION button twice to exit.

Surround – Use the Surround Feature to enhance audio response when listening to Stereo broadcasts.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

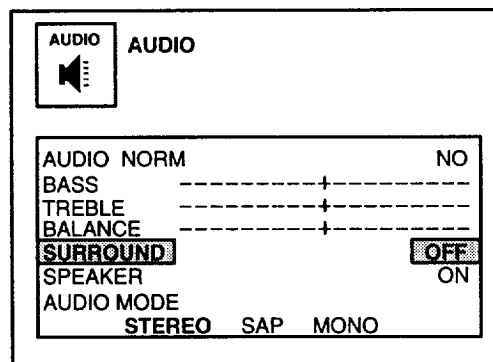

4. Press the CH UP or DOWN button to highlight "SURROUND".
5. Press the VOL LEFT or RIGHT button to select SURROUND OFF or ON.
6. Press the ACTION button twice to exit.


Speaker (Off/On) and Audio Mode Selection

ACTION




Displays and Exits Menus

Located On Remote Control

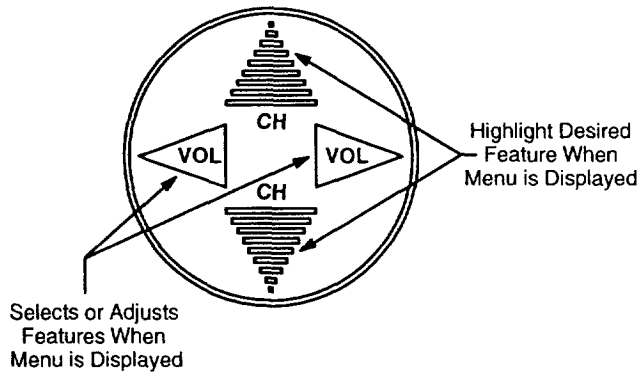

[TV] Speaker – This feature is used to turn the internal speakers “ON” or “OFF”, when the Receiver is connected to an External Audio Amplifier.

1. Press the ACTION button to display the Main Menu.
2. Press the CH DOWN and VOL RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

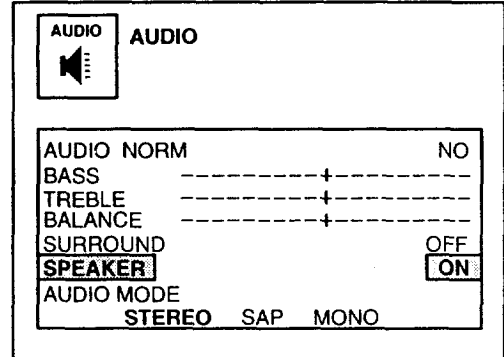


4. Press the CH UP or DOWN button to highlight “SPEAKER”.
5. Press the VOL LEFT or RIGHT button to select TV Speakers ON or OFF.
6. Press the ACTION button twice to exit.

Audio Mode Stereo/SAP/Mono

When Audio is broadcast in Stereo or SAP an On Screen Display will appear on initial “Turn On” and “Channel Change”. The available choices will be indicated in red.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Audio Icon.
3. Press the ACTION button to display the Audio Adjustment Menu.

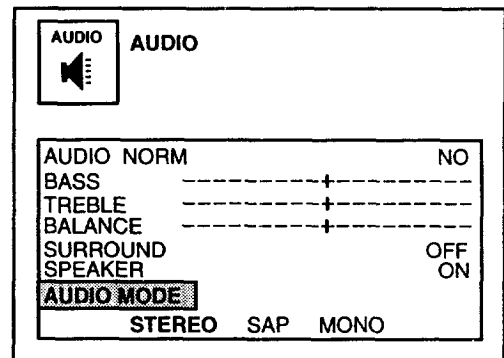

4. Press the CH UP or DOWN button to highlight “AUDIO MODE”.
5. Press the VOL LEFT or RIGHT button to select Stereo, SAP (Second Audio Programming) or Mono. The selected mode will be highlighted.
6. Press the ACTION button twice to exit.

Helpful Hints:

STEREO – Two channel Audio reception.
 SAP – Second Audio Programming (typically used for bilingual audio).
 MONO – Use when stereo signal is weak.

PIP Features


- PIP OFF/ON
- PIP Size (When the PIP frame is Displayed)

ACTION



Displays and Exits Menus


Located On Remote Control

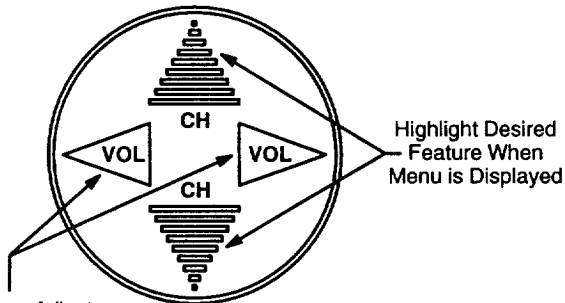

Selects or Adjusts Features When Menu is Displayed

PIP (Off/On)



1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the PIP icon.
3. Press the ACTION button to display the PIP Selection Menu.

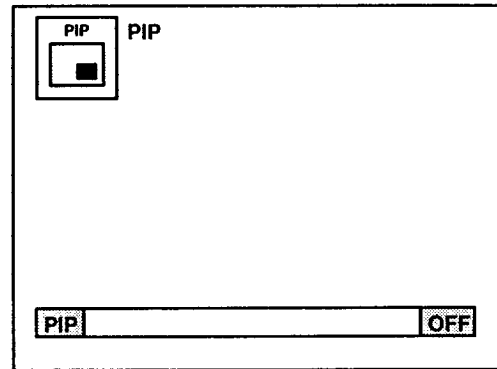

4. Press the CH UP or DOWN button to highlight "PIP".
5. Press the VOL LEFT or RIGHT button to select PIP OFF or ON.

PIP Size (Large/Small)

1. Press the PIP button to display the PIP frame.
2. Press the ACTION button to display the Main Menu.
3. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the PIP icon.
4. Press the ACTION button to display the PIP Selection Menu.
5. Press the CH UP or DOWN button to highlight "SIZE" (when the PIP frame is displayed).
6. Press the VOL LEFT or RIGHT button to select PIP frame LARGE or SMALL.
7. Press the ACTION button twice to exit.

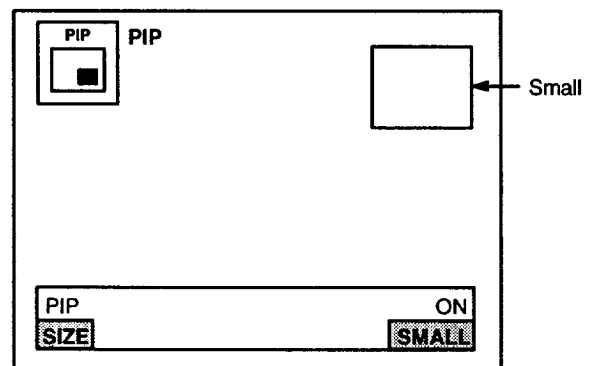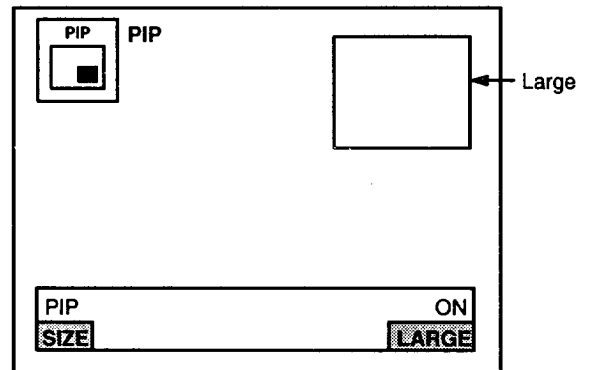

Input Select


- Main Picture Input Selection
- PIP (Picture in Picture) Input Selection (When PIP frame is displayed)

ACTION



Displays and Exits Menus

Located On Remote Control

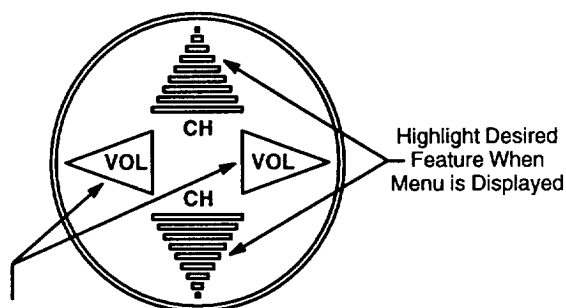


Selects or Adjusts Features When Menu is Displayed

Main (Picture) Input Selection

This feature is used to select TV Mode Operation or one of two Video Inputs (used with optional accessory Video equipment).

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Input Select Icon.
3. Press the ACTION button to display the Input Select Menu.

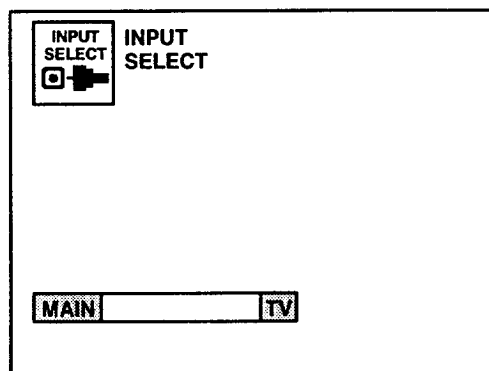


4. Press the VOL LEFT or RIGHT button to select TV, VIDEO 1 or VIDEO 2 for Main Picture Input.
5. Press the ACTION button twice to exit.

PIP (Picture in Picture) Input Selection

This feature is used to select TV Mode Operation or one of two Video Inputs for the PIP (Picture in Picture) frame. When the PIP frame is displayed.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Input Select Icon.
3. Press the ACTION button to display the Input Select Menu.

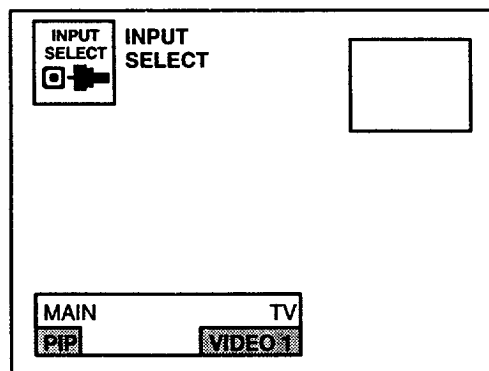

4. Press the CH UP or DOWN button to highlight "PIP".
5. Press the VOL LEFT or RIGHT button to select TV, VIDEO 1 or VIDEO 2 for the PIP frame Input.
6. Press the ACTION button twice to exit.


Timer Feature

- Sleep
- (Dual Program) Timer



Displays and Exits Menus


Located On Remote Control

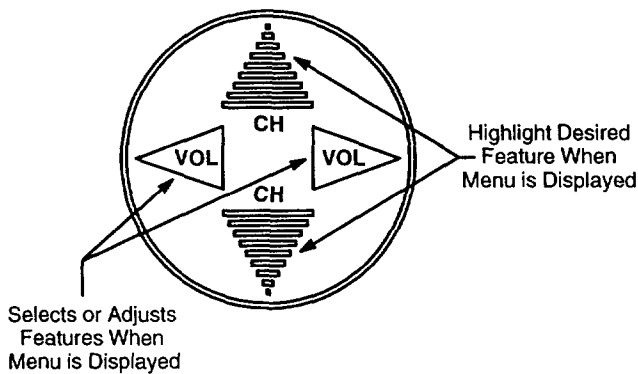

Sleep (Timer) – This feature is used for automatic turn OFF in 30, 60 or 90 minutes as desired.

NOTE: Display will flash 3, 2 and 1 to indicate the last three remaining minutes prior to turn OFF. To deactivate, press the LEFT or RIGHT button until “NO” is displayed.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Timer Icon.
3. Press the ACTION button to display the Timer Control Menu.

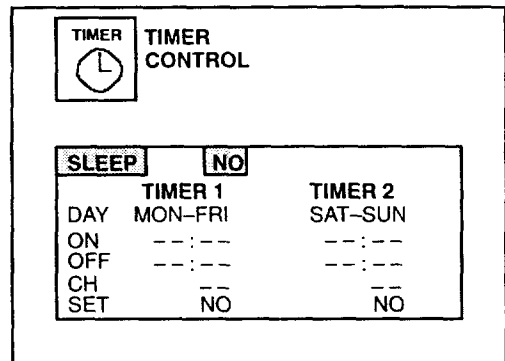


4. Press the VOL RIGHT button to select 30, 60 or 90 (minutes) for Sleep Timer to be activated.
5. Press the ACTION button twice to exit.

NOTE: To deactivate Sleep Timer repeat steps 1 through 4. In step 4, select “NO” instead of minutes.

(Program) Timer – The (Dual Program) Timer feature is capable of turning the TV ON to a desired channel and then turning the TV OFF at a predetermined time.

NOTE: The clock and day must be set for this feature to operate. (Refer to Set Up Menu to Set Time & Day.)

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Timer Icon.
3. Press the ACTION button to display the Timer Control Menu.

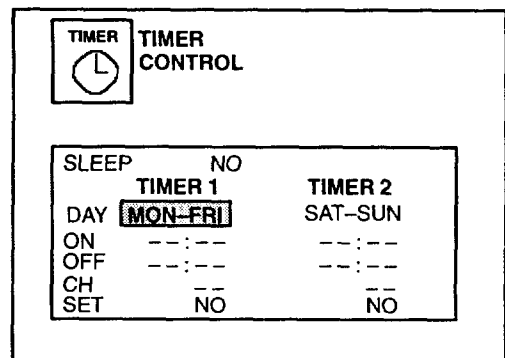

Helpful Hints:

- The Program Timer overrides the Sleep Timer.
- Program Timer can only access channels in Program Channel memory.
- “Set Time First” will appear on screen when trying to set Timer Day Option without the clock being set.
- If the Program Timer “ON” functions while the set is operating the set will automatically tune to the channel designated in the Timer Program.

4. Press the CH UP or DOWN button to highlight the TIMER 1 or TIMER 2 setting.
 - Day or days you wish the Timer to activate.
 - ON (time) – hours and minutes
 - OFF (time) – hours and minutes
 - CH (channel) you want tuned when the Timer activates.
 - SET – NO (Timer feature will not activate)
 - YES (Timer feature will activate)
5. Highlight the Timer 1 Day/Days option.
6. Press the VOL LEFT or RIGHT button to set the day or days you wish the Receiver to turn ON.

The options for setting day are: (MON~FRI), (SAT~SUN), (DAILY), (SUN), (MON), (TUE), (WED), (THR), (FRI), (SAT), (EVR SUN), (EVR MON), (EVR TUE), (EVR WED), (EVR THR), (EVR FRI), (EVR SAT).
7. Press the CH DOWN button to highlight the ON (Hours/Minutes) position.
8. Press the VOL LEFT or RIGHT button to set the time you wish the Receiver to turn ON.
9. Press the CH DOWN button to highlight the OFF (Hours/Minutes) position.
10. Press the VOL LEFT or RIGHT button to set the time you wish the Receiver to turn OFF.
11. Press the CH DOWN button to highlight the CH position.
12. Press the VOL LEFT or RIGHT button to select a channel (from Program Channel Memory) that you want to be tuned to when the set turns ON.
13. Press the CH DOWN button to highlight the SET position.
14. Press the VOL RIGHT button to activate or LEFT button to deactivate Timer 1.
 - YES = Feature is activated.
 - NO = Feature is not activated.
15. Press the CH DOWN button to set Timer 2 (if desired). Follow Steps 6 through 14.
16. Press the ACTION button twice to exit.

Lockout Features


- Game Lockout
- Channel Lockout
- All Channels plus Video Inputs Lockout

ACTION



Displays and Exits Menus

Located On Remote Control

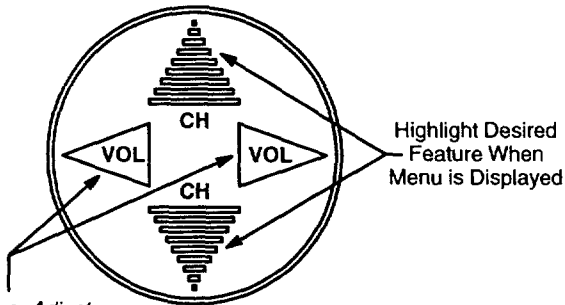

Highlight Desired Feature When Menu is Displayed

Selects or Adjusts Features When Menu is Displayed

Lockout – This feature allows you to lockout:


- Game – (Lockout Channel 3 & 4 plus Video Inputs.)
- Channel – (Lockout up to 4 Channels.)
- All – (Lockout All Channels plus Video Inputs.)

NOTE: This feature will Lockout your selection for up to 48 hours. Be sure to understand this feature before attempting its use. **Use a code that you will easily remember.**


1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Lock Icon.

3. Press the ACTION button to display the Lock Menu.
NOTE: When the Lockout Menu is displayed, the Game Lock option will be highlighted.


4. Press the VOL LEFT or RIGHT button to select GAME, CH (CHANNEL) or ALL.

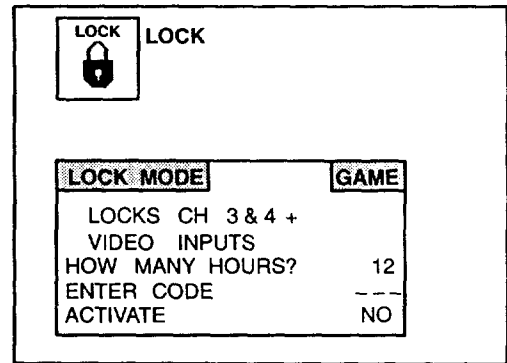

Game Lockout Menu
(Channels 3 & 4 plus Video Inputs)

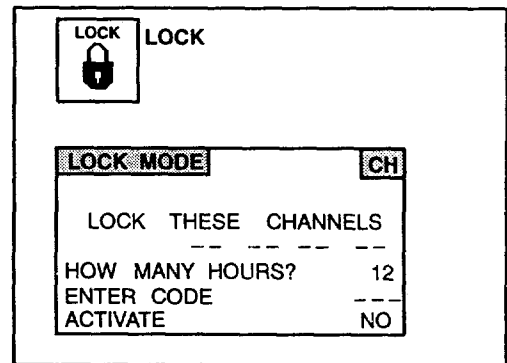

Channels Lockout Menu
(up to 4 Channels)

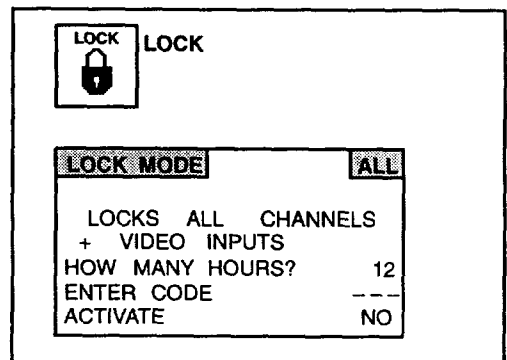

All Lockout Menu
(All Channels plus Video Inputs)

Helpful Hints:

NOTE: If you see a red "PG" in the upper right hand corner the Channel or Video mode you have selected has been locked out.

NOTE: When the CH LOCK MODE is selected, perform procedure Steps A through D.

Step A

When CH is selected press the CH DOWN button to highlight "LOCK THESE CHANNELS".

Step B

Then use the Remote Control Keyboard to select a channel you desire to lockout.


Step C

Press the CH DOWN button to select next Channel position.

Step D


Then repeat Step B & C until desired Channels are locked out (up to 4 Channels).

5. Press the CH DOWN button to highlight "HOW MANY HOURS".
6. Press the VOL LEFT/RIGHT buttons to select 12, 24 or 48 (hours lockout time).
7. Press the CH DOWN button to highlight "ENTER CODE" then enter a 3 digit code by using the Remote Control Keyboard. **IMPORTANT NOTE: Use a code you can easily remember.**
8. Press the VOL RIGHT button to select "YES" for Lock feature to be activated "CHANNELS LOCKED" will display On Screen.

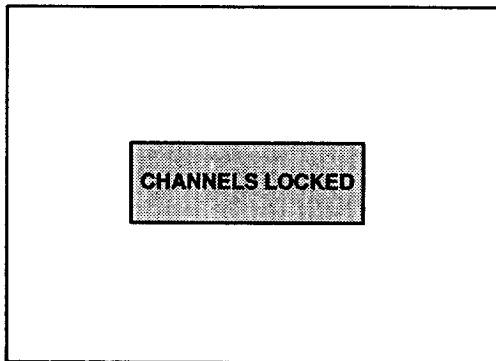


Lock Feature Activated


To unlock the Lockout feature: follow Steps 1 through 3 and enter same 3 digit code as in Step 7. Channel Unlocked display will appear.

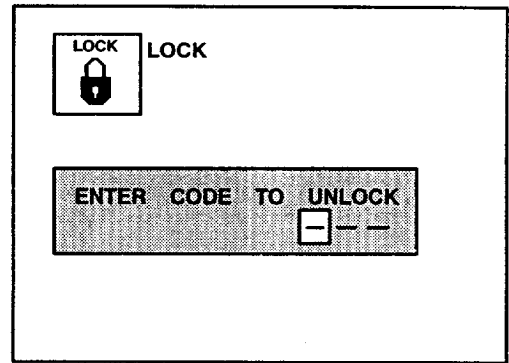

ENTER SAME 3 DIGIT CODE

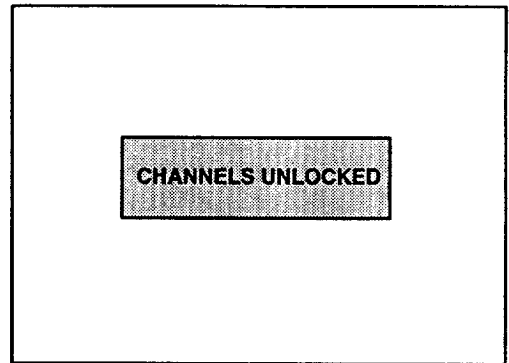

IF 3 DIGIT CODE IS THE SAME

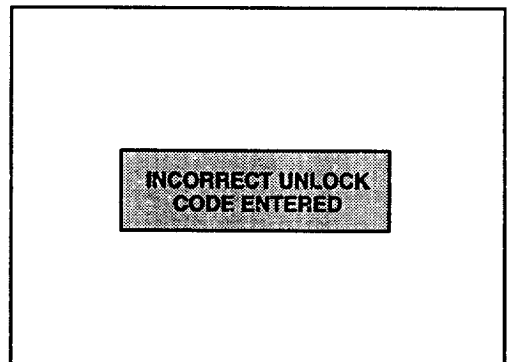

IF 3 DIGIT CODE IS NOT THE SAME

Favorite Channel Feature


- Chan (Channel) Scan All/Fav
- Fav CH Select

ACTION



Displays and Exits Menus


Located On Remote Control

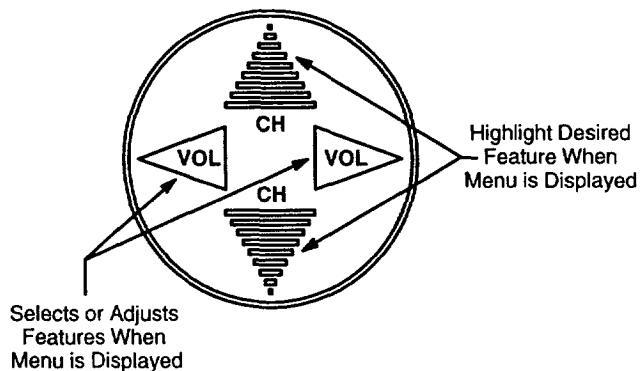

Channel Scan – This feature is used to select which Channels will be accessed when using CH UP/DOWN buttons, ALL or FAV (Favorite Channels).

NOTE: Channels must be programmed into Favorite Channel Select Memory first.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Favorite Channel Icon.
3. Press the ACTION button to display the Favorite Channel Menu.

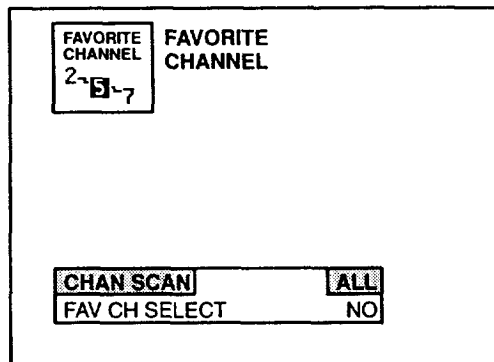

4. Press the CH UP/DOWN to highlight "CHAN SCAN".
5. Press the VOL LEFT or RIGHT button to select ALL or FAV (Favorite).
 - ALL – The CH UP/DOWN buttons will access all channels in Channel memory.
 - FAV – The CH UP/DOWN buttons will only access channels in Favorite Channel Select memory.
6. Press the ACTION button twice to exit.

NOTE: Pressing the ACTION button again will return you back to the Favorite Channel Icon.


Fav Ch Select

ACTION



Displays and Exits Menus


Located On Remote Control

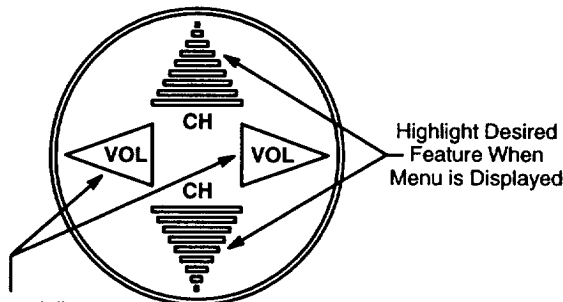


Selects or Adjusts Features When Menu is Displayed

Favorite Channel Select – The Favorite Channel Programming feature allows you to program up to 15 of your favorite channels into your personal channel scan memory. Use the CH buttons on the Remote Control to scan channels without going through channels you don't normally view.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Favorite Channel Icon.
3. Press the ACTION button to display the Favorite Channel Menu.

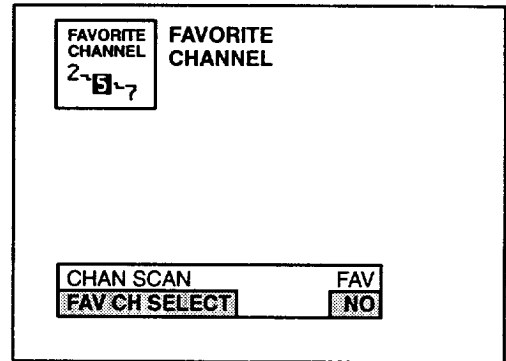

4. Press the CH UP or DOWN button to highlight "FAV CH SELECT".
5. Press the VOL LEFT or RIGHT button to display the Favorite Channel Select Menu.

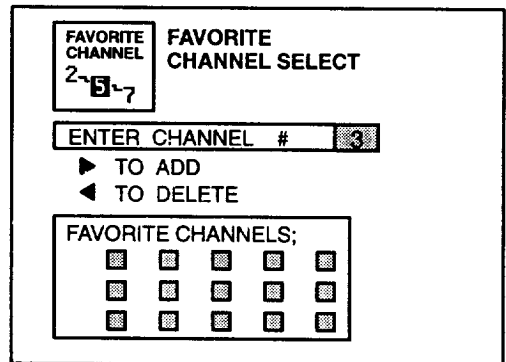

6. Enter the channel number you wish to add or delete from Favorite Channel memory (using the Remote Keyboard or CH UP/DOWN buttons).
7. Press the VOL RIGHT button to add or press the LEFT button to delete channel(s) from Favorite Channel memory.
8. Repeat Steps 6 and 7 to continue adding or deleting channels (up to 15 channels may be stored in Favorite Channel memory).
9. When your desired channels have been programmed, press the ACTION button twice to exit.
10. Press the CH UP or DOWN button to scan thru the Favorite Channels you programmed.

Helpful Hints:

- After Auto Channel Program the first 15 channels selected will automatically be put into Favorite Channel memory, if space is available.
- To access Channels in Favorite Channel memory, select "FAV" for Chan Scan.


Channel Caption Feature

ACTION




Displays and Exits Menus

Located On Remote Control

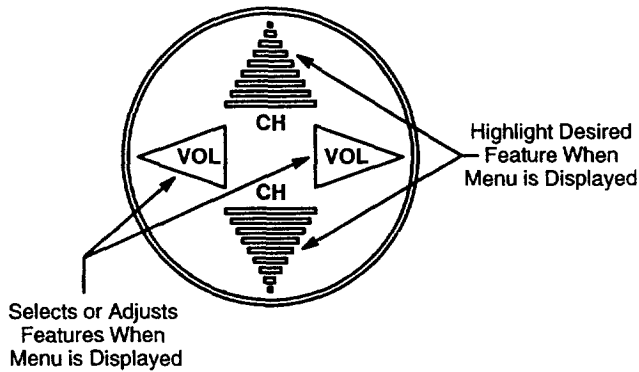


Channel Caption (Station Identifier) –


The Channel Caption (Station Identifier) allows you to input the call names of up to 30 stations into memory (using up to 4 characters). The call name will then display, along with the channel number when changing channels or pressing RECALL.

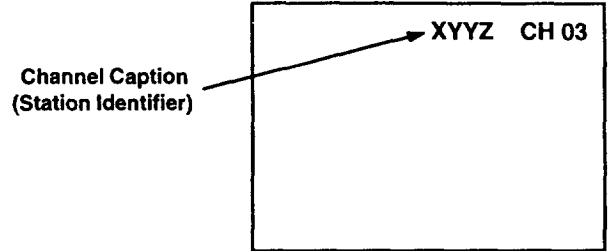

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Channel Caption Icon.
3. Press the ACTION button to display the Channel Caption Menu.

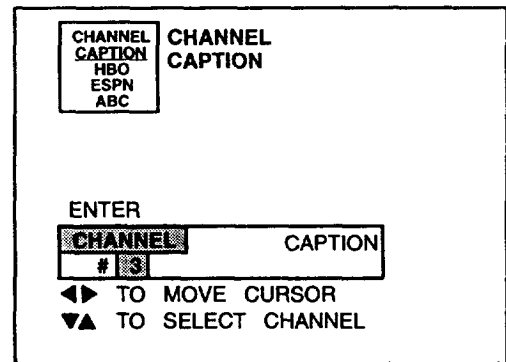

4. Use Remote Keyboard or CH UP/DOWN buttons to enter channel number you wish to assign a Station Identifier. (See Helpful Hints.)
5. Press the VOL RIGHT button to Select CAPTION position.
6. Press the CH UP/DOWN button to select first character in Station Identifier, press VOL RIGHT button to move to second position and repeat until the complete Station Identifier is entered (up to 4 characters).

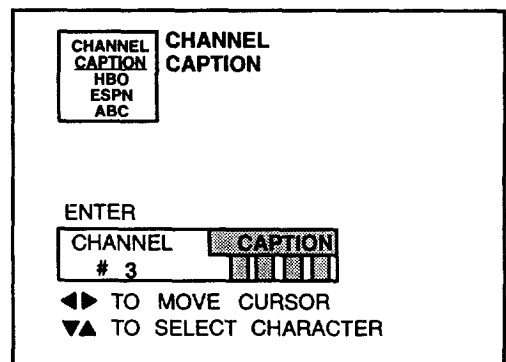

Helpful Hints:

To select the desired channels for the Station Identifier feature press two digits on the Remote Keyboard (Example press 0, then 5 for channel 05). If cable channel over 100 is desired press three required digits on Remote Keyboard.

7. Press the VOL RIGHT button repeatedly to select channel number position. Repeat steps 4 through 7 to continue adding Channel Station Identifier.
8. Press the ACTION button twice to exit.


Closed Caption

- CC Mode
- CC Field
- CC On Mute




Displays and Exits Menus

Located On Remote Control

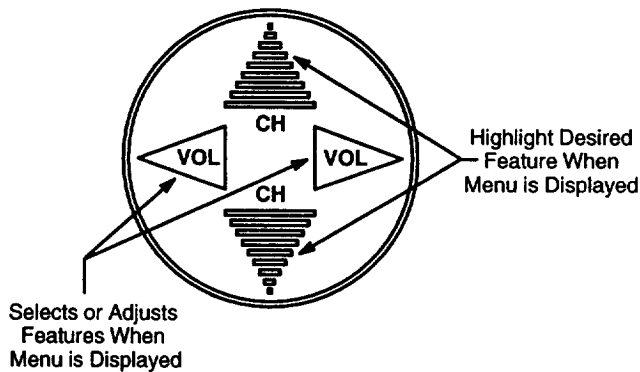


Closed Caption/Field Mode – This Receiver has a built in decoder that provides a visual depiction of the audio portion of a television program in the form of written words across the screen (White or Colored letters on a black background). It allows the viewer to read the dialogue of a television program or other information.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Closed Caption Icon.
3. Press the ACTION button to display the Closed Caption Menu.

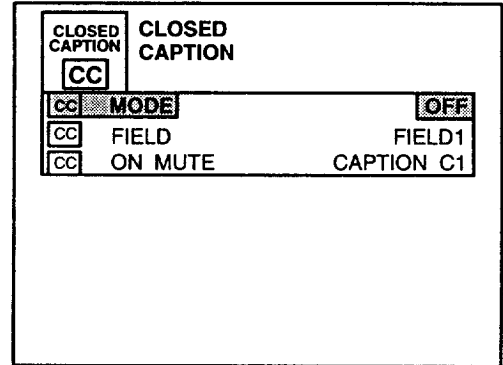

4. Press the CH UP or DOWN button to highlight "CC MODE".
5. Press the VOL LEFT or RIGHT button to select OFF, CAPTION C1, TEXT C1, CAPTION C2 or TEXT C2.
6. Press CH DOWN button to select FIELD.

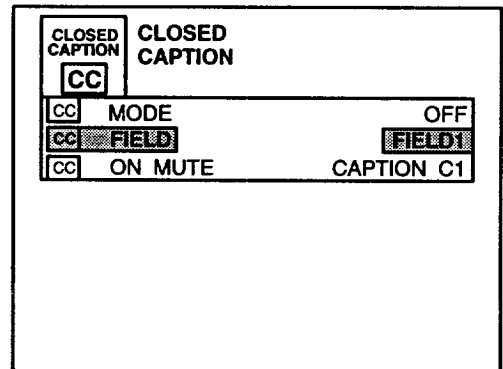

7. Press the VOL LEFT or RIGHT button to select "FIELD 1" or "FIELD 2".
8. Press the ACTION button twice to exit.
 - CAPTION OFF – Recommended mode when you do not wish to view Closed Caption.
 - CAPTION C1 – For video related information that can be displayed (up to 4 lines of script strategically placed on the television screen so that it does not obstruct relevant parts of the picture). Script can be in any language.
 - TEXT C1 – Blanks out a large portion of the picture on the television screen, and displays program guide or any other information currently being transmitted.
 - CAPTION C2 – Another mode used for video related information that can be displayed (up to 4 lines of script strategically placed on the television screen so that it does not obstruct relevant parts of the picture).
 - TEXT C2 – Another mode which displays information and blanks out a large portion of the picture on the television screen.

Helpful Hints:

- Closed Caption information may be transmitted on either or both Caption Fields.
- Most Closed Caption information is transmitted on Field 1 in Caption C1 Mode.
- De-select Text mode if large portion of the picture is blanked out.
- Press the ACTION button twice to exit the Closed Caption Menu.


CC (Closed Caption) On Mute

ACTION



Displays and Exits Menus

Located On Remote Control

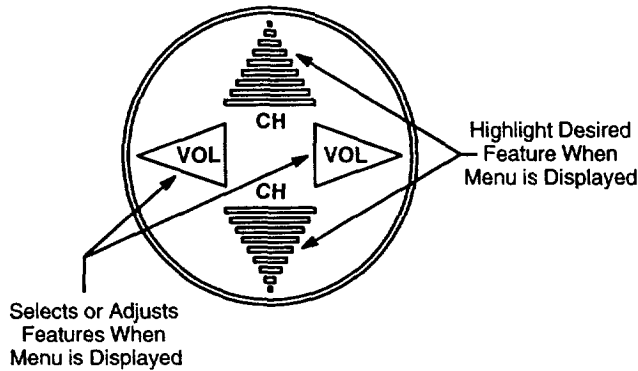


Closed Caption with Mute Button

Activates the On Screen Closed Caption feature when the MUTE button on the Remote Control is pressed. To deactivate press the MUTE button again.

NOTE: This feature only functions when the Close Caption Mode is in the "OFF" position. The program being viewed must be broadcast with Closed Caption. (Refer to your local TV guide.)

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Closed Caption Icon.
3. Press the ACTION button to display the Closed Caption Menu.

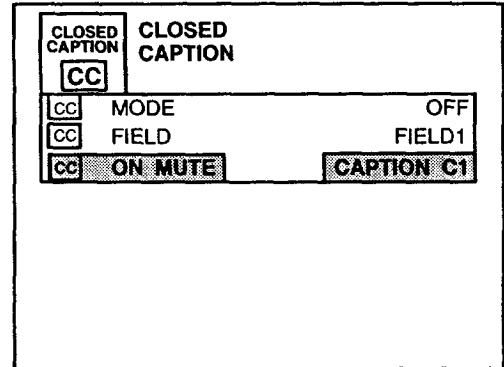

4. Press the CH UP or DOWN button to highlight "CC ON MUTE".
5. Press the VOL LEFT or RIGHT button to select NO (OFF), CAPTION C1 or CAPTION C2.

Recommended Set Up for Closed Caption when using Mute Button.

- CC MODE: OFF
- CC FIELD: FIELD 1
- CC ON MUTE: CAPTION C1

6. Press the ACTION button twice to exit.
7. Press the MUTE button when the program being viewed is broadcast with Closed Caption to activate.

NOTE: Press the MUTE button again to deactivate.


3 – Language Menu System

ACTION



Displays and Exits Menus

Located On Remote Control

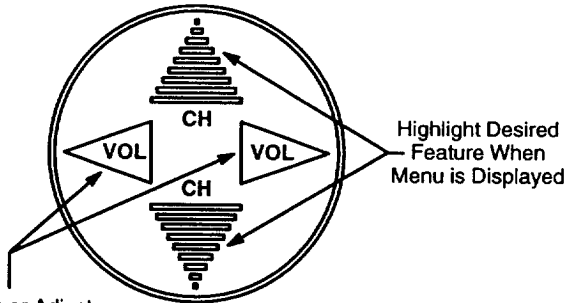


Selects or Adjusts Features When Menu is Displayed

Highlight Desired Feature When Menu is Displayed

Language Selection (English/Spanish/French)

The Language Menu is factory set to ENGLISH. Follow these instructions to change the Language Menu to Spanish or French and back to English.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Language ENGLISH/ESPAÑOL (Spanish)/FRANÇAIS (French) Icon.
3. Press the ACTION button to display the Language select Menu.

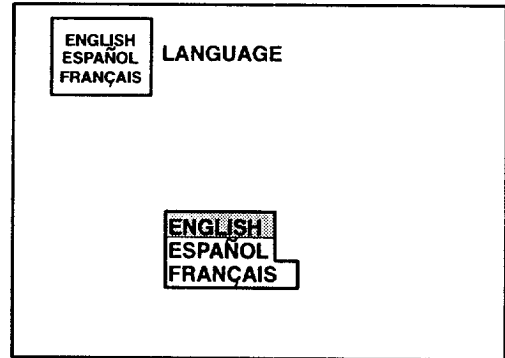

4. Press the CH UP or DOWN button to select ENGLISH, SPANISH or FRENCH from the Language Menu.
 5. Press the ACTION button twice to exit.
- NOTE:** Pressing the ACTION button again will return you back to the Language Icon.

Helpful Hints:

Language Menu does not affect Close Caption or other transmitted text information.

Set Up Features


- Set Time
- Set Day
- Mode (TV/Ant or Cable)
- Auto Program
- Manual Program

ACTION



Displays and Exits Menu

Located On Remote Control

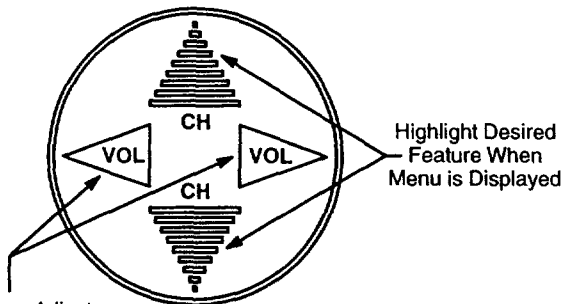


Selects or Adjusts Features When Menu is Displayed

Highlight Desired Feature When Menu is Displayed

Set Time (Clock) — Clock (when set) will display On Screen at initial turn on, after a channel change and when pressing Recall button. It must be set in order to operate the Dual Timer feature.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon.
3. Press the ACTION button to display the Set Up Menu.

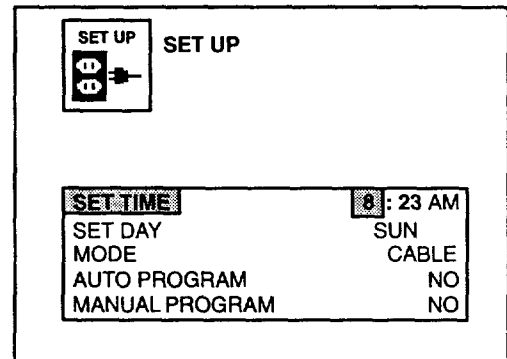


4. Press the CH UP or DOWN button to highlight "SET TIME" position, then select hours position by pressing CH UP button if necessary.
5. Press the VOL LEFT or RIGHT button to Set Hours (set AM/PM accordingly).
6. Press the CH DOWN button to highlight minutes position.
7. Press the VOL LEFT or RIGHT button to set minutes.
8. Press the ACTION button twice to exit.

NOTE: Pressing the ACTION button again will return you back to the Set Up Icon.

Set Day — The day of the week must be set in order to operate the Dual Timer feature.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT button to highlight the Set Up Icon.
3. Press the ACTION button to display the Set Up Menu.

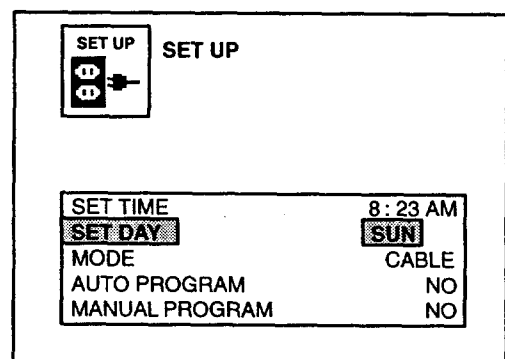

4. Press the CH UP or DOWN button to highlight "SET DAY".
5. Press the VOL LEFT or RIGHT button to select proper day of the week.
6. Press the ACTION button twice to exit.


Mode (TV/Ant or Cable)

ACTION



Displays and Exits Menus

Located On Remote Control

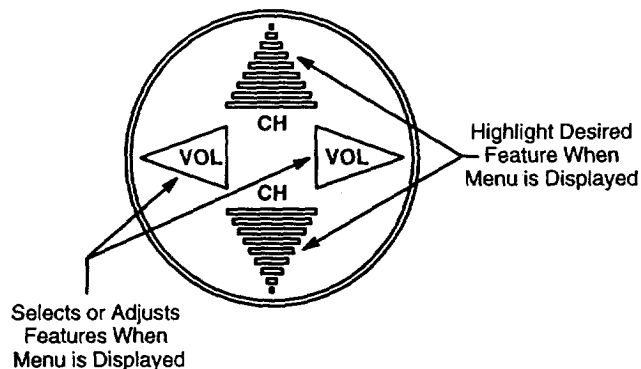


TV/Ant or Cable Tuning Mode

IMPORTANT NOTE: The proper input mode must be selected to match the type of signal at the antenna input (TV or Cable).

- TV is used when the Receiver is not connected to a Cable TV System, for example, when using a VHF/ UHF antenna (Channels 02–69).
- CABLE is used when the Receiver is connected to a Cable TV System and you are not using a cable company converter box (Channels 01–125).

NOTE: Some Cable TV Systems encode (scramble) program material on specific channels. A cable company supplied decoder is required to reproduce an acceptable picture. Certain Cable TV Systems offset some channels to reduce interference. It will be necessary to use the cable company supplied converter to receive these specific channels.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon.
3. Press the ACTION button to display the Set Up Menu.

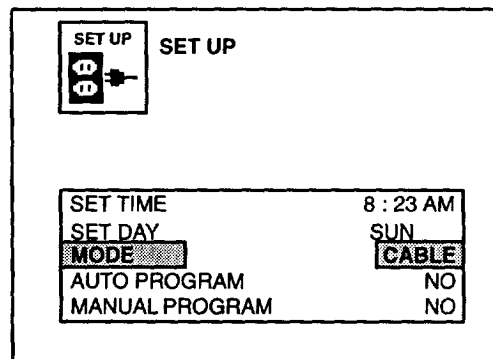

4. Press the CH UP or DOWN button to highlight "MODE".
5. Press the VOL LEFT or RIGHT button to select TV/ ANT (mode) or CABLE (mode).
6. Press the ACTION button twice to exit.


Auto Program

ACTION



Displays and Exits Menus


Located On Remote Control

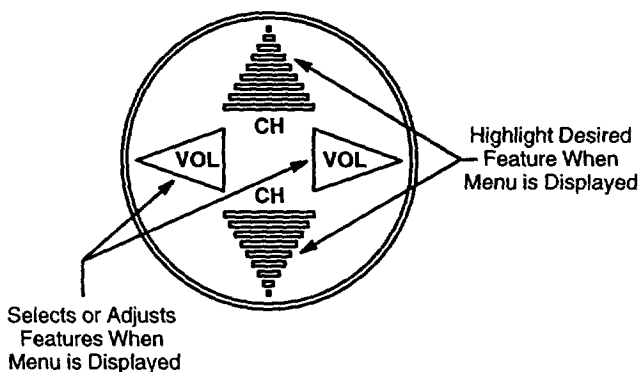

Auto Programming – The Auto Programming feature allows you to place all channels with a video signal into Channel Scan Memory when you press the CHANNEL UP or DOWN button.

NOTE: TV or Cable Tuning mode must be set properly for your system.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT button to highlight the Set Up Icon.
3. Press the ACTION button to display the Set Up Menu.

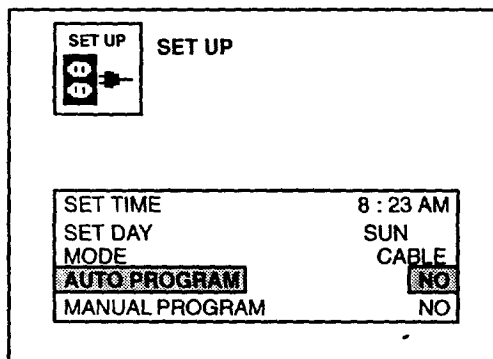

4. Press the CH UP or DOWN button to highlight "AUTO PROGRAM".
5. Press the VOL LEFT or RIGHT button to start Auto Programming Scan. Channels will automatically advance until all channels have been scanned.
 - Channel numbers with video signal present will turn blue which indicates stored in Channel Scan memory.
6. Press the ACTION button twice to exit.

NOTE: Some channels with very weak signals may be locked into memory. These must be deleted manually using the Manual Program feature.

Helpful Hints:

After Auto Programming:

Blue channel number indicates channel is in Channel Scan memory.

All channels are available by direct access using the Keyboard numbers "0 through 9".

After Auto Programming Scan has completed, up to 15 channels will be programmed into the FAVORITE Channel Scan if space is available. Any original channels that were programmed into FAV CHANNEL will remain. (Refer to Favorite Channel Scan for deleting unwanted channels.)


Manual Program

ACTION



Displays and Exits Menus


Located On Remote Control

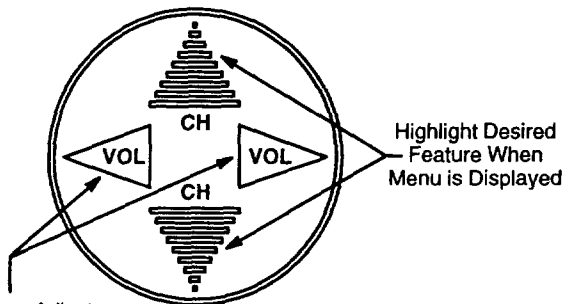


Selects or Adjusts Features When Menu is Displayed

Manual Programming – This feature allows you to select which channels are placed into Channel Scan memory so when you press the CHANNEL UP or DOWN button only those channels you desire will be accessed.

1. Press the ACTION button to display the Main Menu.
2. Press the CH UP/DOWN and VOL LEFT/RIGHT buttons to highlight the Set Up Icon.
3. Press the ACTION button to display the Set Up Menu.

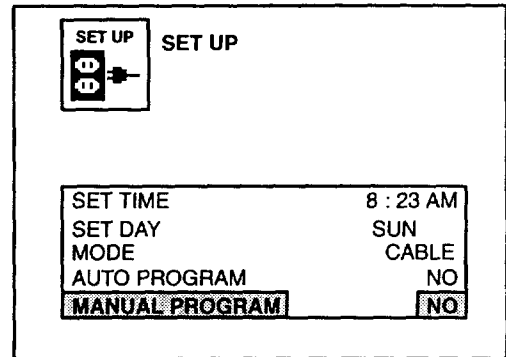

4. Press the CH UP or DOWN button to highlight "MANUAL PROGRAM".
5. Press the VOL LEFT or RIGHT button to display Manual Programming menu.

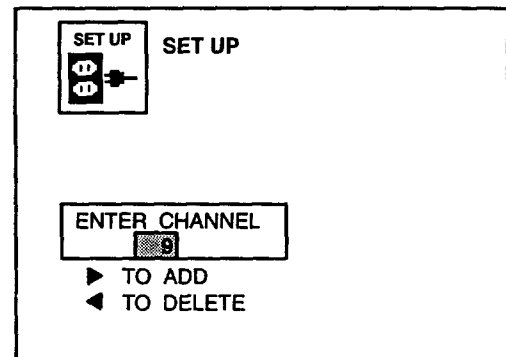

6. Use Remote Keyboard numbers "0 through 9" or CH UP/DOWN buttons to select channels.
7. Press the VOL RIGHT button to add channel(s) to memory (blue). Press the VOL LEFT button to delete channel(s) from memory (yellow).
8. Repeat Steps 6 and 7 to continue adding or deleting channels.
9. Press the ACTION button twice to exit.


Programming The Universal Remote Control


VCR

Preferred Procedure – Code Known Programming Universal Remote Using Infra-Red Access Codes for VCRs

- Determine brand of VCR.
- Identify code(s) associated with the brand in the infra-red code index for VCRs (located in this manual).

Procedure

1. Place the Remote TV/VCR/CABLE switch into the VCR position (Center). 

2. Press and hold VCR POWER button down on Universal Remote. 


3. Enter two digit code using keyboard "0 through 9" buttons. Release VCR Power button. The Universal Remote is now programmed.

NOTE: Some brands have multiple codes. Repeat procedure using each code listed until VCR responds correctly.

Alternate Procedure – Code Unknown Programming Universal Remote Using the "Sequence Method" for VCRs

- Confirm VCR is plugged in and operating properly, then turn OFF.

Procedure

1. Place the Remote TV/VCR/CABLE switch into the VCR position (Center). 

2. Press and hold the VCR POWER button down on Universal Remote. 

3. Press VOL RIGHT button repeatedly. Check for the VCR to turn ON after each press. When the VCR turns ON, release VCR Power button. The proper infra-red code has now been accessed.

NOTE:

1. It may take several attempts before the correct code is found.
2. The VOL LEFT button can be used to return to a code that was accidentally passed by.
3. Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the VCR OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the VCR ON and repeatedly press the VOL RIGHT button until the VCR turns OFF.


NOTE: When operating equipment (VCR or Cable Converter box) with the Universal Remote Control, the TV/VCR/CABLE Switch should be set to the same position where the Access Code was first programmed for the equipment. Otherwise, leave the switch in the TV position.

Cable Converter Box

Preferred Procedure – Code Known Programming Universal Remote Using Infra- Red Access Codes for Cable Television Converter Boxes

- Determine brand of Cable Television Converter box.
- Identify code(s) associated with the brand in the infra-red code index for Cable Television Converter boxes (located in this manual).

Procedure

1. Place the Remote TV/VCR/CABLE switch into the CABLE position (Right). 

2. Press and hold the CABLE POWER button down on Universal Remote. 


3. Enter two digit code using keyboard "0 through 9" buttons. Release CABLE Power button. The Universal Remote is now programmed. **Use the Remote CHANNEL UP/DOWN buttons for selecting Cable Converter Box channels.**

NOTE: Some brands have multiple codes. Repeat procedure using each code listed until Cable Television Converter box responds correctly.

Alternate Procedure – Code Unknown Programming Universal Remote Using the "Sequence Method" for Cable Television Converter Boxes

- Confirm Cable Television Converter box is plugged in and operating properly, then turn OFF.

Procedure

1. Place the Remote TV/VCR/CABLE switch into the CABLE position (Right). 

2. Press and hold the CABLE POWER button down on Universal Remote. 

3. Press VOL RIGHT button repeatedly. Check for the Cable Television Converter box to turn ON after each press. When the Cable Television Converter box turns ON, release Cable Power button. The proper infra-red code has now been accessed.


NOTE:

- It may take several attempts before the correct code is found.
- The VOL LEFT button can be used to return to a code that was accidentally passed by.
- Some Remote Controls may have unique operating functions for some buttons. For Example: The POWER button may only turn the Cable Television Converter box OFF as opposed to both ON and OFF. It will then be necessary to modify the procedure. Turn the Cable Television Converter box ON and repeatedly press the VOL RIGHT button until the Cable Television Converter box turns OFF.

VCR and Cable Converter Box Infra-Red Codes Index

The Universal infra-red Remote Control is capable of operating many brands of VCRs and Cable Television Converter Boxes after entering the proper infra-red code.

NOTE: The Universal Remote Control memory is limited. Some models of VCRs or Cable Television Converter Boxes may not operate. The Universal Remote Control is not designed to control all features that are available in all models.

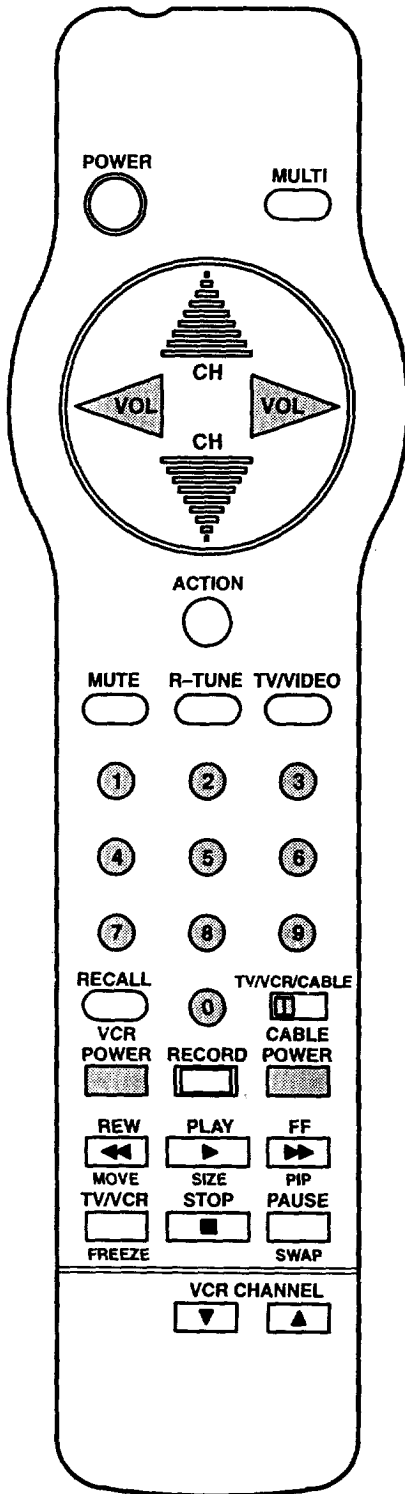

Remote Control

Infra-Red Code Index For VCRs


VCR Brand	Code(s)	VCR Brand	Code(s)
Audio Dynamics	14, 16	NEC	02, 14, 16, 30
Broksonic	10	Panasonic	00, 01
Canon	00, 01	Pentax	05
Capehart	01	Philco	00, 29
Citizen	09	Philips	00, 29
Craig	12	Pioneer	05
Curtis Mathes	00, 08, 15	Quasar	00, 01
DBX	14, 16	RCA	05, 07, 08, 28, 35
Emerson	10, 20, 34, 35, 36, 37	Realistic	00, 02, 06, 12, 15
Fisher	12, 18, 19	Samsung	07, 32
Funai	15	Sanyo	02, 12
GE	00, 07, 08, 32	Scott	04, 13, 33, 36
Goldstar	09	Sears	02, 05, 18, 19
Hitachi	05, 35, 36	Sharp	06, 24
Instant Replay	00	Sony	17, 26, 33, 34
JC Penney	00, 02, 05, 14, 16, 30	Sylvania	00, 29
JVC	02, 14, 16, 30	Symphonic	15
Kenwood	02, 14, 16, 30	Tashiko	09
Magnavox	00, 29	Tatung	30
Marantz	02, 14, 16, 29, 30	Teac	15, 30
Marta	09	Teknika	21
Memorex	00, 12	Toshiba	05, 13
MGA	04, 27	Vector Research	14, 16
Minolta	05	Video Concepts	14, 16
Mitsubishi	04, 27	Wards	06
Montgomery Ward	06	Yamaha	02, 14, 16, 30
Multitech	07, 15, 32	Zenith	11, 17

Infra-Red Code Index For Cable Television Converter Box

Brand of Cable-TV Box	Code(s)	Brand of Cable-TV Box	Code(s)
G.I.	04, 05, 15, 23, 24, 25, 30, 36	Pioneer	18, 20
Hamlin	12, 13, 34	RCA	27
Jerrold	04, 05, 15, 23, 24, 25, 30, 36	Regency	02
Macom	27	Scientific Atlantic	03, 22
Magnavox	19, 26, 28, 29, 32, 33, 40, 41	Sylvania	11
Oak	14, 16, 18	Texscan	10, 11
Oak Sigma	16	Tocom	17, 21
Panasonic	27, 39	Unika	31
Philips	19, 26, 28, 29, 32, 33, 40, 41	Viewstar	19, 26, 28, 29, 32, 33, 40, 41
		Zenith	01, 42

Optional Equipment Connection and Operation

To Audio AMP Connection (Stereo)

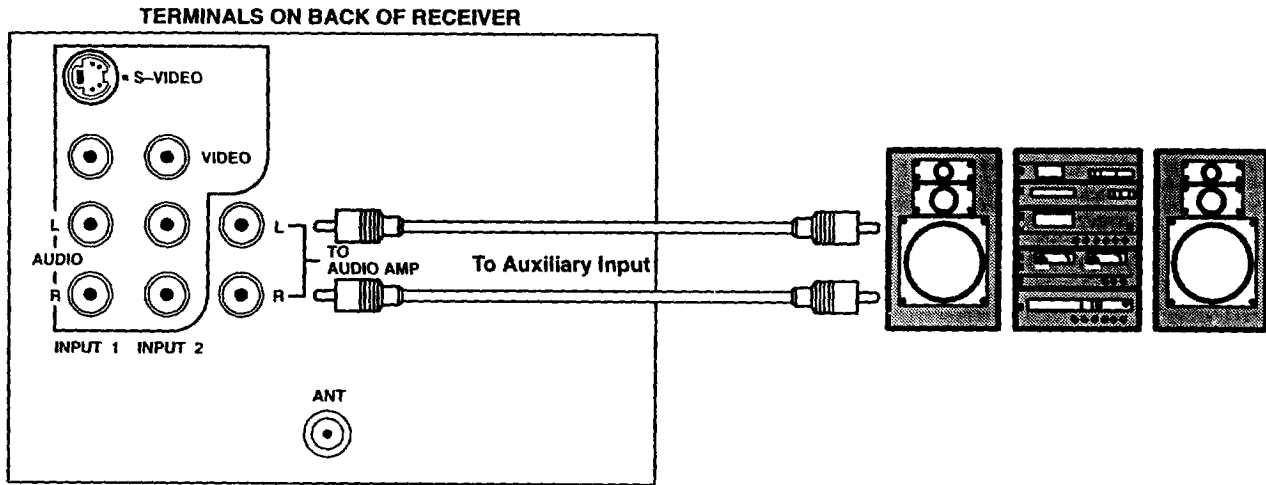

• To Audio AMP


Connect to an external audio amp auxiliary input for monitoring sound through a stereo system.

NOTE: "TO AUDIO AMP" terminals cannot be used for external speakers.

Adjustment – When an audio amp is connected to "TO AUDIO AMP" terminals:

1. Select INT. SPEAKERS "ON" Mode. (Refer to the Audio Menu [TV] Speakers section.)
2. Set volume of audio amp to near Minimum.
3. Adjust volume of TV to desired listening level.
4. Adjust volume of audio amp to match the level of TV.
5. Select INT. SPEAKERS "OFF" Mode. (Refer to the Audio Menu [TV] Speakers section.)
6. Audio bass, treble, balance, volume and mute can now be controlled by the TV Remote Control.


Video/Audio Connection

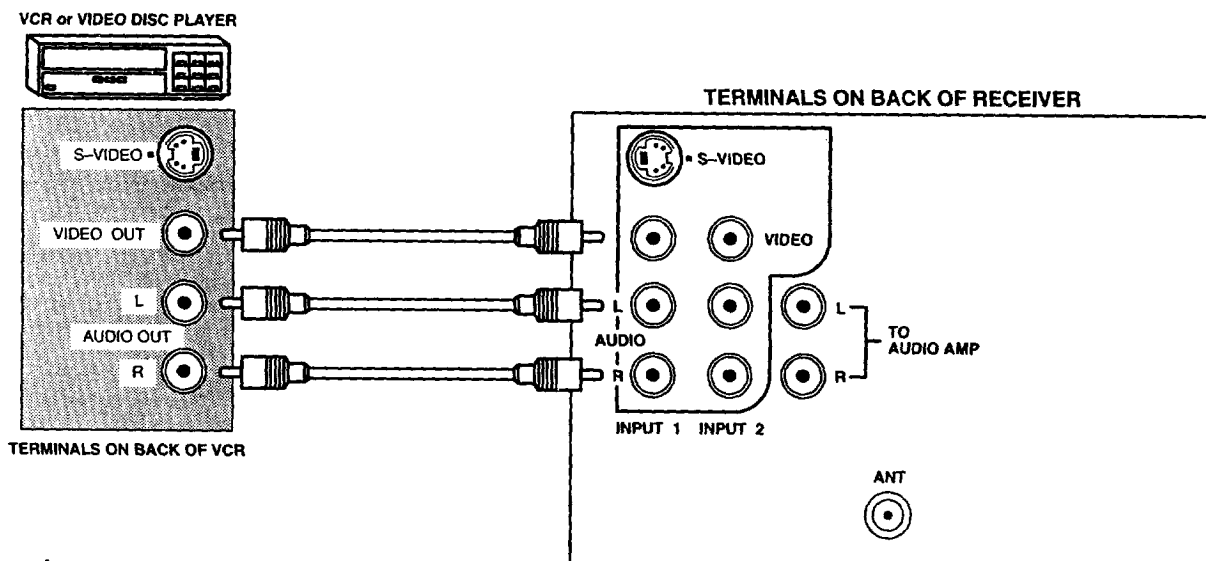

Operation

1. Connect optional equipment as shown to INPUTS 1 or 2.
2. Select the desired Video mode by pressing the TV/VIDEO button (or refer to the Input Selection Menu).
NOTE: You must select the same VIDEO Mode that the equipment is connected to.
3. Operate optional equipment (VCR-VDP) as instructed in Optional Equipment Manual.

S-Video Connection

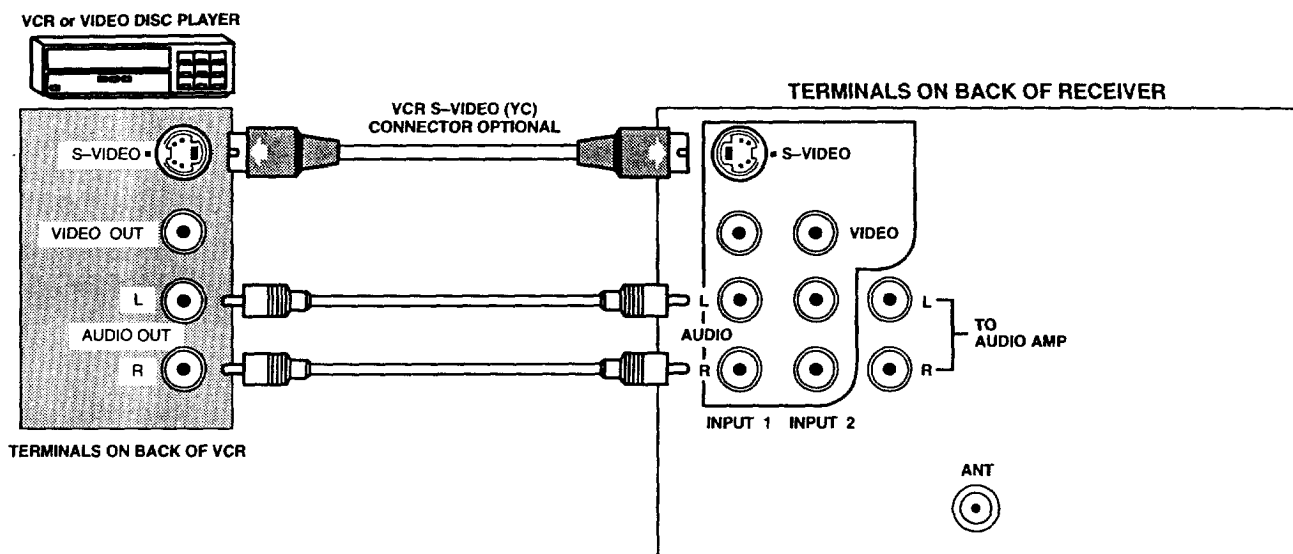

Operation

1. Connect S-Video (YC) connector to S-Video Terminals.
2. Make connections to L and R Input 1 Audio jacks.
3. Select Video 1 mode by pressing the TV/VIDEO button (or refer to the Input Selection Menu).
4. Operate optional equipment (VCR-VDP) as instructed in Optional Equipment Manual.

NOTE:

- You must select the same VIDEO Mode that the equipment is connected to.
- Connection of optional S-VIDEO jack automatically disconnects the Normal Video Input 1 jack.

Care and Cleaning

Picture Tube (Turn set off)

Use a mild soap solution or window cleaner and a clean cloth. DO NOT USE ABRASIVE CLEANERS. Avoid excessive moisture and wipe dry.

Plastic Cabinets

Wipe the cabinet with a soft cloth dampened with water or a mild detergent solution and wipe dry with a soft clean cloth. Avoid excessive moisture. Do not use benzene, thinners or other petroleum based cleaners.

Wood Cabinets

















 



When dusting or polishing the cabinet, use a clean soft cloth and stroke straight with the grain. An occasional coat of furniture polish will help preserve the finish. Do not use benzene, thinners or other petroleum based cleaners. Do not place objects made of plastic or rubber directly on top of the cabinet. A chemical reaction could result causing permanent marring of the finish.

Remote Control Transmitter

Do not use benzene, thinners or other petroleum based cleaners to clean the Remote Control Transmitter. To clean, wipe with a soft cloth slightly moistened with a mild detergent and then wipe dry with a soft clean cloth.

Troubleshooting Chart

Before you call for service, determine the symptoms and make a few simple checks shown below.

Symptoms		Check
Picture	Sound	
 SNOWY PICTURE	 NOISY SOUND	- ANTENNA LOCATION AND/OR CONNECTION
 MULTIPLE IMAGE	 NORMAL SOUND	- ANTENNA DIRECTION AND/OR LOCATION - ANTENNA LEAD-IN WIRE
 INTERFERENCE	 NOISY SOUND	- ELECTRICAL APPLIANCES, LIGHTS, CARS AND TRUCKS - DIATHERMY AND OTHER MEDICAL EQUIPMENT
 NORMAL PICTURE	 NO SOUND	- VOLUME CONTROL SETTING - MUTE CONTROL (IF APPLICABLE) - TV SPEAKER SWITCH (IF APPLICABLE) IN OFF OR EXT POSITION - TRY ANOTHER CHANNEL
 NO VIDEO	 NOISY SOUND	- TV/ANT-CABLE TUNING SYSTEM SET TO PROPER SETTING - ANTENNA INPUT MODE INCORRECT
 NO PICTURE	 NO SOUND	- CHECK THAT AC POWER LINE IS PLUGGED INTO AC OUTLET AND POWER BUTTON IS ON - BRIGHTNESS & AUDIO CONTROLS SET PROPERLY - TRY ANOTHER CHANNEL
 NO COLOR	 NORMAL SOUND	- COLOR CONTROL SETTINGS - TRY ANOTHER CHANNEL
 BLUE PICTURE	 NO SOUND	- RECEIVER IN VIDEO MODE WITH NO SIGNAL
 NO VIDEO	 NOISY SOUND	- CHANNEL LOCKOUT FEATURE ACTIVATED
 BLACK BOX IN PICTURE	 SOUND	- CC (CLOSED CAPTION) IN TEXT MODE - PUT IN CAPTION OFF MODE TO ELIMINATE BLACK BOX

Should this unit turn ON momentarily and then turn OFF, or fail to operate, unplug the AC cord and contact your Authorized Servicer for repairs.

Power Loss

Prolonged power interruption causes the following features to reset to their factory preset state.

FEATURE	FACTORY PRESET STATE	FEATURE	FACTORY PRESET STATE
POWER	OFF	CLOCK	NOT SET
VOLUME	APPROX.-1/3	SLEEP TIMER	NO/OFF
CHANNEL	CH 03	TIMER	NO/OFF
PROGRAM MEMORY	UNPROGRAMMED	TV/ANT-CABLE	CABLE
VIDEO MENUS	NORMALIZED	TV/VIDEO	TV
AUDIO MENUS	NORMALIZED	NOISE REDUCTION	OFF
STEREO/SAP/MONO	STEREO	PIP FEATURES	OFF
MENU LANGUAGE	ENGLISH		

**Matsushita Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America**
One Panasonic Way
Secaucus, New Jersey 07094

Matsushita Electric of Canada Limited
5770 Ambler Drive
Mississauga, Ontario L4W 2T3
Canada

**Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico Inc. ("PSC")**
Ave. 65 de Infanteria, Km 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel. (809) 750-4300
FAX. (809) 768-2910