



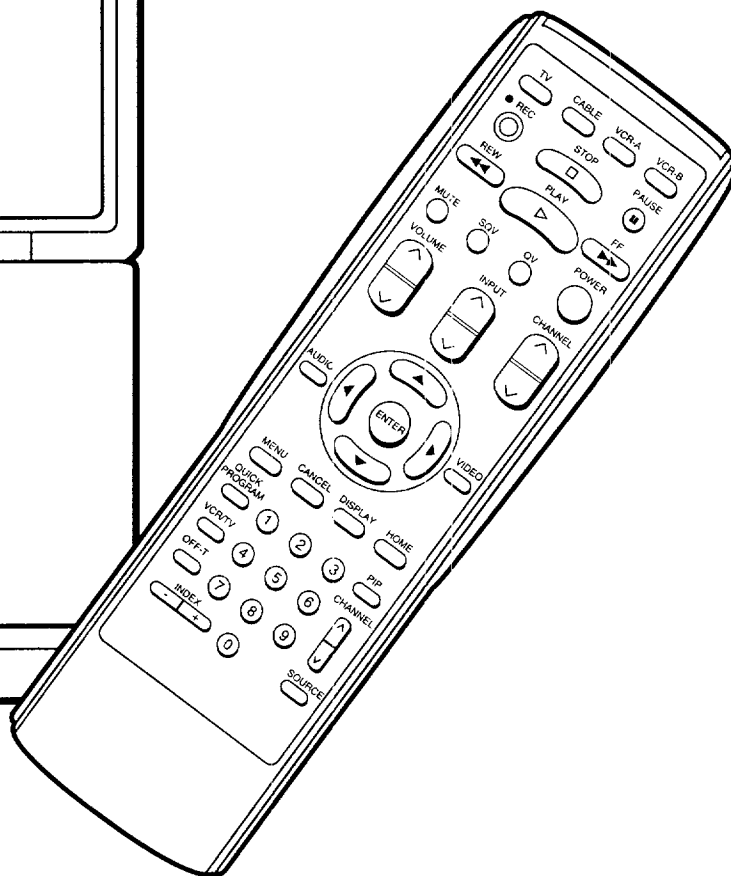



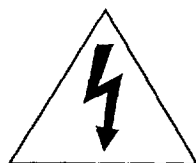
MITSUBISHI

VS-4541 VS-4542
VS-5041 VS-5042
VS-6041

Projection Television Owner's Guide

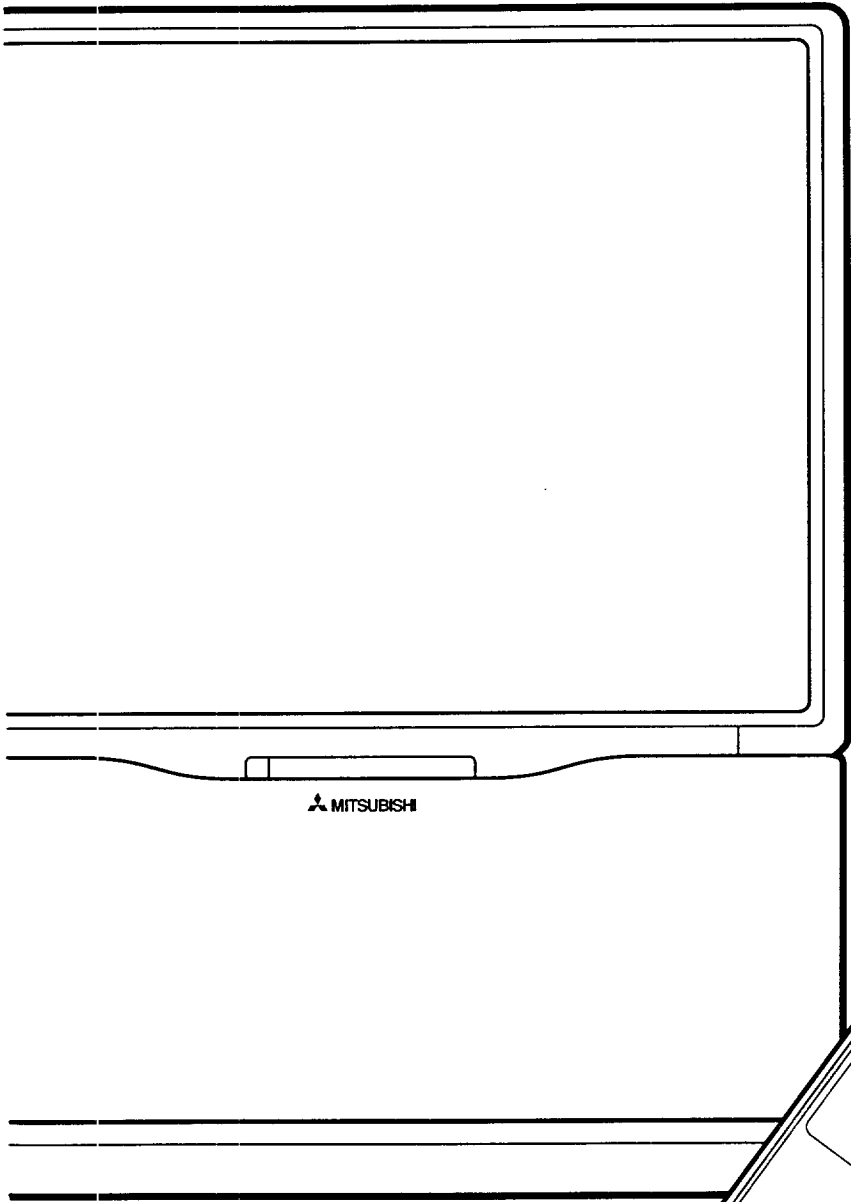

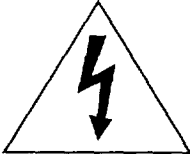	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

► **Warning:** Don't leave stationary images, such as those generated from stock market reports or video games, on-screen for more than 10 minutes. Still patterns can scar the Projection TV causing permanent damage to the picture tubes.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

TO PREVENT ELECTRIC SHOCK HAZARD, DO NOT USE THIS UNIT'S (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

NOTE TO CATV SYSTEM INSTALLER:

THIS REMINDER IS PROVIDED TO CALL THE CATV SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.



Table of Contents

Important Safeguards	3
Preface: Welcome to Mitsubishi	5
Summary of Special Features	6
Unpacking Your Projection TV	7
What's in Each Chapter	8
Some Conventions Used in this Guide	9
Chapter 1: Getting to Know Your Projection TV	11
Overview of the Control Panel	12
Overview of the Remote Control	15
Getting ready to use the remote control	15
Remote control buttons and functions	17
Chapter 2: Connecting Your Projection TV	23
Overview of the Back Panel	24
Basic Connections	26
Projection TV + antenna or cable without a decoder box	27
Projection TV + cable with a decoder box	28
Projection TV + separate UHF and VHF antennas ...	30
Projection TV + VCR + antenna or cable without a decoder box	31
Projection TV + VCR + cable with a decoder box	34
Projection TV + home theater receiver (A/V receiver).....	37
Projection TV + audio system	39
Projection TV + Mitsubishi products that have A/V Network terminals	40
Chapter 3: Operating Your Projection TV	43
Getting Started	44
Using the remote control	45
Turning the Projection TV on/off.....	49
Selecting the input source	50
Changing channels.....	51
Understanding the on-screen menus	54
Setting the clock	55
Memorizing channels	57
Adding and deleting channels	58
Setting the A/V Network	59
Aligning the colors	60
Renaming the inputs	61
Selecting the menu language ...	62

Using video mute	63
Using the power restore feature	64
Choosing an advanced PIP function	65
Adjusting the sound	66
Adjusting the picture	68
Using the closed caption decoder	70
Using the Advanced Features	72
Setting the timer	73
Using the parental lock	74
Using the Super Quick View tuning	76
Using home theater	77
Chapter 4: Using the Special Features	79
Understanding the On-Screen Displays	80
Using the Off-Timer	81
Setting the off-timer	82
Changing or canceling the off-timer	83
Using the Picture-in-Picture (PIP) Mode	84
Selecting the PIP image	85
Selecting the source	86
Selecting the channel	86
Exchanging the PIP image	87
Moving the PIP image	87
Freezing the PIP image	88
Using the Snap-shot feature	89
Using the Replay feature	90
Using the Active A/V Network Feature	91
Chapter 5: Troubleshooting	95
Using the VCR tray	98
Caution and Care	99
Calling for Service	100
Appendix: Automatic Procedure for the Parental Lock	101
Index	103
Warranty	Inside back cover

IMPORTANT SAFEGUARDS

PLEASE READ ALL THESE INSTRUCTIONS REGARDING YOUR TV RECEIVER AND RETAIN FOR FUTURE REFERENCE. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE TV RECEIVER.

1. Read Instructions
All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions
The safety and operating instructions should be retained for future reference.
3. Heed Warnings
All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions
All operating and use instructions should be followed.
5. Cleaning
Unplug this TV receiver from the wall outlet before cleaning. Use a damp cloth for cleaning.

► **Warning:**

Do not use liquid or aerosol cleaners to clean your TV. Cleaners may permanently damage your screen.

6. Attachments
Do not use attachments not recommended by the TV receiver manufacturer as they may cause hazards.
7. Water and Moisture
Do not use this TV receiver near water — for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories
Do not place this TV receiver on an unstable cart, stand, tripod, bracket, or table. The TV receiver may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the TV receiver. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.



An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. Ventilation
Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the TV receiver and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the TV receiver on a bed, sofa, rug, or other similar surface. This TV receiver should never be placed near or over a radiator or heat register. This TV receiver should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources
This TV receiver should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For TV receivers intended to operate from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization
This TV receiver is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power-Cord Protection
Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. Lightning

For added protection for this TV receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV receiver due to lightning and power-line surges.

14. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

15. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

16. Object and Liquid Entry


Never push objects of any kind into this TV receiver through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the TV receiver.

17. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV receiver, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code, ANSI/NFPA No.70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING

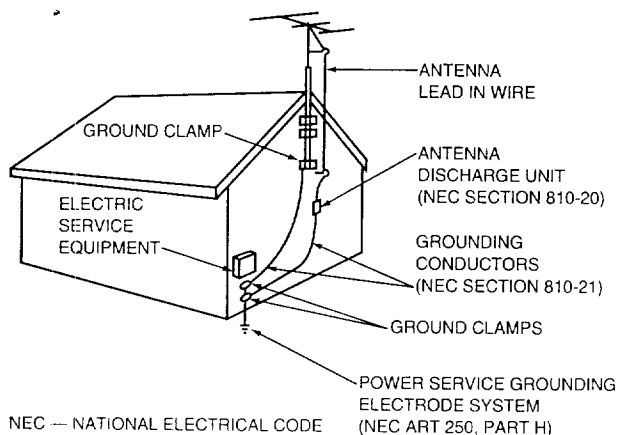

18. Servicing

Do not attempt to service this TV receiver yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. Damage Requiring Service

Unplug this TV receiver from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the TV receiver.
- If the TV receiver has been exposed to rain or water.
- If the TV receiver does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV receiver to its normal operation.
- If the TV receiver has been dropped or the cabinet has been damaged.
- When the TV receiver exhibits a distinct change in performance — this indicates a need for service.

20. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

21. Safety Check

Upon completion of any service or repairs to this TV receiver, ask the service technician to perform safety checks to determine that the TV receiver is in safe operating condition.

►Warning:

Do not leave stationary images, such as stock market reports or video games, on-screen for more than 10 minutes. Still patterns such as these can scar the TV, causing permanent damage to the picture tubes.



Congratulations on your purchase of a Mitsubishi Projection TV. Your Projection TV is designed for superb viewing pleasure as well as continued reliability.

To familiarize you with your Projection TV and owner's guide, we suggest that you read through the preface, which provides the following important information:

- ◆ **Summary of Special Features**
- ◆ **Unpacking Your Projection TV**
- ◆ **What's in Each Chapter**
- ◆ **Some Conventions Used in this Guide**

Mitsubishi has strived to create your Projection TV so that it will bring you years of viewing enjoyment. Similarly, your owner's guide is designed with a "user friendly" philosophy that will help you take advantage of all of your equipment's features.

Once again, thank you for selecting our product and welcome to Mitsubishi!

◆ Summary of Special Features

Your top-rated Mitsubishi Projection TV delivers:

- **181-Channel Capacity** --- programs up to 181 channels, ensuring your continued viewing pleasure as cable services continue to expand.
- **Two-Speaker Sound System** --- a special speaker system that produces clear stereo sound.
- **Expanded Sound Capability** --- allows you to connect the Projection TV to an external audio system for enhanced listening pleasure.

In addition to the standard features found on most advanced Projection TVs, Mitsubishi is proud to offer the following distinctive features:

- **Remote Control with TV/VCR/CABLE Function** --- uses a single remote control transmitter for the television, certain Mitsubishi VCRs, and also some VCRs and cable boxes of other manufacturers.
- **On-Screen Displays** --- appear whenever you adjust your Projection TV, showing you the status of your Projection TV's various functions.
- **On-Screen Menu** --- simplifies the television's features with easy to follow instructions.
- **Closed Caption Decoder** --- supplies you the text information along with the regular broadcasts.
- **Extended Data Services** --- (also known as "XDS,") allows broadcasters to supply you with the time of day, channel information, and program information. You can display this information on-screen.
- **Picture-in-Picture Mode** --- allows you to view two different sources at the same time.
- **Active A/V Network** --- allows you to perform many of the commonly used features of your system at the press of just one button.

Each of these features will be explained in more detail in Chapter 3, "Operating Your Projection TV," and Chapter 4, "Using the Special Features."

◆ Unpacking Your Projection TV

What you will find

As you unpack your new Projection TV, please check to be sure that along with the Projection TV, the following items are included:

- an owner's guide containing a warranty,
- a registration card,
- a remote control transmitter,
- a set of two AA size batteries for the remote control,
- an A/V network cable, and
- a belt to hold your VCR on the VCR tray.
(The VS-6041 does not have a belt or a VCR tray.)

A few suggestions

Before you hook up your new Projection TV, please take a few minutes to:

- ❶ Complete the registration card. The registration card asks for the Projection TV's serial number, which you'll find on the back of the unit.
- ❷ Keep the box and packing materials for future use.
- ❸ File your sales receipt.
- ❹ Place the Projection TV on a stable surface with sufficient lighting to do the hook-up.

◆ What's in Each Chapter

Here's what you will find in this owner's guide:

Chapter 1, "Getting to Know Your Projection TV," introduces you to the location and functions of the buttons and controls of your Projection TV.

Chapter 2, "Connecting Your Projection TV," explains how to connect a VCR, antenna, decoder box and other equipment to your Projection TV.

Chapter 3, "Operating Your Projection TV," provides the step-by-step instructions you need in order to use your Projection TV.

Chapter 4, "Using the Special Features," explains how to use some of the special features of the Projection TV.

Chapter 5, "Troubleshooting," summarizes the problems you may have along with suggestions for remedying these problems.


The appendix explains an automatic procedure for the parental lock.

You'll also find a detailed index at the back of the book.

◆ Some Conventions Used in this Guide

Mitsubishi has gone to great effort to provide users with an easy-to-follow, useful owner's guide. You will find that different types of information are treated in different ways.

Users should read information labeled **Important** and information that is boxed and labeled **Warning**. The owner's guide uses these terms sparingly, and all information highlighted in this manner should be read carefully.

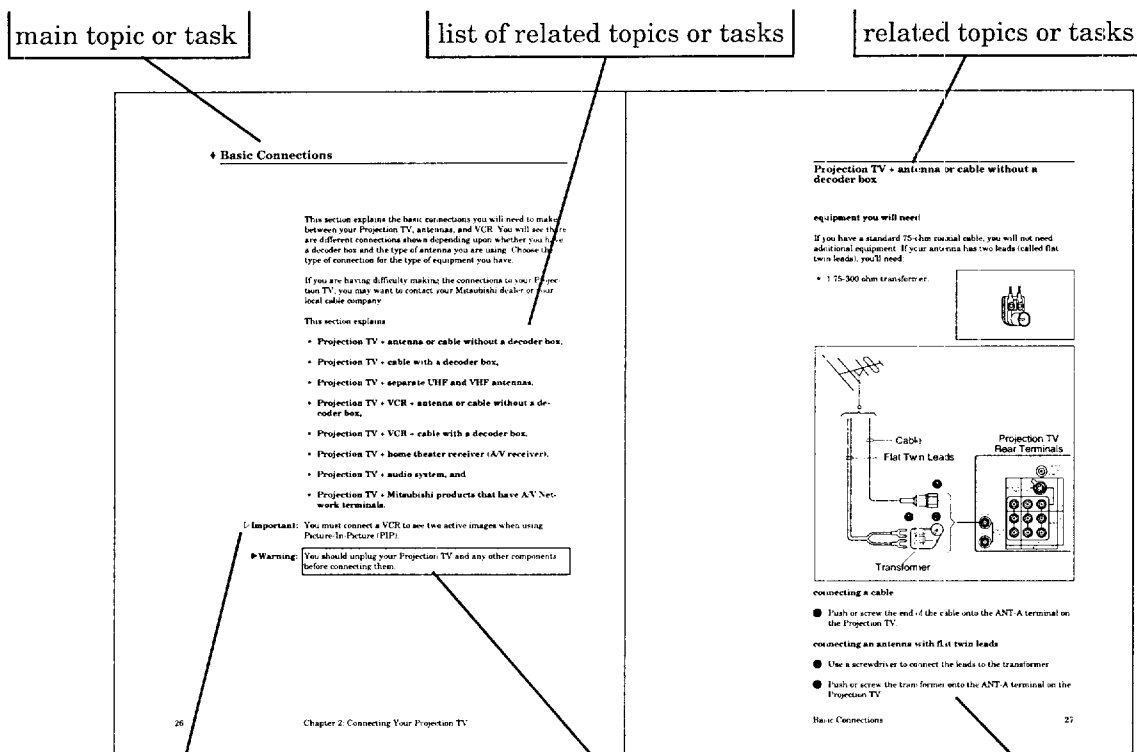

▷ Important:

This cue indicates information critical to the operation of your new Projection TV.

▶ Warning

This cue alerts you to information describing dangerous situations that could ruin your equipment or cause electrical shock.

①, ②, etc.

The step-by-step instructions on how to accomplish a particular task are signaled by white numbers on a black background.




Getting to Know Your Projection TV

Now that you've unpacked your Projection TV, read through the safety information, and glanced at the overview explaining how this owner's guide is organized, it's time to become familiar with the buttons and controls you'll be using when you operate the Projection TV. This chapter will introduce the range of options available when using the buttons on the remote control or on the control panel of the Projection TV. It also offers some general guidelines for using the remote control.

Most functions can be controlled by using either the control panel or the remote control, but certain specialized functions require the use of one or the other. This chapter, which will familiarize you with the full range of button functions, contains the following sections:

- ◆ **Overview of the Control Panel**
- ◆ **Overview of the Remote Control**

◆ Overview of the Control Panel

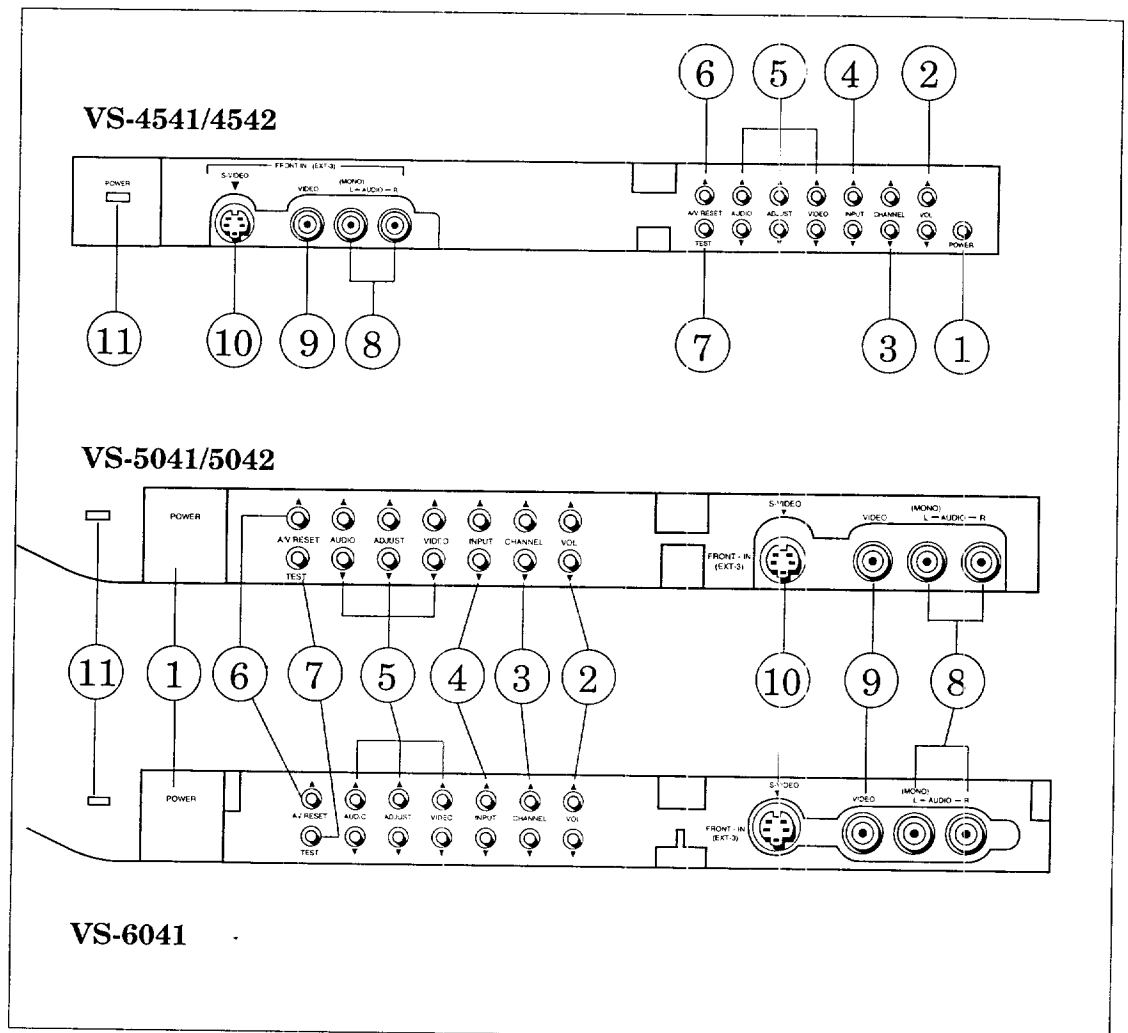

① **power button (POWER)**

Use this button to turn the Projection TV on or off. When you turn the Projection TV on, the power indicator will light in green.

② **volume controls (VOL)**

Press the ▲ button to turn up the volume and the ▼ button to turn down the volume.

③ **channel controls (CHANNEL)**

Use the ▲ button to switch to a channel with a higher number and the ▼ button to switch to a channel with a lower number.

④ **input button (INPUT)**

Use either button to select the input source to be viewed:

- Antenna A,
- Antenna B, or
- External 1, 2 or 3.

⑤ **audio and video controls**

These buttons are used in pairs to adjust features of the image or sound (other than volume) with a two-step process: using the AUDIO or VIDEO buttons to select a function, and then using the ADJUST buttons to adjust the function.

- **audio function button (AUDIO)** --- Use to select one of the following audio functions:
 - stereo/SAP/mono,
 - bass,
 - treble,
 - balance,
 - surround off/simulate/hall,
 - speaker on/off, or
 - monitor out variable/fixed.
- **video function button (VIDEO)** --- Use to select one of the following video functions:
 - tint,
 - color,
 - contrast,
 - brightness,
 - sharpness,
 - notch filter on/off,
 - color temperature high/middle/low, or
 - closed captioning.
- **adjust buttons (ADJUST)** --- After selecting the audio or video function, use either the up or the down button to adjust the function you've selected. These buttons can be used to:
 - turn the function on or off (e.g., notch filter),
 - increase or decrease the function (e.g., color),
 - shift from one end of a scale to the other (e.g., balance), or
 - select a position (e.g., stereo).

The adjust buttons are also used to select an item from the on-screen menu.

Overview of the Control Panel (cont.)


- ⑥ **A/V reset button (A/V RESET)**
Press to reset all audio and video functions to their normal level or setting except for volume, reception mode (Stereo/SAP/Mono), monitor out (variable/fixed) and closed captioning.
- ⑦ **test button**
This button is used to make sure that your Projection TV's three picture tubes are perfectly aligned.
- ⑧ **audio input terminals**
Use to connect the audio output from a VCR or other equipment.
- ⑨ **video input terminal**
Use to connect the video output from a standard VCR or another component to the Projection TV.
- ⑩ **S-VIDEO input terminal**
Use to connect the video output of a Super VHS (S-VHS) VCR to the Projection TV. If you connect S-VHS VCR to this terminal, EXT-3 will automatically be the input for viewing an S-VHS VCR.
- ⑪ **power / program timer indicator**
This indicator lights up in green when you turn the Projection TV on. It lights up in red when the Projection TV is programmed to turn on at a particular time. If the Projection TV is programmed to turn on and is already turned on, the indicator will light up in orange.

◆ Overview of the Remote Control

Getting ready to use the remote control

installing the batteries

- ❶ Take the box containing two AA size batteries from the packing bag.
- ❷ Remove the back cover of the remote control by pushing in the direction of the arrow.
- ❸ Load the batteries as indicated in the illustration, making sure that they are positioned correctly (+ to +, and – to –).
- ❹ Replace the back cover of the remote control.

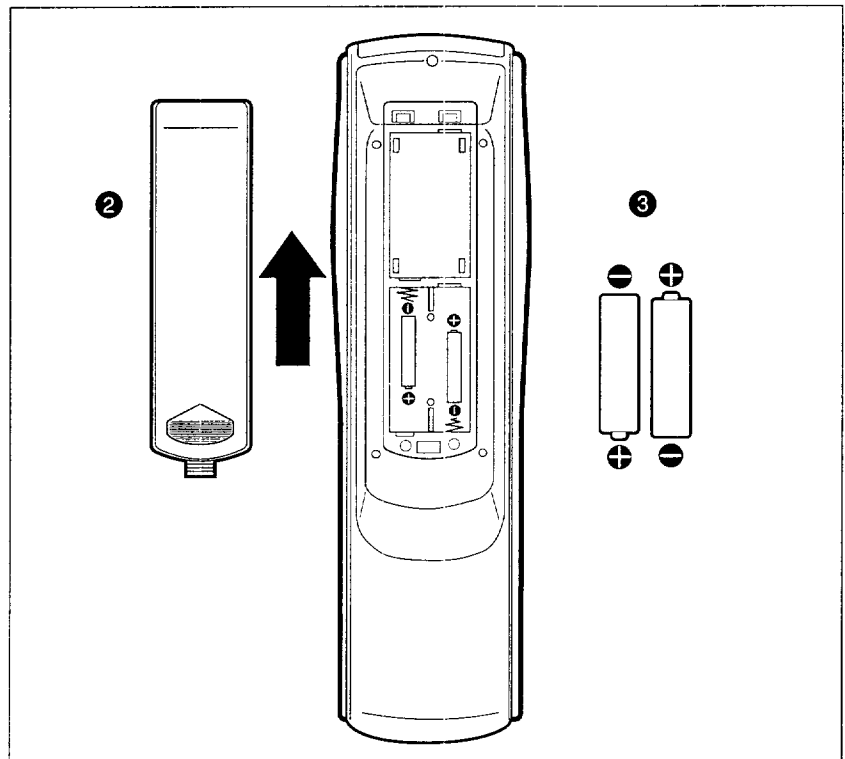

For best results, use Duracell AA (MN1500) batteries.

Getting ready to use the remote control (cont.)

some dos and don'ts

To ensure that your remote control will continue working properly, follow these guidelines:

- Don't press two or more buttons at the same time, unless specifically instructed to do so in this owner's guide.
- Don't allow the remote control to get wet or become heated.
- Avoid dropping the remote control on a hard surface.
- When cleaning the remote control, don't use any harsh chemicals. Use only a soft, slightly moistened cloth.

general instructions

When using the remote control to operate the Projection TV, VCR or cable box, follow these procedures:


- ❶ Be within 20 feet of the desired equipment.
- ❷ Point the top of the remote control toward the equipment.
- ❸ Press the appropriate button or sequence of buttons.

guidelines for using batteries

- Don't use a new battery with an old one.
- Don't heat, take apart, or throw batteries into a fire.

The following section explains more about the range of options available when using the remote control.

Remote control buttons and functions

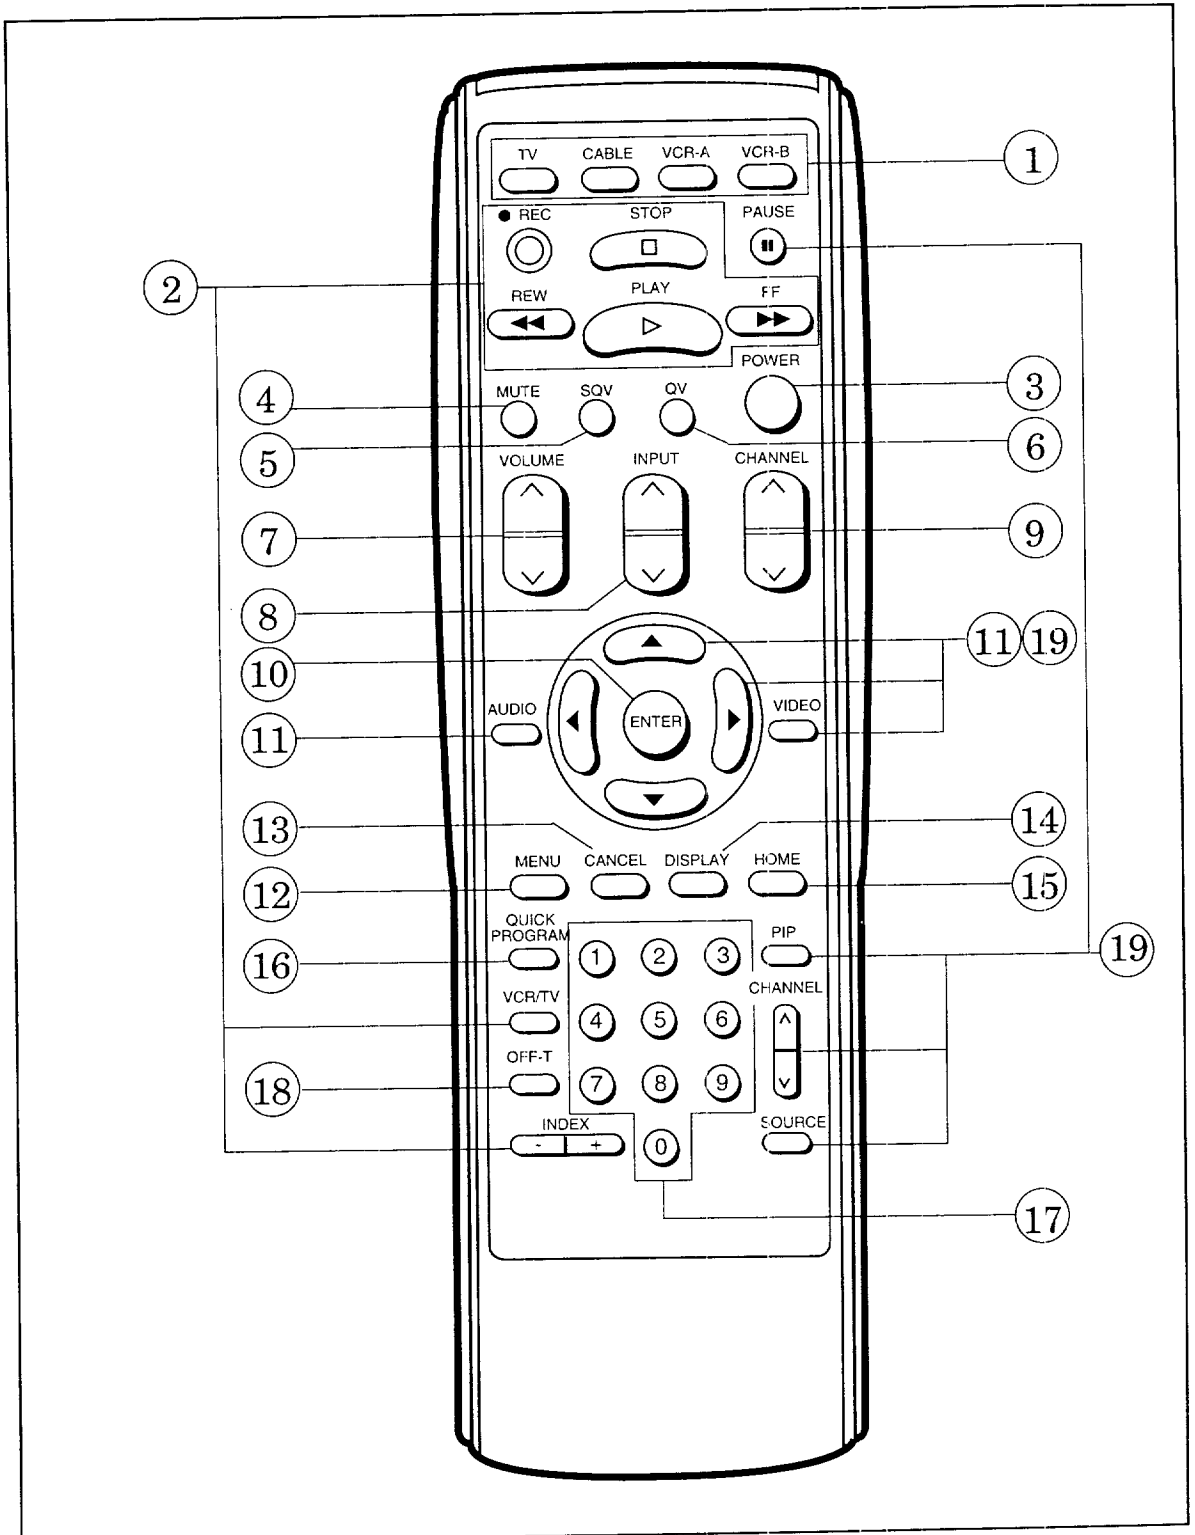

Overview of the Remote Control

Remote control buttons and functions (cont.)

① **select buttons**

Use these buttons to select the component you wish to operate: the Projection TV, a cable box, or a VCR. These are also used to set up your remote control for your particular brand of VCR.

② **VCR buttons**

The remote control is pre-set to operate Mitsubishi VCRs, and it can also operate VCRs from other manufacturers. The PLAY button is also used with the Active A/V Network. (See "Using the Active A/V Network Feature," page 91.)

③ **power button (POWER)**

Use this to turn the Projection TV on or off. When you turn the Projection TV on, the power indicator will light in green.

④ **mute control (MUTE)**

Use this button to turn the sound off completely or restore it to its original volume.

⑤ **super quick view button (SQV)**

Press this button to view the channels that you have programmed into super quick view memory.

⑥ **quick view button (QV)**

Press this button to instantly switch to the channel that you memorized as the quick view channel. (See page 53.)

⑦ **volume control (VOLUME)**

Press the top part of the button to turn up the volume; press the bottom part of the button to turn down the volume.

⑧ **input button (INPUT)**

Use to select the input source you wish to watch:

- Antenna A,
- Antenna B, or
- External 1, 2 or 3.

⑨ **channel control (CHANNEL)**

Press the top part of the button to change to a channel with a higher number; press the bottom part to change to a channel with a lower number.

⑩ **enter button (ENTER)**

Use this button after selecting a channel number or after selecting an item from the on-screen menu system. You will also use this button with the PIP function.

⑪ **audio and video controls**

These buttons are used in pairs to adjust features of the image or sound (other than volume) with a two-step process: using the AUDIO or VIDEO buttons to select a function, and then using the up/down adjust buttons or right/left buttons to adjust it.

- **audio function button (AUDIO)** --- Use to select one of the following audio functions:
 - stereo/SAP/mono,
 - bass,
 - treble,
 - balance,
 - surround,
 - speaker on/off, or
 - monitor out variable/fixed.

- **video function button (VIDEO)** --- Use to select one of the following video functions:
 - tint,
 - color,
 - contrast,
 - brightness,
 - sharpness,
 - notch filter on/off,
 - color temperature high/middle/low, or
 - closed captioning.

- **up/down adjust buttons, right/left buttons** --- After selecting the audio or video function, use either the up (right) or the down (left) button to adjust the function you've selected. These buttons can be used to:
 - turn the function on or off (e.g., notch filter),
 - increase or decrease the function (e.g., color),
 - shift from one end of a scale to the other (e.g., balance), or
 - select a position (e.g., stereo).

You will also use the adjust buttons to select items on the on-screen menus.

⑫ **menu button (MENU)**

Use this button to display the on-screen menu system, which gives you access to your Projection TV's features.

⑬ **cancel button (CANCEL)**

This button is used to cancel a channel number, to erase the parental lock code, to clear a channel from super quick view memory, and to clear the settings of on-screen menus.

Remote control buttons and functions (cont.)

⑭ **display button (DISPLAY)**

Use to view an on-screen summary of the current TV settings and the display related to Extended Data Services (XDS).

⑮ **home button (HOME)**

Press to return to regular TV viewing from the on-screen displays and menus.

⑯ **quick program button (QUICK PROGRAM)**

Use this button to perform automated programming operations with both your Projection TV and your Mitsubishi VCR. When you press this button, your Projection TV will switch to the External-1 input, your VCR will turn on, and the VCR's "Program to record" menu will appear. When you are finished programming your VCR, press this button again; your VCR will turn off and your Projection TV will return to its previous state.

If you press this button while the Projection TV is locked, or while using the television's menus, then the VCR will turn on, but the Projection TV will not switch inputs.

▷ **Important:** You must have connected your VCR with the A/V Network for this feature to work correctly.

⑰ **number buttons (0-9)**

Use these buttons to select a channel number and to enter the parental lock code.

⑱ **off-timer button (OFF-T)**

Use this button to program the Projection TV to turn off automatically at a later time.

① **picture-in-picture controls**

Use these buttons to control the special picture-in-picture (PIP) features.

- **PIP button (PIP)** --- Press this button to begin displaying the reduced PIP image or cancel it. This button can also be used with the Active A/V Network features. (See page 91.)
- **channel button (CHANNEL)** --- Press this button to change the channel of the reduced PIP image.
- **source button (SOURCE)** --- Press this button to switch the source of the reduced PIP image between the TV and the external inputs.
- **pause button (PAUSE)** --- Press this button to freeze the reduced PIP image or to return the image to a “live” picture. You can also use this button with the advanced PIP functions.
- **enter button (ENTER)** --- Press this button to exchange the reduced PIP image and the main image.
- **adjust (up/down) buttons, right/left buttons** --- Press these buttons to move the reduced PIP image on the screen.




Connecting Your Projection TV

This chapter offers step-by-step instructions for completing the most common hook-ups. It contains the following sections:

- ◆ **Overview of the Back Panel**
- ◆ **Basic Connections**

◆ Overview of the Back Panel

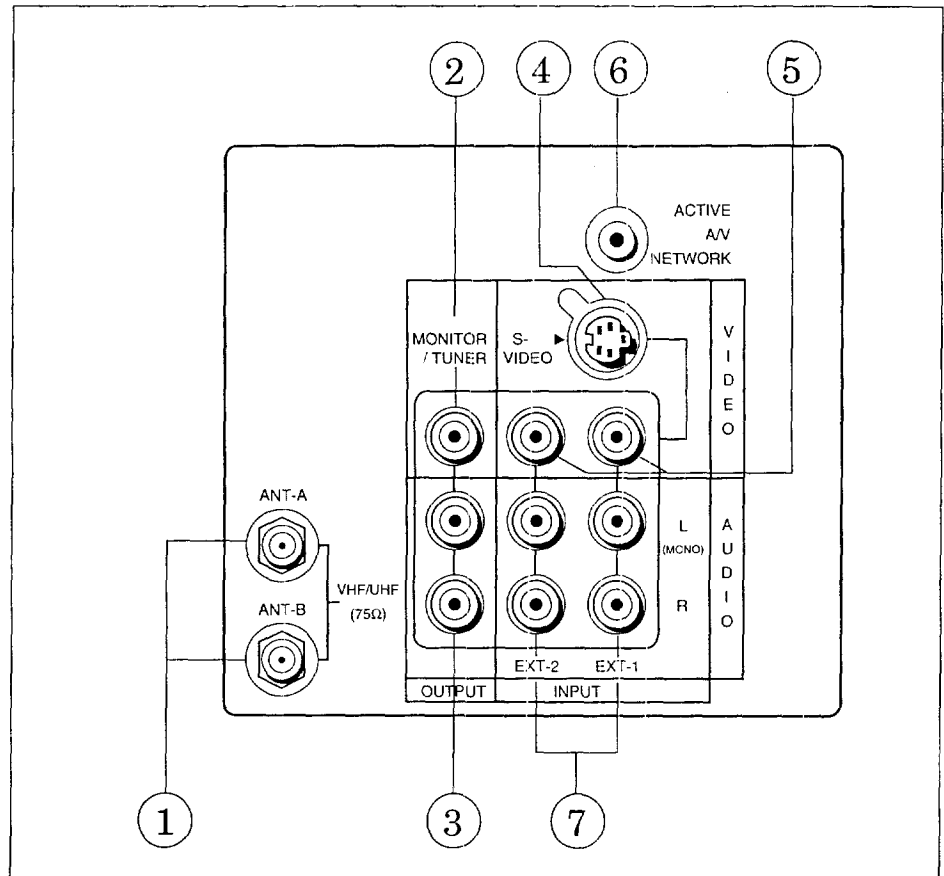

- ① **antenna terminals (ANT-A, ANT-B)**
Connect cable antennas or VHF/UHF antennas here.
- ② **video monitor/tuner output terminal**
Use these terminals to “send out” the TV’s video signal to a VCR, a Home Theater receiver, etc.
- ③ **audio monitor/tuner output terminals**
Use these terminals to “send out” the TV’s audio signal to a VCR, a Home Theater receiver, etc.
- ④ **S-VIDEO input terminal**
Use these terminals to “bring in” a Super VHS (S-VHS) signal from a VCR or disc player into the Projection TV.

▷ **Important:** If you connect Super VHS equipment, EXT-1 will automatically be the input for viewing your VCR.

- ⑤ **video input terminals**
Use these terminals to “bring in” a video signal from a VCR or another component into the Projection TV.
- ⑥ **Active A/V Network terminal**
Use this terminal to connect Mitsubishi products that have A/V network terminals.
- ⑦ **audio input terminals**
Use these terminals to “bring in” an audio signal from a VCR or other equipment into your Projection TV.

◆ Basic Connections

This section explains the basic connections you will need to make between your Projection TV, antennas, and VCR. You will see there are different connections shown depending upon whether you have a decoder box and the type of antenna you are using. Choose the type of connection for the type of equipment you have.

If you are having difficulty making the connections to your Projection TV, you may want to contact your Mitsubishi dealer or your local cable company.

This section explains:

- **Projection TV + antenna or cable without a decoder box,**
- **Projection TV + cable with a decoder box,**
- **Projection TV + separate UHF and VHF antennas,**
- **Projection TV + VCR + antenna or cable without a decoder box,**
- **Projection TV + VCR + cable with a decoder box,**
- **Projection TV + home theater receiver (A/V receiver),**
- **Projection TV + audio system, and**
- **Projection TV + Mitsubishi products that have A/V Network terminals.**

▷ **Important:** You must connect a VCR to see two active images when using Picture-In-Picture (PIP).



▶ **Warning:** You should unplug your Projection TV and any other components before connecting them.

Projection TV + antenna or cable without a decoder box

equipment you will need

If you have a standard 75-ohm coaxial cable, you will not need additional equipment. If your antenna has two leads (called flat twin leads), you'll need:

- 1 75-300 ohm transformer.

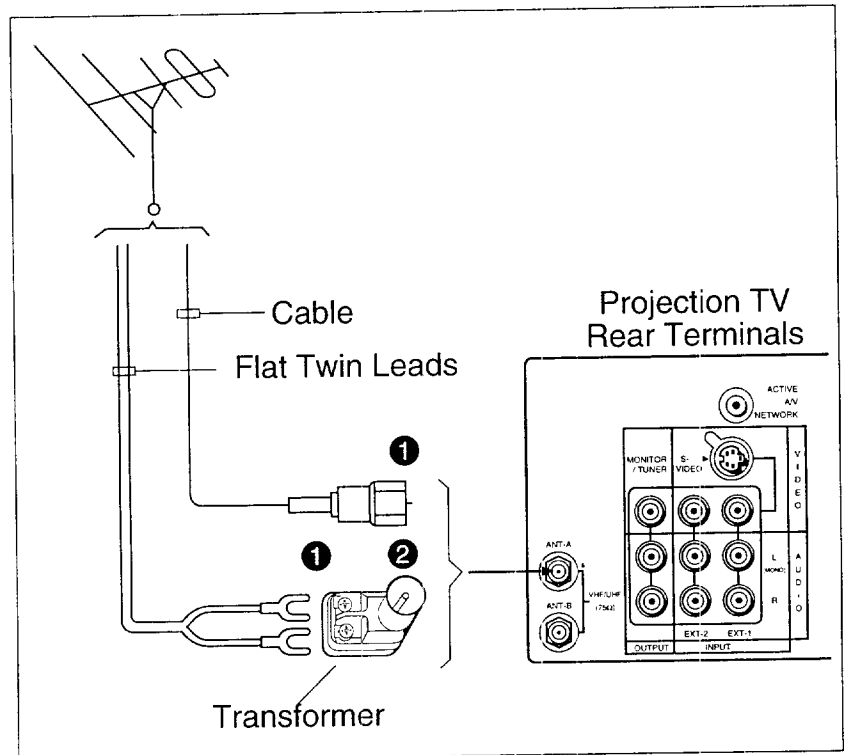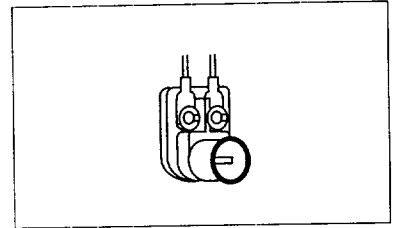

connecting a cable

- 1 Push or screw the end of the cable onto the ANT-A terminal on the Projection TV.

connecting an antenna with flat twin leads

- 1 Use a screwdriver to connect the leads to the transformer.
- 2 Push or screw the transformer onto the ANT-A terminal on the Projection TV.


Projection TV + cable with a decoder box

equipment you will need


Use this hook-up if you do not need a decoder box to descramble basic cable channels, but you need a decoder box to descramble premium cable channels. This hook-up will allow you to use your Projection TV's advanced channel changing features, such as super quick view, while watching basic cable channels.

To complete the hook-up, you'll need:

- 1 two-way splitter, and

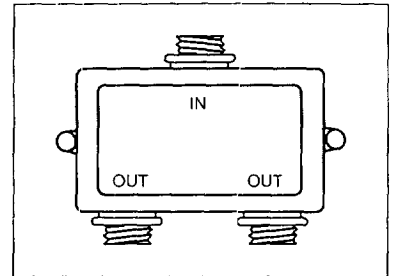


- 3 lengths of 75-ohm coaxial cables.

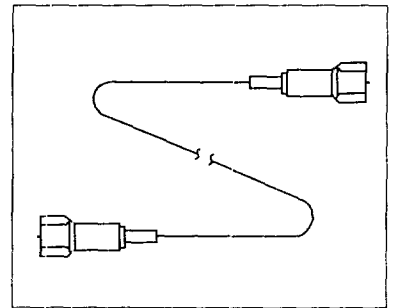

Procedure

- ➊ Connect the incoming cable to the IN terminal on the two-way splitter.
- ➋ Connect a coaxial cable to one of the OUT terminals on the splitter; connect the other end of this cable to the ANT-A terminal on the back of the Projection TV.
- ➌ Connect the second coaxial cable to the second OUT terminal on the splitter; connect the other end of this cable to the IN terminal on the decoder box.
- ➍ Connect the third coaxial cable to the OUT terminal on the back of the decoder box, and the other end of this cable to the ANT-B terminal on the back of the Projection TV.

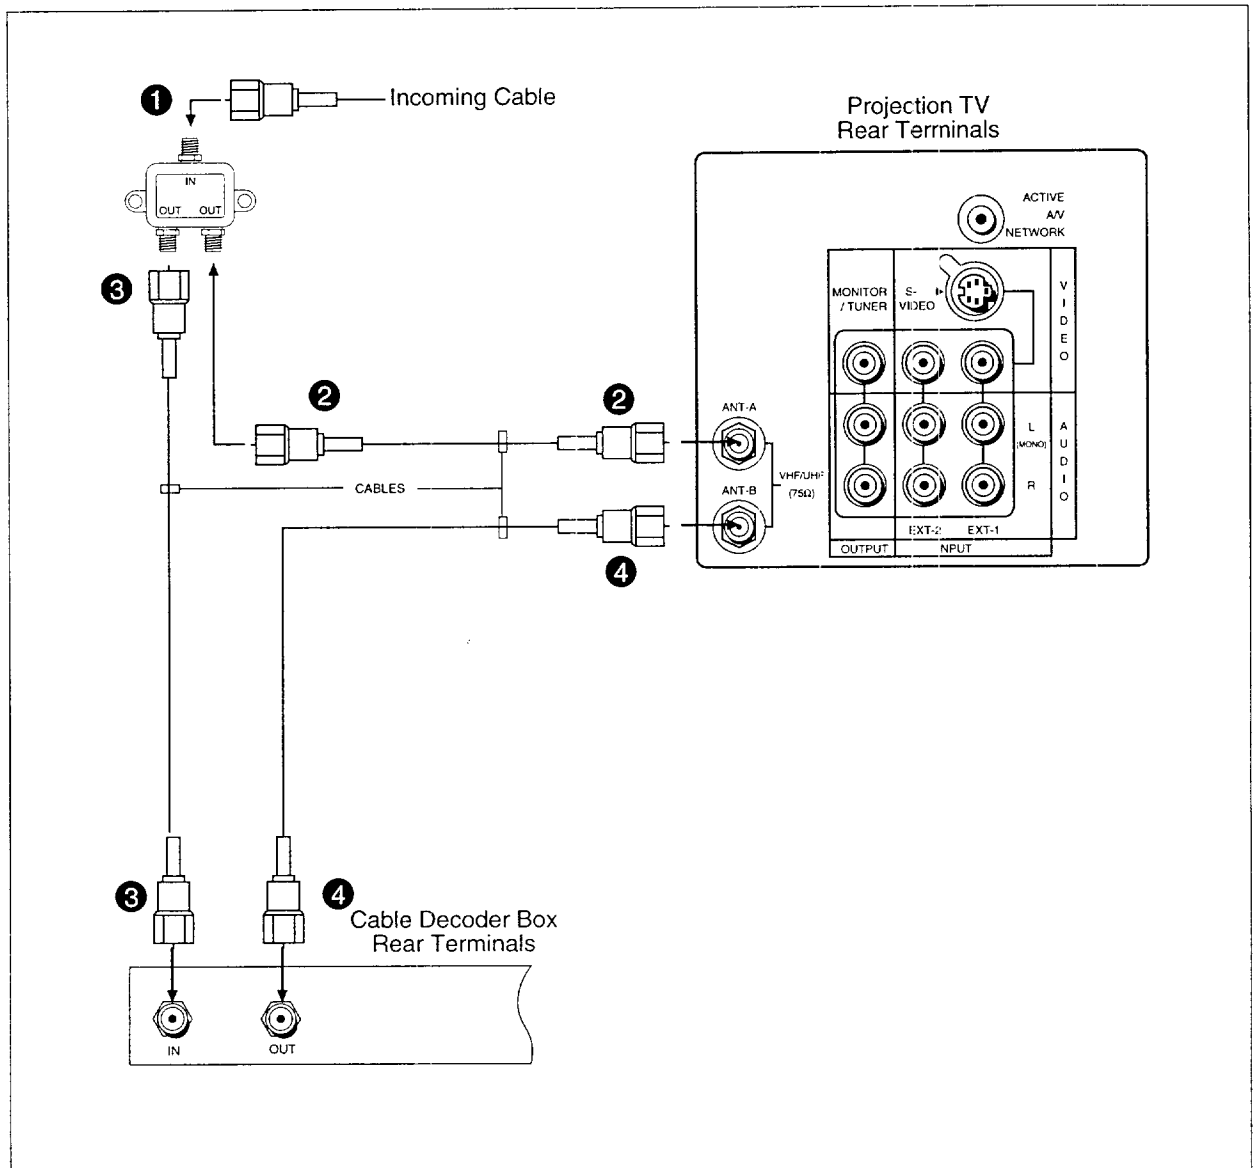


Projection TV + separate UHF and VHF antennas

equipment you will need


If UHF and VHF signals are brought into your home with two separate antennas, you'll need to combine the antennas in order to connect them to the Projection TV. To do this you will need a UHF/VHF combiner. (There are different combiners for different kinds of leads. Check with your local electronics store for the kind of combiner you need.)

- Pictured to the right is a standard combiner.

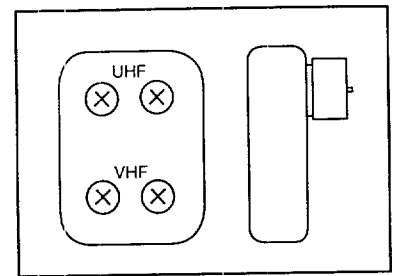

To connect separate UHF and VHF antennas to your Projection TV:

- 1 Connect the antenna leads to the UHF/VHF combiner.
- 2 Press the combiner onto the ANT-A terminal on the Projection TV.

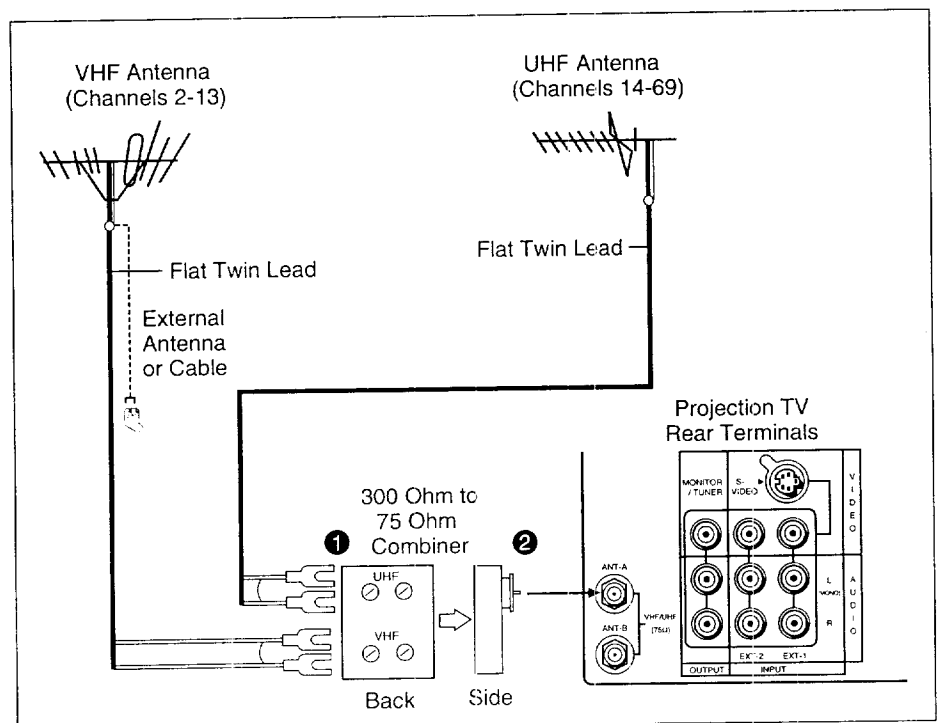


Projection TV + VCR + antenna or cable without a decoder box


equipment you will need

You may want to connect a VCR along with your antennas or cable. To complete this hook-up, you may need the following equipment:


- 1 length of coaxial cable,

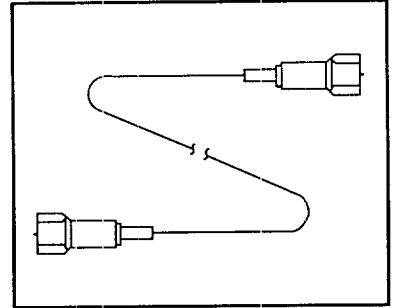


- 1 set of RCA pin-type audio cables,

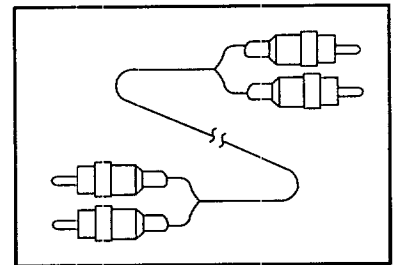

- 1 RCA pin-type video cable, (if connecting a standard VCR), or

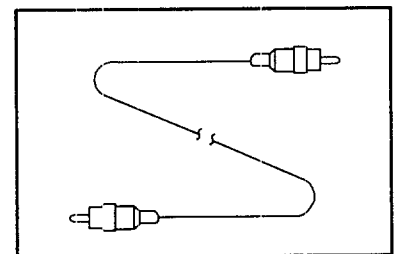

- 1 Super Video cable (S-VHS) for Super VHS VCRs.

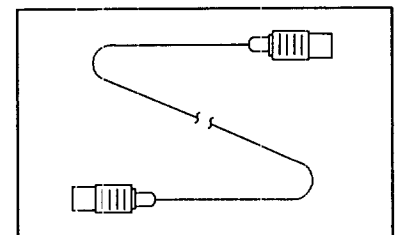

Projection TV + VCR + antenna or cable without a decoder box (cont.)

procedure

- ❶ Connect the incoming cable or antenna to the ANTENNA IN terminal on the VCR.
- ❷ Connect one end of a coaxial cable to the ANTENNA OUT terminal on the VCR.
- ❸ Connect the other end of the cable to the ANT-A terminal on the Projection TV.
- ❹ Connect an RCA pin-type video cable to the VIDEO OUT terminal on the back of the VCR. Connect the other end of this cable to the VIDEO INPUT terminal on the back of the television.

▷ **Important:** If you are connecting a Super VHS (S-VHS) VCR, use a Super Video cable instead of an RCA pin-type video cable. Connect a Super Video cable to the S-VIDEO OUT terminal on the VCR. Connect the other end of this cable to the S-VIDEO INPUT terminal on the back of the Projection TV.


- ❺ Connect a set of RCA pin-type audio cables to the AUDIO OUT terminals on the back of the VCR. Use the red cable to connect the right (R) channel and the white cable for connecting the left (L) channel.

- ❻ Connect the other ends of this cable to the AUDIO INPUT terminals on the back of the Projection TV.

▷ **Important:** If your VCR is monaural (non-stereo), you only need to connect a single RCA pin-type audio cable. Connect the cable to the VCR, then connect the other end to the L (LEFT) audio input on the back of the Projection TV.

▷ **Important:** If your VCR has a video channel switch, set it to "OFF/AV." See your VCR's owner's guide for details.

- ❼ Start playing a tape on your VCR.
- ❽ Use the INPUT button on your Projection TV's remote control to select the correct input. If you connected the VCR to EXT-1, select EXT-1; if you connected the VCR to EXT-2, select EXT-2.

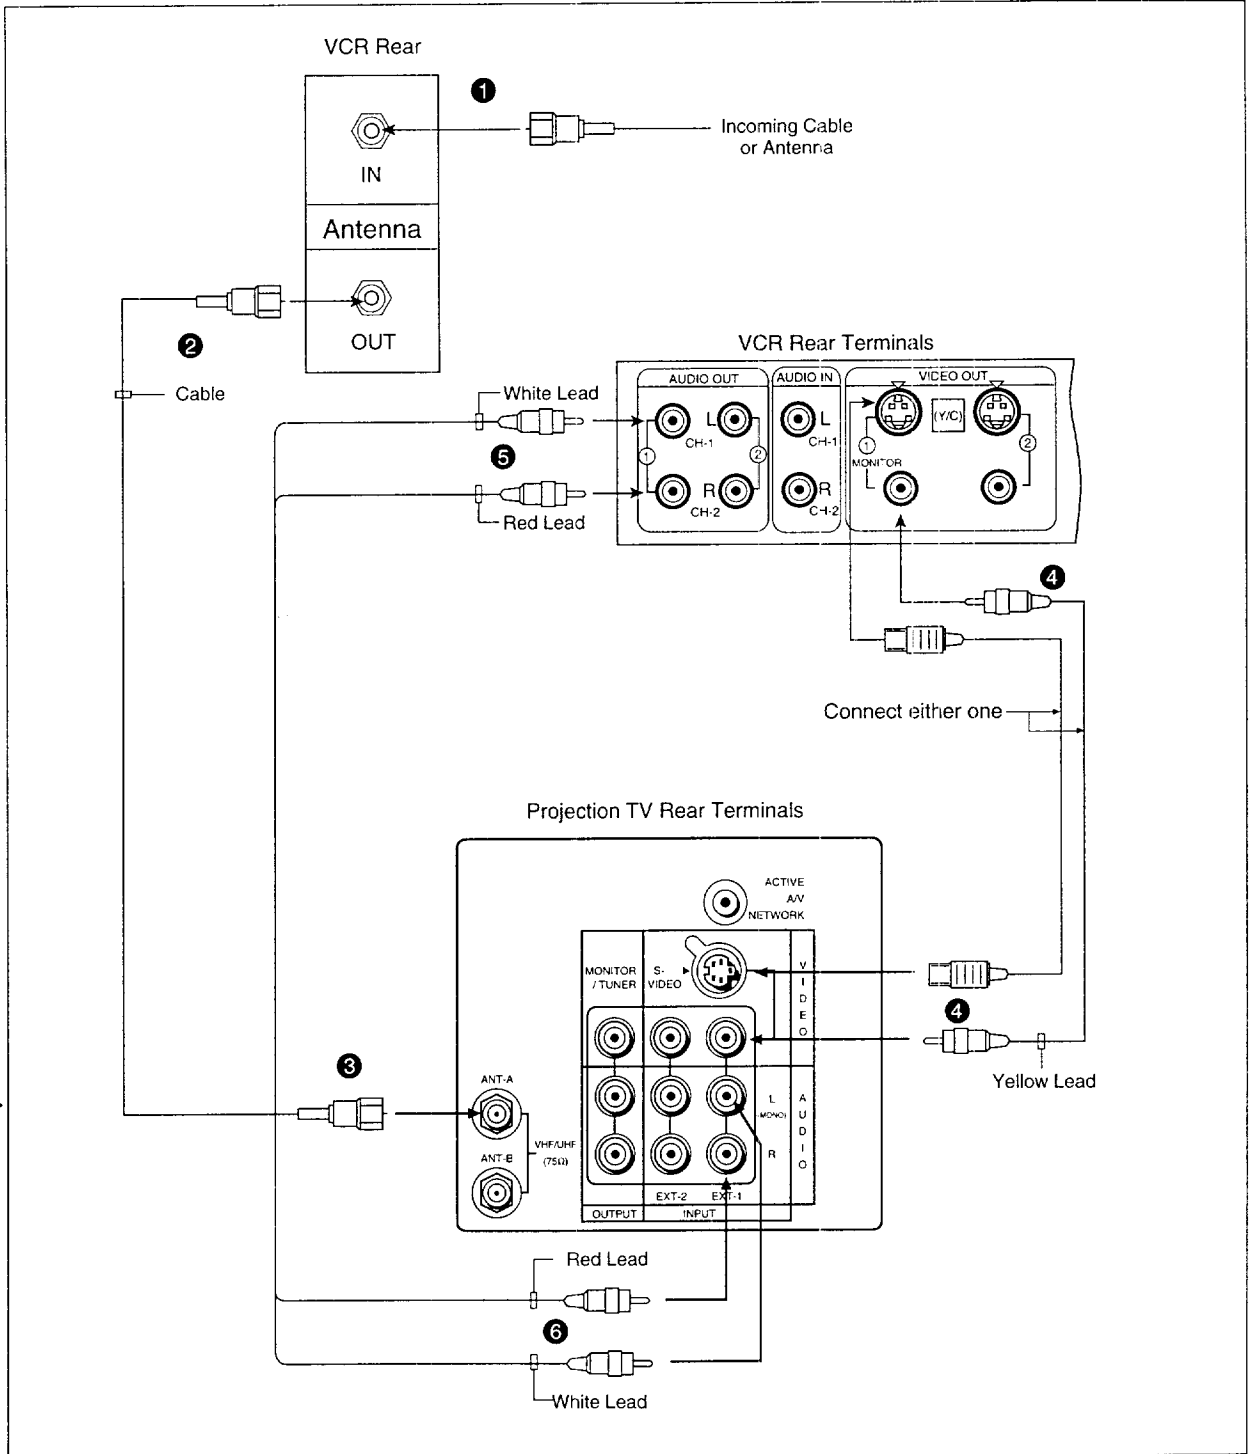






Projection TV + VCR + cable with a decoder box

equipment you will need

This hook-up will allow you to record scrambled channels while viewing another channel.

To complete the hook-up, you will need:

- 4 lengths of coaxial cable,
- 1 two-way splitter,
- 1 set of RCA pin-type audio cables,
- 1 RCA pin-type video cable, (if connecting a standard VCR), or
- 1 Super Video cable (S-VHS) for Super VHS VCRs.

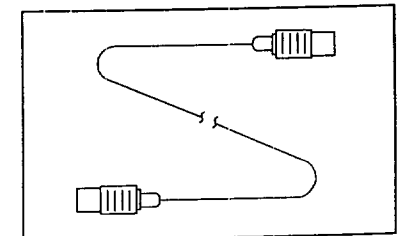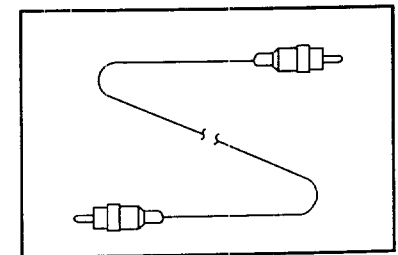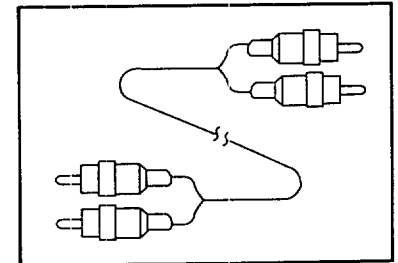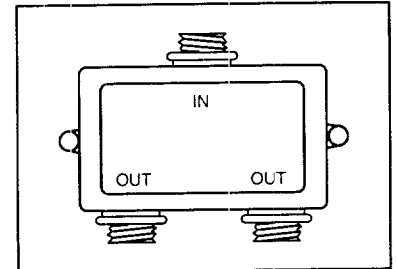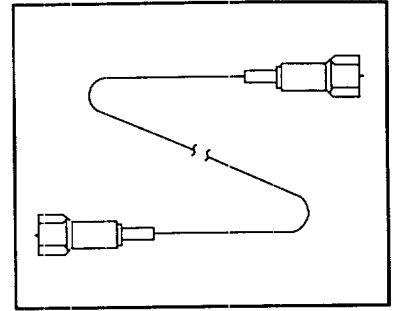

procedure

(See illustration on the following page.)

- ❶ Connect the incoming cable to the IN terminal on the two-way splitter.
- ❷ Connect a coaxial cable to one of the OUT terminals on the splitter, connect the other end of this cable to the ANT-A terminal on the back of the Projection TV.
- ❸ Connect a second coaxial cable to the other OUT terminal on the splitter; connect the other end of this cable to the IN terminal on the decoder box.
- ❹ Connect the third coaxial cable to the OUT terminal on the back of the decoder box; connect the other end of this cable to the ANTENNA-IN terminal on the back of the VCR.
- ❺ Connect the fourth coaxial cable to one of the ANTENNA-OUT terminals on the back of the VCR. Connect the other end of this cable to the ANT-B terminal on the back of the Projection TV.
- ❻ Connect an RCA pin-type video cable to the VIDEO OUT terminal on the back of the VCR. Connect the other end to the VIDEO INPUT terminal on the back of the Projection TV.

➤ **Important:** If you are connecting a Super VHS (S-VHS) VCR, use a Super Video cable instead of an RCA pin-type video cable. Connect a Super Video cable to the S-VIDEO OUT terminal on the VCR. Connect the other end of this cable to the S-VIDEO INPUT terminal on the back of the Projection TV.


- ❼ Connect a set of RCA pin-type audio cables to the AUDIO OUT terminals on the back of the VCR. Use the red cable to connect the right (R) channel and the white cable for connecting the left (L) channel.
- ❽ Connect the other ends of this cable to the AUDIO INPUT terminals on the back of the Projection TV.

➤ **Important:** If your VCR is monaural (non-stereo), you will only connect a single RCA pin-type audio cable. Connect the cable to the VCR, then connect the other end to the L (LEFT) audio input on the back of the Projection TV.

➤ **Important:** If your VCR has a video channel switch, set it to "OFF/AV." See your VCR's owner's guide for details.

Projection TV + VCR + cable with a decoder box (cont.)

- 9 Start playing a tape on your VCR.
- 10 Use the INPUT button on your Projection TV's remote control to select the correct input. If you connected the VCR to EXT-1, select EXT-1; if you connected the VCR to EXT-2, select EXT-2.

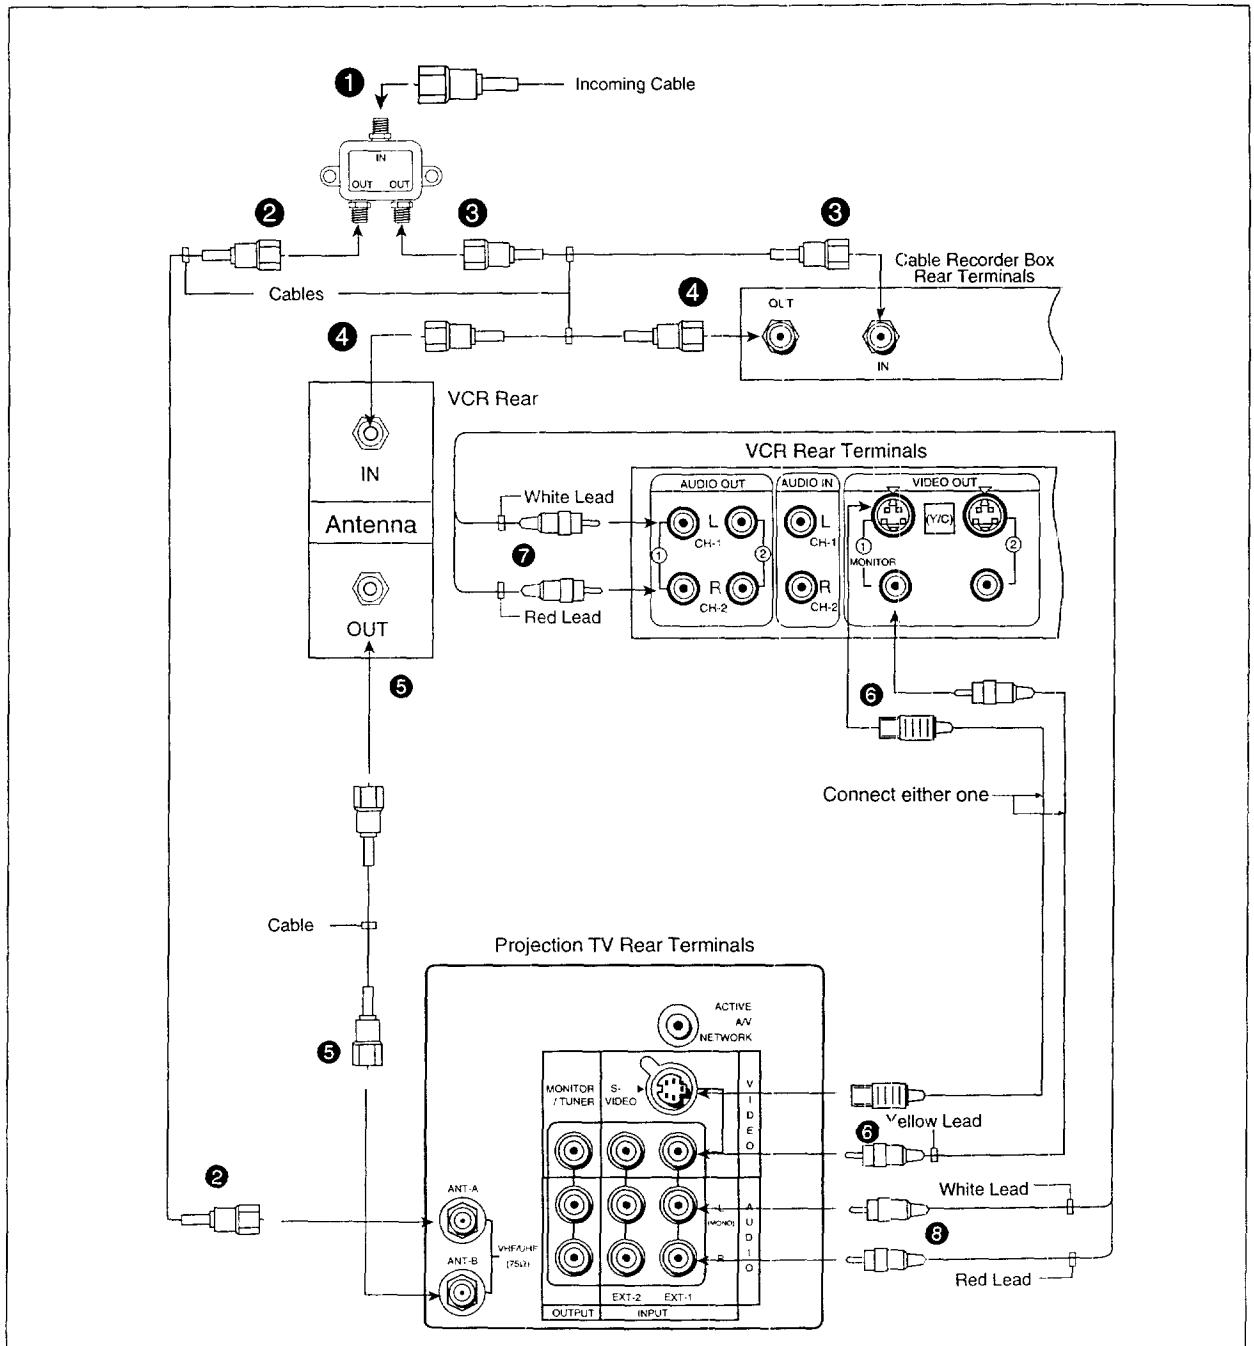


Projection TV + home theater receiver (A/V receiver)


equipment you will need

To hook up a home theater receiver, you will need:


- 1 set of RCA pin-type audio cables,

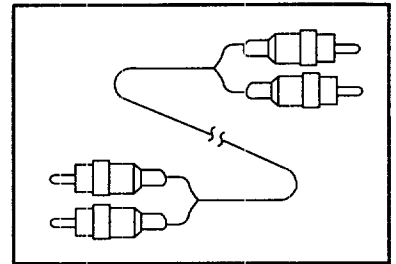

- 2 RCA pin-type video cables (if connecting a standard VCR), or

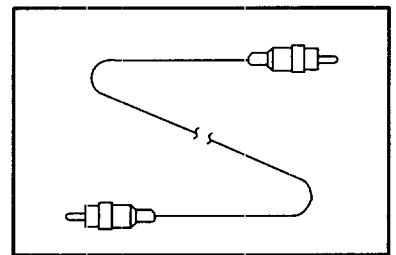

- 1 Super Video cable (S-VHS) and 1 RCA pin-type video cable for a Super VHS home theater receiver.

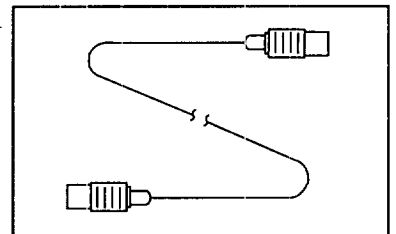

procedure


(Please see the illustration on the next page.)

- ➊ Connect one end of a video cable to the TV VIDEO INPUT terminal of the home theater receiver. Connect the other end of this cable to the VIDEO TUNER OUTPUT terminal on the back of the Projection TV.
- ➋ Connect one end of a video cable to the VIDEO OUTPUT terminal of the home theater receiver. Connect the other end of this cable to the EXT-1 VIDEO INPUT terminal on the back of the Projection TV.

▷ **Important:** If you are connecting a Super VHS (S-VHS) VCR, connect a Super Video cable to the S-VIDEO OUTPUT terminal of the home theater receiver. Connect the other end of this cable to the EXT-1 S-VIDEO INPUT terminal on the back of the Projection TV.

Projection TV + home theater receiver (A/V receiver) (cont.)

- 3 Connect a set of audio cables to the TV AUDIO INPUT terminal of the home theater receiver. Use the red cable to connect the right (R) channel and the white cable for connecting the left (L) channel.
- 4 Connect the other ends of this cable to the left and right AUDIO TUNER OUTPUT terminals on the back of the Projection TV.

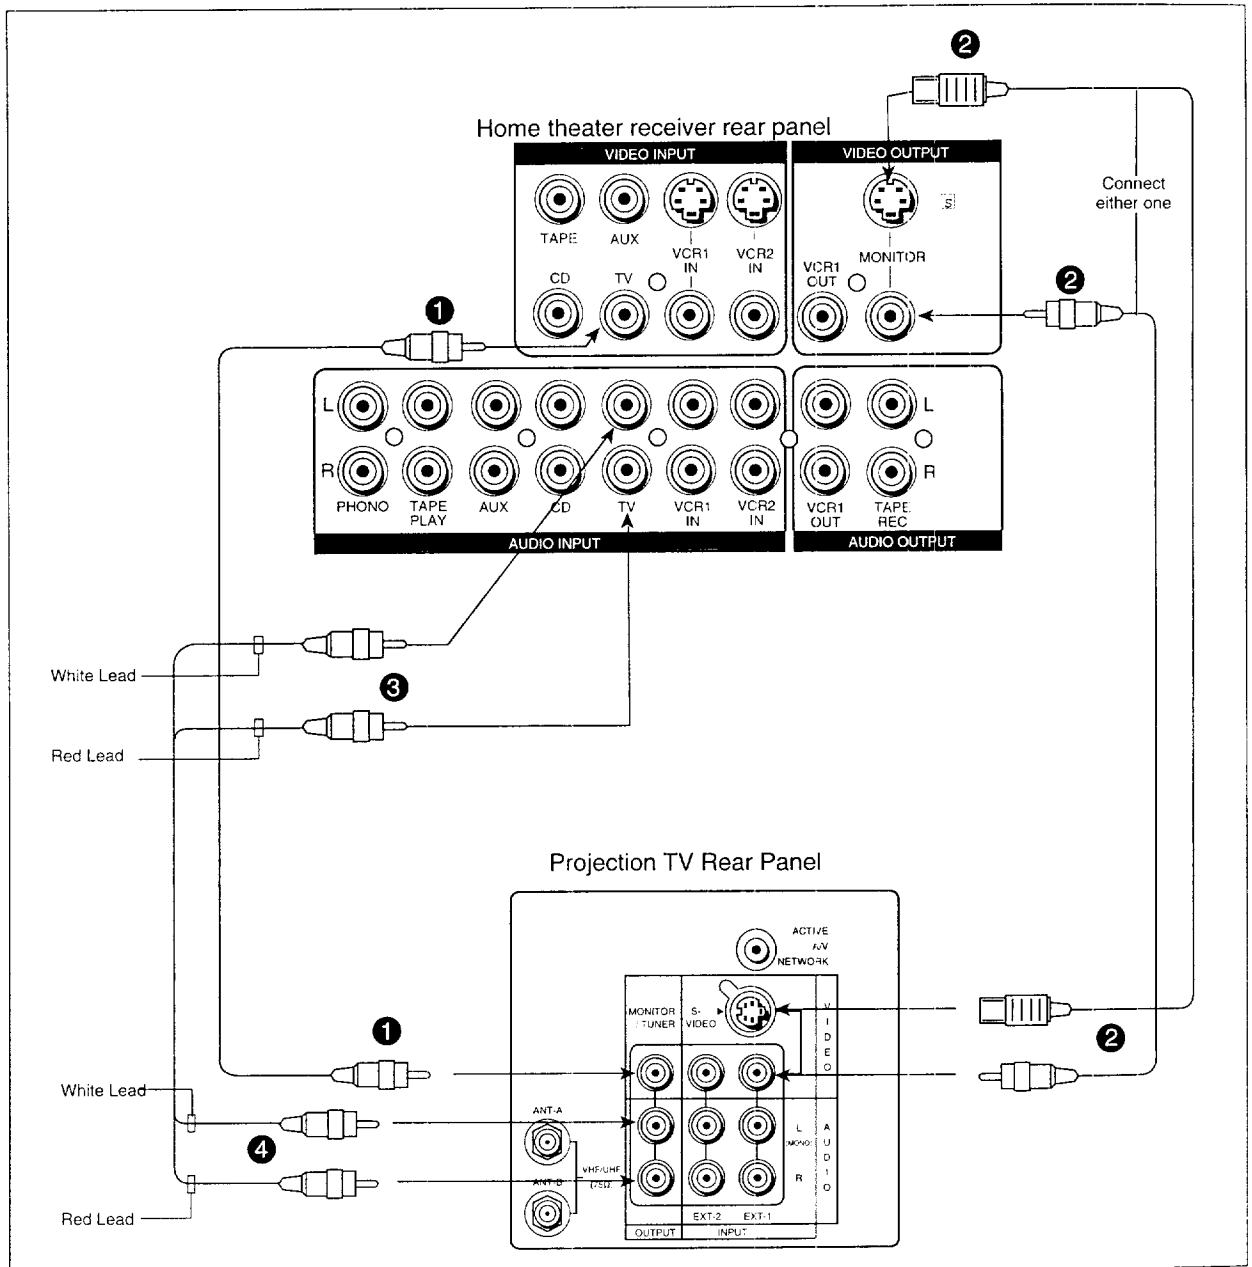

Projection TV + audio system



equipment you will need

To hook up an audio system, you will need:

- 1 set of RCA pin audio cables.

procedure

- 1 Connect the audio cables to the **AUDIO MONITOR OUTPUT** terminals on the back of the Projection TV. Use the red cable to connect the right (R) channel and the white cable to connect the left (L) channel.
- 2 Connect the other ends of these cables to the **AUX IN** terminals on the back of the audio system.
- 3 Turn off the television's speakers. To do this, press the **AUDIO** function button on the control panel or remote control until you see the **SPEAKER** display. Set the speakers to "External" by pressing the adjust (up/down) or right/left buttons. See "Adjusting the sound," page 66.
- 4 Set the audio system's input to the **AUX** position.

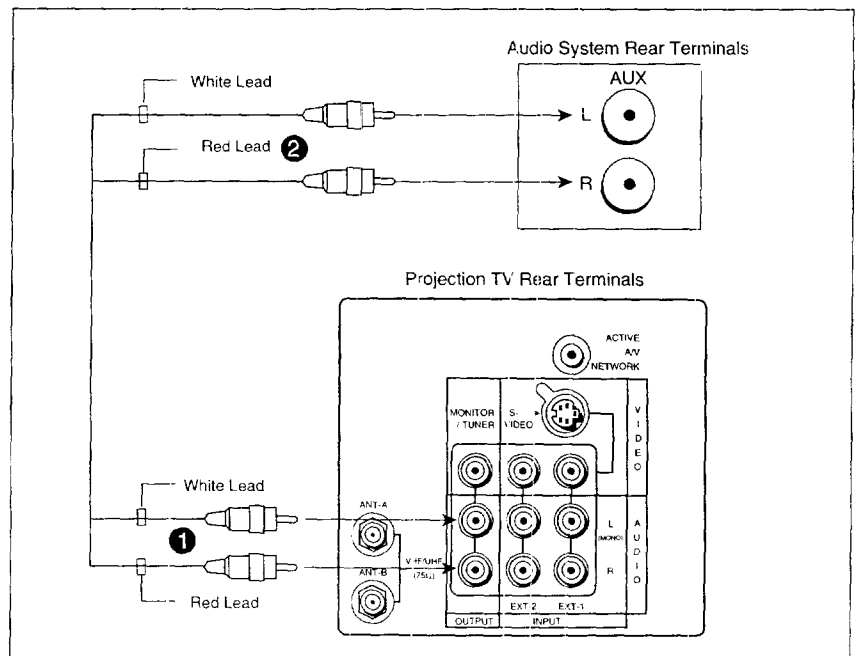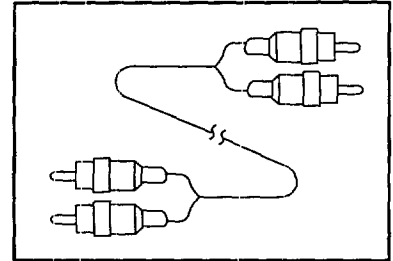


Projection TV + Mitsubishi products that have A/V Network terminals

The A/V Network is a special system that Mitsubishi developed to make it easier to use many products together. When the supplied cable is connected between two Mitsubishi products with the A/V Network, you can point the remote control at one product and it will “pass” the remote control command to the other.

equipment you will need


- 1 A/V network cable (included with the Projection TV).

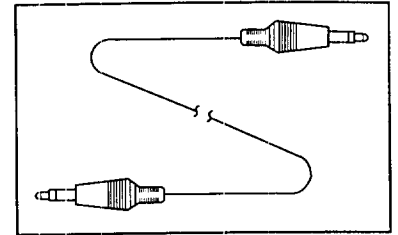

procedure

- ❶ Connect one end of an A/V network cable to the ACTIVE A/V NETWORK terminal on the back of the Projection TV.
- ❷ Connect the other end of this cable to the A/V NETWORK IN terminal on the back of a Mitsubishi component that has A/V network terminals.
- ❸ You can now point your component remote (such as a VCR remote) directly at the television. The A/V cable will “pass” the remote commands to the component.

> **Important:** The method of connecting the A/V network can change, depending on which components you have and the way you plan to use your equipment. More detailed information is contained in the owner’s guide of each particular Mitsubishi component.

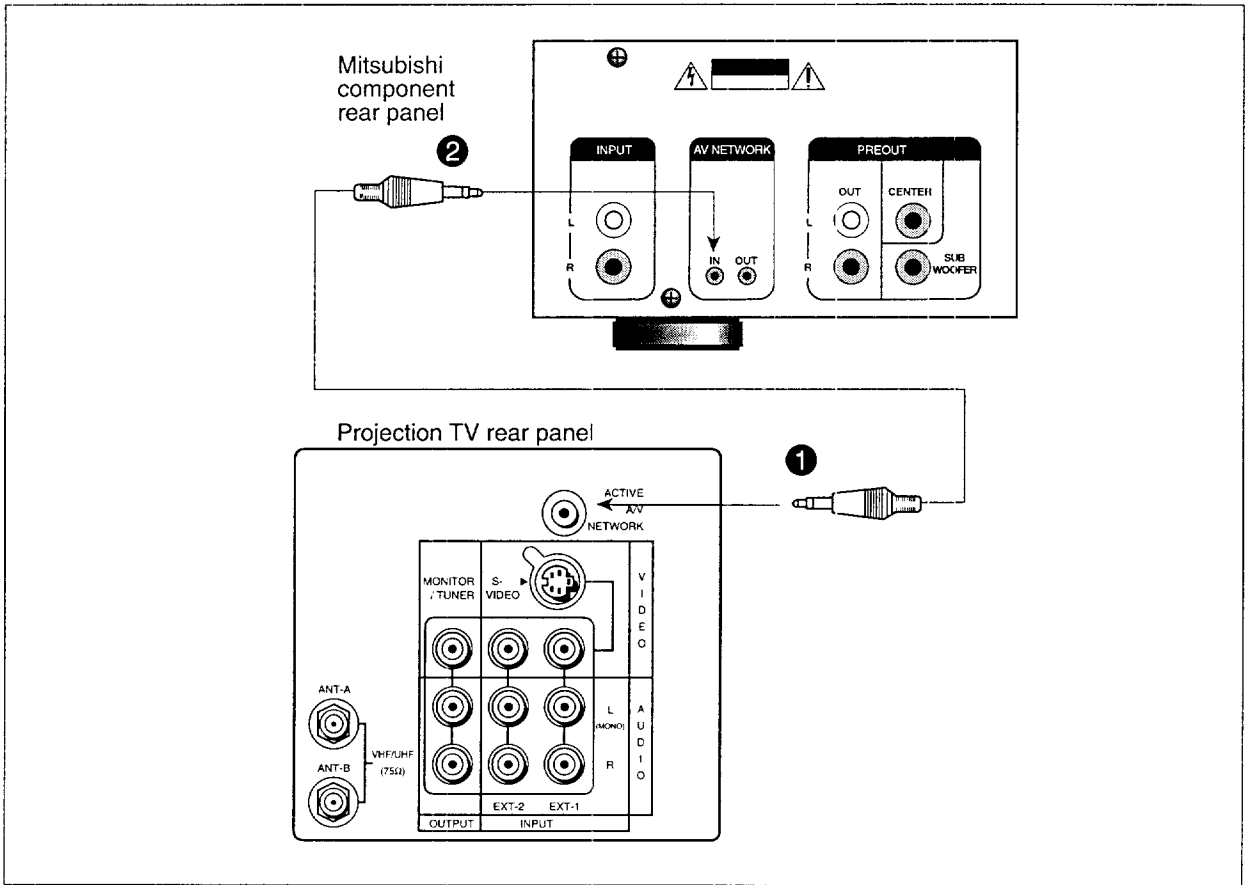



Operating Your Projection TV

Now that your Projection TV is connected to the cable, antenna, or external components, it's time to enjoy your equipment. This chapter will explain how to operate the Projection TV, first focusing on functions that are basic and easy and then explaining some advanced features.

This chapter explains:

- ◆ **Getting Started**
- ◆ **Using the Advanced Features**

◆ Getting Started

This section is designed to get you started enjoying your new Projection TV. If you follow these procedures one by one, you will soon begin discovering everything your television can do.

You'll find information on:

- **Using the remote control,**
- **Turning the Projection TV on/off,**
- **Selecting the input source,**
- **Changing channels,**
- **Understanding the on-screen menus,**
- **Setting the clock,**
- **Memorizing channels,**
- **Adding and deleting channels,**
- **Setting the A/V Network,**
- **Aligning the colors,**
- **Renaming the inputs,**
- **Selecting the menu language,**
- **Using video mute,**
- **Using the power restore feature,**
- **Choosing an advanced PIP function,**
- **Adjusting the sound,**
- **Adjusting the picture, and**
- **Using the closed caption decoder.**

Using the remote control

operating Mitsubishi components

Your remote control unit comes programmed to operate Mitsubishi Projection TVs and VCRs. The select buttons (across the top of the remote control) determine which component the remote control will operate.

The following buttons are available when using this Projection TV:

- power button
- pause button
- mute control
- super quick view button
- quick view button
- volume control
- input button
- channel control
- enter button
- audio and video controls
- menu button
- cancel button
- display button
- home button
- off-timer button
- number buttons
- PIP controls
- PLAY button
- quick program button

operating VCRs or cable boxes from other manufacturers

The remote control is pre-set to operate Mitsubishi VCRs, but it can also operate VCRs from other manufacturers as well. If you have a VCR from another manufacturer, or if you have a cable box, you should “set up” the remote control.

Each layer (CABLE, VCR-A or VCR-B) can be set for either a cable box or a VCR.

setting up the remote control to operate your VCR

- ① Turn off your VCR.
- ② Press one of the select buttons across the top of the remote control to choose the layer that you want to “set up.” You can choose between VCR-A, VCR-B or CABLE.
- ③ While holding in the POWER button on the remote control, enter the code number listed in the chart on the following page for your brand of VCR. Be sure to enter both digits of the code number. If more than one number is listed, try the first one.
- ④ Release the POWER button.
- ⑤ Press the POWER button again. Your VCR should turn on. If the VCR turns on, your remote control is now set to operate your VCR.

Using the remote control (cont.)

If your VCR does not turn on, repeat the instructions, trying each code number listed for your brand of VCR. If none of these code numbers work, try each number, 01 through 20.

If your VCR is this brand...	...enter this code	If your VCR is this brand...	...enter this code
Mitsubishi (A)	01	Philips	03, 10, 11
Mitsubishi (B)	02	Quasar	03
Canon	03	RCA	08, 13, 20
Emerson	04, 05	Sanyo	14
Funai	06	Scot	15
GE	03	Sharp	16
Goldstar	07	Sony	17, 18
Hitachi	08	Sylvania	03, 10, 11
JVC	09	Symphonic	06
Magnavox	03, 10, 11	Teknika	04, 06
Multitech	06	Toshiba	15
NEC	12	Totevision	07
Panasonic	03	Zenith	19
Philco	03, 10		

setting up the remote control to operate your cable box

- ❶ Turn off your cable box.
- ❷ Press one of the select buttons across the top of the remote control to choose the layer that you want to "set up." You can choose between VCR-A, VCR-B or CABLE.
- ❸ While holding in the POWER button on the remote control, enter the code number listed in the chart on the following page for your brand of cable box. Be sure to enter both digits of the number. If more than one number is listed, try the first one.
- ❹ Release the POWER button.
- ❺ Press the POWER button again. Your cable box should turn on. If the cable box turns on, your remote control is now set to operate your cable box.

If your cable box does not turn on, repeat the instructions above, trying each number listed for your brand of cable box. If none of these numbers work, try each number, 51 through 99.

If your cable box is this brand...	...enter this code	If your cable box is this brand...	...enter this code
Zenith	51	Tocom	67, 68, 72
Hamlin	52, 53, 69	Panasonic	63, 70
Jerrold	54, 57, 58, 59, 60, 85, 87	Macom	71
G.I.	55, 56	Philips	73, 74, 75, 76, 77, 93, 94, 95, 96, 97, 98, 99
Oak	61, 62, 82	Regency	79
Pioneer	64, 65, 84		
S.A.	66, 86, 88, 89, 91, 92		

- ▷ **Important:** Sometimes manufacturers will change their products, or they may use more than one code. If this is the case, your remote may not be able to operate your VCR or cable box.
- ▷ **Important:** Each layer (CABLE, VCR-A or VCR-B) can be set for either a cable box or a VCR.
- ▷ **Important:** When you replace the batteries in your remote control, the remote will return to its initial setting.

using your remote control to operate your VCR

After you have set up your remote control for your particular brand of VCR, you can use the remote to operate your VCR.

- ❶ Use the select buttons across the top of the remote control to choose the layer you “set up” to operate the VCR: VCR-A, VCR-B or CABLE.
- ❷ Point the remote control at the VCR and press the desired buttons.

If you are using a Mitsubishi VCR, you will be able to use all of the buttons on the remote control to operate your VCR except for MUTE, VOLUME and the PIP function buttons.

If you are using another brand of VCR, you can use the POWER, CHANNEL, REC, STOP, PAUSE, REW, PLAY and FF buttons to operate your VCR.

Using the remote control (cont.)

using your remote control to operate your cable box

After you have set up your remote control for your particular brand of cable box, you can use the remote to operate your cable box.

- ❶ Use the select buttons across the top of the remote control to choose the layer you “set up” to operate the cable box: VCR-A, VCR-B or CABLE.
- ❷ Point the remote control at the cable box and press the desired buttons.


Only the POWER and CHANNEL buttons can be used when operating your cable box.

Turning the Projection TV on/off

- ▷ **Important:** Before using the remote control to operate the Projection TV, press the TV SELECT button.


Use the POWER button on either the control panel or the remote control to turn the Projection TV on and off. The power indicator will light up in green when you turn the TV on.

- ▷ **Important:** Even with the power turned off, there is a small current that continues to flow into the Projection TV. This maintains any changes to the settings and operates the built-in clock and timing functions. Unplugging the set will erase these settings, requiring you to set them again. Unplug the Projection TV only when it won't be used for a long time.

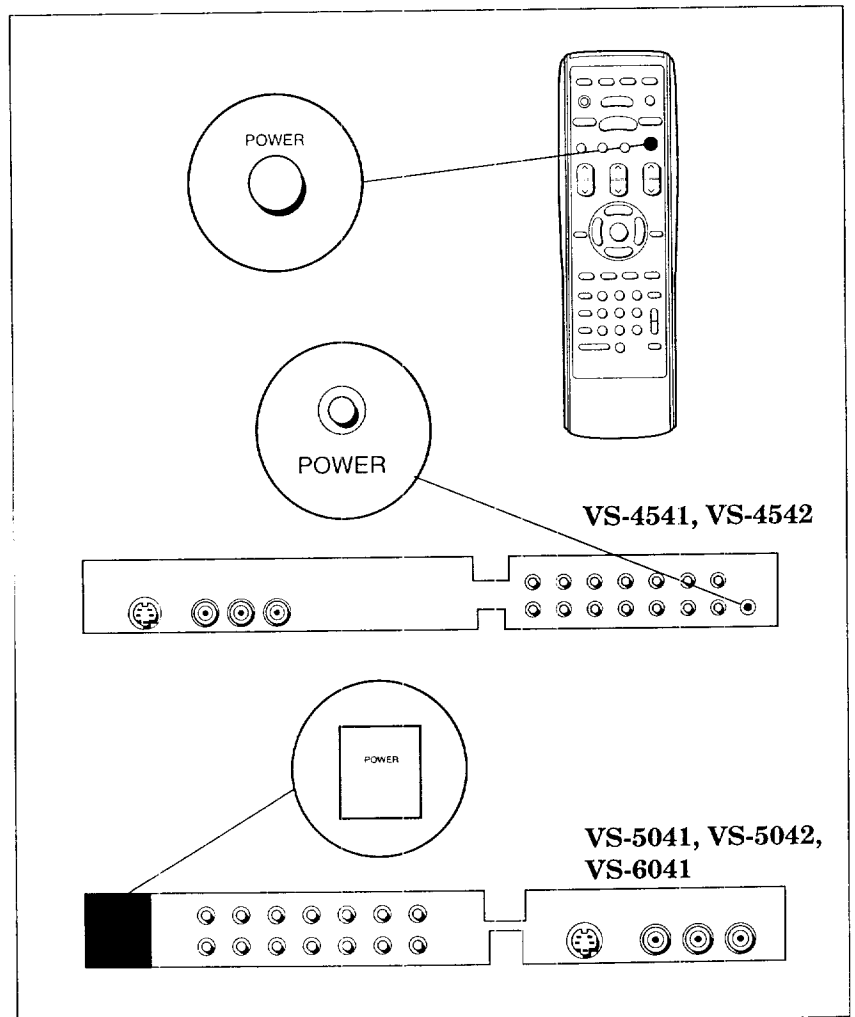

Selecting the input source

Press the input button (INPUT) on the control panel or on the remote control to select the input source you wish to view: Ant-A, Ant-B, Ext-1, Ext-2 or Ext-3.

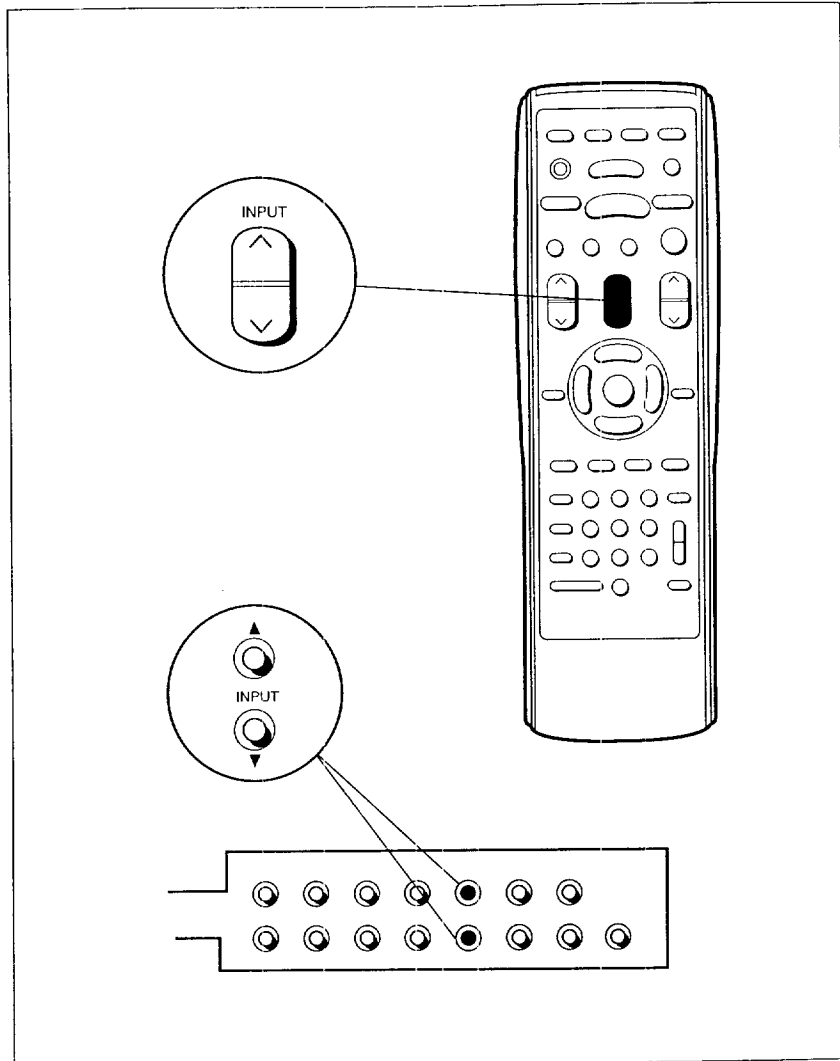

Changing channels

Your Projection TV offers you four ways of changing channels once their numbers have been programmed into channel memory:


- selecting a channel sequentially using the automatic channel scan feature,
- directly accessing a channel by pressing the number buttons,
- using the quick view option to switch to a particular memorized channel, and
- using the Super Quick View function to switch between channels on a user-chosen list.

To change channels faster, use either of the following procedures:

- Enter three digits for every channel number, using zeros where needed. (For example, enter “004” to view channel 4 and “028” to view channel 28.)
- Press the ENTER button after selecting the number of the channel. (For example, press “4” and “ENTER” to view channel 4.)

▷ **Important:** Cable stations channel numbers 0 and greater than 126 are unassigned. TV stations 0, 1 and 70 through 999 are unassigned. If these channel numbers are pressed, the channel remains unchanged.

Changing channels (cont.)

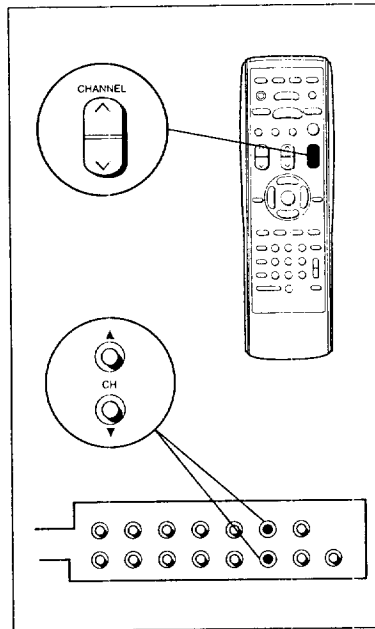


changing channels sequentially

To change channels:

- 1 Press one of the channel controls (CH, CHANNEL) on the control panel or on the remote control. The Projection TV automatically goes to the next broadcasting station.


▷ **Important:** The channel controls (CHANNEL) will work only after channels have been programmed into memory. (See “Memorizing channels,” page 57.)

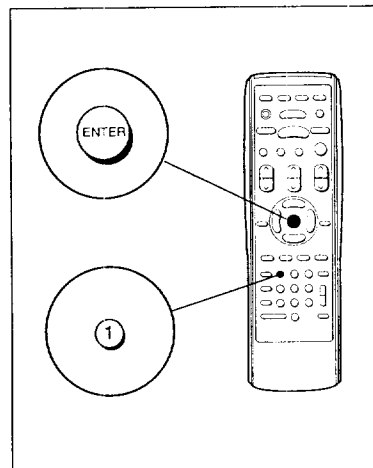

changing channels directly

To move directly to a particular channel without going through the programmed channels:


- 1 Use the remote control to select the number of the channel you want to view.
- 2 Press the ENTER button.

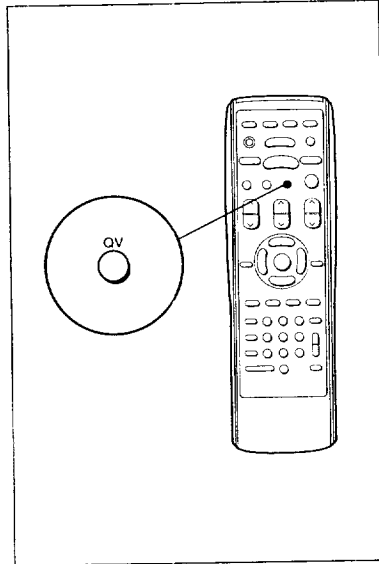

using the quick view option

Quick view allows you to memorize a particular channel then switch to it quickly.

- ❶ Tune to the channel you wish to memorize.
- ❷ Press the QV button for about 3 seconds. When you release the button, the channel number will appear on the screen, indicating that you have memorized that channel.
- ❸ After you've changed to another channel, press the quick view (QV) button to immediately return to the memorized channel.

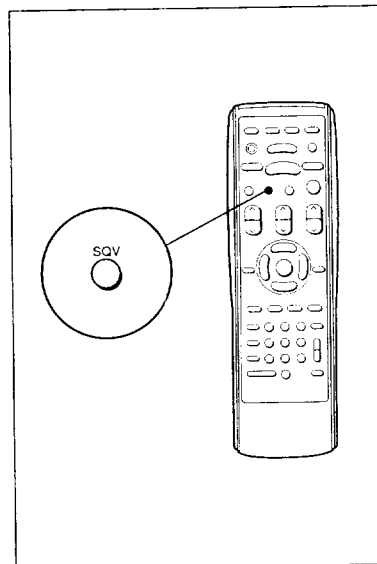

using the super quick view option

To view selected channels programmed into super quick view memory:

- ❶ Enter the desired channels into Super Quick View memory. (See "Using the Super Quick View tuning," page 76.)
- ❷ Press the SQV button repeatedly to view the desired channels in sequence.

Understanding the on-screen menus


One of the distinctive features of this Projection TV is an on-screen menu system that provides step-by-step instructions for using some of the Projection TV's special capabilities.

When using any of the on-screen menus, keep the following in mind:

- The on-screen menus will clear if no item is selected within 5 minutes.
- Unavailable menu items are indicated in light blue.
- Some on-screen menu items must be set before other items are available. For example, "Set the timer" will only be available if "Set the clock" has been set.
- You can exit the on-screen menus any time by pressing the MENU button repeatedly. You will then return to regular TV viewing.
- You can also exit the on-screen menus by pressing the HOME button on the remote control.


Setting the clock

Your Projection TV contains an internal clock to indicate the current time. If there is a broadcaster in your area that is sending the current time along with its regular broadcast signal, then your Projection TV can automatically set its clock with this signal. Otherwise, you can set the clock yourself.

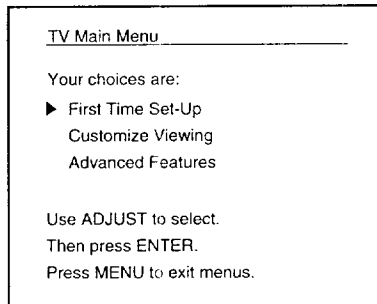


❶ Press the MENU button on the remote control. The TV Main Menu will appear on the screen.

❷ Select “First Time Set-Up” using the ADJUST buttons; then, press the ENTER button.

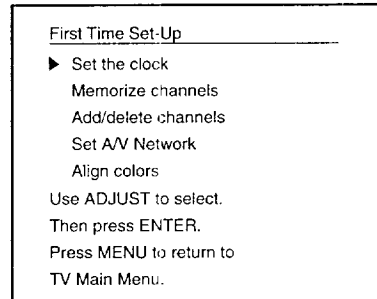


❸ You will see the “First Time Set-Up” screen. Select “Set the clock” using the ADJUST buttons; then, press the ENTER button.

❹ If you want your Projection TV to set its clock automatically, use the ADJUST buttons to set “Auto clock” to “On”; if you want to set the clock yourself, set “Auto clock” to “Off.”

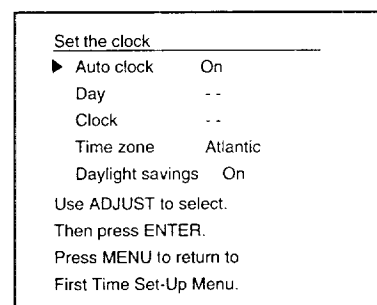


using automatic clock setting

- Set “Auto clock” to “On” using the ADJUST buttons; press the ENTER button.

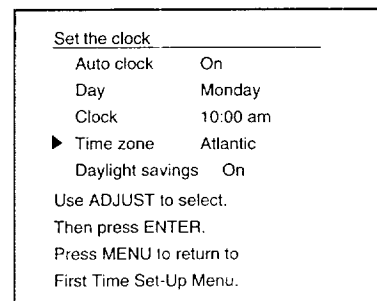

- Use the ADJUST buttons to select the “Time zone” you are in; then, press the ENTER button. The available time zones are: Atlantic, Eastern, Central, Mountain, Pacific, Alaska and Hawaii.


Setting the clock (cont.)

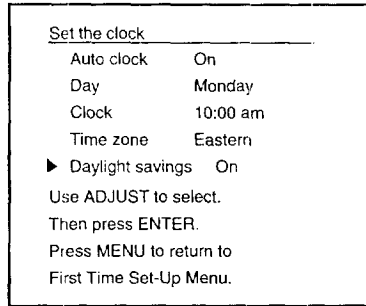

- If you follow daylight savings time, set “Daylight savings” to “On” using the ADJUST buttons. If you do not follow daylight savings time set it to “Off.” Press ENTER.
- At this point, you have prepared the Projection TV to set its clock automatically.



The screen will return to the “First Time Set-Up” menu.

▷ **Important:** The Projection TV can only set the clock automatically when there is a broadcaster in your area that is sending the current time via Extended Data Services (XDS). The clock will start just after the Projection TV receives the time data.

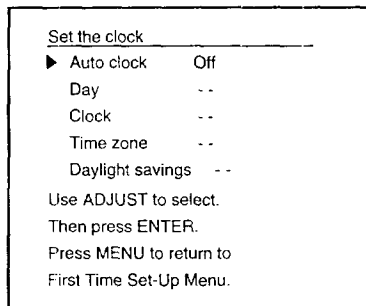

setting the clock yourself





- Set “Auto clock” to “Off” using the ADJUST buttons. Then, press the ENTER button.
- Select the “Day” using the ADJUST buttons. Then, press the ENTER button.

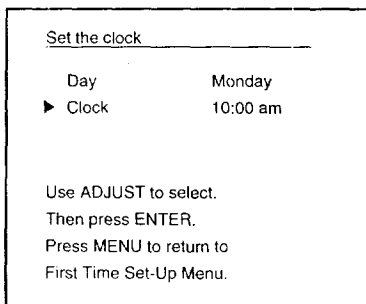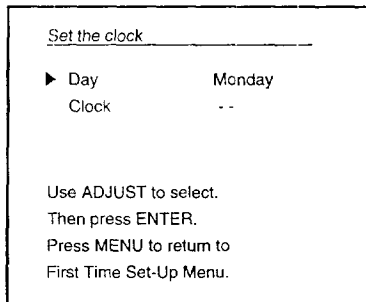

- Set the “Clock” using the ADJUST buttons.
 - After you have set the “Day” and “Clock,” press the ENTER button to start the clock.
- The screen will return to the “First Time Set-Up” menu.

Memorizing channels

You can use the menus to automatically memorize the channels your Projection TV can receive. Once channels are memorized, you can scan through them using the CHANNEL buttons.

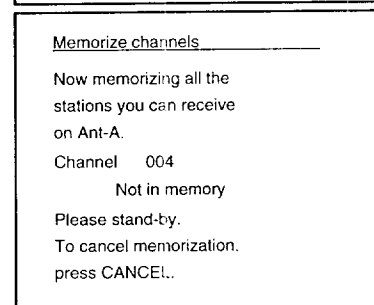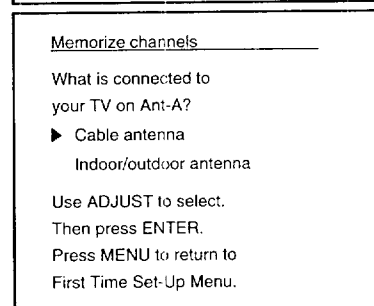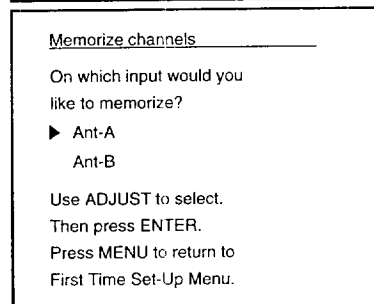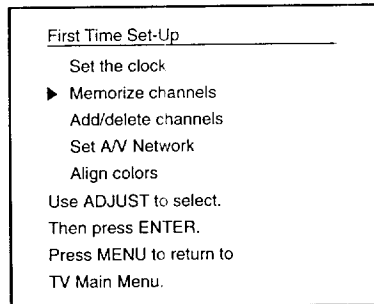


- 1 Press the MENU button on the remote control. The TV Main Menu will appear on the screen.
- 2 Select "First Time Set-Up" using the ADJUST buttons; then, press ENTER.
- 3 Select "Memorize channels" using the ADJUST buttons; then, press ENTER.
- 4 Use the ADJUST buttons to choose the terminal you connected your antenna or cable to: Antenna A (Ant-A) or Antenna B (Ant-B). If you connected an antenna to each terminal, then you should memorize the channels for one antenna now, and for the other antenna later. Press ENTER.
- 5 Use the ADJUST buttons to choose the type of antenna you connected: a cable antenna or an indoor/outdoor antenna. Then, press ENTER.
- 6 You will see a message that channel memorization is in progress. A channel being added to memory will be labeled "In memory." Channels not being added are labeled "Not in memory." You may stop channel memorization at any time by pressing CANCEL.

▷ **Important:** The channel controls will work only after channels have been memorized. After memorization, use the channel buttons to automatically advance to the next memorized channel. Use the number buttons to select individual channels.

Adding and deleting channels

After all available channels have been memorized automatically, channels with weaker signals can be added or deleted by using the following procedure.

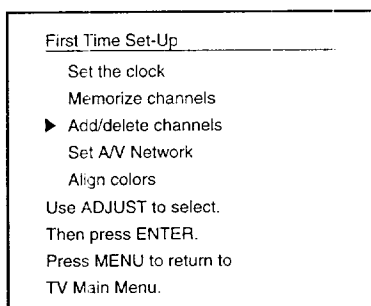

❶ Press the MENU button on the remote control. The TV Main Menu will appear on the screen.

❷ Select “First Time Set-Up” using the ADJUST buttons; then, press ENTER.


❸ Select “Add/delete channels” using the ADJUST buttons; then, press ENTER.

❹ The “Add/delete channels” screen will appear. Select the channel you would like to add or delete using the ADJUST buttons.

❺ If a channel is labeled “in memory,” use the CANCEL button to remove it from memory. If a channel is labeled “not in memory,” use the ENTER button to add it to memory

❻ When you are finished adding and deleting channels, press the HOME button to return to normal TV viewing.

Either “In memory” or “Not in memory” will appear.


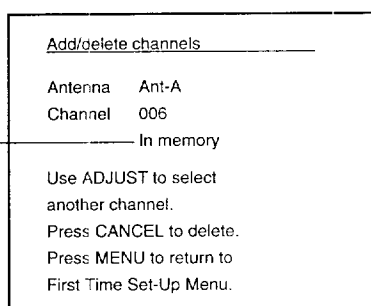


▷ **Important:** In this menu, you can also use the CHANNEL buttons to change channels.

You can switch between the antennas (Antenna A and Antenna B) by pressing the input button (INPUT).

Setting the A/V Network

The A/V Network is a system that Mitsubishi developed to make it easier to operate many products together. When the A/V Network is connected between two Mitsubishi product, you can point the remote control at one product and it will “pass” the remote control command to the other. To set up the A/V Network:

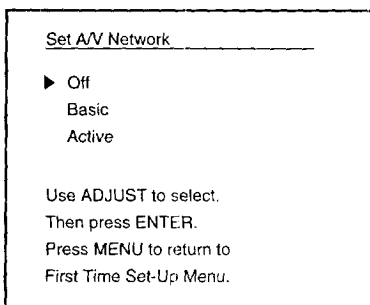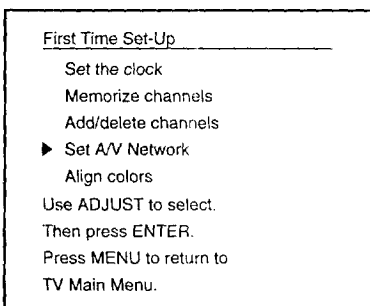

- ❶ Press the MENU button on the remote control. The Main Menu will appear on the screen.
- ❷ Select “First Time Set-Up” using the ADJUST buttons; then, press ENTER.
- ❸ Use ADJUST to select “Set A/V Network”; then, press ENTER.
- ❹ Use the ADJUST buttons to select “Active,” “Basic,” or “Off.” Check the rear terminals of your VCR, then use the chart below to determine how you should set your Projection TV.
- ❺ Press the ENTER or MENU button to return to the “First Time Set-Up” menu.


If your VCR has a rear terminal that reads:	...and you have set your VCR to:	...then set your Projection TV to:
A/V Network	–	Basic
Active A/V Network	Off	Basic
Active A/V Network	Active	Active
Does not have an A/V Network rear terminal	–	Off

If you are not sure how to set your VCR’s A/V Network setting, refer to your VCR’s owner’s guide.

- ▷ **Important:** The A/V Network can still be used to pass remote control signals even when the Projection TV’s “A/V Network” setting is “Off.”
- ▷ **Important:** If you do not use the A/V Network system, set “A/V Network” to “Off.” If you don’t, channel selection may not work correctly.
- ▷ **Important:** If you are using a Mitsubishi VCR with A/V Network or Active A/V Network, you should have connected it to the External 1 (EXT-1) input of your Projection TV.

Aligning the colors


Your Mitsubishi Projection TV has three picture tubes and large diameter lenses which are aligned to project light beams on the screen. Each picture tube projects only one color; red, green or blue. For the best picture, the three colors should be aligned at the center of screen. Here is the procedure for aligning the color beams.

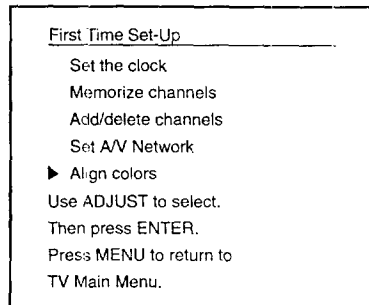

❶ Press the MENU button on the remote control. The Main Menu will appear on the screen.


❷ Select “First Time Set-Up” using the ADJUST buttons; then, press the ENTER button.

❸ Select “Align colors” using the ADJUST buttons; press ENTER.

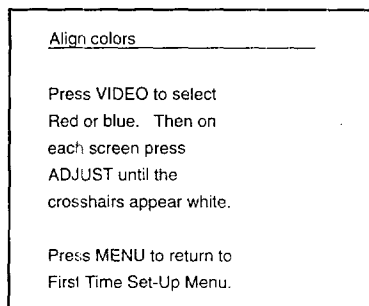

❹ The “Align colors” screen will appear. Press VIDEO to select a color to align: red or blue.

❺ Use the ADJUST buttons to align the color you selected (red or blue) with the green lines. When they are aligned, the green line will turn white.

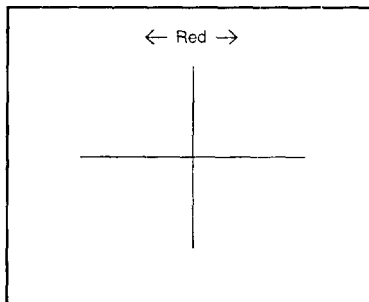

❻ Next, use the VIDEO button to select the other color (red or blue). Use the ADJUST buttons to align the colored lines with the green lines.

❼ After aligning both the red and blue lines, press the MENU button to return to the “First Time Set-Up” menu.


▷ **Important:** You can also use the TEST button on the control panel to display the “Align colors” screen or return to the normal picture.

▷ **Important:** The cross-bar pattern is intended for use only as an alignment aid. It should not be left on for a long period of time, since it can damage the picture tubes.

▷ **Important:** The alignment can change over time and may need to be adjusted. If you notice a change in the color quality of the picture, check the alignment with the test pattern and readjust as required.

Renaming the inputs


This feature allows you to rename the external inputs. For example, you might want to name one input "VCR" and another input "DISC." The name you give the inputs will appear on the on-screen display.

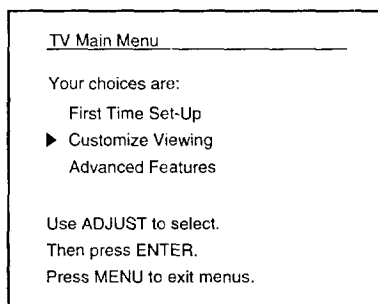

1 Press the MENU button on the remote control. The TV Main Menu will appear on the screen.


2 Select "Customize Viewing" using the ADJUST buttons; then, press ENTER.

3 You will see the "Customize Viewing" screen. Select "Rename the inputs" using the ADJUST buttons; then, press ENTER.

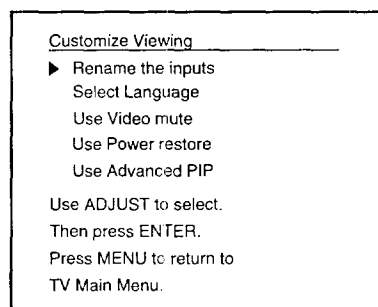


4 Use the ADJUST buttons to select the input (Ext-1, Ext-2 or Ext-3) you want to rename. Then, press ENTER.

5 Set the new name using the ADJUST buttons and the ENTER button.

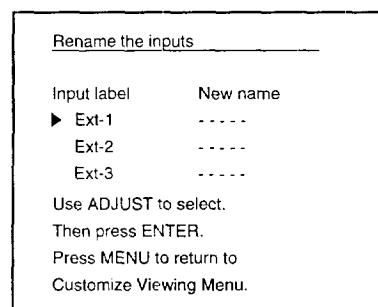

You can rename the inputs using letters (A–Z), numbers (0–9), or symbols (: / . , () ! " # \$ % & ' blank + ; < = > ? blank -).


When you press the CANCEL button while setting the name, the cursor will move one position to the left. You can clear the entire name by pressing CANCEL when the cursor is at the left-most position.

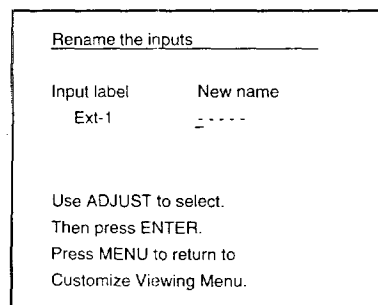

6 After you have finished naming the inputs, press the MENU button; the screen will return to the "Customize Viewing" menu.

Selecting the menu language


This Projection TV allows you to display the on-screen menus in one of three languages: English, Spanish, or French.

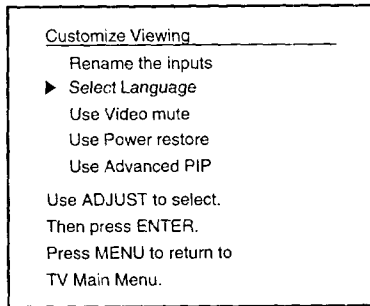

① Press the MENU button on the remote control. The TV Main Menu will appear on the screen.

② Select “Customize Viewing” using the ADJUST buttons; then, press ENTER.

③ Select “Select Language” using the ADJUST buttons; then, press ENTER.


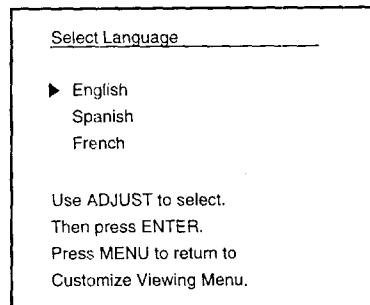


④ Use the ADJUST buttons to select the language you want.

⑤ Press the ENTER or MENU button to return to the “Customize Viewing” menu.

Using video mute

When you use the video mute function, your Projection TV will display a blue screen whenever it is receiving a very weak TV signal or a weak signal from a VCR. The sound is also turned off. If there is a case where you might wish to try viewing a weak signal, you can turn the video mute off.

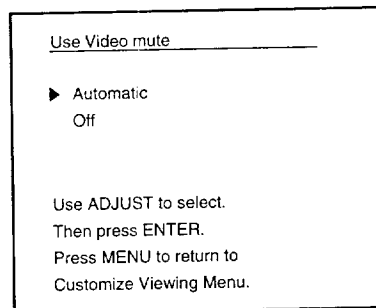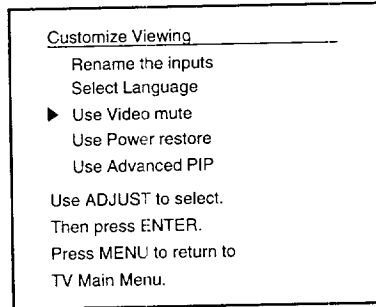


- 1 Press the MENU button on the remote control. The TV Main Menu will appear on the screen.
- 2 Select "Customize Viewing" using the ADJUST buttons; then, press the ENTER button.
- 3 Select "Use Video mute" using the ADJUST buttons; then, press the ENTER button.
- 4 Use the ADJUST buttons to select "Automatic" to turn video mute on or "Off" to turn video mute off.
- 5 Press the ENTER or MENU button to return to the "Customize Viewing" menu.

Using the power restore feature

When this feature is used, the Projection TV will automatically turn on when electric current is supplied. This feature is useful when, for example, your Projection TV is plugged into an outlet that you control with a wall switch.


To use the power restore feature:

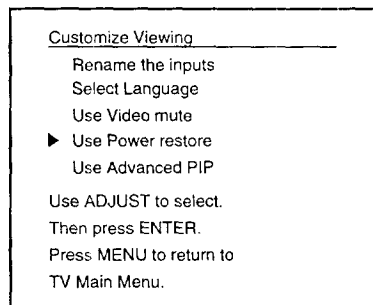

❶ Press the MENU button on the remote control. The TV Main Menu will appear on the screen.

❷ Select “Customize Viewing” using the ADJUST buttons; then, press the ENTER button.

❸ Select “Use Power restore” using the ADJUST buttons; then, press the ENTER button.

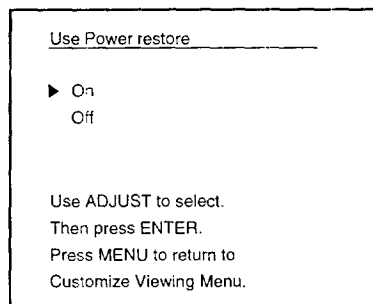

❹ The “Use Power restore” screen will appear. Use the ADJUST buttons to select either “On” or “Off.”

❺ Press the ENTER button or MENU button to return to the “Customize Viewing” menu.

▷ **Important:** In order for this feature to work, you must leave your Projection TV turned on when you turn off the electric current.


▷ **Important:** Even when the power restore feature is used, unplugging the set requires that you reset functions such as the built-in clock and timing functions.

Choosing an advanced PIP function

When you are using the PIP feature, there are special functions you can use. Before using these advanced functions, you need to choose one in the menu. These advanced functions are:

- TV Still,
- Snap-shot, or
- Replay.


In “TV Still,” the PIP image switches between still and moving. In “Snap-shot,” you can view and move the frozen PIP image. In “Replay,” you can view still PIP images in sequence for a “strobe” animation effect. These images will appear in sets of three (from a total of seven stored images) at the speed you select. (See “Using the Picture-in-Picture (PIP) Mode,” page 84.)

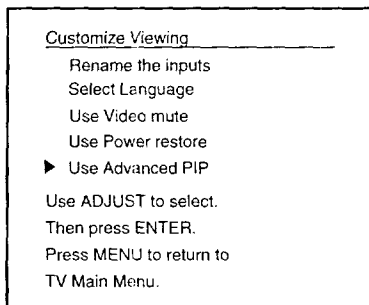

1 Press the MENU button on the remote control. The TV Main Menu will appear on the screen.


2 Select “Customize Viewing” using the ADJUST buttons; then, press the ENTER button.

3 Select “Use Advanced PIP” using the ADJUST buttons; then, press the ENTER button.

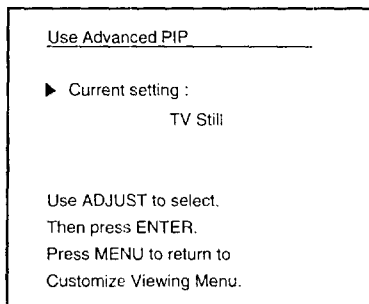

4 Use the ADJUST buttons to select the advanced feature you would like to use: TV Still, Snap-shot or Replay. Then, press ENTER.

• When you select “Replay,” the next option will be “Replay speed.” Use the ADJUST buttons to set the replay speed from 1-9. (1=short interval and 9=long interval.) Press ENTER. The main image will replay in sets of three in a “strobe” animation effect at the speed you selected.

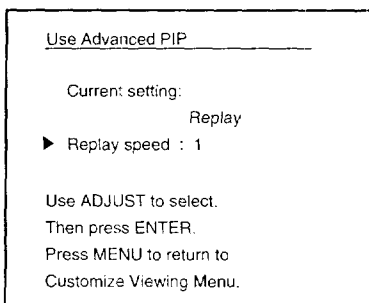

5 Press the MENU button to return to the “Customize Viewing” menu.

Adjusting the sound

You can adjust all of your Projection TV's sound functions by using a pair of buttons; you select a function with the AUDIO button, then adjust the function with the ADJUST buttons or right/left buttons. You use the ADJUST buttons to:

- select a position (e.g., stereo),
- increase or decrease the function (e.g., bass), or
- shift from one end of a scale to the other (e.g., balance).

After adjusting the sound, an on-screen display will indicate the function and level you've selected.

what you'll adjust:

"Listen to: Stereo/SAP/Mono" allows you to change the audio reception mode to stereo, separate audio programming (SAP), or monaural (mono), depending on the type of broadcast you are receiving. As you select the reception mode, remember the following:

- The "Stereo" setting allows you to receive both mono and stereo broadcasts.
- The separate audio programming ("SAP") setting offers you the option of listening to either of two separate audio programs. For example, a station may broadcast news, weather, or a foreign language soundtrack on the SAP program.
- The "Mono" setting reduces unwanted background noise when the Projection TV is receiving a weak stereo broadcast signal. When you use the "Mono" setting, you will hear the broadcast in monaural even when the broadcast signal is in stereo.

▷ **Important** An on-screen display appears when programs are broadcast in stereo or when separate audio programming (SAP) is available.

"Bass" controls the volume of low frequency sound.

"Treble" controls the volume of high frequency sound.


"Balance" adjusts the level of sound between the left and right speakers.

“Surround: Off/Simulate/Hall” allows you to simulate or expand stereo sound.

- “Off” does not change the sound.
- “Simulate” gives you a pseudo-stereo effect when receiving monaural sound broadcasts.
- “Hall” makes stereo sound seem wider and extend around behind you.

“Speaker: On/Off” turns the TV speakers on or off. Set to “On” for normal operation. Set to “Off” if you connected your TV to an audio system.

“Monitor out: Variable/Fixed” lets you set up the TV for use with a home theater receiver or audio system. Choose “Variable” when you wish to use the television remote control for such functions as volume and mute. Choose “Fixed” if you connected a home theater receiver or audio system. This lets you control functions such as volume and mute through the receiver or audio system.

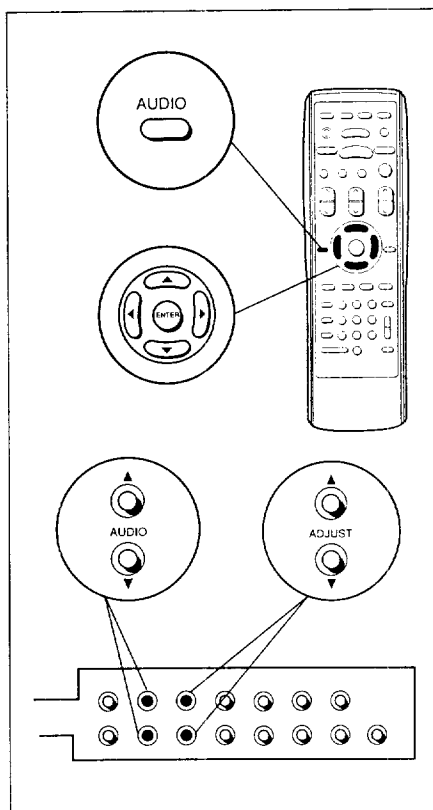

adjusting the audio functions

- 1 Use the AUDIO button on the remote control or on the control panel to select one of the functions.
- 2 Use the up/down or right/left buttons on the remote control or the ADJUST buttons on the control panel to adjust the function.

Adjusting the picture

You can adjust all of your Projection TV's picture functions by using a pair of buttons: you select a function with the VIDEO button and you adjust the function with the up/down buttons, left/right buttons, or ADJUST buttons. You use these buttons to:

- turn a function on or off (e.g. notch filter),
- shift from one end of a scale to the other (e.g., tint),
- increase or decrease the function (e.g., color),
- select a position (e.g., color temperature).

After adjusting the picture, an on-screen display will indicate the function and level you've selected.

what you'll adjust:

"Tint" adjusts the proportion of red to green that determines the delicate tones of color.

"Color" determines the intensity of the color.

"Contrast" controls the level of white-to-black in the picture.


"Brightness" controls the light level of the image on screen.

"Sharpness" adjusts the detail and clarity of the picture.

"Notch filter: On/off" is used in special cases to stabilize the color of striped or checked patterns.

"Color temp(erature): Low/Middle/High" is used to change the relative warmth of the picture.

" CC" (closed captioning): 1/2/3/4/Text 1/Text 2/Text 3/Text 4/
When muting/Off" is used to display the text information on the TV screen. For details, see "Using the closed caption decoder," on page 70.

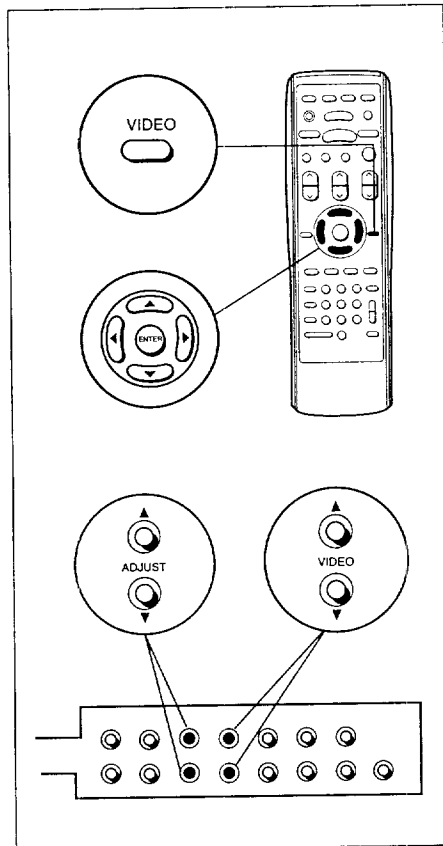

adjusting the video functions

- ❶ Use the VIDEO button on the remote control or on the control panel to select one of the functions.
- ❷ Use the up/down buttons or right/left buttons on the remote control or the ADJUST buttons on the control panel to adjust the function.

Using the closed caption decoder


Many broadcasters now supply closed captioning information along with their regular broadcasts. Your Projection TV can decode that information and display it on your TV screen.

There are two types of captioning that broadcasters can send: “standard” and “text.” Standard captioning is related to the program that is being shown. Standard captioning usually follows the dialogue of the characters on-screen.

Text captioning does not usually relate to the program being shown. It often contains information such as weather or news. Text captioning often blocks out your view of the program you are watching.

Your Projection TV can decode four different “standard captioning” signals and four different “text captioning” signals on each TV channel. However, each station may be broadcasting only one or two captioning signals, or none at all.

To use the closed caption decoder:

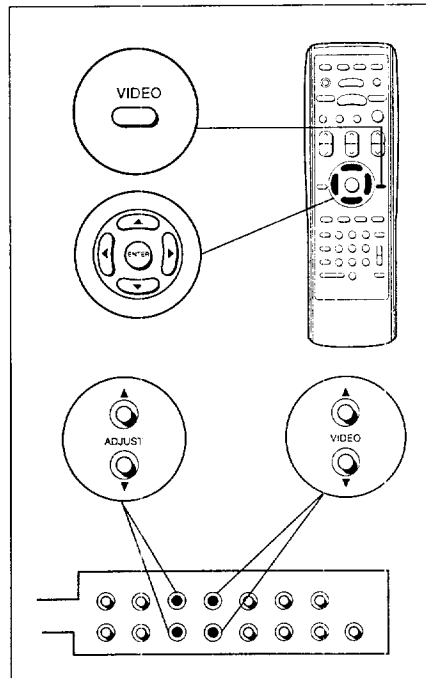

❶ Press the VIDEO button on the remote control or on the control panel until the closed captioning ([CC]) display appears on the screen.

❷ Press up/down buttons or right/left buttons on the remote control or ADJUST buttons on the control panel to select the captioning signal you wish to display: [CC] 1/ [CC] 2/ [CC] 3/ [CC] 4/ [CC] Text 1/ [CC] Text 2/ [CC] Text 3/ [CC] Text 4/ [CC] When muting/ Off.

You can choose to display one of four “standard captioning” signals (indicated by the symbol [CC] and a number), to display one of four “text captioning” signals (indicated by the word “Text” and a number), to display captions when muting, or to turn the captions off.

If you select “When muting,” the standard captioning signal [CC] 1 will appear whenever you use the MUTE button.

uses for closed captioning

Closed captioning was initially designed so that those with hearing difficulties can enjoy viewing television more. However, closed captioning can also be used in other ways, such as:

- helping children learn to read.
- learning a foreign language, and
- using the television without disturbing others.

▷ **Important:** If you cannot display any captions on the screen, please keep in mind that not all broadcasters, video tapes, or laserdiscs supply closed caption signals.

Additionally, captions will not appear if you are playing a tape or laser disc on a VCR or Laser Disc player that cannot decode closed caption signals; if you are playing a video tape that is worn or deteriorated; or if you are switching from STILL mode or SEARCH mode to PLAY mode on a Laser Disc player that cannot decode closed captioned signals when using these features.


◆ Using the Advanced Features

This section explains how to use some of the more advanced functions. You'll learn about:

- **Setting the timer,**
- **Using the parental lock,**
- **Using the Super Quick View tuning, and**
- **Using home theater.**


Setting the timer

This special feature allows you to program the Projection TV to turn on automatically at a preset time. To set the timer:

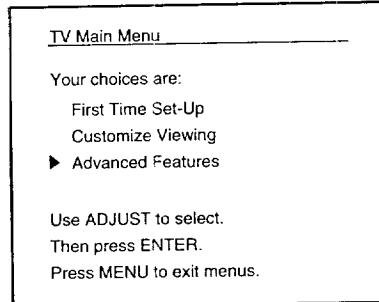


❶ Press the MENU button on the remote control. The TV Main Menu will appear on the screen.

❷ Select “Advanced Features” using the ADJUST buttons; then, press the ENTER button.

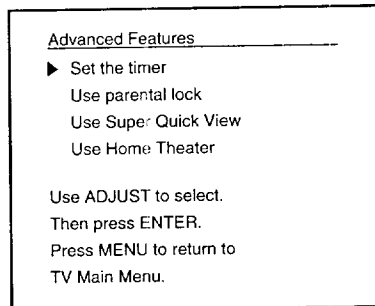

❸ You will see the “Advanced Features” screen. Select “Set the timer” using the ADJUST buttons; then, press the ENTER button.

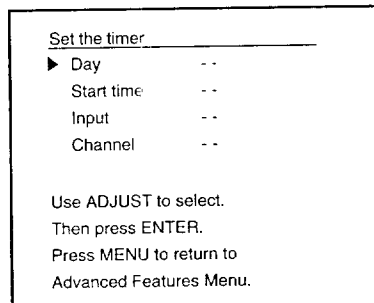

❹ Use the ADJUST buttons and the ENTER button to set Day, Start time, Input and Channel.


After setting the timer, make sure that the program timer indicator is lit up. The indicator will light in orange when the TV is turned on, and light in red when the TV is turned off. The indicator will not light up when using the menus, or when you have locked the TV.

When you press the CANCEL button while setting the timer, the cursor will move to the previous item. To clear the timer, press the CANCEL button with the cursor at the “Day” position.

▷ **Important:** When the timer turns the Projection TV on, the display will flash as a warning. If you do not press a TV function button for about 5 minutes, the Projection TV will automatically turn off. Press a TV function button (such as the display button) to keep the Projection on and turn off the flashing display.

Using the parental lock

This special feature locks the entire TV or one particular channel to prevent others from watching it.

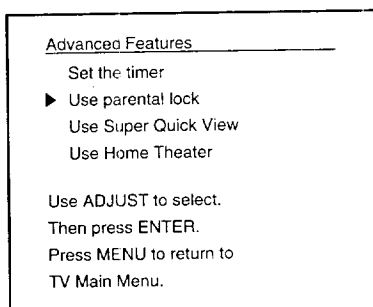


❶ Press the MENU button. The TV Main Menu will appear.

❷ Select “Advanced Features” using the ADJUST buttons; then, press ENTER.


❸ Select “Use parental lock” using the ADJUST buttons; then, press ENTER.

❹ Select “Lock the TV” or “Lock the channel” using the ADJUST buttons; then, press the ENTER button.

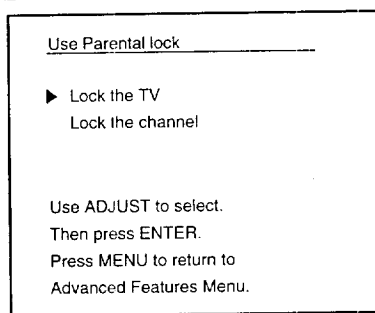

▷ **Important:** If you turn the parental lock on, you cannot use the timer and you will see a lock message when you try to use a locked TV or locked channel.


locking the TV

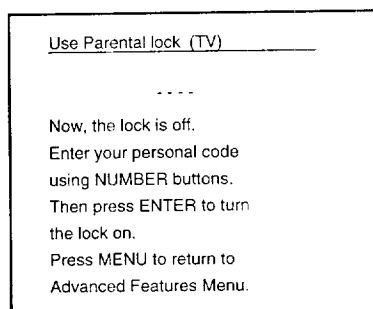

- The message for locking the TV will appear.

- Enter a four-digit secret code using the number buttons (0-9); then press the ENTER button.

You can clear the code by pressing the CANCEL button.

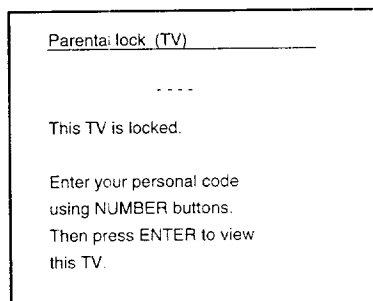

- When you set “Lock the TV” to “on,” you will see a message the next time you turn the television on asking you to enter your secret code. If you don’t enter the correct code within five minutes, the TV will turn off.

Use Parental lock (Channel)

Now, the lock is off.
 Enter your personal code
 using NUMBER buttons.
 Then press ENTER to turn
 the lock on.
 Press MENU to return to
 Advanced Features Menu.

Parental lock (Channel)

This Channel is locked.

Enter your personal code
 using NUMBER buttons.
 Then press ENTER to view
 this channel.

Use Parental lock (TV)

Now, the lock is on.
 Enter your personal code
 using NUMBER buttons.
 Then press ENTER to turn
 the lock off.
 Press MENU to return to
 Advanced Features Menu.

Use Parental lock (Channel)

Now, the lock is on.
 Enter your personal code
 using NUMBER buttons.
 Then press ENTER to turn
 the lock off.
 Press MENU to return to
 Advanced Features Menu.

locking the channel

- The message for locking the channel will appear.
- Enter a four-digit secret code using the number buttons (0-9); then, press the ENTER button.

You can clear the code by pressing the CANCEL button.

- The next time you try to select a locked channel, you will see a message asking you to enter your secret code.
- To view an unlocked channel, press the channel buttons.


canceling parental lock

- 1 Press the MENU button on the remote control. The Main Menu will appear on the screen.
- 2 Select "Advanced Features" using the ADJUST buttons; then, press the ENTER button.
- 3 Select "Use parental lock" using the ADJUST buttons; then, press the ENTER button.
- 4 Using the ADJUST buttons, select the lock you want to cancel; then, press ENTER.
- 5 Enter the four digits of your secret code using the number buttons (0-9); press ENTER.
- 6 Press the MENU button to return to the "Advanced Features" menu.

▷**Important:** If you forget your four-digit secret code, please see page 101.

Using the Super Quick View tuning

Super-Quick-View allows you to cycle through a list of up to ten numbers by using the SQV button. You can use the menu system to add channels to and remove channels from the list.

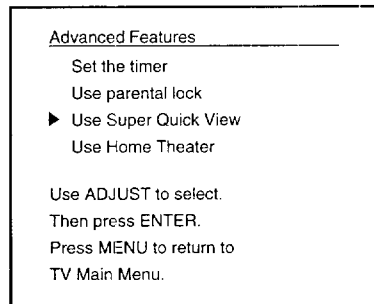


❶ Press the MENU button on the remote control. The TV Main Menu will appear on the screen.


❷ Select “Advanced Features” using the ADJUST buttons; then, press the ENTER button.

❸ Select “Use Super Quick View” using the ADJUST buttons; then, press the ENTER button.

❹ Use the ADJUST buttons to select a position in the list; then, press the ENTER button.

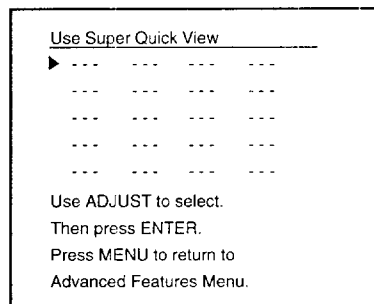


❺ Use the ADJUST buttons to select an input. Press ENTER.

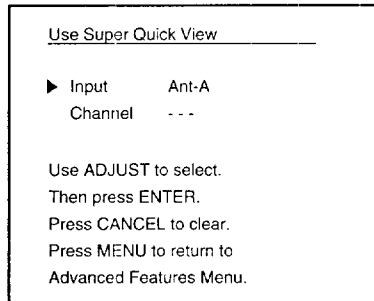

❻ Use the ADJUST buttons, CHANNEL buttons or number buttons to add a channel to the list; then, press ENTER.

Repeat the steps above to add as many channels as you want to the Super Quick View memory.

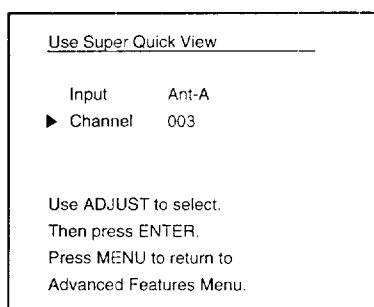

❼ Press the MENU button to return to the “Advanced Features” menu.

➤ **Important:** You can clear each setting (input or channel) by pressing the CANCEL button.

Using home theater

Use this feature if you connected a Home Theater Receiver. It will set your Projection TV to external (EXT-1).

Advanced Features
Set the timer
Use parental lock
Use Super Quick View
▶ Use Home Theater

Use ADJUST to select.
Then press ENTER.
Press MENU to return to
TV Main Menu.

❶ Press the MENU button on the remote control. The TV Main Menu will appear on the screen.

❷ Select “Advanced Features” using the ADJUST buttons; then, press the ENTER button.

❸ Select “Use Home theater” using the ADJUST button; then, press the ENTER button.

Use Home theater

This feature lets you control all input switching from a Home Theater Receiver.

Press ENTER to continue.
Press MENU to return to Advanced Features Menu.

❹ The message explaining this feature will appear. If you want to continue, press ENTER.

Use Home theater

Before using this mode, make sure you have a Home Theater Receiver connected.

Press ENTER to confirm, or press MENU for Advanced Features Menu.

❺ Another message will appear. Press ENTER to turn home theater on; the “Advanced Features” screen will appear.

Use Home theater

This TV is set-up for use with a Home Theater Receiver.

Press CANCEL to reset it for normal use, or press MENU to return to Advanced Features Menu.

• After turning home theater on, you will see a message the next time you select “Use Home theater.”

To turn this feature off, press the CANCEL button.

▷ **Important:** When you use this feature:

- the input source will be fixed to external 1 (EXT-1),
- the input button will switch between antennas A and B, and
- all input switching should be controlled by a Home Theater Receiver. (See your Home Theater Receiver’s Owner’s Guide for more information.)




In addition to the basic and advanced functions explained in the previous chapter, this Projection TV offers the user several special features not generally available on other brand Projection TVs. This chapter will explain how to use these distinctive features. It contains the following topics:

- ◆ **Understanding the On-Screen Displays**
- ◆ **Using the Off-Timer**
- ◆ **Using the Picture-in-Picture (PIP) Mode**
- ◆ **Using the Active A/V Network Feature**


◆ Understanding the On-Screen Displays

Your Projection TV provides an on-screen summary of the current settings for the Projection TV or cable channels, as well as the information related to Extended Data Services (XDS). XDS allows broadcasters to supply you with the current time, channel information, and program information. To view this information, press the DISPLAY button on the remote control repeatedly. This section describes the displays in the order that they occur.

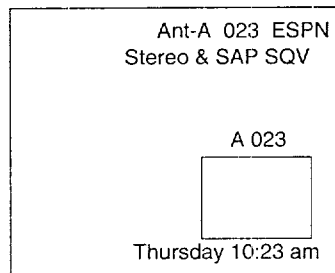


The first setting shows:

- input source (antenna, channel number),
- call letters,
- stereo and/or SAP are available for reception on this channel,
- this channel is programmed into super quick view memory,
- PIP input source (when a PIP image is showing),
- current day of the week, and
- time.

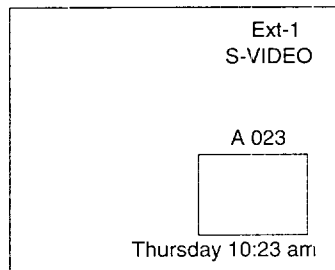


The second setting shows:

- input source (external source or input name),
- an S-VHS cable has been connected,
- PIP input source (when selecting PIP image),
- current day of the week, and
- time.

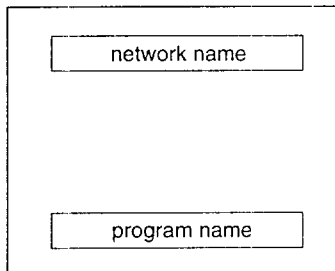

The third setting shows you where the network name and program name will appear if a broadcaster is supplying information via XDS.

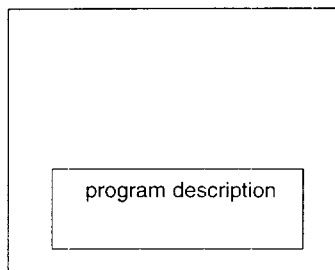

The third setting shows you where the program description will appear if a broadcaster is supplying that information via XDS.


▷ **Important:** If the broadcaster is not supplying information via XDS, then an error message will appear. (“No name available,” “No description available”). Additionally, the “call letters” will not appear.

◆ Using the Off-Timer


This special function allows you to set the Projection TV to turn off automatically. You can set the Projection TV to turn off after a period of time ranging from 10 to 120 minutes (2 hours). In this section you'll learn:

- **Setting the off-timer, and**
- **Changing or canceling the off-timer.**

Setting the off-timer

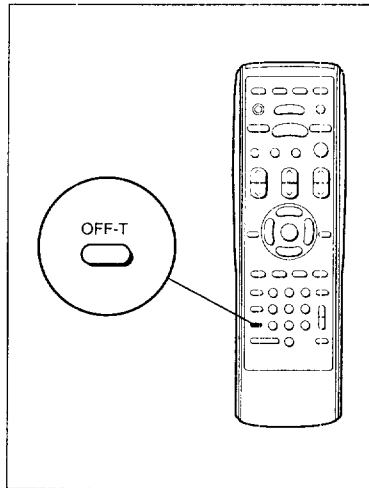


- 1 Press the off-timer button (OFF-T) on the remote control.

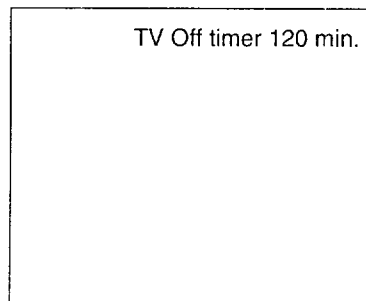


- 2 Select how long you want the Projection TV to stay on by repeatedly pressing the off-timer button (OFF-T). The time will decrease in 10 minute intervals each time you press the button.

- 3 If you later want to check on how much time is left in the off-timer, press the off-timer button (OFF-T) once. The on-screen display reads "off-timer" and shows the amount of time remaining.

▷ **Important:** During the last minute before the Projection TV is set to turn off, "Off-timer 1 min." will flash in red to remind you that the off-timer is set.

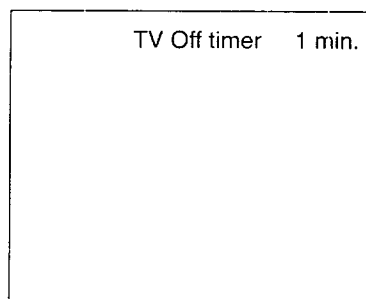

Changing or canceling the off-timer

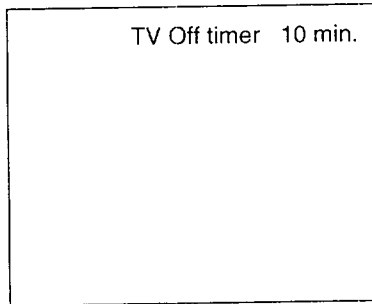

- ① Press the off-timer button (OFF-T) on the remote control. An on-screen display will indicate the amount of time remaining until the Projection TV will turn off.
- ② Continue pressing the off-timer button (OFF-T) repeatedly to change the remaining time or cancel the off-timer. The off-timer is canceled when “— — —” appears instead of the remaining time.


◆ Using the Picture-in-Picture (PIP) Mode

One of the special features of this Projection TV is the picture-in-picture (PIP) mode, which allows you to view two different sources at the same time. In this section you'll learn about:



- **Selecting the PIP image,**
- **Selecting the source,**
- **Selecting the channel,**
- **Exchanging the PIP image,**
- **Moving the PIP image,**
- **Freezing the PIP image,**
- **Using the Snap-shot feature, and**
- **Using the Replay feature.**

▷ **Important:** You must have a VCR connected to the Projection TV to see two different live action pictures when using PIP.

Selecting the PIP image

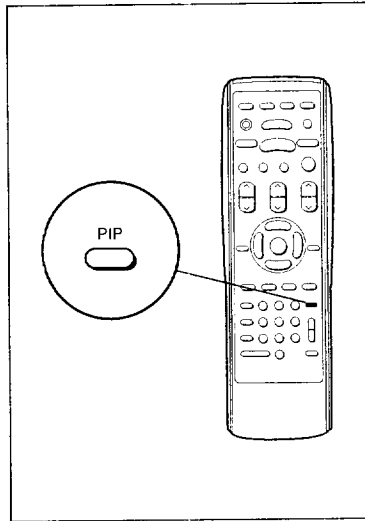


- 1 Select the number of the TV channel you want to view by using the channel control (CHANNEL).
- 2 Press the PIP button. A reduced image will appear in the bottom right corner of the screen.

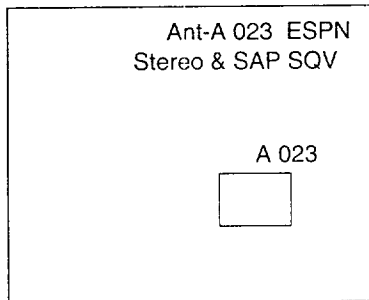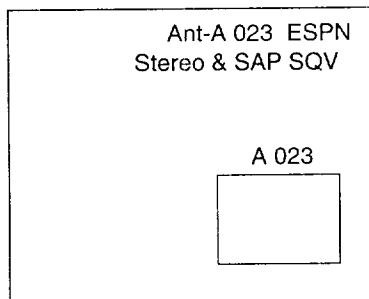

- 3 Press the PIP button again; the size of the reduced image will change.
- 4 Press the PIP button once again to cancel the PIP image.

Selecting the source

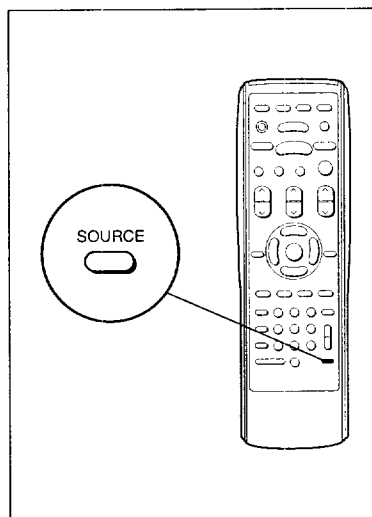


- 1 Turn your VCR on and select a channel on the VCR that is different than the channel you see on your TV screen.
- 2 Press the source button (SOURCE) on the remote control repeatedly to select the source of the PIP image: TV or External.
- 3 The PIP image will change as follows.

→ TV → Ext-1 → Ext-2 → Ext-3 →

▷ **Important:** To change the input of the background (main) image, press the input button (INPUT) on the control panel or on the remote control.


Selecting the channel

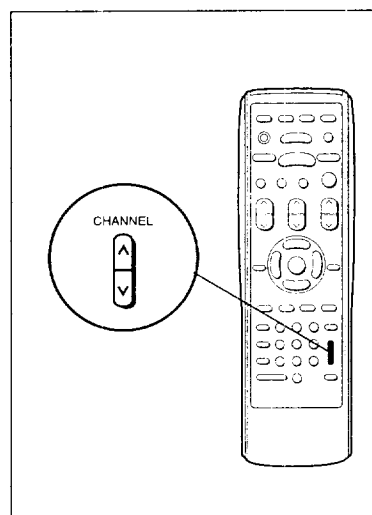


Press the PIP channel button (CHANNEL) on the remote control to change the channel of the PIP image.

▷ **Important:** When the source of the main image and the PIP image is the TV, the PIP channel button will change the channels of both the main image and the PIP image.


Exchanging the PIP image

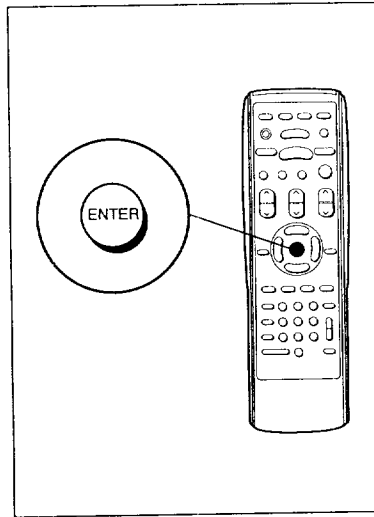

Press the ENTER button to exchange the sources of the background image and the reduced image.

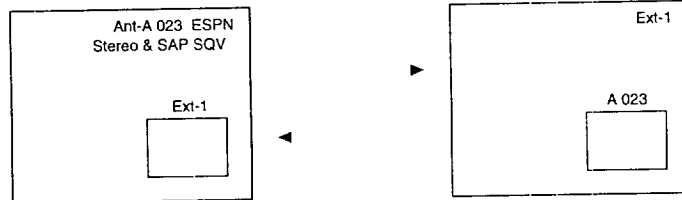


Moving the PIP image

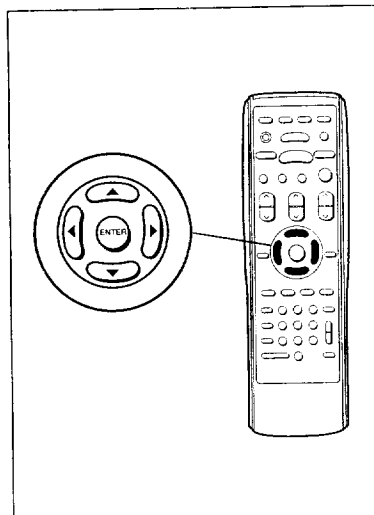


Press the up/down buttons or right/left buttons to move the reduced image to your desired position.

Freezing the PIP image

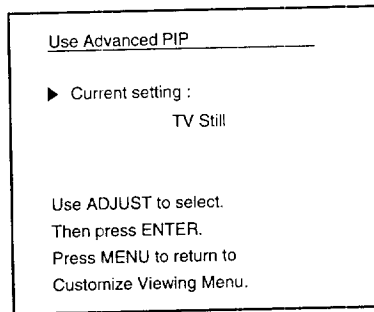

❶ Select "Use Advanced PIP" in the "Customize Viewing" menu and set it to "TV Still." (See "Choosing an advanced PIP function," page 65.)


❷ Use the MENU button to return to the normal picture.

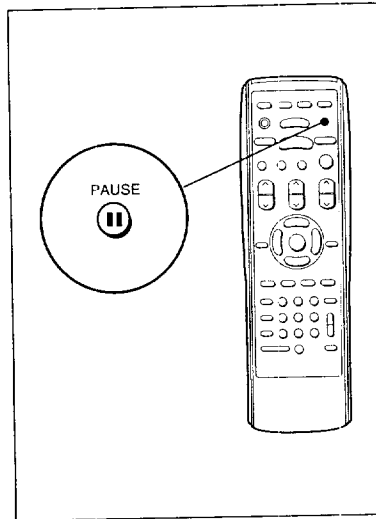

❸ Press the PAUSE button to freeze the reduced image on the screen.


❹ Press PAUSE again to return the image to a "live" picture.

>**Important:** When you press the pause button while viewing the normal picture, the PIP image will appear and be frozen.

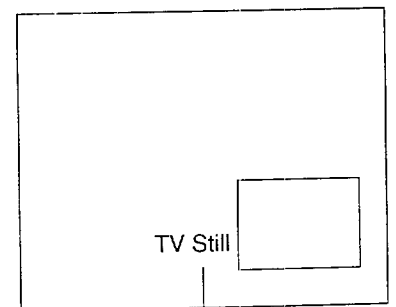

disappears after a few seconds


Using the Snap-shot feature

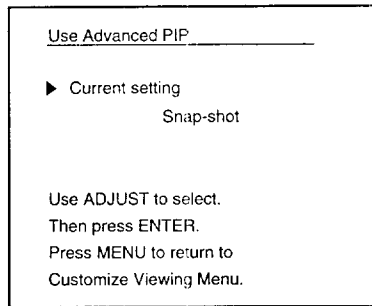

1 Select "Use Advanced PIP" in the "Customize Viewing" menu and set it to "Snap-shot." (See "Choosing an advanced PIP function," page 65.)

2 Use the MENU button to return to the normal picture.

3 Press the PAUSE button; a frozen PIP image and a moving PIP image will appear.

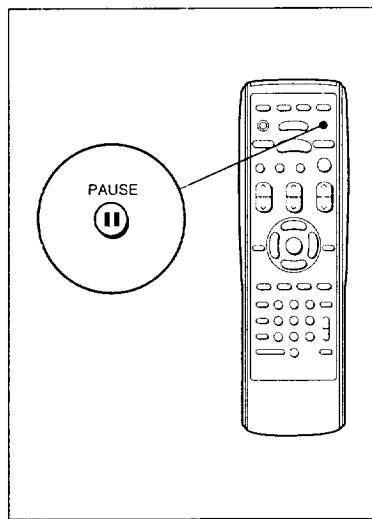


4 Press the PAUSE button again; a third PIP image will appear, moving. The previous two PIP images will be frozen.


5 Each time you press the PAUSE button, the PIP images will shift upwards one by one. The top image will disappear and a frozen image will appear when you press PAUSE.

6 To cancel the PIP image, press the PIP button once.

if the PIP image is off

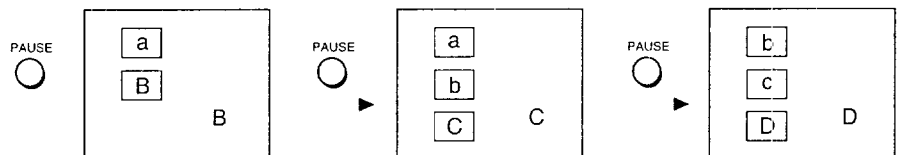

if the PIP image is on

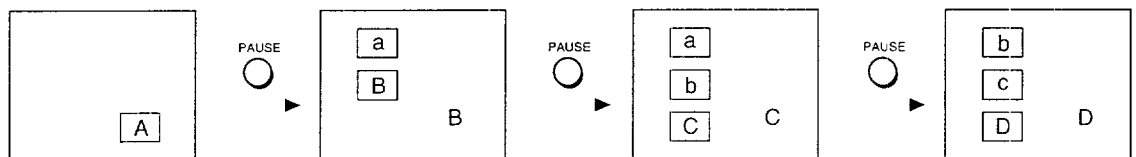

*A, B, C, D: the moving image

*a, b, c, d: the frozen image at the instant the PAUSE button is pressed.

◆ Using the Active A/V Network Feature

This A/V Network is a special feature that makes it easier to use your Projection TV and your other A/V components together. When you connect the A/V Network, you can point the remote control at the Projection TV, and it will “pass” the remote control command to the other components.

Additionally, you will gain even more benefits if you have a Mitsubishi VCR equipped for the Active A/V Network. The Active A/V Network allows you to perform many of the commonly used features of your system at the press of just one button.

This section will explain the various features of the Active A/V Network.

before you begin

- You must have connected an A/V Network cable from the Active A/V Network terminal of your Projection TV to the A/V Network IN terminal of your VCR. See “TV + Mitsubishi products that have A/V Network terminals,” page 40.
- You must have connected your VCR to External 1 (EXT-1) of your Projection TV.
- You must have set your Projection TV’s “A/V Network” setting to “Active” or “Basic.” See “Setting the A/V Network,” page 59.
- Your VCR’s remote control switch (if any) should be set to “VCR-A.”
- Your VCR’s video mute setting should be turned ON.

what the Active A/V Network does

The Active A/V Network makes it easier and faster to use the VCR’s Quick Program and Play commands and the Projection TV’s PIP commands.

▷**Important:** When using the Active A/V Network, you should always point your remote control at your Projection TV.

using the quick program button (QUICK PROGRAM)

When you press QUICK PROGRAM to begin programming your VCR:

- Active A/V Network will turn on your VCR and bring it to the “Program to Record” screen. If the VCR’s clock has not been set, you will see the “Set the clock” screen. (See your VCR’s Owner’s Guide for information about setting the clock.)
- Active A/V Network will turn on your Projection TV (if it is off), and switch the Projection TV to EXT-1.

You can program your VCR by pointing your remote control at the Projection TV.

When you press QUICK PROGRAM to end programming your VCR:

- Active A/V Network will turn off your VCR (unless a tape is currently playing or recording).
- Active A/V Network will return your Projection TV to the channel it was on before, or turn it off (if it was off originally).

using the PLAY button (AUTO PLAY)

When you press PLAY on the remote:

- Active A/V Network will turn your VCR on and begin playing the tape (if any).
- Active A/V Network will turn your Projection TV on and switch it to EXT-1.

When you turn your Projection TV off:

- Your VCR will turn off, unless it is playing or recording.

using the PIP button (TWO TUNER PIP)

▷ **Important:** You must be watching a broadcast channel on Antenna-A or Antenna-B to use the Active A/V Network PIP function correctly.

When you press the PIP button on the remote to bring up a PIP image:

- Your VCR will automatically turn on.
- You can see the VCR’s picture in the small PIP image.

While the PIP image is on the screen:

- The PIP function buttons (SOURCE, VCR-CH, ENTER, right/left, adjust up/down, PAUSE) will all work as they do with standard PIP.
- The CHANNEL and number buttons (0-9) will automatically control the small PIP image. You cannot change channels on the main image.

When you press the PIP button on the remote to turn off the PIP image:

- CHANNEL, the number buttons, and all other functions will work normally again.

- ▷ **Important:** If you turn off the Projection TV while it is set to EXT-1, it will return to the last channel you viewed on Antenna-A or Antenna-B when you turn the Projection TV back on.
- ▷ **Important:** If you leave the Projection TV turned on, set to EXT-1, but the Projection TV is not receiving a signal on EXT-1, it will automatically turn off after five minutes. (If you use a TV menu during this time, the Projection TV will turn off five minutes after you stop using the menus.)
- ▷ **Important:** If you turn the Projection TV's Home Theater feature on, then the Projection TV's A/V Network setting will automatically be set to "Off." You will not be able to use the Active A/V Network features QUICK PROGRAM, AUTO PLAY or TWO TUNER PIP. If you want to use the Active A/V Network features, set Home Theater to "OFF" and A/V Network to "Active".
- ▷ **Important:** You should not press the PIP button while you are watching a channel that is not receiving any broadcasts. You will not be able to see the small PIP image, and you will not be able to change channels on the main image. You may need to turn off the Projection TV and turn it back on, change to a channel that is receiving a broadcast, and begin again.



CHAPTER FIVE
Troubleshooting

Even though you're now familiar with the basic and advanced operations of the Projection TV, you may run into trouble from time to time as you become accustomed to the Projection TV. This chapter offers solutions to some of the common problems you may encounter. We suggest that you consult this chart before contacting a Mitsubishi service representative.

Troubleshooting (cont.)

Problems	Possible Solutions	For More Information
<ul style="list-style-type: none">• The remote control doesn't work.	<ul style="list-style-type: none">• Check that the batteries are installed correctly.• Check that the select button is set to TV.• Be sure that you are pointing the top of the remote control toward the Projection TV from a distance of no more than 20 feet.	<ul style="list-style-type: none">• See "Getting ready to use the remote control" in Chapter 1 for an explanation of how to install batteries in the remote control.• See "Remote control buttons and functions" in Chapter 1, which explains where the select buttons are located.• See "Getting ready to use the remote control" in Chapter 1, which contains pointers for using the remote control.
<ul style="list-style-type: none">• The Projection TV takes several seconds to respond to button commands.	<ul style="list-style-type: none">• Use the ENTER button to avoid delays.	<ul style="list-style-type: none">• See "Changing channels" in Chapter 3, which explains the function of the ENTER button.
<ul style="list-style-type: none">• You can't access a channel.	<ul style="list-style-type: none">• Be sure that the channel you want to view is programmed into memory.• Check that the Projection TV is tuned to the correct input source (antenna) for that channel.	<ul style="list-style-type: none">• See "Memorizing channels" in Chapter 3, which explains how to program channels into the Projection TV's memory.• See "Selecting the input source" in Chapter 3, which explains how to change the input source.

Problems

Possible Solutions


For More Information

-
- | | | |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• On-screen displays appear each time you adjust a function. | <ul style="list-style-type: none">• This is part of the normal operation of the Projection TV. | <ul style="list-style-type: none">• See “Understanding the On-Screen Displays” in Chapter 4 for a full explanation of the on-screen displays. |
|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
-
- | | | |
|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• There’s no sound even when the volume is turned up. | <ul style="list-style-type: none">• Check that the MUTE button isn’t on. | <ul style="list-style-type: none">• See “Remote control buttons and functions” in Chapter 1, which explains the location and function of the MUTE button. |
|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
-
- | | | |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• You forget the code you used to set the parental lock. | <ul style="list-style-type: none">• Use the alternate procedure that doesn’t require the use of the code. | <ul style="list-style-type: none">• See the Appendix , “Automatic Procedure for the Parental Lock.” |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
-
- | | | |
|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• You can’t program the Projection TV to turn on automatically. | <ul style="list-style-type: none">• The Projection TV may be locked. | <ul style="list-style-type: none">• See “Using the parental lock” under “Using the Advanced Features” in Chapter 3. |
|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
-
- | | | |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• The sound doesn’t match the image on screen. | <ul style="list-style-type: none">• The Projection TV’s reception mode may be set to “separate audio program” (SAP). | <ul style="list-style-type: none">• See “Adjusting the sound” in Chapter 3, which explains how to select the appropriate reception mode. |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
-
- | | | |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• There is a large black rectangle on the screen. | <ul style="list-style-type: none">• The Projection TV has been set to “text” mode, but there is no text information being broadcast. | <ul style="list-style-type: none">• See “Using the closed caption decoder” under “Getting started” in chapter 3. |
|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
-

Using the VCR tray


Your Mitsubishi Projection TV has a built-in VCR tray for your convenience. (If you do not need the tray, remove it by loosening the screws.)

To use the tray:

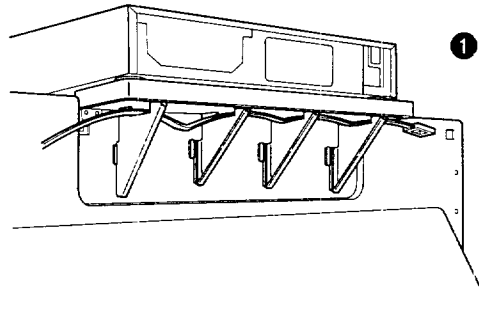


- 1 Fix the VCR to the tray by passing the belt through the hole on the upper side of the legs.


► **Warning:** To make sure the VCR is stable at all times, fix it to the Projection TV as shown in the illustration.

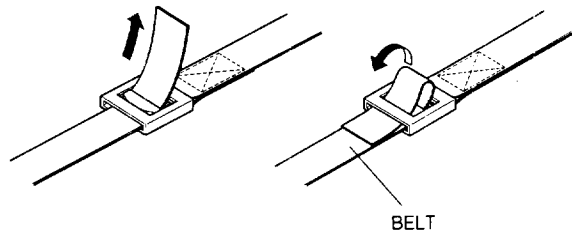

- 2 Join the belt together as shown.

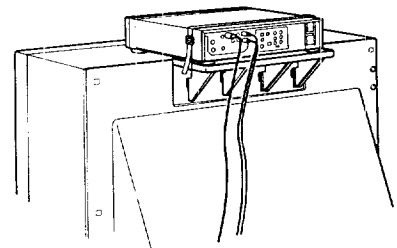

- Do not place a VCR over 16kg (35lb) on the tray.
- Do not place more than one VCR on the tray.
- Take the VCR off the tray before moving the Projection TV.
- For keeping set from toppling under the influence of earthquake or the other emergency, fix the set using the clamp attached on the set back as shown.

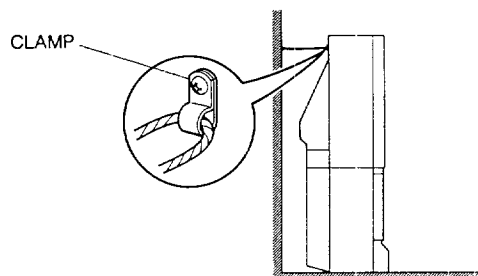

Caution and care

► **Warning:** Don't leave stationary images, such as those generated from stock market reports or video games, on-screen for more than 10 minutes. Still patterns can scar the Projection TV causing permanent damage to the picture tubes.

▷ **Important:** If you plan to place speakers next to the Projection TV, make sure they are magnetically shielded. Ordinary speakers will cause distortion in the picture due to their strong magnets. This distortion, however, will not harm the picture tubes.

For maximum enjoyment and safe operation of your MITSUBISHI Color Projection TV, please read the "IMPORTANT SAFEGUARDS" carefully and apply them properly.

▷ **Important:** To keep your TV from toppling in the event of an earthquake, you can use the clamp attached to the back of the television to secure it to the wall. Simply run a cord or rope through the clamp, then attach the rope to the wall directly behind the television.

Calling for service

If you are unable to correct a problem with your Projection TV, consult your MITSUBISHI dealer or MITSUBISHI Authorized Warranty Service Center.

Do not adjust any controls not described in this owner's guide.

Do not remove the protective back cover of this unit.

If you see the following display on your screen, you should not change any settings. This is a special display used by the factory.

► Initial		
E2RESET		CCD : On
Hotel : Off		Auto clock : On
		Call letr. : On
		Net name : On
		Prog name : On
		Prog descr : On

If this display appears, make sure that all of the on/off settings are the same as the illustrations above and then turn the Projection TV off. If any of the settings are different than the illustration above, turn the Projection TV off and consult your MITSUBISHI dealer or MITSUBISHI Authorized Warranty Service Center.



Cut along dotted line and file after reading.

101

After you lock the TV, you will need the secret code in order to:

- view the locked TV, or
- cancel the lock.

If you forget the code, you can view the locked TV without entering the code. To do this, simply press the buttons on your remote labeled “QV” and “9” at the same time.

▷ **Important:** Unlocking with this procedure is only temporary. To cancel the lock completely, follow the procedure below:

- ➊ Press the “QV” button and the “9” button on the remote control at the same time. This will allow you to turn on a locked TV.
- ➋ Press the MENU button to view the main menu. Use the ADJUST button to select “Advanced Features.” Press ENTER.
- ➌ Use the ADJUST button to select “Use Parental Lock.” Press ENTER.
- ➍ Use the ADJUST button to select “Lock the TV.” Press ENTER.
- ➎ Press the “QV” button and the “9” button on the remote control at the same time. This will turn off the lock.

- A**
 A/V Network
 connection 40
 setting 59
 A/V reset button 14
 Active A/V Network
 terminal 25
 using 91
 adding channels 58
 adjust buttons 13, 19, 21
 advanced features 72
 aligning the colors 60
 antenna connection 27, 31
 antenna terminals 24
 audio controls 13, 19
 audio input terminals .. 14, 25
 audio output terminals 24
 audio system, connection 39
 auto play 92
- B**
 back panel, overview 24
 Basic Connections 26
 batteries
 guidelines 16
 installing 15
 buttons, remote control 17
- C**
 cable box
 codes 47
 connection 28, 34
 cable connection 27, 31
 cancel button 19
 caption, closed 70
 caution and care 99
 CC 70
 channel
 button 21
 control 12, 18
 locking 75, 101
 channels
 adding and deleting 58
 changing 51
 memorizing 57
 clock, setting 55
- closed caption decoder,
 using 70
 colors, aligning 60
 Connecting Your
 Projection TV 23
 connection
 A/V network 40
 antenna 27, 31
 audio system 39
 basic 26
 cable 27, 31
 decoder box 28, 34
 home theater receiver 37
 UHF/VHF antennas 30
 VCR 31, 34
 control panel, overview 12
- D**
 decoder box
 codes 47
 connection 28, 34
 deleting channels 58
 display button 20
- E**
 enter button 18, 21
 español 62
- F**
 features
 advanced 72
 special 79
 summary of special 6
 français 62
 front panel, overview 12
- G**
 Getting Started 44
 Getting to Know Your Projec-
 tion TV 11
- H**
 home button 20
 home theater receiver, connec-
 tion 37
 home theater, using 77
- I**
 Important Safeguards 3
 input button 13, 18
 input, selecting 50
 inputs, renaming 61
 installing the batteries 15
- L**
 language, menu 62
 lock 74, 101
- M**
 memorizing channels 57
 menu button 19
 menu language 62
 menus, understanding 54
 mute control 18
 mute, video 63
- N**
 number buttons 20
- O**
 off-timer 81
 off-timer button 20
 on-screen displays,
 understanding 80
 on-screen menus, understand-
 ing 54
 on/off, turning your TV 49
 Operating Your
 Projection TV 43
 Overview of the Back
 Panel 24
 Overview of the Control
 Panel 12
 Overview of the Remote
 Control 15
- P**
 parental lock 74, 101
 pause button 21
 picture, adjusting 68
 picture-in-picture controls .. 21

PIP		source button	21
button	21	special features	79
choosing an advanced		summary	6
function	65	SQV button	18
exchanging	87	super quick view button	18
freezing	88	super quick view	
moving	87	using	53, 76
replay	90	T	
selecting	85	test button	14
selecting the source	86	time, setting	55
snap-shot	89	timer, setting	73
two tuner	92	tray, VCR	98
using	84	troubleshooting	95
play, auto	92	TV	
power button	12, 18	connecting	23
power indicator	14	getting to know	11
power restore	64	locking	74, 101
Preface	5	operating	43
program timer indicator	14	unpacking	7
Q		U	
quick program	92	UHF/VHF, connection	30
quick program button	20	understanding the on-screen	
quick view button	18	displays	80
quick view, using	53	Unpacking Your	
QV button	18	Projection TV	7
R		V	
rear panel, overview	24	VCR	
remote control		buttons	18
buttons and functions	17	codes	46
overview	15	connection	31, 34
using	45	tray	98
renaming the inputs	61	video controls	13, 19
replay	90	video input terminal	14, 25
S		video mute	63
S-VIDEO input		video output terminals	24
terminal	14, 24	volume control	12, 18
Safeguards, Important	3	W	
select buttons	18	Welcome to Mitsubishi	5
service	99		
setting the clock	55		
setting the timer	73		
snap-shot	89		
sound, adjusting	66		

