

Technics

How to use the remote control transmitter

 
AV control stereo receiver

SA-GX350




Battery installation

Insert the batteries included

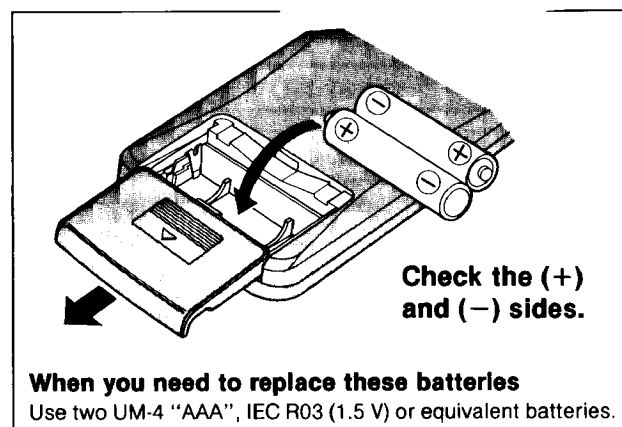

When you remove the batteries

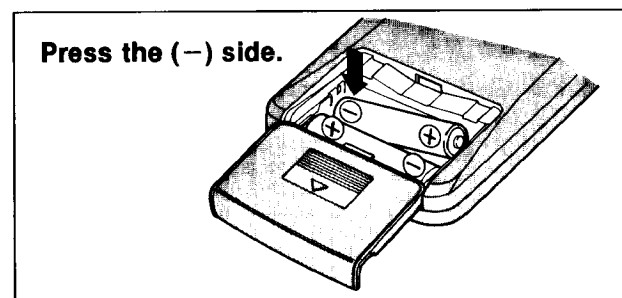 

Use of batteries

Do not mix old and new batteries, or batteries of different types (carbon and alkaline, etc.).

Always remove old, weak or worn-out batteries promptly and dispose of them properly.

The battery life is about one year.

Although the battery life varies depending on how often the device is used, the batteries should be replaced about once every year on the average.

The batteries should be replaced if commands from the remote control transmitter do not operate the unit even when transmitter is held close to the front panel.

Never subject batteries to excessive heat or flame; do not attempt to disassemble them; and be sure they are not short-circuited.

If the remote control is not to be used for a long period of time, remove the batteries and store them in a cool, dark place.

If a battery leaks, remove all batteries and dispose of them properly. Thoroughly clean the battery compartment before inserting new batteries.

If the electrolyte comes into contact with skin or clothes, flush with water immediately.

Keep batteries out of reach of children.

Do not use rechargeable (nickel-cadmium) type batteries.


Do not attempt to recharge alkaline or carbon batteries.

RQT1930-P


H1292C0

Method for use

 
Use the remote control within 60 degrees and within 7 meters (23 ft.) facing directly toward the receiver's remote control signal receptor.

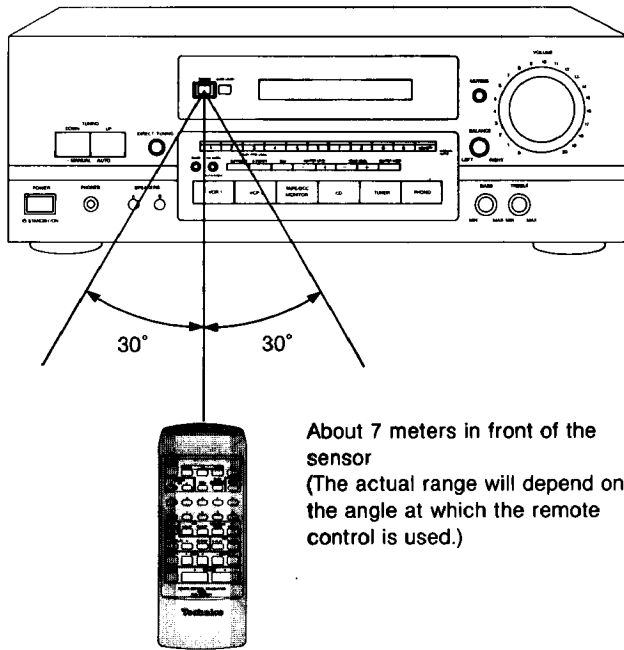

Operation notes

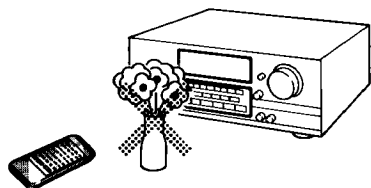 

 Aim the remote control's transmission window toward the unit's sensor. Avoid any obstacles.

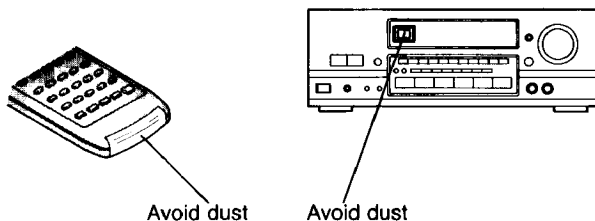

Be sure the transmission window and the unit's sensor are free from dust. Excessive dust might affect performance.

The operation may not be correct if direct sunlight or another strong light source strikes the receiving sensor of this unit. If there is a problem, place the unit away from the light source.

When operating a TV, VCR or a CD changer (or CD player) with a remote control sensor, face this remote control toward the remote control sensor of the unit to be operated.

Remote control operation

This remote control transmitter can be used to operate units manufactured by this company other than this receiver unit, including CD changers (or CD players), tape decks and also TVs and VCRs manufactured since 1985.

Preparations before use

 
Check the appropriate connection of the power cords and connection cables for the remote control in order to operate CD changers (or CD players) and tape decks correctly. (See page 8 of the operating instructions for the main unit.)

If the connections are made as shown on page 8 and the power supply switches of each unit are set to ON, the power supply for each unit will simultaneously turn ON and OFF when the power supply of the receiver is turned ON and OFF.

Note

When operating the CD changer (or CD player), TV or VCR, the remote control signal may fail to operate the unit, even if it is manufactured by this company, because of the nature of the remote control signal. In such cases, switch over the remote control signal by the following method.

Depending on the model, there may be cases where operation is still not possible even if the remote control signal is switched over due to differences in frequency range characteristics.

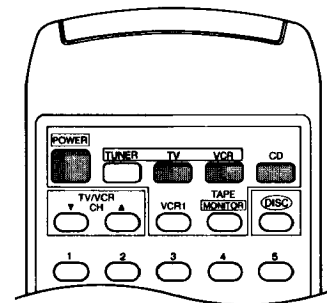

For CD changer (or CD player) operation



Press POWER and CD simultaneously, hold for 2 seconds.

For TV operation



 
Press POWER and TV simultaneously, hold for 2 seconds.

For VCR operation




Press POWER and VCR simultaneously, hold for 2 seconds.

To restore the previous memory contents, carry out the same operations one more time.

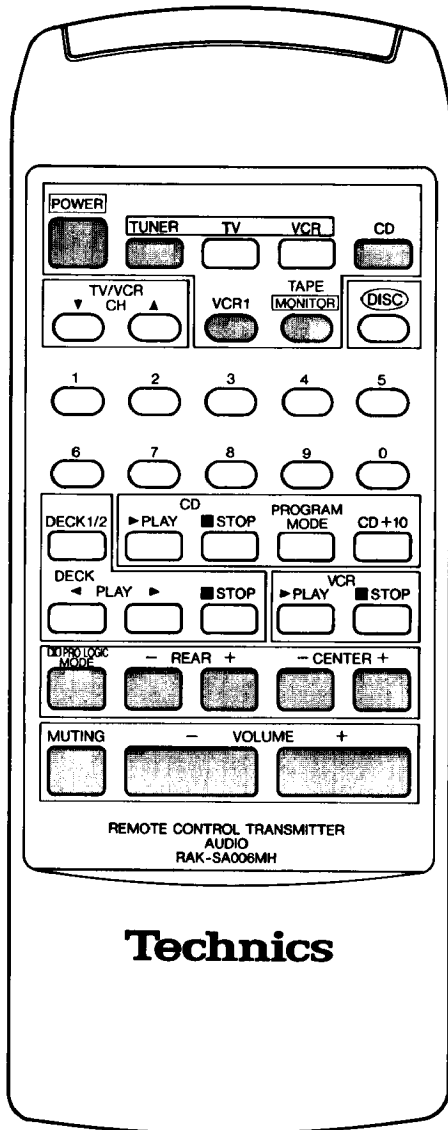

Basic operations

 To turn the power supply ON/OFF



Once the power has been set to ON, it can be turned ON and OFF simply by pressing POWER. (See **Note** below.)

To turn the tape monitor function ON/OFF



To listen to sources other than a tape or DCC, be sure to turn off the tape monitor indicator on the main unit.

To select an input source



To select the Dolby Pro Logic mode



Changes as follows each time the button is pressed.

SURROUND → 3 STEREO → (OFF)

To adjust the output level of the rear speakers



Select SURROUND.

To adjust the output level of the center speaker



Select SURROUND or 3 STEREO.

To mute the sound level



Press once more to return to the original volume.

 
To adjust the volume level



Note


After carrying out the operation on the reverse page for turning the power of the TV or VCR ON or OFF, always press TUNER before pressing POWER when turning the power of the receiver ON and OFF.

To listen to radio broadcasts




Specify the preset channel using the numeric buttons.

 (Example: Channel 12)



(Within 2 sec.)

 To listen to compact discs

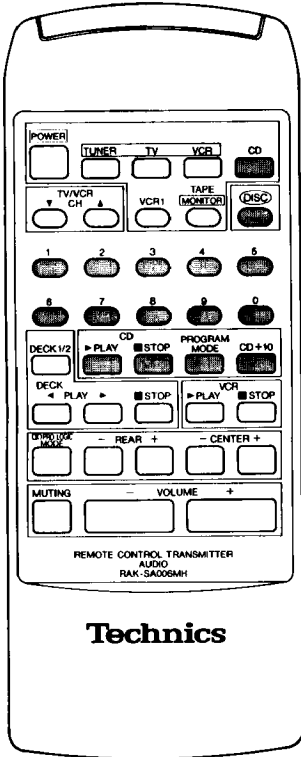

Technics

 
Note

Selecting the desired disc(s) is only applicable to a Technics CD changer.

Sequential play




Direct access play



Play will start from the selected track. ←


Select the desired track number. To select a two-digit track number over 10, press the necessary number of times and then one of the - buttons.

 Program play

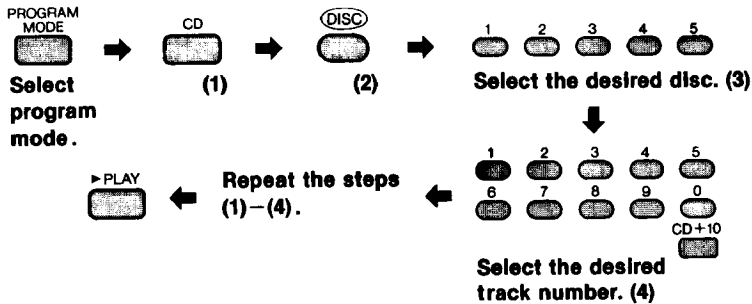

Delete play

 (only for a Technics CD changer with delete play function)

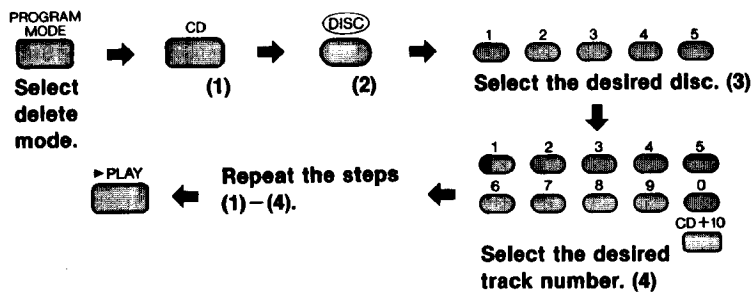


To stop play



For program play and delete play, if this button is pressed while playback is stopped, all contents which have been input will be cleared.

 To listen to tapes

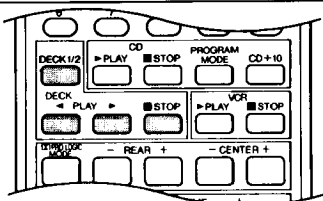

Only when using a double cassette deck

Select tape deck (DECK 1 or DECK 2)

The remote control indicator of the cassette deck is changed over each time the button is pressed. → (Reverse)(Forward)

To stop play

 


(Continued on next page)


Remote control operation

For detailed information concerning TV or VCR operation, please read the operating instructions for each unit carefully.


To watch TV broadcasts

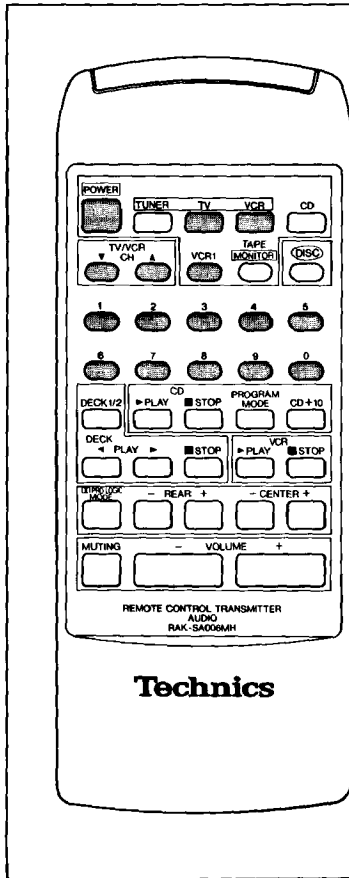

To watch TV broadcasts with a VCR tuner

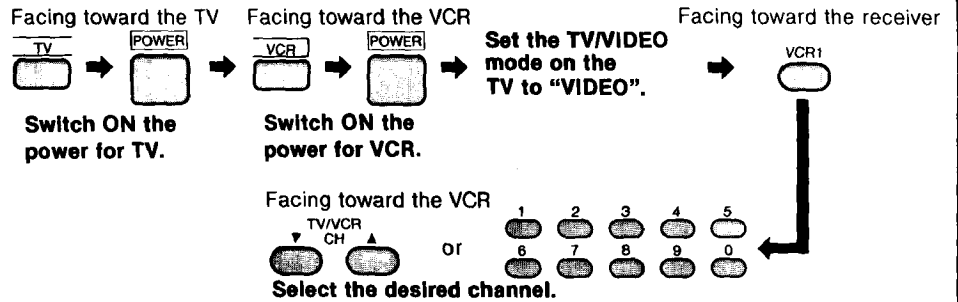 


To watch TV broadcasts with just a TV

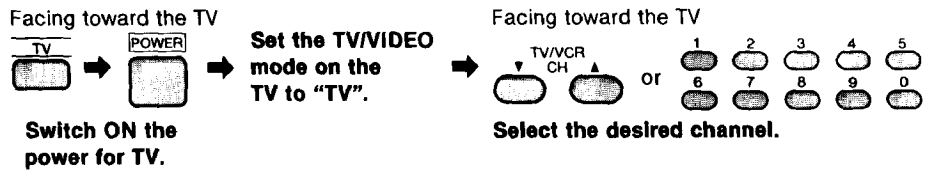 



To switch OFF the power for TV



 To switch OFF the power for VCR



To watch video tapes

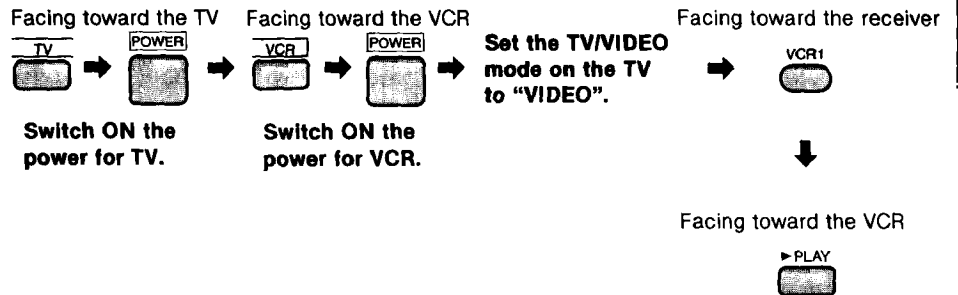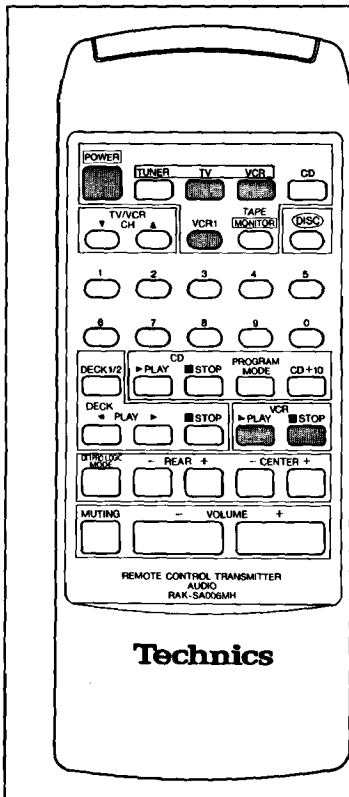  

To stop play



To switch OFF the power for TV



To switch OFF the power for VCR



Troubleshooting guide

Problem	Probable cause(s)	Suggested remedy
Remote control transmitter does not function.	Batteries are incorrectly installed.	<ul style="list-style-type: none">• Insert the batteries so that the positive (+) and negative (-) polarities are correct.
	The remote control transmitter batteries are drained.	<ul style="list-style-type: none">• Replace them with new batteries.
	There is an obstruction between the remote control transmitter and the receiver, TV or VCR.	<ul style="list-style-type: none">• Remove the obstruction.
	The remote control transmitter is not correctly facing the receiver, TV or VCR.	<ul style="list-style-type: none">• Face the remote control transmitter correctly toward the signal receptor of each unit.

**Panasonic Company, Division of
Matsushita Electric Corporation of America**
One Panasonic Way
Secaucus, New Jersey 07094

**Panasonic Sales Company, Division of
Matsushita Electric of Puerto Rico, Inc.**
San Gabriel Industrial Park
65th Infantry Ave. Km. 9.5
Carolina, P.R. 00630

**Panasonic Company (West) of America, Division of
Matsushita Electric Corporation of America**
6550 Katella Ave.
Cypress, CA 90630

Matsushita Electric of Canada Limited
5770 Ambler Drive, Mississauga,
Ontario L4W 2T3