

## *Trinitron® Color TV*

### *Operating Instructions for 5 models*

Before operating the TV, please read this manual thoroughly and keep it for future reference.

KV-27XBR26    KV-27XBR36    KV-32XBR76  
KV-32XBR26    KV-32XBR36




375707122

# Precautions


## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.




**CAUTION**

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

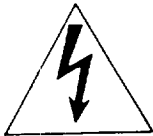

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### CAUTION:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### ATTENTION:

POUR PREVENIR LES CHOCS ELECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

## Safety

- Operate the TV only on 120 V AC.
- One blade of the plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If you spill or drop anything liquid or solid into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.
- Unplug the TV from the wall outlet if you are not going to use it for several days or more. To disconnect the cord, pull it out by the plug. Never pull the cord itself.

## Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

## Cleaning

Clean the TV with a soft dry cloth. Never use strong solvent such as thinner or benzine, which might damage the finish of the cabinet.

## Repacking

Keep the original carton and packing materials to safely transport the TV in the future.

If you have any questions or problems concerning the TV, contact your nearest Sony dealer.

For detailed safety precautions, see the leaflet "IMPORTANT SAFEGUARDS" included with this manual in the vinyl bag.

### Note to CATV system installer in the USA

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

This television receiver provides display of television closed captioning in accordance with § 15.119 of the FCC rules.

### Owner's Record

The model and serial numbers are located at the rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# Contents

---

## Preface

Precautions .....	2
Welcome .....	4
Features .....	4

---

## Chapter 1: Setting Up

Unpacking .....	5	Connecting two VCRs (equipped with an S video output jack) for tape editing .....	15
Locating Controls and Connectors .....	6	Connecting two VCRs (not equipped with an S video output jack) for tape editing .....	16
Making Antenna Connections .....	11	Connecting an audio system .....	17
Connecting Other Equipment .....	13	Using the On-Screen Menus .....	18
Connecting a VCR, video disc player or Camcorder equipped with an S video output jack .....	13	Changing the menu language .....	20
Connecting a VCR, video disc player or Camcorder not equipped with an S video output jack .....	14	Setting CABLE ON or OFF .....	22
		Presetting TV Channels .....	24

---

## Chapter 2: Using Basic Features

Watching TV Programs .....	30	Switching quickly between two channels – JUMP .....	33
Using Convenient Features .....	32	Using the cordless headphones – HEADPHONES (KV-27XBR36/32XBR36 only) .....	33
Muting the sound – MUTING .....	32	Previewing the features – DEMO .....	33
Keeping the displays on-screen – DISPLAY .....	32	Using Closed Caption .....	34
Setting the sleep timer – SLEEP .....	32	Selecting a Picture and Sound Mode .....	36

---

## Chapter 3: Using Advanced Features

Watching Two Pictures at Once (PIP) .....	38	Using Timer-Activated Functions .....	54
Adjusting the TV .....	42	Setting DAYLIGHT SAVING .....	54
Adjusting the picture .....	42	Setting the clock — CURRENT TIME SET .....	55
Adjusting the sound .....	47	Setting the ON/OFF TIMER .....	57
Customizing the Screen Display .....	51	Setting CHANNEL BLOCK .....	60
Setting channel captions – CH CAPTION .....	51	Setting FAVORITE CHANNEL .....	62
Setting VIDEO LABEL .....	53	Using the Pre-Programmed Remote Commander .....	64
		Selecting a VCR mode directly — DIRECT PLAY .....	69

---

## Appendix

Troubleshooting .....	71
Specifications .....	72
Index .....	73

# Welcome

Welcome to the Sony XBR series. By following the instructions in this manual, you will be able to enjoy the advanced technology which brings you useful features and high quality viewing.

## About the manual

This manual covers five different models. The illustrations are based on model KV-32XBR36, the model with the most functions, and its Remote Commander RM-Y113A. If a particular function does not apply to your model, this will be noted in the manual.

We highly recommend that you read this manual before using your TV, to set up and make connections safely and to make maximum use of the many functions. Then keep the manual handy for future reference.

## Features

### Sony's unique features

- The multi-band VHF/UHF/CATV tuner lets you receive up to 125 cable channels, for a total of 181 possible off-air and cable channels.
- The built-in Multichannel TV Sound (MTS) decoder lets you receive stereo programs and Second Audio Program (SAP) broadcasts.
- You can receive superior VCR playback by connecting a VCR with an S video output jack to the S VIDEO IN jack.
- You can receive hi-fi sound by connecting an audio system to the audio output jacks.
- View the closed caption and the text by using Closed Caption.

### XBR series special features

- Automatically preset all receivable channels with AUTO PROGRAM.
- Switch quickly between two channels, using JUMP.
- Watch another TV channel, video or cable image as a window picture, using Picture-in-Picture.
- Operate the TV, plus Sony and most other manufacturers' video equipment, a cable converter box and a Sony multi disc player with the supplied Remote Commander, using the Pre-Programmed feature.
- Call up on-screen menus to set time-related functions (ON/OFF TIMER, CHANNEL BLOCK, DAYLIGHT SAVING), to customize the screen (CH CAPTION, VIDEO LABEL) and to adjust the picture and sound.
- Listen to the main picture or window picture sound through the supplied cordless headphones (KV-27XBR36 and KV-32XBR36 only).

### XBR series advanced technology

- Dynamic Picture™ system adjusts picture contrast automatically to produce more detail in both bright and dark areas of the picture.
- Velocity Modulation (VM) circuitry produces clean and sharp black and white contrasts.
- Dynamic Focus™ circuitry automatically focuses the scanning electron beam for enhanced sharpness over the entire picture, especially at the corners.
- Trinitone™ control allows you to adjust the picture's color temperature (tint) for the best possible color.

# Unpacking

---

- 1** Carefully follow the instructions on the outside of the packing carton to unpack the TV.

## Notes

- The supplied accessories are packed in the upper part of the carton. Be sure not to throw them away.
- Keep the original carton and packing materials to safely transport the TV in the future.

- 2** Check to make sure that all the supplied accessories are included:

- Universal Remote Commander (1)  
(RM-Y113A: KV-27XBR36/32XBR36  
RM-Y112A: KV-27XBR26/32XBR26  
RM-Y115: KV-32XBR76)  
with 2 size AA (R6) EVEREADY batteries
  - Cordless headphones (1) (KV-27XBR36/32XBR36 only)
- If any accessories are missing, contact your dealer.

- 3** Place the TV in a cool, dry place where the ventilation openings at the sides are not blocked.

- 4** Plug the TV power cord into an AC 120 volt power outlet.

For further precautions, see p. 2.

---



Welcome  
Unpacking

# Locating Controls and Connectors


For details, see the pages indicated by the numbered black circles ●.

Front


\*\* Cordless headphones infrared transmitter 33 41  
(KV-27XBR36/32XBR36 only)

KV-27XBR26  
KV-32XBR26  
KV-27XBR36  
KV-32XBR36




POWER switch\*  
TIMER/STAND BY indicator  
STEREO indicator 49

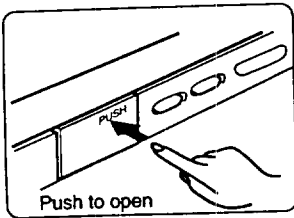


Top view

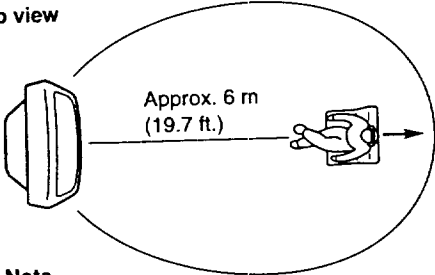

\*\* Note  
You can listen to the TV's sound and control the power and volume with the supplied cordless headphones, within a distance of approx. 6 m (19.7 ft.). (KV-27XBR36/32XBR36 only)

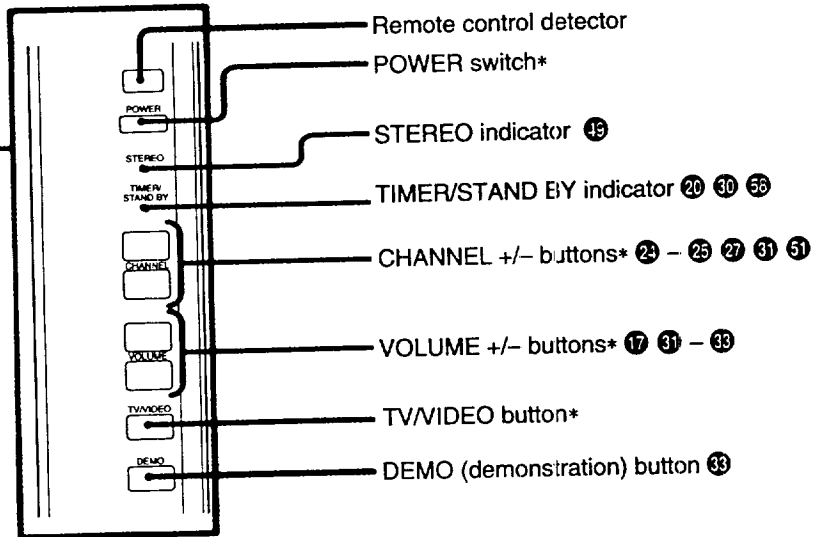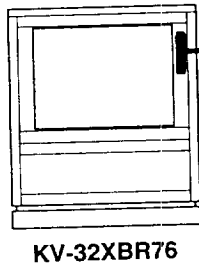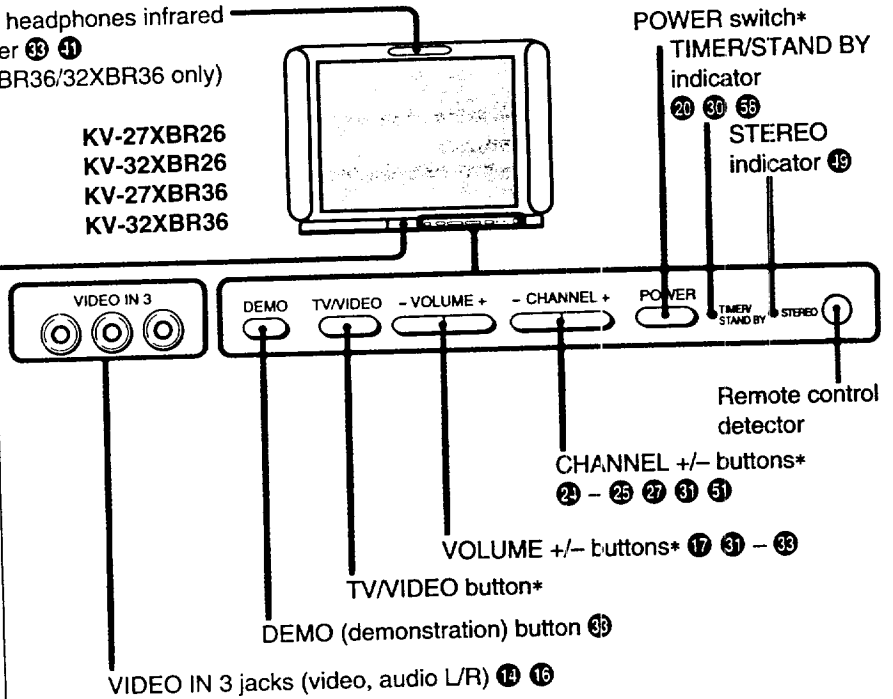


## Screen Displays

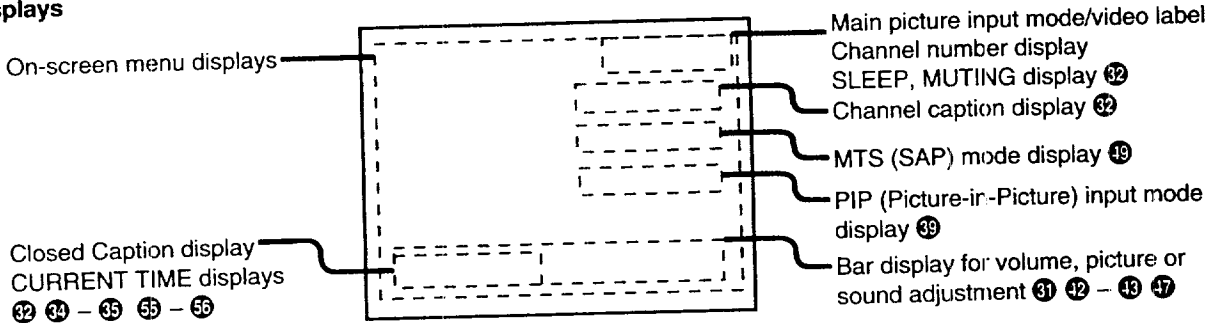


\* Buttons with the same function are also located on the Remote Commander (p. 8).

Rear

**KV-27XBR36/32XBR36/32XBR76**

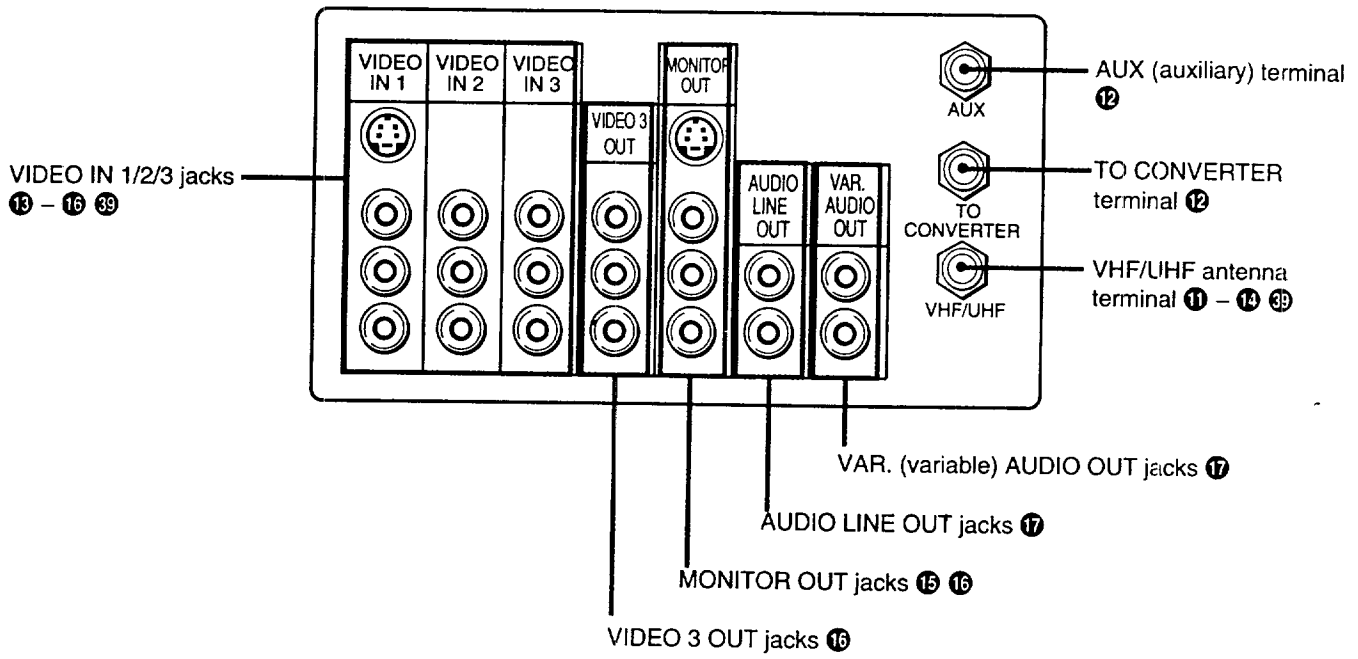


**KV-27XBR26/32XBR26**

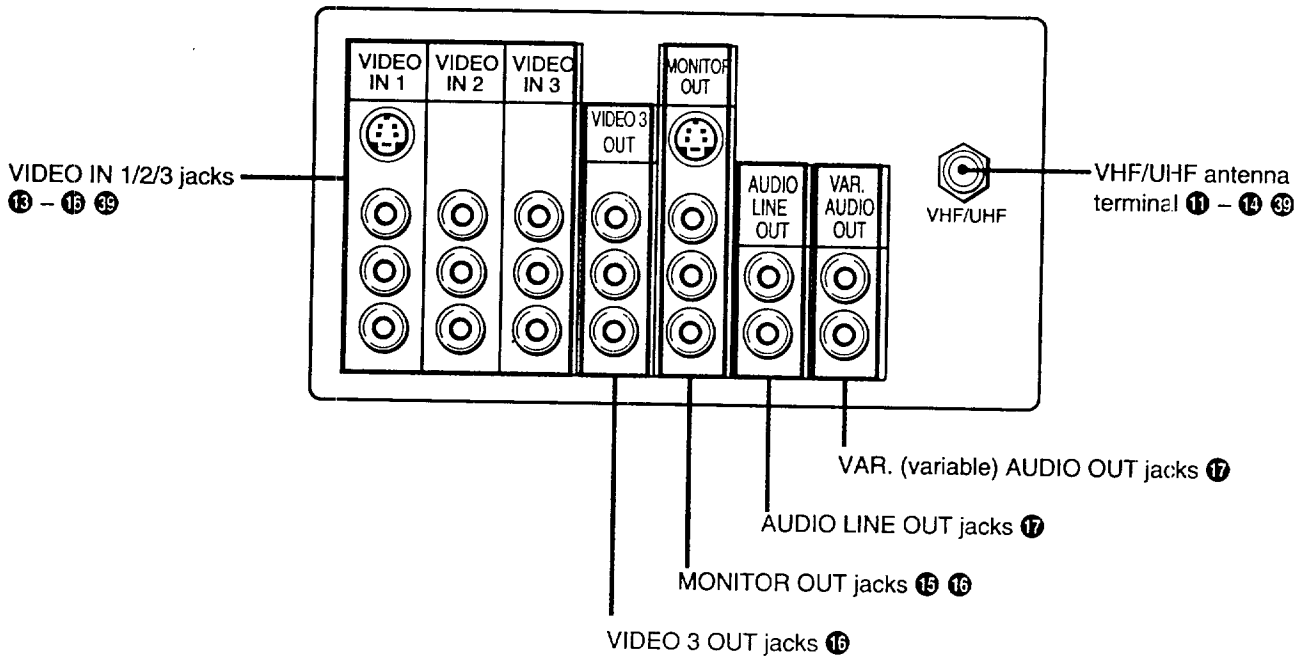

Locating Controls and Connectors

# Locating Controls and Connectors

Remote Commander (with the video control cover closed)

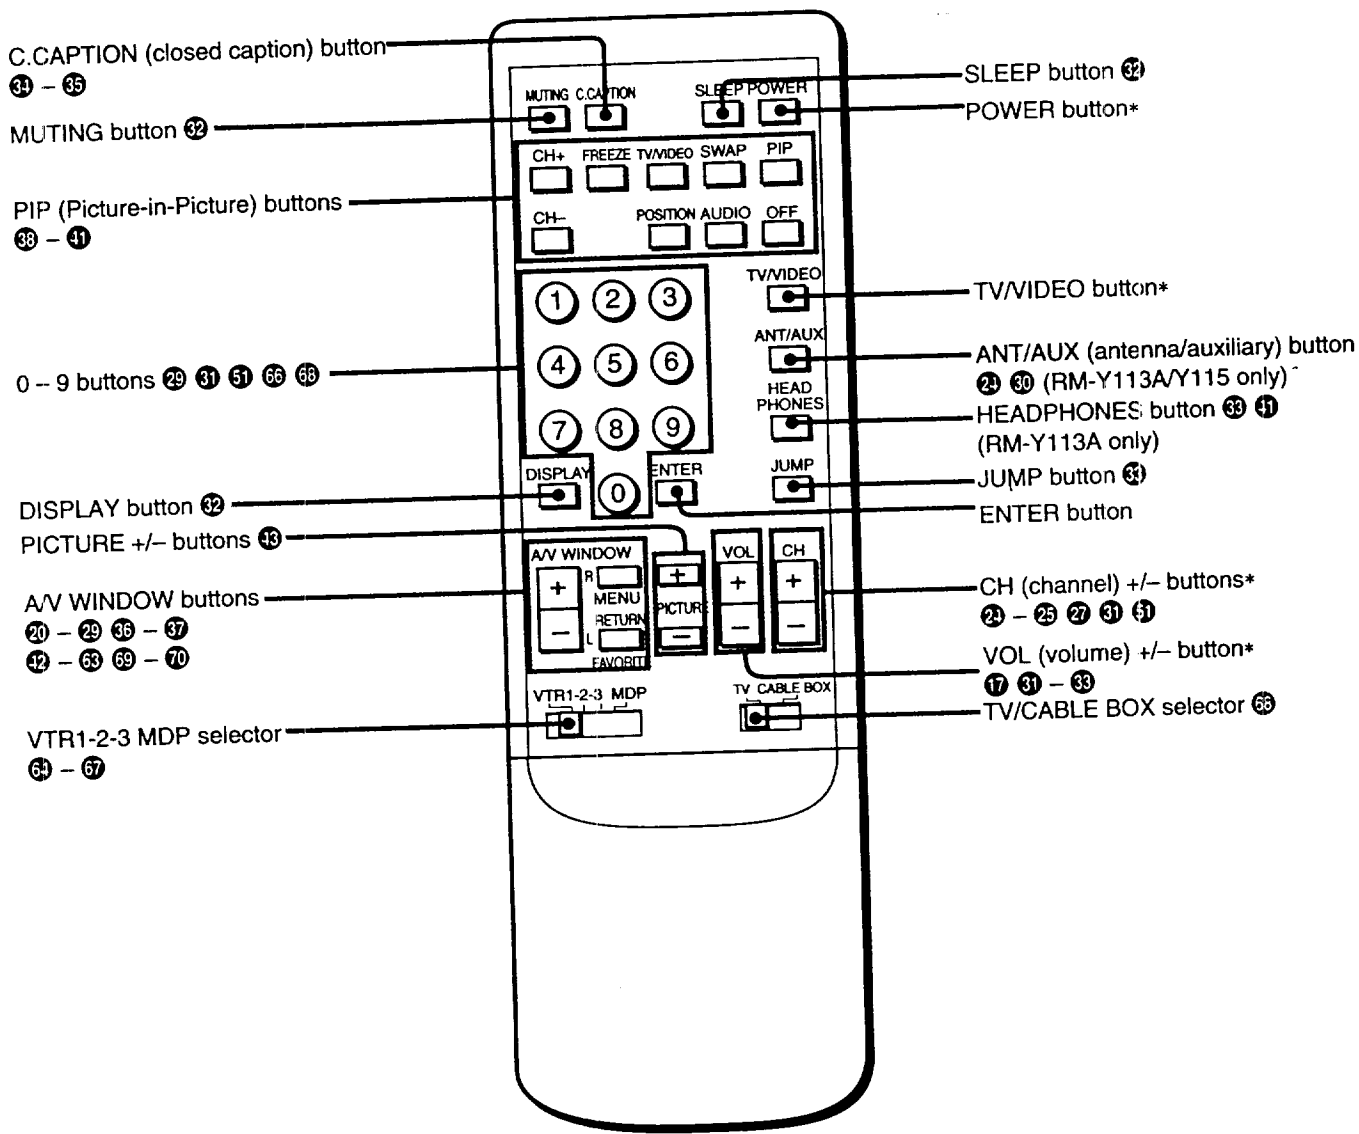

RM-Y113A

RM-Y113A: KV-27XBR36  
KV-32XBR36

RM-Y112A: KV-27XBR26  
KV-32XBR26

RM-Y115: KV-32XBR76

\* Buttons with the same function are also located on the TV (p. 6).

**Note**



If the TV/CABLE BOX selector is set to CABLE BOX, the Remote Commander is able to control a connected cable box, not the TV (p. 68). Set the selector to TV to control the TV with the Remote Commander.



Remote Commander (with the video control cover open)

Opening the video control cover

Slide the cover down.

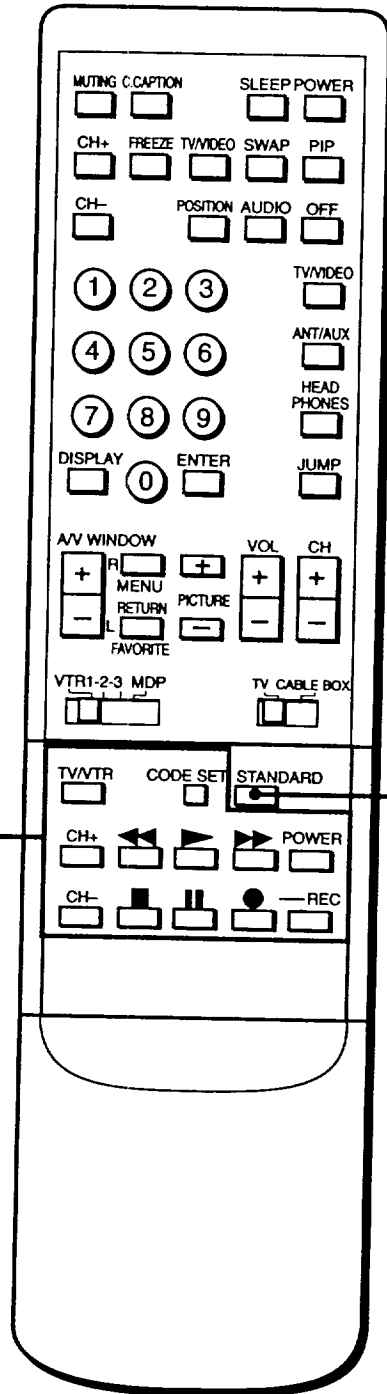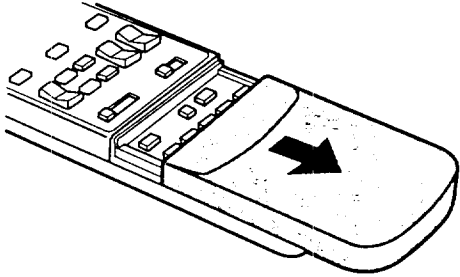

Video operating buttons 64 - 66


STANDARD button 67

RM-Y113A




## Installing batteries in the Remote Commander


- 1 Push open the lid (rear of the Remote Commander).

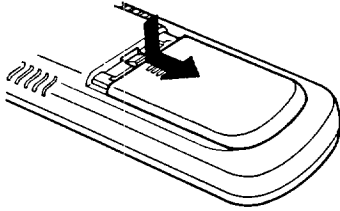

- 2 Install two AA size (R6) batteries so that the ⊕ and ⊖ ends are inserted as shown.

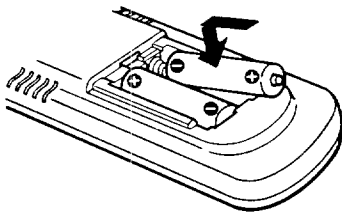

- 3 Replace the lid.

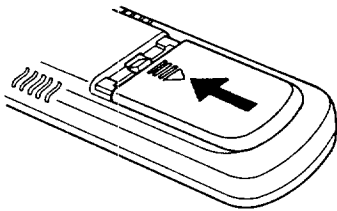

### About battery life


Under normal operation, batteries will last up to half a year. If the Remote Commander does not operate properly, the batteries might be worn out. Replace both of them with new ones.

### To avoid damage from possible battery leakage


Remove the batteries if you do not plan to use the Remote Commander for a fairly long time.

## Installing batteries in the cordless headphones (KV-27XBR36/32XBR36 only)


- 1 Press open the battery compartment lids on both sides.

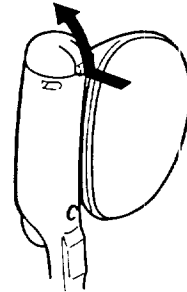

- 2 Install two AA size (R6) batteries, one in each side, so that the ⊕ and ⊖ ends are inserted as shown.

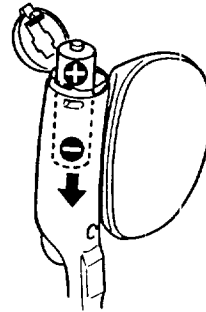

- 3 Close the lids on both sides.

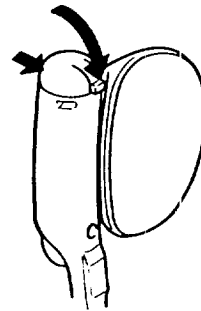

# Making Antenna Connections

Although you can use either an indoor or outdoor antenna with the TV, an outdoor antenna will provide you with better picture quality.


You can receive cable TV by connecting a cable supplied by your local cable company.

## Connecting a VHF, UHF or VHF/UHF combination antenna\*, or CATV cable


Check your antenna cable type. If you have 75-ohm coaxial cable (round), attach an F-type connector (not supplied). If you have 300-ohm twin-lead cable (flat), attach a 300-75 ohm adaptor (not supplied).

### Using 75-ohm coaxial cable (round)

- 1 Prepare the end of the cable by attaching the F-type connector as shown below.

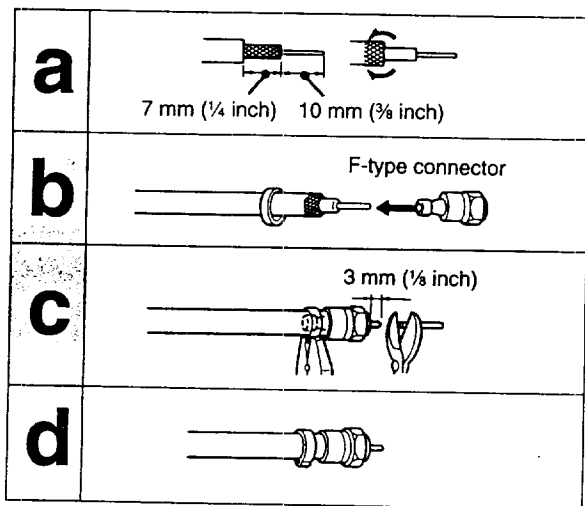


- 2 Plug the connector into the VHF/UHF terminal at the rear of the TV.

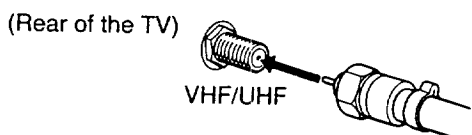


### Using 300-ohm twin-lead cable (flat)

- 1 Prepare the end of the cable by attaching the 300-75 ohm adaptor as shown below.

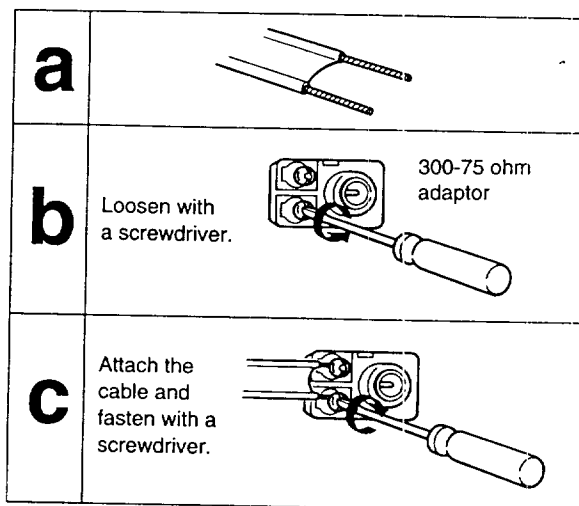


- 2 Plug the adaptor into the VHF/UHF terminal at the rear of the TV.

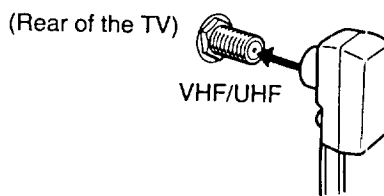

\* Most combination antennas are equipped with a signal splitter. Remove the splitter and attach the appropriate connector.

# Making Antenna Connections

## Connecting both VHF and UHF antennas

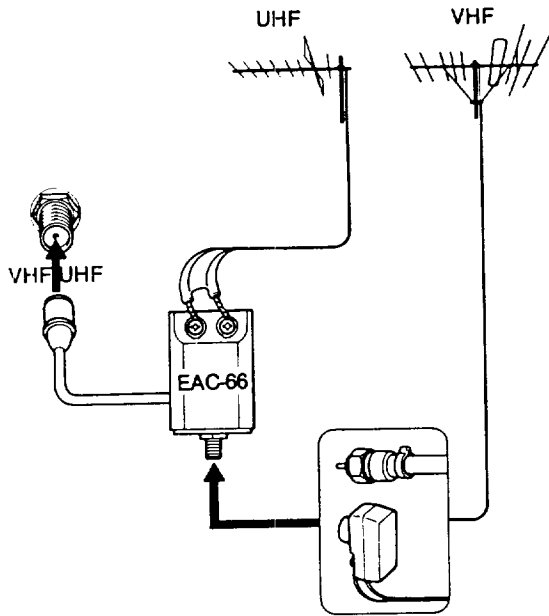


Use an EAC-66 U/V mixer (not supplied).

- 1** Prepare the VHF antenna cable using the appropriate connector (p. 11).
- 2** Connect the cable to the U/V mixer.
- 3** Connect the U/V mixer to the VHF/UHF terminal.

### When you use the U/V mixer

Snow and noise may appear in the picture when viewing cable TV channels over 37 (W + 1).


## Connecting both VHF/UHF antennas and a CATV cable (KV-27XBR36/32XBR36/32XBR76 only)

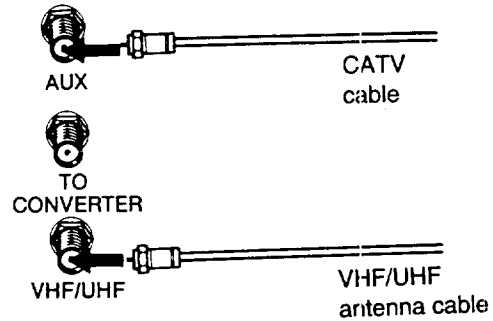

### Note

Do not connect anything to the TO CONVERTER terminal in this case.

## Connecting a cable with a pay cable TV system converter/decoder\* (KV-27XBR36/32XBR36/32XBR76 only)

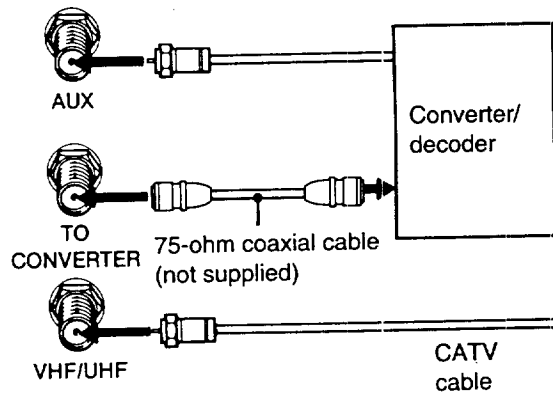

Pay cable TV systems use scrambled or encoded signals and require special converters (decoders) in addition to the normal cable connection.


\* The special converter/decoder will be supplied by the cable company.

# Connecting Other Equipment

After making these connections, you will be able to do the following:

- View the playback of video tapes
- Record TV programs
- Record one TV program while viewing another program
- If you have model KV-27XBR26 or KV-32XBR26, these connections allow you to watch two TV programs at once, using a window picture.

## Connecting a VCR, video disc player or Camcorder equipped with an S video output jack

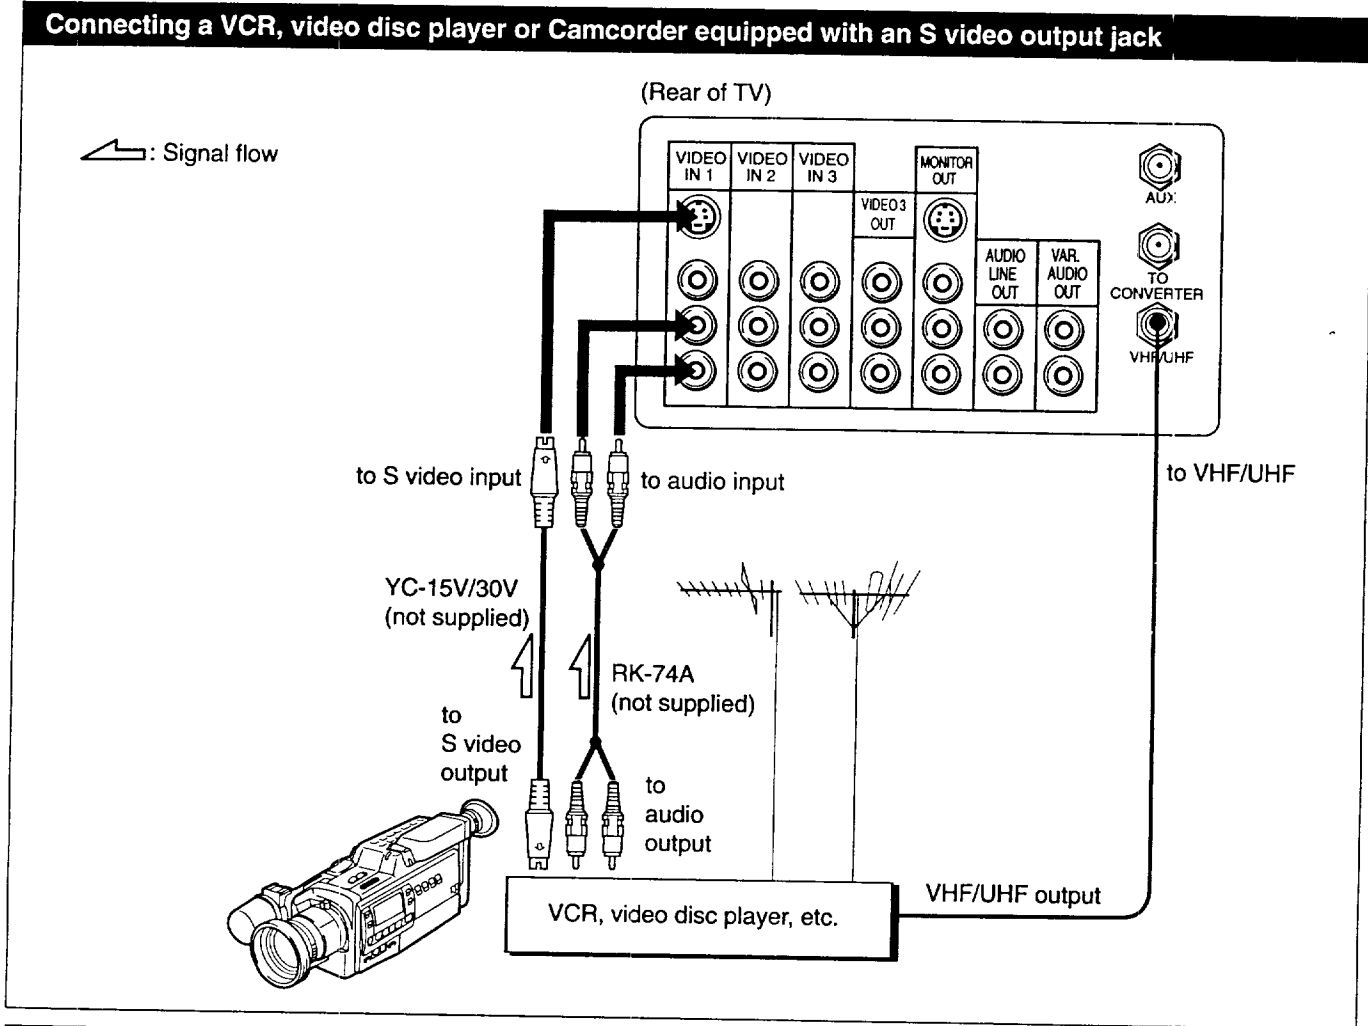

Making Antenna Connections  
Connecting Other Equipment

### Preparing for use

- 1 Turn on the TV.
- 2 Set S-VIDEO to "ON" (p. 46).
- 3 Press TV/VIDEO on the TV or on the Remote Commander so that "VIDEO 1" appears on the screen.

### To return to TV mode

Press TV/VIDEO on the TV or on the Remote Commander so that a channel number appears on the screen.

### Operating the equipment

To operate the video equipment, refer to the instruction manual that comes with the equipment.

You can operate a Sony VCR or video disc player, or a non-Sony VCR with the supplied Remote Commander. For details, see "Using the Pre-Programmed Remote Commander" (pp. 64 – 70).

### About S video input


Video input and output signals can be separated into Y (luminance or brightness) and C (chroma or color) signals. Usually these two signals are combined in a VCR and sent as one signal to a TV. Separation of the Y and C signals prevents them from interfering with one another, thereby improving picture (especially color) quality.

This TV is equipped with S video input jacks through which these separated signals can be input directly.

# Connecting Other Equipment

## Connecting a VCR, video disc player or Camcorder not equipped with an S video output jack

↙ : Signal flow

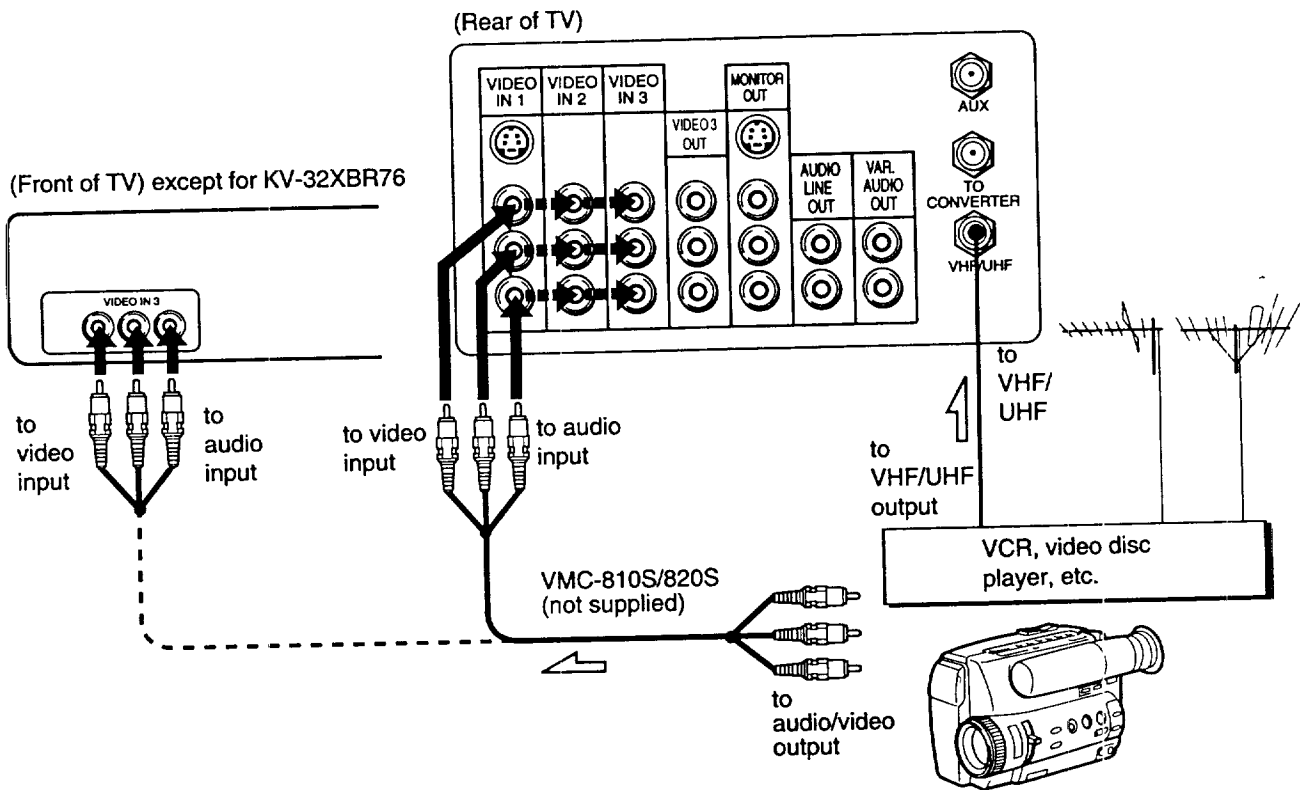

### Preparing for use

- 1 Turn on the TV.
- 2 Press TV/VIDEO on the TV or on the Remote Commander so that "VIDEO 1," "VIDEO 2" or "VIDEO 3" appears on the screen.  
 VIDEO 1: for equipment connected to VIDEO IN 1  
 VIDEO 2: for equipment connected to VIDEO IN 2  
 VIDEO 3: for equipment connected to VIDEO IN 3

### Operating the equipment

Same as p. 13.

#### To return to TV mode


Press TV/VIDEO on the TV or on the Remote Commander so that a channel number appears on the screen.

#### Notes

- If you try to use equipment that is connected to the front and rear VIDEO IN 3 jacks at the same time, the picture will be distorted. Be sure you turn off one piece of equipment first (except for KV-32XBR76).
- You can label each of the video input modes (p. 53).
- You do not need to select a video mode when you use the direct play function (pp. 69 – 70).
- If you connect a monaural VCR, connect the audio output of the VCR to the L (MONO) jack of VIDEO IN (1, 2 or 3). The monaural sound will be heard from both speakers.

## Connecting two VCRs (equipped with an S video output jack) for tape editing

↗ : Signal flow

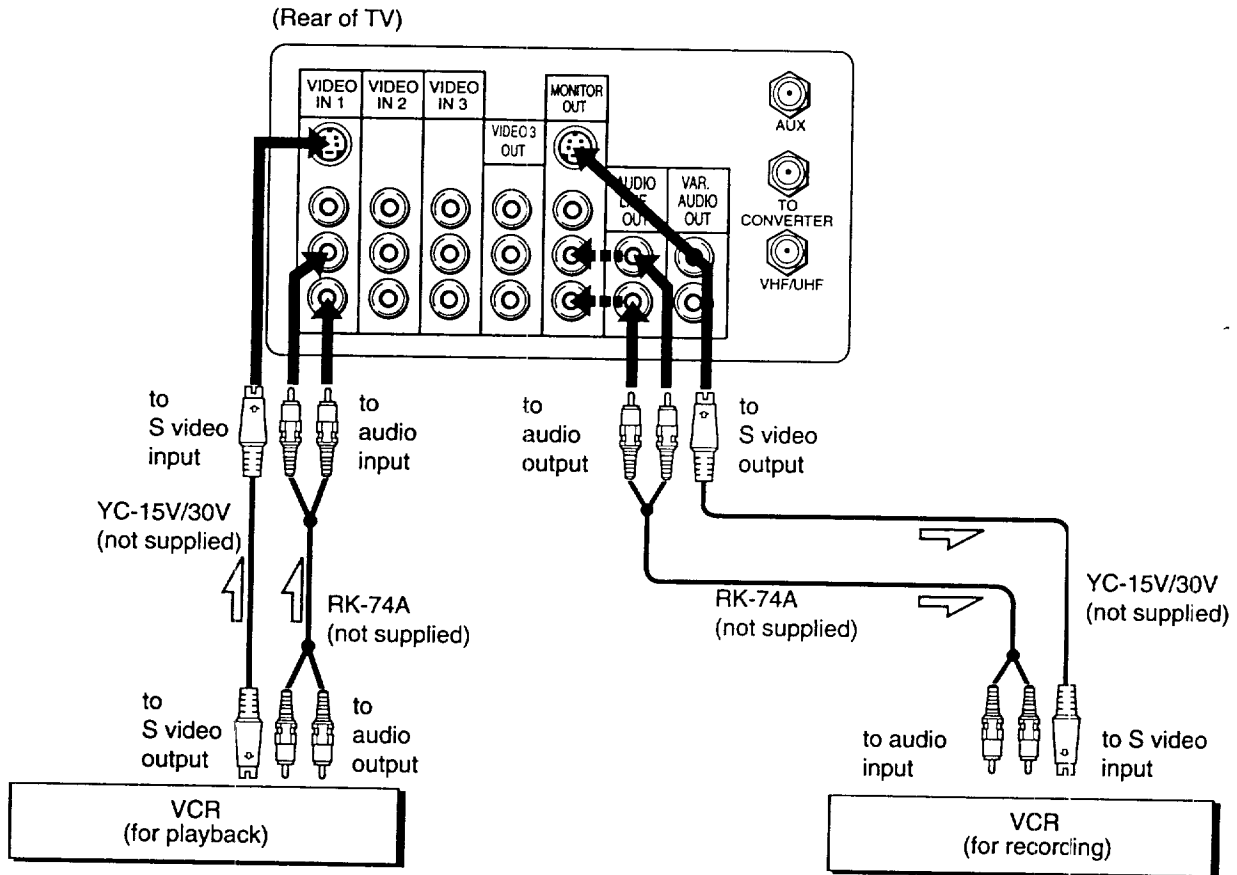

Connecting Other Equipment

### Preparing for use/Operating the equipment

Same as p. 13.


#### Caution

Video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws.

#### Notes

- Do not change the input signal while editing through MONITOR OUT, or the output signal will also change.
- When connecting a single VCR to the TV, do not connect the MONITOR OUT jacks at the rear of the TV to the VCR's line input, while at the same time connecting from the TV's VIDEO IN jacks to the VCR's line output, as shown below.

(Rear of the TV)

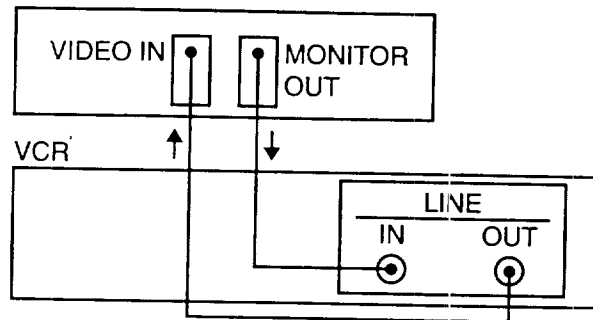


The above type of connection is not a problem when you connect from the line input of one VCR, and from the line output of a second VCR.

# Connecting Other Equipment

## Connecting two VCRs (not equipped with an S video output jack) for tape editing

↙ : Signal flow

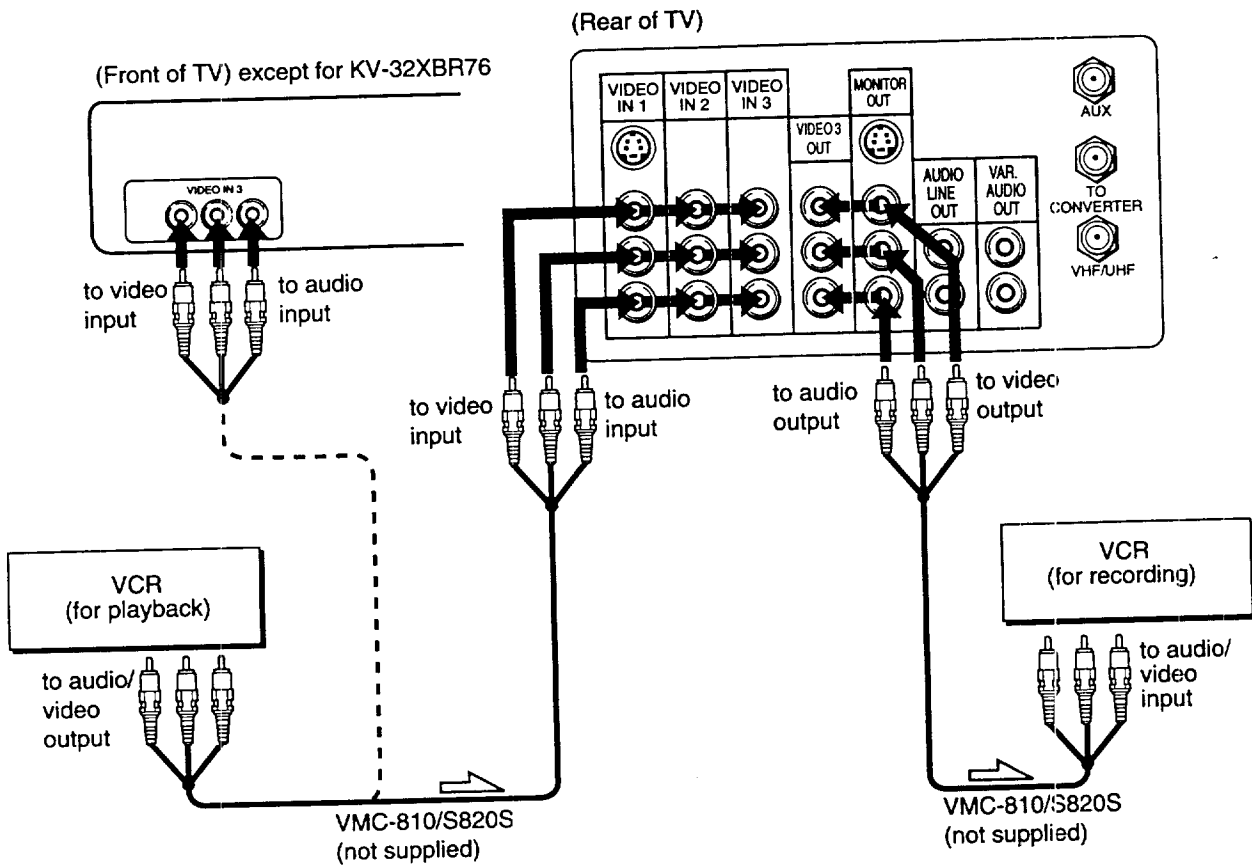

### Preparing for use

- 1 Turn on the TV.
- 2 Press TV/VIDEO on the TV or on the Remote Commander so that "VIDEO 1," "VIDEO 2" or "VIDEO 3" appears on the screen.  
 VIDEO 1: for equipment connected to VIDEO IN 1  
 VIDEO 2: for equipment connected to VIDEO IN 2  
 VIDEO 3: for equipment connected to VIDEO IN 3

#### Note (except for KV-32XBR76)

If you try to use the equipment connected to the front and rear VIDEO IN 3 jacks at the same time, the picture will be distorted. Be sure you turn off one piece of equipment first.

### Watching a different image while duplicating

The VIDEO 3 OUT jacks only output the signal from VIDEO IN 3.

If you connect a VCR for playback to the VIDEO IN 3 jacks, and a VCR for recording to the VIDEO 3 OUT jacks to duplicate your recorded tapes, you can watch input images different from the image being output for recording.


### To watch a different input image

Press TV/VIDEO on the TV or on the Remote Commander to select the input image you want to watch.



## Connecting an audio system

↙ : Signal flow

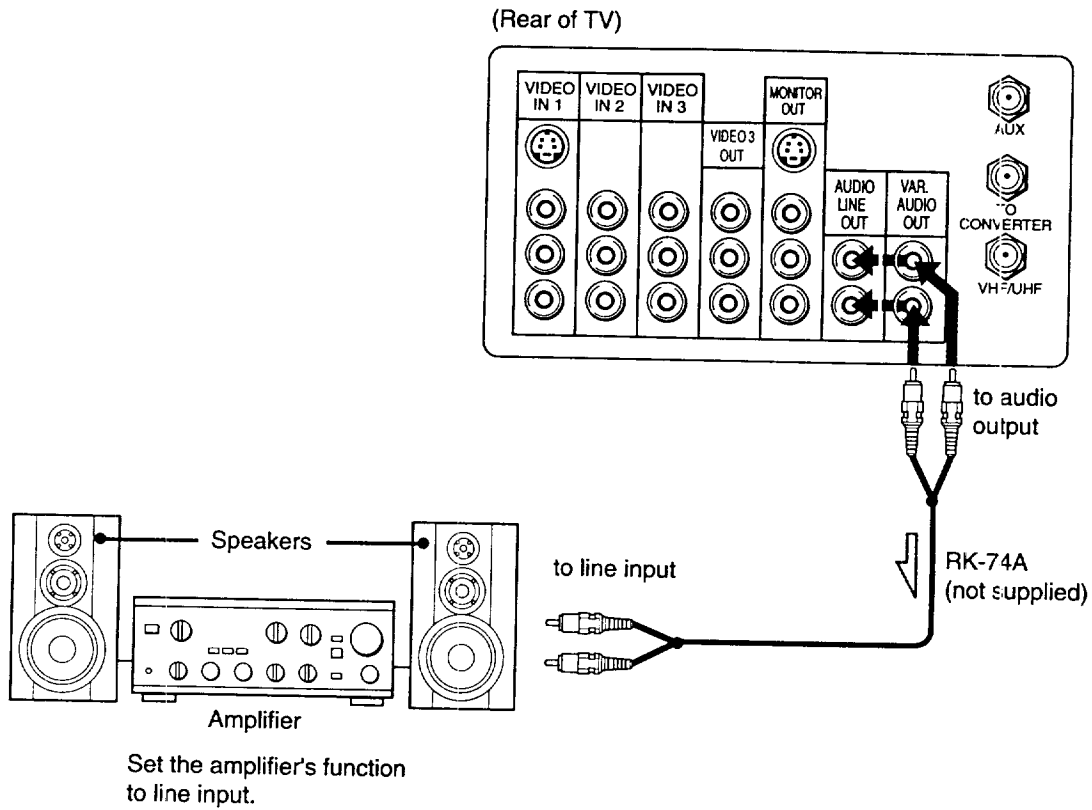

### Preparing for use

Display the mode set menu and set SPEAKER to "OFF" to cut off the TV speaker sound (p. 50), and listen to the TV's sound solely through the audio system speakers.

### Adjusting the sound level

If you connect your stereo system to VAR. AUDIO OUT, leave the amplifier volume, bass and treble controls at their mid position, and adjust the level with the VOLUME +/- buttons on the TV or the VOL +/- buttons on the Remote Commander.

If you connect your stereo system to AUDIO LINE OUT, adjust the speaker volume with the stereo amplifier controls.


#### Note

By connecting to VAR. AUDIO OUT, you can adjust the bass, treble and balance, or select an SRS (Sound Retrieval System) or an MTS (Multichannel TV Sound) mode, using the on-screen menus (pp. 47 - 49).


# Using the On-Screen Menus

The following flow chart shows the different levels of on-screen menus that you can use to make various adjustments and settings. See the indicated pages for instructions on using each feature.


## For picture and sound quality adjustment

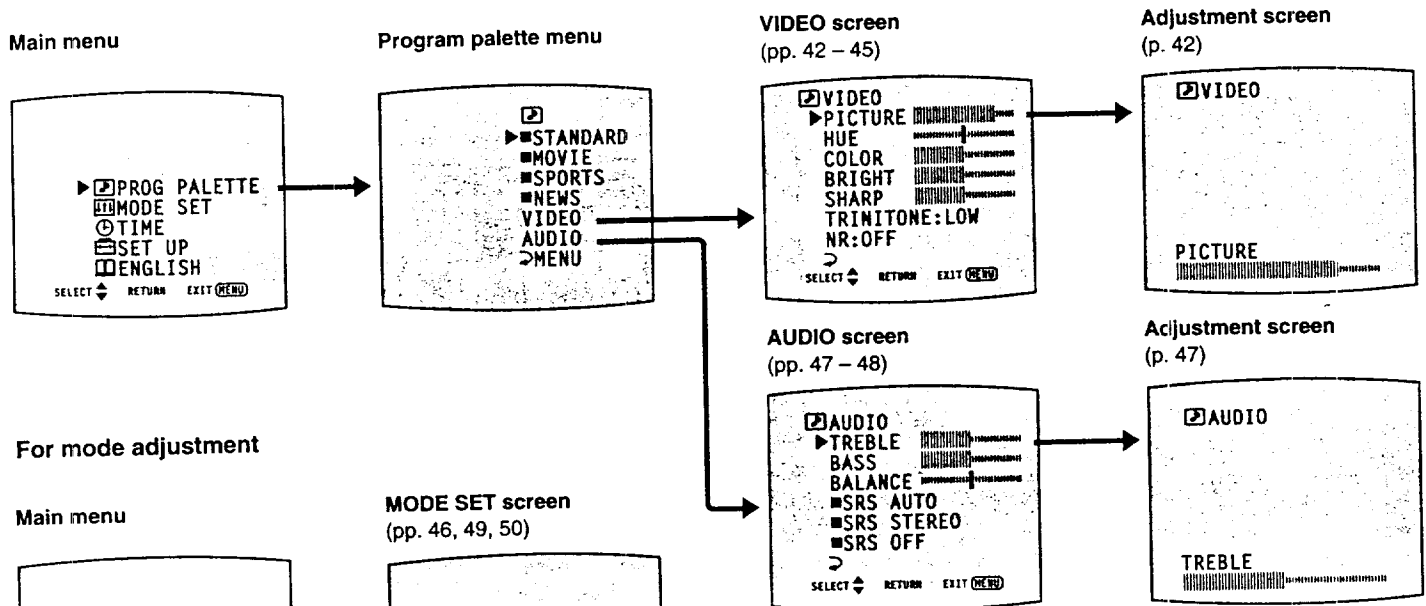

## For mode adjustment

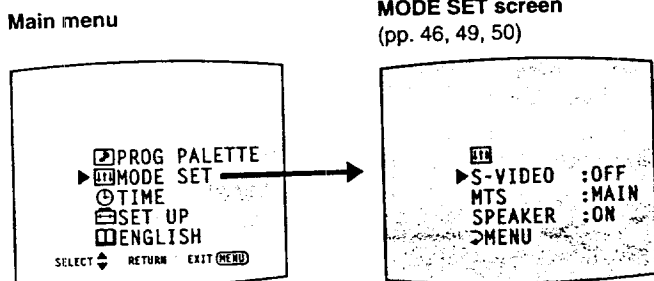


## For time-related settings

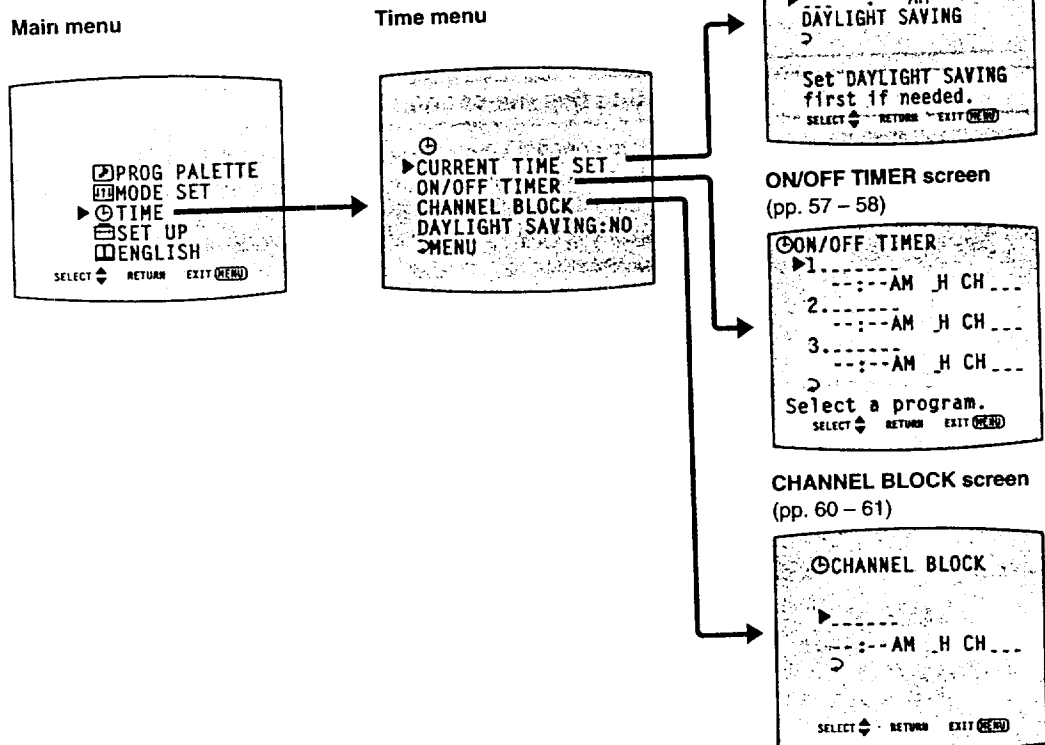


## For presetting and other functions


### Main menu

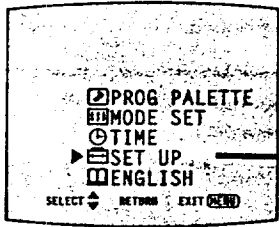


### SET UP screen

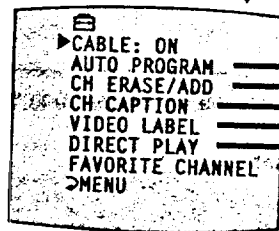


AUTO PROGRAM screen  
(p. 25)

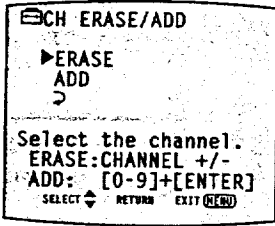


CH (channel) ERASE/ADD screen  
(pp. 27, 29)

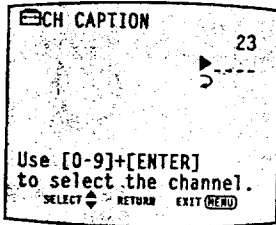


CH (channel) CAPTION screen  
(pp. 51 – 52)

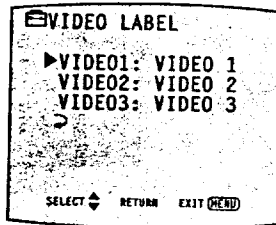

VIDEO LABEL screen  
(p. 53)

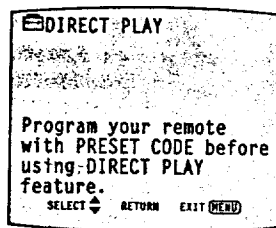


DIRECT PLAY screen  
(pp. 69 – 70)

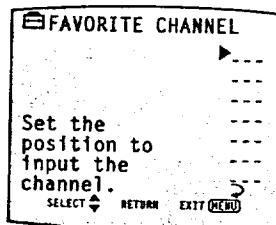

FAVORITE CHANNEL screen  
(pp. 62 – 63)

## Navigating through the menus

### Remote Commander

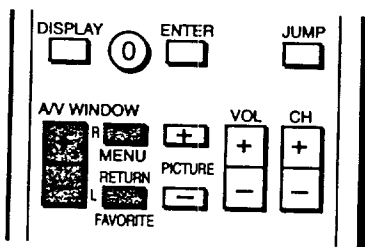

**To display the main menu**  
Press MENU.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to ">MENU."

Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.


### Note

The menus disappear automatically, if you do not press a button within 90 seconds.

# Using the On-Screen Menus



Front of TV

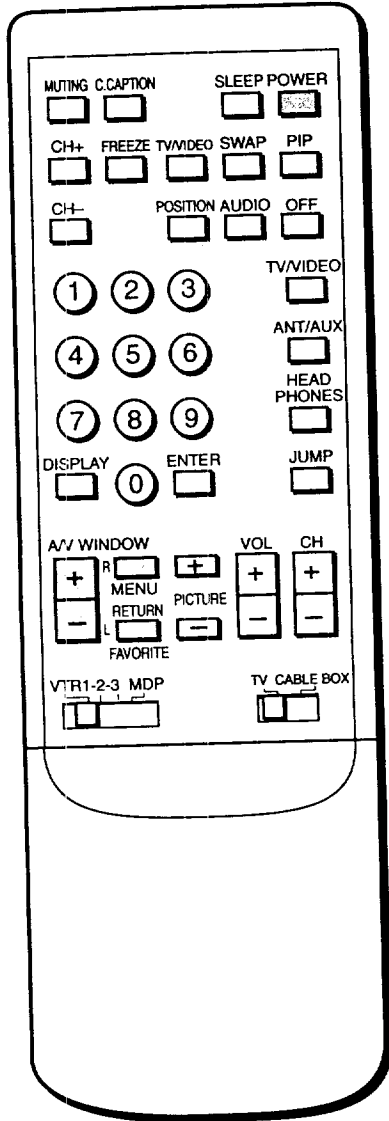


RM-Y113A

## Changing the menu language


The menu language is factory-set to ENGLISH. Follow these instructions to change the menu language to Spanish or French, or back to English.

- 1 Press POWER on the TV or on the Remote Commander to turn on the TV. The TIMER/STAND BY indicator flashes until the picture appears.


POWER

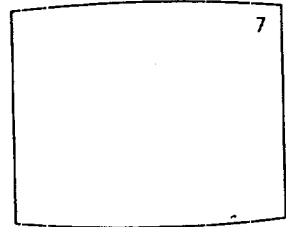


- 2 Press MENU. The main menu appears.

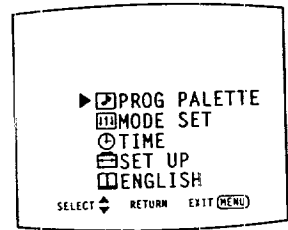

 
- 3 Press A/V WINDOW +/- until the cursor points to "ENGLISH." Then press RETURN. The language display turns red.



RETURN

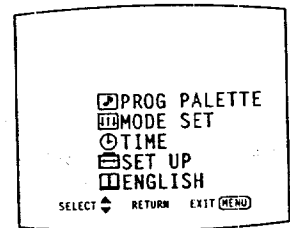


- 4 Press A/V WINDOW +/- to select the language. Each time you press A/V WINDOW +/-, the "ESPAÑOL," "FRANÇAIS" and "ENGLISH" menus appear.

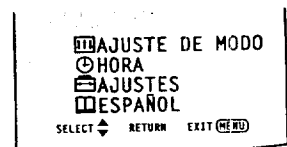

### Note

Certain parts of the "ESPAÑOL" and "FRANÇAIS" menus remain in English.

**5** Press RETURN.  
*The language is selected.*

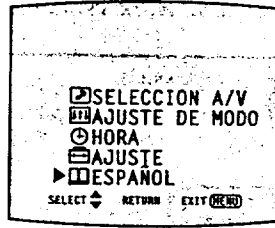


Spanish menu

**To return to the normal screen**  
Press MENU on the Remote Commander.


**Notes concerning menus**

- During PIP (Picture-in-Picture) mode, the on-screen menus may overlap the window picture.
- Screen displays (VOLUME, MUTING, CHANNEL, etc.) may overlap the on-screen menus.
- The menus disappear automatically, if you do not press a button within 90 seconds.

# Setting CABLE ON or OFF

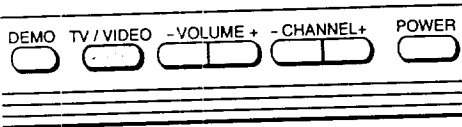

Front of TV

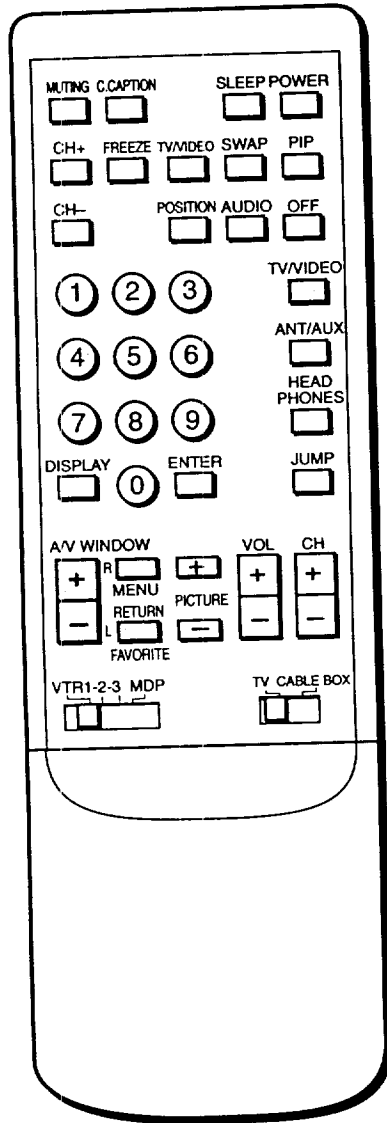


RM-Y113A

If you have cable connected to the TV, follow the steps below to set the cable connection on or off. Set CABLE OFF to preset or watch VHF or UHF channels, and set CABLE ON to preset or watch cable TV channels.



**Note**

If the TV is in video mode, the "CABLE" display is shaded and cannot be selected. Press TV/VIDEO on the TV or on the Remote Commander to change to TV mode.


- 1 Press MENU.  
The main menu appears.

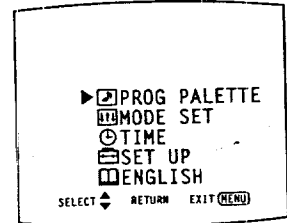


- 2 Press A/V WINDOW +/- until the cursor points to "SET UP."

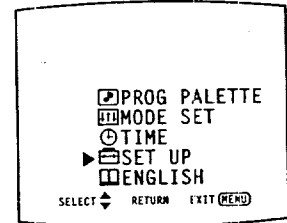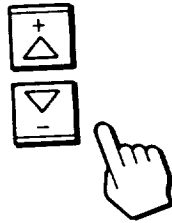



- 3 Press RETURN.  
The set up menu appears, and the cursor points to "CABLE."

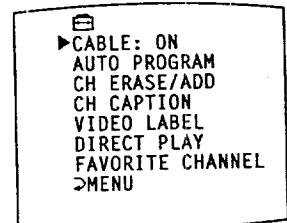


- 4 Press RETURN again.  
The mode display turns red.

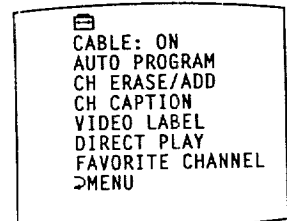

**5** Press A/V WINDOW +/- to select "ON" or "OFF."

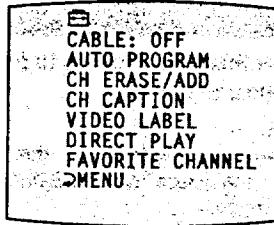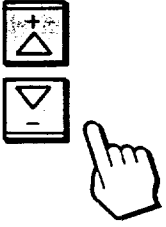

**6** Press RETURN.  
The setting is complete.

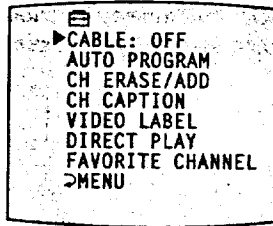

**To return to the previous menu**

Press A/V WINDOW +/- until the cursor points to " > MENU."  
Then press RETURN.

**To return to the main menu**

Repeat the above, until you reach the main menu.

**To return to the normal screen**

Press MENU on the Remote Commander.

**Cable TV channel chart\***

Cable TV systems use letters or numbers to designate channels. To tune in a channel, refer to the chart below.

Number on this TV	Corresponding CATV channel
1	A-8
5	A-7
6	A-6
14	A
15	B
16	C
17	D
18	E
19	F
20	G
21	H
22	I
23	J
24	K
25	L
26	M
27	N
28	O
29	P
30	Q
31	R
32	S
33	T
34	U
35	V
36	W
37	W+1
38	W+2
39	W+3
•	•
•	•
•	•
•	•
93	W+57
94	W+58
95	A-5
96	A-4
97	A-3
98	A-2
99	A-1
100	W+59
101	W+60
102	W+61
•	•
•	•
•	•
•	•
123	W+82
124	W+83
125	W+84

Setting CABLE ON or OFF

Check with your local cable TV company for more complete information on the available channels.

\* The designation of the cable TV channels conforms to the EIA/NCTA recommendation.

# Presetting TV Channels


By presetting TV channels to the TV, you can select channels by pressing CHANNEL +/- on the TV or CH +/- on the Remote Commander.

## Presetting all receivable channels automatically


Follow these instructions to preset all the receivable VHF, UHF or cable TV channels to the TV.

### Notes

- If the TV is in video mode, the "AUTO PROGRAM" display is shaded and cannot be selected. Press TV/VIDEO on the TV or on the Remote Commander to change to TV mode.
- Perform auto programming during the day rather than late at night, when some channels may not be broadcasting.

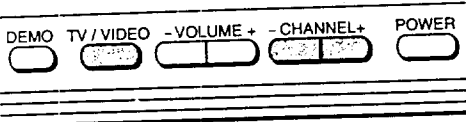


Front of TV

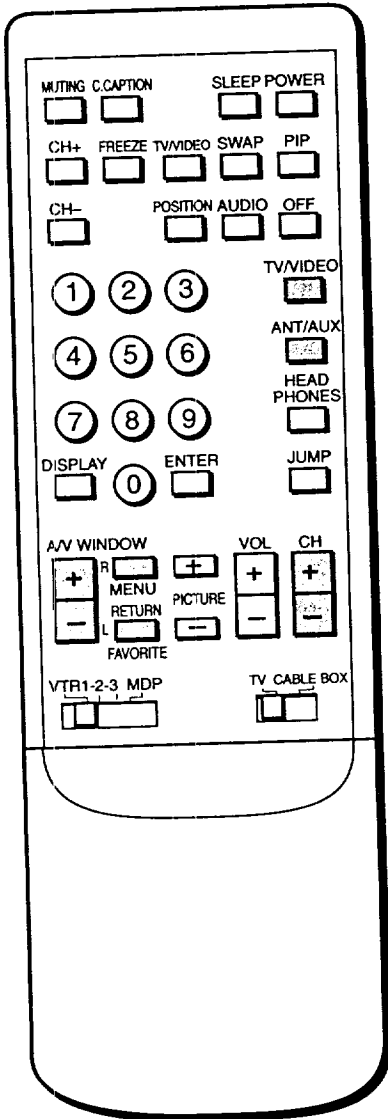


RM-Y113A

**1** Set the cable connection on or off (pp. 22 – 23) to select the type of channel you want to preset, VHF/UHF or cable TV.

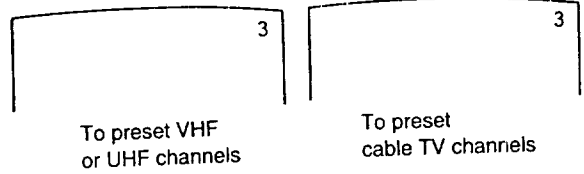

Press ANT/AUX to select the type of channel you want to preset, VHF/UHF/regular cable TV or pay cable TV (KV-27XBR36/32XBR36/32XBR76 only).

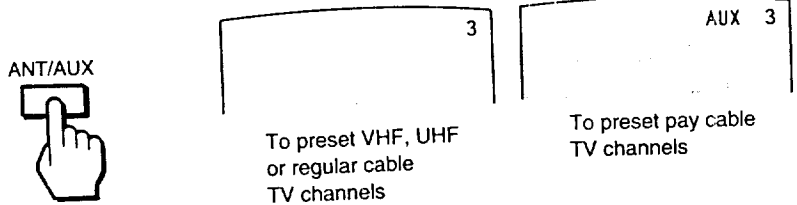

**2** Press MENU.  
*The main menu appears.*




**3** Press A/V WINDOW +/- until the cursor points to "SET UP."








**4** Press RETURN.  
The set up menu appears.

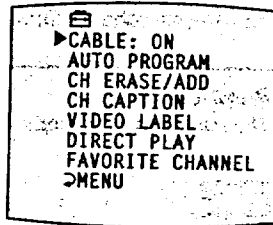

**5** Press A/V WINDOW +/- until the cursor points to "AUTO PROGRAM."

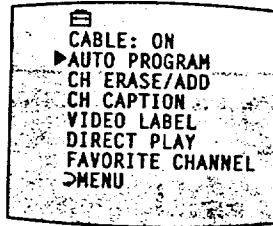
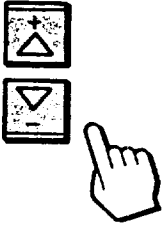


**6** Press RETURN.

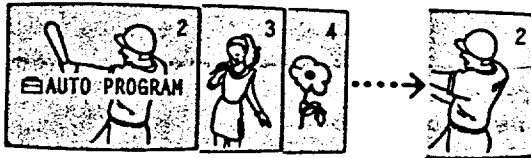

"AUTO PROGRAM" appears on the screen and receivable channels (other than the channels already preset) are preset in numerical sequence. The channels previously preset will not remain in the TV's memory. When no more channels are found, auto programming stops and the screen returns automatically to the set up menu.

**7** Press CH +/- to check or view the preset channels.

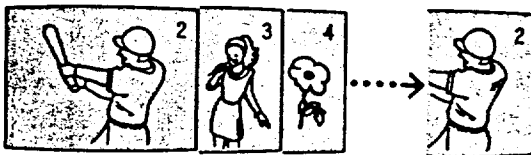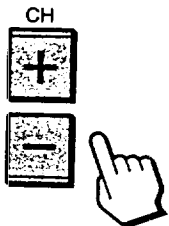

**Receivable channels for this TV**

VHF: 2 – 13  
UHF: 14 – 69  
Cable: 1 – 125

 
**To select TV channels without presetting**  
Press the 0 – 9 buttons and ENTER.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to "> MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.


# Presetting TV Channels



## Erasing TV channels


Follow these instructions to erase unnecessary TV channels, so that when you press CH +/-, the channel(s) are skipped.

Front of TV


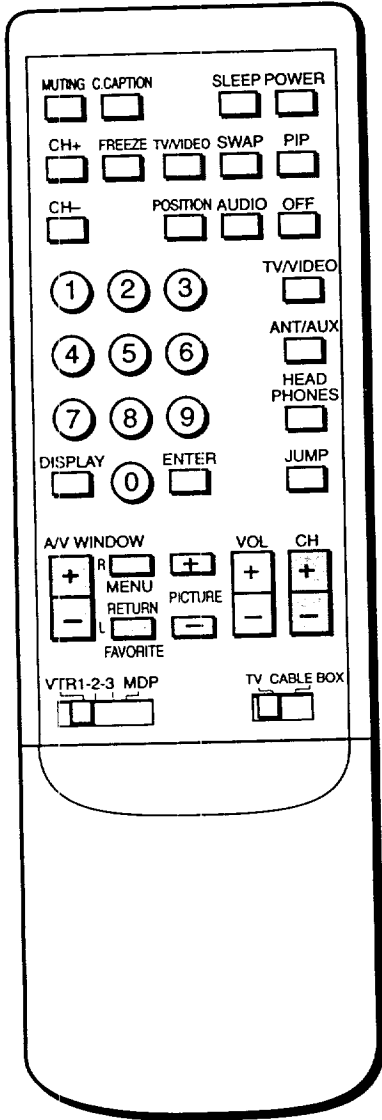


RM-Y113A


- 1 Press MENU  
*The main menu appears.*

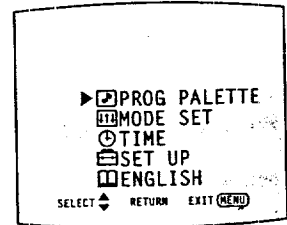



- 2 Press A/V WINDOW +/- until the cursor points to "SET UP."

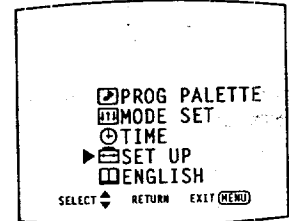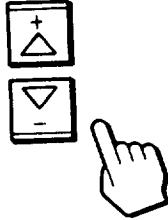


- 3 Press RETURN  
*The set up menu appears.*

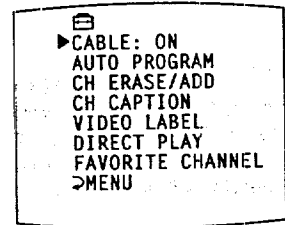



- 4 Press A/V WINDOW +/- until the cursor points to "CH ERASE/ADD."

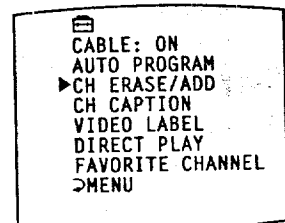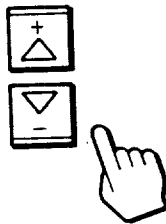


- 5** Press RETURN.  
The CH ERASE/ADD screen appears, and the cursor points to "ERASE."

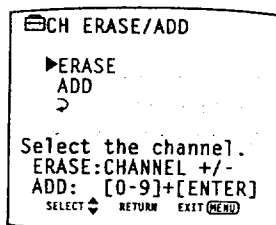

- 6** Press CHANNEL +/- on the TV or CH +/- on the Remote Commander to select the channel you want to erase.  
The channel display appears.

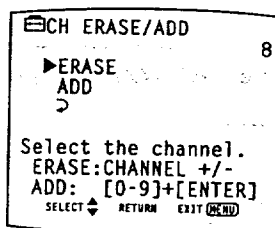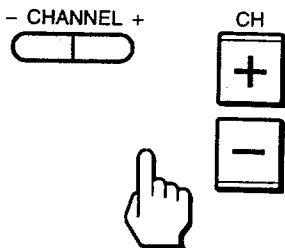

- 7** Press RETURN.  
A "-" sign appears in front of the channel number display, indicating that the channel is erased; then the CH ERASE/ADD screen automatically reappears.

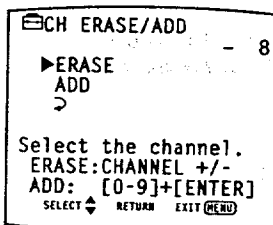


**To erase another channel**  
Repeat steps 6 – 7.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to "➤ MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.

**Note**  
If you erase a VHF or UHF channel, the same number cable TV channel is also erased (and vice versa).

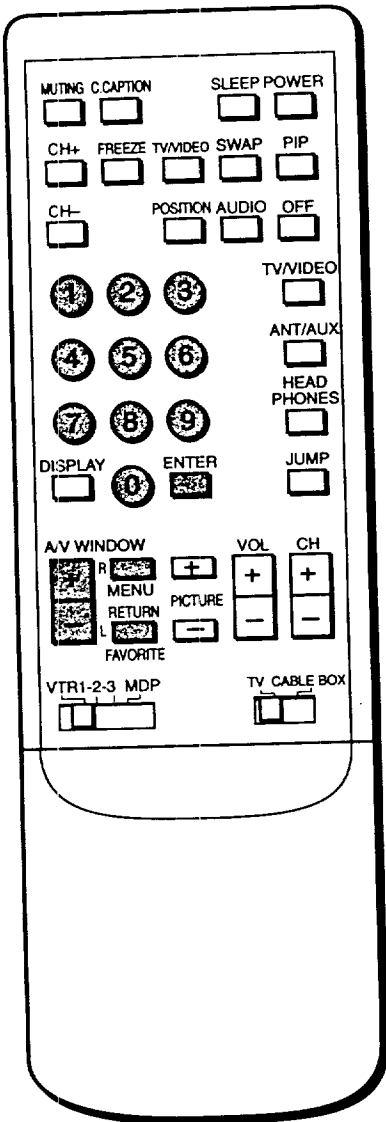


RM-Y113A



## Adding TV channels

Follow these instructions to add TV channels one by one to the selection memory, or to replace a TV channel you previously erased (pp. 26 – 27).


- 1 Press MENU  
The main menu appears.

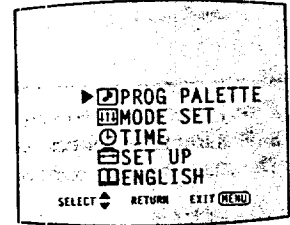



- 2 Press A/V WINDOW +/- until the cursor points to "SET UP."

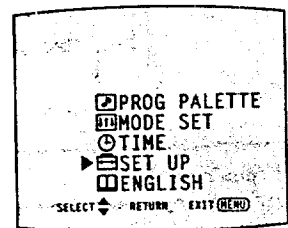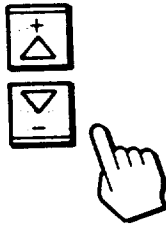


- 3 Press RETURN.  
The set up menu appears.

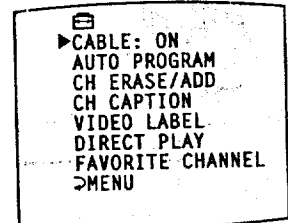

- 4 Press A/V WINDOW +/- until the cursor points to "CH ERASE/ADD."

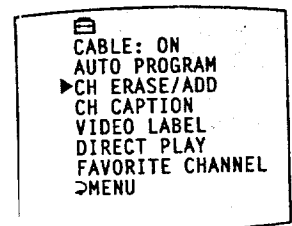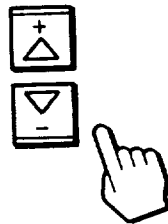

**5** Press RETURN.  
The CH ERASE/ADD screen appears.


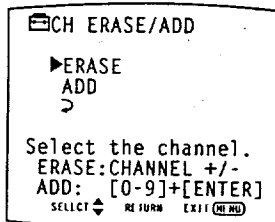


**To add another channel**  
Repeat steps 7 – 3.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to "MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above until you reach the main menu.



**6** Press AV WINDOW +/- until the cursor points to "ADD."

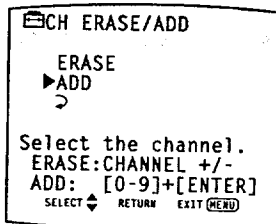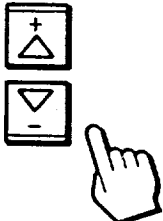


**To return to the normal screen**  
Press MENU on the Remote Commander.

**Note**  
If you add a VHF or UHF channel, the same number cable TV channel is also added (and vice versa).

**7** Press 0 – 9 and ENTER on the Remote Commander to select the channel you want to add.  
The channel display appears.

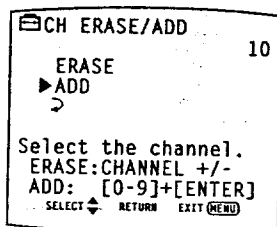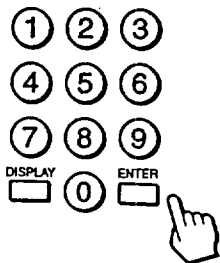


**8** Press RETURN  
A "+" sign appears in front of the channel number display, indicating that the channel is added; then the CH ERASE/ADD screen automatically reappears.

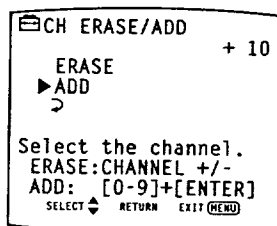

# Watching TV Programs



Front of TV

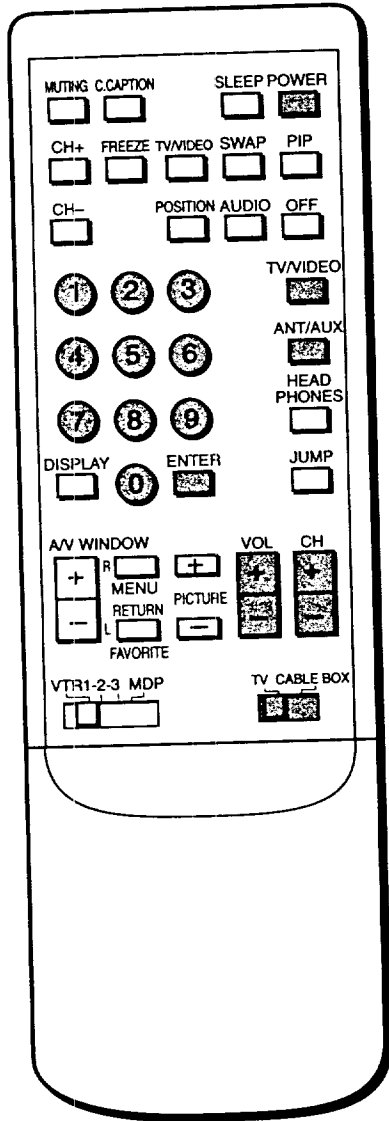


RM-Y113A

Make sure that the TV/CABLE BOX selector on the Remote Commander is set to TV, in order to control the TV with the Remote Commander.

- 1 Press POWER on the TV or on the Remote Commander to turn on the TV. The TIMER/STAND BY indicator flashes until the picture appears.

POWER

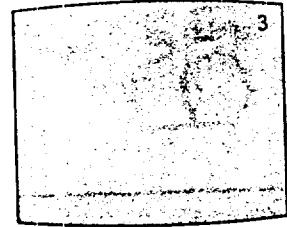

- 2 Set the cable connection on or off (pp. 22 – 23) to select the type of channel you want to watch, VHF/UHF or cable TV.



To watch VHF or UHF channels



To watch cable TV channels

Press ANT/AUX to select the type of channel you want to watch, VHF/UHF/regular cable TV or pay cable TV (KV-27XBR36/32XBR36/32XBR76 only).

ANT/AUX




To watch VHF, UHF or regular cable TV channels




To watch pay cable TV channels

### 3 Select a channel in one of the following two ways:



To scan the preset channels in numerical sequence, press CH +/-.

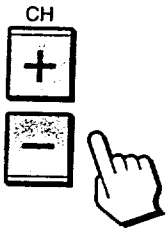

To select a channel directly, press 0 – 9 and then ENTER.  
For example, to select channel 10, press 1, 0 and ENTER.

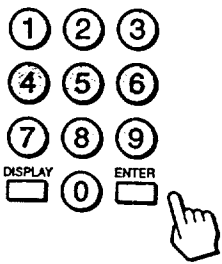

### 4 Press VOL +/- to adjust the volume.

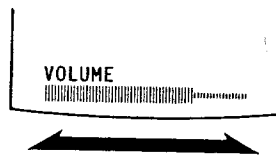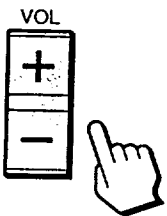

Press + to increase the volume.  
Press - to decrease the volume.

#### If VIDEO 1, VIDEO 2 or VIDEO 3 appears on the screen

Press TV/VIDEO on the TV or on the Remote Commander until a TV channel number appears.

#### To select channels more easily


Set FAVORITE CHANNEL (pp. 62 – 63).

#### To turn off the TV

Press POWER on the TV or on the Remote Commander.



# Using Convenient Features

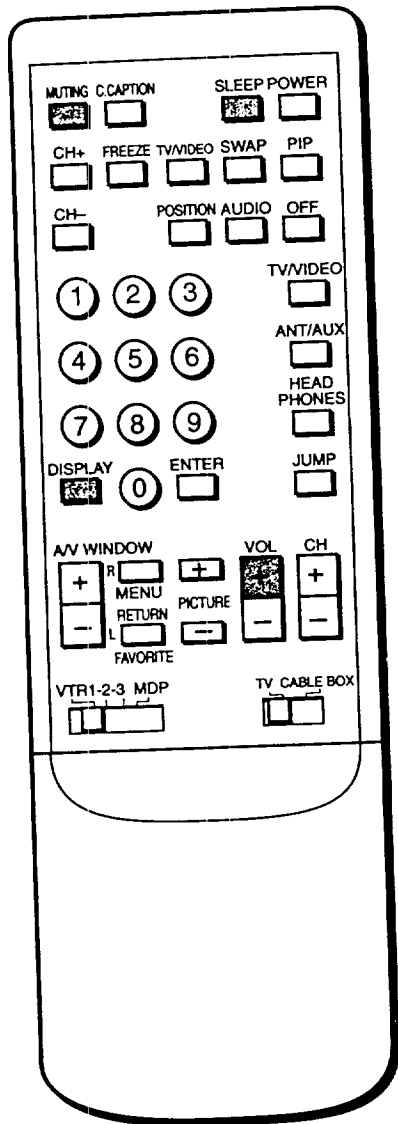

RM-Y113A

## Muting the sound — MUTING

Press MUTING.  
"MUTING" appears on the screen.

 
**To restore the sound**  
Press MUTING again, or press VOL +.



## Keeping the displays on-screen — DISPLAY

Press DISPLAY.  
All the existing displays appear: channel number, channel caption (if set), MTS mode ("SAP" only), window picture input mode, and the current time ("AM" or "PM" disappears after about three seconds).


**To turn off the displays**  
Press DISPLAY again.



## Setting the sleep timer — SLEEP

The sleep timer turns off the TV automatically after the amount of time you select.

Press SLEEP.  
Each time you press SLEEP, the time increments "30," "60," "90" and "OFF" mode appear in sequence.

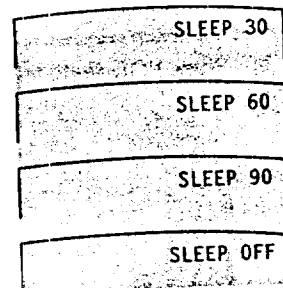

A red "SLEEP" display appears about one minute before the TV goes off.

**To cancel the setting.**  
Press SLEEP until OFF mode appears.  
A green "SLEEP OFF" display appears for about three seconds.  
OR  
Turn the TV off.  
The sleep timer setting is cancelled.





Front of TV

## Switching quickly between two channels — JUMP

Use this function to keep track of two programs alternately.

**To recall the channel you were watching previously**  
Press JUMP.



**To switch back to the first channel**  
Press JUMP again.

## Using the cordless headphones — HEADPHONES (KV-27XBR36/32XBR36 only)

Turning on the headphones does not affect the sound from the TV speakers. If you want to listen to the sound from the headphones only, turn off the TV speaker sound by pressing VOLUME – on the TV or VOL. – on the Remote Commander.

**To turn on the headphones**  
Press HEADPHONES.

The display appears for about three seconds.



**To control the headphones volume/  
To turn the headphones power on or off**  
Use the controls on the headphones.

**To turn off the headphones**  
Press the headphones power button first, then press HEADPHONES.

**To use the headphones to listen to sound from a window picture (PIP function)**  
See “Selecting the headphones audio source” (p. 41).

### Notes


- When using the headphones, you cannot adjust sound quality or select sound modes (pp. 47 – 49) or use the muting feature (p. 32).
- After using the headphones, if you press HEADPHONES without pressing the headphones power button first, you may hear noise. This does not indicate a malfunction.
- To prevent hearing damage due to sudden or prolonged excessive volume, do not raise the headphones volume too high, while listening.

## Previewing the features — DEMO

Press DEMO.  
Functions and menus are displayed one by one.


**To restart DEMO from the beginning**  
Press DEMO again.

**To stop DEMO**  
Press any button.

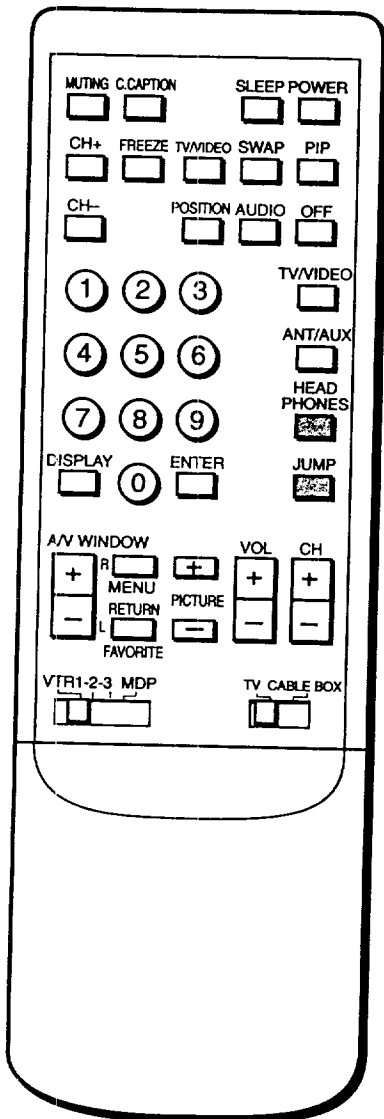



RM-Y113A

# Using Closed Caption

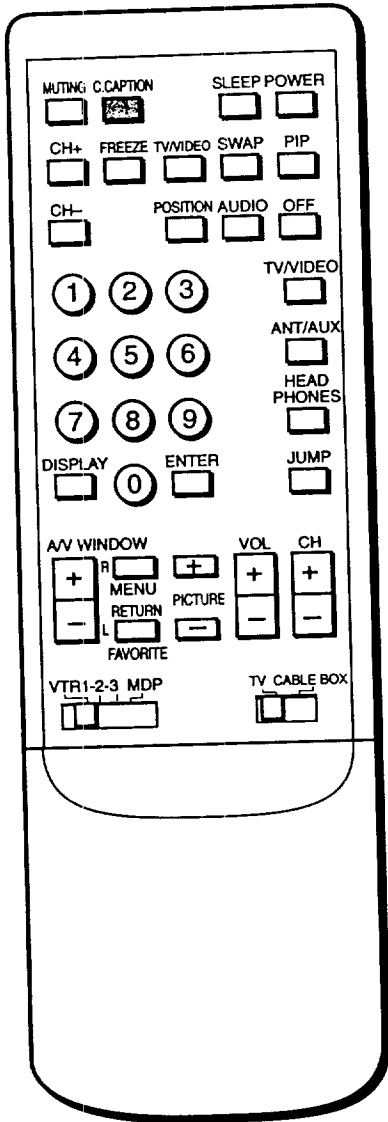

RM-Y113A

- 1 Press C.CAPTION.**  
*The closed caption mode appears. CC1, CC2, TEXT1, TEXT2 or CC OFF appears in sequence each time you press C.CAPTION.*

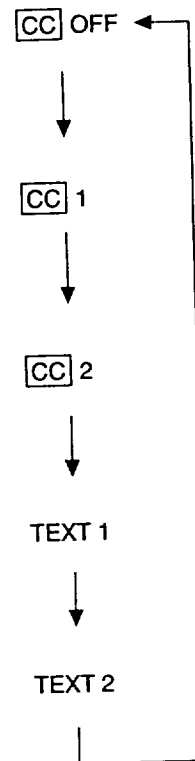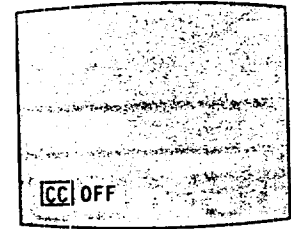


**2** Press C.CAPTION repeatedly.


C.CAPTION




Select CC1 or CC2 to view Captions.  
A Caption is a printed version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs.)

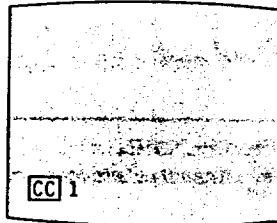

Select TEXT1 or TEXT2 to view Text.  
Text is information that is presented using the half to full television screen.  
It is usually not related to the program.

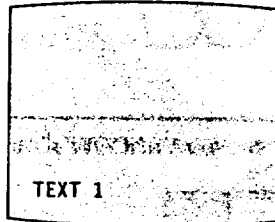

Select CC OFF if you don't want to view Closed Caption nor Text.

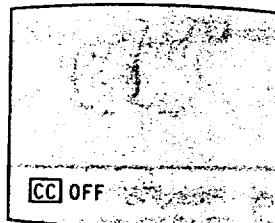

### Notes

The Closed Caption system checks for errors before captions or text appear. If an error is found, the mistake does not appear; a white box appears instead. In most cases, this allows you to read the caption without difficulty. Of course, not all errors can be found, and in some cases mistakes may appear.


Poor reception of any TV station can cause poor reception of the Close Caption signal causing errors or missing captions.



# Selecting a Picture and Sound Mode


This TV features four modes (STANDARD, MOVIE, SPORTS, NEWS) that offer different picture and sound qualities. Choose the one that best suits the type of program that you want to watch.

**Example:** Select MOVIE mode for picture and sound that gives you the sense of being in a movie theater.

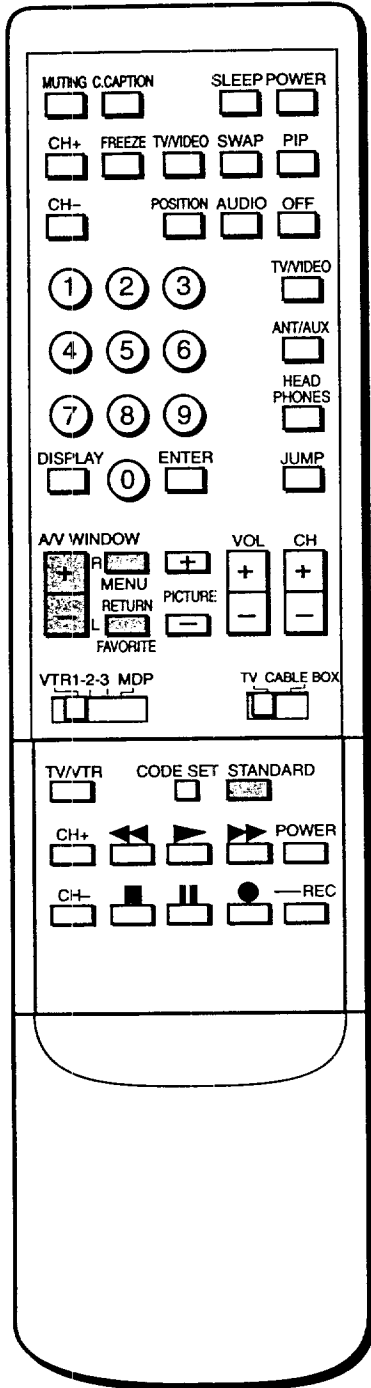


RM-Y113  
(with video control  
cover open)



- 1** Press MENU.  
*The main menu appears, and the cursor points to "PROG PALETTE."*

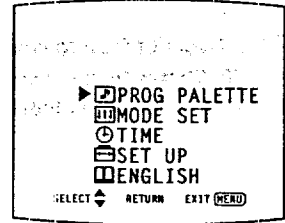


- 2** Press RETURN.  
*The program palette menu appears.*

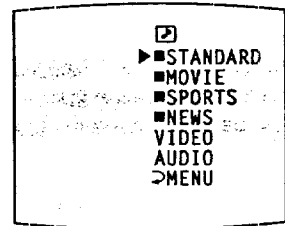

- 3** Press A/V WINDOW +/- until the cursor points to "MOVIE."

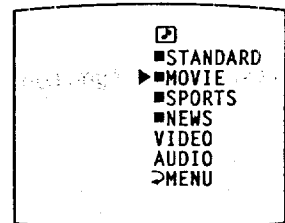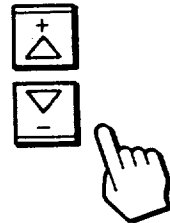

- 4** Press RETURN.  
*The "MOVIE" display turns green, indicating that MOVIE mode is selected.*

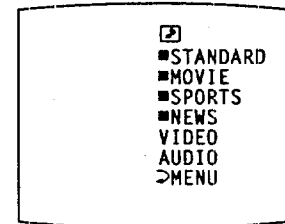

**To select a different mode**  
Repeat steps 3 – 4.

## Selecting standard mode (without using the menus)

Follow these instructions to select standard mode without using the on-screen menus.

Press STANDARD.



### When you select STANDARD mode

You receive standard picture and sound quality. Any video or audio adjustments you made ("Adjusting the TV," pp. 42 – 50) are cancelled and the original factory settings are restored.

### When you select MOVIE mode

You receive a finely detailed picture, and a theatrical audio effect. To further adjust picture and sound qualities, follow the instructions on pp. 42 – 50.

### When you select SPORTS mode

You receive a vivid, bright picture, and sound with a sports stadium effect. To further adjust picture and sound qualities, follow the instructions on pp. 42 – 50.

### When you select NEWS mode

Picture noise is reduced, and you receive clear voice reproduction. To further adjust picture and sound qualities, follow the instructions on pp. 42 – 50.

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to "➤ MENU."  
Then press RETURN.

### To return to the main menu


Repeat the above, until you reach the main menu.

### To return to the normal screen

Press MENU on the Remote Commander.

You can watch both the main picture and a window picture simultaneously, using the Picture-in-Picture (PIP) function. Models KV-27XBR36/32XBR36/32XBR76 are equipped with two-tuner PIP, allowing you to watch two TV channels at once.

Models KV-27XBR26/32XBR26 are equipped with one-tuner PIP. To watch two TV channels, you must first connect a VCR to the TV, to watch a second TV channel through the VCR tuner. (See "Connecting Other Equipment," pp. 13 – 14.)

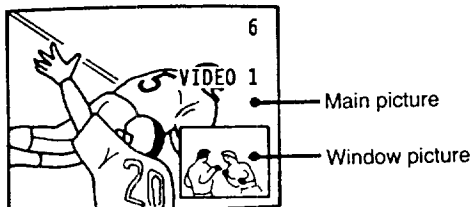

**Picture-in-Picture special features**

When watching the main picture and a window picture, you can:


- Swap the main and window pictures (SWAP).
- Change the position of the window picture (POSITION).
- Display a still picture (FREEZE).
- Choose the sound from the main or window picture (AUDIO).
- Listen to the window picture sound through the supplied cordless headphones (HEADPHONES). (KV-27XBR36/32XBR36 only)

**Notes**


- The window picture sound is also output from the VAR. AUDIO OUT jacks. The AUDIO LINE OUT and MONITOR OUT jacks output the main picture sound only.
- The video label and channel caption will not appear with the window picture even if you have set them.
- If you select a blocked channel in the window picture, the display "BLOCKED" appears with the window picture. (See "Setting CHANNEL BLOCK," pp. 60 – 61.)

**Displaying a window picture**

Remote Commander

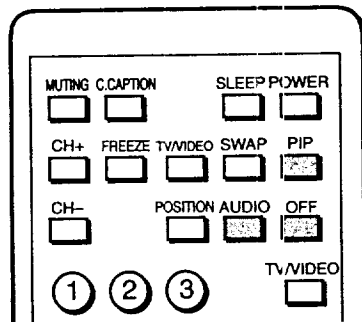

Press PIP to display a window picture

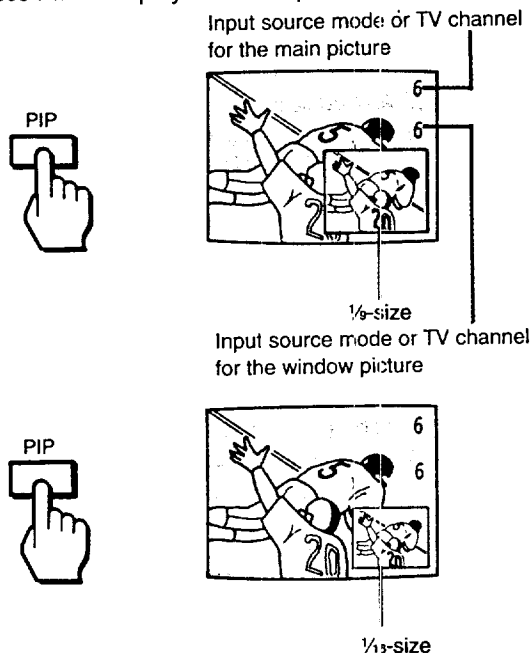


A window picture appears in the last mode you watched. Each time you press PIP, a 1/9 or 1/16 size window picture appears alternately.

**To turn PIP function off**

Press OFF.  
 The window picture disappears.

**To receive the window picture sound**


Press AUDIO.  
 The  display appears for a few seconds, indicating that the window picture sound is being received.

**To restore the main picture sound**

Press AUDIO again.

## Changing the window picture input mode


Remote Commander

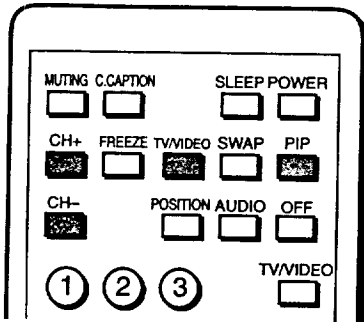

- 1 Press PIP to display a window picture.




- 2 Press TV/VIDEO in the Picture-in-Picture control area to select the input mode. Each time you press TV/VIDEO, "TV," "VIDEO 1," "VIDEO 2" and "VIDEO 3" appear in sequence.

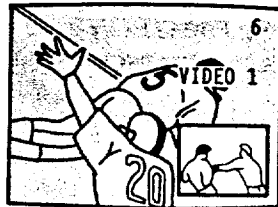

**To change TV channels in the window picture**  
Press CH +/- in the PIP control area.

## Displaying CATV input as a window picture

To use Picture-in-Picture with pay cable TV input, make the connections to your cable converter box as shown below.

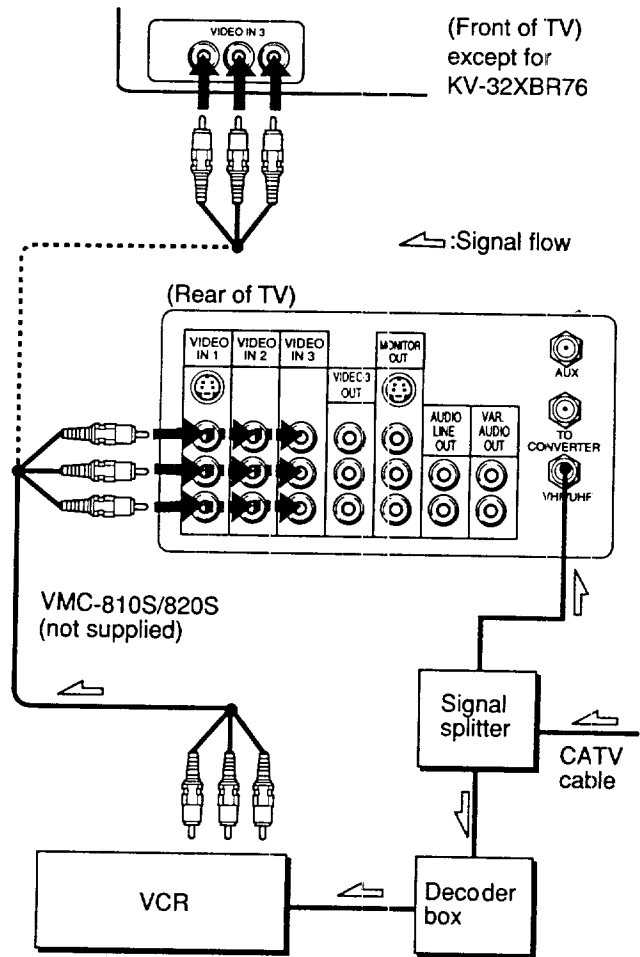

After making the above connections, turn the cable connection on by following the steps on pp. 22 – 23; then continue with the steps below.

- 1–2 Follow steps 1 – 2 in "Changing the window picture input mode" on this page to select the video input mode for your connected VCR.
- 3 Put your VCR on an inactive channel (channel 3 or 4).
- 4 Change pay cable TV channels with the decoder box.


**To control your cable converter box with the supplied Remote Commander**  
See p. 68.

# Watching Two Pictures at Once (PIP)


## Changing the position of the window picture

Follow these instructions to change the position of the window picture on the screen.



Remote Commander

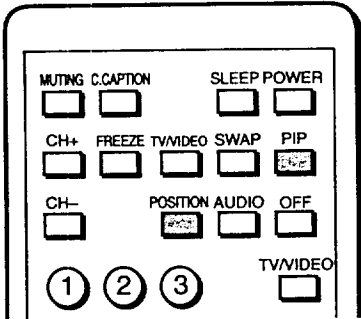

**1** Press PIP to display a window picture.

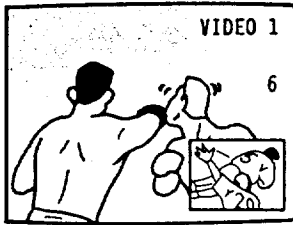

 
**2** Press POSITION.  
Each time you press POSITION, the window picture moves as illustrated.

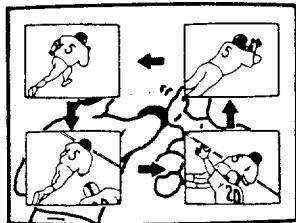


## Displaying a still picture

Use the FREEZE function to display a still picture. This function is useful when you want to write down a recipe from a cooking program, a displayed address or phone number and so on.


Remote Commander

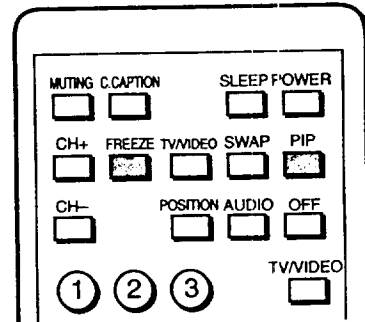

**1** Press PIP to display a window picture.

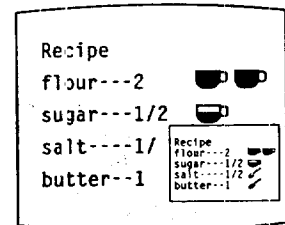

**2** Press FREEZE.  
The window picture image remains still on the screen.

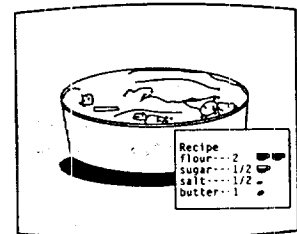


To restore the normal picture  
Press FREEZE again.



## Swapping the main and window pictures

Follow these instructions to swap the input signals of the main and window pictures.


### Remote Commander

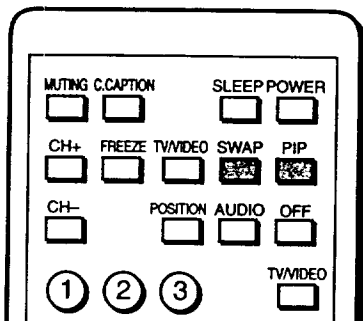

- 1 Press PIP to display a window picture.




- 2 Press SWAP.  
Each time you press SWAP, the images from the main and window pictures switch places.

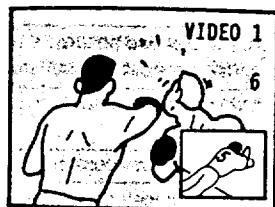


## Selecting the headphones audio source (KV-27XBR36/32XBR36 only)


Follow these instructions to select the audio source that you want to receive through the supplied cordless headphones (main or window picture). If you want to listen to sound from the window picture, make sure that the sound from the window picture is being received (p. 38).

### Remote Commander (RM-Y113A)

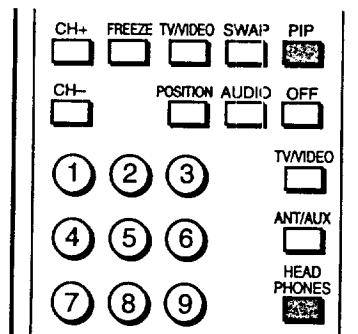

 - 1 Press PIP to display a window picture.

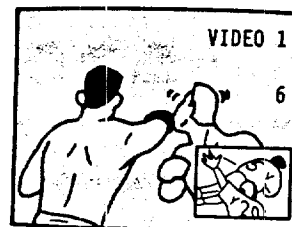

- 2 Press HEADPHONES.  
Each time you press HEADPHONES, the audio source changes to main picture, window picture and "OFF" in sequence.  
The  display appears with the input mode.

### Notes

- If you turn PIP function off, the sound from the cordless headphones changes to the main picture sound.
- If you turn off the TV, the next time you turn on the TV the headphones are off.


# Adjusting the TV

You can adjust the picture and sound for each input mode (TV, VIDEO 1, VIDEO 2, VIDEO 3) by pressing TV/VIDEO on the TV or on the Remote Commander to select the input mode, before making the adjustments. These adjustments are retained in memory even when you turn off the TV, but are cancelled after you change the adjustments, or select a picture and sound mode (pp. 36 – 37).


## Adjusting the picture

Follow these instructions to adjust PICTURE, HUE, COLOR, BRIGHT (brightness) and SHARP (sharpness).


Remote Commander (with video control cover open)

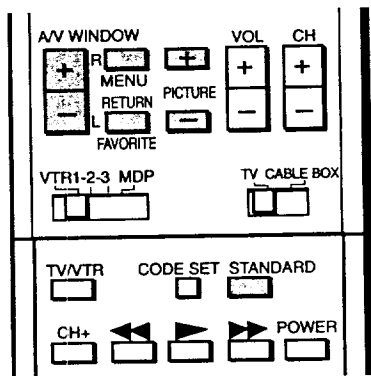

- 1 Press MENU.  
The main menu appears, and the cursor points to "PROG PALETTE."

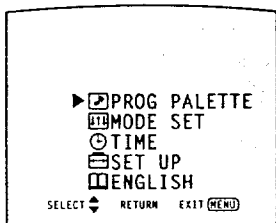


- 2 Press RETURN.  
The program palette menu appears.

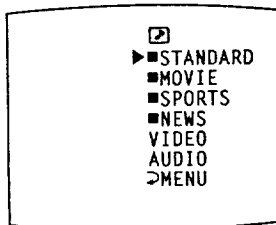


- 3 Press A/V WINDOW +/- until the cursor points to "VIDEO."

- 4 Press RETURN.  
The VIDEO screen appears.

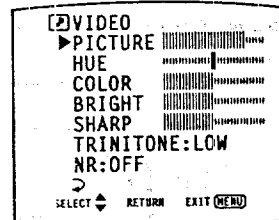

- 5 Press A/V WINDOW +/- until the cursor points to the item you want to adjust.


- 6 Press RETURN.  
The adjustment screen appears.

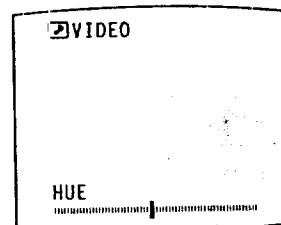

- 7 Press A/V WINDOW +/- to make the adjustment.

Picture quality	Press A/V WINDOW -	Press A/V WINDOW +
PICTURE	For decreased picture contrast with soft color	For increased picture with vivid color
HUE	Skin tones become purplish	Skin tones become greenish
COLOR	For less color intensity	For more color intensity
BRIGHT	For less brightness	For more brightness
SHARP	For less sharpness	For more sharpness

- 8 Press RETURN.  
The adjustment is complete, and the VIDEO screen automatically reappears.

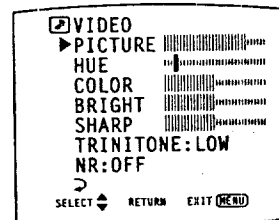

### To adjust other items

Repeat steps 5 -- 8.

### To restore the factory settings for all the items


Select "STANDARD" on the program palette menu, and press RETURN;

or, press STANDARD on the Remote Commander.

All the items, including TRINITONE (p. 44) and NR (p. 45) return to their original factory settings.

### To adjust picture contrast

You can also adjust picture contrast with the PICTURE +/- buttons on the Remote Commander.

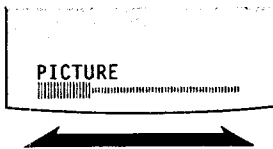

Press + to increase picture contrast with vivid color.

Press - to decrease picture contrast with soft color.

*The picture adjustment screen appears.*

### To return to the previous menu

Press AV WINDOW +/- until the cursor points to "➤ MENU."

Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.


### To return to the normal screen

Press MENU on the Remote Commander.


## Setting the TRINITONE mode

Color picture tubes are usually manufactured with a fixed color temperature (tint) that determines the "warmth" (red tint) or "coolness" (blue tint) of the picture. Use the Sony Trinitone feature to adjust the picture color to your preference.


### Remote Commander

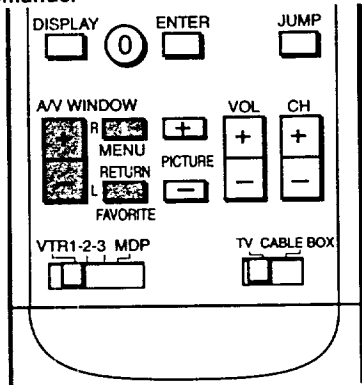

- 1 Press MENU.  
The main menu appears, and the cursor points to "PROG PALETTE."

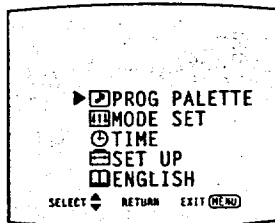


- 2 Press RETURN.  
The program palette menu appears.

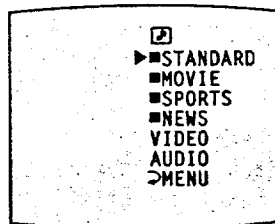

- 3 Press A/V WINDOW +/- until the cursor points to "VIDEO."

- 4 Press RETURN.  
The VIDEO screen appears.

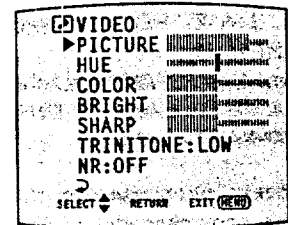

- 5 Press A/V WINDOW +/- until the cursor points to "TRINITONE."

- 6 Press RETURN.  
The mode display turns red.

- 7 Press A/V WINDOW +/- to select "HIGH" or "LOW."  
Select "HIGH" to make the picture cool (bluish).  
Select "LOW" to make the picture warm (reddish).

- 8 Press RETURN.  
The setting is complete.

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to " > MENU."

Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.


### To return to the normal screen

Press MENU on the Remote Commander.


## Setting NR (picture noise reduction) ON or OFF

Follow these instructions to reduce picture noise.


### Remote Commander

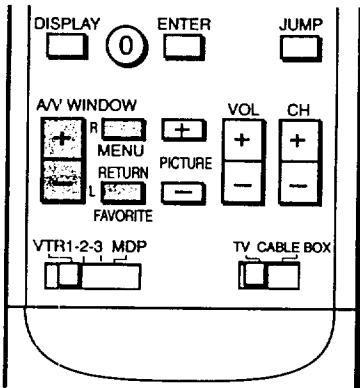

- 1 Press MENU.  
The main menu appears, and the cursor points to "PROG PALETTE."

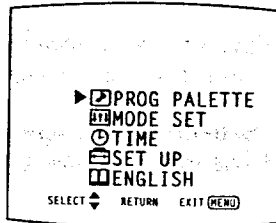


- 2 Press RETURN.  
The program palette menu appears.

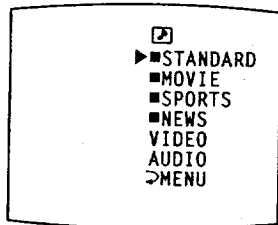


- 3 Press AV WINDOW +/- until the cursor points to "VIDEO."

- 4 Press RETURN.  
The VIDEO screen appears.

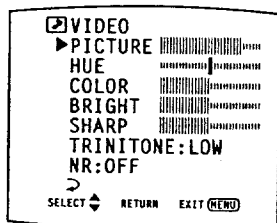

- 5 Press AV WINDOW +/- until the cursor points to "NR."

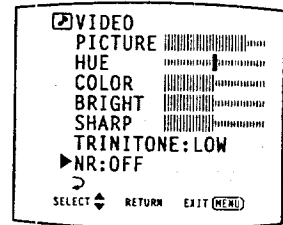

- 6 Press RETURN.  
The mode display turns red.

- 7 Press AV WINDOW +/- to select "ON" or "OFF."  
Select "ON" to reduce picture noise.  
Select "OFF" to restore the normal picture.

- 8 Press RETURN.  
The setting is complete.

### To return to the previous menu

Press AV WINDOW +/- until the cursor points to " > MENU."  
Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.

### To return to the normal screen

Press MENU on the Remote Commander.

# Adjusting the TV

## Setting S-VIDEO ON or OFF


Follow these instructions to set S-VIDEO on or off, depending on the kind of video equipment you have connected to the TV. For instructions on connecting video equipment, see pp. 13 – 16.

### Note


If the TV is in TV, VIDEO 2 or VIDEO 3 mode, the "S-VIDEO" display is shaded and cannot be selected.

Press TV/VIDEO on the TV or on the Remote Commander to change to VIDEO 1 mode.

### Remote Commander

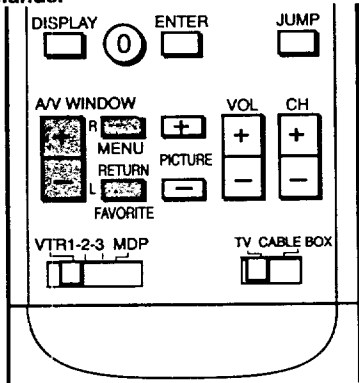


- 1 Press MENU.  
*The main menu appears.*

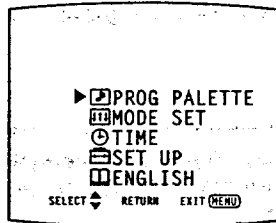

- 2 Press A/V WINDOW +/- until the cursor points to "MODE SET."

- 3 Press RETURN.  
*The mode set menu appears, with the cursor pointing to "S-VIDEO."*

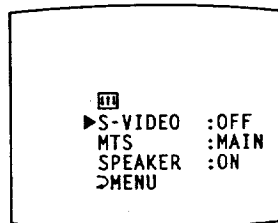

- 4 Press RETURN.  
*The mode display turns red.*

- 5 Press A/V WINDOW +/- to select "ON" or "OFF."

- 6 Press RETURN.  
*The setting is complete.*

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to " > MENU."

Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.


### To return to the normal screen

Press MENU on the Remote Commander.


## Adjusting the sound

Follow these instructions to adjust the TREBLE, BASS and BALANCE.


Remote Commander (with video control cover open)

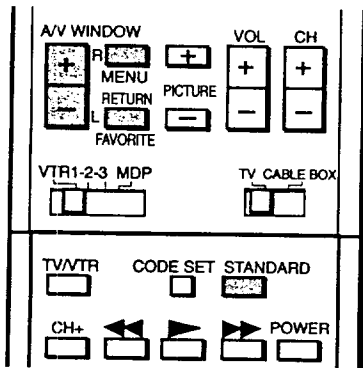

- 1 Press MENU.  
The main menu appears, and the cursor points to "PROG PALETTE."

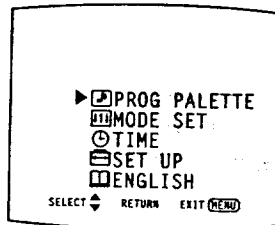


- 2 Press RETURN.  
The program palette menu appears.

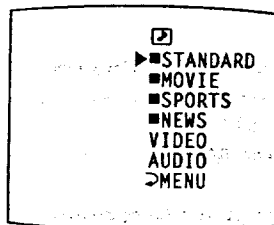


- 3 Press A/V WINDOW +/- until the cursor points to "AUDIO."

- 4 Press RETURN.  
The AUDIO screen appears.

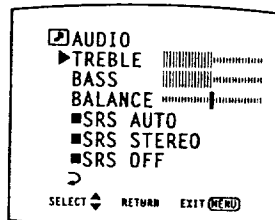

- 5 Press A/V WINDOW +/- until the cursor points to the item you want to adjust.


- 6 Press RETURN.  
The adjustment screen appears.

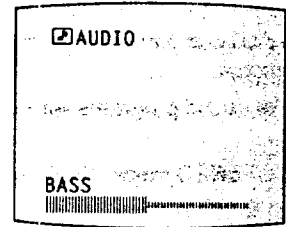

- 7 Press A/V WINDOW +/- to make the adjustment.

Sound quality	Press A/V WINDOW -	Press A/V WINDOW +
TREBLE	To decrease the treble response	To increase the treble response
BASS	To decrease the bass response	To increase the bass response
BALANCE	To emphasize the left speaker's volume	To emphasize the right speaker's volume

- 8 Press RETURN.  
The adjustment is complete, and the AUDIO screen automatically reappears.

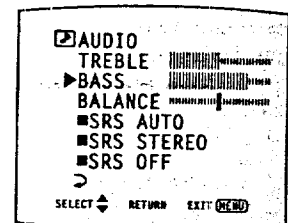

**To adjust other items**  
Repeat steps 5 - 9.

**To restore the factory settings for all the items**  
Select "STANDARD" on the program palette menu, and press RETURN; or, press STANDARD on the Remote Commander.

All the items, including SRS mode (p. 48) return to their original factory settings.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to "➤ MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.

Adjusting the TV

## Selecting an SRS (Sound Retrieval System) mode

For lifelike sound reproduction, follow the instructions below to select the SRS mode you prefer.

In SRS AUTO mode, SRS functions in both monaural and stereo modes.


Monaural sound programs will have a 'simulated stereo' effect.

In SRS STEREO mode, SRS functions only when a stereo program is received.


The **STEREO** indicator on the TV lights up whenever a stereo broadcast is received.

Select SRS OFF mode to return to normal sound mode.


### Remote Commander

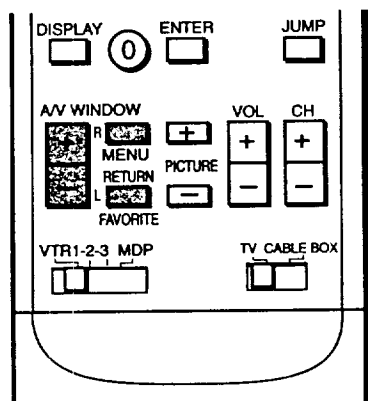

- 1 Press MENU.  
The main menu appears, and the cursor points to "PROG PALETTE."

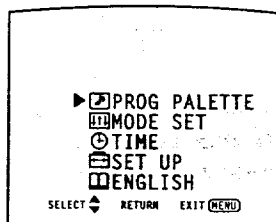

- 2 Press RETURN.  
The program palette menu appears.

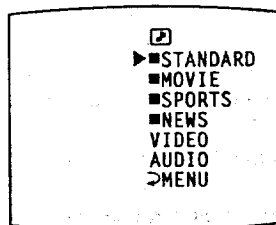

- 3 Press A/V WINDOW +/- until the cursor points to "AUDIO."

- 4 Press RETURN.  
The AUDIO screen appears.



- 5 Press A/V WINDOW +/- until the cursor points to the SRS mode you want.

- 6 Press RETURN.  
The mode is selected.

### To change the SRS mode

Repeat steps 5 – 6.

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to " > MENU."

Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.

### To return to the normal screen

Press MENU on the Remote Commander.



## Selecting an MTS (Multichannel TV Sound) mode

Follow these instructions to select an MTS mode.

Select **MAIN** mode to listen to stereo sound.

The **STEREO** indicator on the TV lights up whenever a stereo broadcast is received.

Select **SAP** mode to listen to Second Audio Programs.


Select **MONO** mode to eliminate excessive noise during stereo broadcasts, caused by a weak incoming signal.

### Note


If the TV is in video mode, the "MTS" display is shaded and cannot be selected.

Press **TV/VIDEO** on the TV or on the Remote Commander to change to TV mode.

### Remote Commander

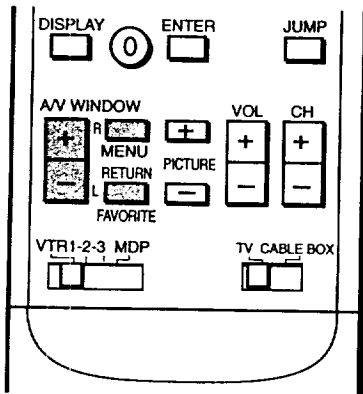


- 1 Press **MENU**.  
The main menu appears.

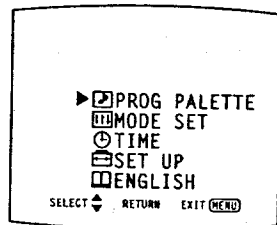

- 2 Press **A/V WINDOW +/-** until the cursor points to "MODE SET."

- 3 Press **RETURN**.  
The mode set menu appears.

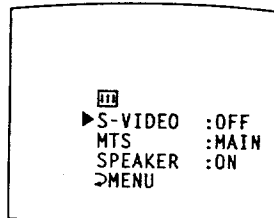

- 4 Press **A/V WINDOW +/-** until the cursor points to "MTS."

- 5 Press **RETURN**.  
The mode display turns red.

- 6 Press **A/V WINDOW +/-** to select the mode you want. Each time you press **A/V WINDOW +/-**, "MAIN," "SAP" and "MONO" appear in sequence.

- 7 Press **RETURN**.  
The mode is selected.

### To return to the previous menu

Press **A/V WINDOW +/-** until the cursor points to "➤ MENU."

Then press **RETURN**.

### To return to the main menu

Repeat the above, until you reach the main menu.

### To return to the normal screen

Press **MENU** on the Remote Commander.




Adjusting the TV


## Setting SPEAKER ON or OFF

Follow these instructions to turn the TV speakers off when you connect an audio system (p.17), and on when you want to listen to the sound from the TV speakers.

### Remote Commander

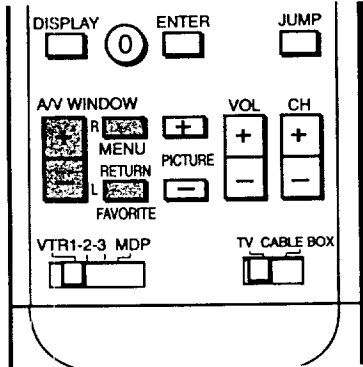


- 1 Press MENU.  
The main menu appears.

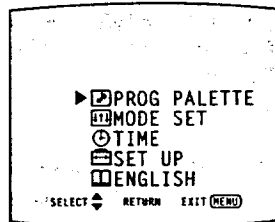

- 2 Press A/V WINDOW +/- until the cursor points to "MODE SET."

- 3 Press RETURN.  
The mode set menu appears.

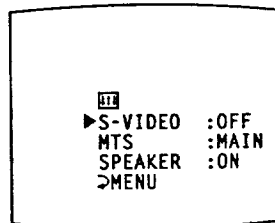

- 4 Press A/V WINDOW +/- until the cursor points to "SPEAKER."

- 5 Press RETURN.  
The mode display turns red.

- 6 Press A/V WINDOW +/- to select "ON" or "OFF."

- 7 Press RETURN.  
The setting is complete.

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to "➤ MENU."

Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.

### To return to the normal screen

Press MENU on the Remote Commander.

# Customizing the Screen Display




## Setting channel captions — CH CAPTION


Follow these instructions to caption each channel number display with a name, for instance, the television station call letters. (You can set up to four letters or numbers).

**Example:** Caption channel 15 as "NBC."

Remote Commander (RM-Y113A)

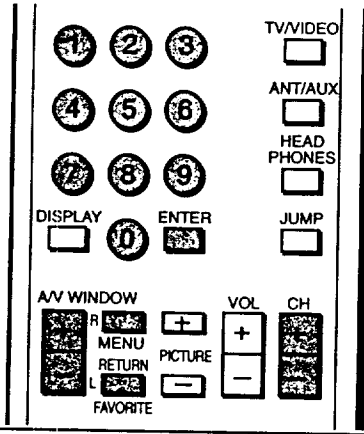


- 1 Press MENU.  
The main menu appears.

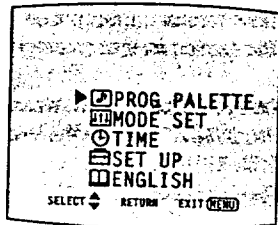


- 2 Press AV WINDOW +/- until the cursor points to "SET UP."

- 3 Press RETURN.  
The set up menu appears.

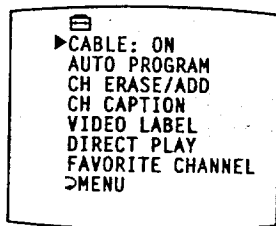


- 4 Press AV WINDOW +/- until the cursor points to "CH CAPTION."

- 5 Press RETURN.  
The CH CAPTION screen appears.

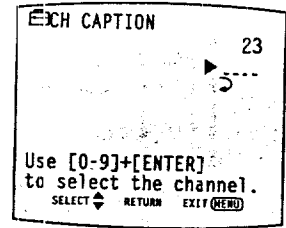


- 6 Press CH +/-, or press 1, 5 and ENTER to set channel "15."

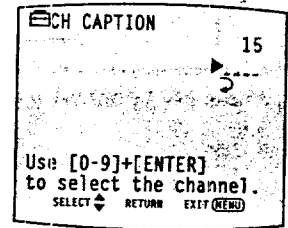

- 7 Press RETURN.  
The first caption space turns red.

- 8 Press AV WINDOW +/- to select: "N."  
Each time you press AV WINDOW +/-, "0" - "9," "A" - "Z," "&," "/", ".\_" and " " (blank space) appear in sequence.

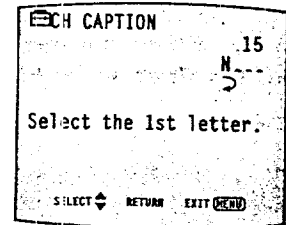

- 9 Press RETURN.  
The second caption space turns red.


(Continued)




Adjusting the TV  
Customizing the Screen Display

## Setting channel captions – CH CAPTION (Cont'd. from prev. page)

Remote Commander

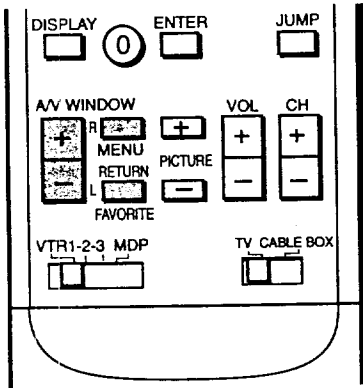


**10** Press A/V WINDOW +/- to select "B."

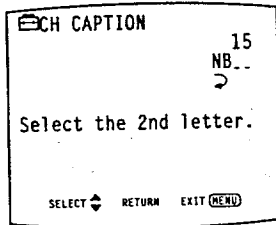


**11** Press RETURN.  
The third caption space turns red.

**12** Press A/V WINDOW +/- to select "C."

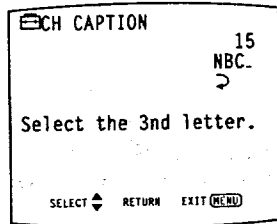

**13** Press RETURN.  
The fourth caption space turns red.

**14** Press A/V WINDOW +/- to select a blank space.

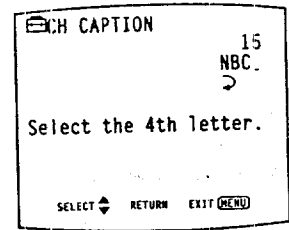

**15** Press RETURN.  
The setting is complete.  
When you select or display the channel number, the channel caption also appears.

**To caption more channels**  
Repeat steps 6 – 15.

**To erase unnecessary captions**  
Display the CH CAPTION screen, select the channel with the caption you want to erase, and select blank spaces for the channel caption; then press RETURN.  
The caption for that channel is erased.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to "➤ MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.


**Note**  
You can set up to 32 channel captions. If the memory is full, "The memory is full, sorry" appears on the screen. Erase any unnecessary captions, and begin again.

## Setting VIDEO LABEL


Follow these instructions to label each input mode, in order to identify the equipment connected to each input terminal.

**Example:** Label VIDEO IN 1 as "VHS."

### Remote Commander

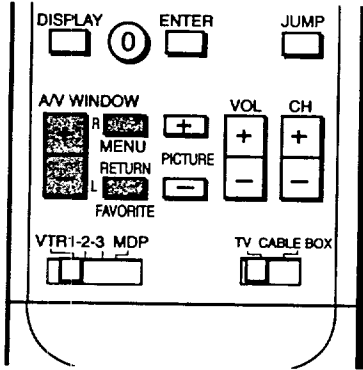


- 1 Press MENU.  
The main menu appears.

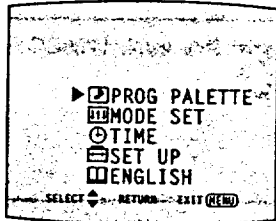


- 2 Press A/V WINDOW +/- until the cursor points to "SET UP."

- 3 Press RETURN.  
The set up menu appears.

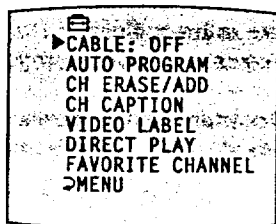

- 4 Press A/V WINDOW +/- until the cursor points to "VIDEO LABEL."


- 5 Press RETURN.  
The VIDEO LABEL screen appears.

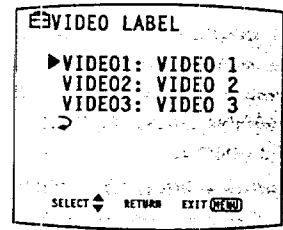


- 6 Press A/V WINDOW +/- until the cursor points to the input mode you want to label. (In this case, the cursor is already pointing to "VIDEO 1.")

- 7 Press RETURN.  
The label display turns red.

- 8 Press A/V WINDOW +/- to select "VHS."

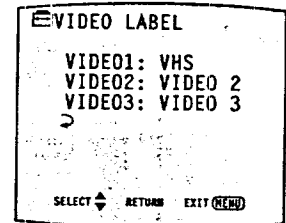

Each time you press A/V WINDOW +/-, the label changes:

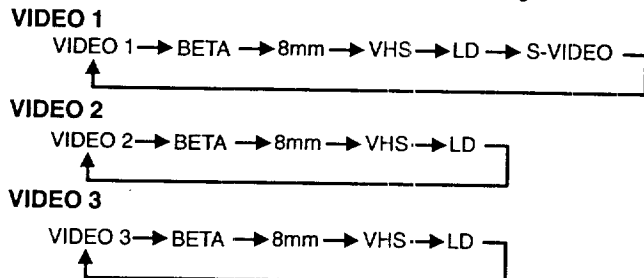

- 9 Press RETURN.  
The setting is complete.  
When you select or display the video mode, the video label appears.

### To label other input modes

Repeat steps 6 - 9.

### To change a label

Same as above.

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to "MENU."

Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.

### To return to the normal screen

Press MENU on the Remote Commander.

# Using Timer-Activated Functions


## Setting DAYLIGHT SAVING

If you live in an area that uses daylight savings time, set DAYLIGHT SAVING to "YES" or "NO" depending on the season, before setting the current time. At the next daylight savings date, you will be able to automatically adjust all the time-related settings (CURRENT TIME, ON/OFF TIMER and CHANNEL BLOCK) simply by changing the DAYLIGHT SAVING setting.

### When setting DAYLIGHT SAVING:


- **After the first Sunday in April (spring daylight savings)**  
Set to "YES" before setting the current time.  
Then, on the last Sunday in October (fall daylight savings), set to "NO."  
*All the time-related settings automatically move one hour back.*
- **After the last Sunday in October (fall daylight savings)**  
Set to "NO" before setting the current time.  
Then, on the first Sunday in April (spring daylight savings), set to "YES."  
*All the time-related settings automatically move one hour ahead.*

### Remote Commander

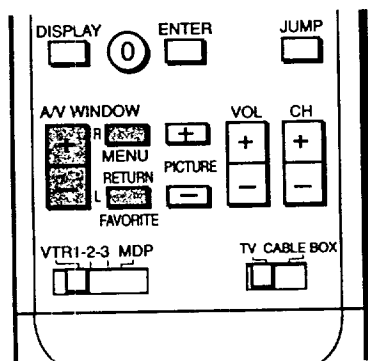


Follow these instructions to set DAYLIGHT SAVING to "YES" or "NO."

- 1** Press MENU.  
*The main menu appears.*

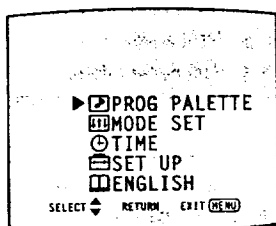

- 2** Press A/V WINDOW +/- until the cursor points to "TIME."

- 3** Press RETURN.  
*The time menu appears.*

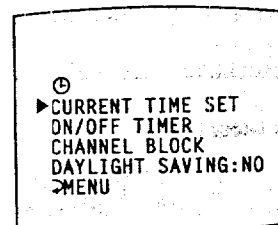

- 4** Press A/V WINDOW +/- until the cursor points to "DAYLIGHT SAVING."

- 5** Press RETURN.  
*The mode display turns red.*

- 6** Press A/V WINDOW +/- to select "YES" or "NO."

- 7** Press RETURN.  
*The setting is complete.*

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to " > MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.




## Setting the clock — CURRENT TIME SET


Follow these instructions to set the current time. The correct current time must be set in order to use the other time-related functions (DAYLIGHT SAVING, ON/OFF TIMER, CHANNEL BLOCK).

**Example:** Set the time to 3:15 PM, Monday.

Remote Commander

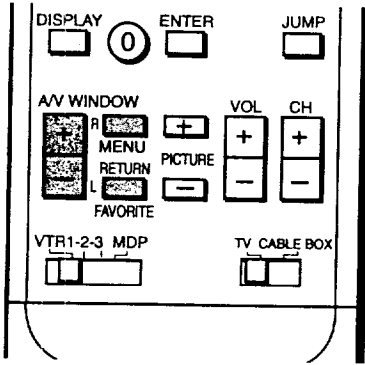


- 1** Press MENU.  
The main menu appears.

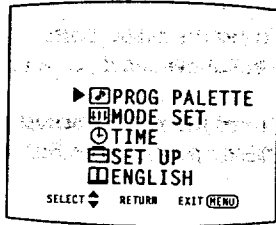


- 2** Press A/V WINDOW +/- until the cursor points to "TIME."

- 3** Press RETURN.  
The time menu appears, and the cursor points to "CURRENT TIME SET."

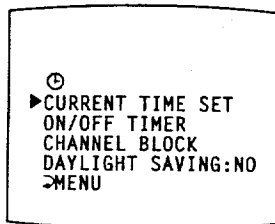

- 4** Press RETURN again.  
The CURRENT TIME SET screen appears, with a reminder to set DAYLIGHT SAVING.

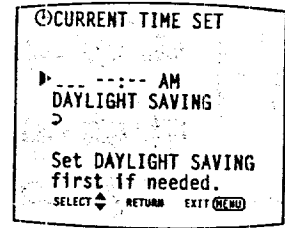

If you do not need to set DAYLIGHT SAVING, press RETURN and continue from step 5.


### To set daylight saving

- a** Press A/V WINDOW +/- until the cursor points to "DAYLIGHT SAVING."  
**b** Press RETURN.  
The time menu appears, and the cursor points to "DAYLIGHT SAVING."  
**c** Press RETURN.  
**d** Press A/V WINDOW +/- to select "YES" or "NO."  
**e** Press RETURN.  
The setting is complete.

To set the time, press A/V WINDOW +/- until the cursor points to "CURRENT TIME SET"; press RETURN, then continue from step 5.

- 5** Press RETURN.  
The CURRENT TIME SET screen appears, and the "SUN" display appears (red).

- 6** Press A/V WINDOW +/- to select "MON."  
Each time you press A/V WINDOW +/-, the day changes consecutively.

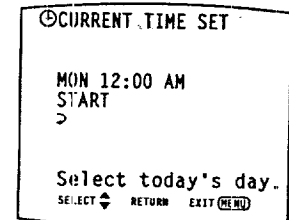

(Continued)




Using Timer-Activated Functions

## Setting the clock — CURRENT TIME SET


(Cont'd. from prev. page)

Remote Commander

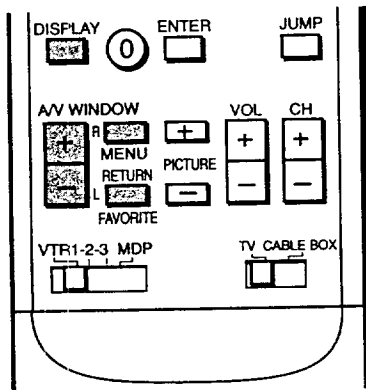


**7** Press RETURN.  
The hour and am/pm displays turn red.

**8** Press A/V WINDOW +/- to set "3:00PM."  
Each time you press A/V WINDOW +/-, the hour changes in sequence beginning with "12:00AM."

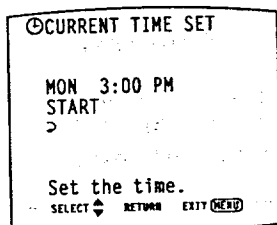

**9** Press RETURN.  
The minute display turns red.

**10** Press A/V WINDOW +/- to select "15" (minutes).  
Each time you press A/V WINDOW +/-, the minutes change in sequence.

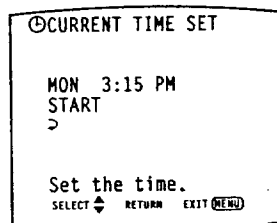

**11** Press RETURN.  
The cursor points to "START."

**12** Check the actual time, and press RETURN to start the clock.  
The setting is complete.

**To reset the time**  
Display the CURRENT TIME SET screen and repeat steps 5 – 12.

**To display the current time**  
Press DISPLAY.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to " > MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.




## Setting the ON/OFF TIMER


Follow these instructions to make the program of your choice appear on the screen at a specified time.

**Example:** Set the timer to turn on the TV every Monday through Friday at 1:30 AM for 3 hours, on channel 8, as PROGRAM 1. (You can set up to three programs.)

### Remote Commander

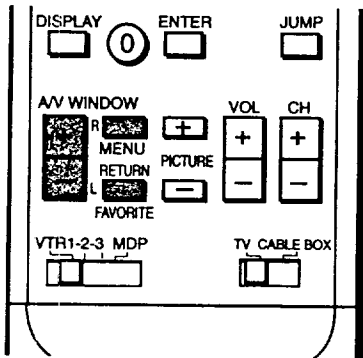


- 1 Press MENU.  
*The main menu appears.*

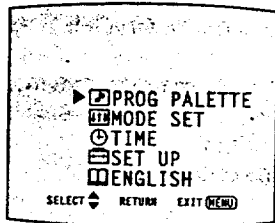


- 2 Press A/V WINDOW +/- until the cursor points to "TIME."

- 3 Press RETURN.  
*The time menu appears.*

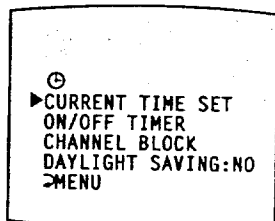


- 4 Press A/V WINDOW +/- until the cursor points to "ON/OFF TIMER."

- 5 Press RETURN.  
*The ON/OFF TIMER screen appears, and the cursor points to "1."*

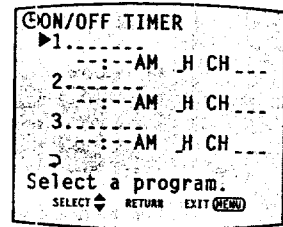


- 6 To set program 1, press RETURN.  
(To set program 2 or 3, press A/V WINDOW +/- until the cursor points to that program; then press RETURN.)  
*The day input space turns red.*

- 7 Press A/V WINDOW +/- to select "EVERY MON-FRI"; then press RETURN.  
*Each time you press A/V WINDOW +/-, the days of the week change as shown in Fig. 1 (p. 59).*

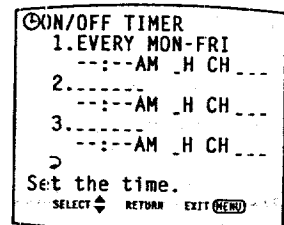


- 8 Press A/V WINDOW +/- to select "1:00AM"; then press RETURN.  
*Each time you press A/V WINDOW +/-, the hour changes in sequence.*

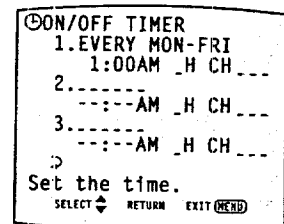


(Continued)

## Setting the ON-OFF TIMER (Cont'd from prev. page)


Remote Commander

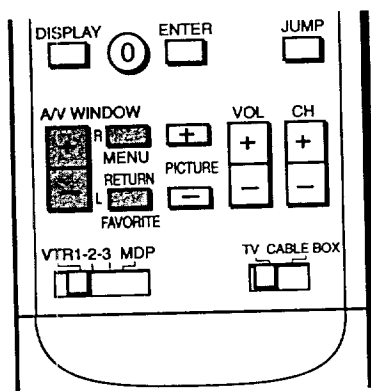


**9** Press A/V WINDOW +/- to select "30" (minutes); then press RETURN.  
Each time you press A/V WINDOW +/-, the minutes change in sequence.

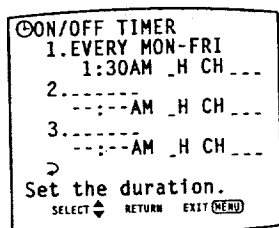

**10** Press A/V WINDOW +/- to select "3" (hour duration); then press RETURN.  
Each time you press A/V WINDOW +/-, the duration changes from "1" - "6" in sequence.

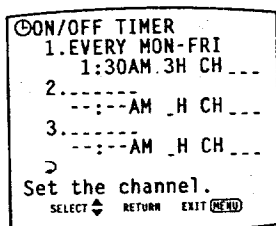

**11** Press A/V WINDOW +/- to select "8" (channel); then press RETURN.  
The TIMER/STAND BY indicator lights, indicating that the setting is complete.  
Each time you press A/V WINDOW +/-, the channel number changes from 1 - 125 in sequence.

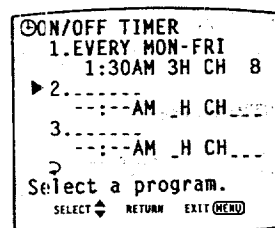

The display "TV WILL TURN OFF" appears on the screen one minute before the timer duration ends.

**To set program 2 or 3.**  
Press RETURN and repeat steps 6 - 11.

**To erase an ON/OFF TIMER setting**  
Display the ON/OFF TIMER screen, select the setting you want to erase, and select a blank space for the day.  
The ON/OFF TIMER setting is erased.

**To enter a new ON/OFF TIMER setting**  
Display the ON/OFF TIMER screen and repeat steps 6 - 11.


**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to " > MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.

**Note**  
If you unplug the TV or a power failure occurs, both the clock and timer settings will be erased. Reset the current time; then set the timer.

**Fig. 1**  
**Selecting the day(s) of the week**  
 When you press A/V WINDOW +, the days of the week appear in the following order:

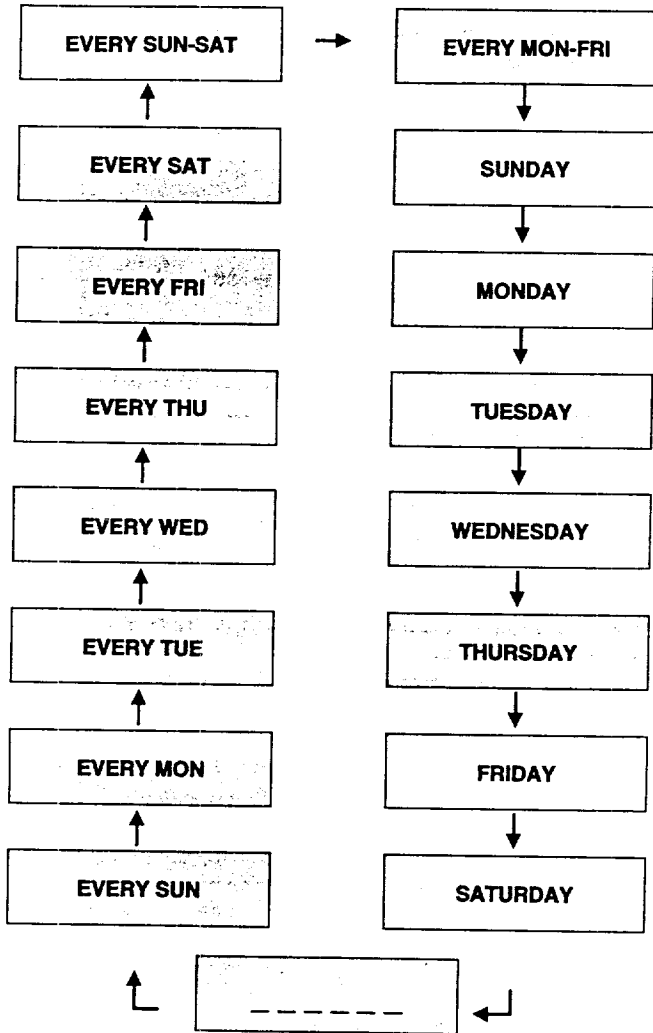


# Using Timer-Activated Functions

## Setting CHANNEL BLOCK

Follow these instructions to prevent a channel from appearing on the screen during the time that you specify. You can use this function to prevent children from watching unsuitable programs.

**Example:** Set CHANNEL BLOCK every Saturday at 4:30 PM for 1 hour, on Channel 12.


### Remote Commander

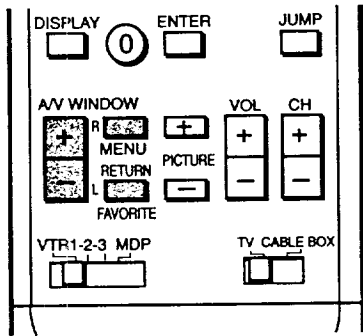

### Note


If you have not set the current time, the "CHANNEL BLOCK" display is shaded and cannot be selected.

- 1 Press MENU.  
The main menu appears.

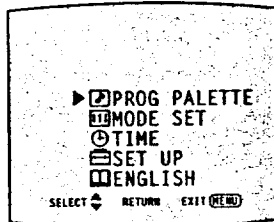


- 2 Press A/V WINDOW +/- until the cursor points to "TIME."

- 3 Press RETURN.  
The time menu appears.

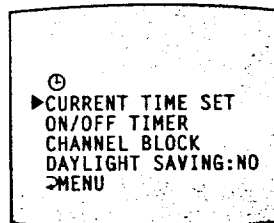


- 4 Press A/V WINDOW +/- until the cursor points to "CHANNEL BLOCK."

- 5 Press RETURN.  
The CHANNEL BLOCK screen appears, and the cursor points to the day input space.

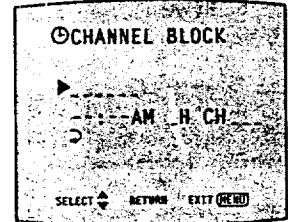


- 6 Press RETURN.  
The day input space turns red.


- 7 Press A/V WINDOW +/- to select "EVERY SAT"; then press RETURN.  
Each time you press A/V WINDOW +/-, the days of the week change as shown in Fig. 1 (p. 59).

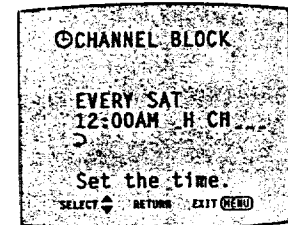


- 8 Press A/V WINDOW +/- to select "4:00PM"; then press RETURN.  
Each time you press A/V WINDOW +/-, the hour changes in sequence.

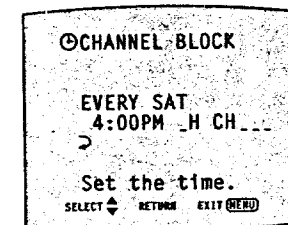


- 9** Press A/V WINDOW +/- to select ":30" (minutes); then press RETURN.  
*Each time you press A/V WINDOW +/-, the minutes change in sequence.*

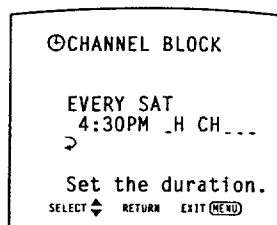


- 10** Press A/V WINDOW +/- to select "1" (hour duration); then press RETURN.  
*Each time you press A/V WINDOW +/-, the duration changes from "1" – "6" in sequence.*

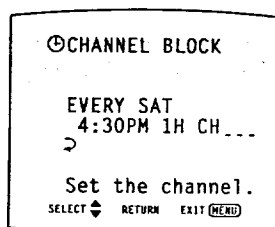

- 11** Press A/V WINDOW +/- to select "12" (channel); then press RETURN.  
*The setting is complete.*  
*Each time you press A/V WINDOW +/-, the channel number changes from "1" – "125" in sequence.*

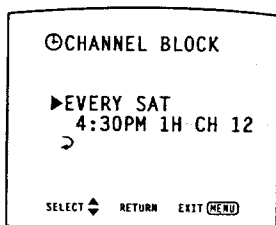

At the specified time, "BLOCKED" appears in red on the screen, and the picture of the specified channel is blocked and the sound is muted.

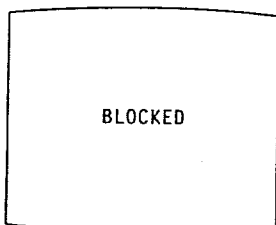

**To erase a CHANNEL BLOCK setting**  
 Display the CHANNEL BLOCK screen, select the setting you want to erase, and select a blank space for the day.  
*The CHANNEL BLOCK setting is erased.*

**To enter a new CHANNEL BLOCK setting**  
 Display the CHANNEL BLOCK screen and repeat steps 4 – 10. (You can only set one CHANNEL BLOCK at a time.)

**To return to the previous menu**  
 Press A/V WINDOW +/- until the cursor points to "➤ MENU."  
 Then press RETURN.

**To return to the main menu**  
 Repeat the above, until you reach the main menu.


**To return to the normal screen**  
 Press MENU on the Remote Commander.

**Note**  
 If the ON/OFF TIMER is set for an overlapping time (pp. 57 – 59), the later time setting takes precedence. For example, if CHANNEL BLOCK is set for 2:00 PM and ON/OFF TIMER is set for 3:00 PM, ON/OFF TIMER will take effect at 3:00 PM.

# Setting FAVORITE CHANNEL


By setting FAVORITE CHANNEL, you can select the channels you use most frequently (up to seven channels) simply by pressing RETURN on the Remote Commander.

Remote Commander (RM-Y113A)

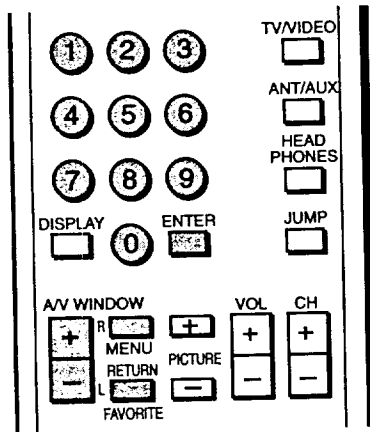


Follow these instructions to set the channels.

- 1 Press MENU.  
*The main menu appears.*

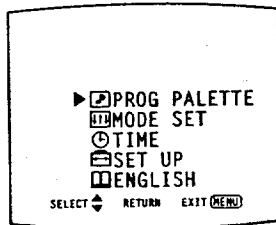


- 2 Press AV WINDOW +/- until the cursor points to "SET UP."

- 3 Press RETURN.  
*The set up menu appears.*

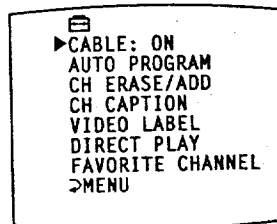


- 4 Press AV WINDOW +/- until the cursor points to "FAVORITE CHANNEL."

- 5 Press RETURN.  
*The FAVORITE CHANNEL screen appears, and the cursor points to the first channel position.*

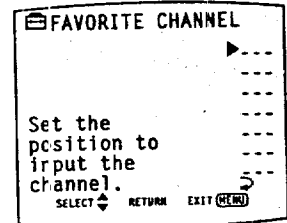

- 6 Press AV WINDOW +/- to select the channel position; then press RETURN.

- 7 Press 0 - 9 and ENTER to set the channel number.

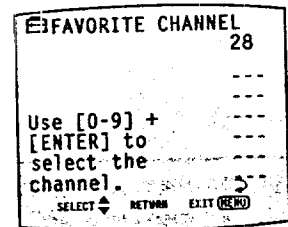

- 8 Press RETURN.  
*The setting is complete.*

### To set other channels

Repeat steps 6 – 8.

### To erase a favorite channel setting

Press A/V WINDOW +/- until the cursor points to the channel number you want to erase; press RETURN, then press 0 and ENTER.

### To reset a favorite channel setting

Display the FAVORITE CHANNEL screen and repeat steps 6 – 8.

### To return to the previous menu

Press A/V WINDOW +/- until the cursor points to "➤ MENU."  
Then press RETURN.

### To return to the main menu

Repeat the above, until you reach the main menu.

### To return to the normal screen

Press MENU on the Remote Commander.


---

## Selecting a favorite channel

---

After setting the channels, follow these instructions to select the channel you want to watch.

- 
- 1 Press RETURN.  
*The FAVORITE CHANNEL display appears.*

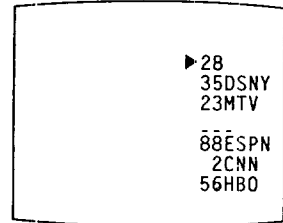


#### Note

If you have set channel captions (pp. 51 – 52), the captions appear with the channel numbers.

- 
- 2 Press A/V WINDOW +/- to select the channel you want to watch; then press RETURN.  
*The channel is selected.*

---

If you press RETURN on the Remote Commander before setting FAVORITE CHANNEL, this screen appears.

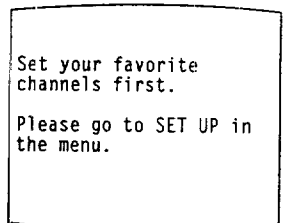

Follow steps 1 – 8 to set your favorite channels, and then make the selection.


# Using the Pre-Programmed Remote Commander

You can operate other video equipment (such as VCRs, video disc players and cable boxes) that have an infrared remote detector with this supplied Remote Commander.

## Operating Sony video equipment

Follow these instructions to operate Sony video cassette recorders (Beta, 8 mm and VHS) and video disc players (including multi-disc players).

Remote Commander (RM-Y113A)  
(with video control cover open)

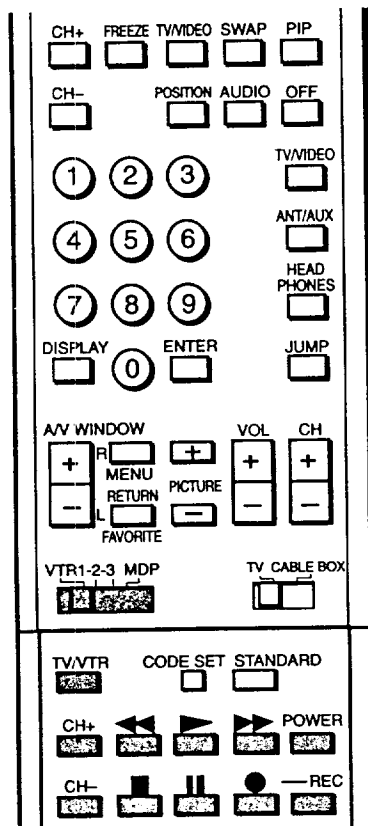

- 1 Set the VTR1-2-3 MDP selector according to the video equipment you want to operate.

 


Fig. 2: Video equipment settings

If you want to operate a:	set to:
Beta, ED Beta VCR	VTR 1
8 mm VCR	VTR 2
VHS VCR	VTR 3
Video disc player	MDP

- 2 Use the video operating buttons to control the connected equipment.

Fig. 3: Operating a VCR (VTR1, 2, 3)

To turn on or off	Press POWER.
To change channels (when watching TV programs through the VCR's tuner)	Press CH +/-.
To record	Press ● and REC simultaneously.
To play	Press ►.
To stop	Press ■.
To fast forward	Press ►►.
To rewind the tape	Press ◄◄.
To pause	Press    . To resume normal playback, press again.
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.
To change input mode	Press TV/VTR.



<b>Fig. 4: Operating a Video Disc Player (MDP)</b>	
To turn on or off	Press POWER.
To play	Press ►.
To stop	Press ■.
To pause	Press ■■. <i>To resume normal playback, press again.</i> <b>Note</b> This function is effective only for CAV (standard-play disc). With CLV (extended-play disc), the TV goes off (standby mode) if you press ■■.
To search the picture forward and backward	Keep pressing ►► or ◀◀ during playback. <i>To resume normal playback, release the button.</i>

**Notes**

- If the video equipment does not have a certain function, the corresponding button on this Remote Commander will not operate.
- If you set another manufacturer's code to a VTR1-2-3 MDP selector position (pp. 66 – 67), you must also set the Sony code to operate Sony equipment.

**Caution**

When you replace the batteries, do it within approximately 30 minutes. Otherwise the settings you made under the Pre-Programmed function (pp. 66 – 68) may be erased.


# Using the Pre-Programmed Remote Commander

## Operating non-Sony or Sony video equipment


Follow these instructions to set the manufacturer's code, which will enable you to operate non-Sony and Sony video equipment with the pre-programmed Remote Commander.

**Example:** Operate an RCA video cassette recorder connected to the VIDEO IN 2 jacks.

Remote Commander (RM-Y113A)  
(with video control cover open)

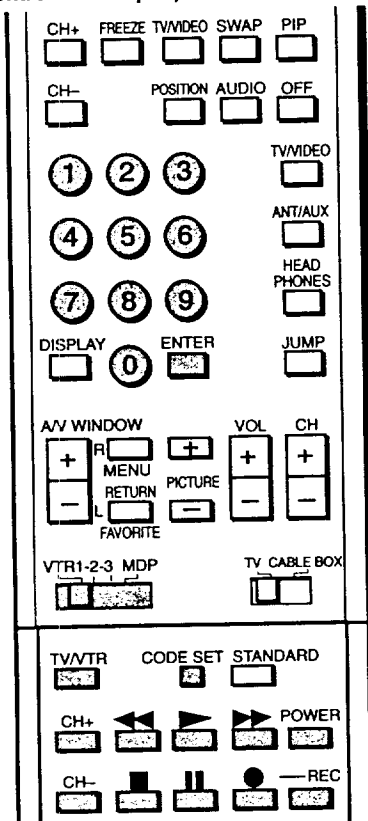


**2** While pressing CODE SET, press 0, 7 and ENTER to set RCA's code number. (For manufacturer code numbers, see Figs. 5, 6 and 7 on p. 67.)

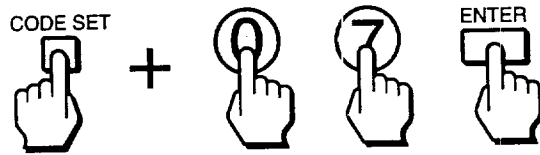

**3** Use the video operating buttons to operate the connected equipment. (see Fig. 3 on p. 64 and Fig. 4 on p. 65.)

 **1** Set the VTR1-2-3 MDP selector to VTR2.



**Note**

To use another manufacturer's equipment besides a Sony VCR, set the selector to a position not being used for your Sony video equipment.

**Fig. 5: VCR manufacturer code numbers**

MANUFACTURER	CODE
SONY	01, 02, 03
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06
PHILCO	05, 06
PHILIPS	05, 06, 09
QUASAR	05, 06
RCA	07, 08
SAMSUNG	24, 32
SANYO	11, 15
SCOTT	21
SHARP	13, 14
SHINTOM	34
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	28, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

**Fig. 6: MDP manufacturer code numbers**

MANUFACTURER	CODE
SONY	04
KENWOOD	58
MAGNAVOX	52
MARANZ	54
MITSUBISHI	51
PANASONIC	55
PHILIPS	52
PIONEER	51
RCA	51
SANYO	57
SHARP	56
YAMAHA	53

**Fig. 7: Sony Equipment and Code Numbers**

SONY EQUIPMENT	CODE
Beta, ED Beta VCR	01
8 mm VCR	02
VHS VCR	03
Video disc player	04

**Note**

In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied Remote Commander. This is because your equipment may use a code that is not provided with this Remote Commander. In this case, please use the equipment's own remote control unit.


# Using the Pre-Programmed Remote Commander

## Operating a cable converter box


Follow these instructions to set the manufacturer's code, which will enable you to operate a connected cable converter box with the pre-programmed Remote Commander.

**Example:** Operate a connected Zenith cable converter box.

Remote Commander (RM-Y113A)  
(with video control cover open)

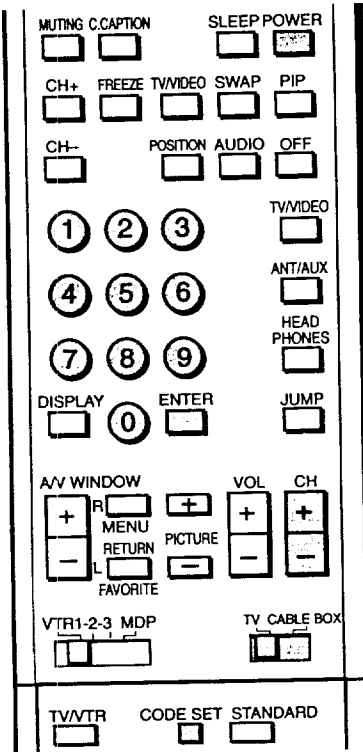

 
**1** Set the TV/CABLE BOX selector to CABLE BOX.




### Notes

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this Remote Commander and you may not be able to operate your cable converter box with the supplied Remote Commander. In this case, use the equipment's own remote control unit.

**2** While pressing CODE SET, press 6 and 8 (Zenith's code number — see Fig. 8) and ENTER.

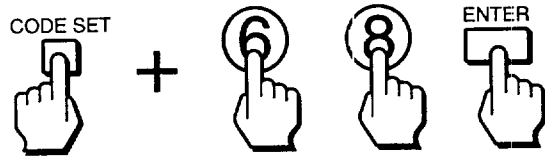

**3** Use the TV control buttons (POWER, 0 – 9, ENTER and CH +/-) to operate the cable converter box.

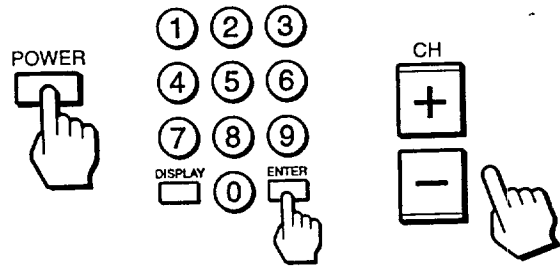

### To return to the normal screen

Set the TV/CABLE BOX selector to TV; then use the TV control buttons to control the TV.

### For more details on operating the cable box

Refer to the operating instructions that come with the cable box.

**Fig. 8: Cable box manufacturer code numbers**

MANUFACTURER	CCIDE
JERROLD	60, 61, 62, 63, 64, 65
PIONEER	69, 70
SCIENTIFIC ATLANTA	66, 67
TOCOM	71, 72
ZENITH	68




## Selecting a VCR mode directly — DIRECT PLAY

Follow these instructions to switch from TV to VCR mode by simply pressing the ► (playback) button on the supplied Remote Commander.

**Example:** Connect your VCR to the VIDEO IN 1 jacks, and set the VTR1-2-3 MDP selector to VTR2. When you press ►, the input mode changes to the VCR connected to the VIDEO IN 1 jacks.

After completing the steps below, the VTR selector position is retained in the TV's memory.

Remote Commander (with video control cover open)

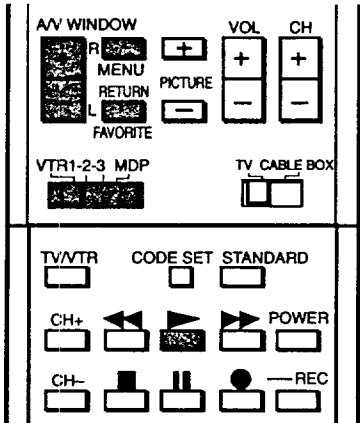


- 1** Press MENU.  
The main menu appears.




- 2** Press A/V WINDOW +/- until the cursor points to "SET UP."

- 3** Press RETURN.  
The set up menu appears.

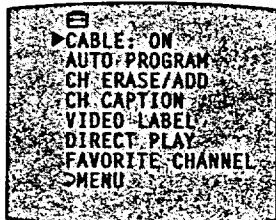


- 4** Press A/V WINDOW +/- until the cursor points to "DIRECT PLAY."

- 5** Press RETURN.  
A message screen appears.

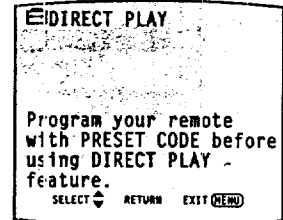

**Note**  
This screen reminds you to set the manufacturer's code, if you have not already done so (pp. 66 – 67).

- 6** Press RETURN again.  
The DIRECT PLAY screen appears.

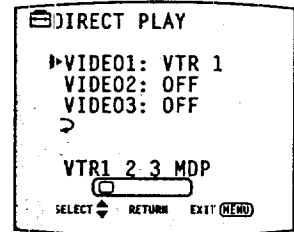


- 7** Press A/V WINDOW +/- until the cursor points to the video input mode. (When the video equipment is connected to VIDEO IN 1, select "VIDEO1.")

- 8** Press RETURN.  
The mode display turns red.


(Continued)

## Selecting a VCR mode directly – DIRECT PLAY (Cont'd. from prev. page)

Remote Commander

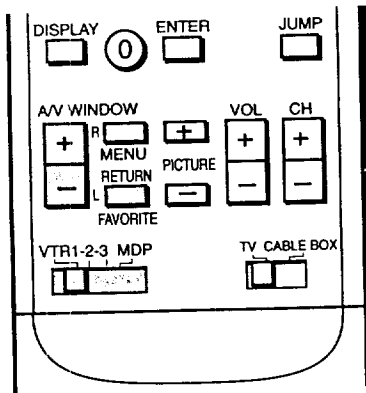

- 9** Press A/V WINDOW +/- to select the VTR selector mode you have set on the Remote Commander. (When the VTR1-2-3 MDP selector is set to VTR2, select "VTR 2.")  
Each time you press A/V WINDOW +/-, "VTR 1," "VTR 2," "VTR 3," "MDP" and "OFF" appear in sequence.

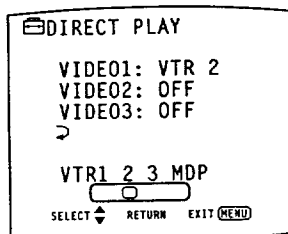

- 10** Press RETURN.  
The direct play setting is complete.



**To set direct play for other connected video equipment**  
Repeat steps 7 – 10.

**To return to the previous menu**  
Press A/V WINDOW +/- until the cursor points to "➔ MENU."  
Then press RETURN.

**To return to the main menu**  
Repeat the above, until you reach the main menu.

**To return to the normal screen**  
Press MENU on the Remote Commander.

Disturbances in picture and sound can often be eliminated by checking the symptoms and following the suggestions listed here. If the problem still cannot be solved, contact your nearest service facility.

Symptom	Possible causes and remedies
No picture (screen not lit), no sound	<ul style="list-style-type: none"> <li>• Make sure POWER is switched on.</li> <li>• Check the power cord connection.</li> <li>• Check that the TV/VIDEO and VTR1-2-3 MDP controls are set correctly.</li> <li>• Make sure that the TV/CABLE BOX selector is set to TV.</li> </ul>
Poor or no picture (screen not lit), good sound	<ul style="list-style-type: none"> <li>• Adjust the picture using the VIDEO screen (pp. 42 – 45).</li> <li>• Check the antenna/cable connections.</li> </ul>
Good picture, no sound	<ul style="list-style-type: none"> <li>• Press VOLUME + on the TV or VOL + on the Remote Commander.</li> <li>• Press MUTING on the Remote Commander.</li> <li>• Check the MTS setting (p. 49).</li> <li>• Check that the TV/VIDEO and VTR1-2-3 MDP controls are set correctly.</li> <li>• Make sure SPEAKER is set to ON (p. 50).</li> </ul>
No color for color programs	<ul style="list-style-type: none"> <li>• Check the HUE and COLOR settings (pp. 42 – 43).</li> </ul>
Snow and noise only	<ul style="list-style-type: none"> <li>• Check that it is an active or correct channel.</li> <li>• Check the cable setting.</li> <li>• Check the ANT/AUX button setting (KV-27XBR36/32XBR36/32XBR76 only).</li> <li>• Check antenna/cable connections.</li> </ul>
 Dotted lines or stripes	This is often caused by local interference (for example, cars, neon signs and hairdryers). Adjust the telescopic aerial for minimum interference.
 Double images or ghosts	Reflections from nearby mountains or buildings often cause this problem. Connecting a highly directional outdoor antenna or a CATV cable may improve the picture.
<b>Try another channel.</b> It could be station trouble.	



# Specifications

Television system	American TV standards	Dimensions (w/h/d)	(KV-27XBR26/27XBR36) Approx. 756 x 578 x 519 mm (29 <sup>7</sup> / <sub>8</sub> x 22 <sup>7</sup> / <sub>8</sub> x 20 <sup>1</sup> / <sub>2</sub> inches)
Channel coverage	VHF: 2 – 13 UHF: 14 – 69 Cable TV: 1 – 125		(KV-32XBR26/32XBR36) Approx. 870 x 663 x 575.2 mm (34 <sup>3</sup> / <sub>8</sub> x 26 <sup>1</sup> / <sub>2</sub> x 22 <sup>3</sup> / <sub>4</sub> inches)
Picture tube	Microblack™ Trinitron® tube 27-inch picture measured diagonally 29-inch picture tube measured diagonally (KV-27XBR26/27XBR36) 32-inch picture measured diagonally 34-inch picture tube measured diagonally (KV-32XBR26/32XBR36/32XBR76)	Weight	(KV-32XBR76) Approx. 922 x 1 079 x 676 mm (36 <sup>3</sup> / <sub>8</sub> x 42 <sup>1</sup> / <sub>2</sub> x 26 <sup>5</sup> / <sub>8</sub> inches)
Antenna	75 ohm external antenna terminal for VHF/UHF		(KV-27XBR26) Approx. 55.2 kg (121 lb 12 oz)
Input jacks	VIDEO IN 1, 2 and 3 S VIDEO IN (4-pin mini DIN) Y: 1 Vp-p, 75-ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal) 75-ohms Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilohms		(KV-27XBR36) Approx. 57.1 kg (125 lb 15 oz)
Output jacks	MONITOR OUT S VIDEO MONITOR OUT (4-pin mini DIN) Y: 1 Vp-p, 75-ohms unbalanced, sync negative Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 10 kilohms AUDIO OUTPUT (VARIABLE) (phono jacks) More than 900 mVrms (100% modulation) at the maximum volume setting (variable) Impedance: 5 kilohms AUDIO LINE OUT (phono jacks) 900 mVrms (100% modulation) Impedance: 5 kilohms	Supplied accessories	(KV-32XBR26) Approx. 76.8 kg (169 lb 5 oz)
Speaker output	13W x 2		(KV-32XBR36) Approx. 77.3 kg (170 lb 7 oz)
Power requirements	120 V AC, 60 Hz		(KV-32XBR76) Approx. 135.8 kg (299 lb 7 oz)
Power consumption	(KV-27XBR26/27XBR36) 250 W (KV-32XBR26/32XBR36/32XBR76) 225 W	Optional accessories	Remote Commander RM-Y113A (1) with 2 size AA (R6) EVEREADY batteries (KV-27XBR36/32XBR36) Remote Commander RM-Y112A (1) with 2 size AA (R6) EVEREADY batteries (KV-27XBR26/32XBR26) Remote Commander RM-Y115 (1) with 2 size AA (R6) EVEREADY batteries (KV-32XBR76) Cordless headphones TDR-IF310 (1) with 2 size AA (R6) EVEREADY batteries (KV-27XBR36/32XBR36 only)

Design and specifications are subject to change without notice.

## ● SOUND RETRIEVAL SYSTEM

The ● Sound Retrieval System is manufactured by Sony Corporation under license from the Hughes Aircraft Company, a subsidiary of GM Hughes Electronics. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

●, SOUND RETRIEVAL SYSTEM and SRS® are trademarks of the Hughes Aircraft Company, a subsidiary of GM Hughes Electronics.



# Index

---

<b>A</b>	Adjustment	
	audio (balance, bass, treble) .....	47
	picture (bright, color, hue, sharp) .....	42
	ANT/AUX button .....	24, 30
	AUDIO LINE OUT jacks .....	17
	AUTO PROGRAM .....	24 – 25
	AUX terminal .....	12
	A/V WINDOW buttons .....	20 – 29, 36 – 37, 42 – 63, 69 – 70

---

<b>C</b>	Cable TV channel chart .....	23
	Cable converter box .....	12, 39, 68
	CABLE ON/OFF .....	22 – 23
	C.CAPTION button .....	34 – 35
	CH CAPTION .....	51 – 52
	CH +/- buttons .....	24 – 25, 27, 31, 51
	Channel	
	adding .....	28 – 29
	erasing .....	26 – 27
	presetting .....	24 – 25
	Connecting	
	antenna cable .....	11 – 12
	audio system .....	17
	other equipment .....	13 – 17

---

<b>D</b>	DEMO button .....	33
	DIRECT PLAY .....	69 – 70
	DISPLAY button .....	32

---

<b>E</b>	ENTER button .....	29, 31, 51, 66, 68
----------	--------------------	--------------------

---

<b>F</b>	FAVORITE CHANNEL .....	62 – 63
	Front .....	6

---

<b>H</b>	HEADPHONES button .....	33, 41
----------	-------------------------	--------

---

<b>J</b>	JUMP button .....	33
----------	-------------------	----

---

<b>M</b>	MONITOR OUT jacks .....	15 – 16
	MTS mode .....	49
	MUTING button .....	32

---

<b>N</b>	NR ON/OFF .....	45
----------	-----------------	----

---

<b>O</b>	On-screen menus .....	18 – 19
----------	-----------------------	---------

---

<b>P</b>	Picture +/- buttons .....	43
	Picture and sound mode .....	36 – 37
	Picture-in-Picture (PIP) .....	38 – 41
	POWER button .....	20, 30
	Pre-programmed Remote Commander .....	64 – 70

---

<b>R</b>	Rear .....	7
----------	------------	---

---

<b>S</b>	S-VIDEO ON/OFF .....	13, 46
	SLEEP button .....	32
	SRS mode .....	48
	STEREO indicator .....	49
	SPEAKER ON/OFF .....	50
	STANDARD button .....	37


---

<b>T</b>	Timer activated functions	
	channel block .....	60 – 61
	current time set .....	55 – 56
	daylight saving .....	54 – 55
	on/off timer .....	57 – 58
	TIMER/STAND BY indicator .....	20, 30, 58
	TO CONVERTER terminal .....	12
	TV/CABLE BOX selector .....	68
	TV/VIDEO button .....	13 – 16, 22, 24, 64, 66
	Trinitone .....	44

---

<b>V</b>	VAR, AUDIO OUT jacks .....	17
	VCR .....	13 – 16, 39, 53, 64 – 67, 69 – 70
	VHF/UHF antenna terminal .....	11 – 14, 39
	VIDEO IN 1, 2, 3 jacks .....	13 – 16, 39
	VIDEO 3 OUT jacks .....	16
	VIDEO LABEL .....	53
	video operating buttons .....	64 – 66
	VOL +/- buttons .....	17, 31 – 33
	VTR1-2-3 MDP selector .....	64 – 67

---

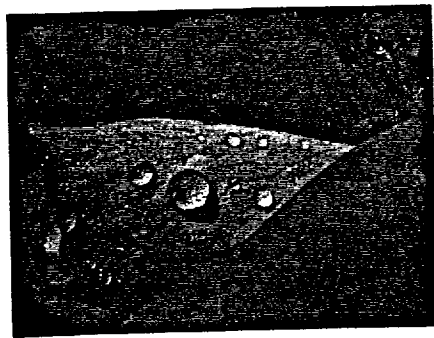

*Trinitron® Color TV*

KV-27XBR26    KV-27XBR36    KV-32XBR76  
KV-32XBR26    KV-32XBR36