


# Panasonic®

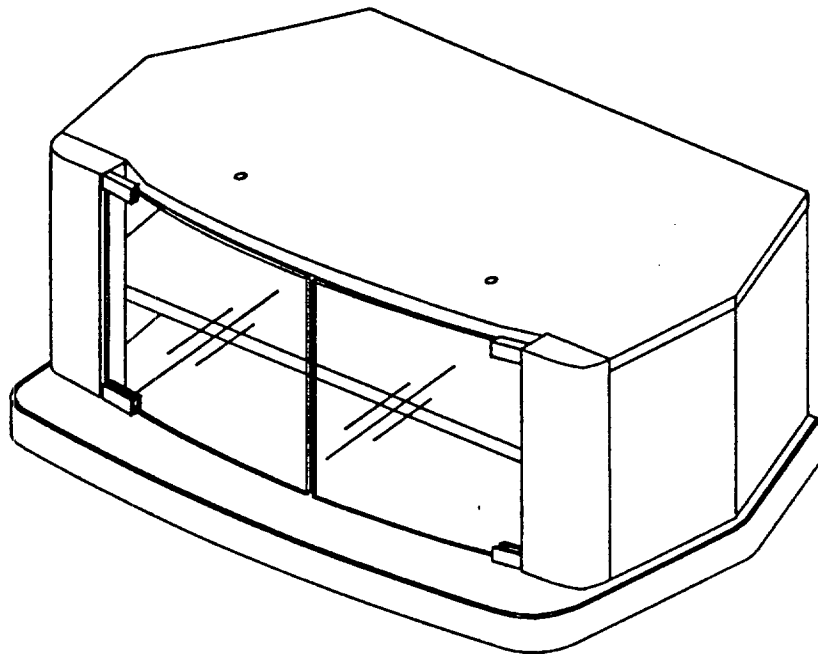

## Assembly Instructions

# TY-36SF24M

## VIDEO STAND

### Important

A study of the assembly instructions will not only save you time but may prevent possible damage to your new stand. Assistance may be required for some assembly procedures.

**CAUTION:** THIS STAND SHOULD BE USED WITH CASTERS. IT IS ALSO DESIGNED FOR USE WITH PANASONIC TELEVISION RECEIVERS.  
**UL APPROVED MODELS: CT-36SF24V, CT-36XF54V**


**TOLL FREE CUSTOMER ASSISTANCE LINE**  
**1-800-900-MICA (6422)**

Monday – Thursday: 7:30 am – 4:30 pm E.S.T.  
 Friday: 7:30 am – 2:30 pm E.S.T.

### Your Pack Contains:

<p>Video Stand</p>	<p><b>A</b> Screw #8 x 5/8"</p> <p>16 Pcs. THT2Q0FB76B</p>	<p><b>B</b> Tool Required:</p>	
<p>Pin</p> <p>2 Pcs. TKC2Q25094</p>	<p><b>D</b> Hinge Metal Plate Screw</p> <p>4 pcs. TKC2Q25129</p>	<p><b>C</b> Caster</p> <p>1 Bag 4 Pcs. TBL2QA5118</p>	
		<p><b>E</b> Glass Door</p> <p>2 Pcs. TKG2Q59475-4</p>	<p>Phillips Screwdriver</p>

## STEP 1

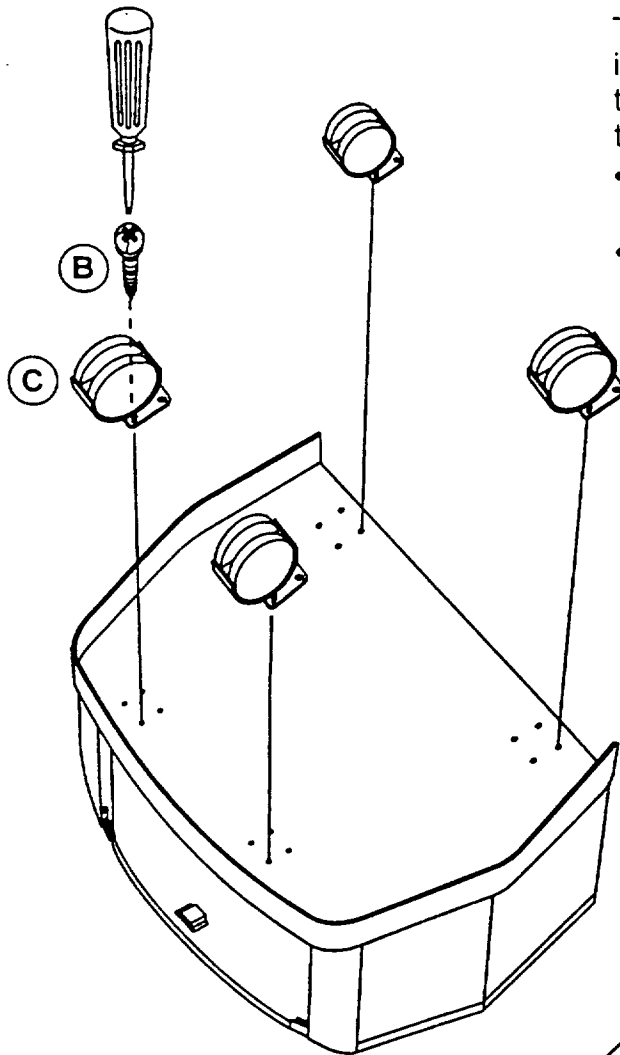


### **Important:**

To prevent the shelf from falling out when installing the casters, it is important to keep the "shelf shipping protector" intact before turning the unit upside down.


- Lay the top of the stand on a soft surface (carpet) to avoid any damage to the unit.
- Install casters (C) to pre-drilled as shown, using screws (B).

## STEP 2

- Turn the TV stand back to the upright position.
- Remove shelf shipping protectors.

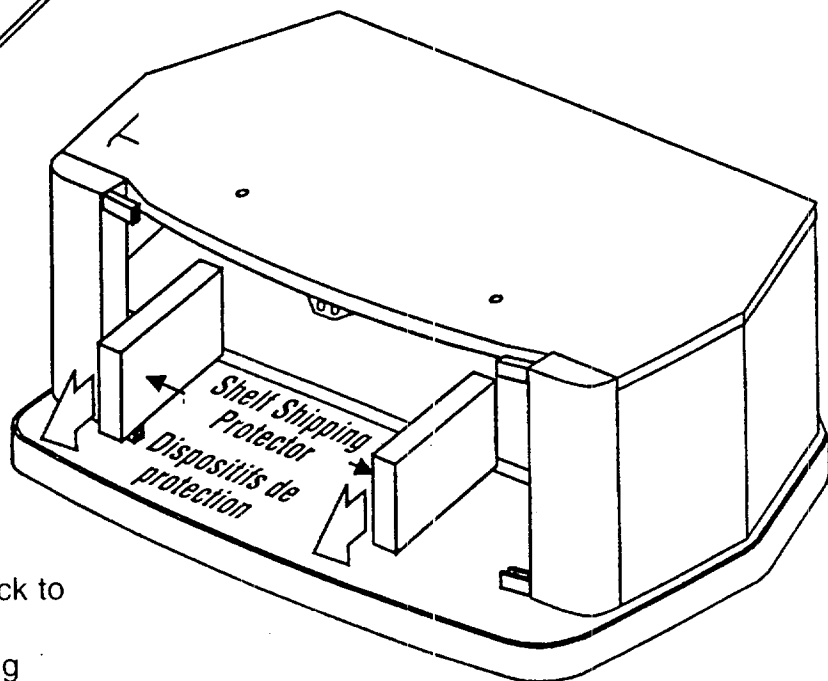

## **STEP 3** Glass Door Installation (Left glass door installation shown)

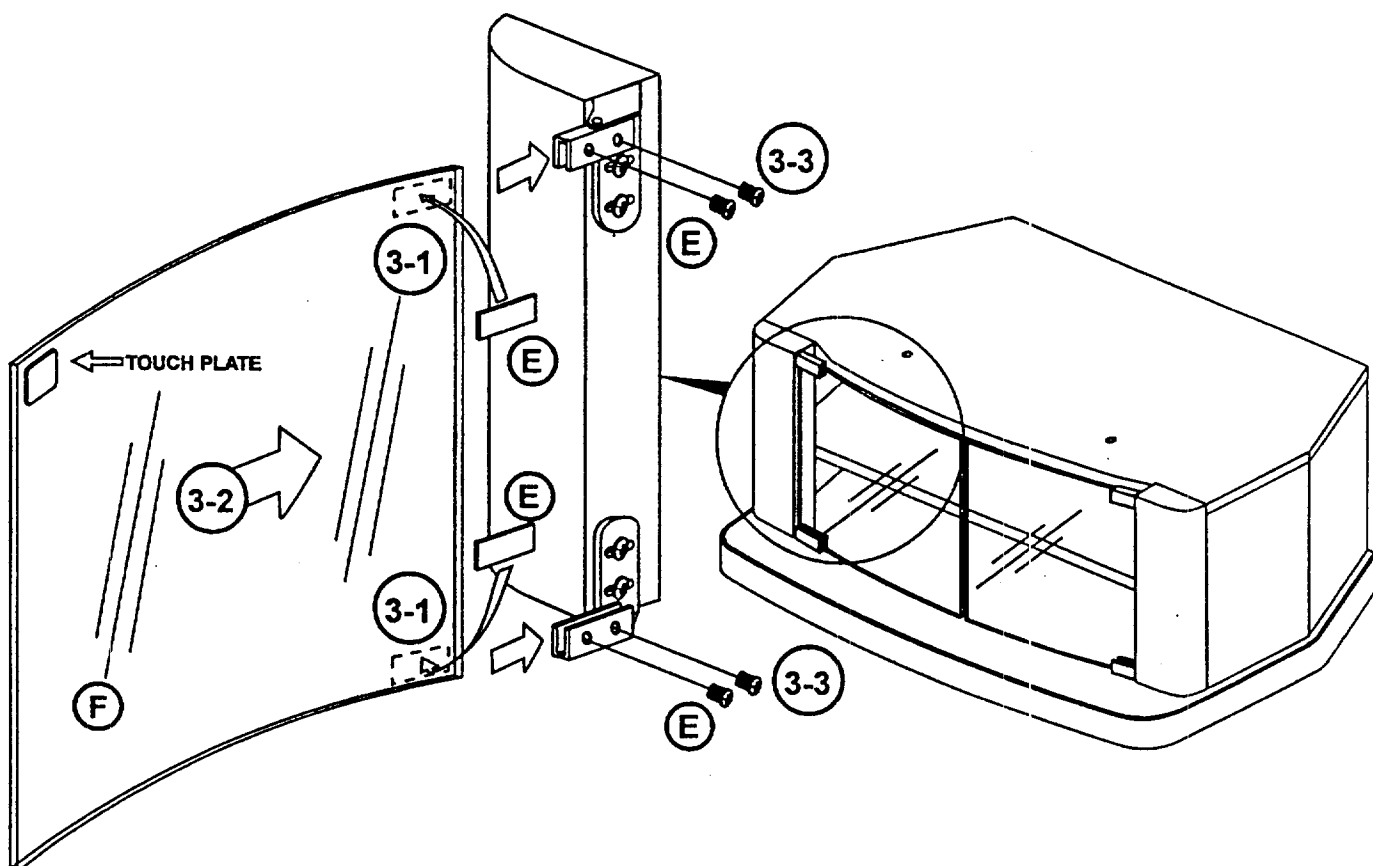


- 3-1 • Apply hinge metal plates (E) to the glass door (F) on the same side of the glass as the touch plate as shown.
- 3-2 • Slide the glass door (F) into the top and bottom hinges.
- 3-3 • Tighten the screws to fit against the hinge metal plates (E).  
Repeat the same procedure for the right side glass door installation.


 



 


 
 



 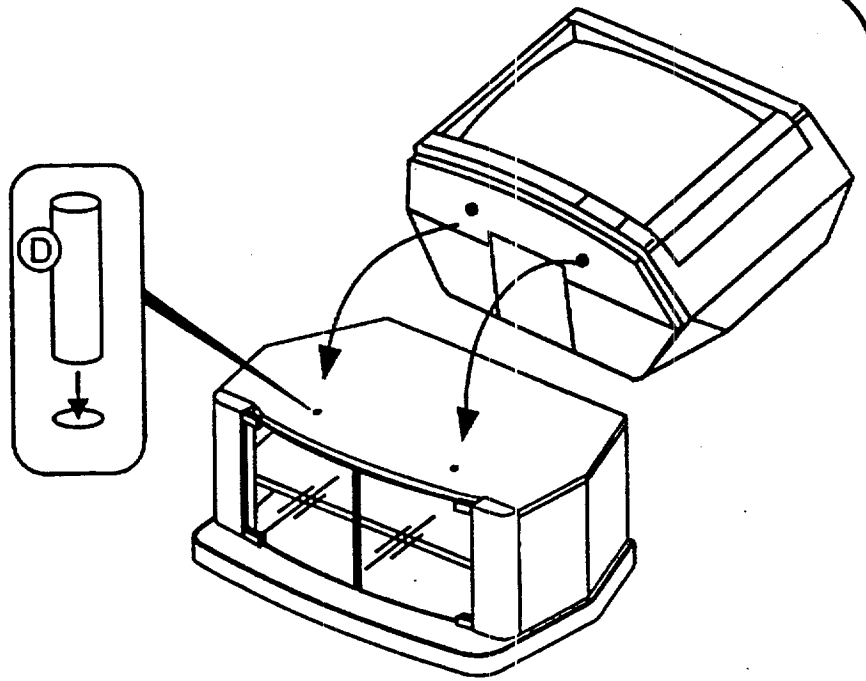


**Note:** The glass door can be levelled by loosening the hinge metal screws (E).
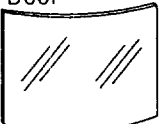
# STEP 4

- Insert pins ① as shown.
- Place television set on the stand making sure the holes on the bottom of the television line up with the pins on the stand.

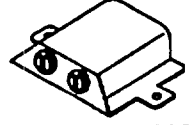

## Replacement Parts

<b>Glass Door</b>  TKG2Q59475-4	<b>Rear Cover</b>  TKD2Q17391	<b>Shelf</b>  TKD2Q13387	<b>Shelf Pin</b>  TKC2Q25036	<b>Caster</b>  TBL2QA5118
<b>Door Hinge</b>  TKC2Q25077-2	<b>Hinge Metal Plate Screw</b>   TKC2Q25129	<b>Touch Plate</b>  TKC2Q25071	<b>Pin</b>  TKC2Q25094	<b>Magnetic Latch</b>  TTK2A0804
<b>Screw with Washer #6 x 5/8 in.</b>  THT2Q3JB98B	<b>Screw #6 x 5/8 in.</b>  THT2Q07B99B	<b>Screw #6 x 3/4 in.</b>  THT2Q0KC128B	<b>Screw #8 x 5/8 in.</b>  THT2Q0FB76B	<b>Screw #8 x 1-15/16 in.</b>  TKC2Q25069-1

### To maintain appearance we recommend the following:

**For Painted Surfaces:** Use a damp cloth for cleaning. Do not use any abrasive or chemical based cleaners.

**Vinyl:** Vinyl does not need polishing and is remarkably resistant to almost any stain.

- **Scuff Marks:** Most scratches and scuffs can be removed with fine steel wool and furniture wax.
- **Stains:** A sponge, dipped in warm, soapy water and used to wipe lightly over vinyl will remove most stains.

*For improvement purposes, design and specifications are subject to change without notice.*

**When making a part(s) inquiry, please quote part number and description.**

**For parts inquiries or for out of warranty purchases:  
PANASONIC SERVICES COMPANY**

20421 84th Avenue South, Kent, Washington 98032 • Tel.: 1-800-833-9626 • Fax: 1-800-237-9080  
© 1997 Matsushita Electric Industrial Co., Ltd. • All rights reserved. Unauthorized copying and distribution is a violation of law.