

zenith

thanks for
choosing zenith
let's watch tv



hook up directory

page 3

RECORD YOUR MODEL NUMBER

The model and serial number of your new TV are located on the back of the TV cabinet. For your future convenience, we suggest that you record these numbers here:

MODEL NO. _____

SERIAL NO. _____



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

POWER CORD POLARIZATION:

CAUTION: To Prevent Electric Shock, Match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

NOTE TO CABLE/TV SYSTEM INSTALLER:

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

REGULATORY INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Do not attempt to modify this product in any way without written authorization from Zenith Electronics Corporation. Unauthorized modification could void the user's authority to operate this product.


IMPORTANT!!

Use this page to decide where you need to begin your Setup. First, find the line below that best describes what you want to do, then go to that page number.

This page will direct you to which page to go to for proper hook-up of your Entertainment Machine.


Antenna only

If you are using an antenna and no other equipment, go to page 4

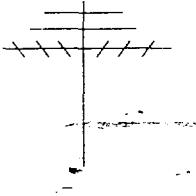



Cable only

If you have cable and no other equipment, go to page 5

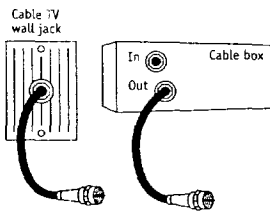


Antenna with VCR

 If you are using an antenna and have a VCR, go to page 6

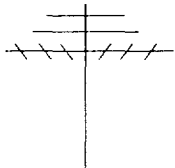

Cable and VCR

If you have cable and a VCR, go to page 7

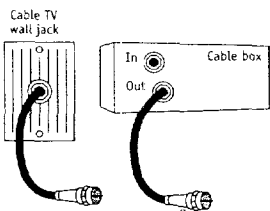


Feeling brave? If you just want some general hook-up information about customizing your own set-up, then skip to page 8.

Hook Up Your Antenna to the TV


Connect an off-air antenna to your Entertainment Machine.

1 Hook up your Entertainment Machine.

 2 Remove the back of the remote and put in two AAA batteries.



3 Plug in your TV. Do not plug it into a switched outlet.

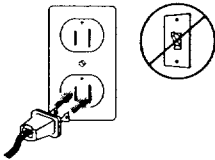

4 Go to page 8 to Auto Program your Entertainment Machine.





If you have a 75 ohm RF cable, then you don't need any adapters!



Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens.



A 300 to 75 ohm adapter is not included with your Entertainment Machine.

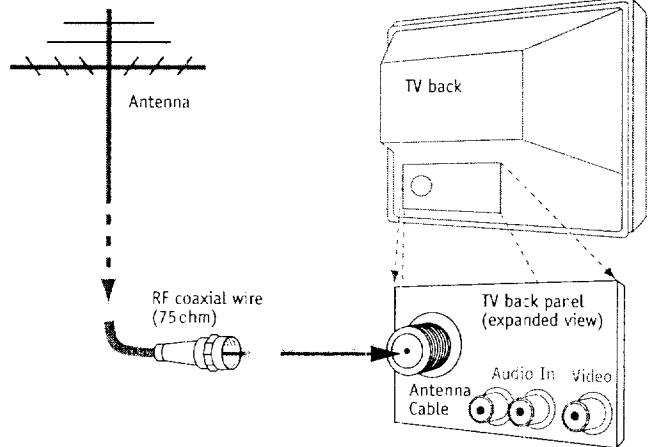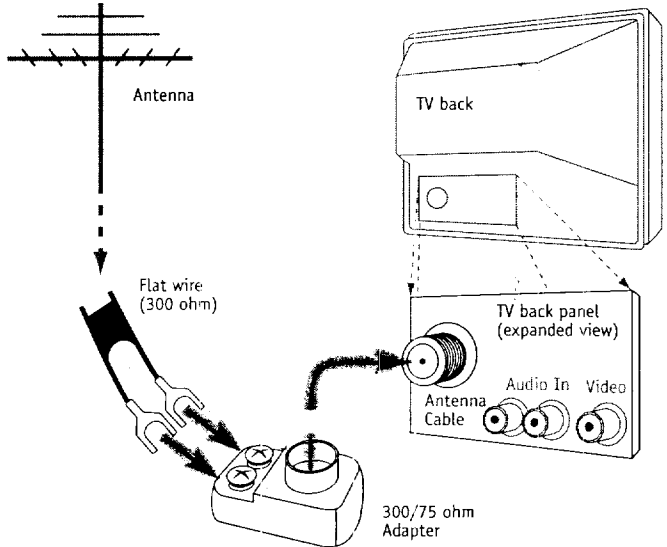

Mini glossary

75 OHM RF CABLE

The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle, and it screws onto the threaded jack on the back of your TV.

300 TO 75 OHM ADAPTER

A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end.


Hook Up Your Cable (CATV) to the TV

1

Hook up your Entertainment Machine.


2

Remove the back of the remote and put in two AAA batteries.

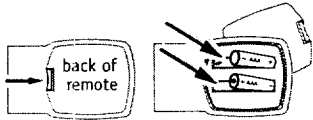

3

Plug in your TV. Do not plug it into a switched outlet. Your Entertainment Machine is designed to operate on household current, 120-volt 60 Hertz AC do not attempt to operate it on DC Current.

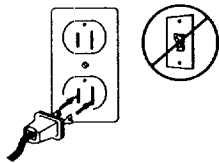

4

Go to page 8 to Auto Program your Entertainment Machine.



If you're using a cable box, leave your TV on channel 3 or 4 and use your cable box to change channels.




Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens.



If you're using a cable box, Auto Program (page 8) might only find the channel your cable service is on (usually channel 3 or 4). Don't worry, that's all you need!

Connect cable to your Entertainment Machine.

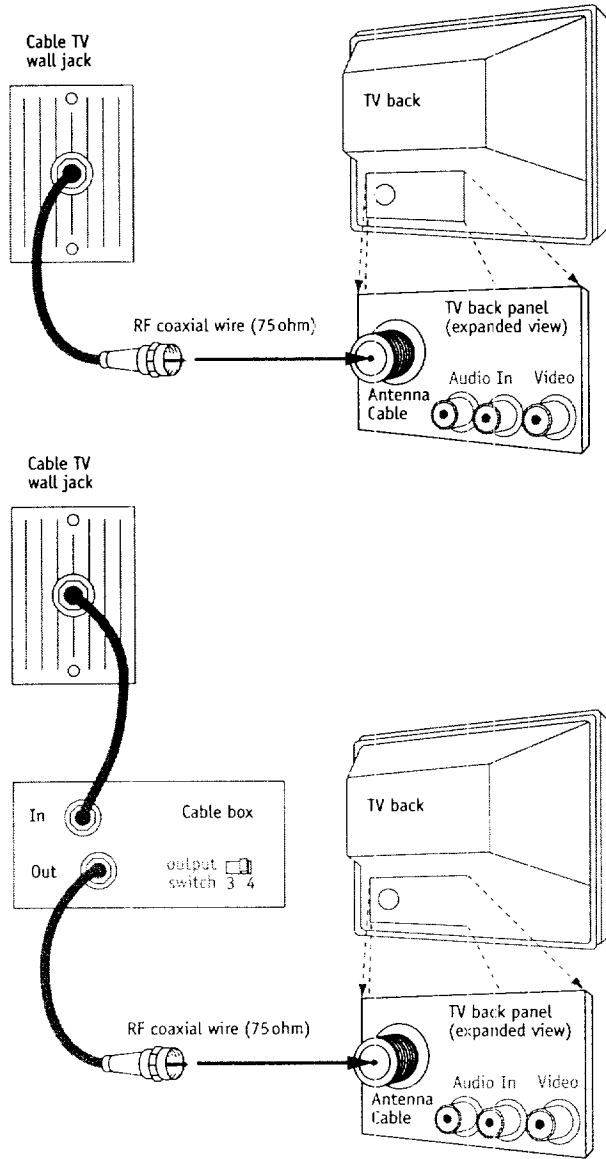

Min. 105-20

 
CABLE SERVICE The wire that supplies all your cable TV (CATV) stations.

Hook Up Your Antenna and VCR to TV


Connect your off-air antenna and VCR to your Entertainment Machine.

1 Hook up your Entertainment Machine.

2 Remove the back of the remote and put in two AAA batteries.



3 Plug in your TV. Do not plug it into a switched outlet.

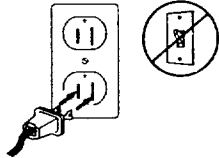

4 Go to page 8 to Auto Program your Entertainment Machine.





Remember, when screwing RF cables onto jacks, clockwise tightens, and counterclockwise loosens.



No A/V cables are included with your Entertainment Machine.




Without A/V cables, most VCRs will not play videocassettes in stereo sound.

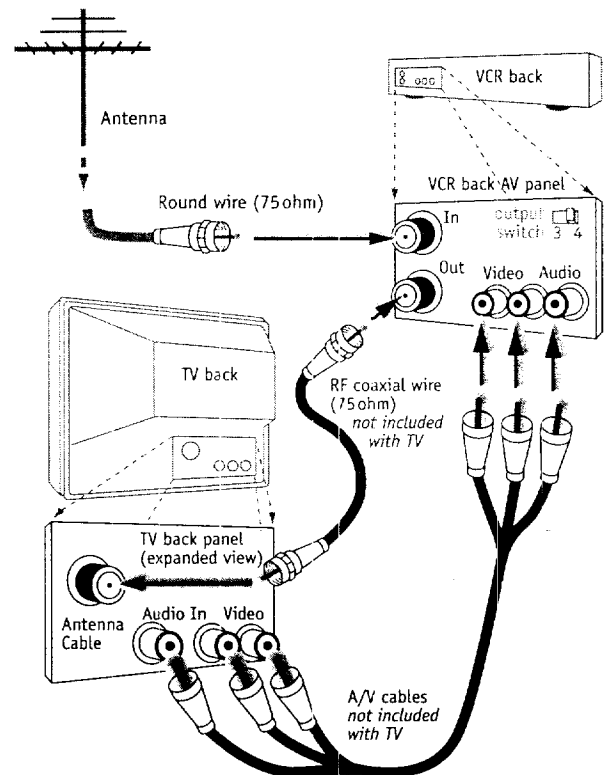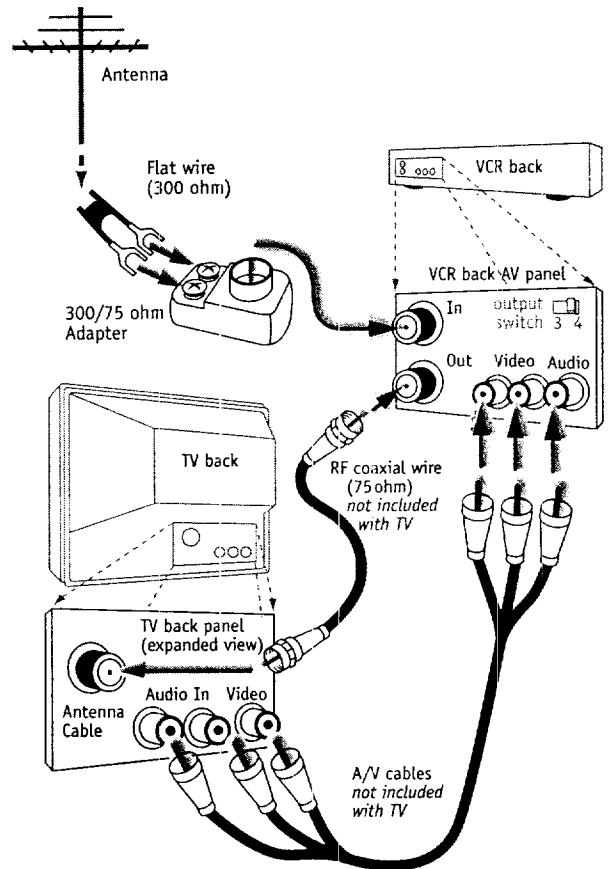


Hook Up Your Cable (CATV) and VCR


- 1** Hook up your Entertainment Machine.
- 2** Remove the back of the remote and put in two AAA batteries.

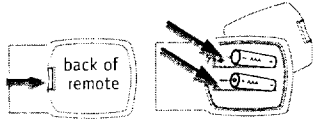

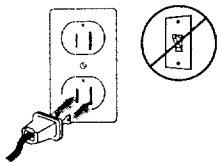

- 3** Plug in your TV. Do not plug it into a switched outlet.





- 4** Go to page 8 to Auto Program your Entertainment Machine.

 Leave your VCR and your television tuned to channel three and use the cable box to change channels.

 Remember, when screwing in RF cables onto jacks, clockwise tightens, and counterclockwise loosens.

 No A/V cables are included with your Zenith Entertainment Machine. Without A/V cables, most VCRs will not play videocassettes in stereo sound.


Connect your VCR and Cable to your Entertainment Machine.

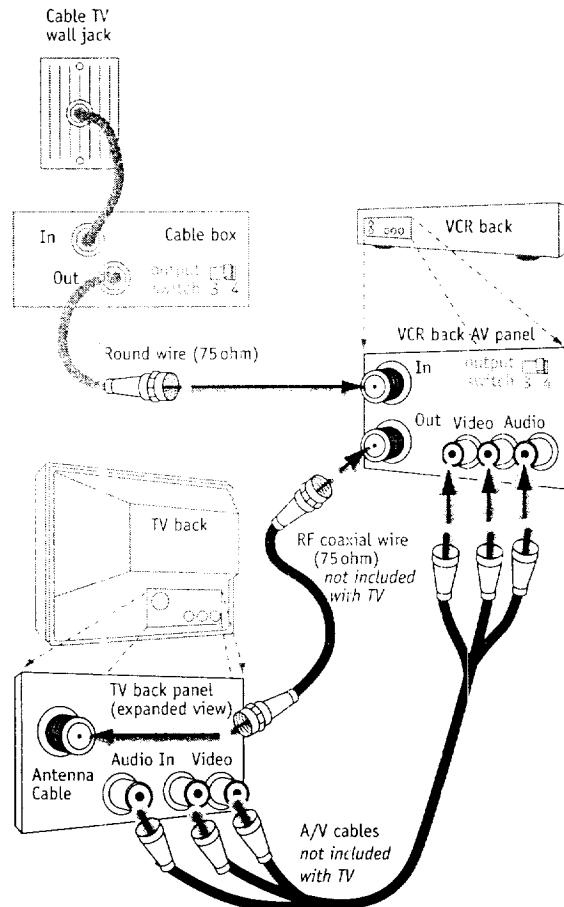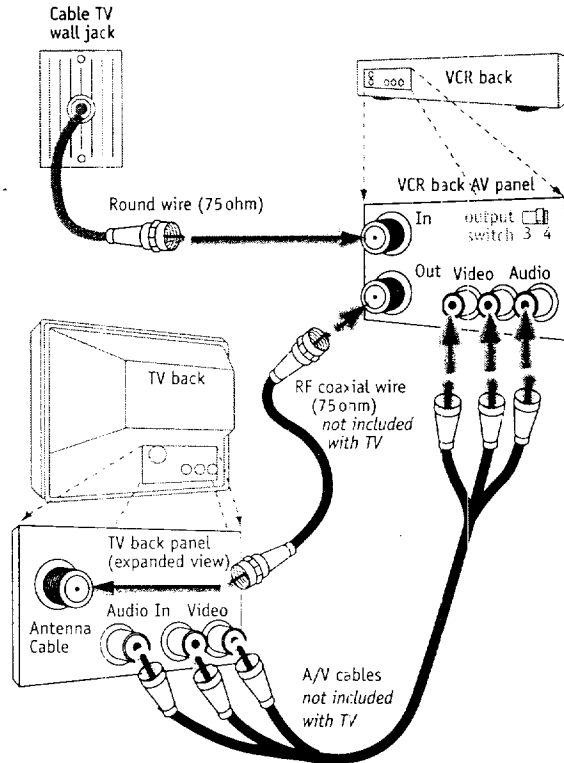

Auto Program

Use Auto Program to automatically find and store all the stations available in your area.

- 1** With the remote control in hand, press the POWER key to turn on your Entertainment Machine.
- 2** Press the MENU key so the Setup menu appears.
- 3** Using the UP/DOWN arrows on the remote control, select Auto Program on your screen.
- 4** Press a RIGHT or LEFT arrow to reach the Auto Program screen.
- 5** Using the UP/DOWN arrows, choose either Cable TV or Off-air Antenna on your screen.
- 6** Press a RIGHT or LEFT arrow to begin Auto Program.
- 7** Press ENTER to return to TV viewing.

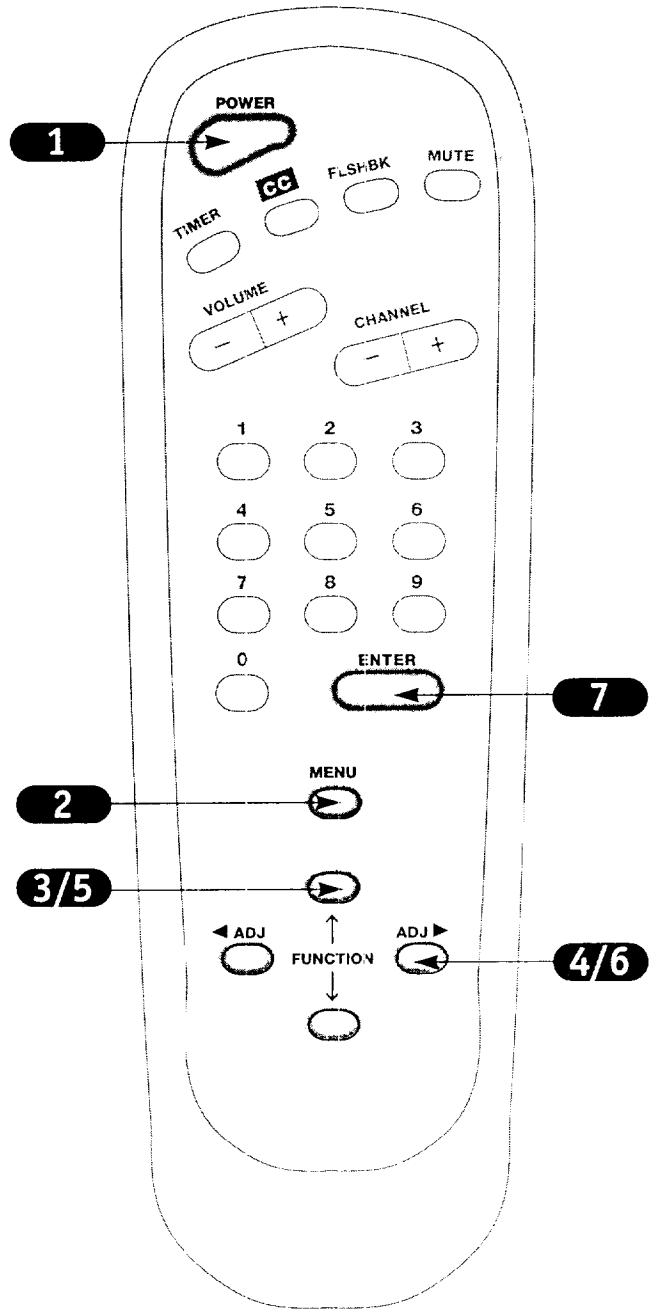


Mini glossary

AUTO PROGRAM

Auto Program is how your Entertainment Machine finds all the channels available in your area and stores them into memory.

The Buttons on Your Remote

A quick list of all the buttons on your remote and what they do.

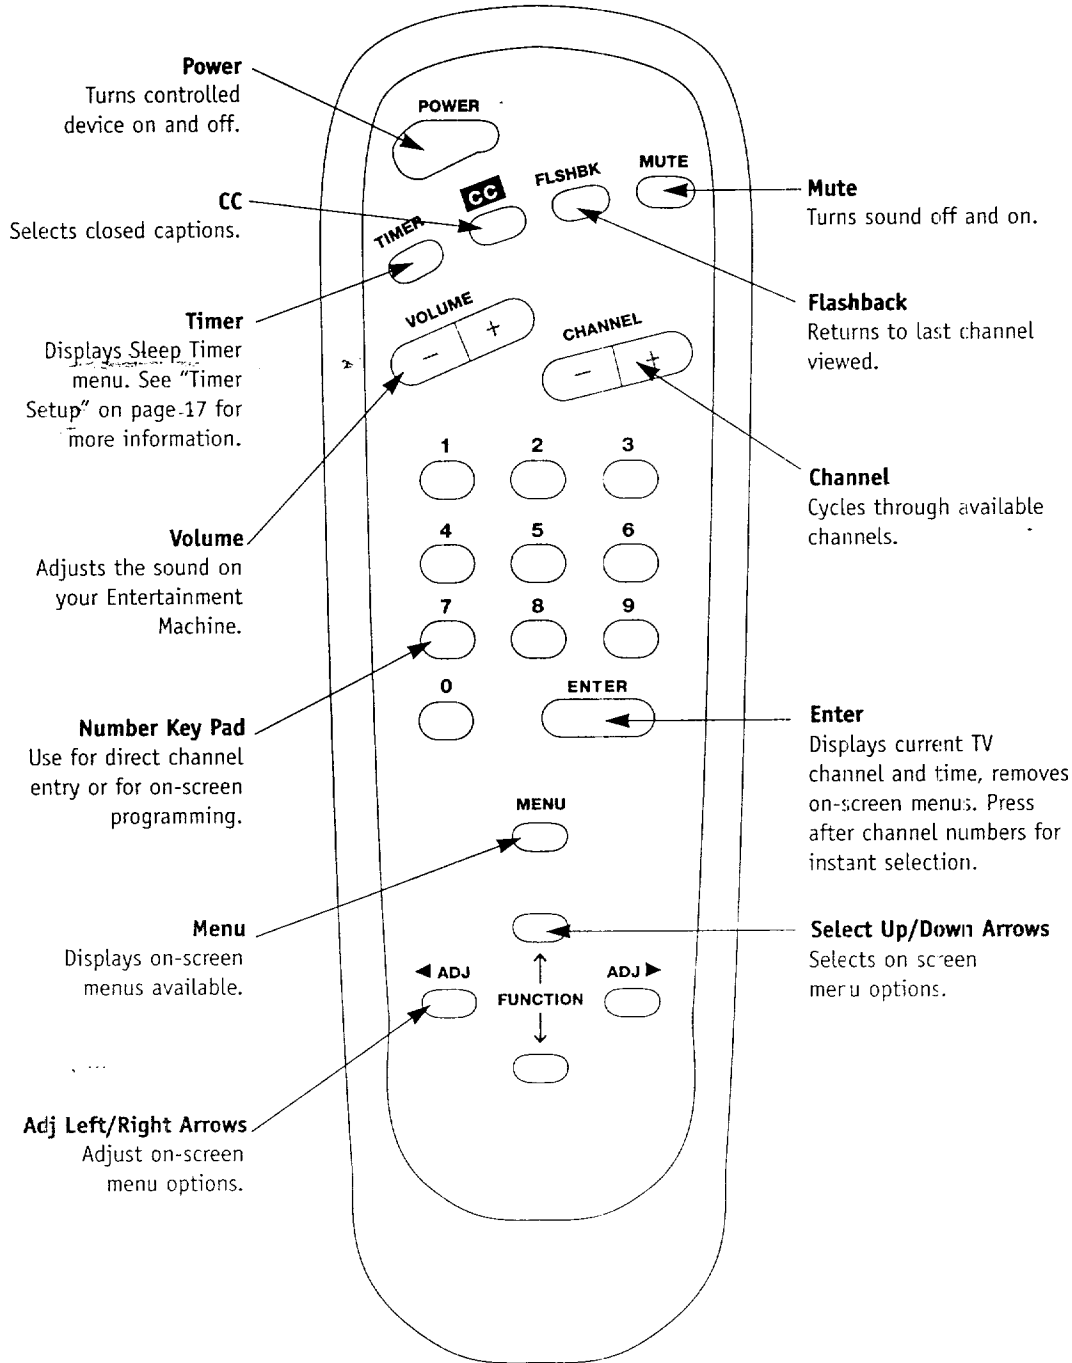

remote control part number
SC3492

Front Panel Diagram

How to use your six-button panel to operate the menus.

When using the on-screen menus, the buttons on the front panel correspond to the remote control buttons as follows:
 VOLUME = Adjust Left/Right
 CHANNEL = Select Up/Down


- 1** To access the Setup menus, press the MENU button once; to get the Video menus, press the MENU button twice.
- 2** Choose the function you wish to change using the CHANNEL UP/DOWN buttons. The Channel buttons act as a "Select" (Up/Down) function.
- 3** The VOLUME buttons act as an "adjustment" (Left/Right) function. Use the VOLUME buttons to make changes or adjustments.



Menus disappear after five seconds. To get them back, push the MENU button again.



You'll want to get a new remote; call 1-800-255-6970 to purchase a replacement.

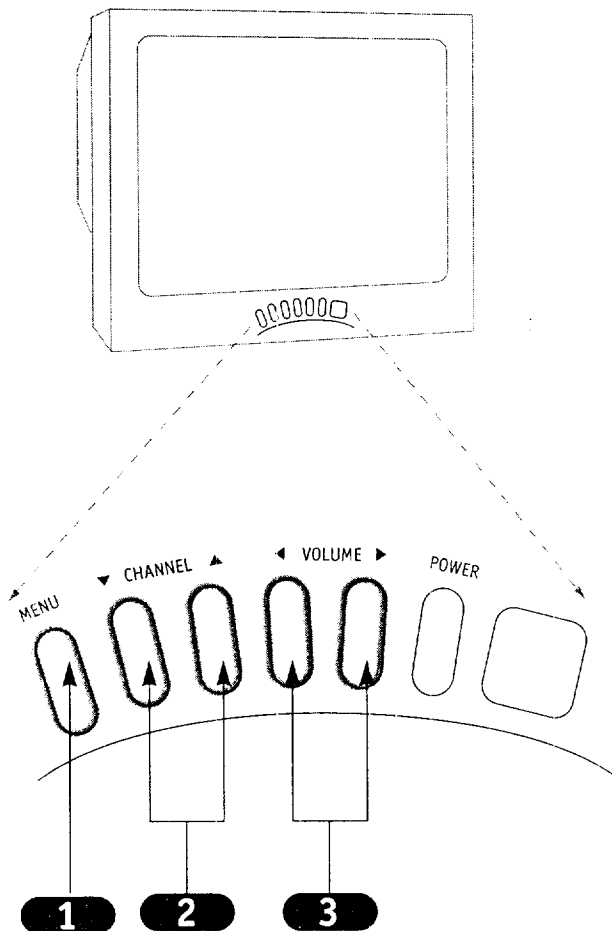

Basic Television Operation


Introducing
you to the
basics of your
Entertainment
Machine

Source

On some models, the A/V input is designated as a channel that is one below the lowest/one above the highest. You'll have to use the Channel Up/Down buttons to access it. The Time/Channel display will read "Video" in place of a channel number.

Cable/Antenna Input: This setting allows you to change cable or antenna channels and to view videocassettes on channel 3 (or 4) in mono sound.

Video Input: This setting allows stereo playback of videocassettes. The television cannot change channels in the Video mode, but the VCR can.

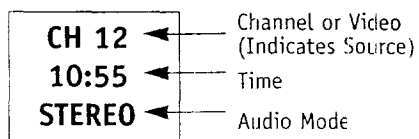

To view the current input source, press ENTER on your remote. The Time/Channel display should appear in the upper right hand corner of the screen. If the display reads 'Video,' then the source is an A/V input. If the display reads a channel number, then the source is your Cable or Antenna.

Channel Changing

CHANNEL UP/DOWN arrows: Use these arrows to change the channels. Auto Program will have found all channels available to you.

NUMBER Key pad: To skip to any channel, enter the number of the channel using the NUMBER key pad, then press ENTER.

FLASHBACK: To instantly return to the last channel viewed, press FLASHBACK.

Audio

Volume Right/Left: To adjust the volume level, use the volume Right/Left arrows. To silence your TV instantly, press MUTE. To get the sound back, press MUTE again.



While some mono models (A19A02D and A25A02D) do not have A/V inputs, you can still use or install a VCR. Just turn to page 6 to learn how to hook up your antenna and VCR.

Basic Television Operation (cont'd)

Help on combining your Entertainment Machine with more equipment.

There are a number of ways you can choose to integrate your Entertainment Machine with the rest of your equipment. Channels can be changed using the television, the VCR, or the cable box, with advantages to each.

USING THE TELEVISION AS THE TUNER preserves all your channel labels (not available on some models). It also reduces the number of keys on the remote control you need to worry about. (One device, one remote to learn.)

USING THE VCR AS THE TUNER has the advantage of simplifying the recording process. If the VCR is tuned to channel seven, then the VCR will record channel seven.

USING THE CABLE BOX (if you have one) to change the stations sometimes has an advantage, too, especially if your cable provider requires you to use their cable box to descramble their stations.

Setting Up a Tuner

- 1** Based on the advantages listed above, decide what device you want to use as the tuner.
- 2** Connect the antenna or cable source to the input of your tuner. If you chose your television as the tuner, then you're done. Go watch your Entertainment Machine.
- 3** Connect the output of your tuner to the input of the next device.
- 4** If you used A/V cables for step 3, set the "next device" to Video input. If you used an RF coaxial cable in step 3, then tune the "next device" to match the output channel of your tuner (usually channel 3 or 4).
- 5** Repeat steps 3 and 4 until you reach your Entertainment Machine. Then enjoy!

Mini glossary

- TUNER** The television, VCR, or cable box that you choose to change channels with.
- A/V CABLES** Audio/Video cables. Three cables bunched together—right audio (red), left audio (white), and video (yellow).
- A/V DEVICE** Any device that produces video or sound (VCR, DVD, cable box, or television).
- DESCRAMBLE** Programs are often broadcast scrambled. Your cable box sorts out the channels you pay for.

Setup Menu

Descriptions of the menu options found in the Setup menu.

Function	What it does	Go to page
Auto Program	Automatically finds and stores active channels to flip through using Channel Up/Down.	8
Ch. Add/Del	Manually pick and choose which active channels will appear when flipping through using Channel Up/Down.	14
Clock Set	Sets the current time on your Entertainment Machine.	15
Timer Setup	Opens menu for the following functions: <ul style="list-style-type: none"> • Turns the Sleep Timer on or off. • Selects an automatic On Time for your Entertainment Machine. • Selects an automatic Off Time for shut-down. • On/Off timer controls automatic power on and power off. Must be set to On for above functions to work.	16
Captions/Text	Displays closed captions or text when available. Options are Off, Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3, and Text 4.	17
Audio Mode	Switches your sound between Stereo (separate sound on left and right speakers) and Mono (same sound on both speakers).	18
Language	Selects language for on-screen menus. Your options are English, Spanish, or French.	19

Setup Menu

AutoProgram

Ch. Add/Del

Clock Set

Timer Setup

Captions/Text

Language

4:34 PM

This is a sample of what on-screen menus look like.



In video mode, only Clock Set, Timer Setup, Caption/Text and Language will appear. To view all menus, switch to Cable/Antenna input.

Setting Ch. Add/Del

Customize your channel selection.


- 1** Press the MENU key on the remote so the setup menu appears.
- 2** Select the Ch. Add/Delete menu using the UP/DOWN arrows.
- 3** Using either the NUMBER key pad or the CHANNEL UP/DOWN arrows on the remote, select a channel. (If adding a deleted channel, you will need to use the NUMBER key pad.)
- 4** Using the RIGHT/LEFT arrows, pick whether that channel is Added or Deleted.
- 5** To continue, select another channel and repeat step 4. If you are finished, press ENTER to return to TV viewing.



You can add or delete a channel without the remote control. Please refer to page 10 on working the menus with the buttons on the front of your Entertainment Machine.



If you delete a channel, it isn't gone for good. Just select it using the NUMBER key pad on the remote, or add it later.

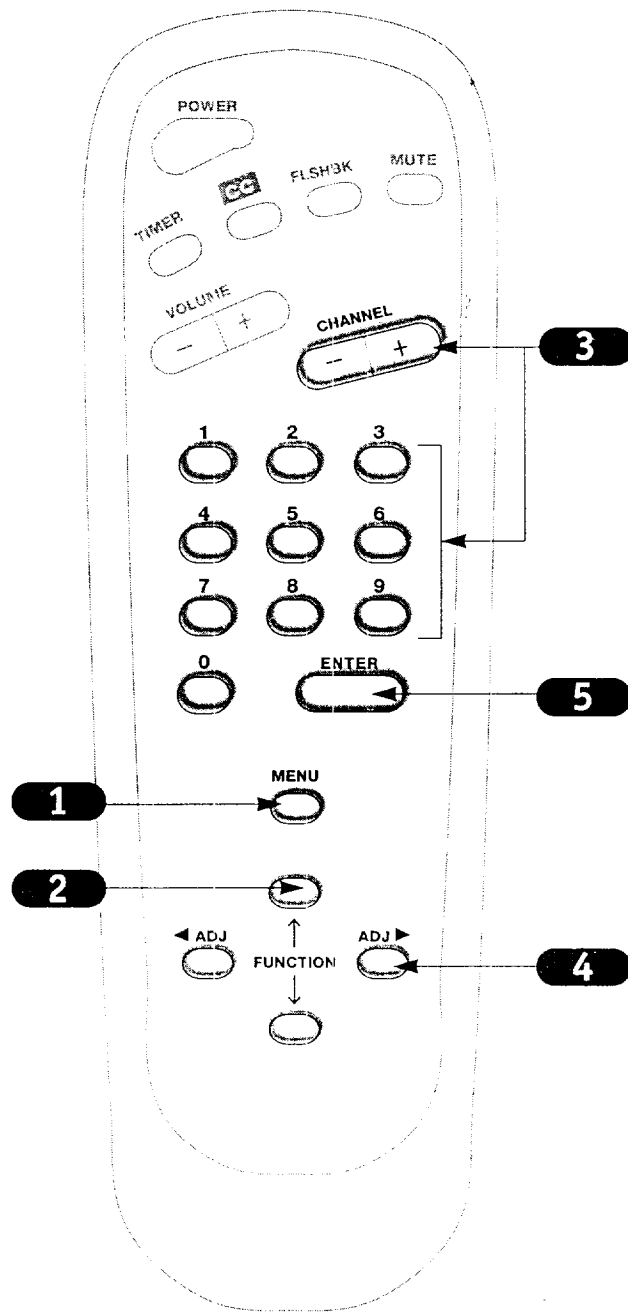

Mini glossary

- ADD** This function lets you add new channels to the list that you'll scroll through when using your remote.
- DELETE** This function lets you remove channels that you don't watch from the list you'll scroll through.


Clock Set

Set the clock.
on your
Entertainment
Machine

- 1** Press the MENU key on the remote control so the Setup menu appears.
- 2** Using the UP/DOWN arrows on the remote control, select Clock Set on your screen.
- 3** Press a RIGHT or LEFT arrow to adjust the time.
- 4** Press the TIMER button to select AM or PM.
- 5** Press ENTER to return to TV viewing.



You can use the NUMBER key pad to simply type in the time (AM or PM is still selected with the Timer key).

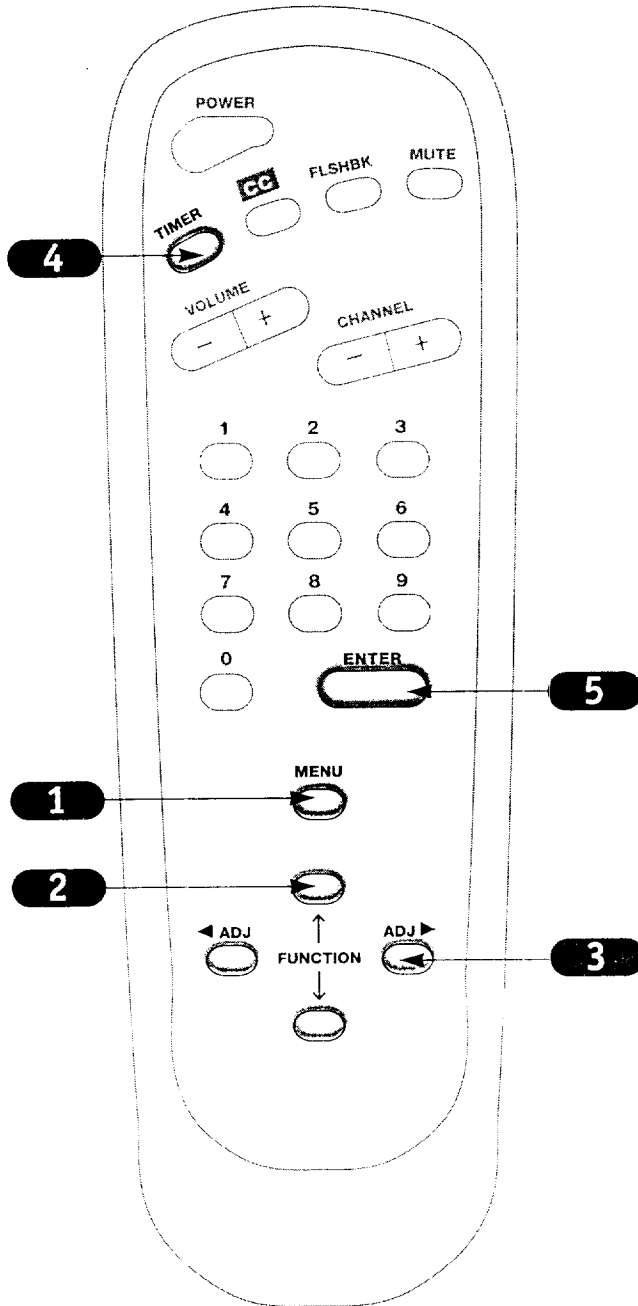

Timer


Automatically turn your Entertainment Machine on or off.

- 1** Press the MENU key on the remote control so the Setup menu appears.
- 2** Using the UP/DOWN arrows on the remote control, select Timer Setup on your screen.
- 3** Press a RIGHT/LEFT arrow. The Timer Setup screen will appear.
- 4** Sleep Timer: Use the RIGHT/LEFT arrows to adjust the length of time until the TV shuts down (select a countdown from ten minutes to four hours).

At this point, continue to step six to set the On Time, or press ENTER or QUIT to return to TV viewing.
- 5** On Time: Using the UP/DOWN arrows on the remote control, select On Time on your screen.
- 6** Press a RIGHT or LEFT arrow to adjust the time your TV will automatically turn on.
- 7** Press the TIMER button to select AM or PM.
- 8** Press ENTER or QUIT to return to TV viewing or continue programming by repeating the above steps for Off Time, and the On/Off Timer.



The On/Off timer will not work until the Clock on your television has been set.

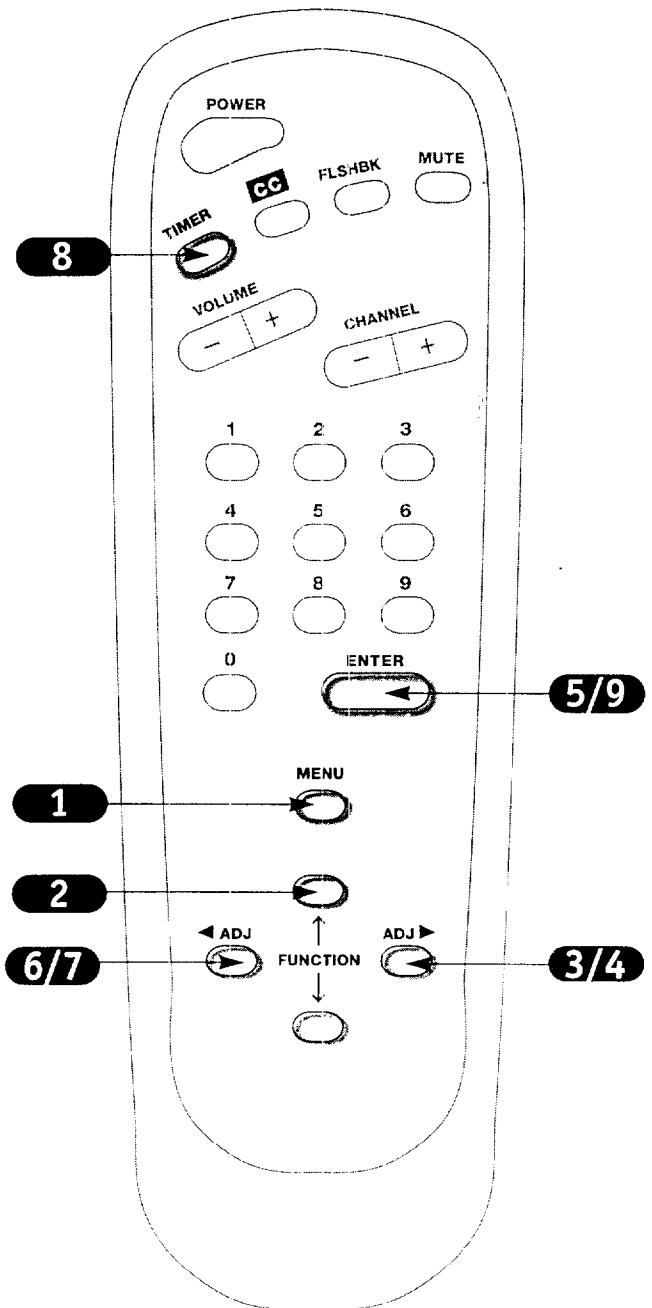

Captions and Text

- 1** Press the MENU key on the remote control so the Setup menu appears.
- 2** Using the UP/DOWN arrows on the remote control, select Captions/Text on your screen.
- 3** Press a RIGHT/LEFT arrow to choose any of the following options: Off, Caption 1, Caption 2, Caption 3, Caption 4, Text 1, Text 2, Text 3 or Text 4.
- 4** Press ENTER to return to TV viewing.



Captions come in handy when the television is on mute.




Standard Closed Captioning is available using the Caption 1 option.



Not all programming has closed captioning or text available.

Turn on closed captioning or text that appears at the bottom of your screen.

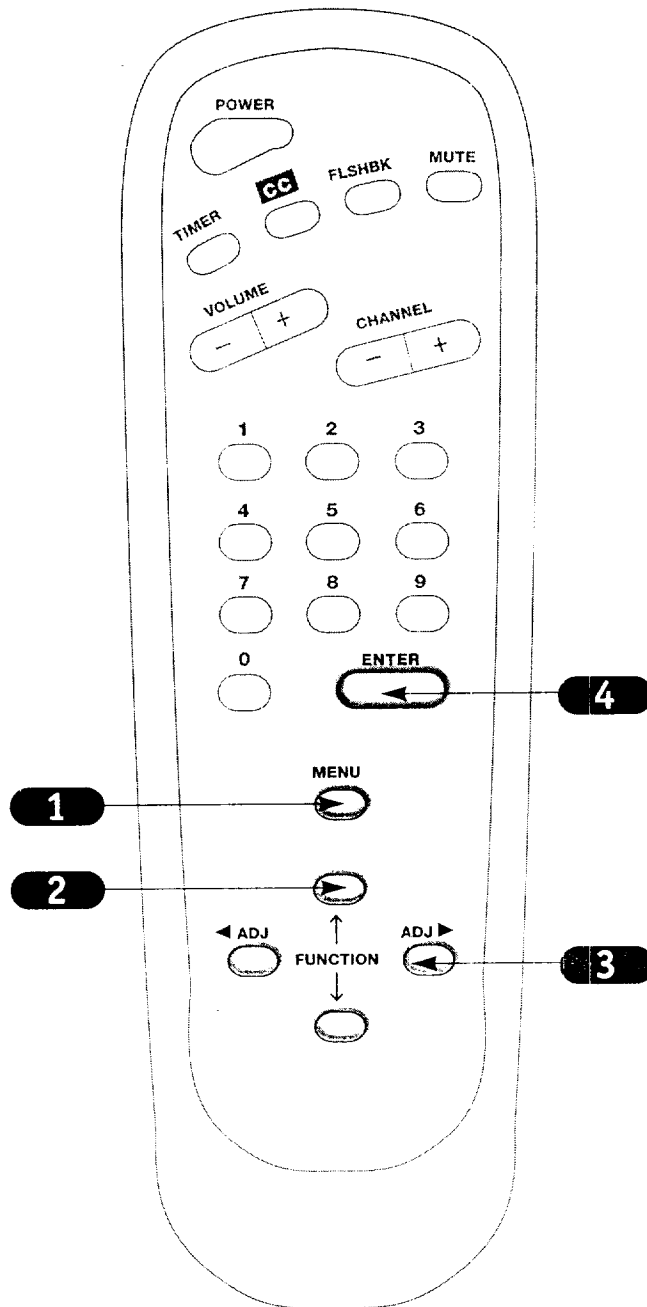


Audio Mode

Choose between stereo sound and mono sound.

- 1** Press the MENU key on the remote control so the Setup menu appears.
- 2** Using the UP/DOWN arrows on the remote control, select Audio Mode on your screen.
- 3** Press a RIGHT/LEFT arrow to select either of the following options: Stereo or Mono.
- 4** Press ENTER to return to TV viewing.



Not all programming is broadcast in stereo sound.

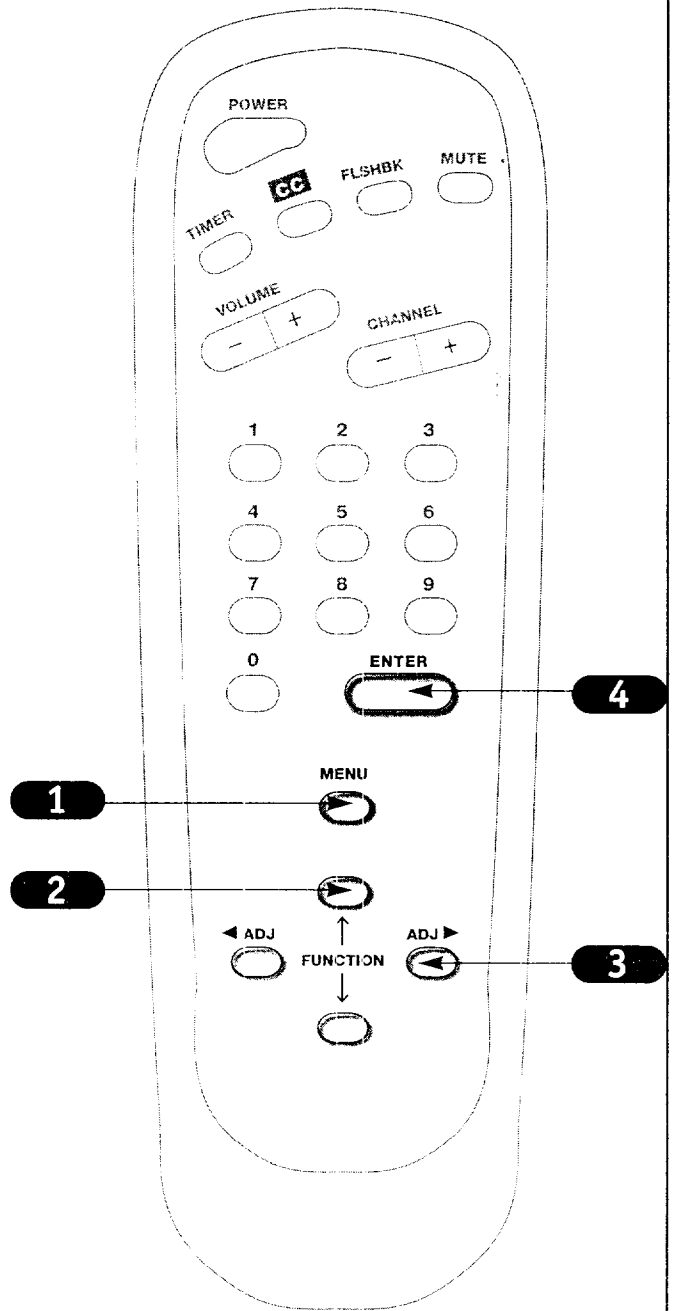


Mini glossary

- STEREO SOUND** Stereo (stereophonic) sound refers to audio that's divided into right and left sides.
- MONO SOUND** Mono (monaural) sound is one channel of sound. All the speakers play the same audio.

Language Options

Choose the language you want all the menus to appear in.

- 1** Press the MENU key on the remote control so the Setup menu appears.
- 2** Using the UP/DOWN arrows on the remote control, select Language on your screen.
- 3** Press a RIGHT/LEFT arrow to choose any of the following options: English, Spanish, or French
- 4** Press ENTER to return to regular TV viewing.

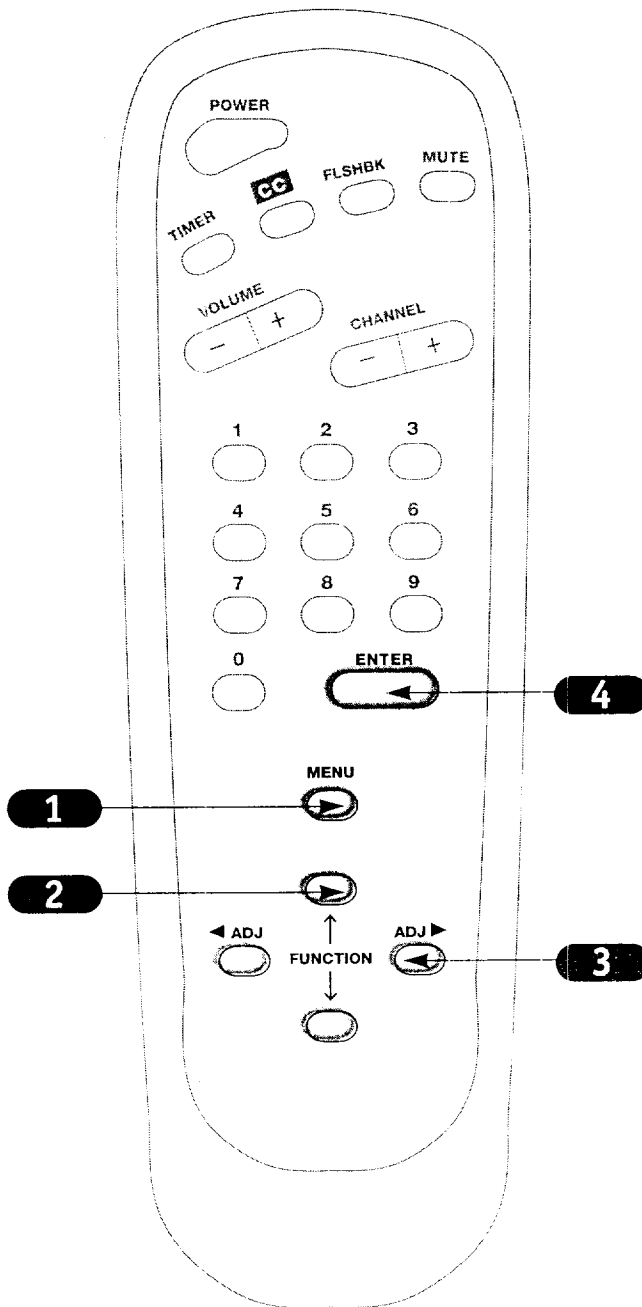

Video Menu

Use the Video menu to customize how your picture looks.

1 Press the MENU key twice and the Video menu will appear. Your options are:

- **Contrast:** Adjusts the level of difference between white and black in the TV picture. The more contrast, the brighter the picture appears.
- **Brightness:** Increases or decreases the amount of white in the TV picture.
- **Color:** Adjusts levels of all colors in the TV picture.
- **Tint:** Balances between amounts of red and green in the TV picture.
- **Sharpness:** Raises or lowers the definition of the TV picture. The lower the level, the softer the images will appear.
- **Picture Preference:** Choose either Custom or Preset. Custom allows you to set the picture the way you want. Preset moves all the above options back to their original, factory-set levels.

2 Using the UP/DOWN arrows on the remote control, select Contrast on your screen.

3 Using the RIGHT/LEFT arrows, adjust the contrast level to your preference.


4 Press ENTER, QUIT or MENU one more time to return to TV viewing, or repeat from step two to set the other menu options.

5 Using the UP/DOWN arrows, select Picture Preference on your screen.

6 Using the RIGHT/LEFT arrows, choose either the original settings with Preset, or use your own settings with Custom.



Someone left the picture looking terrible? Just choose the Preset option in Picture Preference to quickly reset the levels.

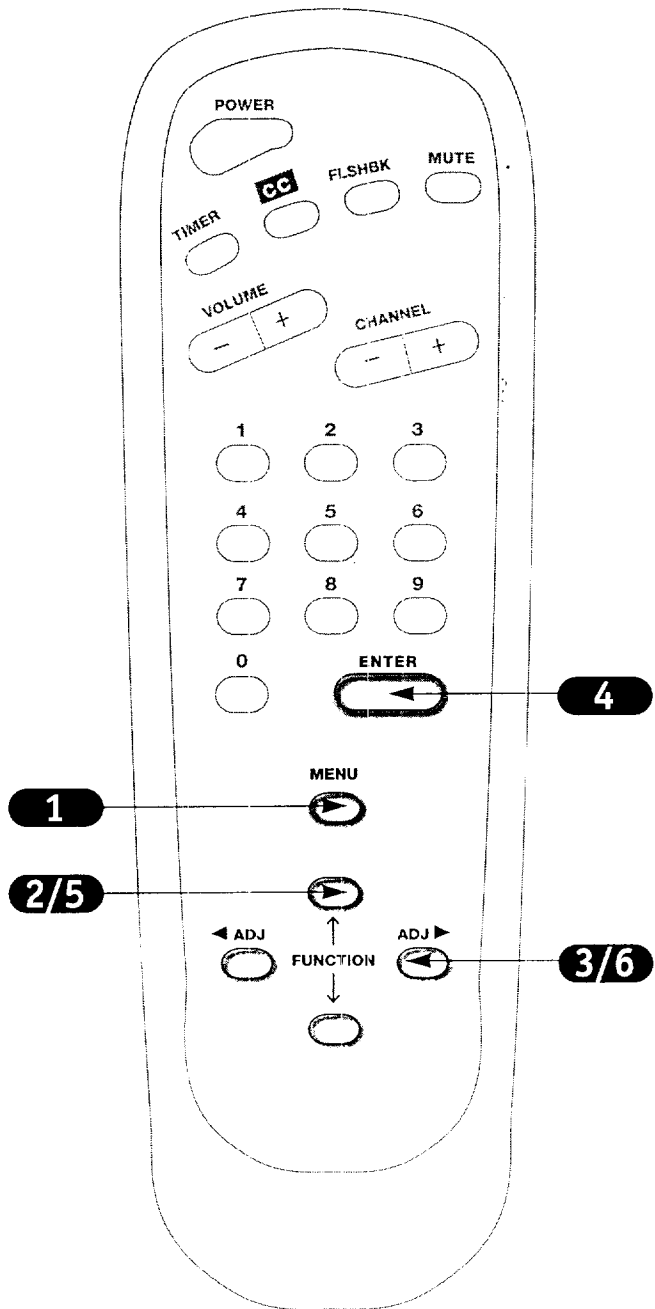

Maintenance

Caring for
your
Entertainment
Machine.

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have with your new Entertainment Machine. Be sure to turn the power off and pull out the plug before you begin any cleaning.

Screen Cleaning

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of luke-warm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your Entertainment Machine.

Cabinet Cleaning

1. Use a soft cloth with a mild soap solution to wipe the cabinet (avoid using any cleaner that says "industrial strength" or "will wash the white off of rice" on the label).
2. Rinse the cloth and wipe the cabinet again.
3. Let the cabinet air-dry before turning the Entertainment Machine on.

Wood Cabinet

Use a quality wood cleaner and polish. This will protect the Entertainment Machine from dirt and dust, as well as keep the cabinet looking new.

Extended Absence

If you leave your Entertainment Machine dormant for a long time (such as a vacation), it's a good idea to unplug the power to protect against possible damage from lightning or power surges. If you use an off-air antenna, you may also want to disconnect it from the back of your TV before leaving.



If you unplug your Zenith Entertainment Machine, you may have to reset the clock using the Clock Set menu described earlier.

Troubleshooting

Some quick and easy tips to fixing problems yourself.

SYMPTOMS	SOLUTIONS
Snowy picture and lousy sound.	<ul style="list-style-type: none"> • Check your antenna connection or location.
Multiple images or 'ghost shadows.'	<ul style="list-style-type: none"> • Check your antenna direction and/or location. • Make sure the wire from your antenna to your Entertainment Machine is properly connected.
Interference: Sharp lines across the screen and lousy sound.	<p><i>The following may cause image problems or distortion: Electrical appliances, powerful lights, cars, trucks; Computers or portable phones; Medical equipment</i></p> <ul style="list-style-type: none"> • If possible increase the distance between your Entertainment Machine and the offending appliance. Or shut one of them off.
Normal picture but no sound.	<ul style="list-style-type: none"> • Check volume control. • Make sure the TV is not Muted. • Try another channel. The problem may be the broadcast, not your Entertainment Machine. • Are the Audio A/V cables properly installed? • Are the wires for external speakers (if you have external speakers) properly installed?
No picture and lousy sound.	<ul style="list-style-type: none"> • Are you in TV or Cable tuning mode (See Auto Program on page 9), and should be in the other? • Make sure output channels on all A/V equipment are on the same channel (3 or 4). • Check that all connections are tight.
No picture and no sound — The thing is just DEAD!	<ul style="list-style-type: none"> • Is the AC power plugged in? • Check that your AC power outlet works. (Test it by plugging in something else or try another plug.) • Make sure your brightness and audio controls are set properly. • Try another channel. The problem may be with the broadcast, not your Entertainment Machine.
No color, but the sound is O.K.	<ul style="list-style-type: none"> • Check the color control in the Video menu. • Try another channel. The problem may be with the broadcast.
Picture has a big black box on it, but the sound is O.K.	<ul style="list-style-type: none"> • The CC (closed caption) option may be in Text mode. Select OFF in the Captions/Text menu (see page 16).
Picture has two horizontal black bars, one on top and one on bottom.	<ul style="list-style-type: none"> • Your program is in letterbox. This means that the shape of your TV is square, but the program is a rectangle. Think of the bars as empty space the program doesn't fill; not picture that's blocked out. Because this format is a direct representation of film as you see it in the movies, you are actually seeing MORE of the program when you see those bars. Trust us.
Remote control doesn't work.	<ul style="list-style-type: none"> • Make sure the batteries are fresh and installed properly. • Check to see that the MBR (Multi Brand Remote available on some models) is in the right mode for your equipment.
Menu options won't change.	<ul style="list-style-type: none"> • Try unplugging the TV, waiting about five minutes, and then plugging it back in and trying again.



If all else fails, call 1.847.391.8752, extension 5, between 8:30 am and 4:30 pm Central Standard Time.

Glossary

A complete list of definitions for words found in this guide.

75 OHM RF CABLE	The wire that comes from an off-air antenna or cable service provider. Each end looks like a hex shaped nut with a wire sticking through the middle. It screws onto the threaded jack on the back of your TV.
300 TO 75 OHM ADAPTER	A small device that connects a two-wire 300 ohm antenna to a 75 ohm RF jack. They are usually about an inch long with two screws on one end and a round opening with a wire sticking out on the other end.
A/V CABLES	Audio/Video cables. Three cables bunched together—Right audio (red), Left audio (white), and Video (yellow). A/V cables are used for stereo playback of videocassettes and for higher quality picture and sound from other A/V devices.
ADD	This function lets you add new channels to list that you'll scroll through when using your remote.
ANTENNA	The physical receiver of television signals sent over the air. A large metal piece of equipment does not always have to be visible for your home to be using an antenna.
AUTO PROGRAM	Auto Program has your Entertainment Machine automatically find all the channels available in your area.
DELETE	This function lets you remove channels that you don't watch from the list you'll scroll through using your remote.
INPUT	Refers to the jack that receives a signal from a TV, VCR or other A/V device.
JACK	A connection on the back of a TV, VCR, or any other A/V device.
MONO SOUND	Mono (monaural) sound is one channel of sound. On more than one speaker, all the speakers play the same audio.
OUTPUT	Refers to the jack that sends a signal out of a VCR, DVD, or other A/V device.
SECOND AUDIO PROGRAMMING/SAP	Second Audio Programming (SAP) is another, separate, audio channel available with some programming. Choosing SAP often refers to listening to audio in another language, such as Spanish or French.
SIGNAL	Picture and sound traveling through cable, or on the air, to your television screen.
STEREO SOUND	Stereo (Stereophonic) sound refers to audio that's divided into right and left sides.
TUNER	Device that picks up the signal and turns them into picture and sound.

Index

Find what you
want quickly.

FEATURE	PAGE
Antenna	4, 6
Audio Mode	19
Auto Program	9
Basic Television Operation	12, 13
Button Functions	10
Cable	5, 7
Captions and Text Menu	18
Ch. Add/Del	15
Clock Set	16
Custom Installation	8
Front Panel Diagram	11
Glossary	24, 25
Hook-Up Directory	3
Language Menu	20
Maintenance	22
Safety Information	2
Setup Menu	14
Timer	17
Troubleshooting	23
VCR	6, 7
Video Menu	21
Warranty	28

Recommended Audio/Video Accessories



STEREO SURROUND SOUND SPEAKERS



For use with any Surround Sound compatible TV. These speakers create a sound so real, it's as if you were part of the action. The convenient, space-saving shelf design make these speakers an ideal addition to any Home Theater System. The contemporary black finish complement any room.

CV5000 ONLY \$224.95 PLUS \$17.95 SHIPPING & HANDLING

REPLACEMENT REMOTE

Broken or lost remote? Perhaps you would just like the convenience of having a second remote on hand. Order your replacement remote control direct from Zenith! To ensure that you receive the correct remote, have your television's model number ready when you call.

ONLY \$39.95 PLUS \$4.95 SHIPPING & HANDLING

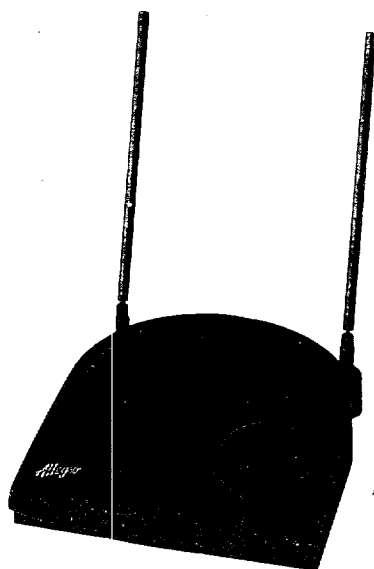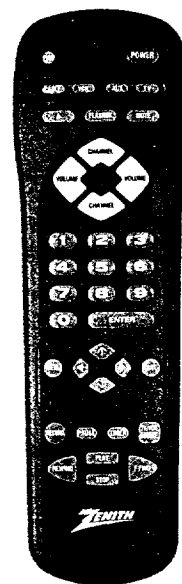

UHF/VHF/FM INDOOR ANTENNA

This UHF/VHF/FM indoor antenna provides sharp, clear sound and picture in a high-tech design. Perfect for use as a cable outage backup or to receive local programming not available with a Satellite System. Works with most TVs or audio devices and includes four feet of 75 ohm cable for easy hook-up.

AST475 ONLY \$24.95 PLUS \$4.95 SHIPPING & HANDLING

CORDLESS STEREO HEADPHONES

These cordless, lightweight headphones allow you to enjoy a private listening experience without disturbing others. The infrared technology delivers a virtually interference-free signal. Works with most TVs, VCRs or audio devices with a fixed audio output jack. Comes with optional microphone hookup. Soft cushioned ear pads for comfortable use. Perfect for the hard-of-hearing.

ZEN 911 ONLY \$59.95 PLUS \$5.95 SHIPPING & HANDLING



**ORDER TODAY!
CALL TOLL-FREE
1.800.255.6790**

zenith



Use Your Visa or MasterCard to Order

PLEASE ALLOW 3-4 WEEKS FOR DELIVERY

Your Zenith Warranty

Direct-View Color TV Welcome into the Zenith family: we believe that you will be pleased with your new Zenith Entertainment Machine. Please read this warranty carefully, it is a "LIMITED WARRANTY" as defined under Federal Law. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state within the U.S.A.

ZENITH RESPONSIBILITY

- Service Labor** During a period of 90 days from effective warranty date, Zenith will pay for service labor by a Zenith authorized service center when needed as a result of manufacturing defects.
- Parts** New or remanufactured replacements for factory-defective parts will be serviced will be supplied by a Zenith authorized service center for one year from effective warranty date (color picture tube — two years). Such replacement parts are warranted for the remaining portion of the original warranty period.
- Home Service** Warranty service for 21" diagonal (U.S.A.) or larger screen size models is provided in the home in most cases. (Some repairs may require the unit to be taken by the servicer to the repair facility and returned, at no additional charge.)
- Not Covered** This warranty covers manufacturing defects and does not cover installation, adjustment of customer controls in the home, installation or repair of home antenna systems, cable converters or cable company-supplied equipment; it also does not cover damage due to misuse, abuse, negligence, acts of God or other causes beyond the control of Zenith. Any alteration of the product after manufacture voids this warranty in its entirety.

OWNER'S RESPONSIBILITY

- Effective Warranty Date** Warranty begins on the date of original consumer installation. For your convenience, keep the dealer's dated bill of sale or delivery ticket as evidence of the purchase date.
- Operating Guide** Read your Operating Guide carefully so that you will understand the operation of your set and how to adjust the customer controls.
- Carry-In Service** Models under 21" diagonal (U.S.A.) screen size must be taken to a Zenith authorized service center for warranty service and must be picked up by the owner.
- Antenna** Reception problems caused by inadequate home antenna or faulty antenna connections are the owner's responsibility.
- Important** Product Registration—Please fill out and mail your Product Registration Card. It is imperative that Zenith know how to reach you promptly if we should discover a safety problem that could affect you.
- Warranty Service** For warranty service information, contact any Zenith authorized service center. Parts and service labor that are Zenith's responsibility (see above) will be provided without charge. Other service is at the owner's expense. If you have any problem in obtaining satisfactory warranty service, call or write the Zenith Response Center. You must provide the model number, serial number and date of purchase or date of original installation. Before you ask for warranty service, read "Maintenance And Troubleshooting" in your operating guide. You might avoid a service call.

ZENITH CONSUMER SERVICES

Factory Owned Service Center
Home & Carry-in Service
Television/VCR
Parts and Accessories
PTV/Computer

Service Hours:
M-F 8-6, Sat 9-2
Will accept UPS Shipments

801 E. Roosevelt Rd
Lombard, IL 60148
(630)705-2830

201 James Record Rd.
Building 4
Huntsville, AL 35824
(205) 461-8583

ZENITH ELECTRONICS CORPORATION

Zenith Response Center
1000 Milwaukee Avenue
Glenview, IL 60025-2493
Telephone (847)391-8752
Mon-Fri, 7:00 a.m.-8:00 p.m. CST
www.zenith.com

Additional Zenith Picture Tube Protection Plan Available

Zenith offers you the opportunity to obtain additional long-term protection against failure of the picture tube in your new Entertainment Machine. Our Picture Tube Protection Plan enables you to avoid any unexpected picture tube repair expenses and keep your Entertainment Machine in top condition. It guarantees you a genuine Zenith replacement picture tube and service from a Zenith authorized service center.



Be sure to send in the Product Registration Card. We will send you an application for the Protection Plan near the expiration of the two year manufacturer's warranty on the picture tube. For additional information call (847) 391-8757.

