 


TOSHIBA

Color Television

OWNER'S MANUAL

CF27G50/CF32G50/CF36G55

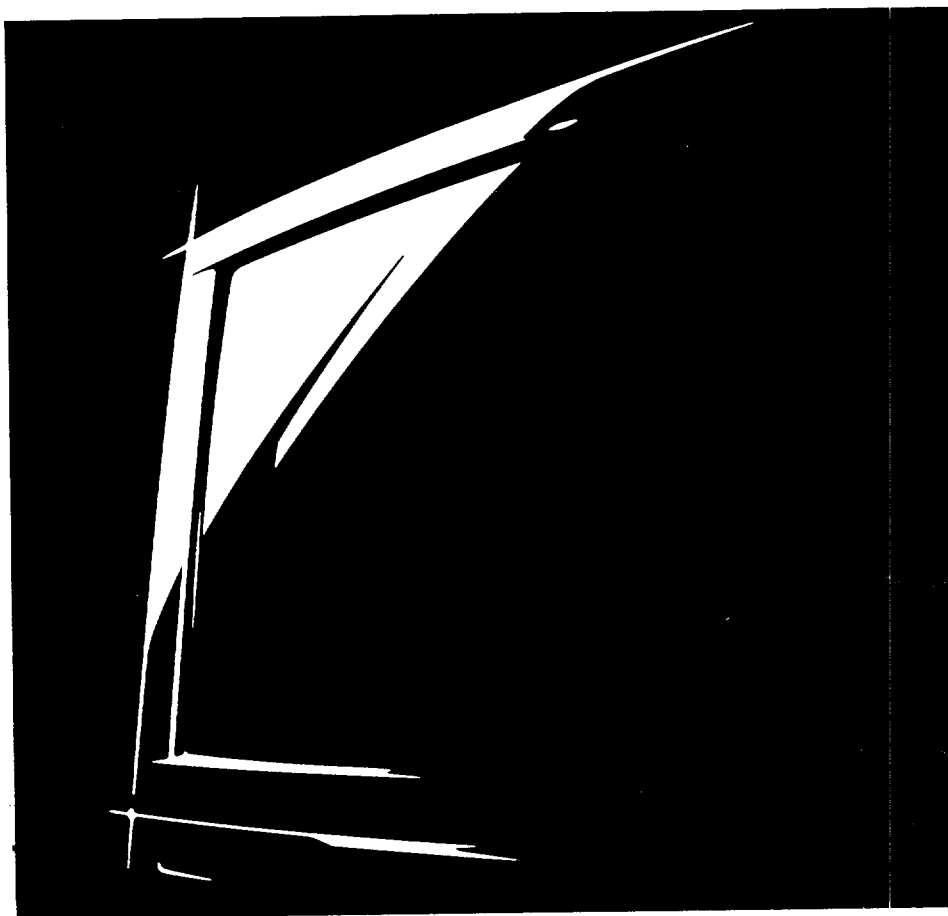

SET UP

PREPARATION

BASIC OPERATION

ADVANCED
OPERATION

EQUIPMENT
CONNECTIONS

REFERENCE
SECTION

Dear Customer

Congratulations! You have purchased one of the finest Color TV's on the market!

This manual will help you use the many exciting and useful features to make your TV viewing more enjoyable than ever before.

Before operating your TV set, please read all these safety and operating instructions completely and then retain for future reference.

Customer's Record

You will find the model number and serial number on the back of your TV set.

Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model Number _____

Serial Number _____

Safety Precautions

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN

AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock. DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.



The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

This TV set may be used only with TOSHIBA stand shown on page 33. Use with other stands may result in instability causing possible injury.

CAUTIONS:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS ON THE POLARIZED PLUG.

ATTENTION:

POUR PRÉVENIR LES CHOCs ÉLECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉS À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

Avoid displaying stationary images on your TV screen for extended periods of time. Stationary patterns generated by PIP display, computer displays, video games, stock market reports, etc. can become permanently engrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. Should you wish to use your TOSHIBA Television to display still images, it is always advisable to reduce brightness and contrast settings. Never leave a PIP display, a computer or video game display unattended.

NOTE TO CATV SYSTEM INSTALLER IN THE USA:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of Contents


Set Up		Advanced Operation	
Introduction	4	Watching Picture-in-Picture	25
Installing Your TV	4	Using Closed-Captioned Function	27
Antenna/Cable TV Connection	5	Locking Channels	29
Preparation		Programming Your Favorite Channels	31
Location of Controls (TV Set)	6	Changing On-Screen Display Language	32
Location of Controls (Remote Control)	9	Equipment Connections	
Before Using the Remote Control	10	Connecting a VCR	33
Using the Remote with VCR or Cable TV		Connecting an Audio Amplifier	34
Converter	11	Reference Section	
Programming the Remote Control	12	Cleaning and Care	35
Menu Function (General Instructions)	15	Specifications	35
Programming Channel Memory	16	Before Calling Service Personnel	36
Basic Operation		Limited United States Warranty	37
Watching TV Programs	18		
Convenient Remote Functions	19		
Adjusting the Picture	21		
Adjusting the Sound	23		

Introduction


This manual applies to models CF27G50, CF32G50 and CF36G55, and there are slight differences between them. Check the model of your TV before using this manual.

Design

 
CF27G50

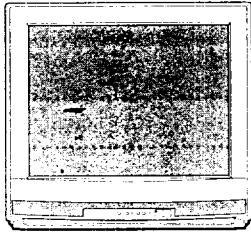

CF32G50

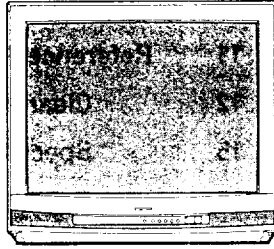 

CF36G55

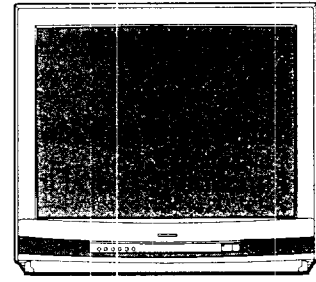 

Installing your TV

Where to install

Place the TV on the floor or on a sturdy platform. The mounting surface should be flat and steady.

Lighting

Do not place the TV in a room where direct lighting strikes the screen. Use soft and indirect lighting.

Air circulation

Place the TV far enough from the walls to allow proper ventilation. This will prevent the TV from overheating and avoid possible damage to the TV. Avoid dusty places too.

Power supply

Plug into an electrical outlet with standard household power (120 volt AC, 60Hz). Do not change the plug's safety prong. See the right column.

WARNING :

TO AVOID PERSONAL INJURY

 
- Do not stand or climb on the TV.
- Do not put a VCR or any heavy object on top of the TV.

CAUTION :

As a safety feature, the plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard.

You will need to have a new outlet installed by an electrician.


DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.

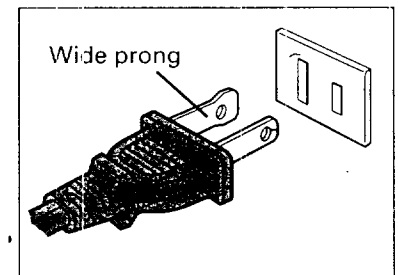


Antenna/Cable TV Connection

You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels. Channels 2 - 13 are VHF channels, and channels 14 - 69 are UHF channels. We recommend using an outdoor antenna for better picture quality. You can receive Cable TV by connecting a cable supplied by your local cable company.

 Connecting an antenna or Cable without a decoder box

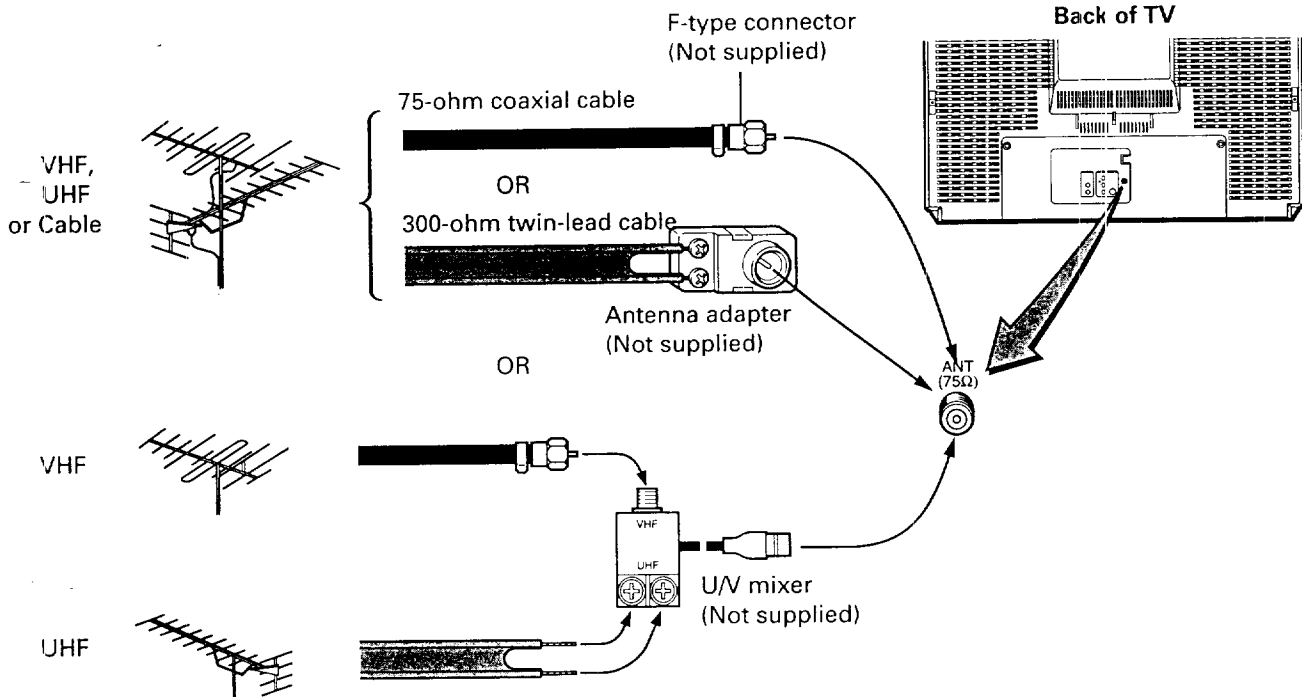

Connecting Cable with a decoder box

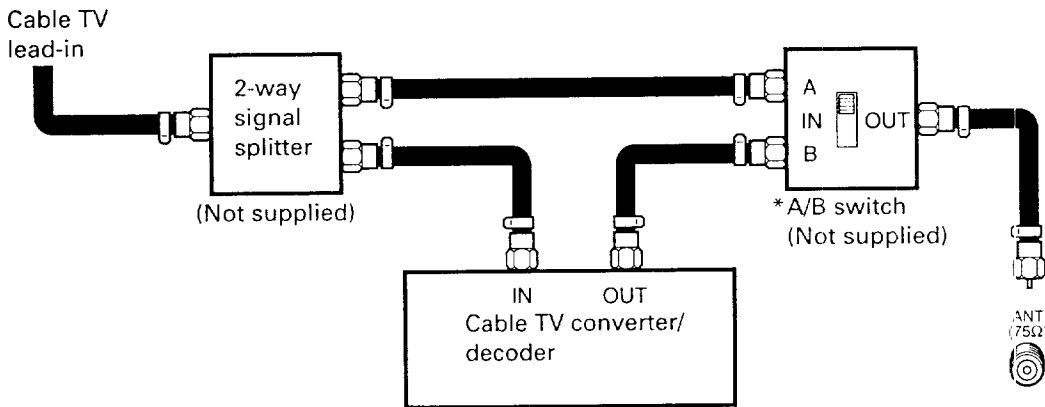 

Notes:

- *"A" position on the A/B switch allows you to select unscrambled channels using the TV's channel keys.
- "B" position allows you to select scrambled channels via the converter/decoder box using the converter's channel keys. Place your TV on channel 3 or 4 to match the converter's output channel.
- If you use a VCR, connect its antenna in/out between the decoder box and A/B switch.

 
 
SET UP

Installing Your TV/ Antenna/Cable TV Connection


Location of Controls (TV Set)

CF27G50


For specific use of each control, consult the corresponding page numbers in brackets.

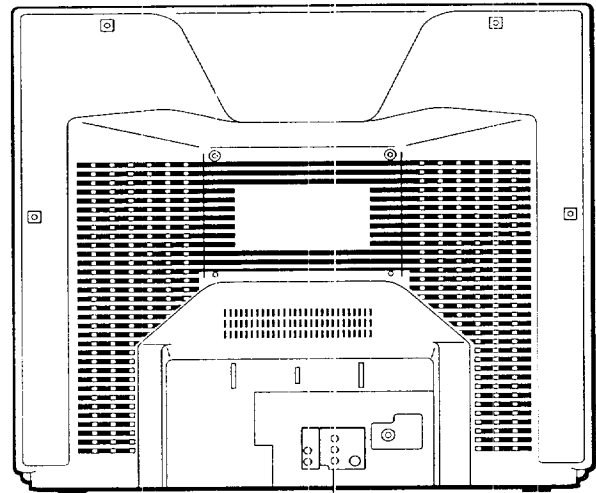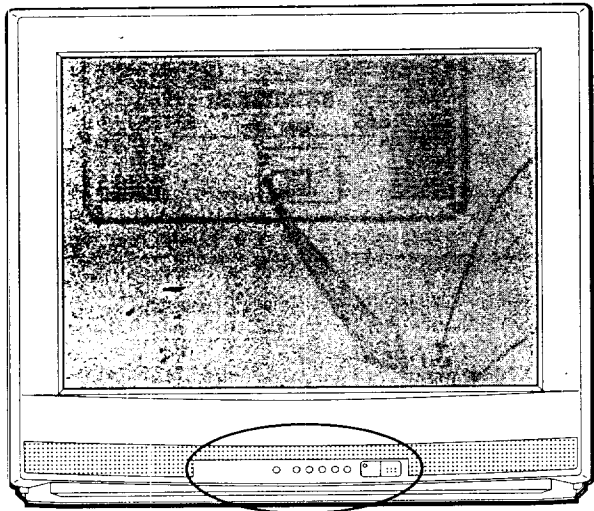

VIDEO/AUDIO terminals [32]

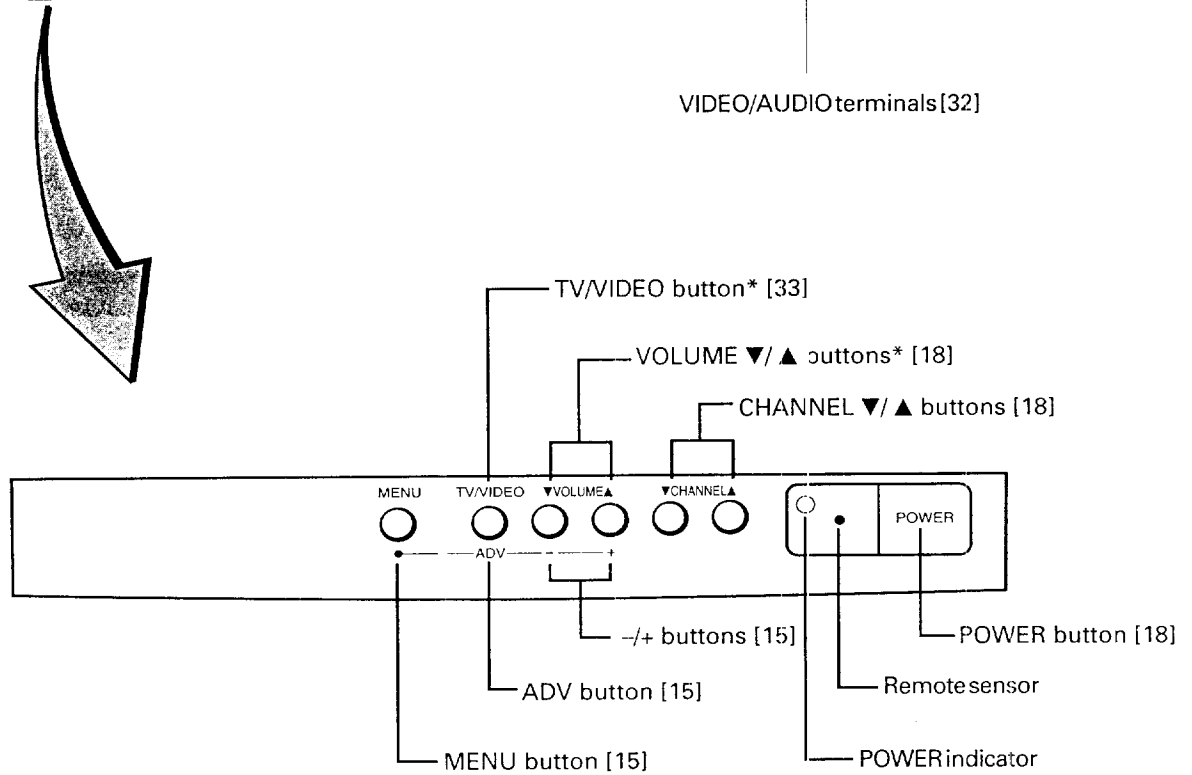 


*Dual function buttons

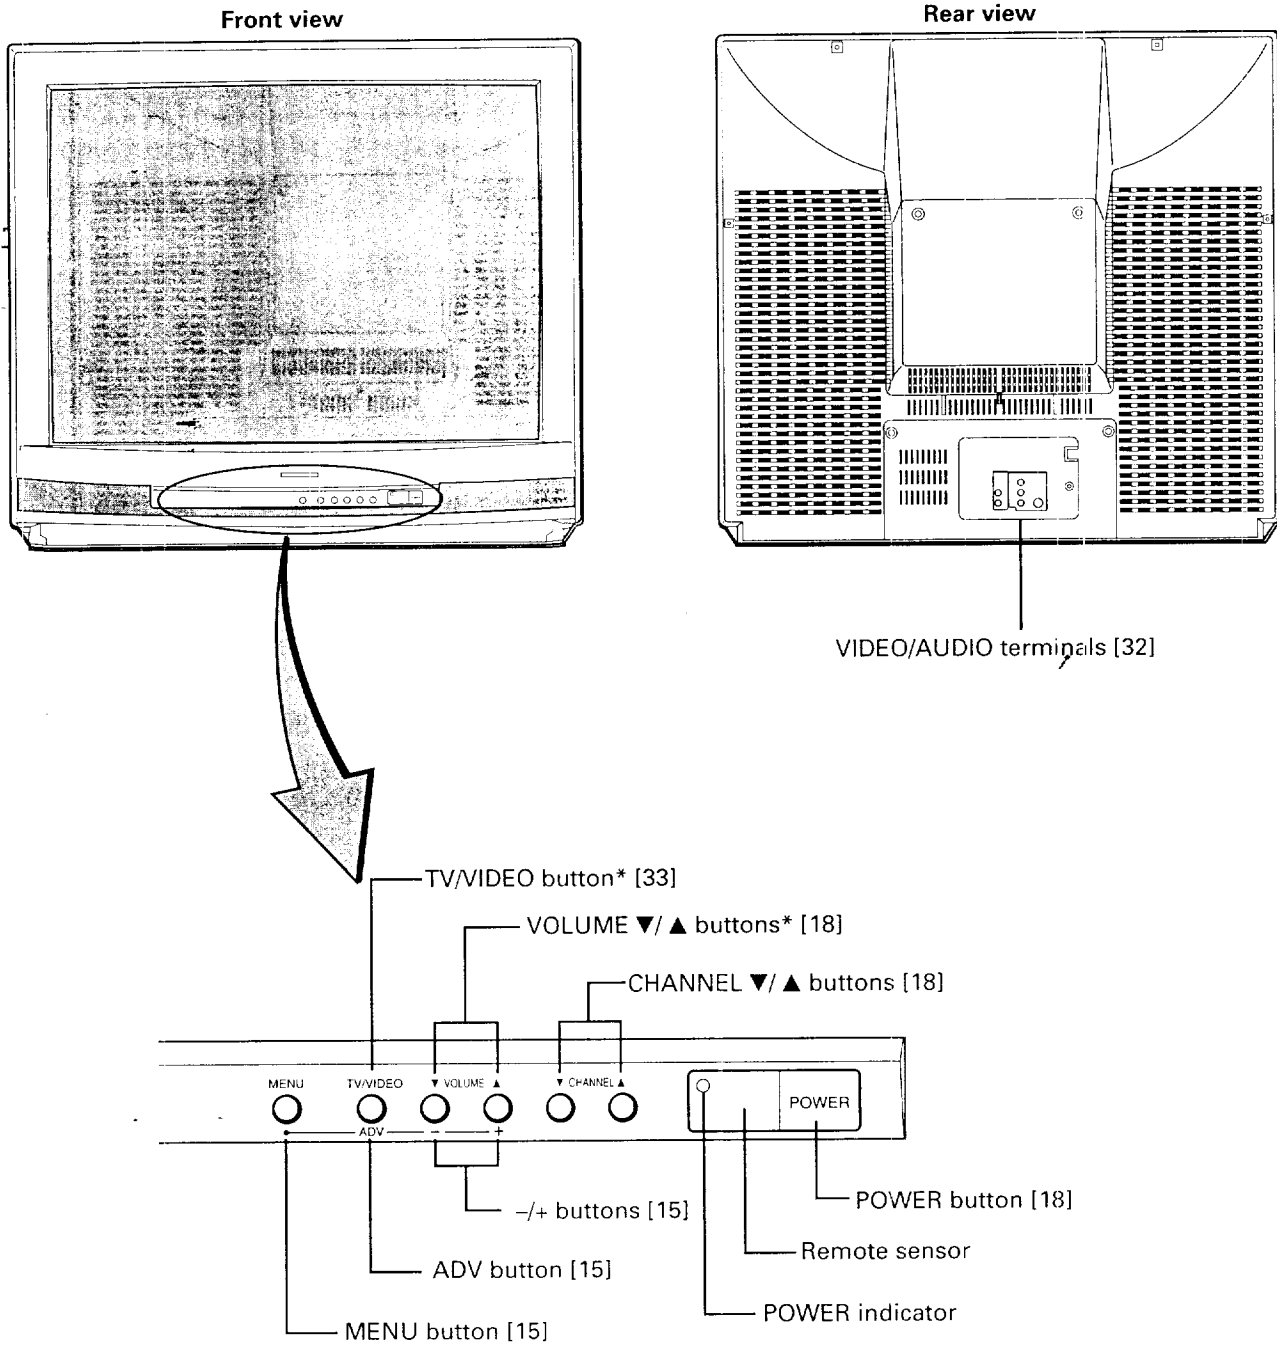 

Location of Controls (TV Set) PREPARATION

 *Dual function buttons

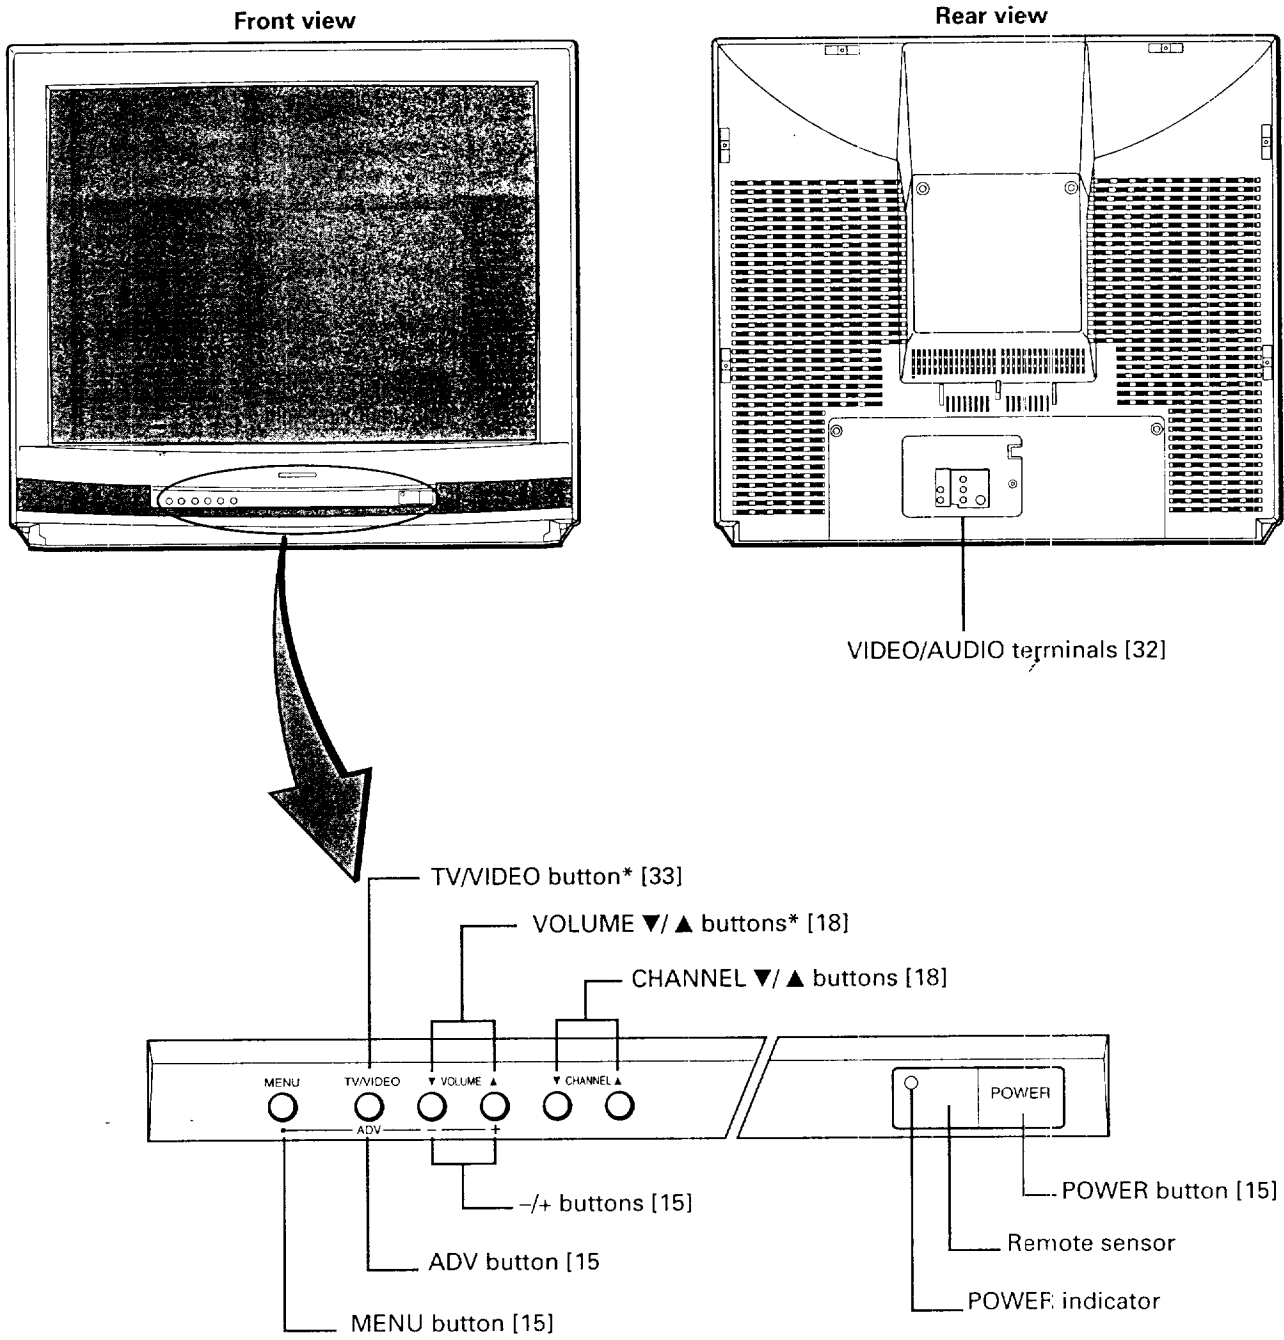


*Dual function buttons

Location of Controls (Remote Control)

Only the buttons that are used to operate the TV set are described here. For details on the use of each control, refer to pages in brackets.

 Aim at the remote sensor on the TV

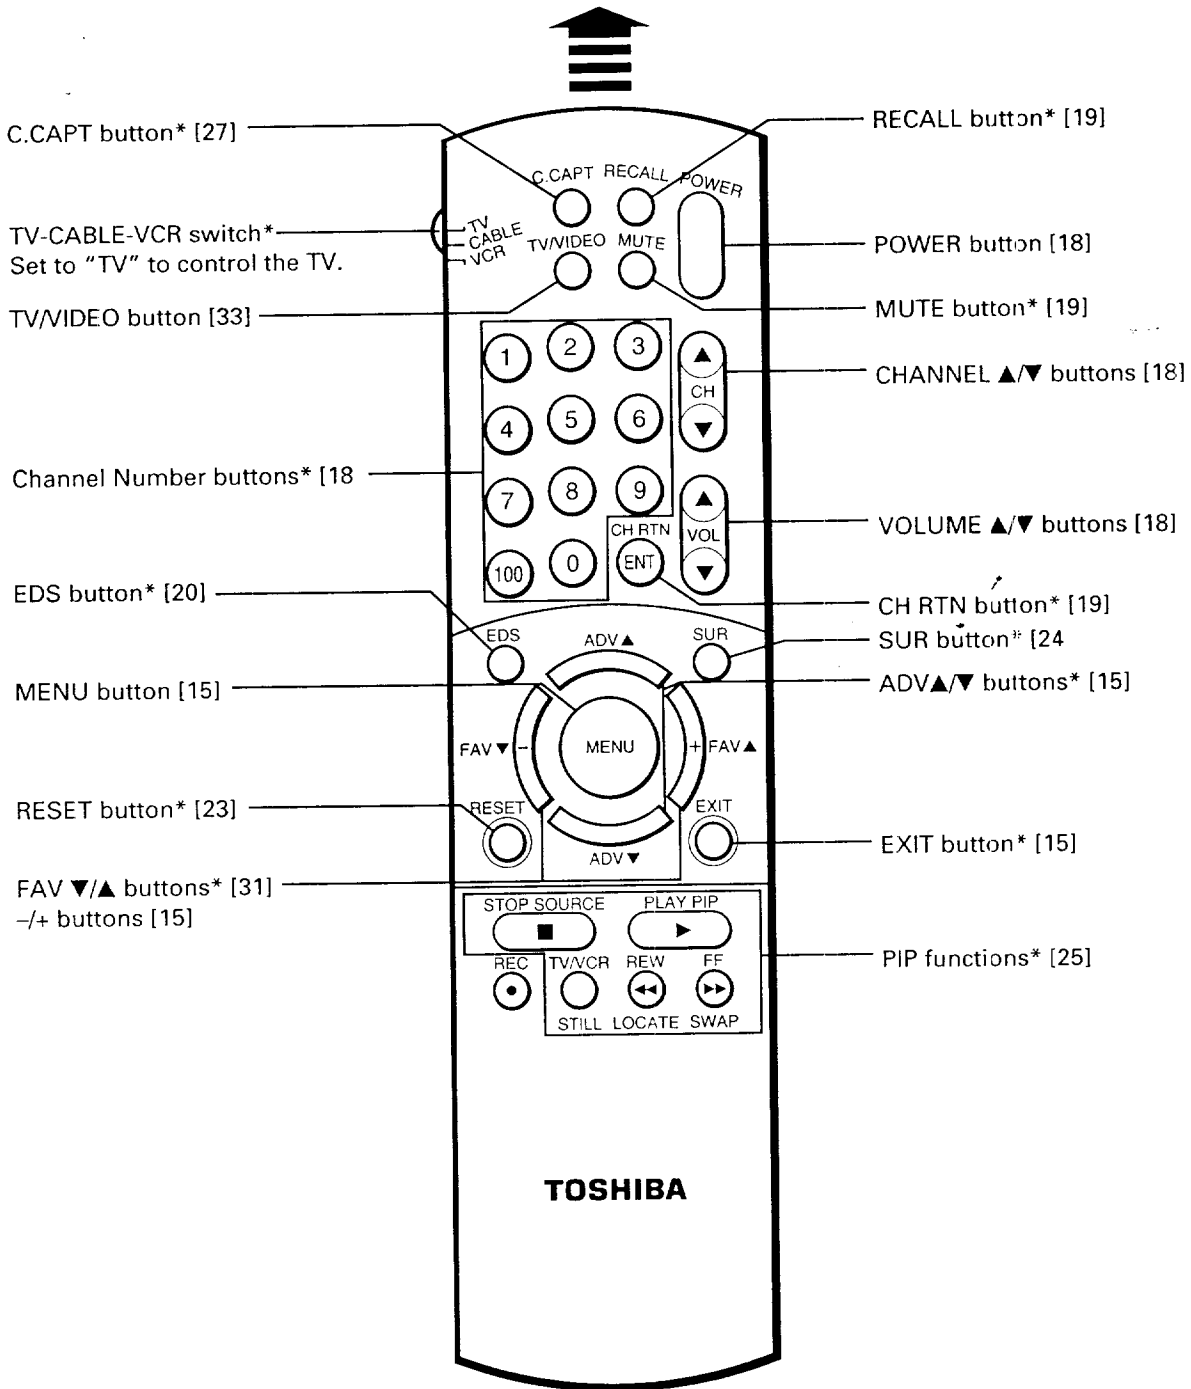

*These functions do not have direct button locations on the TV set. They can be controlled only with the Remote Control.

PREPARATION

Location of Controls (TV Set)
Location of Controls (Remote Control)

Before Using the Remote Control

Introductions

With this Remote Control, you can operate your TV and most models of remote-controlled VCR's and Cable TV converters even if they are different brands.

However, this Remote Control must be programmed to control other brands of VCR's and/or Converters. If you will be using your TV set with a TOSHIBA VCR, your remote has already been preprogrammed for you.

 
- Before attempting to operate your Remote Control, install the batteries according to the section "Installing and replacing batteries" shown below.
- For more detailed instructions, see the section "Programming the Remote Control" on page 11.

Notes:


- After installing new batteries, the Remote Control will set itself to the codes for TOSHIBA's TV and VCR. If you are using the Remote Control to operate equipment that uses different codes, it will have to be reprogrammed for those codes.
- This Remote Control may have functions not available on the original remote control.
- These functions may or may not operate your VCR or Cable TV Converter. Refer to the owner's manuals supplied with the equipment to see which functions are available.
- The remote control supplied with your VCR or Cable TV Converter may have keys not duplicated on this Remote Control. If these functions are desired, the original remote will have to be used.

Installing and replacing batteries

- 1 Place the Remote Control with the face down. Press down on the ridged area of the battery cover and slide it off.

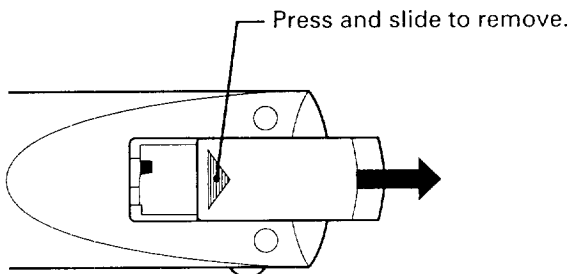

 - 2 Place two "AAA" size batteries, matching the + and - signs on each battery to the + and - signs of the battery compartment.

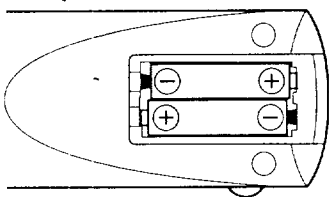

- 3 Replace the battery cover until the lock snaps.

CAUTION:

- Do not throw your batteries into a fire. Dispose of your batteries in a designated disposal area.
- Do not combine used old batteries with new ones.
- Do not mix battery types.

 
Tips for Best Operation

- For optimum performance, aim the Remote Control directly at the TV from a distance of no more than 16 ft (5m) and be sure there is no obstruction between the Remote Control and the TV.
- If your Remote Control does not always adjust the TV as you wish, you probably need to replace the batteries.
- Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the Remote Control for a long period, remove the batteries.

Using the Remote with VCR or Cable TV Converter

- To control a TOSHIBA VCR, first set the TV-CABLE-VCR switch to "VCR" position. The buttons shown below will then control the VCR. The rest of the buttons operate the TV as usual. If you have another brand of VCR, you can probably program your Remote to control it. Details are on page 11.
- To control a cable TV converter, this Remote Control must be programmed to recognize the brand of your converter. See page 11. Set the TV-CABLE-VCR switch to "CABLE" position whenever you control the cable TV converter.

Aim at the VCR or cable TV converter

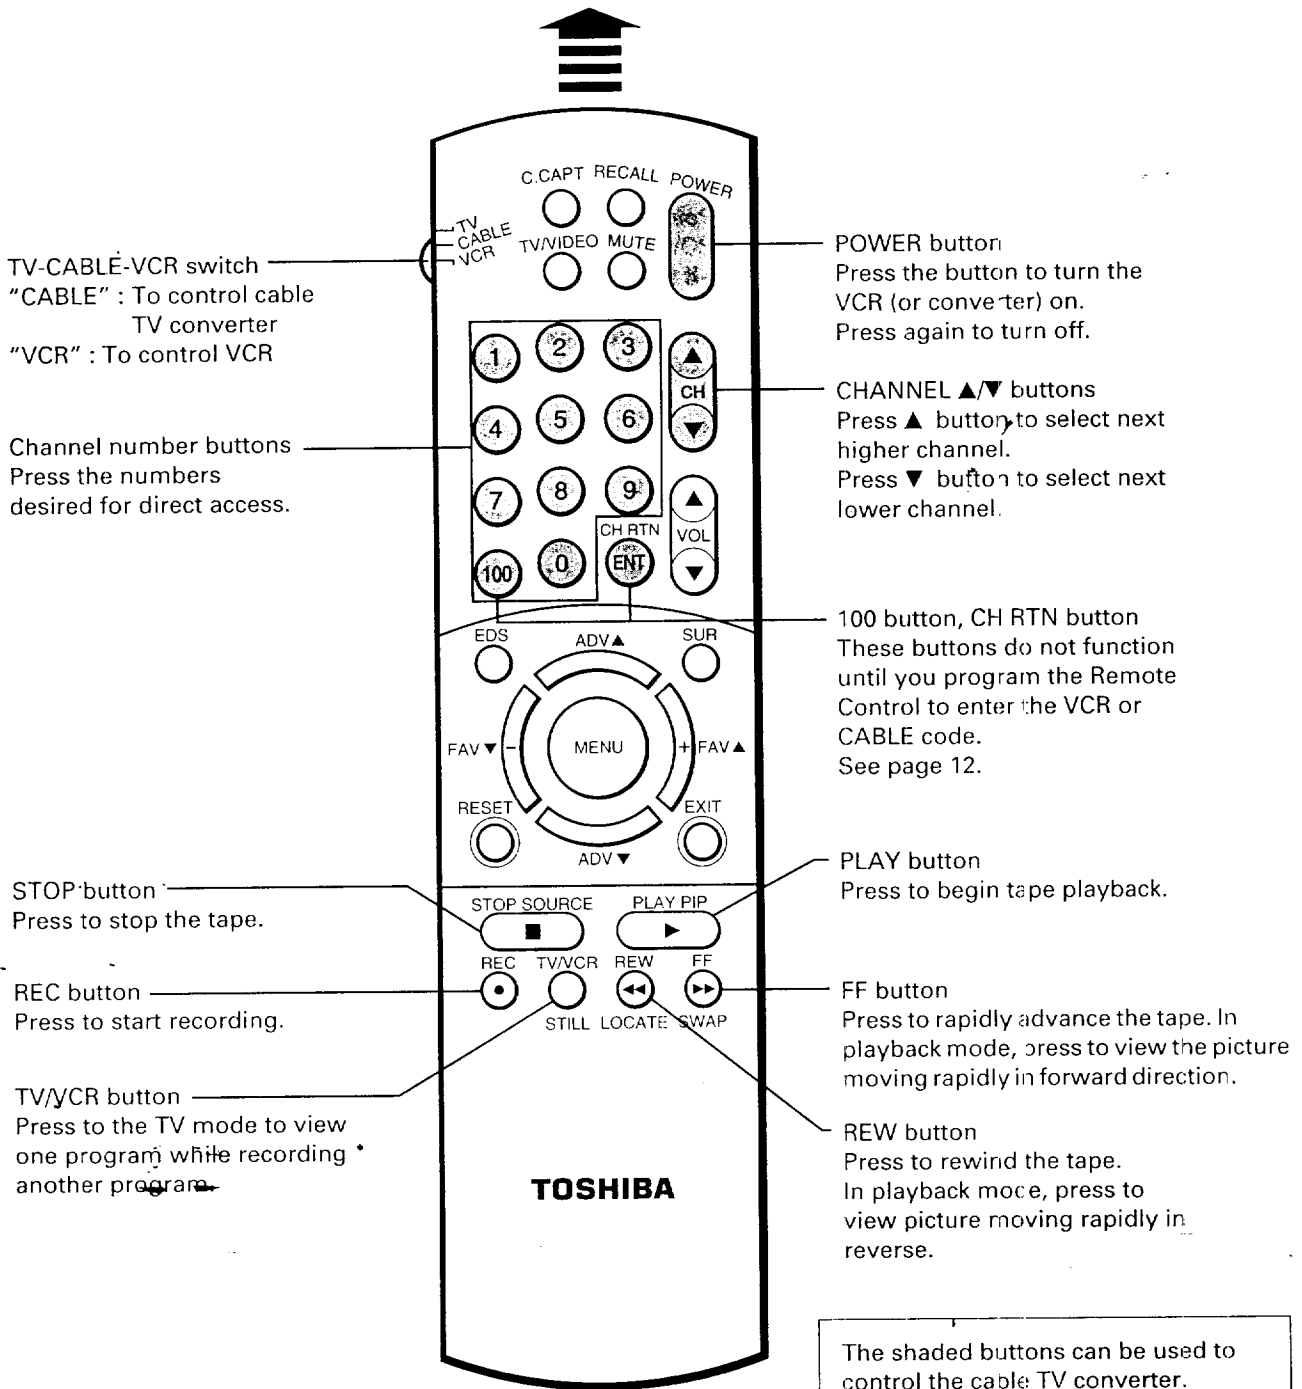


PREPARATION
Before Using the Remote Control
Using the Remote with VCR or Cable TV Converter

Programming the Remote Control

- This Remote Control is preprogrammed to operate TOSHIBA VCR's.
- To use VCR's other than Toshiba models (or Cable converter), perform the following procedures before operating.

 Controlling other brands of VCR's and cable TV converters

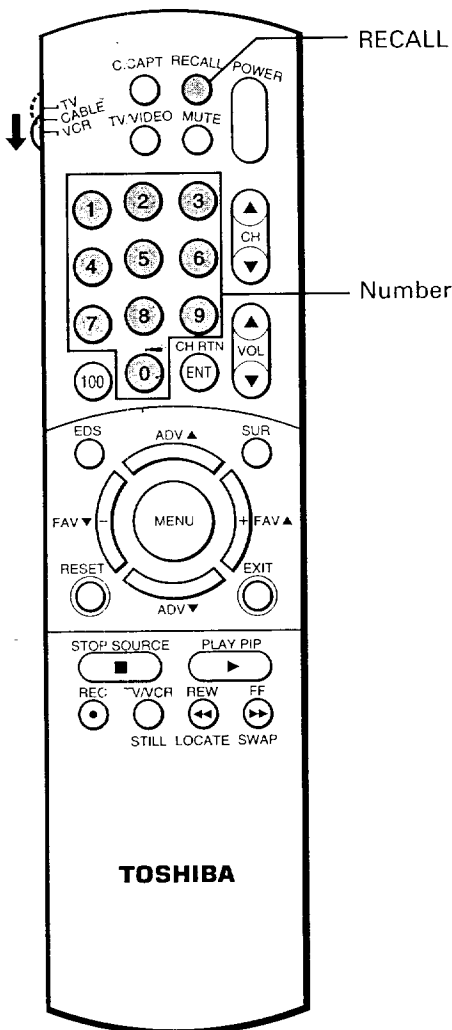

- 1 Refer to the "VCR code table" (or "Cable TV converter code table") on pages 13 and 14 to find the code number that corresponds to the brand name of your VCR (or your converter).

If more than one number is listed, try each one separately until you find the one that works.

- 2 Set the TV-CABLE-VCR switch to "VCR" (or "CABLE").
- 3 Hold down **RECALL** while pressing the **Number** buttons for the three digit code number for your brand of VCR (or converter).
- 4 Point the Remote Control at the VCR (or at the converter) and press **POWER** to test the code number.
 - If the right number was entered, the VCR (or the converter) should turn on.
 - If the VCR (or the converter) does not respond to the Remote Control, repeat steps 1 to 4 with another code number.

Notes:

- You have to reprogram the Remote Control when you change its batteries.
- Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2". If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

For future reference, write the code you used.

VCR CODE: _____

CABLE CODE: _____

Programming the Remote Control (Continued)

- In some rare cases, you may not be able to operate your non-Toshiba equipment with the supplied Remote Control. This is because your equipment may use a code that is not provided with this Remote Control. In this case, please use the equipment's own remote control.

VCR code table

BRAND NAME	CODE NUMBER
Adventura	019
Aiko	297
Aiwa	019
Akai	060,068,080,125, 261
Akiba	091
Alba	039,228,297,314
American High	054
Amstrad	019
Anam	181
Anitech	091
ASA	056,100
Asha	259
Asuka	056
Audiovox	056
Baird	019,123
Basic Line	039,091,297
Beaurnark	259
Bell & Howell	123
Blaupunkt	053,181
Brandt	206
Broksonic	140,203,230,380
Bush	091,228,297
Calix	056
Canon	054
Capehart	039
Carver	100
CCE	091,297
CGE	019
Cimline	091
Citizen	056,297
Clatronic	039
Colt	091
Condor	039
Craig	056,066,091,259
Crown	091,297
Curtis Mathes	054,079
Cybernex	259
Daewoo	039,064,065,297
Dansal	091
Daytron	039
De Graff	061
Decca	019,100
Dual	060
Dumont	019,100,123,124
Dynatech	019
Elcatech	056
Electrohome	056
Electronic	019
Electroponic	056
Emerex	051
Emerson	019,021,056,062, 080,087,140,203, 227,228,230,231, 313,314,380
ESC	297
Ferguson	060
Fidelity	019
Finlandia	100,123,129
Finlux	019,061,100,123, 124
Firstline	056,062,064,091, 228
Fisher	065,066,073,085, 123
Frontech	039
Fuji	052,054
Funai	019
Garrard	019
GE	054,079,084,221
GEC	100
General	071
Go Video	251,298
Goldstar	037,056,057
Goodmans	019,039,056,081, 091,297
Gradiente	019
Graetz	060,123
Granada	065,100,123
Grandin	019,056,091
Grundig	100
Harley Davidson	019
Harman/Kardon	057,094
Harwood	087,091
Hcm	091
Headquarter	065
HI-Q	066
Hinari	091,227
Hitachi	019,060,061,084, 124,254
Hypson	091
Imperial	019
Interfunk	100
ITT	060,065,123,125
ITV	056,297
JCL	054
Jensen	060
JVC	027,060,086
Kaisui	091
Kendo	125,228
Kenwood	057,060,065,086
KLH	091
Kodak	054,056
Korpel	091
Leyco	091
Lloyd	019
Loewe	056
Loewe Opta	100
Logik	091,259
Luxor	062,065,123,125
LXI	056
M-Electronic	019
Magnavox	019,054,058,100, 129,168
Magnin	259
Manesth	064,091
Marantz	054,057,081,100,
Marta	056
Masushita	054
Matsui	227,228,314
MEI	054
Memorex	019,054,056,058, 065,066,067,123, 259
Memphis	091
Metz	181
MGA	062,080
MGN Technology ..	259
Minolta	061,124
Mitsubishi	062,080,086,094, 100,192,233,261,
Motorola	054,067
MTC	019,259
Multitech	019,091
Murphy	019
NEC	057,059,060,069, 086
Neckermann	100
Nesco	091
Nikko	056
Noblex	259
Nokia	060,065,123,125, 259
Nordmende	060
Oceanic	019
Olympus	054
Optimus	056,067
Optonica	067,081
Orion	140,227,228,314
Osaki	019,056,091
Otto Versand	100
Palladium	056,091
Panasonic	054,096,115,181, 244
Penney	054,056,057,059, 061,073,259
Pentax	061,084,124
Perdio	019
Philco	054
Philips	054,081,100,129
Phonola	100
Pilot	056
Pioneer	086,100
Portland	039
Profitronic	259
Proline	019
Protec	091
Pulsar	058
Pye	100

Programming the Remote Control (Continued)

Quarter	065	Teknika	019,054,056,071	Hytex	026
Quartz	065	Teleavia	060	Jasco	172
Quasar	054,096,115	Telefunken	060,206	Jerrold	022,030,031,033, 034,043,045,066, 295
Quelle	100	Tenosal	091	Macom	052
Radio Shack	019,056	Tensai	019	Magnavox	046
Radiola	100	Thomson	060	Memorex	019
Radix	056	Thorn	060,123	Movie Time	175
Randex	056	TMK	227,259	NSC	089,175
RCA	054,061,079,084, 096,115,124,125, 168,221	Toshiba	060,062,064,085, 229,231,385	Oak	026,038,267
RCA Unified	079	Totevision	056,259	Panasonic	040,126
Realistic	019,054,056,065, 066,067,081,085, 123,259	Triumph	227	Paragon	019
Rex	060	Unitech	259	Philips	044,046,047,048, 049,050,079,172
Ricoh	053	Universum	019,056,068,100, 125	Pioneer	042,163
Roadstar	056,091,259,297	Vector	064	Popular	
Runco	058	Vector Research	057,059	Mechanics	419
Saba	060	Victor	027,060,086	Pulsar	019
Saisho	227,228	Video Concepts	059,064,080	PVP Stereo	
Salora	062,065,125	Videosonic	259	Visual Matrix	022
Samsung	064,259	Wards	019,054,061,066, 067,081,091,168, 231,259	RCA	040
Sanky	058,067	XR-1000	019,054,091	Regal	039,278,292
Sansui	060,086	Yamaha	057,060	Regency	021
Sanyo	065,066,123,259	Yamishi	091	Rembrandt	030,089
SBR	100	Yokan	091	Runco	019
Schaub Lorenz	019,060	Yoko	039,259	Samsurg	059,163
Schneider	019,091,100,129	Zenith	052,053,058	Scientific Atlanta	025,027,036,296 346
Scott	062,064,140,203, 229,230,231			Signal	034,059
Sears	054,056,061,065, 066,073,085,123, 124			Signature	030
SEG	259			SL Marx	059
SEI	100			Sprucer	040
Seleco	060			Standard	
Sentra	039			Components	174
Sharp	067,081			Starcom	022,034,066
Shintom	091			Stargate	034,059
Shogun	259			Starquest	034
Siemens	056,123			STS	175
Silva	056			Sylvania	020
Singer	091			Television	059
Sinudyne	100			Texscan	020
Sontec	056			Tocom	031,032,078
Sony	051,052,053,054			Toshiba	019
STS	061			Tusa	034
Sunstar	019			Unika	041,172
Sylvania	019,054,062,100, 129			United Artists	026
Symphonic	019			United Cable	022
Tandy	019,123			Universal	041,058,075,096 172,210
Tashiko	019			Viewstar	046,079,230
Tatung	019,060,100			Zenith	019
Teac	019,060				
Technics	054,181				



Cable TV converter code table

BRAND NAME	CODE NUMBER
ABC	020,022,026,030, 032,033,036,066
Antronix	041
Archer	041,058,172
Belcor	075
Cable Star	075
Cabletenna	041
Cableview	041
Century	172
Citizen	172
Colour Voice	044,050
Comtronics	059,079
Contec	038
Eastern	021
Garrard	172
GC Electronics	035,075
Gemini	034,089
General	
Instrument	030
Hamlin	028,039,053,278, 292
Hitachi	030

Menu Function (General Instructions)


We suggest you familiarize yourself with the procedure before using the Menu function.

  To adjust any TV feature, the use of the Menu function is required. The adjustments that can be made to the TV appear on the screen.

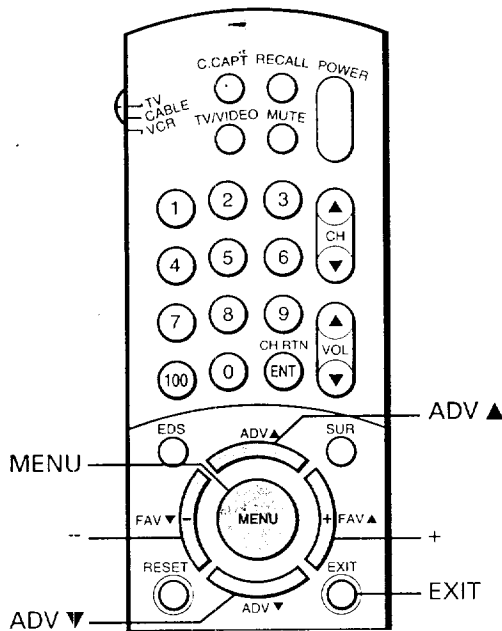

MENU button (on TV and on Remote)

 Each time you press **MENU**, the Picture, Audio, Setup or Option menu on-screen display is selected in order, then press **ADV**.

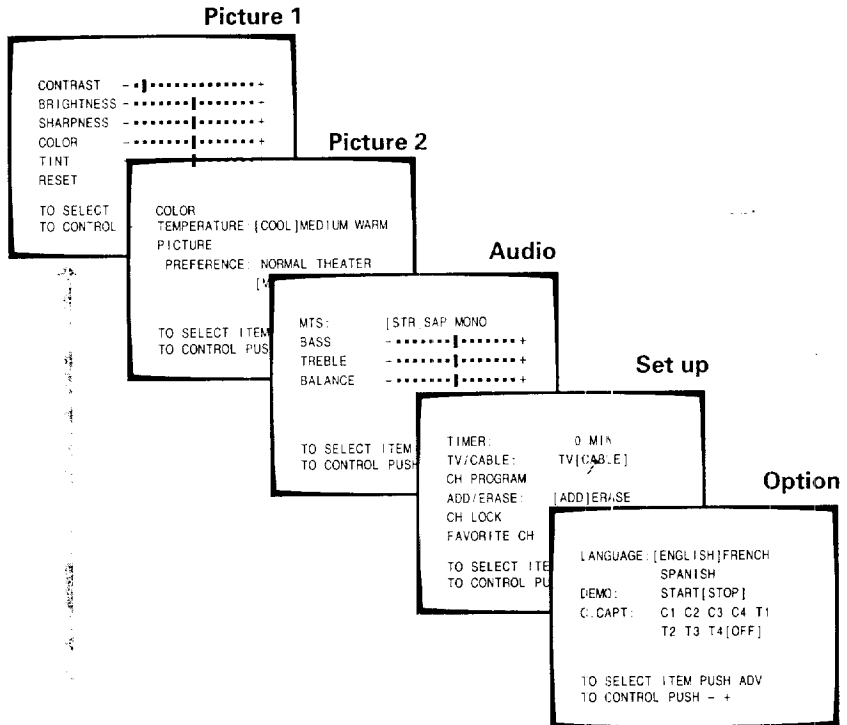

ADV button (on TV and on Remote)

Use **ADV** after you have selected the on-screen menu you want to adjust with the **MENU** button.

Each time you press **ADV**, the function to be adjusted will be selected in order.

ADV ▲ button from bottom to top

ADV, ADV ▼ button from top to bottom

The selected function will be displayed in magenta.

-/+ buttons (on TV and on Remote)

Use -/+ to adjust the function you have selected with the **ADV** button.

EXIT button (on Remote)

The above four menu displays will automatically disappear from the screen if no control has been operated for about 15 seconds.

 
 
If you want to clear the screen of all on-screen displays instantly, press **EXIT**.

Notes:

- The **ADV** button on the TV will function as the **TV/VIDEO** button when no menu display is on the screen.
- The -/+ buttons on the TV will function as the **VOLUME** buttons when no menu display is on the screen.
- The -/+ buttons on the Remote Control will function as the **FAV** buttons when no menu display is on the screen.



Programming Channel Memory

The channel memory is the list of TV channel numbers your TV will stop on when you press the CHANNEL ▲ or ▼ button. **First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area.** If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

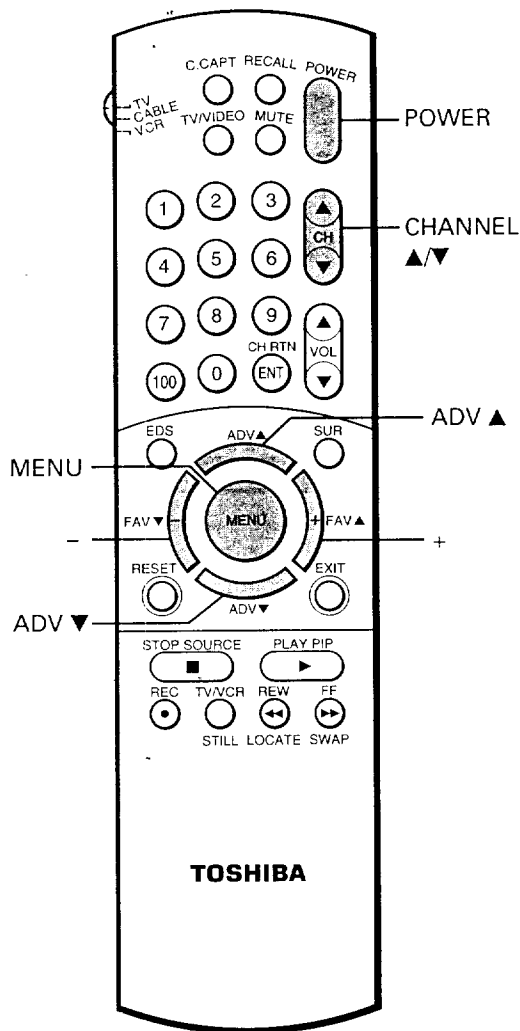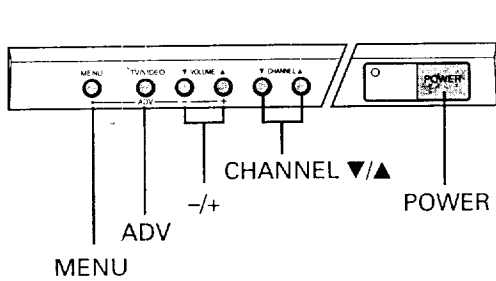




TV/CABLE function

  - 1 Press **POWER** to turn on the TV.
- 2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.
- 3 Press **ADV** repeatedly until "TV/CABLE" is displayed in magenta.
- 4 Press **-** or **+** until the mode that corresponds to your TV signal system is displayed in magenta.
TV: TV broadcasts signals.
 (VHF channels 2 through 13 and UHF channels 14 through 69)
CABLE: Cable TV signals.
 (Cable channels 1 through 125)

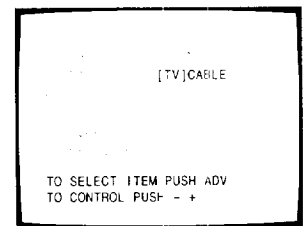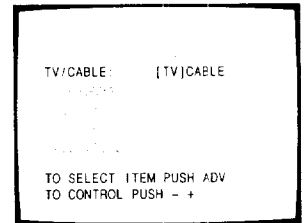


CH PROGRAM function

   - 1 Press **MENU** repeatedly until the Setup menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "CH PROGRAM" is displayed in magenta.
- 3 Press **-** or **+** to start channel programming. The TV will automatically cycle through all the TV or CABLE channels depending on the mode selected, and store active channels in the channel memory.
- 4 When channel programming is complete, you will see the message at the right.
- 5 Press **CHANNEL ▲** or **▼** to make sure the channel programming has been done properly.

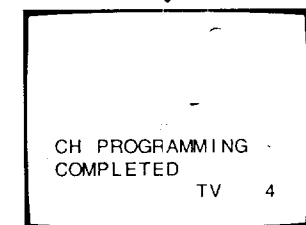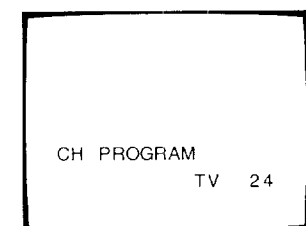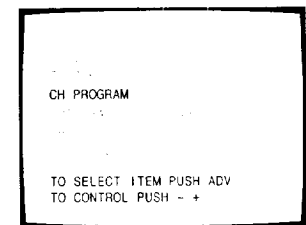

ADD/ERASE function

 
After performing the CH PROGRAM function, you can add or erase specific channels.

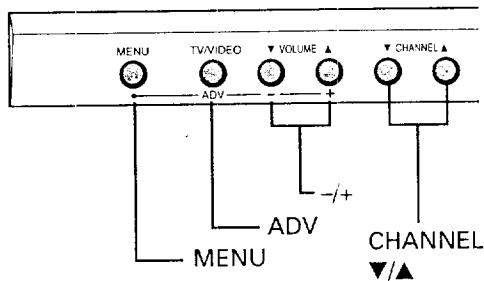

1 Select the channel you want to erase using the **CHANNEL ▲** or **▼** button, or select the channel you want to add using the **Channel Number** buttons.

2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

 
3 Press **ADV** repeatedly until "ADD/ERASE" is displayed in magenta.

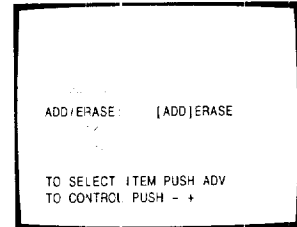

4 Press **-** or **+**:


To erase the channel

 Press the button until "ERASE" is displayed in magenta indicating that the channel has been erased from the memory.

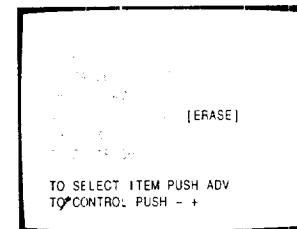


To add the channel

 Press the button until "ADD" is displayed in magenta indicating that the channel has been memorized.

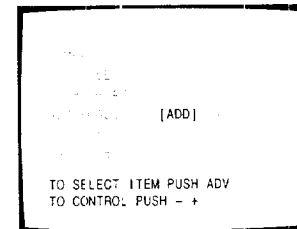


5 Repeat steps 1 to 4 for other channels.

 You have now completed the channel programming.

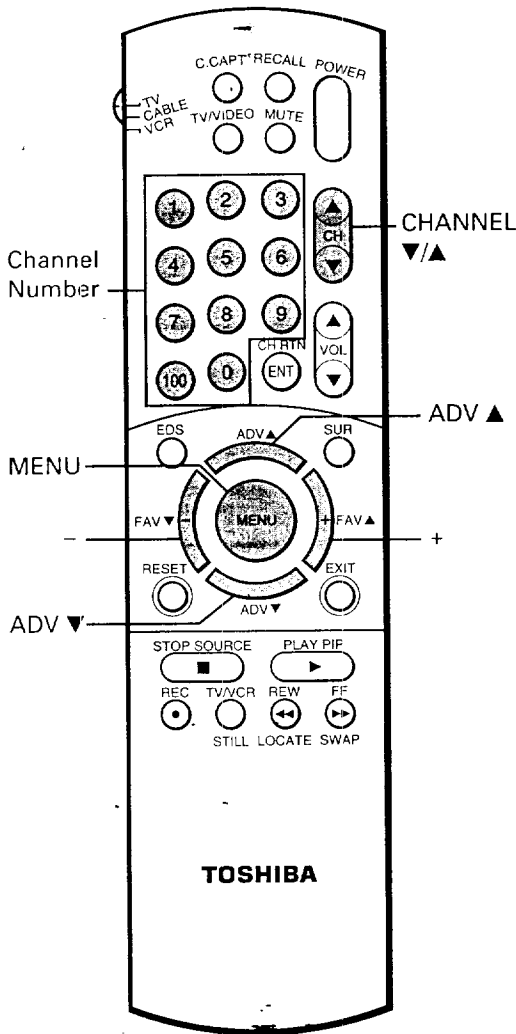


Watching TV Programs

 - First set the TV-CABLE-VCR switch on the Remote Control to "TV" position.

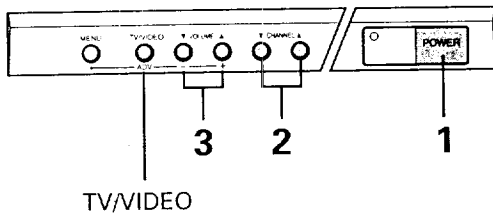

- 1 Press **POWER** to turn on the TV.

 To turn off the TV, press **POWER** again.

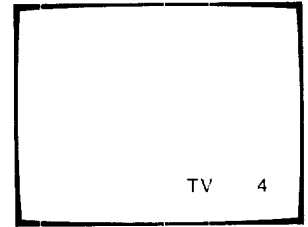

- 2 Select a channel in one of the following two ways.

 
 
- **To scan the memorized channels in numerical sequence**
Press **CHANNEL ▲** to select the next higher channel.
Press **CHANNEL ▼** to select the next lower channel.
Press the button again to select the next memorized channels.

- **To select a channel directly**
Press the **Channel Number** buttons (0-9 and 100).
To select channel 4, press "4" (or press "0", "4").
To select channel 38, press "3", "8".
To select channel 125, press "100", "2", "5" in sequence.

If you cannot select certain channels, either TV (off the air) or CABLE channels
Check if the TV/CABLE function is properly set. See page 15.

- 3 Press **VOLUME ▲/▼** to adjust the volume.

To increase the volume, press **▲**.
To decrease the volume, press **▼**.

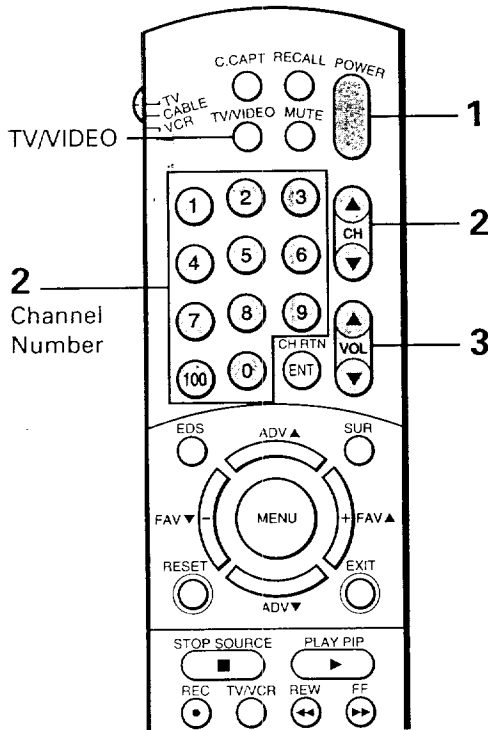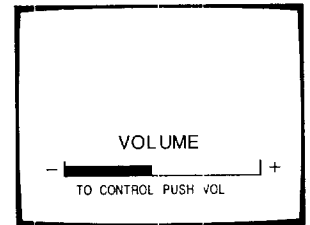

Auto-Power-Off

 
If a vacant channel is tuned or TV broadcast for a day is finished, the TV will automatically turn off after about 15 minutes. This feature does not operate in the VIDEO mode.

Last Mode Memory

If the power is cut off while you are viewing the TV and the power is resupplied, the TV is turned on automatically by the *Last Mode Memory* feature. If the power is going to be off or when you leave home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.

Demonstration Mode

When this function is activated, your TV will automatically display a variety of its on-screen menus and special features, this function is provided for demonstration purpose only.
To start demonstration, select "DEMO [START]" in the Option menu. (See page 14.)
To stop, press **EXIT**, **POWER**, **RECALL** or "DEMO[STOP]" in the Option menu.

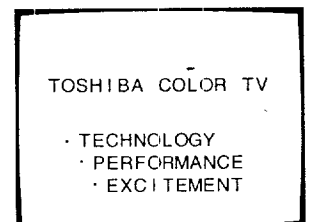

Watching Video Input

 
The TV/VIDEO button is used to view the signals coming from other devices like VCR's or Laser disc players connected to this TV.

Details are on page-33.

Note:

The **VOLUME ▼/▲** buttons on the TV function as the **-/+** buttons while any of the menu displays (Picture, Audio, Setup or Option) are on the screen.


Convenient Remote Functions

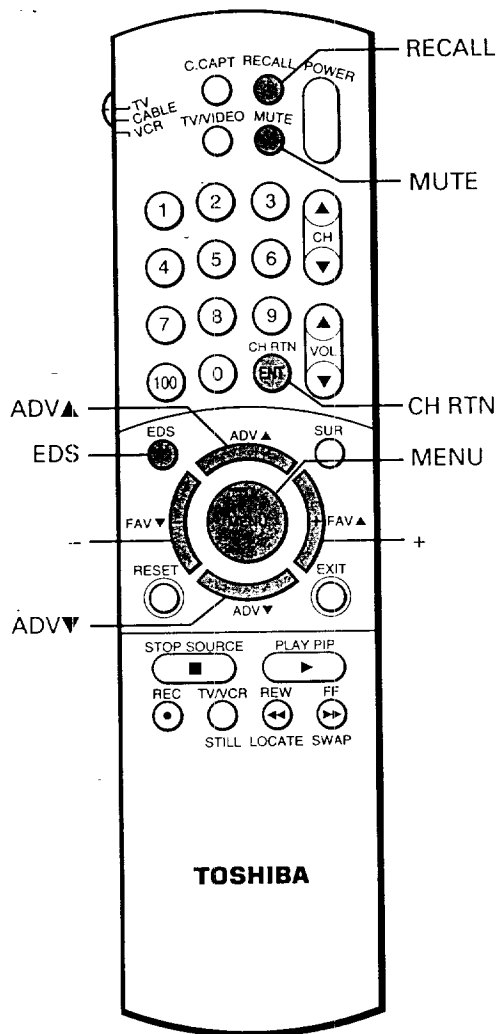

Displaying on-screen information

Press **RECALL** to display the following on-screen information.

 - Channel number
- VIDEO mode selected
- Stereo or SAP audio status

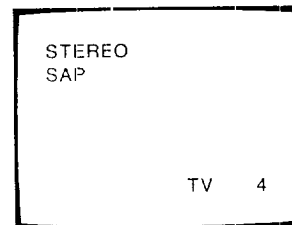


Muting the sound

Press **MUTE** to mute the sound. The word "MUTE" will be displayed on the screen as shown. This is useful during telephone calls or other interruptions.

To restore the sound, press **MUTE** again.

 Note: When the MUTE button is pressed, the Closed-Captioned feature "C1" is activated. ("MUTE" on-screen display will disappear.) To deactivate, press the MUTE button again. (This feature only functions when the Closed Caption mode is set to "OFF".)

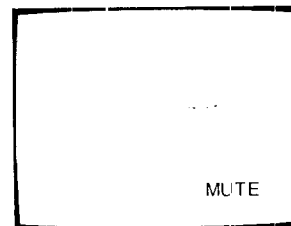

Changing quickly between two channels

 
Press **CH RTN** to return to the last channel viewed.

This is useful should you want to view two channels. This allows you to view two programs without entering an actual channel number each time.

To operate this function

- 1 Select the first channel you want to view.
- 2 Select the other channel with the Channel Number buttons.
- 3 Press **CH RTN**.
The previous channel will return.

Each time you press **CH RTN**, the TV will switch back and forth between the two channels.

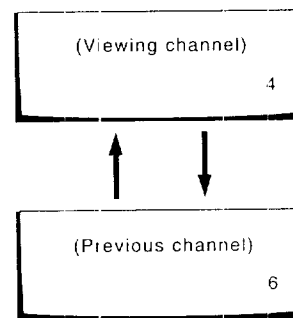


Convenient Remote Functions (Continued)

Setting the off-timer



With the off-timer, you can set the TV to turn off automatically after a predetermined period of time (up to 3 hours, in 10 minute units).

 1 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

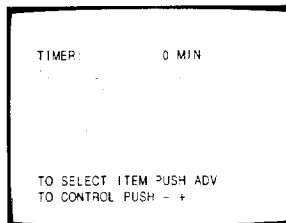

2 Press **ADV** repeatedly until "TIMER" is displayed in magenta.

  3 Press **+** or **-** to enter the length of time you want the TV to stay on. Each time you press the button, the time display will increase or decrease by 10 minutes.

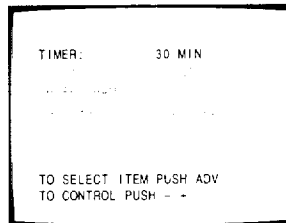


Notes:

- To cancel the off-timer, press **POWER**. To turn the TV on again, press **POWER**.
- The off-timer setting can also be performed using the MENU, ADV and +/- buttons on the TV.

Displaying the EDS information

Press **EDS** to display the following EDS (Extended Data Service) information for about 10 seconds.

 
- Network name ①
- Program name ②
- Program type ③
- Time in show ④
- Program length ⑤

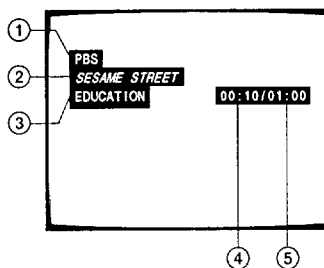



Some of the above information may not be displayed.

If the TV program you are watching does not include the EDS information

 "NO EDS INFORMATION" will be displayed instead for about 10 seconds when you press EDS.

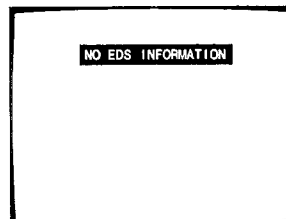


Adjusting the Picture

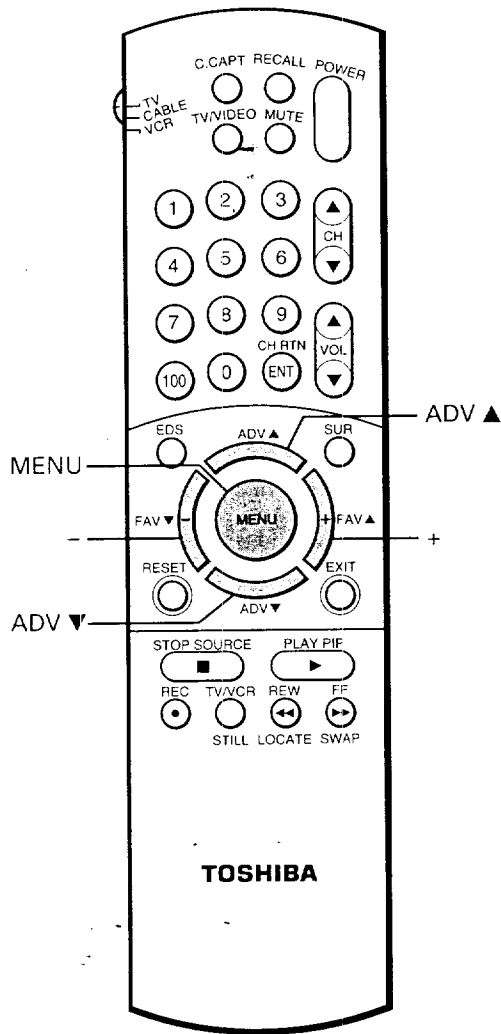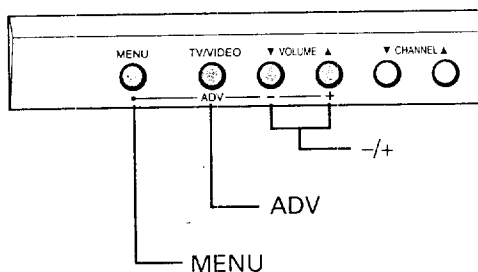  

Adjusting the picture quality


You can adjust the picture quality (CONTRAST, BRIGHTNESS, SHARPNESS, COLOR and TINT) to suit your taste.

 - 1 Press **MENU** repeatedly until the Picture 1 menu is displayed on the screen.
- 2 Press **ADV** repeatedly until the item you want to adjust is displayed in magenta.

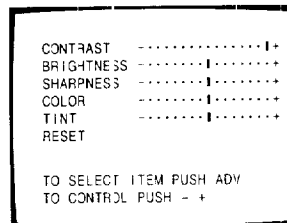

- 3 Press **-** or **+** to adjust the level.

 Example: CONTRAST adjustment mode display

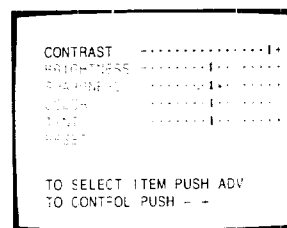


Selection	Pressing	
	-	+
CONTRAST	lower	higher
BRIGHTNESS	darker	lighter
SHARPNESS	softer	sharper
COLOR	paler	deeper
TINT	reddish	greenish


The above five picture functions you have adjusted will be stored in the MEMORY of the PICTURE PREFERENCE function (See page 22.)

To reset the PICTURE and AUDIO adjustments to the factory-preset level (maximum CONTRAST and all other adjustments centered)

 - 1 Press **MENU** repeatedly until the Picture 1 menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "RESET" is displayed in magenta.

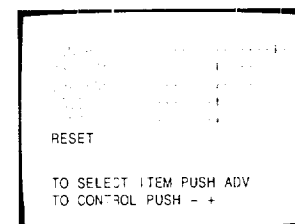

- 3 Press **-** or **+**.

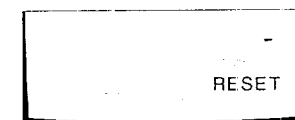 


Note: You can also use the RESET button on the Remote Control. (See page 23)

Adjusting the Picture (Continued)

Selecting the color temperature


These selections change the appearance of gray and white tones of the picture. Cool=Bluish, Medium=Neutral, Warm=Redish

 1 Press **MENU** repeatedly until the Picture 2 menu is displayed on the screen.

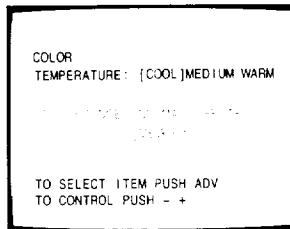

2 Press **ADV** repeatedly until "COLOR TEMPERATURE" is displayed in magenta.

 
3 Press - or + until the mode you want is displayed in magenta. Choose COOL, MEDIUM and WARM in order.

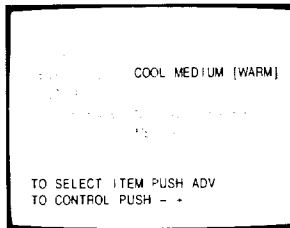


Selecting the picture preference function

You can select a desired picture tone from three picture preset modes (NORMAL, THEATER, MEMORY) instantly.

 1 Select "PICTURE PREFERENCE" following the steps 1 and 2 above.

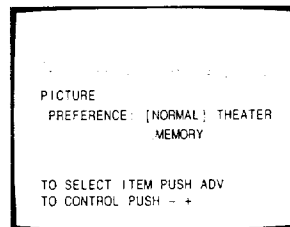

 2 Press - or + until the mode you want is displayed in magenta.

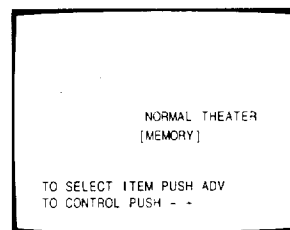

Mode	Picture quality
NORMAL	The picture quality preset at the factory
THEATER	Movie-like picture setting
MEMORY	The picture quality you set (First follow page 20.)

 
Note: When you press the RESET button, the TV will return to the NORMAL mode (The settings you have adjusted remain in the Memory mode).

Adjusting the Sound

Adjusting the sound quality


You can adjust the sound quality (BASS, TREBLE and BALANCE) to suit your taste.

- 1 Press **MENU** repeatedly until the Audio menu is displayed on the screen.
- 2 Press **ADV** repeatedly until the item you want to adjust is displayed in magenta.

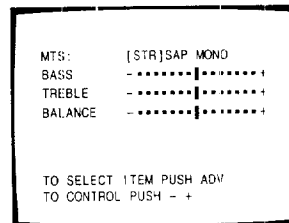

- 3 Press - or + to adjust the level.

 Example: BASS adjustment mode display

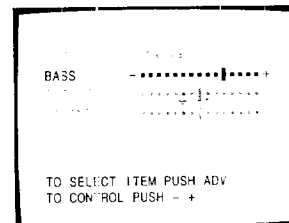

Selection	Pressing	
	-	+
BASS	weaker	stronger
TREBLE	weaker	stronger
BALANCE	decreases the right channel	decreases the left channel

 
 
RESET button (on the Remote Control)

To reset the picture and audio adjustments to the factory-preset level (maximum CONTRAST and all other adjustments centered)

Press **RESET**.



The RESET function also performs the following adjustments.

- COLORTEMPERATURE COOL
- PICTUREPREFERENCE NORMAL

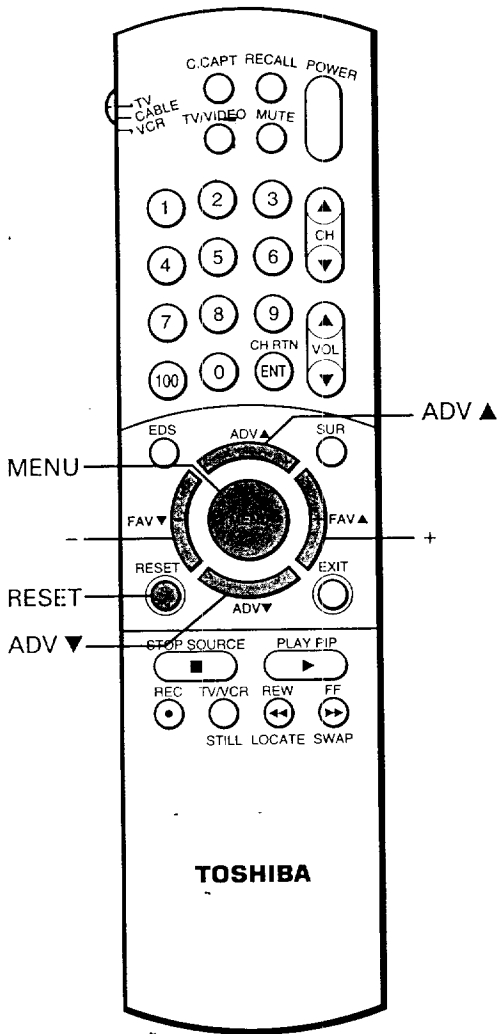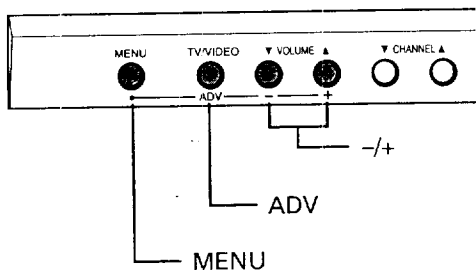

PREPARATION
Adjusting the Picture/
Adjusting the Sound

  Adjusting the Sound (Continued)

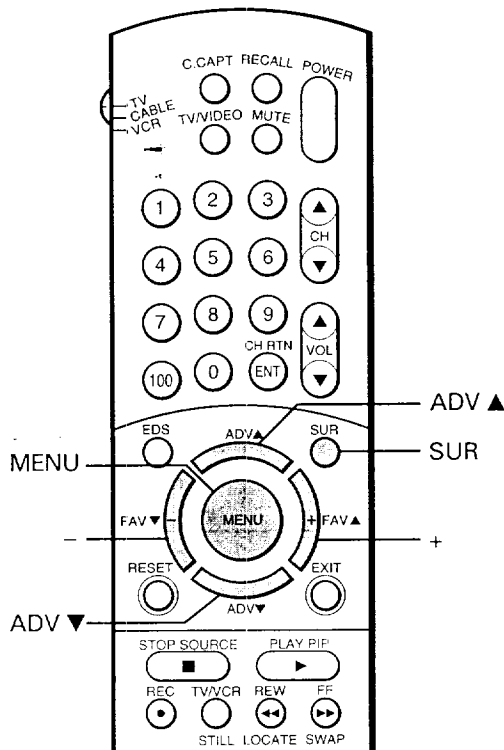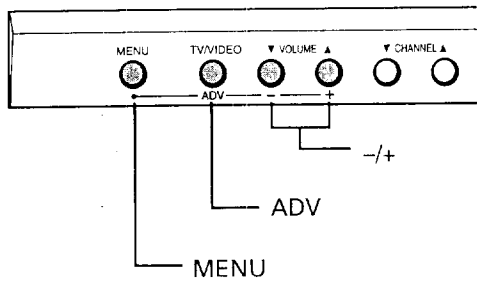

Notes:

- When the TV receives a MTS broadcast, the word "STEREO" or "SAP" is displayed on the screen whenever the TV is turned on, a channel is selected, or the RECALL button is pressed.



 
 
- The MTS function does not operate in the VIDEO mode.

Selecting Stereo/SAP broadcast

The MTS (Multi-channel TV Sound) feature allows you to improve your TV viewing with high fidelity stereo sound. This TV also allows you to activate or deactivate the stereo surround sound effect. MTS also provides for an extra channel, SAP (Second Audio Program), used to transmit a second language or other audio information.

- 1 Press **MENU** repeatedly until the Audio menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "MTS" is displayed in magenta. The usable selections will be displayed in yellow.
- 3 Press **-** or **+** to select "STR", "SAP" or "MONO" alternately.

Normally this function can be left in "STR" mode. Your TV will then automatically reproduce either stereo or monaural sound, whichever is broadcast.

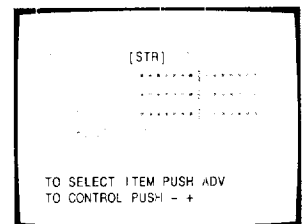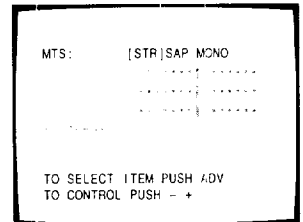

If the stereo sound is noisy

 
Be sure you have selected "STR" mode if broadcast is in stereo. However, if a broadcast signal is not strong enough, and noise-free stereo sound is not available, select "MONO" (monaural) mode. The noise should be reduced.

Activating surround sound effect

The Surround function expands the audio listening field wider and deeper than you would believe possible from a TV's speakers. This function processes stereo signals from a TV broadcast or VIDEO input.

- 1 Select the STEREO mode as described above.
- 2 Press **SUR** until "SURROUND ON" is displayed in magenta.

The surround function has now been activated.

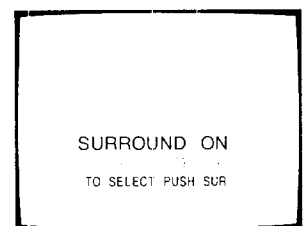

To deactivate the surround effect

 
Select "SURROUND OFF" in step 2 above.

Note: Normally you can leave the "STR" mode turned on and the surround function activated. The TV will automatically produce either surround stereo or monaural, whatever is broadcast.


Watching Picture-in-Picture

In addition to the main picture, another TV program or video source being received through the VIDEO input jacks can be displayed simultaneously as a small picture. This is called PIP (Picture-in-Picture).

Be sure to connect a VCR with the VIDEO/AUDIO cables.


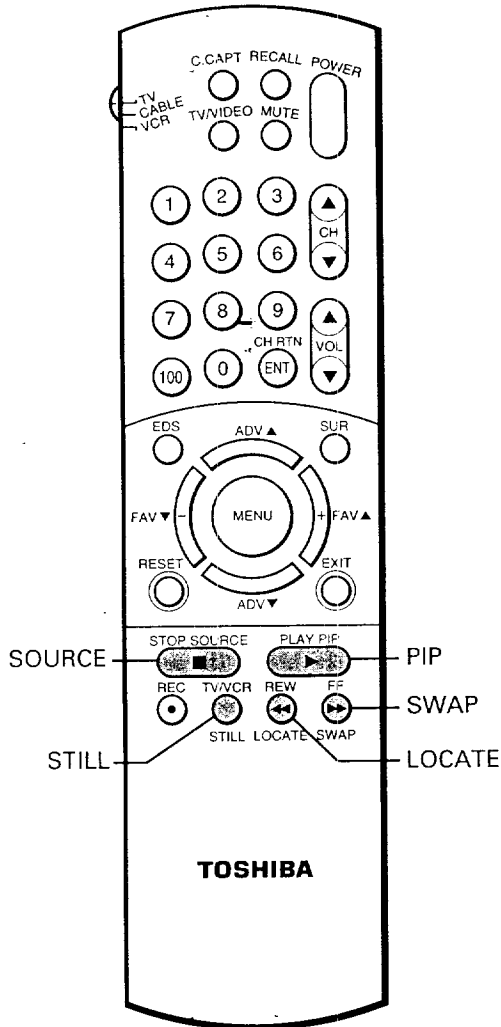


Connecting TV and VCR for PIP

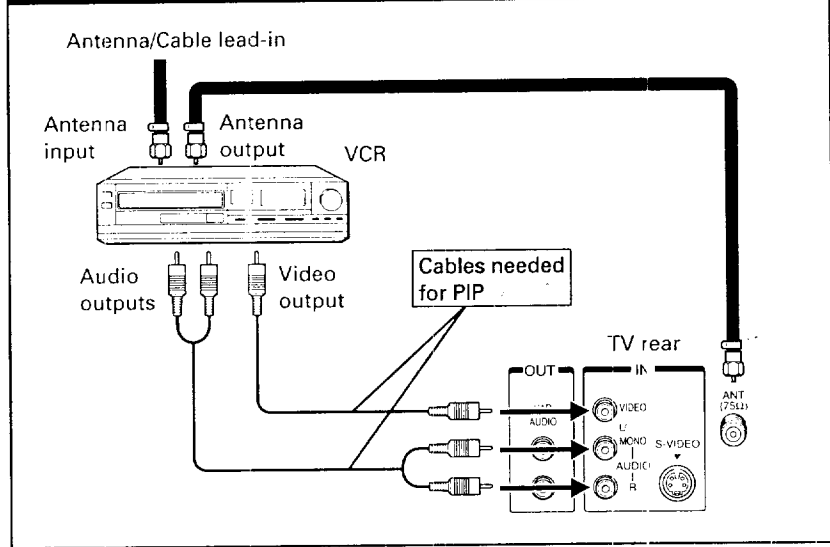 

Displaying a small picture

  - 1 Press **PIP** once to display a small picture.
The 1/9 size window picture will appear.
If you press **twice**: The 1/16 size window picture will appear.
- 2 Press **SOURCE** to select the "VIDEO" source for the small picture.
The selected source will be displayed in magenta.
- 3 Select channels for the PIP using the VCR's channel keys.

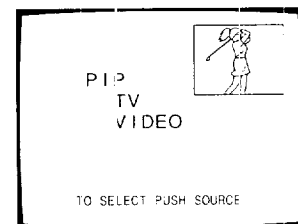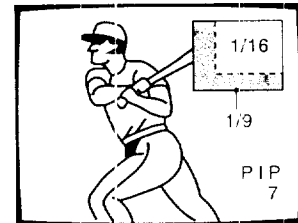

To turn off the small picture, press PIP

- **Twice**, if you watch the 1/9 size window picture.
- **Once**, if you watch the 1/16 size window picture.

Adjusting the Sound/Watching Picture-in-Picture

 
ADVANCED OPERATION

Watching Picture-in-Picture (Continued)

Using advanced functions


To change the position of the small picture

Press **LOCATE** repeatedly when a small picture is displayed. The display position of the small picture will change in order.

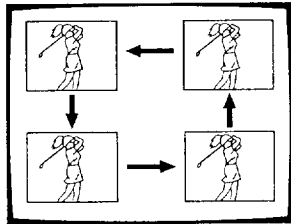


To switch the main and small picture

 Press **SWAP** when a small picture is displayed. The main and small pictures will switch. To switch them again, press **SWAP** again.



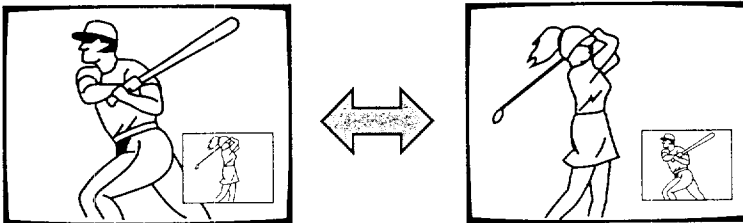


To freeze the small picture

 Press **STILL** when a small picture is displayed. The small picture will become a still picture. To return to a moving picture, press **STILL** again.

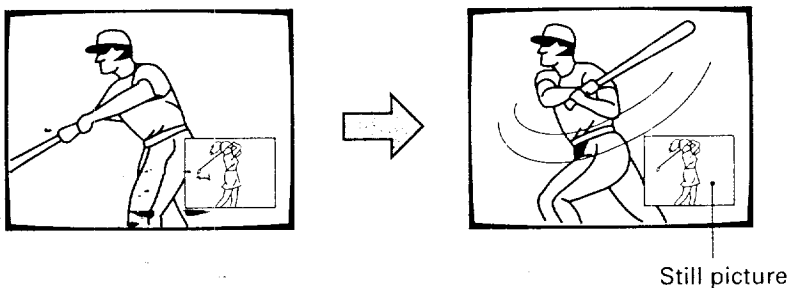

Using Closed-Captioned Function

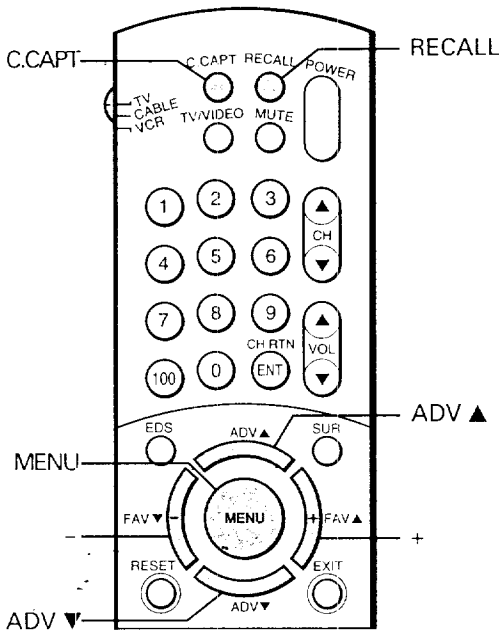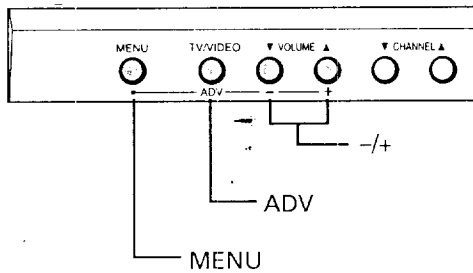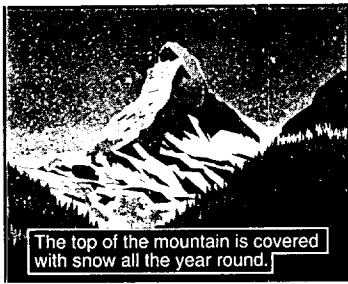   


Viewing captions

Closed-captioning is a printed version of the dialogue, narration, and/or sound effects of a TV program. Captions will appear at either the top or bottom of the screen during captioned broadcasts as shown. Captioning is especially helpful for hearing impaired individuals.



- 1 Select the desired program.
The captioned programs are usually notated on your local TV listings by its service marks such as "CC".
- 2 Press **C.CAPT** on the Remote Control to call up the CLOSED CAPTION menu.

 Press **C.CAPT** repeatedly until "C1", "C2", "C3" or "C4" is displayed in magenta. ("C1" stands for CAPTION 1, for example.)
Select "C1" for translation of the primary language in your area.
Select "C3" for captioning information usually of secondary languages.

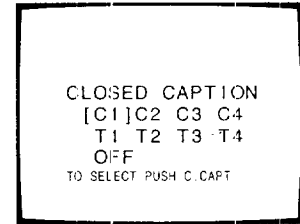

You can also select this feature using the on-screen menu function.

  - 1 Press **MENU** repeatedly until the Option menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "C.CAPT" is displayed in magenta.
- 3 Press **-** or **+** to select "C1", "C2", "C3" or "C4".

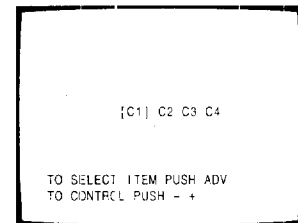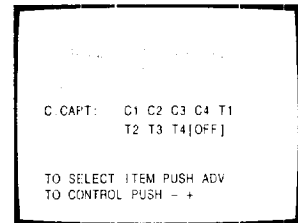

To deactivate this feature
Select "OFF" in the closed caption mode display.

Note:
A closed-captioned signal may not be decoded in the following situations.

- When a video tape has been dubbed.
- When the signal reception is weak.
- When the signal reception is non-standard.

Watching Picture-in-Picture/Using Closed Captioned Function

ADVANCED OPERATION

Using Closed Captioned Function (Continued)

 
Viewing text

Text is information that is presented using from one half to full television screen. It is usually not related to the program.

For example, it could be a listing of the closed-captioned programs, news, weather information or stock market reports.

- 1 Select the desired program.
- 2 Press **C.CAPT** on the Remote Control to call up the CLOSED CAPTION menu.


Press **C.CAPT** repeatedly until "T1", "T2", "T3" or "T4" is displayed in magenta. ("T1" stands for TEXT 1, for example.)

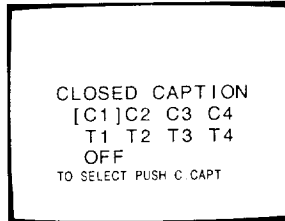


	Temps		Current Weather
	F	C	
LONDON	51	11	Clear
MOSCOW	57	14	Cloudy
PARIS	53	12	Clear
ROME	66	19	Cloudy
TOKYO	65	18	Rain

You can also select this feature using the on-screen menu function.

 - 1 Press **MENU** repeatedly until the Option menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "C.CAPT" is displayed in magenta.

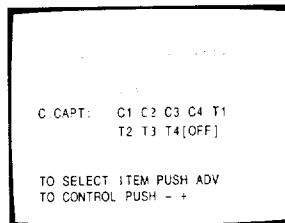

 - 3 Press **-** or **+** to select "T1", "T2", "T3" or "T4".

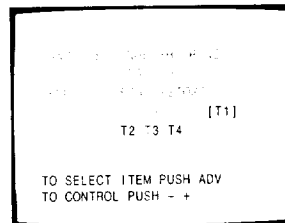

To deactivate this feature

 
 
Select "OFF" in the closed caption mode display.

Note: If you select a closed-captioned channel and the "TEXT" mode, the TEXT screen always appears.

However, TEXT characters are not displayed when no signal is aired.

Locking Channels


With this function you can lock out specific channels (for example a channel that you do not want your children to watch) by entering your own 4-digit code. The TV will not be able to tune them for the next 24 hours, unless you cancel the locked out channels. This TV has 8 memory spaces total, 4 for the TV mode and 4 for the CABLE mode.

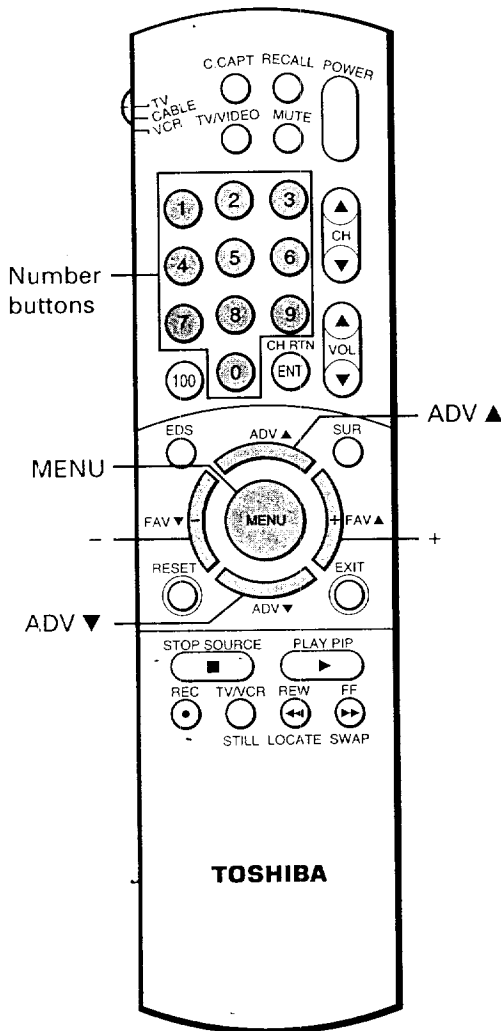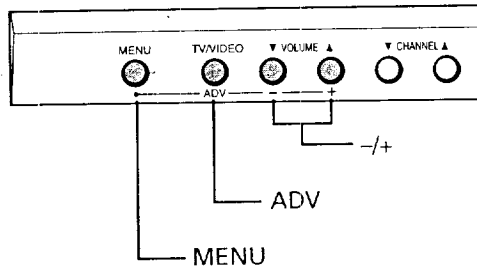


Locking out channels

1 Select a channel you want to lock out.

 Example: channel 4

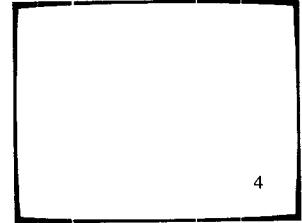


 2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

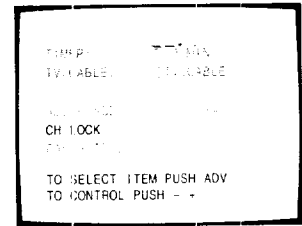

3 Press **ADV** repeatedly until "CH LOCK" is displayed in magenta.

 
4 Press **-** or **+** to call up the channel lock adjustment display shown below. Each time you press the button, you are guided between "SET" and "CLEAR". Select "SET".

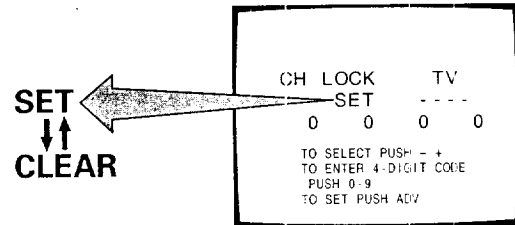

5 Press Number buttons (0 - 9) to enter a 4-digit code. The numbers you enter will replace the dashes in the display. Pick a number that is easy to remember.

Example: To enter "1234"
Press 1, 2, 3 and 4 in order.

 1 --- → 12 --- → 123 - → 1234

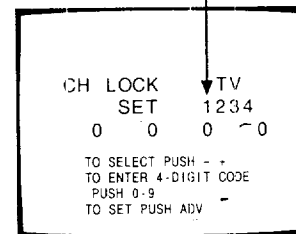


Using Closed Captioned Functions/Locking Channels

ADVANCED OPERATION

Locking Channels (Continued)

 - 6** Press **ADV** to lock out the channel.
The display at the right will appear on the screen for about 4 seconds.

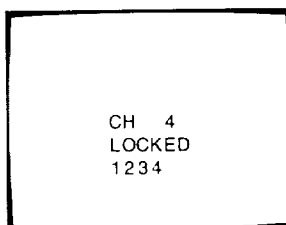


- 7** Repeat steps 1 to 6 for other channels.

Note: If a different code number is used whenever you lock out a channel, the last one has priority over the preceding ones.

- 8** Select another channel, before turning off the TV if desired.


Restoring channels

 - 1** Select "CLEAR" following the steps 2 to 4 on the previous page.

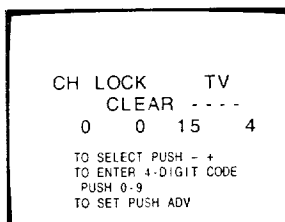


- 2** Press the 4-digit code used to lock out the channels with the Number buttons.

 - 3** Press **ADV**.
If you have entered the correct code
The display shown at the right appears.

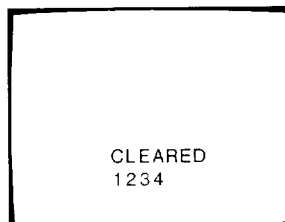


 
If a wrong code has been entered
These messages appear. Try to enter the correct code again.

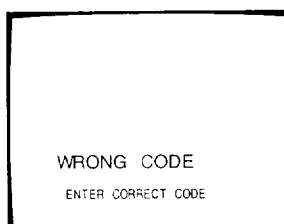

If you want to know the channels you have locked out
Call up the channel lock adjustment mode using the Setup menu.

Programming Your Favorite Channels

  
The Favorite Channel Programming feature allows you to program up to 12 of your favorite channels. Once programmed, you can use the FAV ∇/\blacktriangle buttons on the Remote Control to scan through only your favorite channels, skipping other channels you do not normally view. You can use the CHANNEL \blacktriangle/∇ buttons to scan through all the channels you programmed in TV's memory.

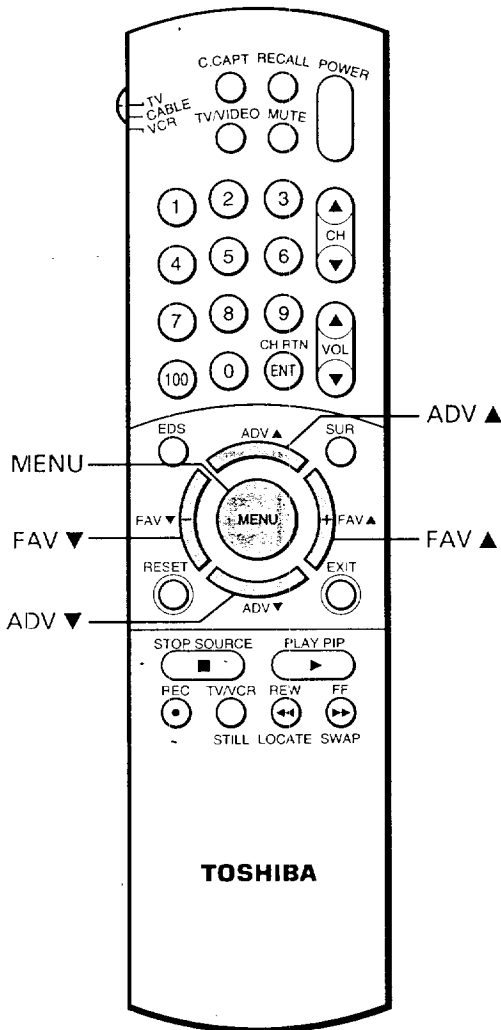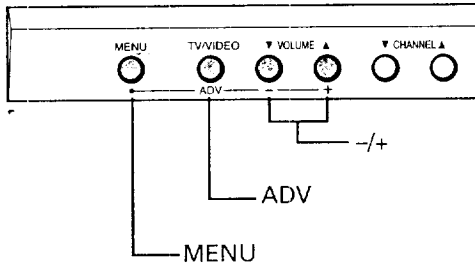


Programming your favorite channels

1 Select a channel you want to program.

 
Example: channel 2

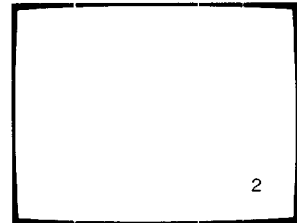

 
2 Press **MENU** repeatedly until the Setup menu is displayed on the screen.

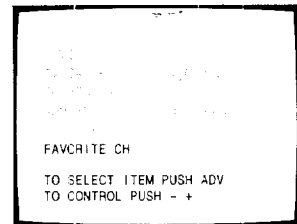

 3 Press **ADV** repeatedly until "FAVORITE CH" is displayed in magenta.

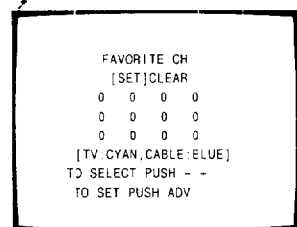

 4 Press **-** or **+** to display the FAVORITE CH program menu. Each time you press **-** or **+**, you are guided between "SET" and "CLEAR".

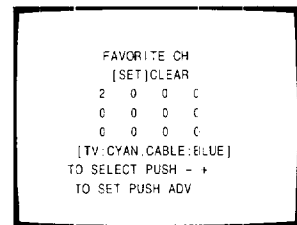

5 To program channels: Select "SET". Then press **ADV** until the channel number to be programmed ("2" in this example) replaces "0" on the display.

To erase channels: Select "CLEAR". Then press **ADV** until "0" replaces the channel number to be erased, "2" for example.



6 Repeat steps 1 to 5 for other channels.

 
 
Selecting your favorite channels

To select your favorite channels you have programmed, use the **FAV ∇/\blacktriangle** buttons on the Remote Control instead of using the CHANNEL \blacktriangle/∇ buttons.

Note: The FAV ∇/\blacktriangle buttons cannot function if you have not programmed your favorite channels.



Changing On-Screen Display Language

Three different languages (ENGLISH, FRENCH and SPANISH) are available for the on-screen displays (adjustment menus, and messages), and you can choose the desired one.

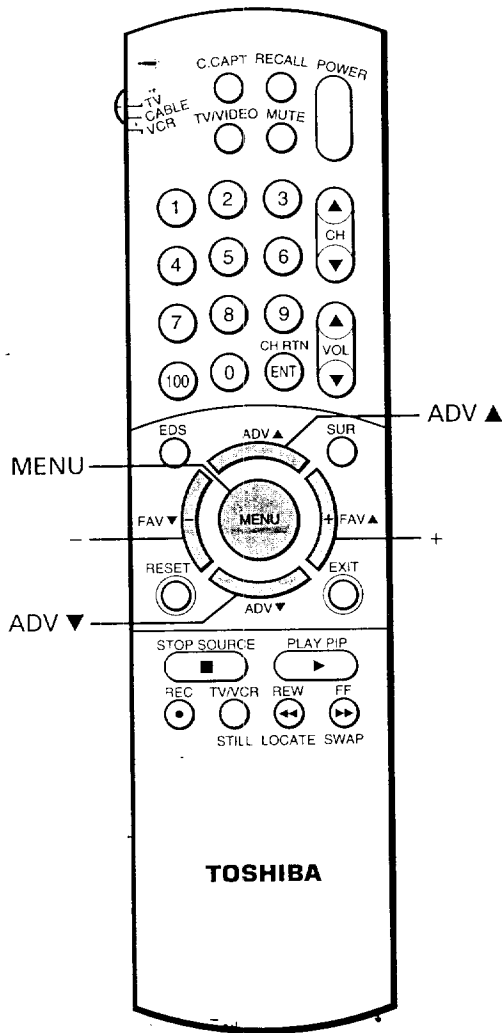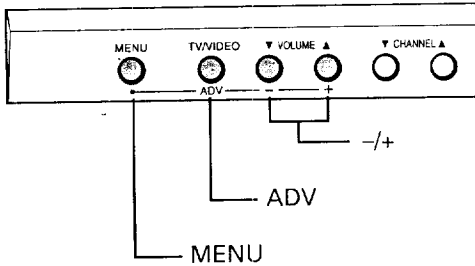


Selecting a language

  
- 1 Press **MENU** repeatedly until the Option menu is displayed on the screen.
- 2 Press **ADV** repeatedly until "LANGUAGE" is displayed in magenta.
- 3 Press **-** or **+** until your desired language is displayed in magenta. If you select "FRENCH" for example, the display language changes to French.

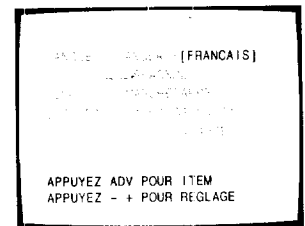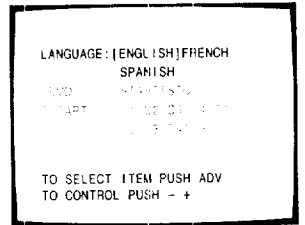


Example: Picture menu display "ENGLISH"

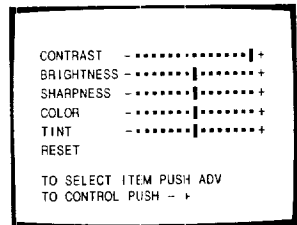 

"FRENCH"

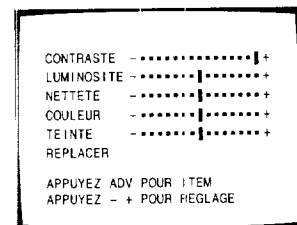 


"SPANISH"

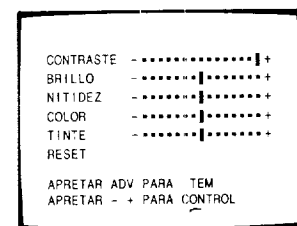 

Connecting a VCR

 Connect VIDEO/AUDIO IN jacks on the rear of the TV to the video/audio output jacks of a VCR, (Laserdisc Player, Video Camera, etc.) for playback of video material. The S-VIDEO jack is provided for direct S-video connection from a **S-VIDEO** VCR.

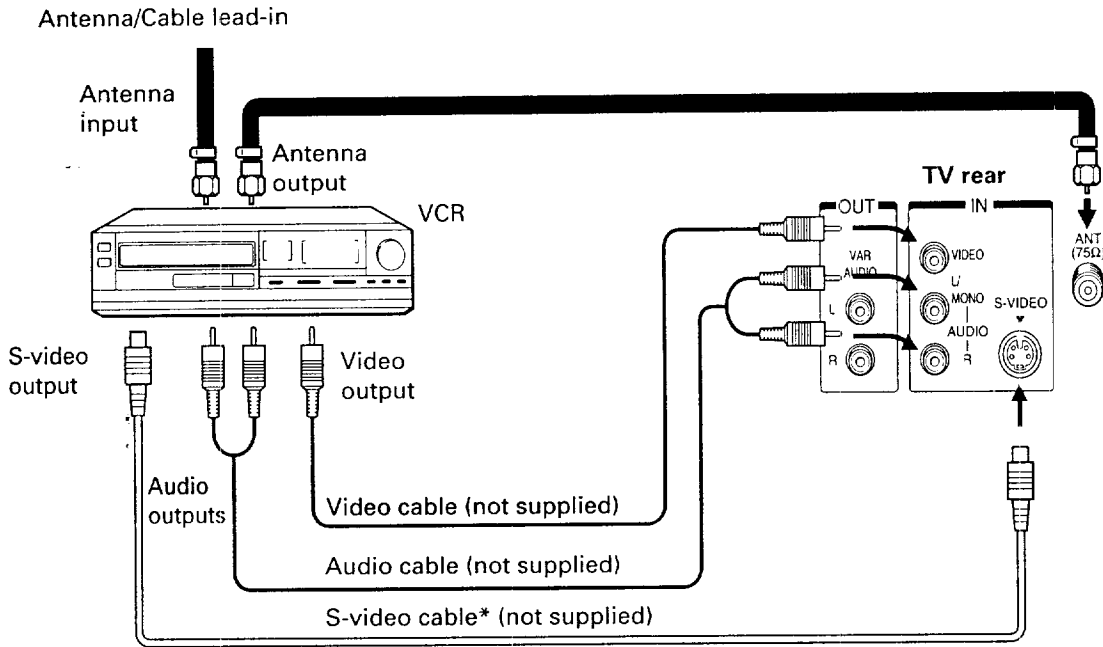


* When the S-video cable is connected to the S-VIDEO IN jack, the VIDEO plug should not be connected.

Selecting video input source

To operate your TV and video equipment properly, refer to the instructions furnished with the video equipment.


 
- 1 Turn the TV and VCR ON.
- 2 Press **TV/VIDEO** on the Remote Control or on the TV to select "VIDEO" source. The selected source will be displayed in magenta.

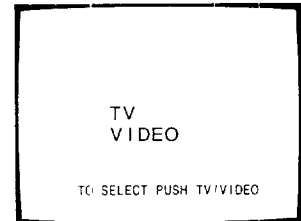

- 3 Operate your VCR normally.


Notes:

  - If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack on the TV.
- The S-VIDEO jack accepts separated luminance/chrominance (Y-C) signals conforming to the NTSC standard.

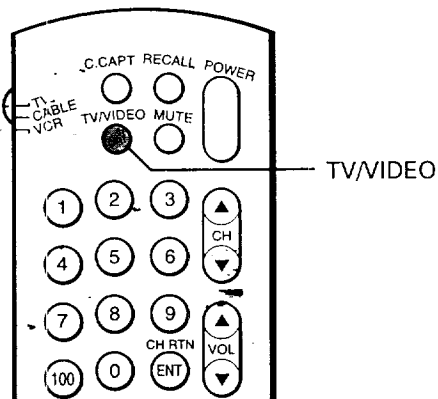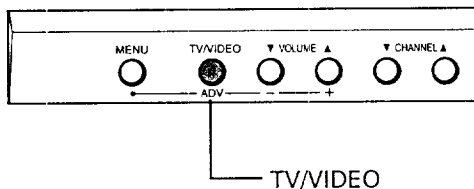


Connecting an Audio Amplifier

 Connect the VARIABLE AUDIO OUT jacks to the auxiliary input jacks on the stereo amplifier. You can control the audio level using the Remote Control for this TV.

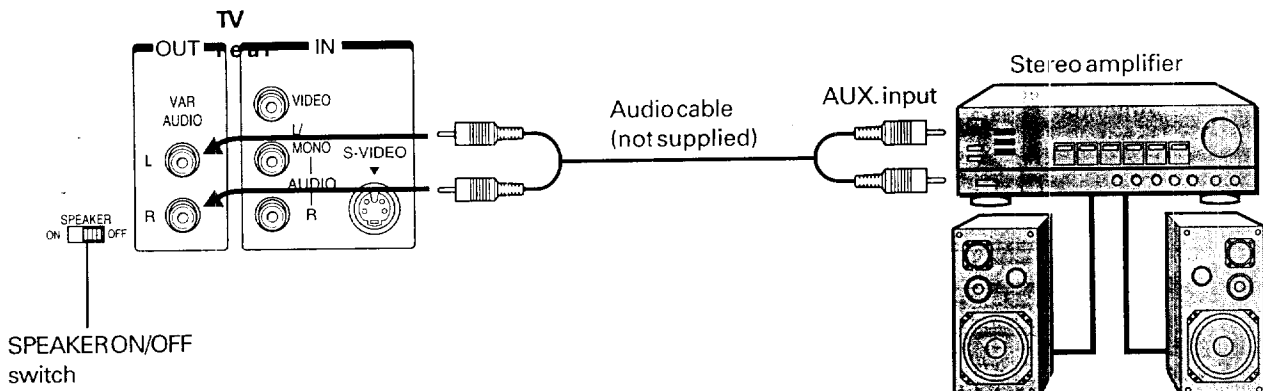

Preparing for use

 - 1 Turn the TV and the stereo amplifier ON.
- 2 Adjust the VOLUME buttons on the TV for a moderate listening level.
- 3 Set the SPEAKER ON/OFF switch to "OFF" to switch off the built-in speakers.
- 4 Adjust the volume control on the stereo amplifier for a moderate listening level.
- 5 Control of the audio can now be done using the VOLUME and MUTE buttons of the Remote Control of the TV, and using the Audio menu items (BASS, TREBLE and BALANCE).



To use the built-in speakers again
Set the SPEAKER ON/OFF switch to "ON".

Cleaning and Care

WARNING: TV sets use High Voltage. Do not try to remove the cabinet back. Refer servicing to qualified service personnel.

- To clean the TV screen:
 1. First remove the plug from the power outlet to avoid possible shock hazard.
 2. Use a clean cellulose sponge or chamois cloth dampened with a solution of mild detergent and warm water to clean TV screen and trim. Do not use too much water on the TV screen. Water spills into the cabinet and may cause damage to the TV. Avoid excess water.
 3. Remove any extra moisture with the same cloth or a dry one.
 - To maintain the finish and appearance of the cabinet, polish it from time to time with a quality furniture polish.
- Caution:** Never use strong solvents such as thinner, benzene or other chemicals on or near cabinet, as they might damage the finish of the cabinet.

Specifications

TELEVISION SYSTEM	NTSC standard		
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: mid band (A-8 through A-1, A through I) super band (J through W) hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125)		
POWER SOURCE	120V AC, 60Hz		
POWER CONSUMPTION	CF27G50: 93W (average) CF32G50: 101W (average) CF36G55: 104 W (average)		
AUDIO POWER	5W + 5W		
SPEAKER TYPE	2-3/8 x 4-3/4 inches (60 x 120 mm)		
VIDEO/AUDIO TERMINALS	S-VIDEO INPUT Y-INPUT: 1V (p-p), 75 ohm, negative sync. C-INPUT: 0.286V (p-p) (burst signal), 75 ohm VIDEO/AUDIO INPUT VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV(rms) (30% modulation equivalent, 47k ohm) VARIABLE AUDIO OUTPUT 0-350mV(rms)(30%modulation equivalent,4.7k ohm)		
DIMENSIONS	CF27G50	CF32G50	CF36G55
	Width	25-21/32 inches (677mm)	33-15/64 inches (844mm)
	Height	24-11/32 inches (618mm)	27-41/64 inches (702mm)
	Depth	21-49/64 inches (553mm)	22-41/64 inches (575mm)
			34-7/8 inches (886mm)
			30-3/4 inches (781mm)
			24-3/32 inches (612mm)
MASS	CF27G50: 74.3 lbs (33.7kg) CF32G50: 133.4 lbs (60.5kg) CF36G55: 157.4 lbs (71.4kg)		
SUPPLIED ACCESSORIES	Remote Control with 2 size "AAA" batteries		
OPTIONAL TV STAND	CF32G50: ST3212 CF36G55: ST3512		

Design and specifications are subject to change without notice.

Before Calling Service Personnel

Before calling service personnel, please check the following chart for a possible cause of the problem you are experiencing. A minor adjustment on your part may eliminate the problem and restore your TV reception.

Problem	Checks and Adjustments	Page
TV will not turn on	<ul style="list-style-type: none"> ● Make sure the power cord is plugged in, then press POWER button. ● Check battery in the Remote. (Maybe batteries are "dead".) 	18
No picture, no sound	<ul style="list-style-type: none"> ● Check antenna/cable connections. 	
No sound, picture OK	<ul style="list-style-type: none"> ● Maybe sound is muted. Try pressing VOLUME ▲ button. ● Try another channel. (Maybe station trouble) ● Check that the SPEAKER ON/OFF switch is properly set. 	19 34
Poor sound, picture OK	<ul style="list-style-type: none"> ● Try another channel. (Maybe station trouble or local interference from appliance.) 	
Poor picture, sound OK	<ul style="list-style-type: none"> ● Check antenna/cable connections. ● Try another channel. (Maybe station trouble or local interference.) ● Adjust Picture menu. 	21
Poor reception of broadcast channels	<ul style="list-style-type: none"> ● Try another channel. ● Check antenna connections. ● If using VCR, check TV/VCR button. 	9
No UHF, VHF OK	<ul style="list-style-type: none"> ● Make sure TV/CABLE function is in "TV" mode. 	
Unable to select a certain channel	<ul style="list-style-type: none"> ● That channel may be locked out with CH LOCK function, or erased with the ADD/ERASE function. 	29 17
Multiple images (ghosts)	<ul style="list-style-type: none"> ● Try another channel. (Maybe station trouble.) ● Use a highly directional outdoor antenna. 	
Poor color or no color	<ul style="list-style-type: none"> ● Try another channel. (Maybe station trouble or local interference.) ● Adjust TINT and/or COLOR in the Picture 1 menu. ● If you change the direction of the TV while the TV is activated, the picture may suffer from color shading. If so, turn off the TV and allow it to cool for about 30 minutes, then turn on the TV again. The picture should improve. 	21
No stereo or SAP sound from a known MTS broadcast	<ul style="list-style-type: none"> ● Check if MTS function is properly set. 	24
The Remote Control does not operate	<ul style="list-style-type: none"> ● Check if TV-CABLE-VCR switch is properly set. ● Maybe something was between the Remote and the remote sensor. ● Maybe batteries are dead. Try replacing batteries with new ones. Insert them with the correct polarity. 	9, 11 10

Limited United States Warranty

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty

TACP and THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. "Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."

Limited Two (2) Year Warranty of Picture Tube

TACP and THI further warrant the picture tube in this product against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. During this period, TACP and THI will replace a defective picture tube without charge to you, except that if a defective picture tube is replaced after one (1) year from the date of the original retail purchase, you pay labor charges involved in the replacement.

Rental Units

The warranty for rental units begins with the first rental of thirty (30) days from the date of shipment to the rental firm, whichever comes first.

Commercial Units

Products sold and used for commercial use have a limited ninety (90) day warranty for all parts, labor and picture tube.

Owner's Manual and Demographic Card

You should read this owner's manual thoroughly before operating this product. You should complete and mail the enclosed Demographic card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP/THI to provide you with better customer service and improved products. Failure to return the Demographic card will not affect your rights under this warranty.

Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (3) **These warranties are effective only if the product is purchased and operated in the U.S.A. or Puerto Rico.**
- (4) Labor service charges for set installation, set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have had the serial number removed, altered, defaced or rendered illegible.

How to Obtain Warranty Service

If after following all of the operating instructions in this manual and checking the section "BEFORE CALLING SERVICE PERSONNEL", you find that service is needed;

- (1) Call the TACP toll free number **1-800-631-3811** after you find a defective product or part to find the nearest TOSHIBA Authorized Service Station.
- (2) Please present your bill of sale or other proof to the Authorized Service Station.
"Authorized TACP/THI service station personnel will come to your home when warranty service is required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the TACP/THI Authorized service station for repair and returned to your home at no cost to you."

IN THE CONTINENTAL UNITED STATES
Should your unit require service, Call:



HAWAII, 327 Kamakee Street, Honolulu, HI 96814
(808) 521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP or THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which action must be commenced to enforce any obligation of TACP or THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to 90 days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

ATTENTION CANADIAN CONSUMERS:

Canadian consumers are requested to complete the special Canadian "Warranty Registration Form" enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to "Register and Validate" their warranty.

Products purchased in the U.S.A. and used in Canada are not covered by these warranties.

Products purchased in Canada and used in the U.S.A. are not covered by these warranties.

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

HEAD OFFICE/82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

FACTORY SERVICE CENTERS/NORTHEAST: 82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

MIDWEST: 1010 JOHNSON DRIVE, BUFFALO GROVE, ILLINOIS 60089-6900

WEST: 5490 E. FRANCIS ST., ONTARIO, CA 91761

SOUTHWEST: 1421 CHAMPION DRIVE, SUITE 304 CARROLLTON, TEXAS 75006

SOUTHEAST: 6115 JIMMY CARTER BLVD., SUITE C2, NORCROSS, GA 30071-4607

TOSHIBA HAWAII, INC.

HEAD OFFICE/327 KAMAKEE STREET, HONOLULU, HAWAII 96814, U.S.A.

TOSHIBA OF CANADA LTD.

HEAD OFFICE/191 McNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA TEL: (905) 470-5400

SERVICE CENTERS/TORONTO: 191 McNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA TEL: (905) 470-5400

MONTREAL: 1643, NORTH SERVICE RD., TRANS-CANADA HIGHWAY, DORVAL QUEBEC, H9P 1J1, CANADA

TEL: (514) 856-4100

VANCOUVER: 22171 FRASERWOOD WAY, RICHMOND, B.C., V6W 1J5 TEL: (604) 303-2500

MANUFACTURED BY

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

PRINTED IN USA

(97-05)

ACL

TOSHIBA

23563006