


STEP 1

Stack the components as shown below.


Tuner




Amplifier

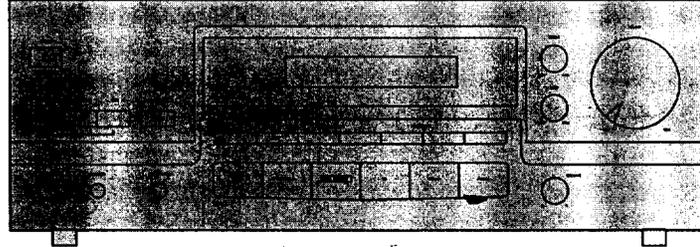


Graphic equalizer

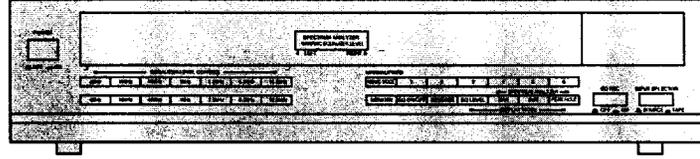

Cassette deck

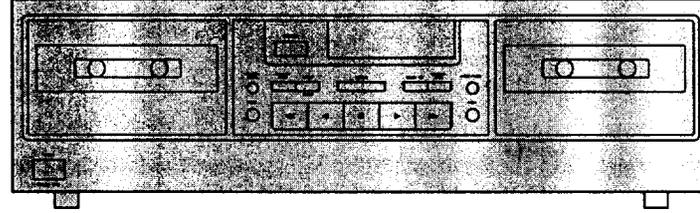

CD changer

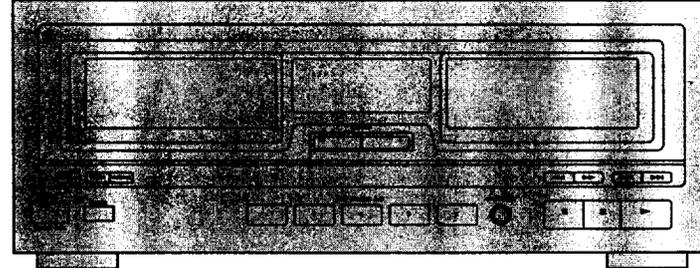

Technics®


Electronic Components

SD-S948 · S748 · SH-GS71

SD-S938 · S738

Although this Quick Set Up Guide is generally applicable to all of the systems indicated below, it essentially describes the set up of system SC-S4850.

System	SC-S4850	SC-S3850/SC-S3800
Electronic Components	SD-S948 · S748 · SH-GS71	SD-S938 · S738
Tuner	ST-K55	ST-K55
Amplifier	SU-G96	SU-G96
Graphic equalizer	SH-GS71	SH-GE50
Cassette deck	RS-TR180	RS-TR180
CD changer	SL-MC409	SL-MC409

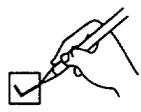


Before connecting each unit, check and identify the supplied accessories comparing to the illustrations at the top of each step (steps 2—5).

For operation and other details with regard to each component, please refer to the operating instructions.


STEP 2




(6 pcs.)

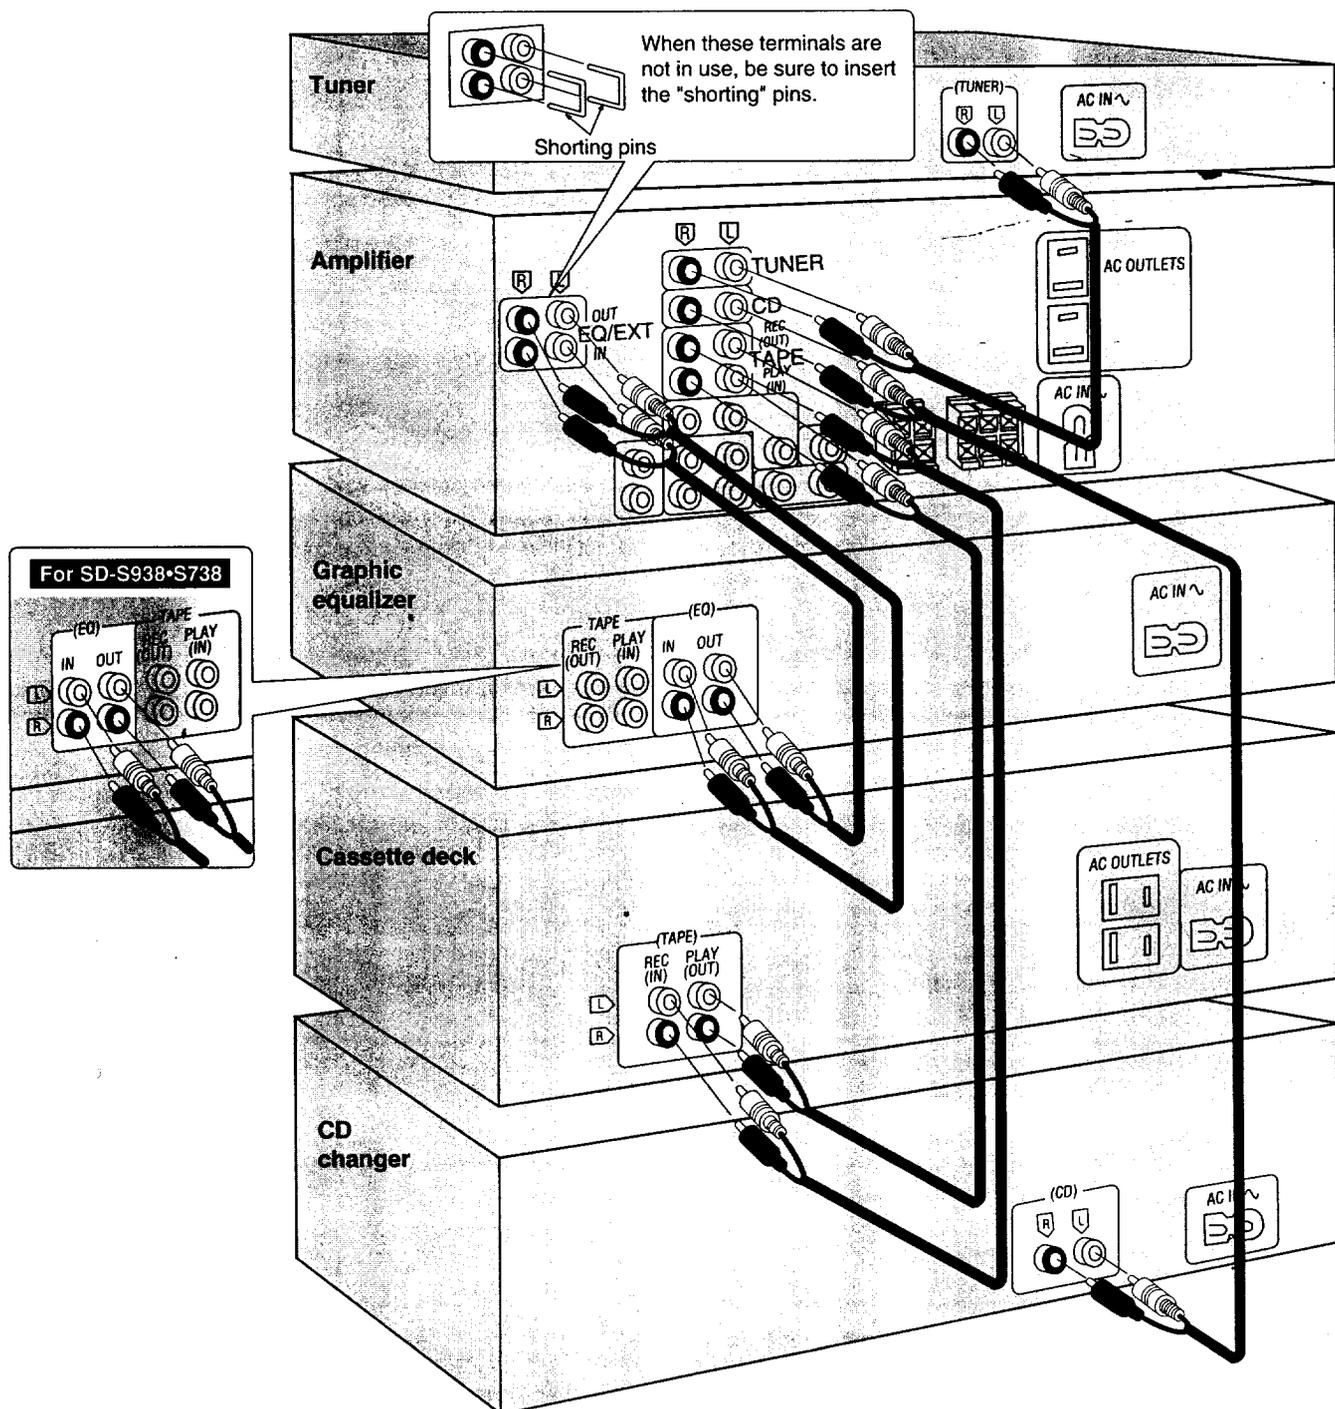


STEP 3

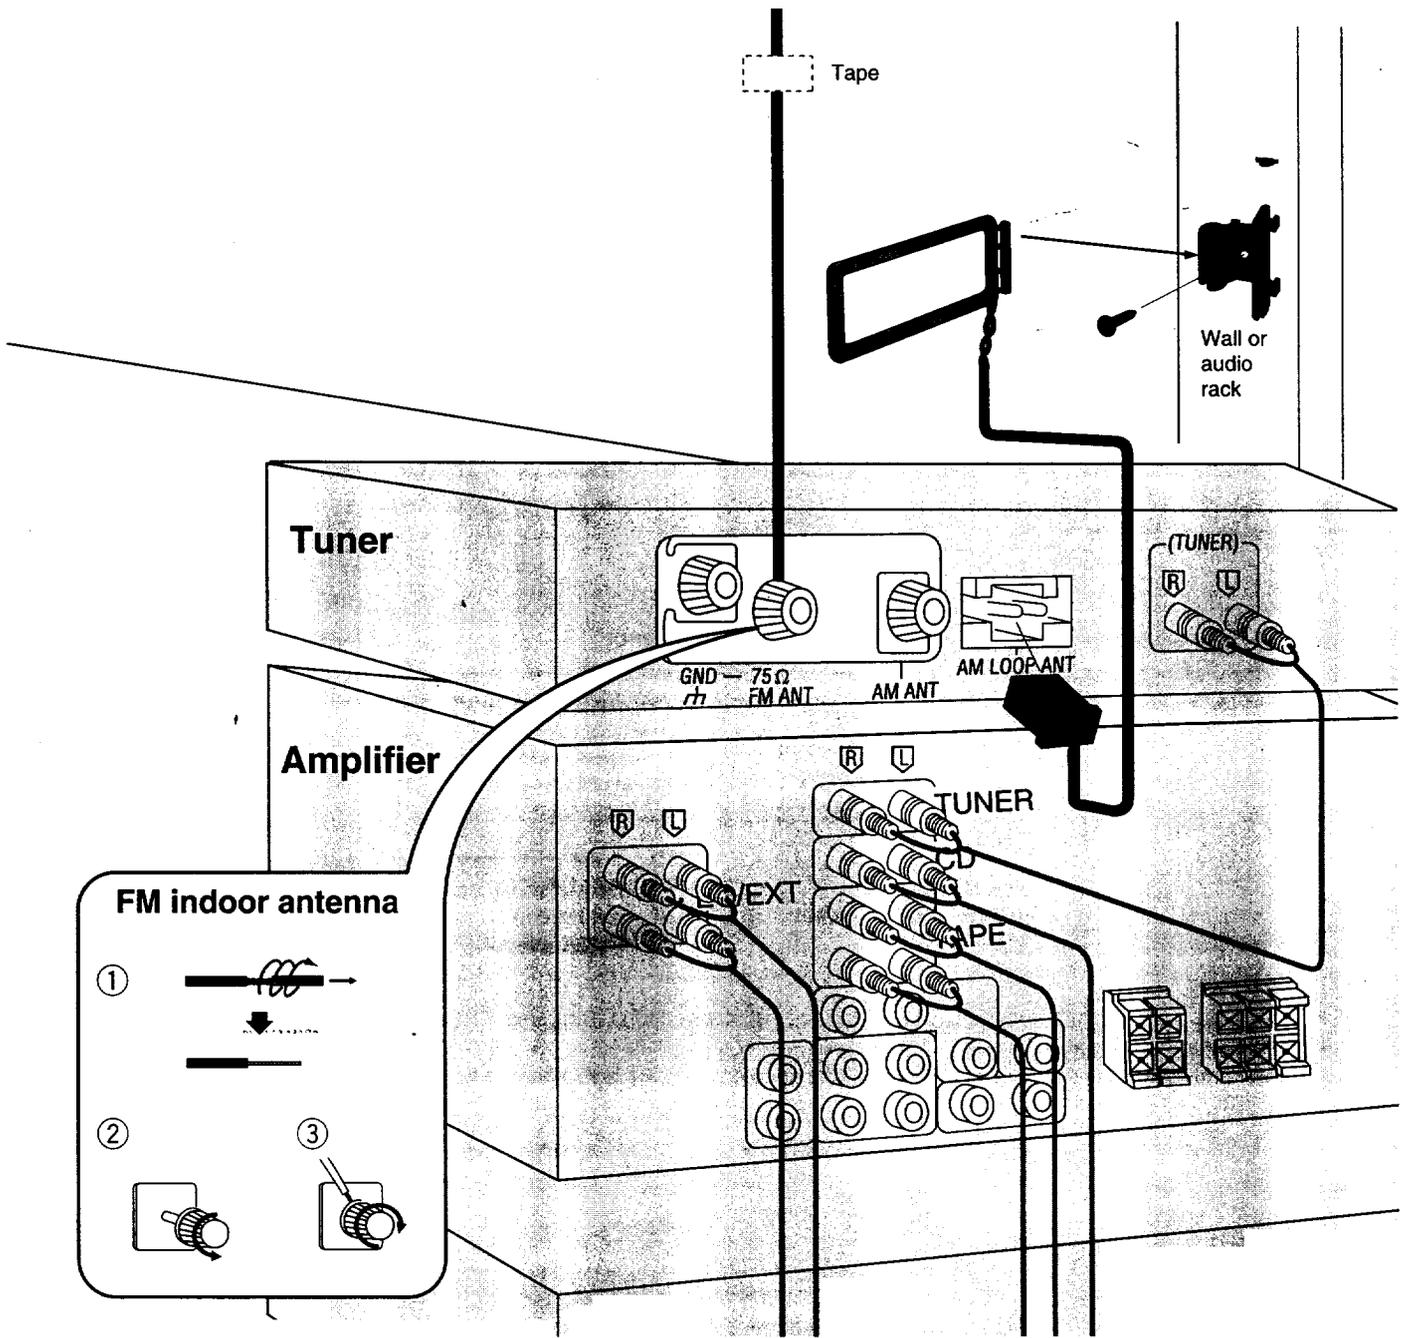

 STEP 4



 
Included with the front speakers (2 pcs.)




Included with the center speaker (1 pc.)




Included with the surround speakers (2 pcs.)

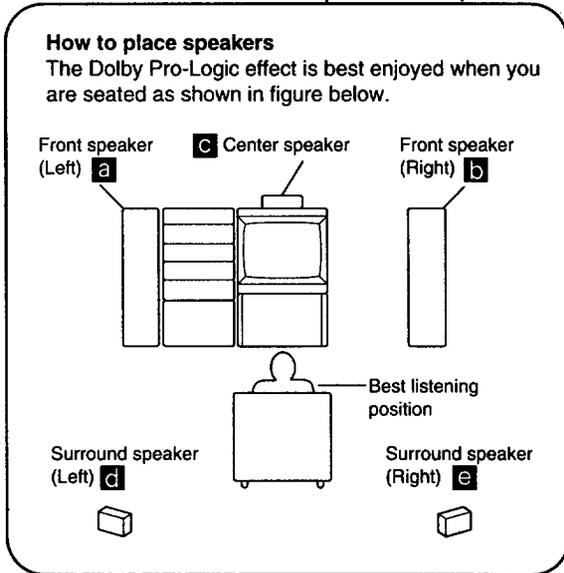

Front speakers

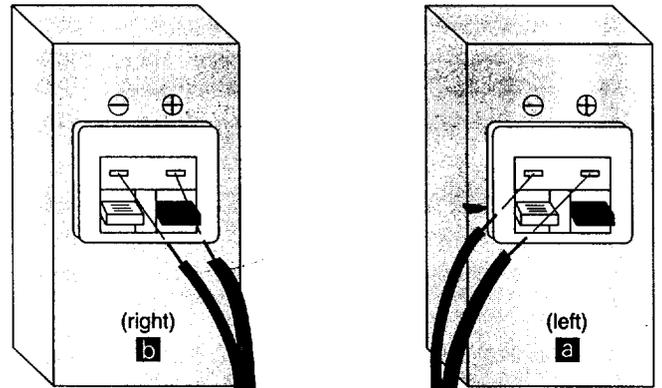


Amplifier

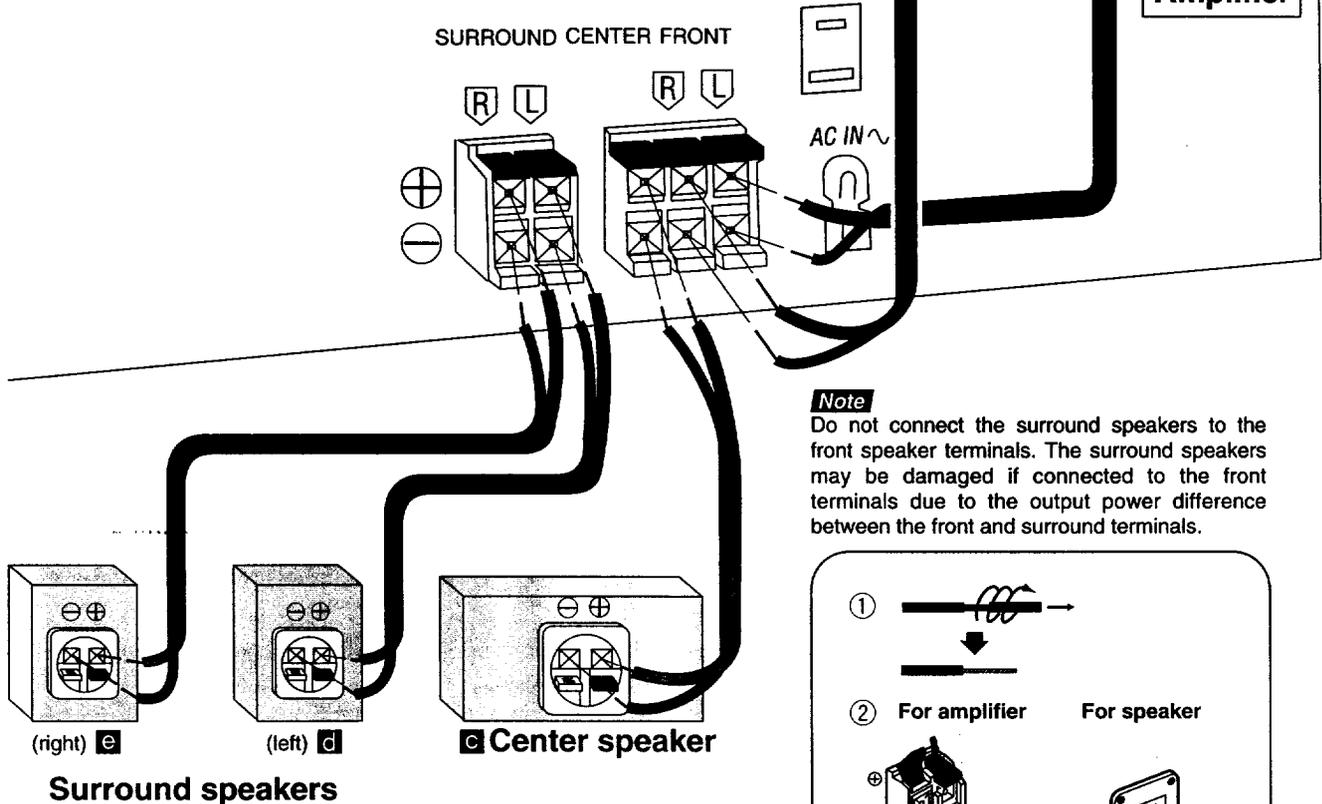


Note

Do not connect the surround speakers to the front speaker terminals. The surround speakers may be damaged if connected to the front terminals due to the output power difference between the front and surround terminals.

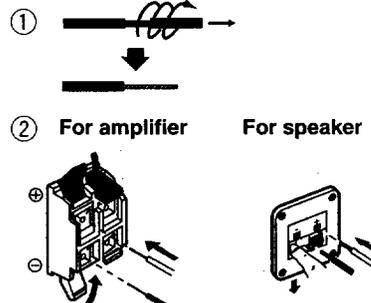

Note When connecting the speaker cables, be sure to only connect positive (+) wires to positive (+) terminals, and negative (-) wires to negative (-) terminals.


STEP 5

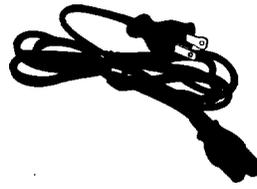


Long thick (2 pcs.)




Short thin (3 pcs.)

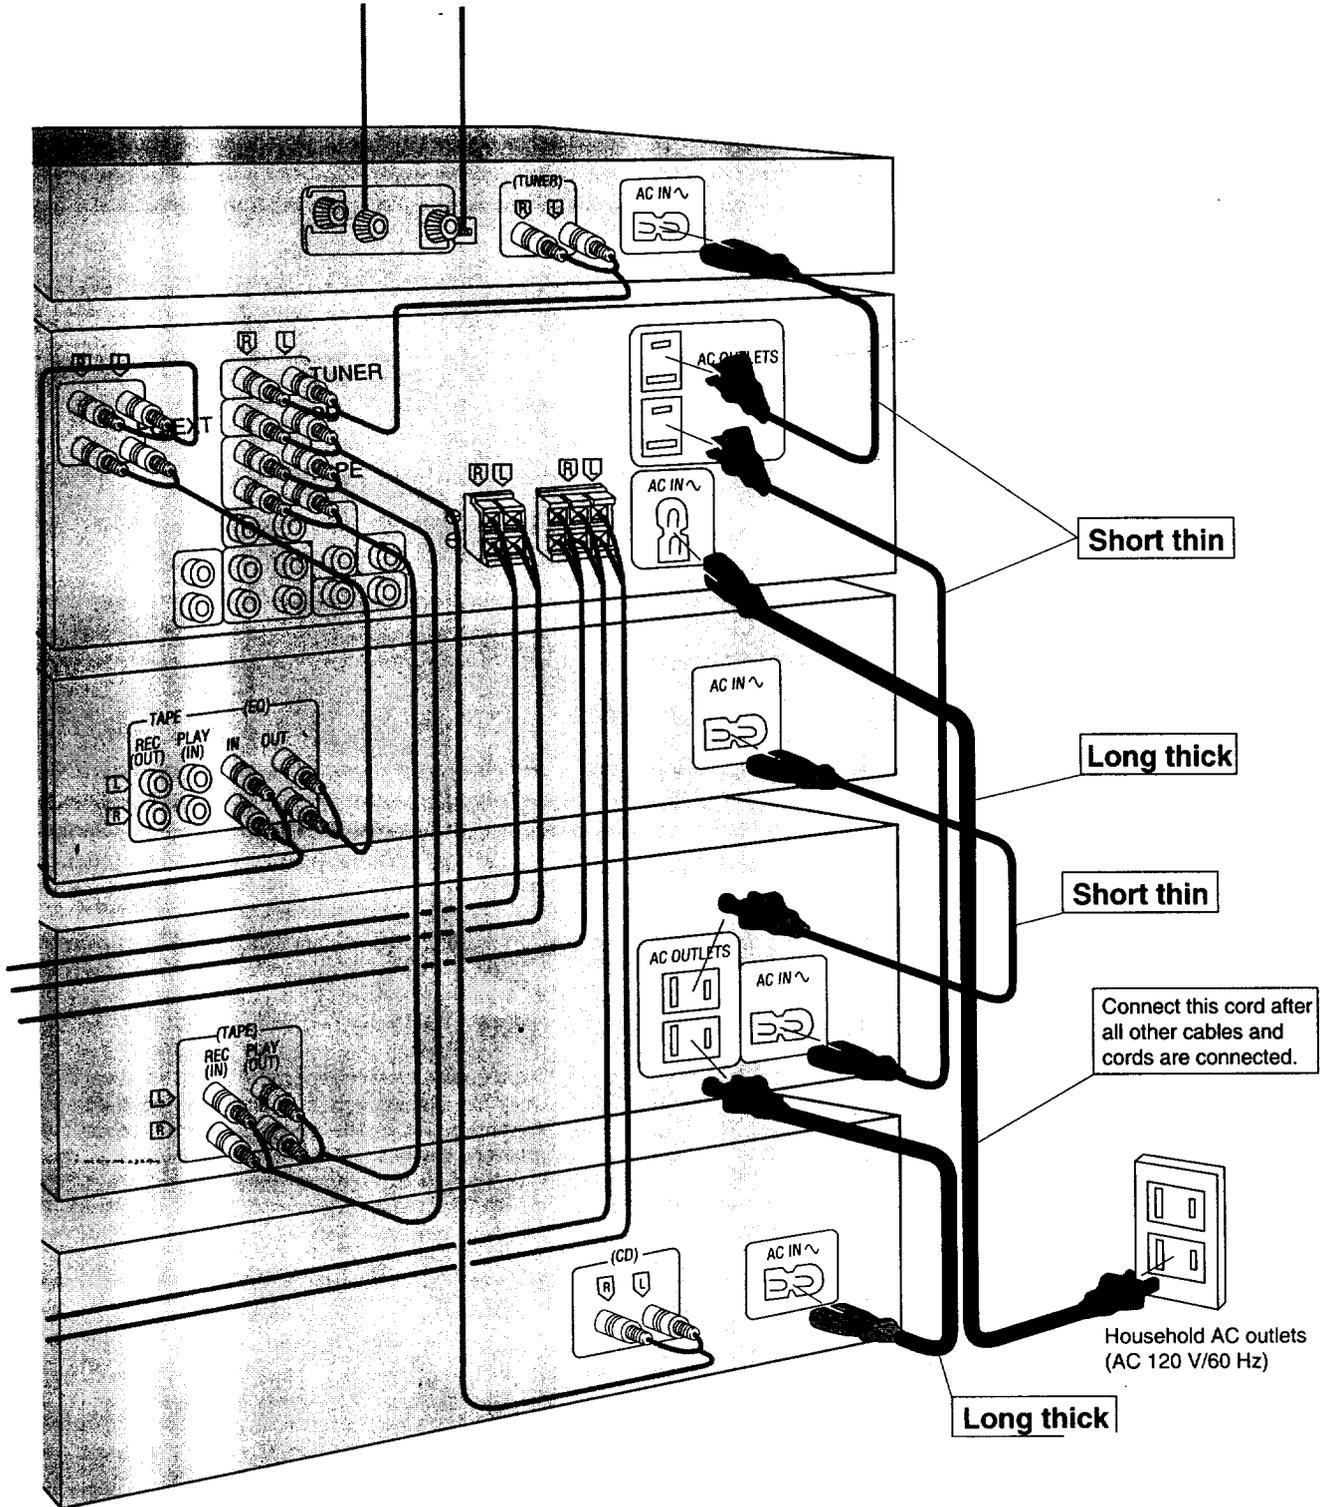

Check the installation by tuning in the radio first

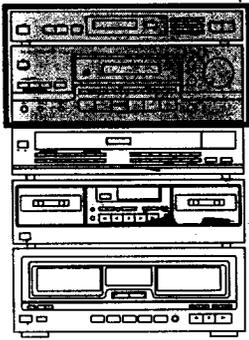

The explanation below is an example of operation in the case where the front speakers are being used for checking. If the center speaker and/or surround speakers are being used to enjoy the Dolby Pro Logic system or SFC function, refer to pages 38-41 of the operating instructions.

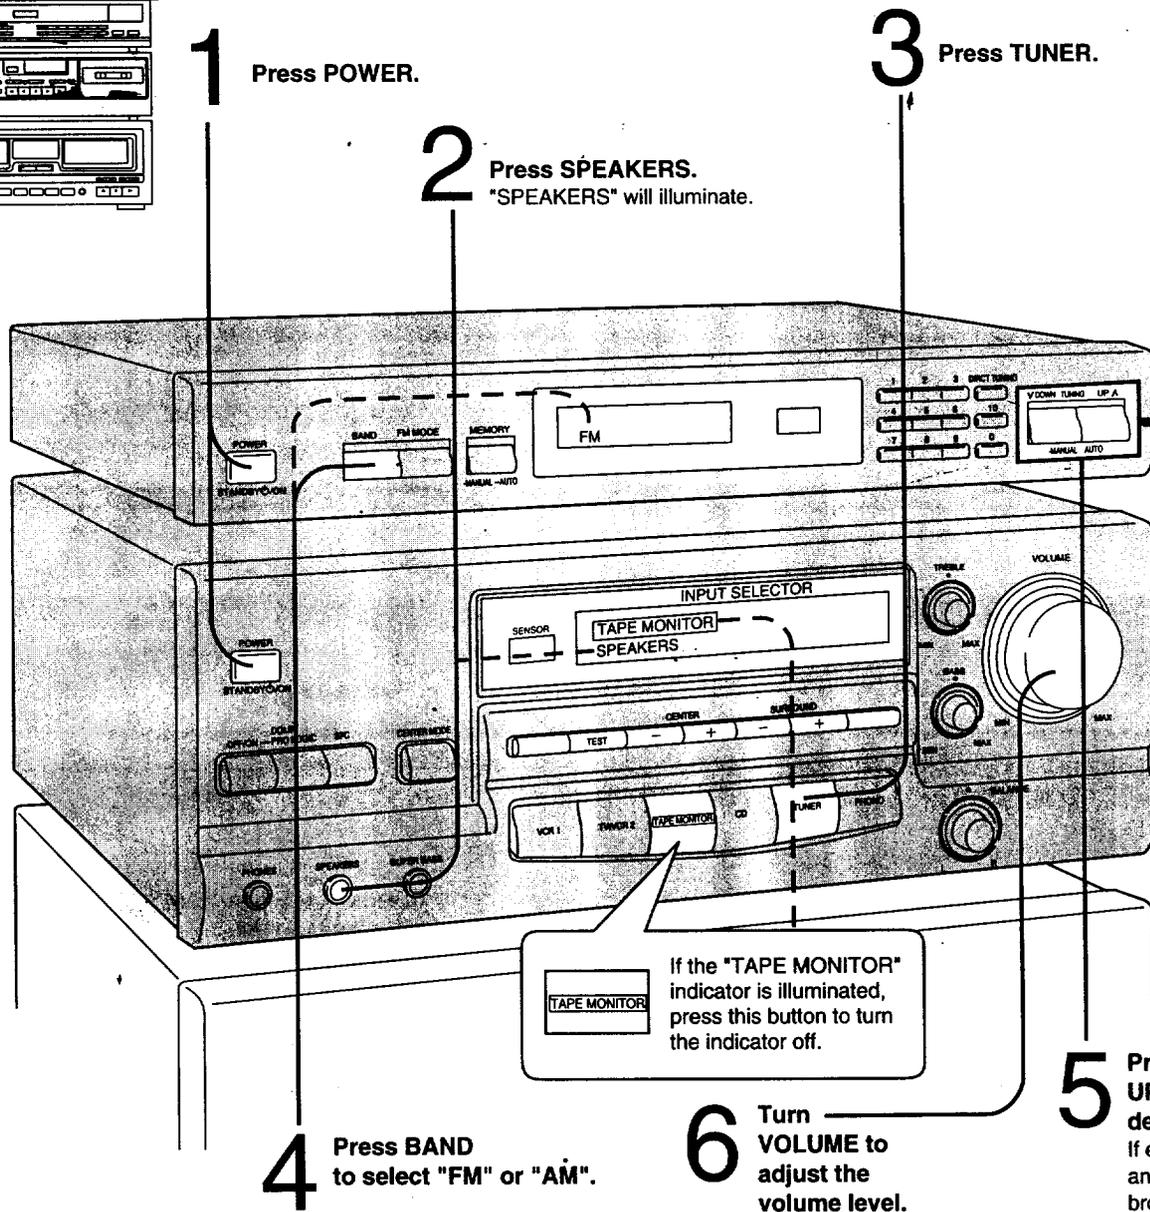

- If no sound is heard from speakers, please recheck all connections from step 2 to 5.
- When the unit is not used, turn the power off.
When left unused for long period of time the unit should be unplugged from the household AC outlet.

Other accessories



For the method of inserting the batteries, please refer to "Concerning the remote control" in the Operating Instructions.