

Trinitron Color TV

Operating Instructions

KV-27S22
KV-27V22
KV-29PS2
KV-29RS22
KV-29RS22C
KV-29SD2
KV-29V22M
KV-32S22

© 1997 by Sony Corporation

WARNING

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
ATTENTION RISQUE DE CHOC ELECTRIQUE, NE PAS OUVRIR		
PRECAUCION RIESGO DE CHOQUE ELECTRICO NO ABRIR		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same program can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the result of misuse.

Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

Note on cleaning the TV

Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzene, which might damage the finish of the cabinet.

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This document is for the remote control RM-Y135A. MODELS: KV-27S22, 27V22, 29PS2, 29RS22, 29RS22C, 29SD2, 29V22M, 32S22

Remote Control

In the instructions that follow, we will refer to the buttons on your remote control. Keep this flap unfolded and look to this page for reference.

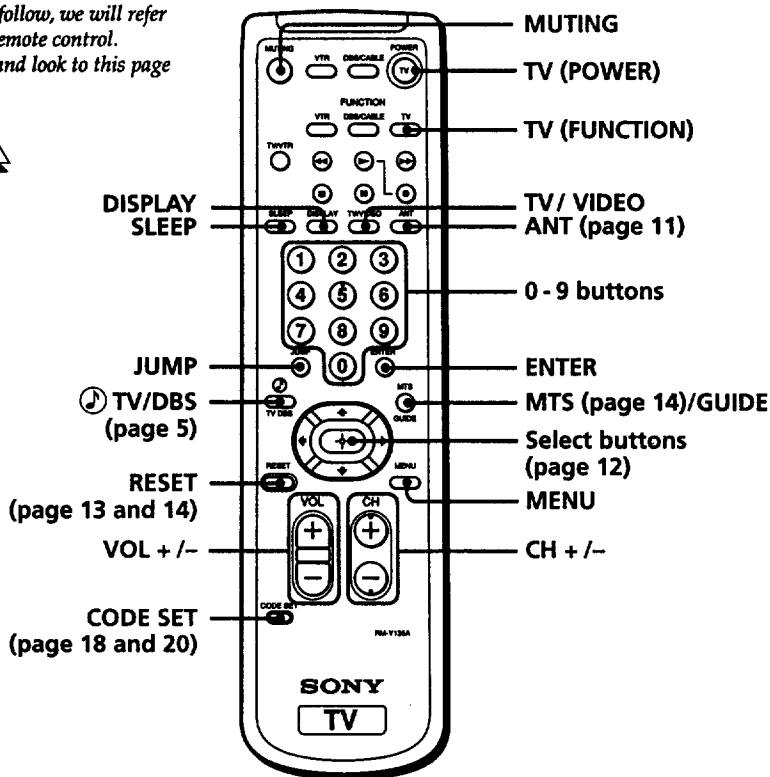

Getting to know the buttons on the remote control

Names of the buttons on the remote control are presented in different colors to represent the available functions.

Button color

Transparent Press to select the component you want to control; e.g. VTR (VCR), DBS (Direct Broadcast Satellite)/CABLE, or TV.

Green Buttons relevant to power operations, like turning the TV, DBS (Direct Broadcast Satellite)/CABLE, or VTR (VCR) on or off.

Label color

White TV/VTR (VCR)/DBS (Direct Broadcast Satellite)/CABLE operation buttons.

Blue DBS (Direct Broadcast Satellite) operation buttons.

For a detailed explanation of most buttons, see "Watching the TV" on page 10.

Table of Contents

Welcome!	1
Precautions	1
Using This Manual	1
<hr/>	
Connecting and Installing the TV	
Connector Types	2
Making Connections	2
Connecting directly to cable or an antenna	2
Cable or antenna	2
Connecting a cable box	2
Connecting an antenna/cable TV system with a VCR	3
Connecting to an S Video equipped VCR	3
Connecting a VCR and TV with a cable box	4
Connecting to an S Video equipped VCR with a cable box	4
Connecting a DBS receiver	5
Connecting a DBS receiver and a VCR	5
Connecting an audio system	6
Connecting a camcorder	6
Connecting two VCRs for tape editing using MONITOR OUT	7

Basic Set Up

Inserting batteries	8
Using the remote control Select buttons	8
Adjusting sliders	8
On Line Help/Instructions	8

Using your New TV

Setting up the TV automatically	9
Watching the TV	10

Adjusting your SET UP (menus)

Learning menu selection	12
Using the VIDEO menu	13
Using the AUDIO menu	14
Using the TIMER menu	15
Using the SET UP menu	16

Operating video equipment

Setting the manufacturer's code	18
---------------------------------------	----

Operating a cable box or DBS receiver

Programming the remote	20
------------------------------	----

Troubleshooting	21
Specifications	23
Index	24

Owner's Record

The model and serial numbers are located at the rear of the TV, below the Sony logo, on the sticker, and also on the TV box (white label). Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. **KV-** _____

Serial No. _____

Welcome!

Thank you for purchasing the Sony Trinitron® Color TV. This manual is written for the models listed below. Before reading, check the model number on the rear of your TV.

Model KV-27S22 is used for illustration purposes. The screens displayed are for model KV-29V22M. Differences in operation features are indicated in the text; for example, "KV-27S22 only".

Model Number	S Video	SRS	CLOCK/TIMER	LIGHT/SENSOR	CHANNEL FIX
KV-27S22			•		•
KV-29PS2	•	•	•	•	•
KV-29RS22C			•		•
KV-29V22M	•	•	•	•	•

Precautions

Safety

- Operate the TV only on 120 V AC (except KV-29RS22C).
- Operate the TV only on 220 V AC (KV-29RS22C only).
- The plug is designed, for safety purposes, to fit in the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer (except KV-29RS22C).
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified personnel before operating it further.
- If you will not be using the TV for several days, disconnect power by pulling the plug itself. Never pull on the cord.

For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS".

Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

Using This Manual

This manual is divided into four major sections. We recommend that you carefully review the contents of each section in the order provided to ensure that you fully understand the operation of your new TV.

1 Connecting and Installing the TV.

This section will guide you through your initial set up. It will show you how to connect your new components, connect to your antenna or cable, and connect any accessories.

2 Basic Set Up.

This section will teach you the basic skills needed to operate your new TV. It will show you how to operate special functions of the remote control.

3 Using your New TV.

This section will show you how to begin using your new TV. It will show you how to use the AUTO SET UP feature, and how to use your remote control's features.

4 Adjusting your Set Up (menus).

This section will teach you how to access on-screen menus and adjust your TV's settings.

Instructions in this manual are written for the remote control. Similar controls may be found on the TV console.

Connecting and Installing the TV

Connector Types

You may find it necessary to use some of the following connector types during set up.

Coaxial Cable

Standard TV Cable and Antenna connector

Plug Type

 


Screw-on Type




S Video Cable

High quality Video connector for enhanced picture quality

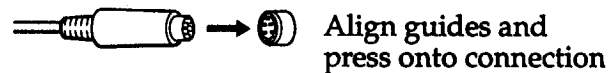

Audio/Video Cable

Conventional Audio/Video cable

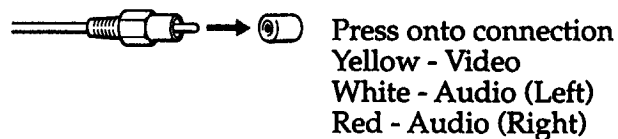

Making Connections

 
For best picture quality, a cable TV system or outdoor antenna is recommended.

Connecting directly to cable or an antenna

The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**).


A

- VHF only or VHF/UHF or Cable

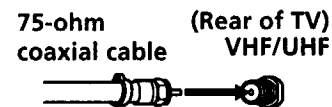


B

- VHF only or UHF only or VHF/UHF

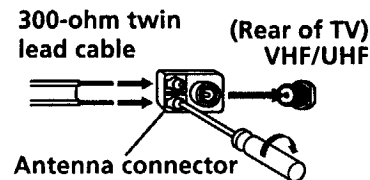


C

- VHF 75-ohm coaxial cable
- and
- UHF 300-ohm twin lead cable

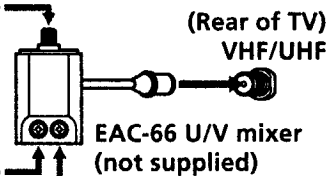


Cable or antenna

 This is the most simple connection. Connection is made directly from the cable or antenna to the TV.

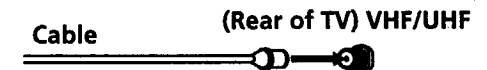

Connecting a cable box

Some pay cable TV systems use scrambled or encoded signals that require a cable box* to view all channels.

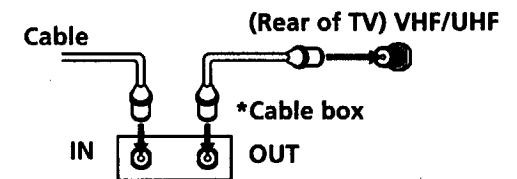

* Your Sony remote control can be programmed to operate your cable box (see page 18).


Note:

- If you will be controlling all channel selections through your cable box, you should consider using the CHANNEL FIX feature discussed on page 16.

Connecting an antenna/cable TV system with a VCR

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV (Yellow-VIDEO, White-AUDIO Left, Red-AUDIO Right).*
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.

Disconnect all power sources before making any connections.
(Rear of TV)

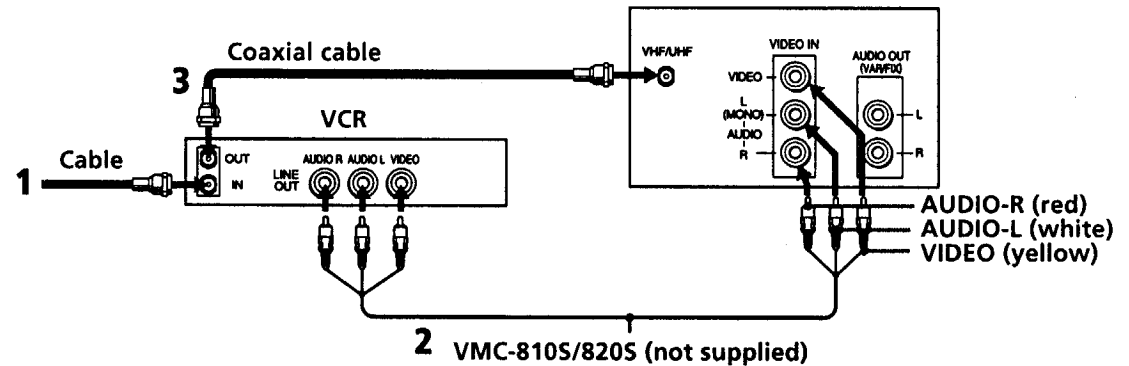

Connecting to an S Video equipped VCR (for optimum picture quality)


- KV-27V22, 29V22M, 32S22 only

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using AUDIO connectors, connect AUDIO OUT on your VCR to AUDIO IN on your TV (White-AUDIO Left, Red-AUDIO Right).*
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.
- 4 Using an S VIDEO connector, connect S VIDEO on your VCR to S VIDEO on your TV.

* If you are connecting a monaural VCR, connect only the single audio output to the left input on your TV.

Note on DVD Connection:


- For the best picture quality, connect the DVD player directly to the TV. Refer to your DVD manual for detailed connection information.

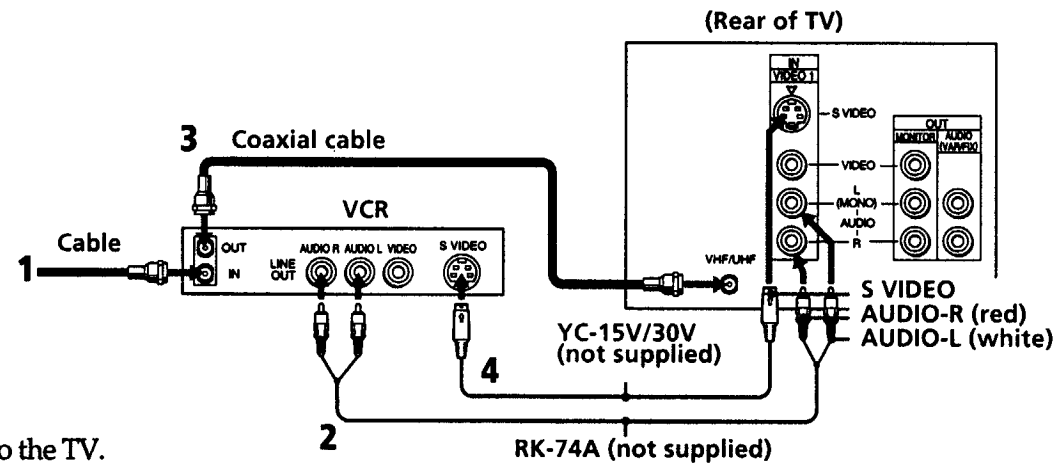

Connecting and Installing the TV (continued)


Connecting a VCR and TV with a cable box

- 1 Connect the single (input) jack of the Splitter to your incoming cable connection, and connect the other two (output) jacks (using coaxial cable) to IN on your cable box and VHF/UHF on your TV.
- 2 Using a coaxial connector, connect OUT on your cable box to IN on your VCR.
- 3 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV (Yellow-VIDEO, White-AUDIO Left, Red-AUDIO Right).

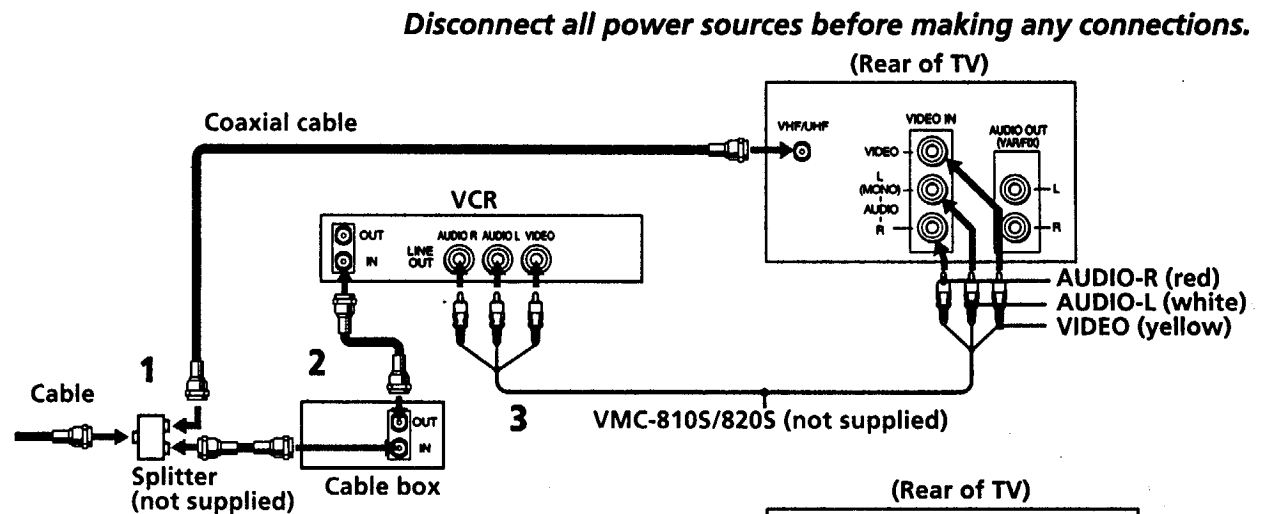

Connecting to an S Video equipped VCR with a cable box (for optimum picture quality)

- KV-27V22, 29V22M, 32S22 only
- 1-2 Perform as described above.
 - 3 Using AUDIO connectors, connect AUDIO OUT on your VCR to AUDIO IN on your TV (White-AUDIO Left, Red-AUDIO Right).
 - 4 Using an S Video connector, connect S VIDEO on your VCR to S VIDEO on your TV.

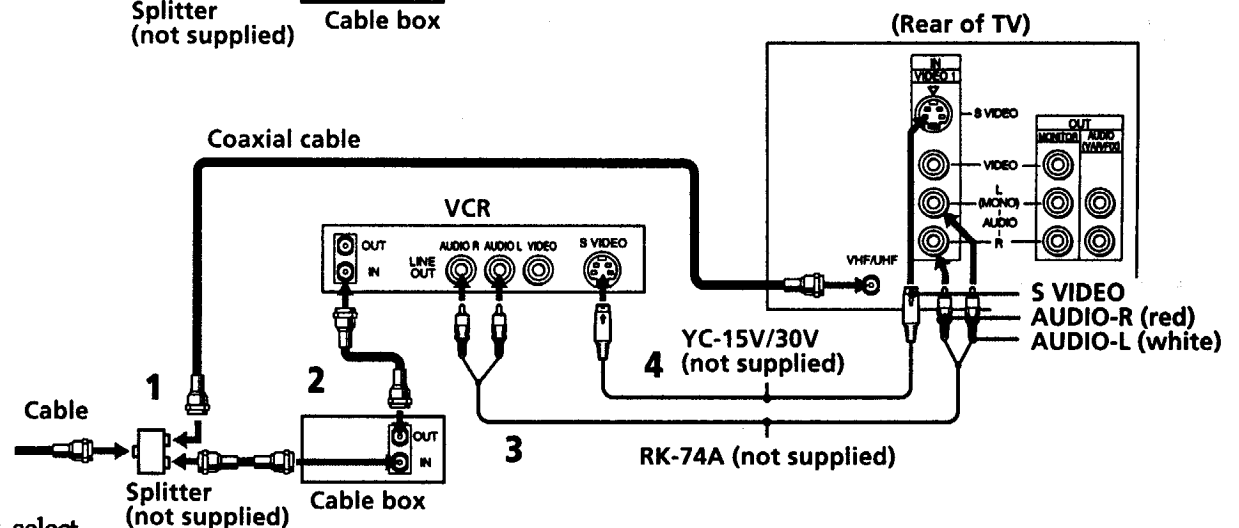


Note:

- To view scrambled channels through your cable box, select VIDEO 1 by pressing TV/VIDEO on the remote control.

Connecting a DBS (Direct Broadcast Satellite) receiver


- 1 Connect the cable from your satellite antenna to your DBS receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF on your TV.
- 3 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your DBS receiver to AUDIO and VIDEO IN on your TV.

For the highest picture quality, use S VIDEO instead of the yellow AUDIO/VIDEO cable. (KV-27V22, 29V22M, 32S22 only) See your DBS manual for more information.

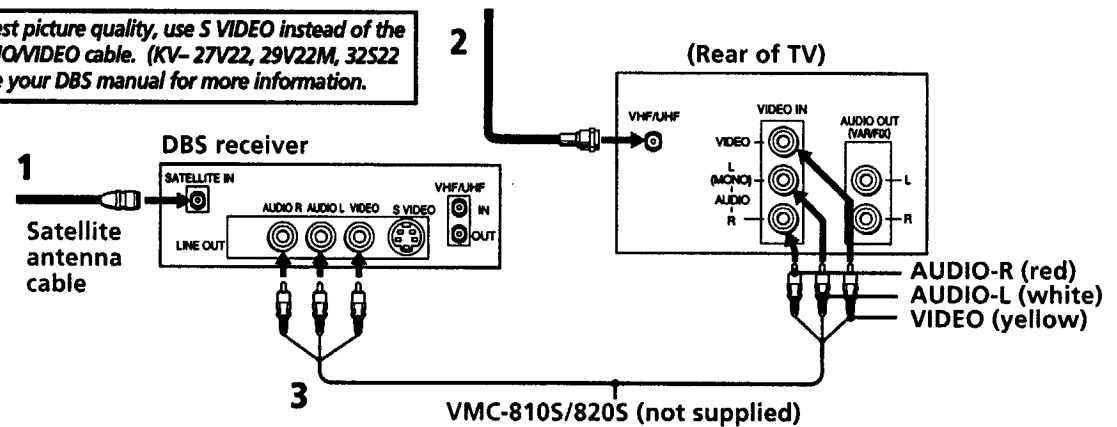

Connecting a DBS (Direct Broadcast Satellite) receiver and a VCR

- 1 Connect the cable from your satellite antenna to your DBS receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF-IN on your VCR.
- 3 Using a coaxial connector, connect VHF/UHF-OUT on your VCR to VHF/UHF on your TV.
- 4 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your DBS receiver to AUDIO and VIDEO IN on your VCR.
- 5 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

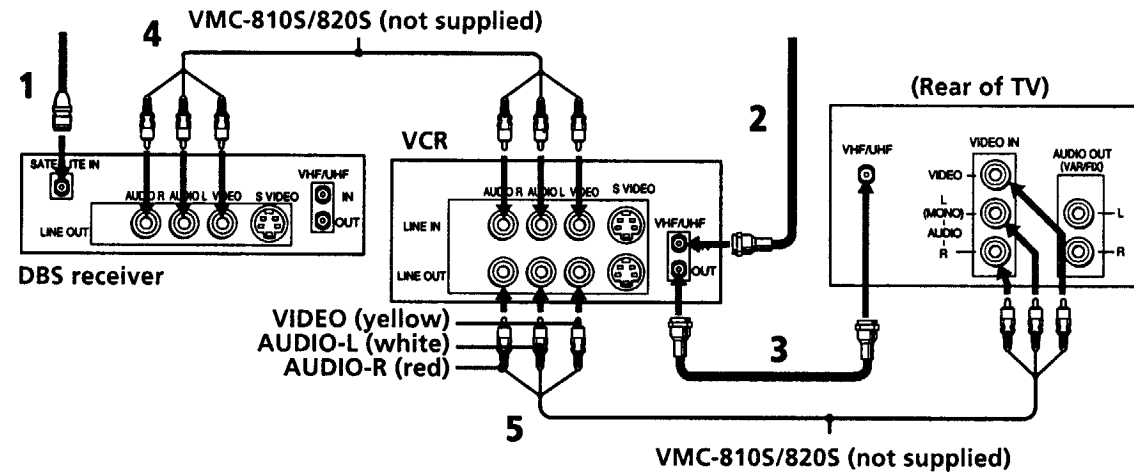

Note:

- To view input from the DBS or VCR, select VIDEO 1 by pressing TV/VIDEO on the remote control.


Connecting and Installing the TV (continued)

Connecting an audio system

For greater viewing pleasure, integrate your home stereo into the system.

- 1 Using AUDIO connectors, connect AUDIO OUT on your TV to one of the unused Line inputs (e.g. Tape-2, etc.) on your stereo (White-AUDIO Left, Red-AUDIO Right).
- 2 Set your stereo to the chosen Line input and refer to page 14 of this manual for additional audio setup instructions.

Disconnect all power sources before making any connections.

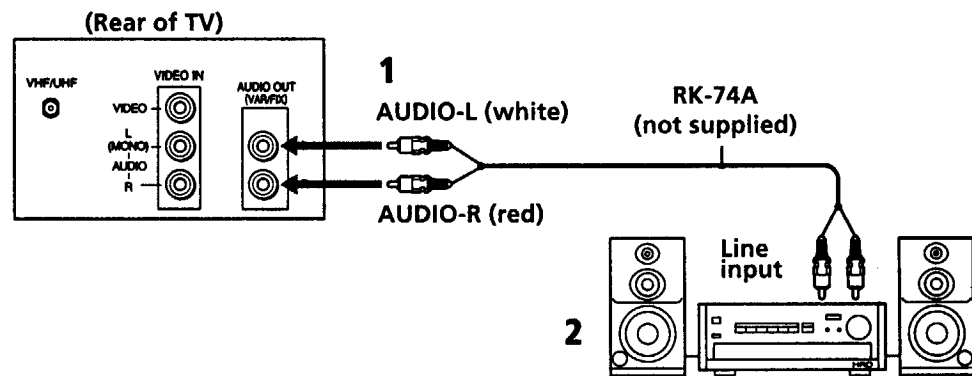

Connecting a camcorder

- KV-27V22, 29V22M only


This connection is convenient for viewing a picture directly from your camcorder.

Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on the front panel of your TV (Yellow-VIDEO, White-AUDIO Left, Red-AUDIO Right).

Note:

- If you are connecting a monoaural camcorder, connect only the single audio output to the left input on your TV.

If you have an S video equipped camcorder, you can use an S video connection for optimum picture quality. (KV-27V22, 29V22M only)

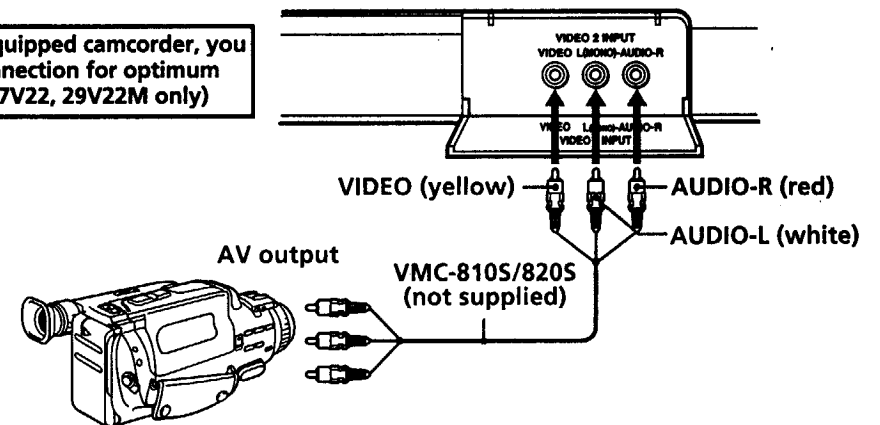


Disconnect all power sources before making any connections.

Connecting two VCRs for tape editing using MONITOR OUT

1 KV-27V22, 29V22M only


MONITOR OUT gives you the ability to use a second VCR to record a program being played by the primary VCR or to perform tape editing and dubbing.

- 1** Connect the VCR intended for playback using the setup instructions on page 3 of this manual.
- 2** Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO IN on your VCR intended for recording to MONITOR AUDIO and VIDEO OUT on your TV.

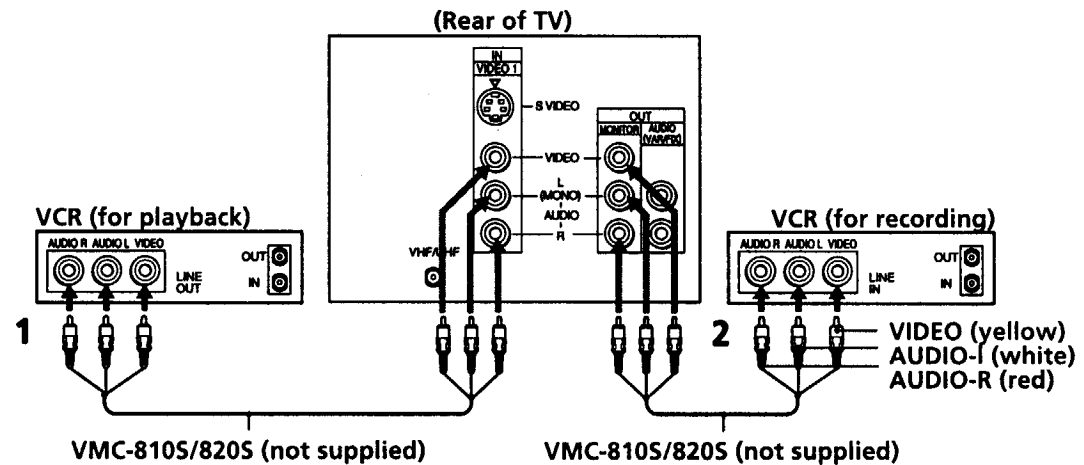

Notes:


- Do not change the input signal while editing through MONITOR OUT.
- When connecting a single VCR to the TV; if VCR LINE OUT is connected to TV VIDEO IN, *do not* connect the TV MONITOR OUT jacks to the VCR LINE INPUT (see right). Doing so will cause program interference and other viewing problems.

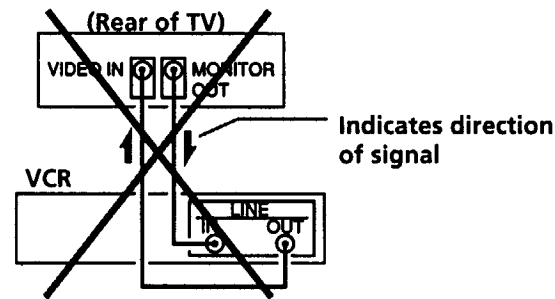

Basic Set up

Inserting batteries


Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the battery compartment.

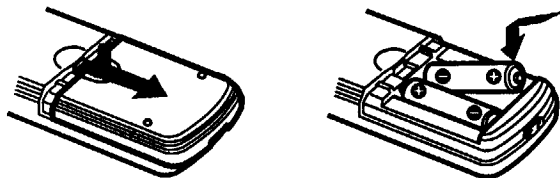

Notes:

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- Your remote control can be programmed to operate most video equipment. See page 18.

Using the remote control Select buttons

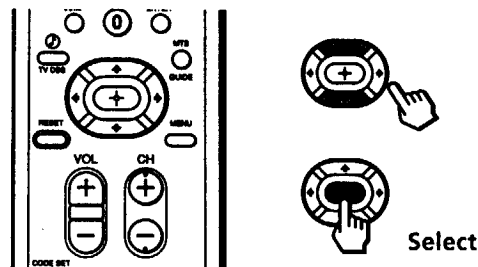

The supplied remote control has select buttons which allow for movement of the on-screen selector in four directions. Pressing on the edge of the select buttons will cause the selector to *move* in the selected direction. Pressing the center of the select buttons “⊕” will *activate* the selected item.

Adjusting sliders

When menu items present a slider (▬ or ⇄), use the select buttons (⬆ or ⬇) to adjust the setting.

On Line Help/Instructions

Several menu windows will provide prompts and instructions to assist you in navigating through the different functions. *When presented, use these to supplement the instructions in this manual.*

Using your New TV

Setting up the TV automatically

The EASY SETUP GUIDE feature will allow you to set the on-screen language and set all receivable channels. The EASY SETUP GUIDE screen will appear every time you turn on the TV until you perform AUTO PROGRAM.

The EASY SETUP GUIDE feature does not apply for installations that use a cable box for all channel selection.

To set up the TV manually, refer to "Using the SET UP menu" on page 16.


Tips

- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels are broadcasting and receivable.
- After using EASY SETUP GUIDE you will still have the option of adjusting any of the system settings, like erasing channels, through the SET UP menu (page 16).
- The TV must be set to TV input to execute AUTO PROGRAM. Press ANT until the channel number appears.


Using the buttons on the front of the TV:




- 1 Press POWER to turn on the TV.
The EASY SETUP GUIDE screen appears.

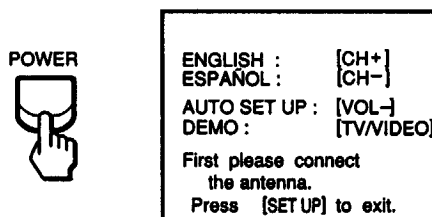

- 2 (Except Canadian models)
Press CHANNEL + to select English screens or CHANNEL - to select Spanish screens.

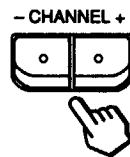

- 3 Press VOLUME - to continue or TV/VIDEO for a DEMO of functions and menus.

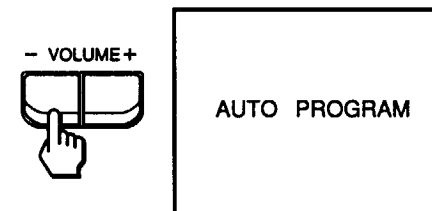

"AUTO PROGRAM" appears and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, the lowest numbered channel is displayed. If the TV receives cable TV channels, CABLE is set to ON automatically.

To perform AUTO SET UP again

- Press SET UP.
- Press CHANNEL + or CHANNEL - to select a language.
- Press Volume - to restore factory settings ("CONTINUE TO AUTO PROGRAM?" will appear on the screen. Press CH+ to execute or CH- to exit).
- Press SET UP to exit.

Note:

- When you perform AUTO PROGRAM, your CHANNEL FIX, TIMER, and CHANNEL BLOCK settings will be erased.

■ ■ ■ Using your New TV (continued)

Watching the TV

All of the TV features can be accessed via the remote control. The following chart will explain the function of the buttons found on your remote control.




**REFER TO THE
ILLUSTRATION OF THE
REMOTE CONTROL ON THE
INSIDE FRONT COVER OF
THIS MANUAL AS YOU
REVIEW THIS CHART**

TV (FUNCTION)	Activates the remote control for use with the TV.
TV POWER	Turns the TV on and off. If "VIDEO" appears on the screen, press TV/VIDEO or ANT so that a channel number appears.
0 - 9	Use for direct channel selection. Press 0-9 to select a channel (for example, to select channel 10, press 1 and 0), the channel will change after 2 seconds, or you can press ENTER for immediate selection.
CH +/-	Press to scan through the channels (+ up or - down).
VOL +/-	Press to adjust the volume (+ up or - down).
JUMP	Press to alternate or <i>jump</i> back and forth between two channels. You can only jump between the last two channels that have been selected with the 0-9 keys.
MUTING	Press to mute the sound ("MUTING" will appear on the screen). Press again or press VOL + to restore sound.
SLEEP	Press repeatedly until the TV displays the approximate time in minutes (30, 60, or 90) that you want the TV to remain on before shutting off automatically. Cancel by pressing until "SLEEP OFF" appears.

DISPLAY	<p>Press repeatedly to step through available displays:</p> <p>Status Channel number, current time, channel caption (if set), and MTS mode (if SAP is selected) are displayed. SAP indication disappears after three seconds.</p> <p>XDS XDS (Extended Data Service) shows a network name, program name, program type, program length, call letters, and time of the show if the broadcaster offers this service.</p> <p>Caption Vision Caption Vision will be displayed on the screen if the broadcaster offers this service. (see right)</p> <p>To cancel the display, press DISPLAY repeatedly until "DISPLAY OFF" appears. "DISPLAY OFF" disappears after three seconds.</p>
TV/VIDEO	<p>Press repeatedly to step through available video inputs:</p> <p>TV and Video 1 (KV-27S22, 29PS2, 29RS22, 29RS22C, 29SD2, 32S22 only)</p> <p>TV, Video 1 and Video 2 (KV-27V22, 29V22M only)</p>
ANT	<p>Press to change the input from VIDEO to regular (ANT) mode.</p>
MTS/GUIDE	<p>Press this button to cycle through the Multi-channel TV Sound (MTS) options. (page 14)</p>

CAPTION VISION

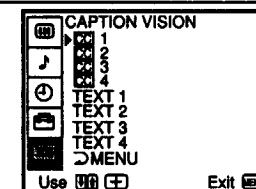

Some programs are broadcast with Caption Vision. To display Caption Vision, select either CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3, or TEXT4 from the menu, then press DISPLAY until Caption Vision is displayed.

CC1, CC2, CC3, or CC4 shows you a caption, that is, a printed version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs) TEXT1, TEXT2, TEXT3, or TEXT4 shows you text, that is, information presented using either half or the whole screen. It is not usually related to the program.

Notes:


- Poor reception of TV programs can cause errors in Caption Vision and XDS. Captions may appear with a white box or other errors instead of intended text.
- XDS, Caption Vision, and the status display cannot be used at the same time.

Adjusting your SET UP (menus)


Learning menu selection

Use the MENU button to access a menu and use the Select buttons to alter settings. Use the following example to learn how to modify settings.


- 1 Press the MENU button.
The main menu appears.

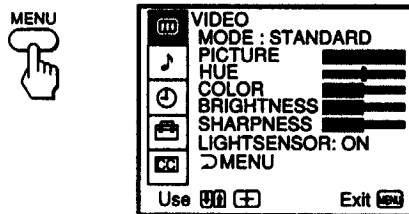


- 2 Press the select buttons (▲ or ▼) to highlight the desired menu and press (+) to activate it.

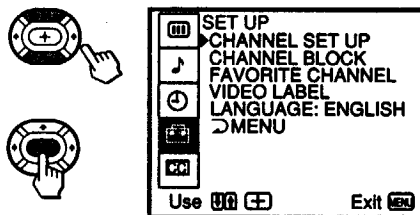


- 3 Press the select buttons (▲ or ▼) to select the desired option.

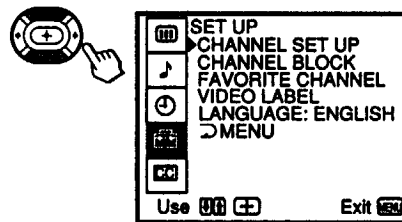


- 4 Press (+).
Options for your selection will be displayed.

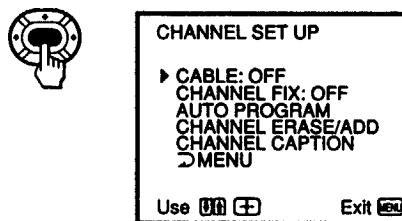

- 5 Make your selection by pressing ▲ or ▼, and press (+) to activate it.
The previous screen will reappear.

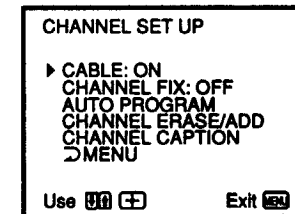


When you are done with changes to the selected menu, choose MENU to return to the main menu. Once you have completed all menu corrections, press MENU on the remote control to exit the menu screens.

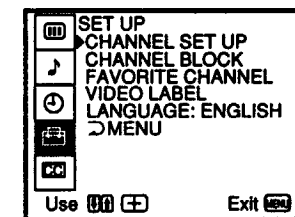

Note:


- Pressing MENU on the remote control will allow you to exit from the menus.

III Using the VIDEO menu

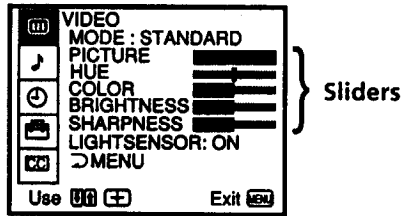

For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 12.

To select the VIDEO III menu:

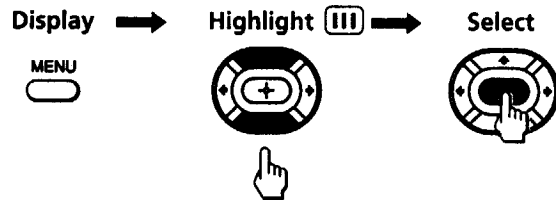


To restore the factory settings

Press RESET on the remote control while the VIDEO menu is displayed.

MODE <i>Customized picture viewing</i>	STANDARD: Select to display a standard picture. MOVIE: Select to display a finely detailed picture. SPORTS: Select to display a vivid, bright picture.
PICTURE <i>Picture Adjustment</i>	Adjust slider left (cursor down) to decrease picture contrast and soften the color. Adjust slider right (cursor up) to increase picture contrast and create more vivid color.
HUE <i>Picture Adjustment</i>	Adjust slider left (cursor down) to decrease the green tones. Adjust slider right (cursor up) to increase the green tones.
COLOR <i>Picture Adjustment</i>	Adjust slider left (cursor down) to decrease color intensity. Adjust slider right (cursor up) to increase color intensity.
BRIGHTNESS <i>Picture Adjustment</i>	Adjust slider left (cursor down) to darken the picture. Adjust slider right (cursor up) to brighten the picture.
SHARPNESS <i>Picture Adjustment</i>	Adjust slider left (cursor down) to soften the picture. Adjust slider right (cursor up) to sharpen the picture.
LIGHTSENSOR <i>Picture Adjustment</i>	(KV-27V22, 29V22M only) ON: TV automatically adjusts the brightness of the picture according to the brightness of the room. OFF: Brightness remains at preset value.


Adjusting your SET UP (menus) (continued)

Using the AUDIO menu

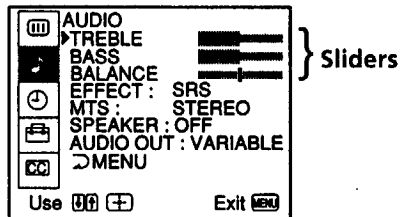

For detailed information on using the remote to modify menu settings, refer to “Learning menu selection” on page 12.

To select the AUDIO menu:

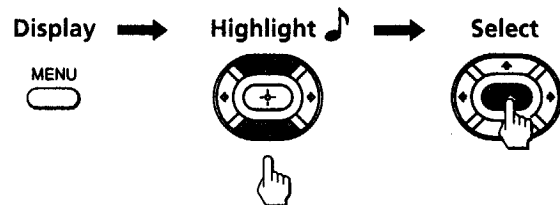

To restore the factory settings


Press RESET on the remote control while the AUDIO menu is displayed.

Tip

Press for direct selection of an EFFECT setting.

TREBLE <i>Sound Adjustment</i>	Adjust slider left (cursor down) to decrease high pitched sounds. Adjust slider right (cursor up) to increase high pitched sounds.
BASS <i>Sound Adjustment</i>	Adjust slider left (cursor down) to decrease low pitched sounds. Adjust slider right (cursor up) to increase low pitched sounds.
BALANCE <i>Sound Adjustment</i>	Adjust slider left (cursor down) to emphasize left speaker volume. Adjust slider right (cursor up) to emphasize right speaker volume.
EFFECT <i>Customize sound effect based on the program's audio type.</i>	SURROUND: Simulates theater quality sound (only effective for stereo programs). (KV-27S22, 29PS2, 29RS22, 29RS22C, 29SD2, 32S22 only) SRS: Produces a dynamic three dimensional sound for stereo or encoded audio signals. (KV-27V22, 29V22M only) SIMULATED: Adds a surround-like effect to mono programs. (KV-27V22, 29V22M only)
MTS <i>Enjoy stereo, bilingual and mono programs.</i>	STEREO: Select for stereo reception when viewing a program broadcast in stereo. SAP: Select to listen to bilingual broadcast. (non-SAP programs will be muted when this feature is selected) MONO: Select for mono reception. (use to reduce noise during stereo broadcasts) Quick MTS access: Press MTS on your remote to cycle through the MTS options as follows: (STEREO → SAP → MONO → STEREO)
SPEAKER <i>Custom selection of audio output source.</i>	ON: Select to listen to the sound from the TV speakers and a separate stereo system. OFF: Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.
AUDIO OUT <i>Easy control of volume adjustments.</i>	AUDIO OUT can only be set when speakers are set to OFF. VARIABLE: Sound output varies according to the TV settings. Volume, Bass, Treble, and Balance are adjusted through the TV. Useful when you want to use your remote to control the output of a separate audio system. FIXED: Sound output is held at a fixed level. Volume, Bass, Treble, and Balance are fixed to the factory settings. Volume adjustments are made through your stereo.


⌚ Using the **TIMER** menu

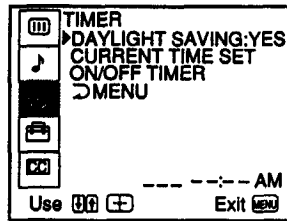

After setting the clock you can use the timer to turn the TV on and off.

For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 12.

To select the **TIMER** ⌚ menu:

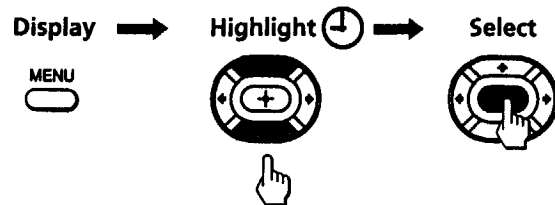

Tip 💡


Set daylight saving time before setting the clock. Any loss of power will cause these settings to be erased.

<p>DAYLIGHT SAVING <i>Automatically adjusts the time.</i></p>	<p>Spring: Select YES to compensate for Daylight Saving Time. The current time automatically moves ahead one hour. Fall: Select NO at the end of Daylight Saving Time. The current time moves back one hour.</p>
<p>CURRENT TIME SET <i>Necessary for the TIMER.</i></p>	<p>CURRENT TIME SET window will appear.</p> <ol style="list-style-type: none"> 1 Press ▲ or ▼ on the select buttons until the current day (MON-SUN) is displayed. Press (+) to select. 2 Press ▲ or ▼ on the select buttons until the current hour (01-12) and AM/PM is displayed. Press (+) to select. 3 Press ▲ or ▼ on the select buttons until the current minute (00-59) is displayed. 4 Press (+). <p>The Clock has now started. Press MENU to exit.</p>
<p>ON/OFF TIMER <i>Wake up or scheduled viewing.</i></p>	<p>ON/OFF TIMER window will appear.</p> <ol style="list-style-type: none"> 1 Press ▲ or ▼ on the select buttons until the desired day (MON-SUN) or range of days (EVERY SUN-SAT or EVERY MON-FRI) is displayed. Press (+) to select. 2 Indicate the time (hours then minutes) that you want the TV to turn on by pressing ▲ or ▼ and then (+). 3 Set the time duration (maximum of 6 hours) by pressing ▲ or ▼ and then (+). <p>TO CANCEL THE TIMER FUNCTION, PRESS RESET.</p> <ol style="list-style-type: none"> 4 Press ▲ or ▼ on the select buttons to select the desired channel. Press (+) to select. <p>The timer is now set. The TIMER indicator on your TV will be lit. Press MENU to exit. When you perform AUTO PROGRAM, all TIMER settings will be erased.</p>

Adjusting your SET UP (menus) (continued)




Using the SET UP menu

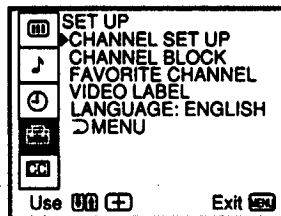

For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 12.

To select the SET UP menu:

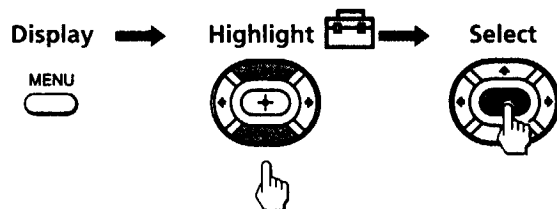

If any menu items are "grayed out", press the ANT button on your remote so that a channel number appears.

CHANNEL SET UP

Basic set up options for viewing

With the CHANNEL SET UP window open:

- 1 Use \uparrow or \downarrow to select the feature you want to change.
- 2 Press \oplus to access the feature.

CABLE: Select ON if your TV is connected to a cable system. (AUTO SET UP will set CABLE to ON automatically when it programs the TV)

CHANNEL FIX: Press \oplus and then use the \uparrow and \downarrow buttons to set the TV's input to one of the following options:

2-6: When the cable box is connected to the VHF/UHF input. Press DBS/CABLE (FUNCTION) and then CH+/- to change channels.


VIDEO 1: When you have connected video equipment (e.g. A/V receiver) and you want the TV input fixed to it. You will be able to alternate between video sources.

OFF: When you want to switch CHANNEL FIX off.

TIMER and CHANNEL BLOCK settings will be erased when CHANNEL FIX is set.


AUTO PROGRAM: Instructs the TV to automatically program all receivable channels.

CHANNEL ERASE/ADD: With the CHANNEL ERASE/ADD window open:

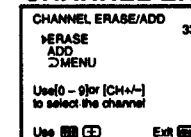





- 1 Place the cursor next to ERASE or ADD.
- 2 Select the desired channel using CH+/-, or by selecting with the 0-9 buttons and pressing ENTER.
- 3 Press \oplus to activate.

CHANNEL CAPTION: With the CHANNEL CAPTION window open:

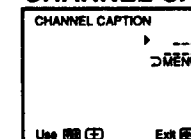

- 1 Press \oplus and then \uparrow or \downarrow on the select buttons to select the desired channel, and press \oplus again.
- 2 Press \uparrow or \downarrow on the select buttons to display the first letter or number of the caption and press \oplus to select it. (Repeat until all four digits are selected)
- 3 Press \oplus to activate. *To erase a Caption, press RESET.*

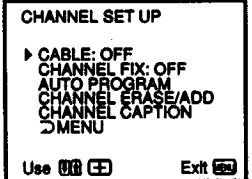
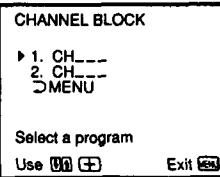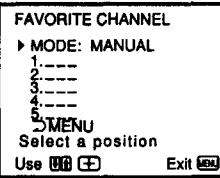
<p>CHANNEL BLOCK Prevent child access to certain channels.</p>	<p>With the CHANNEL BLOCK window open, you will be able to block two channels:</p> <ol style="list-style-type: none"> 1 Select 1 or 2 and press (+). 2 Press ↑ or ↓ on the select buttons to display the channel you want to block. 3 Press (+) to activate. <p>When you select the blocked channel, "BLOCKED" will appear on the screen. Caption Vision, XDS, and output from the selected channel will also be blocked. To erase your CHANNEL BLOCK settings, press RESET while in the CHANNEL BLOCK window. When you perform AUTO PROGRAM, your CHANNEL BLOCK settings will be erased.</p>	 <p>CHANNEL BLOCK ▶ 1. CH____ 2. CH____ ▷MENU</p> <p>Select a program Use [00] [↔] Exit [00]</p>
<p>FAVORITE CHANNEL Quick access to favorite channels</p>	<p>Setting FAVORITE CHANNEL: With the FAVORITE CHANNEL window open:</p> <ol style="list-style-type: none"> 1 Press (+) and then ↑ or ↓ on the select buttons to select AUTO or MANUAL, and press (+) again. (Selecting AUTO will cause the last five channels that you chose with the remote control 0-9 buttons to be selected) 2 Press ↑ or ↓ on the select buttons to select 1, 2, 3, 4, or 5 and press (+). 3 Press ↑ or ↓ on the select buttons to select the desired channel and press (+). <p>Using FAVORITE CHANNEL:</p> <ol style="list-style-type: none"> 1 Press (+), and your FAVORITE CHANNEL options appear. 2 Press ↑ or ↓ to select the channel you want to watch, and press (+). 	 <p>FAVORITE CHANNEL ▶ MODE: MANUAL 1. ____ 2. ____ 3. ____ 4. ____ 5. ____ ▷MENU Select a position Use [00] [↔] Exit [00]</p>
<p>VIDEO LABEL Easy recognition of connected equipment (e.g. DBS, VHS, etc.).</p>	<p>This feature allows you to label each input mode so that you can easily identify the connected equipment (e.g. you can label VIDEO 1 IN as VHS). (KV-27V22, 29V22M only)</p> <ol style="list-style-type: none"> 1 Press ↑ or ↓ on the select buttons to select the input mode you want to label and press (+). 2 Press ↑ or ↓ to select the label and press (+). <p>VIDEO LABEL Options: Video 1: VHS, 8mm, BETA, LD, GAME, DBS, DVD, WEB, RECEIVER Video 2: VHS, 8mm, BETA, LD, GAME, DBS, DVD, WEB</p> <p>When VIDEO LABEL is set to WEB, the screen will darken significantly, creating an ideal picture for WebTV viewing.</p>	 <p>VIDEO LABEL ▶ VIDEO 1: VIDEO 1 VIDEO 2: VIDEO 2 ▷MENU</p> <p>Use [00] [↔] Exit [00]</p>
<p>LANGUAGE User's preferred</p>	<p>(Except Canadian models) Select from available languages to cause all menus to appear in your language of choice.</p>	

Operating video equipment

Setting the manufacturer's code

You can use the supplied remote control to operate Sony or non-Sony video equipment that has an infrared sensor.

- 1 Press CODE SET.
- 2 Press VTR (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

VCR manufacturer code numbers

Manufacturer	Code
Sony	301, 302, 303
Aiwa	338, 344
Admiral (M. Ward)	327
Audio Dynamic	314, 337
Bell & Howell (M. Ward)	330, 343
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	315, 302, 332
Criterion	315
Curtis Mathis	304, 338, 309

Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 334, 335, 333
Funai	338
General Electric	329, 304, 309
Go Video	322
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 333, 334, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314

Singer	315
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Shintom	315
Signature 2000 (M. Ward)	338, 327
Sylvania	308, 309, 338, 310
Symphonic	338
SV2000	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
XR-1000	315
Yamaha	330, 314, 336, 337
Zenith	331

MDP manufacturer code numbers

Manufacturer	Code
Sony	701
Kenwood	707
Magnavox	703
Marantz	702
Mitsubishi	702
Panasonic	704, 710
Philips	703
Pioneer	702

RCA	702, 709
Sanyo	706
Sharp	705
Yamaha	703, 708

Tips 

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- The code numbers for Sony equipment are assigned at the factory as follows:

VHS VCR	301 (preset code for the supplied remote control)
8 mm VCR	302
Beta, ED Beta VCRs	303

When you remove the batteries, the code number may revert to the factory setting.

Operating a VCR	Buttons on the remote control
To turn on or off	Press VTR (POWER).
To select a channel directly	Press the 0 – 9 buttons.
To change channels	Press CH +/-.
To record	Press ▶ while pressing ● . First release ▶ , then release ● .
To play	Press ▶ .
To stop	Press ■ .
To fast forward	Press ▶▶ .
To rewind the tape	Press ◀◀ .
To pause	Press . To resume normal playback, press again.
To search the picture forward or backward	Press ▶▶ or ◀◀ during playback. To resume normal playback, release the button.
To change input mode	Press TV/VTR.

Operating an MDP	Buttons on the remote control
To turn on or off	Press VTR (POWER).
To play	Press the ▶ .
To stop	Press ■ .
To pause	Press . To resume normal playback, press again.
To search the picture forward or backward	Keep pressing ▶▶ or ◀◀ during playback. To resume normal playback, release the button.
To search the chapter forward or backward	Press CH +/-.

Operating a cable box or DBS receiver

Programming the remote

You can program the supplied remote control to operate a cable box or DBS receiver.

- 1 Press CODE SET.
- 2 Press DBS/CABLE (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

To operate the TV

Press TV (FUNCTION). Then use the TV control buttons to control the TV.

For more details on operating the cable box or DBS receiver

Refer to the operating instructions that come with the equipment.

If the remote control doesn't work

- First, try repeating the set up procedures using the other codes listed for your equipment.

Tips

- *If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.*
- *If you enter a new code number, the code number you previously entered at that setting is erased.*
- *In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's own remote control unit.*
- *Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code numbers may revert to the factory setting and must be reset.*

Manufacturer code numbers (cable box)

Manufacturer	Code number
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Manufacturer code numbers (DBS receiver)

Manufacturer	Code number
Sony	801 (preset code for remote control)
GENERAL ELECTRIC	802
RCA/PROSCAN	802

Troubleshooting

Troubleshooting

No picture (screen not lit), no sound

- Make sure the power cord is plugged in.
- Operate with the buttons on the TV and the remote control.
- Insert the batteries in the remote control with the correct polarity.
- Replace the batteries with new ones if they are weak.
- Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video tapes, set to VIDEO1 or 2.
- Try another channel. *It could be station trouble.*
- Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (page 9)

Poor or no picture (screen lit), good sound

- Adjust PICTURE in the VIDEO menu. (page 13)
- Adjust BRIGHTNESS in the VIDEO menu. (page 13)
- Check antenna/cable connections.
- Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (page 9)

- Remove objects from the front of TV.
- Check the LIGHTSENSOR setting in the VIDEO menu. (page 13)
- When one of the video inputs is labeled as WEB, the screen will darken significantly, creating an ideal picture for WebTV viewing. (KV-27V22, 29V22M only) (page 17)

Good picture, no sound

- Press MUTING so that "MUTING" disappears from the screen. (page 10)
- Check the MTS setting in the AUDIO menu. (page 14)
- Make sure SPEAKER is set to ON in the AUDIO menu. (page 14)
- Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (page 9)

No color

- Adjust the COLOR in the VIDEO menu. (page 13)
- Black and white programs cannot be seen in color.
- Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (page 9)

Only snow and noise appear on the screen

- Check the CABLE setting in the SET UP menu. (page 16)
- Check the antenna/cable connections.
- Make sure the channel is broadcasting programs.
- Press ANT to change the input mode. (page 11)

Dotted lines or stripes

- Adjust the antenna.
- Move the TV away from noise sources such as cars, neon signs, or hair-dryers.

Double images or ghosts

- Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings).

Cannot operate menu

- If the item you want to choose appears in gray, you cannot select it. Press TV/VIDEO correctly.

■■■ Troubleshooting (continued)

Cannot receive upper channels (UHF) when using an antenna

- Make sure CABLE is OFF in the SET UP menu. (page 16)
- Use AUTO PROGRAM to add receivable channels that are not presently in TV memory. (page 16)

Cannot receive any channels when using cable TV

- Make sure CABLE is ON in the SET UP menu. (page 16)
- Use AUTO PROGRAM to add receivable channels that are not presently in TV memory. (page 16)

Remote control does not operate

- Batteries could be weak. Replace the batteries.
- Press TV (FUNCTION) when operating your TV.
- Make sure the TV's power cord is connected securely to the wall outlet.
- Locate the TV at least 3-4 feet away from fluorescent lights.
- Check the S-Link connection. (page 3,4)

Cannot gain enough volume when using a cable box

- Increase the volume at the cable box. Then press TV (FUNCTION) and adjust the TV's volume.

TV is fixed to one channel

- Try turning CHANNEL FIX off. (page 16)
- Use AUTO PROGRAM to add receivable channels that are not presently in the TV memory. (page 16)
- To reset the TV: First, turn the TV on. Then while pressing the RESET key on the remote, press the POWER key on the TV. The TV will turn itself off, then back on. When the TV turns on again, all settings will be reset, and the EASY SETUP GUIDE will appear.

■■■ Specifications

Supplied accessories

Remote control RM-Y135A (1)
Batteries (2) size AA (R6)

Optional accessories

Connecting cables
VMC-810S/820S, VMC-720M,
YC-15V/30V, RK-74A

TV Stand SU-27A
(KV-27S22, 27V22, 29PS2, 29RS22,
29RS22C, 29SD2, 29V22M (except Canadian
models))

TV Stand SU-32A
(KV-32S22 (except Canadian models))

U/V mixer EAC-66

Specifications (continued)

	KV- 27S22	27V22	29PS2	29RS22	29RS22C	29SD2	29V22M	32S22
Power requirements	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz	220 V, 50/60 Hz	120 V, 60 Hz	120 V, 60 Hz	120 V, 60 Hz
Number of inputs/outputs								
Video ¹⁾	1	2	1	1	1	1	2	1
S Video ²⁾	0	1	0	0	0	0	1	1
Audio ³⁾	1	2	1	1	1	1	2	1
Audio out ⁴⁾	1	1	1	1	1	1	1	1
Monitor out ¹⁾	0	1	0	0	0	0	1	0
Speaker output (W)	5W x 2	5W x 2	5W x 2	5W x 2	5W x 2	5W x 2	5W x 2	5W x 2
Power consumption (W)								
In use (Max.)	160W	180W	160W	160W	160W	160W	180W	180W
In standby	9W	9W	9W	9W	9W	9W	9W	9W
Dimensions (W/H/D)								
(mm)	660.4 x 602.5 x 521.2 mm	690 x 575.4 x 503.4 mm	660.4 x 602.5 x 521.2 mm	660.4 x 602.5 521.2 mm	660.4 x 602.5 x 521.2 mm	660.4 x 602.5 x 521.2 mm	690 x 575.4 x 503.4 mm	781 x 712.1 x 582.5 mm
(in.)	26 x 23 ³ / ₄ x 20 ⁵ / ₈ in.	27 ¹ / ₄ x 22 ³ / ₄ x 19 ⁷ / ₈ in.	26 x 23 ³ / ₄ x 20 ⁵ / ₈ in.	26 x 23 ³ / ₄ x 20 ⁵ / ₈ in.	26 x 23 ³ / ₄ x 20 ⁵ / ₈ in.	26 x 23 ³ / ₄ x 20 ⁵ / ₈ in.	27 ¹ / ₄ x 22 ³ / ₄ x 19 ⁷ / ₈ in.	30 ³ / ₄ x 28 ¹ / ₈ x 23 in.
Mass (kg)	40.6 kg	43 kg	40.6 kg	40.6 kg	40.6 kg	40.6 kg	43 kg	64.3 kg
(lbs)	89 lbs 8 oz	94 lbs 13 oz	89 lbs 8 oz	89 lbs 8 oz	89 lbs 8 oz	89 lbs 8 oz	94 lbs 13 oz	141 lbs 12 oz

Television system

American TV standard

Channel coverage

VHF: 2-13/UHF: 14-69/CATV: 1-125

Picture tube

Hi Black Trinitron® tube

Visible Screen size

27-inch picture measured diagonally (KV-27S22,

27V22, 29PS2, 29RS22, 29RS22C, 29SD2, 29V22M)

32-inch picture measured diagonally (KV-32S22)

Actual screen size

29-inch picture measured diagonally (KV-27S22,

27V22, 29PS2, 29RS22, 29RS22C, 29SD2, 29V22M)

34-inch picture measured diagonally (KV-32S22)

Antenna

75 ohm external terminal for VHF/UHF

- ¹⁾ 1 Vp-p, 75 ohms unbalanced, sync negative
- ²⁾ Y: 1 Vp-p, 75 ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms
- ³⁾ 500 mVrms (100% modulation), Impedance: 47 kilohms
- ⁴⁾ More than 408 mVrms at the maximum volume setting (variable)
More than 408 mVrms (fix)
Impedance: 50 kilohms

●[®] SRS (SOUND RETRIEVAL SYSTEM)


The ● SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

Design and specifications are subject to change without notice.

Index

A

Adjusting your SET UP	12
Antenna cable	2
Antenna connector	2
AUDIO menu operations 	
AUDIO OUT	14
BALANCE	14
BASS	14
EFFECT	14
MTS	14
SPEAKER	14
TREBLE	14
AUDIO OUT	
FIXED	14
VARIABLE	14
Audio Video Cable	2
AUTO PROGRAM	9
AUTO SET UP	9

B

BALANCE	14
BASS	14
Battery installation	8
BRIGHTNESS	13

C

CABLE	16
Cable box	2, 4
operation	20
Caption Vision	11
CATV cable	2
Coaxial cable	2, 3, 4

CH +/-	10
CHANNEL ERASE/ADD	16
CHANNEL BLOCK	16
CHANNEL CAPTION	16
CHANNEL FIX	16
COLOR	13
Connecting TV to	
antenna	2
audio system	6
cable	2
cable box	2
camcorder	6
DBS receiver	5
DBS receiver and VCR	5
two VCRs	7
VCR	3
CURRENT TIME SET	15

D

DAYLIGHT SAVING	15
DBS receiver operation	20
DISPLAY	
Caption vision	11
Status	11
XDS	11

E

Editing using monitor out	7
EFFECT	
SIMULATED	14
SRS	14
Surround	14

F

Factory settings	13, 14
FAVORITE CHANNEL	17
Features table	1

G, H

Hook Ups	2
HUE	13

I, J, K

JUMP button	10
-------------------	----

L

Language selection	9, 17
Learning menus	
AUDIO	14
SET UP	16
TIMER	15
VIDEO	13
LIGHTSENSOR™	12

M, N

MDP operation	15
Menu selection	12
Mode	
MOVIE	13
SPORTS	13
STANDARD	13
Monitor out	17
Mono	14
MTS	
MAIN	14
SAP	14
MONO	14