

Color Rear Video Projector

Operating Instructions _____

EN



Manual de instrucciones _____

ES**IMPORTANT SAFETY INFORMATION:**Please read the important safety information on page 2-^{EN}.**INFORMACION IMPORTANTE SOBRE SEGURIDAD:**Lea la información importante sobre seguridad de la página 2-^{ES}.**CONSIGNES DE SECURITE IMPORTANTES:**Veuillez lire les informations concernant la sécurité à la page 2-^{EN}.

**KP-48V75
KP-53V75
KP-53V75C
KP-61V75**

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

| | |
|---|---|
| CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN |  |
| ATTENTION RISQUE DE CHOC ELECTRIQUE, NE PAS OUVRIR |  |
| PRECAUCION RIESGO DE CHOQUE ELECTRICO NO ABRIR | |

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

To prevent electric shock, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

CAUTION

When using TV games, computers, and similar products with your projection TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted on the screen. These types of imprints are not covered by your warranty because they are the result of misuse.

Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

Note on CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster, cable company and/or program owner.

Note on convergence adjustment

Before you use your projection TV, make sure to adjust convergence. For the procedure, see page 21.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennas
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This document is for the remote control RM-Y903.
MODELS: KP-48V75/53V75/53V75C/61V75.

Please keep this notice with the instruction manual.



As an ENERGY STAR Partner, Sony Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

ATTENTION

Pour prévenir les chocs électriques, ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

Table of contents

- 4 Welcome!
- 4 Precautions

Getting Started

- 5 Step 1: Installing the projection TV
- 6 Step 2: Hookup
- 20 Step 3: Setting up the remote control
- 21 Step 4: Setting up the projection TV automatically
(AUTO SET UP)
- 25 Changing the menu language

Operations

- 26 Watching the TV
- 28 Watching two programs at one time — PIP/P&P
(Twin View™)/CH INDEX
- 30 Freezing the picture (FREEZE)
- 30 Adjusting the picture (VIDEO)
- 31 Adjusting the color temperature (TRINITONE)
- 32 Selecting the video mode (VIDEO)
- 32 Adjusting the sound (AUDIO)
- 33 Using audio effect (EFFECT)
- 34 Selecting stereo or bilingual programs (MTS)
- 35 Setting the speaker switch (SPEAKER)
- 36 Setting audio out (AUDIO OUT)
- 36 Setting daylight saving time (DAYLIGHT SAVING)
- 37 Setting the clock (CURRENT TIME SET)
- 37 Setting the timer to turn the projection TV on and
off (ON/OFF TIMER)
- 38 Customizing the channel names (CHANNEL CAPTION)
- 39 Blocking out a channel (CHANNEL BLOCK)
- 40 Setting your favorite channels (FAVORITE CHANNEL)
- 41 Setting video labels (VIDEO LABEL)
- 42 Setting Caption Vision (CAPTION VISION)
- 42 Operating video equipment
- 45 Operating a cable box or DBS receiver

EN

Owner's Record

The model and serial numbers are located at the rear of the projection TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

Additional Information

- 46 Troubleshooting
- 47 Specifications
- 48 Index to parts and controls

- 50 Index

The captions in parentheses indicate menu names.

Welcome!

Thank you for purchasing the Sony Color Rear Video Projection TV. Here are some of the features you will enjoy with your projection TV:

- Two tuner Picture-in-Picture (PIP) that allows you to watch another TV channel, video or cable image as a window or left picture.
- FAVORITE CHANNEL that allows you to view and choose from eight of your favorite programs.
- CH INDEX that allows you to view and choose from twelve programs.
- SAVA SPEAKER option on the AUDIO menu that lets you utilize the Sony SAVA series speaker system's surround sound and super woofer mode when you connect it to the projection TV.
- S-Link™ that allows you to automatically change the TV's input mode, turn on the VCR, and play a tape by just pressing the VCR's play button. This feature is a design unique to Sony.
- Y/Cb/Cr input connectors that allow you to connect a DVD player with component video output connectors.

About this manual

The instructions in this manual are for models KP-48V75, KP-53V75, KP-53V75C, and KP-61V75. Before you start reading this manual, please check your model number, located at the rear of the projection TV.

Model KP-53V75 is used for illustration purposes in this manual. Any differences in operation are clearly indicated in the text, for example "KP-48V75 only". The differences in specifications are indicated in the text.

Instructions in this manual are based on use of the remote control. You can also use the controls on the projection TV if they have the same name as those on the remote control.

Precautions

This projection TV operates on extremely high voltage. To prevent fire or electric shock, please follow the precautions below.

Safety

- Operate the projection TV on 120 V AC (220 V AC for KP-53V75C) only.
- One blade of the plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- Should any liquid or solid object fall into the cabinet, unplug the projection TV and have it checked by qualified personnel before operating it further.
- Unplug the projection TV from the wall outlet if you are not going to use it for several days or more. To disconnect the cord, pull it out by the plug. Never pull the cord itself.

For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS".

Note on cleaning

Clean the cabinet of the projection TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth using vertical strokes only. Stubborn stains may be removed with a cloth slightly dampened with solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning. If the picture becomes dark after using the projection TV for a long period of time, it may be necessary to clean the inside of the projection TV. Consult qualified service personnel.


Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the projection TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- Avoid operating the projection TV at temperatures below 5°C (41°F).
- If the projection TV is transported directly from a cold to a warm location, or if the room temperature has changed suddenly, the picture may be blurred or show poor color. This is because moisture has condensed on the mirror or lenses inside. If this happens, let the moisture evaporate before using the projection TV.
- To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the projection TV in a room where the floor and walls are not of reflecting material. If necessary, cover them with dark carpeting or wall paper.


Step 1: Installing the projection TV

For the best picture quality, install the projection TV within the areas shown below.

Optimum viewing area (Horizontal)

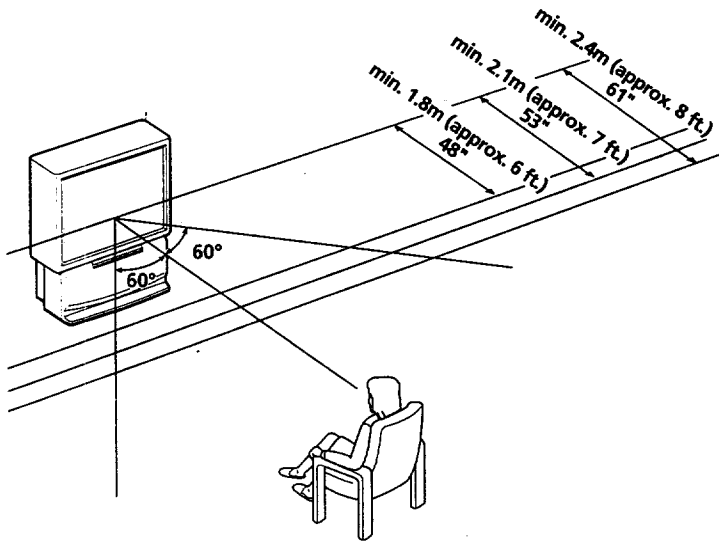


Optimum viewing area (Vertical)

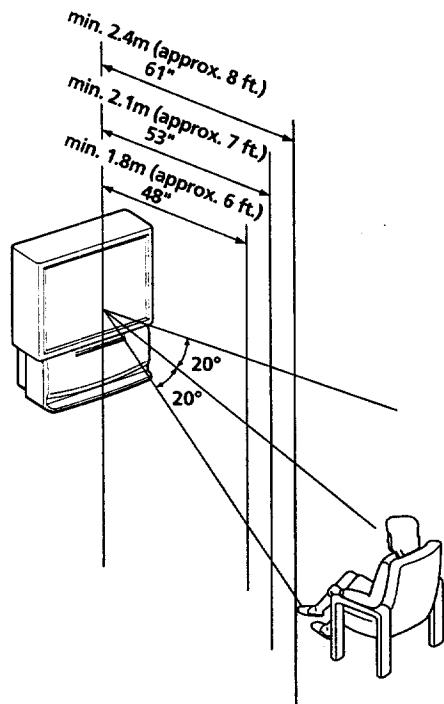

Carrying your projection TV

■ KP-48V75/53V75/53V75C only

Be sure to grasp the areas indicated when carrying the projection TV, and to use more than two people.

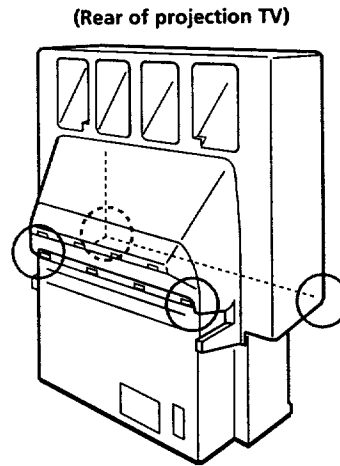

■ KP-61V75 only

Carry your projection TV by the casters.

EN

Preparing for your projection TV


Before you use your projection TV, adjust convergence. For the procedure, see "Step 4: Setting up the projection TV automatically (AUTO SET UP)" on page 21.

Step 2: Hookup

Although you can use either an indoor or outdoor antenna with your projection TV, we recommend that you connect an outdoor antenna or a cable TV system to get better picture quality.

Connecting an antenna

Connect your antenna cable to the VHF/UHF antenna terminal. If you cannot connect your antenna cable directly to the terminal, follow one of the instructions below depending on your cable type.

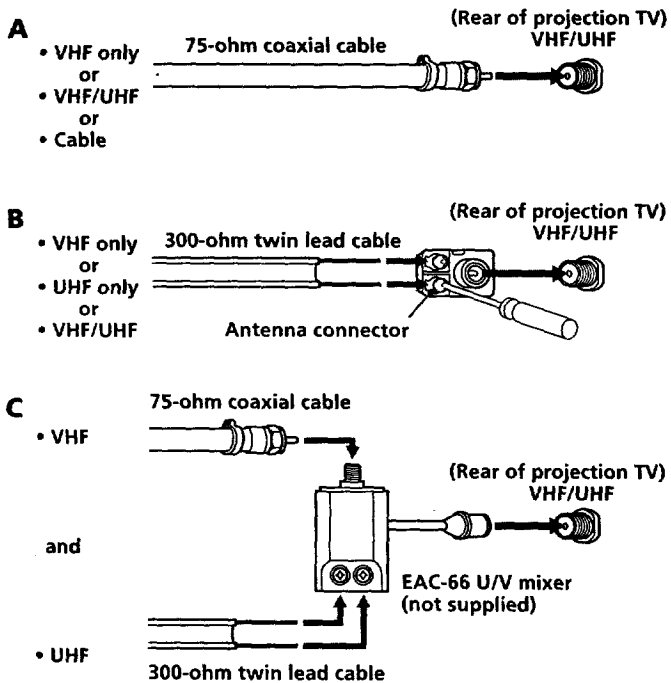


Notes

- Most VHF/UHF combination antennas have a signal splitter. Remove the splitter before attaching the appropriate connector.
- If you use the U/V mixer, snow and noise may appear in the picture when viewing cable TV channels over 37.


Connecting an antenna/cable TV system without a VCR

 To cable or antenna




To cable box

If your cable company requires you to connect a cable box, make the connection as follows:

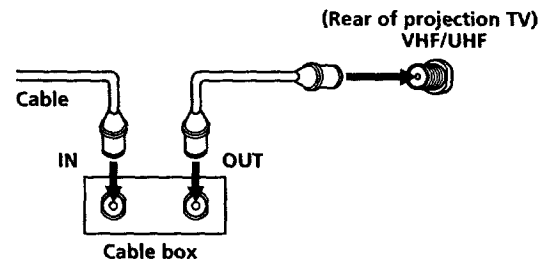

To cable box and cable

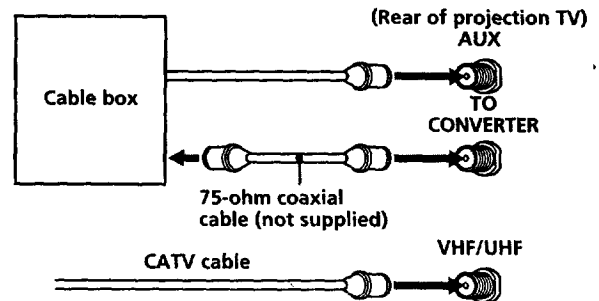


Pay cable TV systems use scrambled or encoded signals requiring a cable box* in addition to the normal cable connection.

* The cable box will be supplied by the cable company.

Note

- You cannot watch the signal through an AUX connector as a window picture.

To cable and antenna

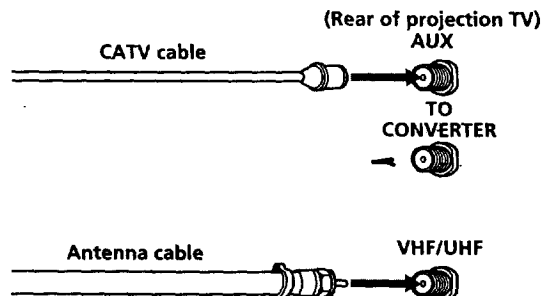

Note

- Do not connect anything to the TO CONVERTER connector in this case.

Connecting an antenna/cable TV system with a VCR

For details on connection, see your VCR instruction manual.

Before making the connection, disconnect the AC power cords of the equipment to be connected.

To a conventional VCR


Note

- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (MONO) of VIDEO 1/3 IN on the projection TV.


After making these connections, you will be able to do the following:

- View the playback of video tapes
- Record one TV program while viewing another program
- Watch two TV programs at once using PIP

Without a cable box

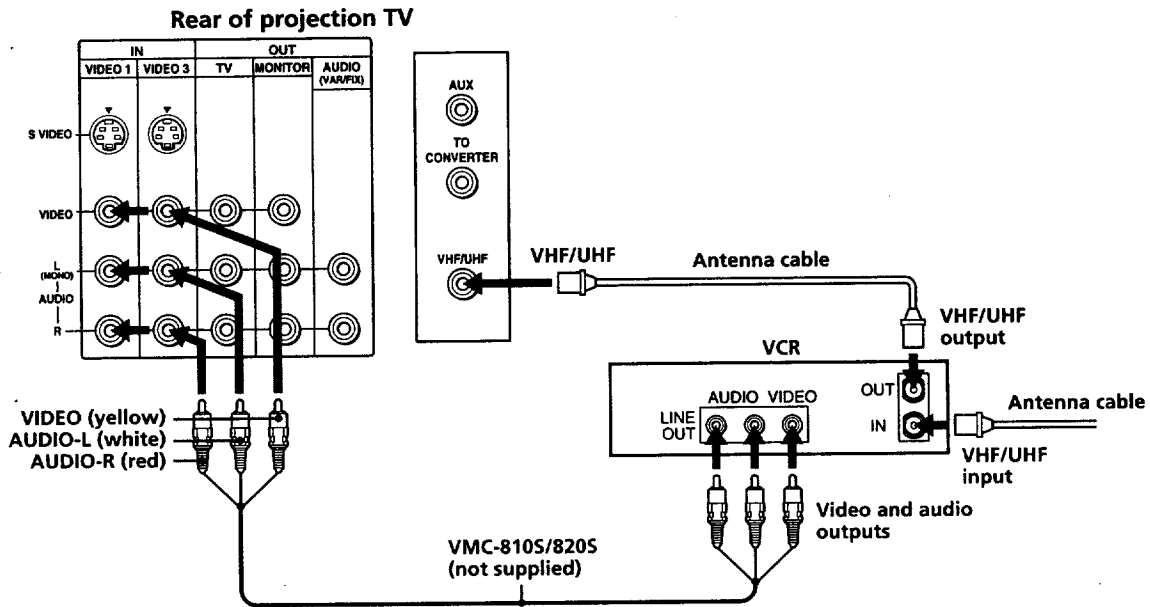

With a cable box

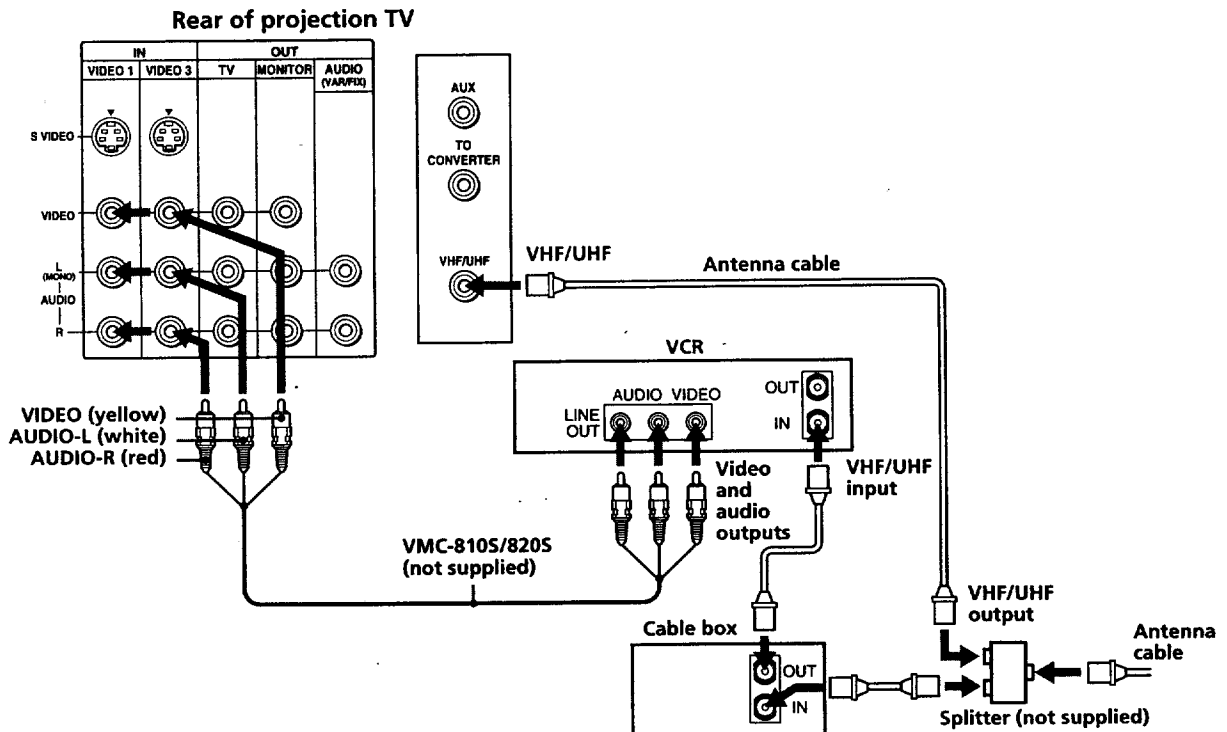


EN


To an S video equipped VCR

If your VCR has an S VIDEO output connector, make the following connections. Whenever you connect the cable to the S VIDEO input connector, the projection TV automatically receives S video signals.

Without a cable box

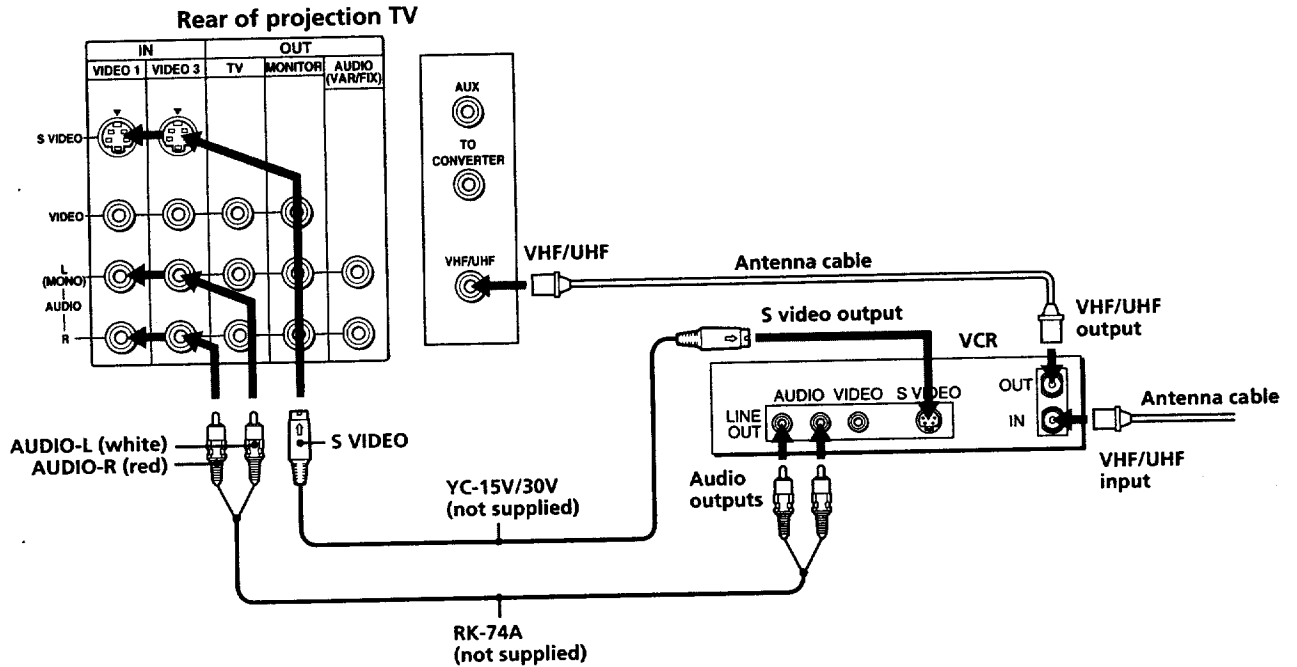

With a cable box

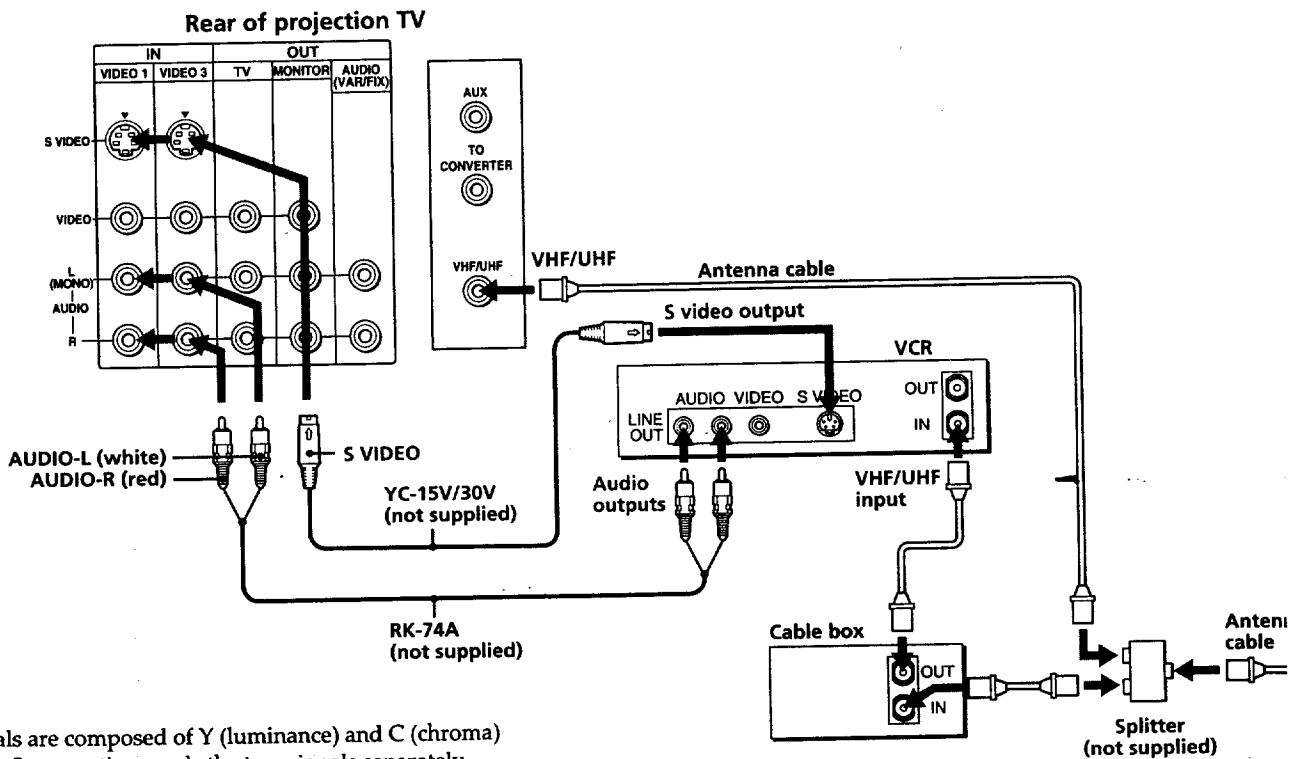


Note

- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connections.

Connecting a DBS receiver

For details on connection, see the instruction manual of the DBS (Digital Broadcasting Satellites) receiver.


To a projection TV

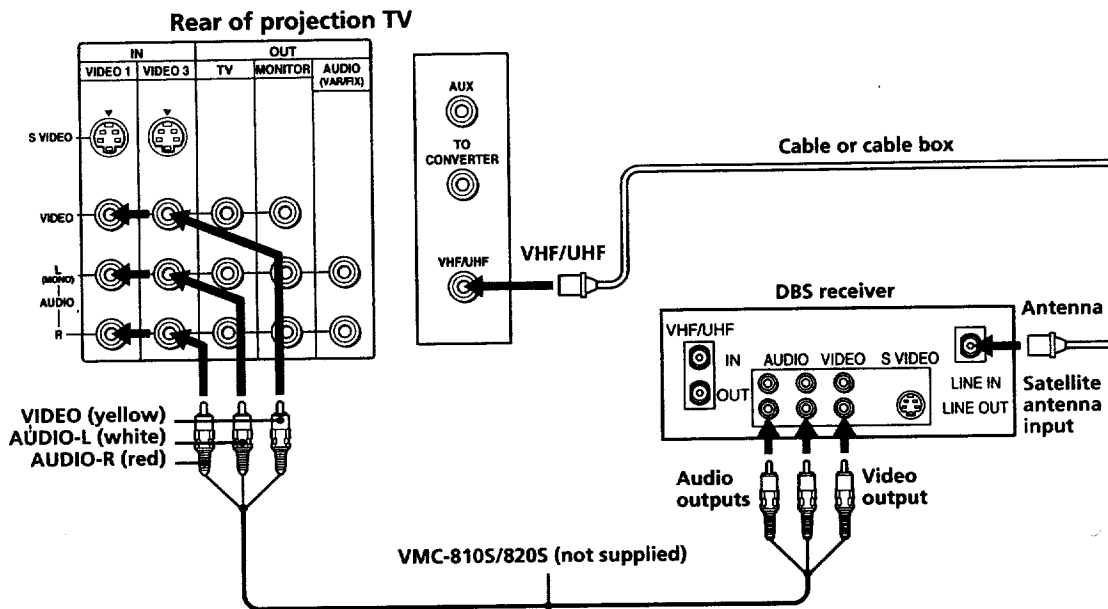

EN


Note
 • You can use the S VIDEO connector or the composite video connector for the video connection.

To a projection TV and VCR

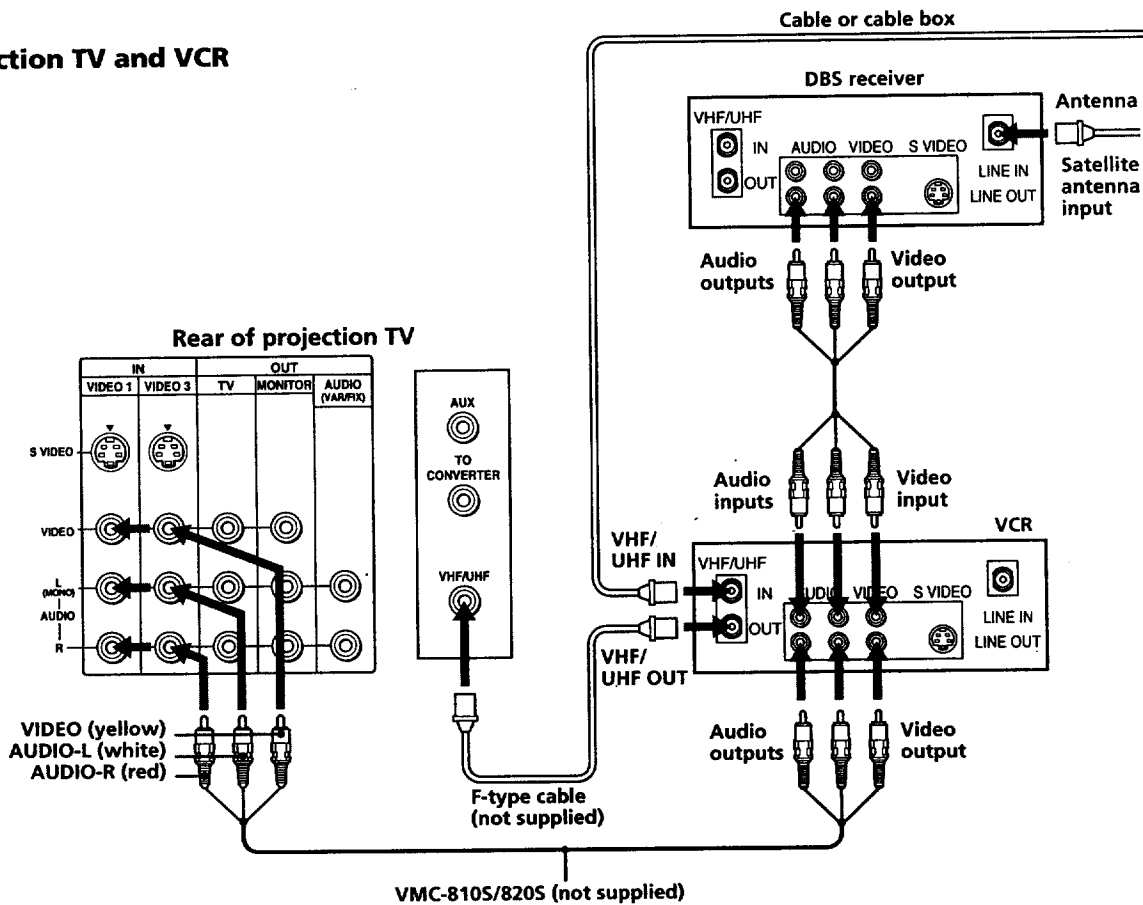

Connecting a camcorder

Use this connection to view a camcorder picture.

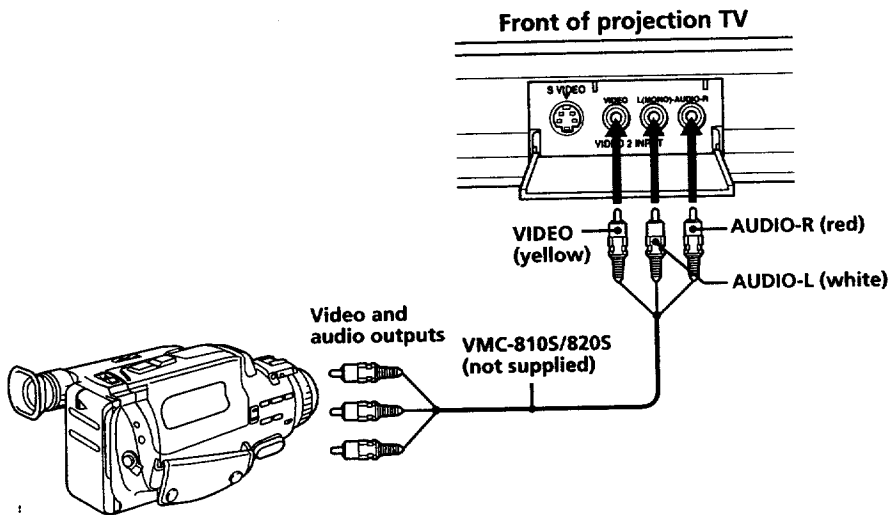


Notes

- To connect a monaural camcorder, connect the audio output of the camcorder to AUDIO-L (MONO) of VIDEO 2 INPUT on the projection TV.
- To connect a camcorder equipped with the S video output, connect the S video output of the camcorder to the S VIDEO connector of the projection TV.

Connecting an audio system

When connecting audio equipment, see page 32 for more information.

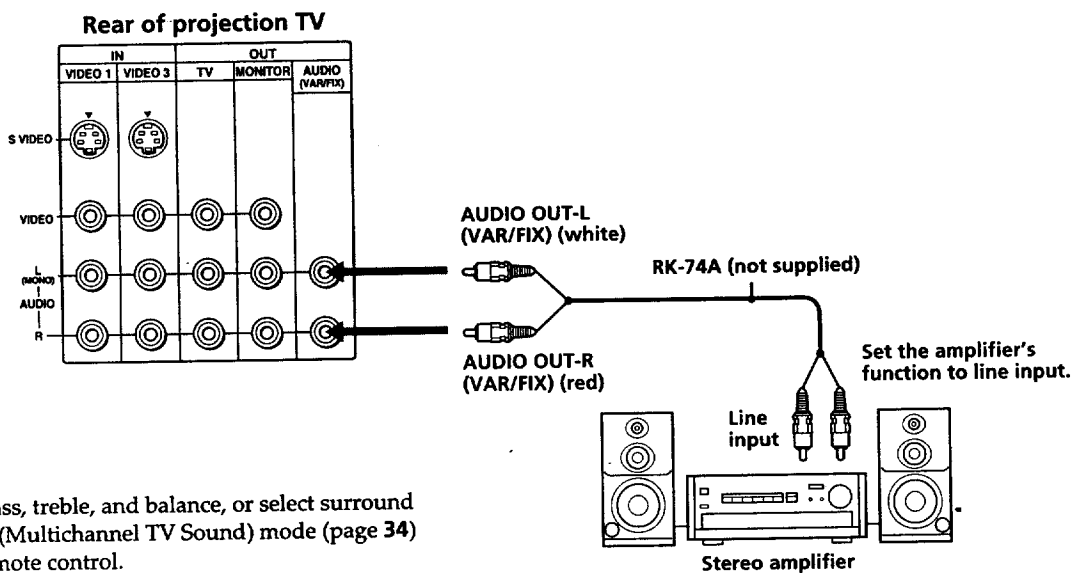


Note

- You can adjust the bass, treble, and balance, or select surround (page 33) or an MTS (Multichannel TV Sound) mode (page 34) with the supplied remote control.

Connecting an AV receiver

Connect an optional AV receiver to the VIDEO 1 IN jacks at the rear of the projection TV.


If your AV receiver has the TV input jacks, connect them to the TV OUT jacks at the rear of the projection TV.

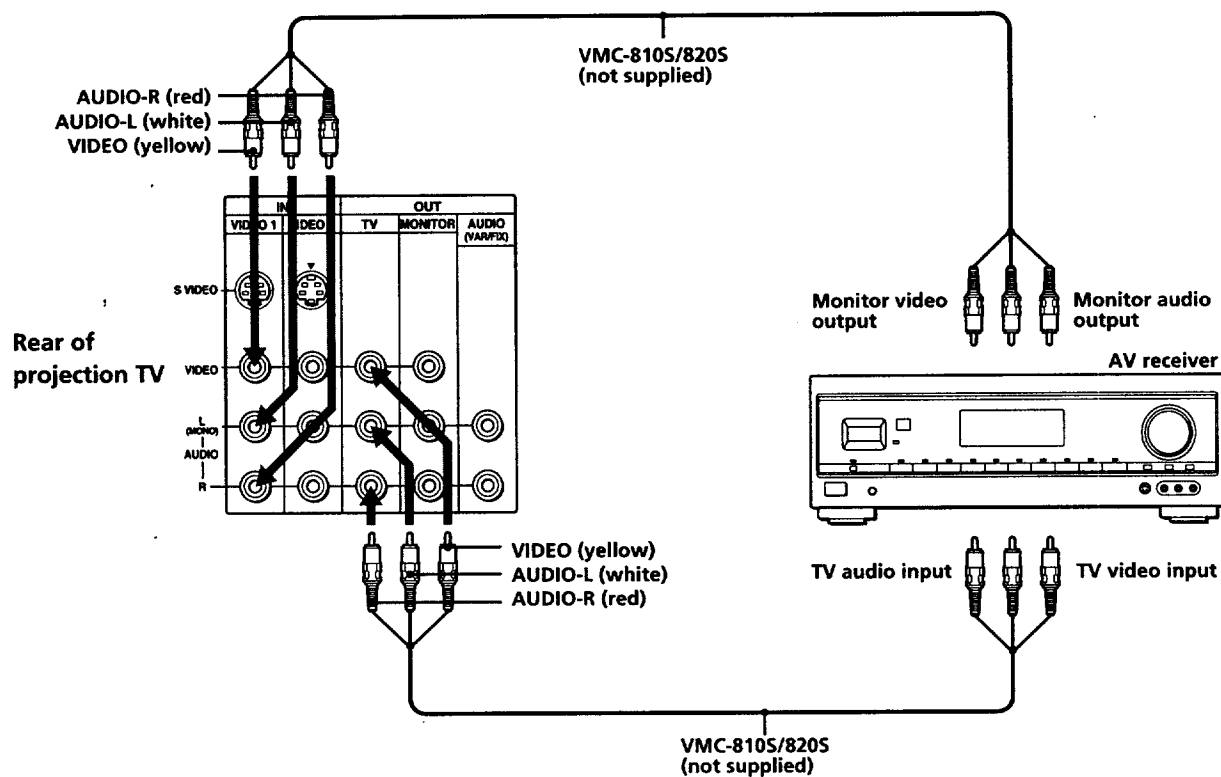

EN


Connecting two VCRs for tape editing using MONITOR OUT

You can record input images displayed on the screen. This type of connection should be used only when you connect from the line input of one VCR, and from the line output of a second VCR.

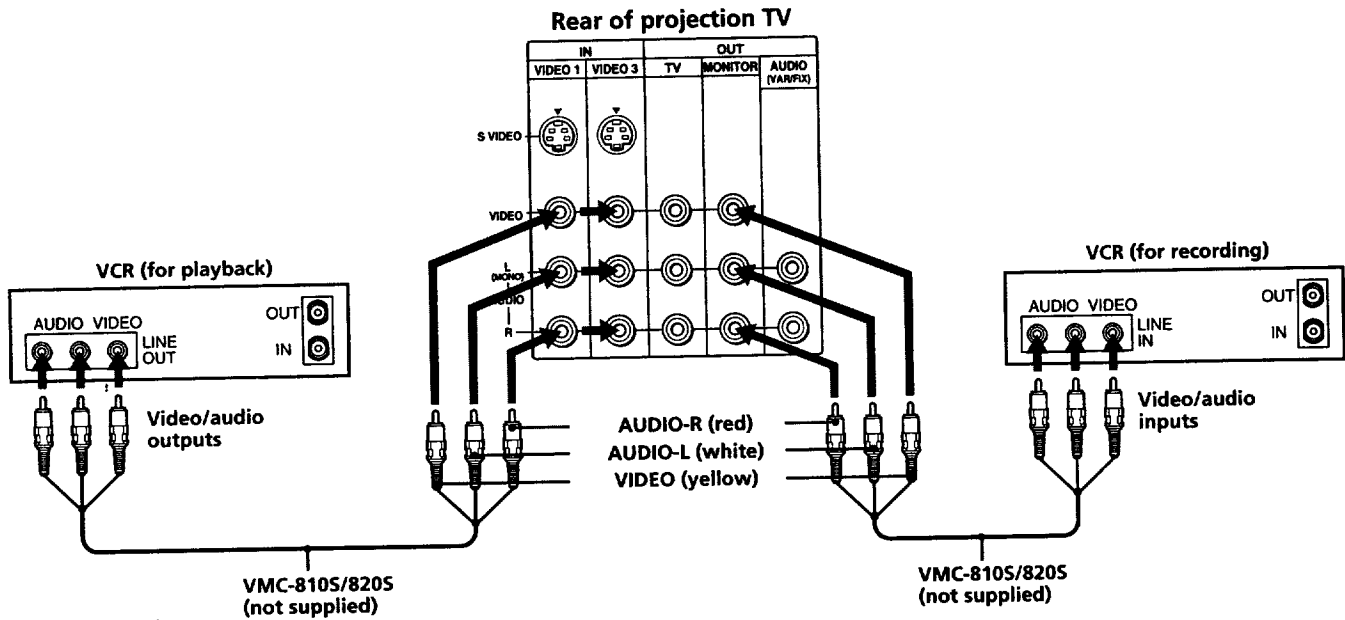

Notes


- Do not change the input signal while editing through MONITOR OUT, or the output signal will also change.
- You can use the S video jack to connect a VCR for playback and the composite video connector to connect a VCR for recording.
- When connecting a single VCR to the projection TV, do not connect the MONITOR OUT to the VCR's line input, while at the same time connecting from the projection TV's VIDEO IN connectors to the VCR's line output, as shown below.

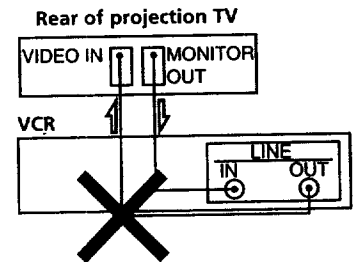

DO NOT CONNECT IN THIS WAY.

Connecting a DVD player without component video output connectors

Connect VIDEO 1/3 connectors on the projection TV to line output connectors on the DVD player.

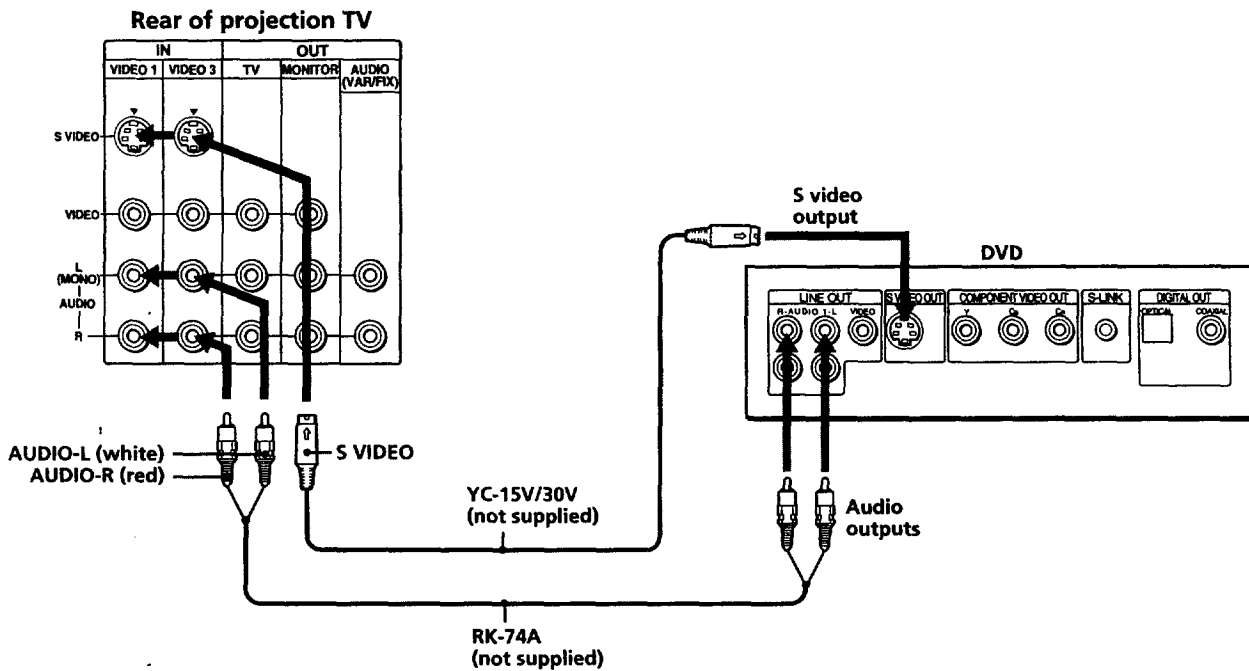

EN

Notes


- Connect your DVD player directly to your TV. Connecting the DVD player through other video equipment will cause unwanted picture noise.
- If your DVD player does not have S video output connector, use composite video connector for the video connection.
- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connections.
- Because the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, reduce the SHARPNESS level in the VIDEO menu (see SHARPNESS on page 31).

(continued)

Connecting a DVD player with component video output connectors

Component video terminals Y/Cb/CR provide a sharper, higher resolution picture by reducing the amount of signal processing thus creating a more accurate reproduction of the source.

If your DVD player has component video output connectors, connect them to VIDEO 4 IN on the projection TV in the following way.

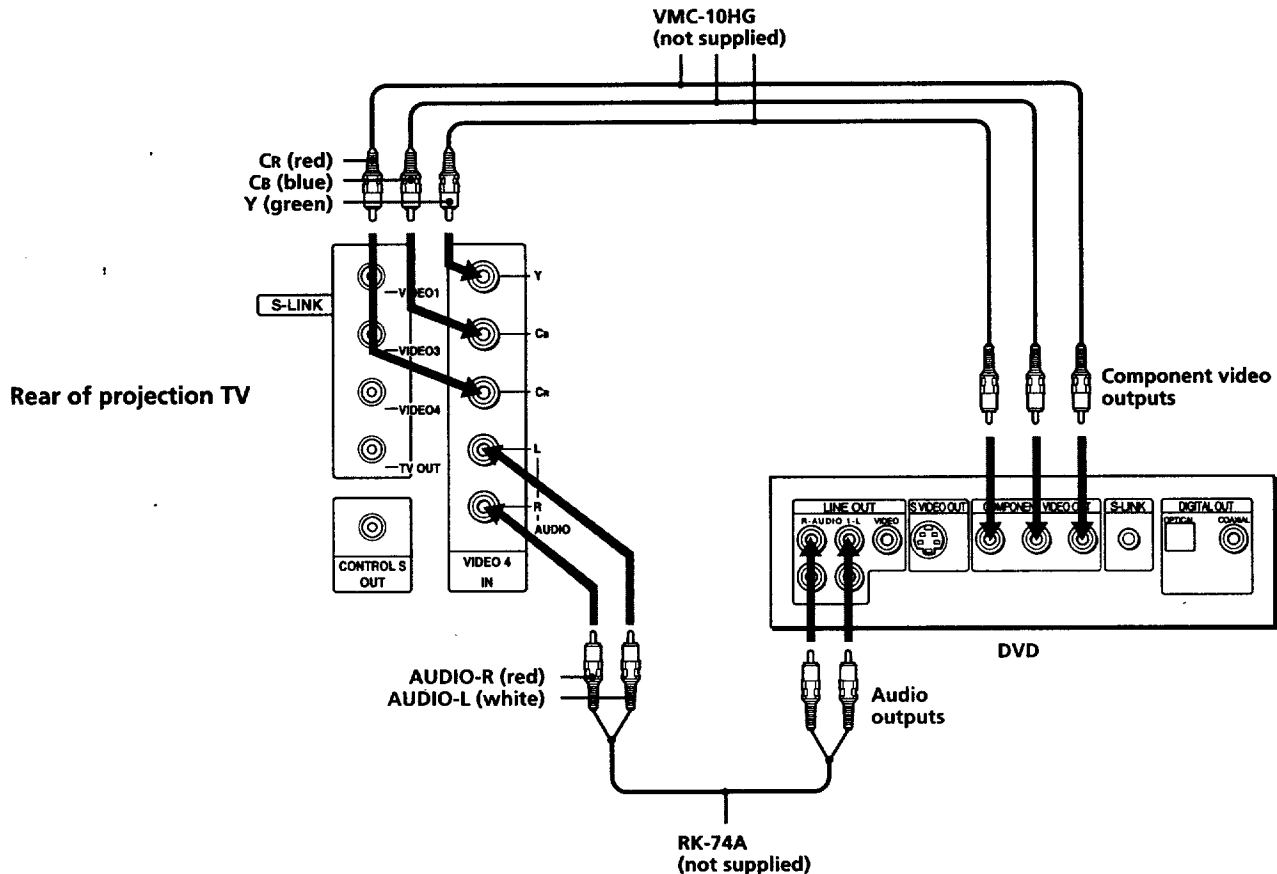


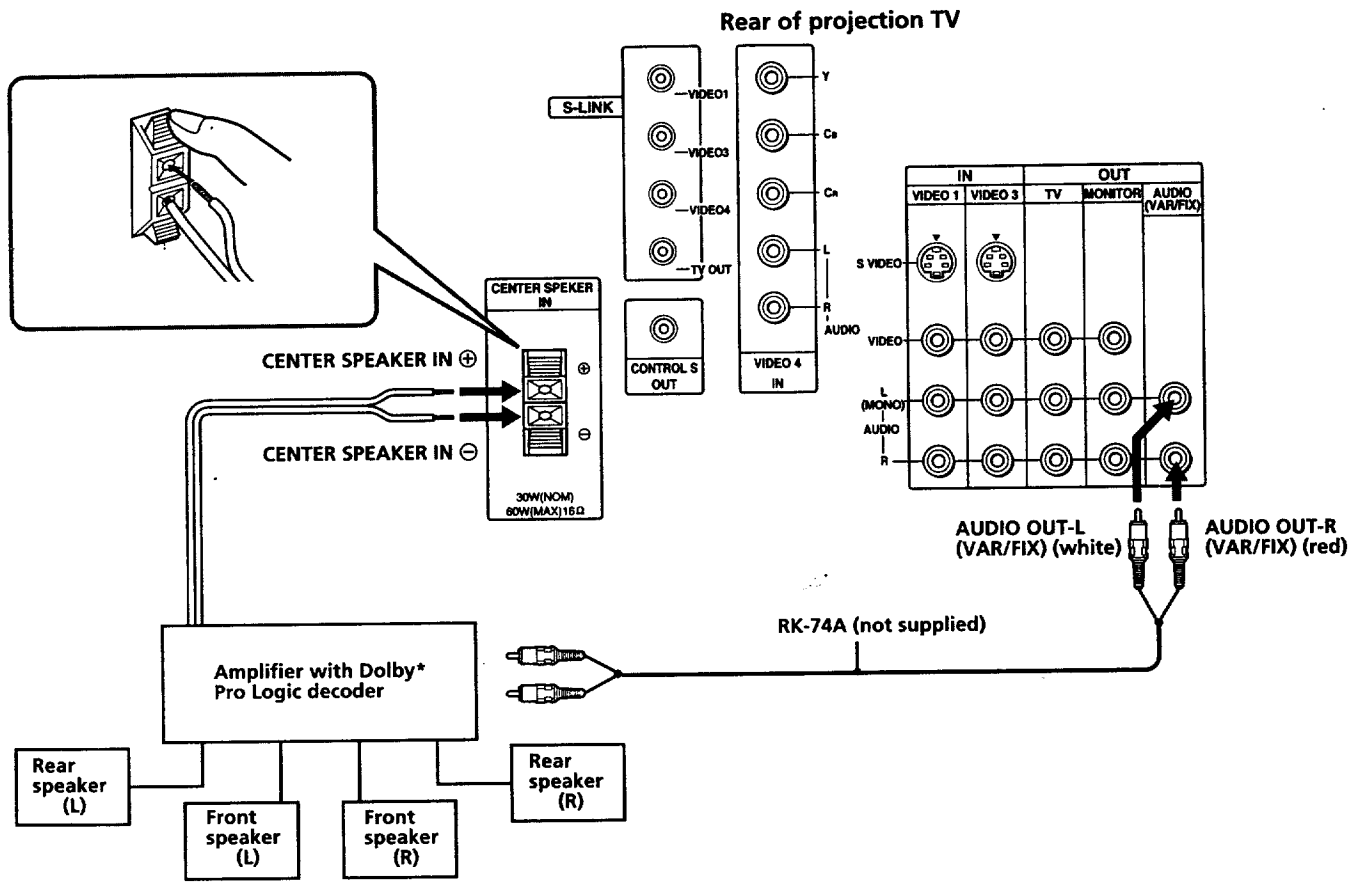
Notes

- Connect your DVD player directly to your TV. Connecting the DVD player through other video equipment will cause unwanted picture noise.
- When the DVD player is connected using VIDEO 4 IN, its MONITOR OUT signals cannot be output.
- Some DVD player connectors may be labeled Y, B-Y, and R-Y. In this case, connect Y (green) on the projection TV to Y on the DVD player, Cb (blue) to B-Y, and CR (red) to R-Y.
- The jacks of this projection TV are colored in green (Y), blue (Cb), and red (CR). If line output connectors of your DVD player have different colors, make connections according to their labels.
- Because the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, reduce the SHARPNESS level in the VIDEO menu (see SHARPNESS on page 31).
- If the incorrect colors appear when using this component video input, recheck the connections they may be reversed.

Connecting an amplifier with Dolby Pro Logic decoder

If you use an amplifier with Dolby Pro Logic decoder instead of the projection TV's audio system, you can still use the projection TV's center speaker. See "Setting the speaker switch (SPEAKER)" on page 35.


* Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under Canadian patent number 1,037,877. "Dolby", the double-D symbol  and "Pro Logic" are trademarks of Dolby Laboratories Licensing Corporation.



EN

Connecting a Sony SAVA series speaker system

If you have a Sony SAVA series speaker system, connect your speakers to the AUDIO (VAR/FIX) OUT jacks on the rear of the projection TV with the audio cable supplied with the speakers. You can take advantage of the speakers' Dolby Pro Logic surround system and super woofer mode, and control them with the supplied remote control. When connecting a Sony SAVA series speaker system, see page 35 for more information.

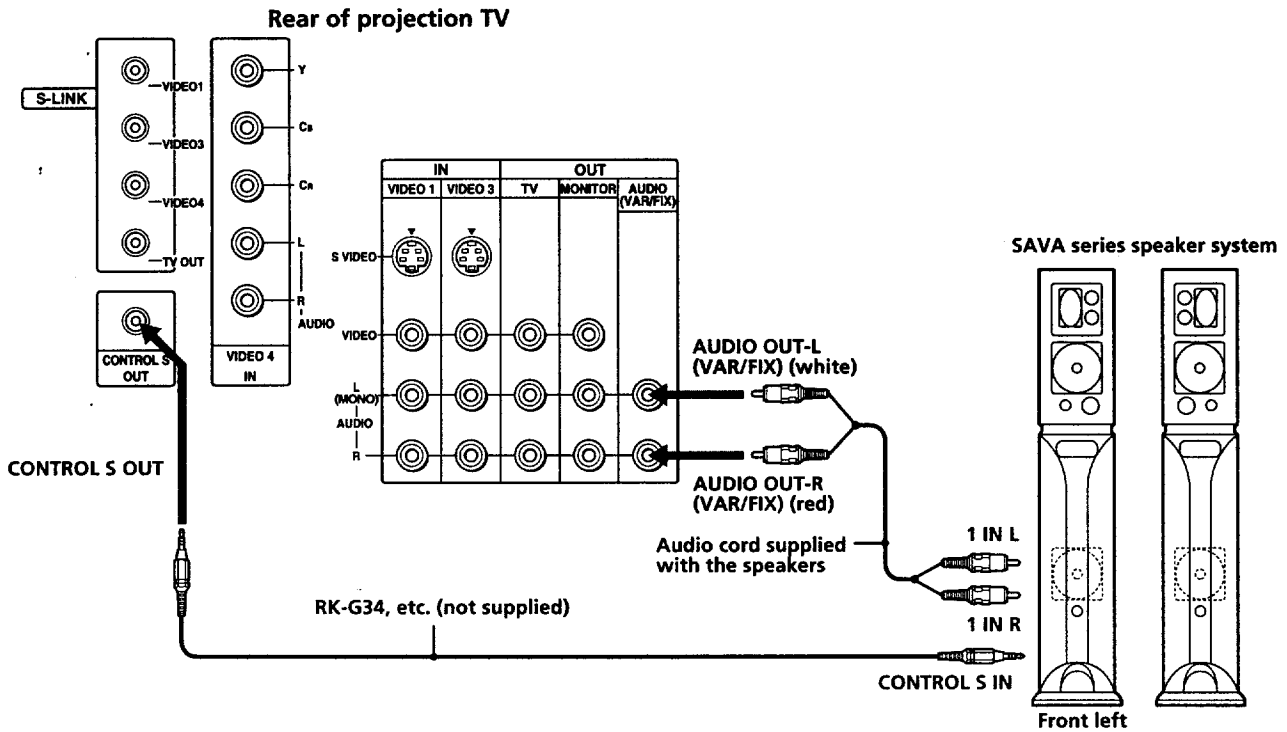

Using the S-Link function

S-Link function is a Sony innovation designed to make your Sony components work together. It allows you to switch automatically the TV's input mode to video when you press the play button on your Sony S-Link VCR. It also allows you to turn the VCR and TV off at the same time with the SYSTEM OFF button on the remote control (see page 44 for details).

Notes


- The projection TV may malfunction if you connect the S-Link cable to the projection TV without connecting the other end of the cable to the VCR.
- When making the S-Link connection, be sure to insert all the connectors firmly.

Using the S-Link function without a Sony AV receiver

To make use of this function, be sure to connect the video equipment to the VIDEO IN and S-LINK connectors with the same label, that is, to VIDEO 1 IN and S-LINK VIDEO 1, to VIDEO 3 IN and S-LINK VIDEO 3, and to VIDEO 4 IN and S-LINK VIDEO 4.

Refer also to the Operating Instructions supplied with your VCR, DBS tuner, LD player, and other Sony video equipment for details.

EN

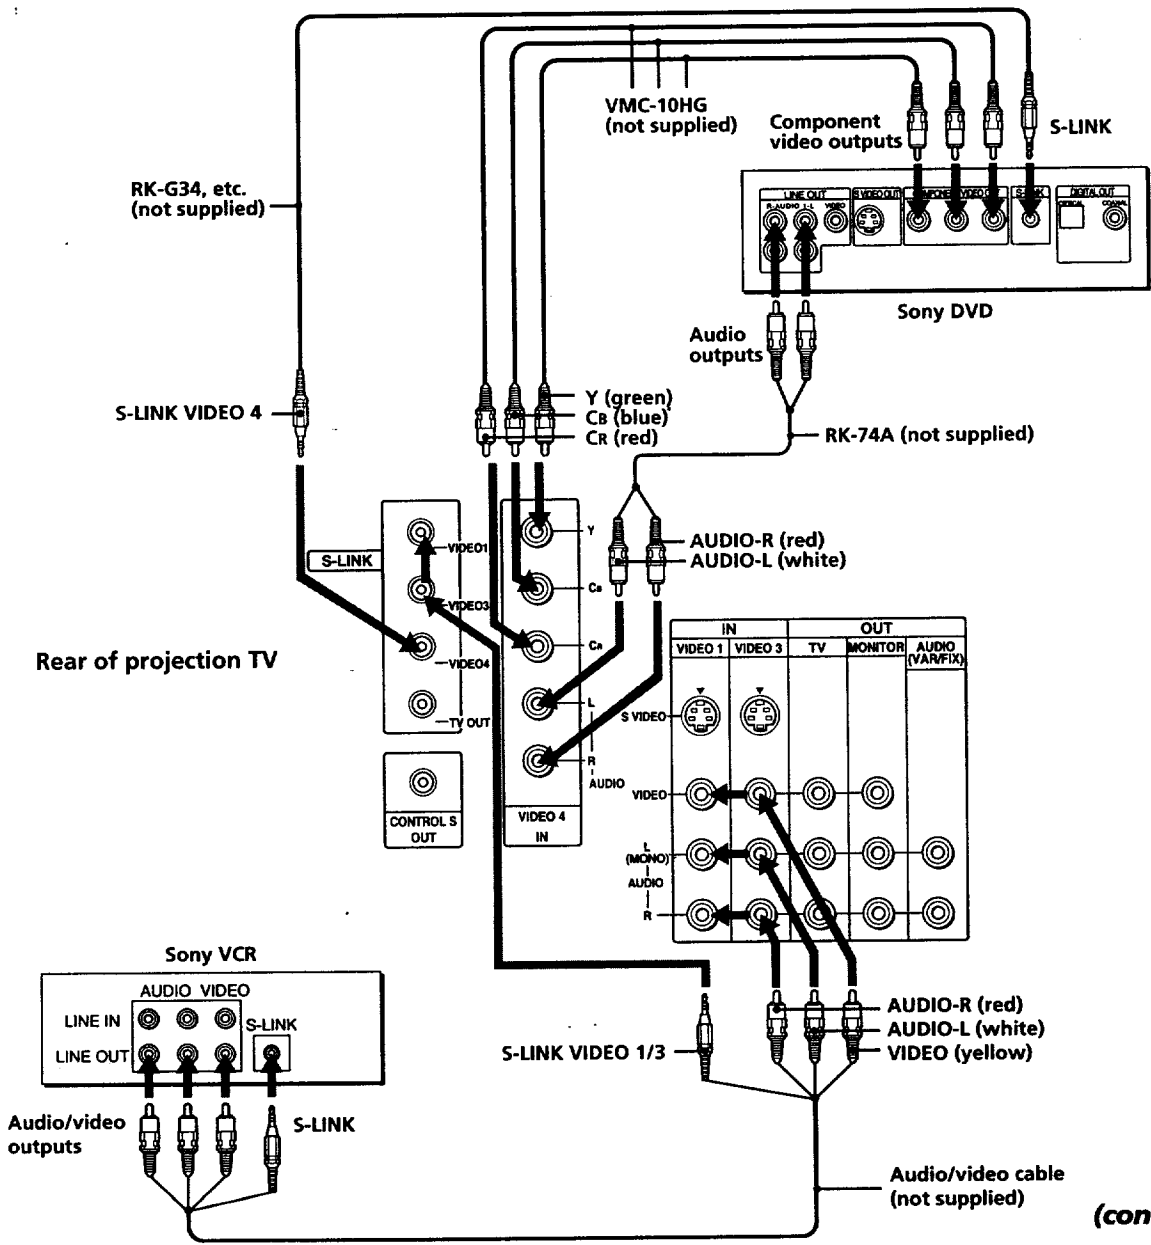


(continued)

Using the S-Link function with a Sony AV receiver

When making S-Link connections through a Sony AV receiver, set the TV speaker switch to OFF, CENTER or SAVA SP, but never to ON (see page 35).


Refer also to the Operating Instructions supplied with your VCR, DBS tuner, LD player, AV receiver, and other Sony video equipment for details.

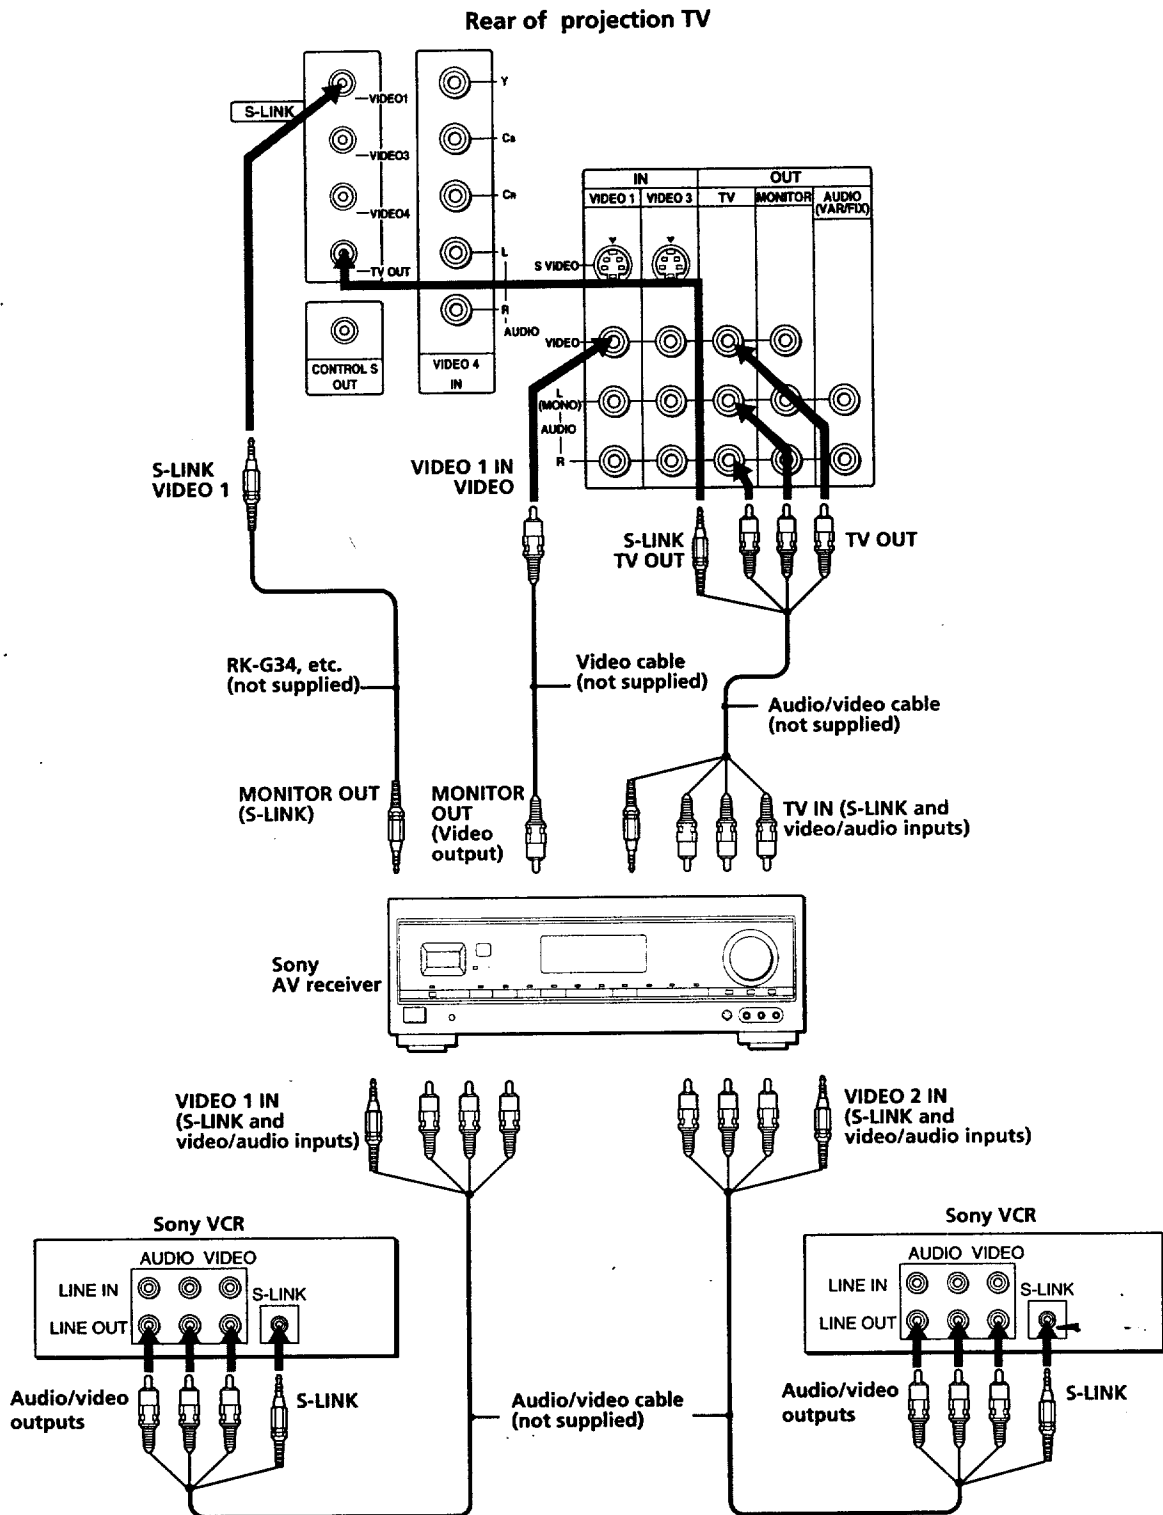

Connecting other Sony equipment with CONTROL S jack

This feature allows you to control your projection TV and other Sony equipment with one remote control.

To control other Sony equipment with the projection TV's remote control, connect the input of the equipment to CONTROL S OUT jack on the projection TV.

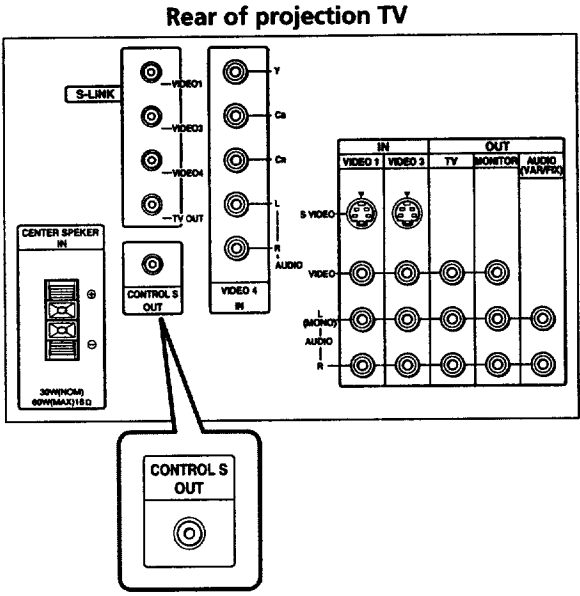


EN

Step 3: Setting up the remote control

Inserting batteries

Insert two size AA (R6) batteries (supplied) by matching the + and - on the battery to the diagram inside the battery compartment.

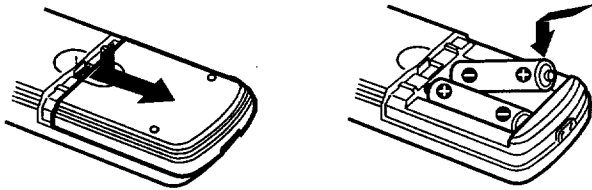

Notes

- Under normal conditions, batteries will last up to six months. If the remote control does not operate properly or the indicators of the buttons on the remote control do not light up, the batteries may be worn out. When replacing batteries, replace both of them with new ones.
- Do not mix old batteries with new ones or mix different types of batteries together.
- If the electrolyte inside the battery should leak, wipe the contaminated area of the battery compartment with a cloth and replace the old batteries with new ones. To prevent the electrolyte from leaking, remove the batteries when you don't plan to use the remote control for a long period of time.
- Do not handle the remote control roughly. Do not drop it, step on it, or let it get wet.
- Do not place the remote control in direct sunlight, near a heater, or where the humidity is high.

Getting to know buttons on the remote control


Names of buttons on the remote control are indicated in different colors to represent the available functions.

Button color

- Transparent TV/VCR/DBS/Cable box function buttons. Press the appropriate function button first to change the remote control's function.
- Green Buttons relevant to power operations.

Label color

- White TV/VCR/DBS/Cable box operation buttons.
- Yellow PIP operation buttons.
- Blue DBS operation buttons.

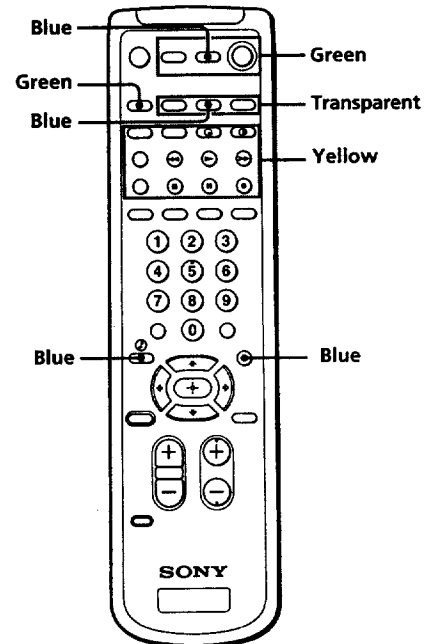


Step 4: Setting up the projection TV automatically

(AUTO SET UP)

You can set up your projection TV easily by using the AUTO SET UP feature. It presets all the receivable channels, adjusts the convergence and changes the on-screen menu language. To set up the projection TV manually, see "Adjusting convergence" (page 23), "Setting cable TV on or off" (page 24), "Presetting channels" (page 25) and "Changing the menu language" (page 25).

If the projection TV is set to a video input, you cannot perform AUTO SET UP. Press TV/VIDEO so that a channel number appears.

(Front of projection TV)

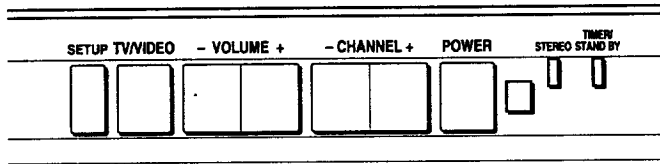


Before you start using AUTO SET UP, be sure to connect the antenna or cable to the projection TV (see page 6).

1 Press POWER to turn the projection TV on.




2 Press SETUP on the front of the projection TV.

AUTO SET UP screen appears.

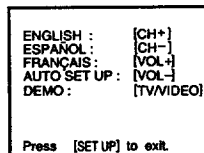



3 Press CHANNEL +/- or VOLUME + to select the on-screen menu language.

If you prefer Spanish or French to English, you can change the on-screen menu language.

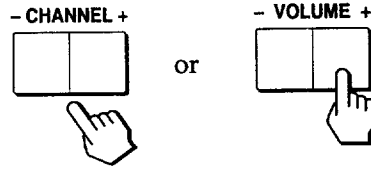


All of the menus will be set to the factory preset condition in the selected language.

4 Press VOLUME - to start AUTO SET UP.

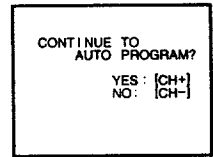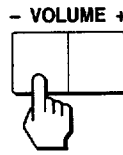


5 Press CHANNEL + to preset channels.

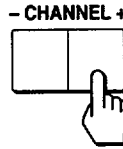

EN

"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the following menu appears. If the projection TV receives cable TV channels, CABLE is set to ON automatically.

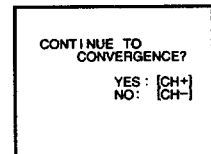



To exit AUTO PROGRAM

Press any button.


6 Adjust convergence.

(1) Press CHANNEL +.


The CONVERGENCE adjustment screen appears.

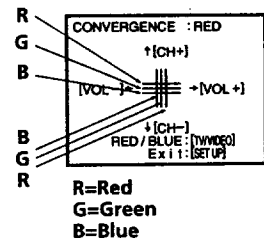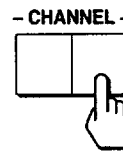

(2) Press TV / VIDEO to select RED or BLUE.

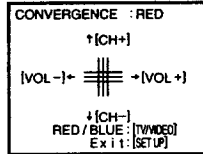


(3) Using CHANNEL +/- or VOLUME +/-, move the line until it converges with the center green line.

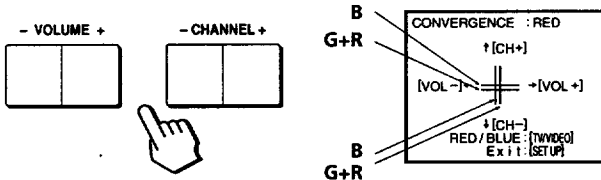

To move horizontal line up/down, press CHANNEL +/-.

To move vertical line right/left, press VOLUME +/-.

(4) Repeat steps (2) and (3) to adjust the other lines until all three lines converge and are seen as a white cross.

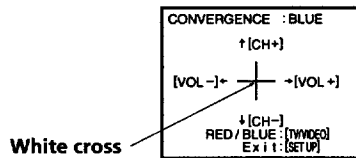

Note

- Using the AUX connector, press ANT first and make sure that "AUX" is displayed beside the channel number on the screen. Then follow the steps 2 to 6 above to perform AUTO SET UP.

To preview the main functions (DEMO)


Press TV / VIDEO on the projection TV in step 4. The functions and menus are displayed one by one.

To exit DEMO


Press any button.

Erasing or adding channels

After AUTO SET UP, you can erase unnecessary channels or add the channels you want. Preset channels during the day rather than late at night, when some channels may not be broadcasting.

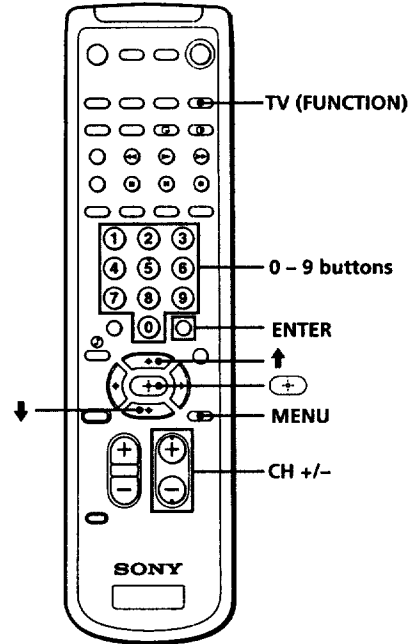


1 Press TV (FUNCTION).

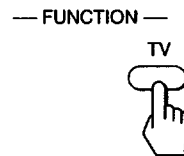



2 Press MENU.

The main menu appears.

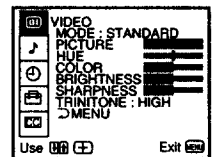



3 Press ↑ or ↓ to select, and press (+).

The SET UP menu appears.

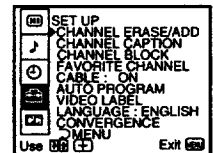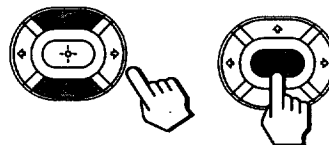

4 Press ↑ or ↓ to select CHANNEL ERASE/ADD, and press (+).


The CHANNEL ERASE/ADD menu appears.

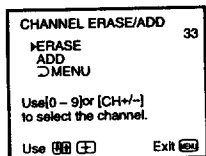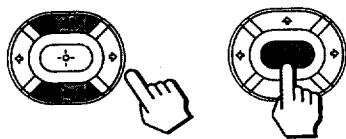

5 Erase and/or add channels:

To erase an unwanted channel

- (1) Make sure the cursor (▶) is beside ERASE.
- (2) Press CH +/- or the 0-9 buttons to select the channel you want to erase, and press ENTER.

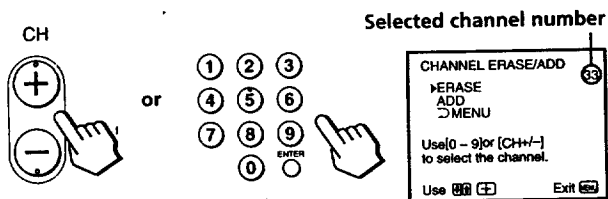


- (3) Press (+).

The "-" indication appears beside the channel number, showing that the channel is erased from the preset memory.




To add a channel that you want

- (1) Press ↑ or ↓ to move the cursor (▶) to ADD.
- (2) Press the 0-9 buttons to select the channel you want to add, and press ENTER.

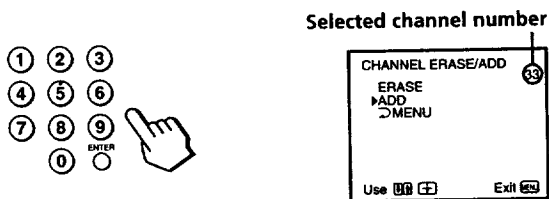

- (3) Press (+).

The "+" indication appears beside the channel number, showing that the channel is added to the preset memory.

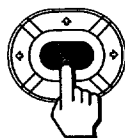

6 To erase and/or add other channels, repeat step 5.

7 Press MENU to return to the original screen.



Notes

- If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.
- Erasing and adding channels is also available for the AUX input.

Adjusting convergence (CONVERGENCE)

The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs. To correct this, adjust convergence. You do not have to do this procedure if you perform AUTO SET UP (page 21). Do this procedure only when you want to adjust it manually.


EN

1 Press MENU.


2 Press ↑ or ↓ to select (CONV), and press (+).

3 Press ↑ or ↓ to select CONVERGENCE, and press (+).

The CONVERGENCE adjustment screen appears.

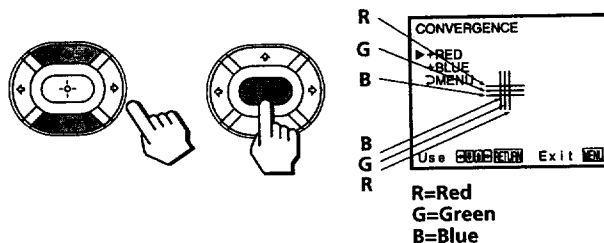


- 4** Press \uparrow or \downarrow to move the cursor (\blacktriangleright) to the symbol showing the line you want to adjust, and press \oplus .

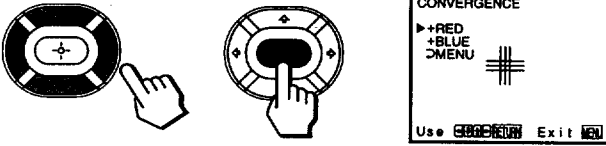

- +RED : Red vertical and horizontal line (left/right/up/down adjustment)
- +BLUE : Blue vertical and horizontal line (left/right/up/down adjustment)

- 5** Press \uparrow , \leftarrow , \downarrow , or \rightarrow to move the line until it converges with the center green line, and press \oplus .

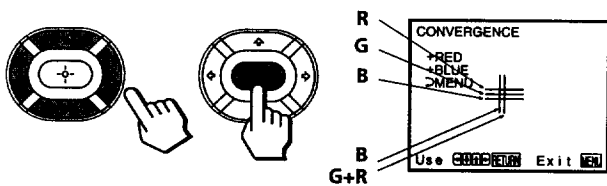

| To move | Press |
|---------|---------------|
| Up | \uparrow |
| Down | \downarrow |
| Right | \rightarrow |
| Left | \leftarrow |

- 6** Repeat steps 4 and 5 to adjust the other lines until all three lines converge and are seen as a white cross.

- 7** Press MENU to return to the original screen.

Setting cable TV on or off

If you have connected the projection TV to a cable TV system, set CABLE to ON (the factory setting). If not, set CABLE to OFF.


You do not have to do this procedure if you perform AUTO SET UP (page 21). Do this procedure only when you want to set it manually.

- 1** Press MENU.

- 2** Press \uparrow or \downarrow to select ☰ , and press \oplus .

- 3** Set CABLE to ON or OFF:

- (1) Press \uparrow or \downarrow to move the cursor (\blacktriangleright) to CABLE, and press \oplus .
- (2) Press \uparrow or \downarrow to select ON or OFF, and press \oplus .

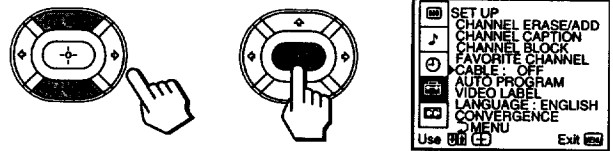

- 4** Press MENU to return to the original screen.


Note


- If CABLE appears in gray, the projection TV is set to a video input and you cannot select CABLE. Press ANT so that a channel number appears.

Presetting channels

You can preset TV channels easily by using the AUTO PROGRAM feature.

You do not have to do this procedure if you perform AUTO SET UP (page 21). Do this procedure only when you want to set it manually.

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select , and press **⊕**.
- 3 Press **↑** or **↓** to select **AUTO PROGRAM**, and press **⊕**.

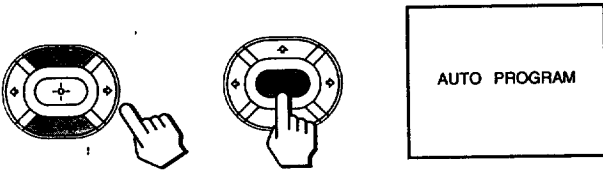

"AUTO PROGRAM" appears on the screen and the projection TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed.

- 4 Press **MENU** to return to the original screen.

To exit AUTO PROGRAM

Press any button.

Notes


- If the AUTO PROGRAM menu appears in gray, the projection TV is set to a video input and you cannot select AUTO PROGRAM. Press ANT so that a channel number appears.
- Presetting channels is also available for the AUX input.

Changing the menu language


If you prefer Spanish or French to English, you can change the menu language.

You do not have to do this procedure if you select the language during AUTO SET UP (page 21).


Do this procedure only when you want to set it manually.

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select , and press **⊕**.
- 3 Press **↑** or **↓** to select **LANGUAGE**, and press **⊕**.

EN

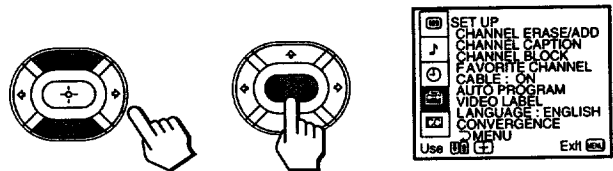

- 4 Press **↑** or **↓** to select your favorite language, "**ENGLISH**", "**ESPAÑOL**", or "**FRANÇAIS**" and press **⊕**.

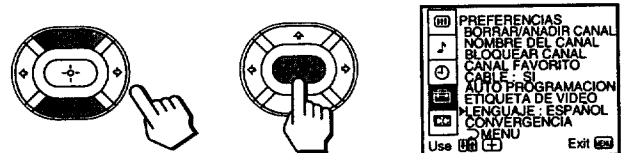


- 5 Press **MENU** to return to the original screen.

Note

- Certain parts of the Spanish or French menus remain in English.

Watching the TV

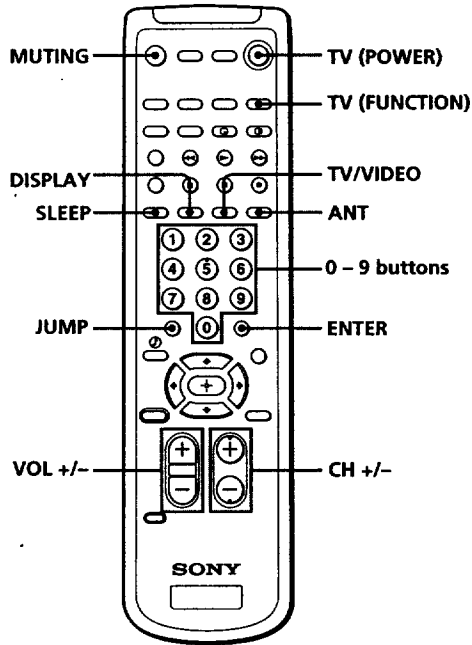


1 Press TV (POWER) to turn on the projection TV.

The TIMER/STANDBY indicator flashes until the picture appears.



If "VIDEO" appears on the screen, press ANT so that a channel number appears.

2 Press TV (FUNCTION).

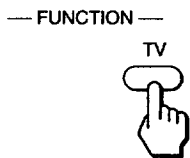


Once you press TV (FUNCTION), the projection TV function is set unless another function button is pressed.

3 Select the channel you want:

To select a channel directly


Press the 0-9 buttons, and press ENTER.

For example, to select channel 10, press 1, 0 and ENTER.

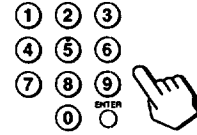



To scan through channels

Press CH +/- until the channel you want appears.

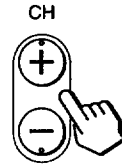

The channel can also be selected without pressing ENTER.

4 Press VOL +/- to adjust the volume.

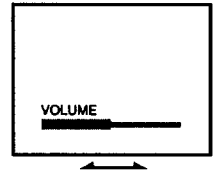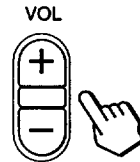

Switching quickly between two channels

You can use the JUMP button to switch or "jump" back and forth between two channels.

Press JUMP.



Pressing JUMP again switches the channel back to the one you selected last.

Note

- You cannot jump to channels you scanned through using the CH +/- buttons.

Muting the sound

Press MUTING.


"MUTING" appears on the screen.



To restore the sound, press MUTING again, or press VOL +.

Watching two programs at one time — PIP/P&P (Twin View™)/CH INDEX


You can watch both the main/right picture and a window/left picture simultaneously using the Picture-in-Picture (PIP) or the Picture-and-Picture (Twin View™) feature.

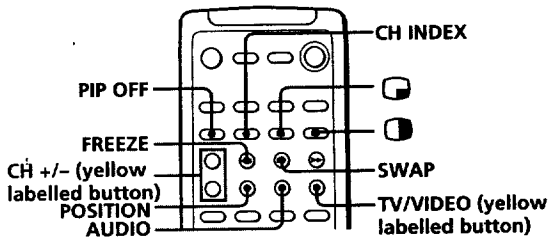


Use the yellow labelled buttons for PIP operations.

Displaying a window picture (PIP)

Press .

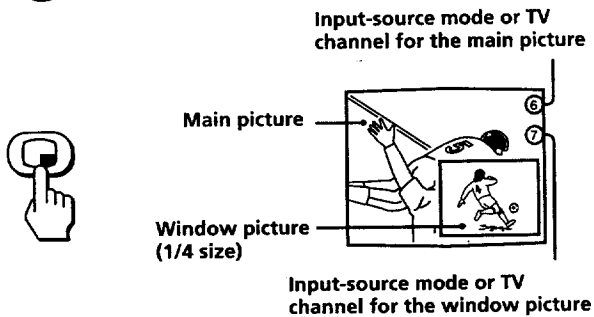

 
Press  repeatedly to display a smaller window picture.

Each time you press , the size of the window picture changes as follows: 1/4 size → 1/9 size → 1/16 size.

To remove the window picture, press PIP OFF.

Displaying a left picture (P&P)

Press .

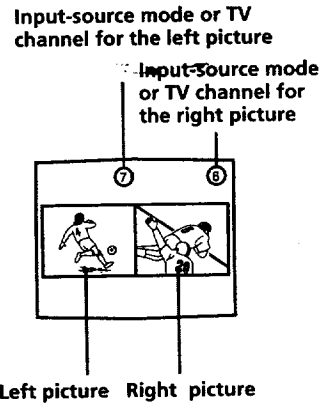

To restore the normal picture, press PIP OFF.

Notes


- If the main/right picture is not receiving an image, the window/left picture may become a noisy picture.
- The window/left picture sound is also output from the AUDIO (VAR/FIX) OUT jacks when you listen to it.

Changing the window/left picture input mode

Press TV/VIDEO (yellow labelled button) in PIP or P&P mode to select the input mode.

Each time you press TV/VIDEO (yellow labelled button), "TV", "VIDEO 1", "VIDEO 2", "VIDEO 3", and "VIDEO 4" appear in sequence.

TV/VIDEO

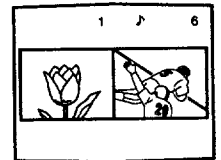

A window/left picture will appear in the same input mode as the last time you used PIP.


Notes

- If you connect your VCR without a cable box, your PIP input source is a VCR. If you connect your VCR with a cable box, your PIP input source is a VCR or cable box.
- When the video label for VIDEO 4 is set to SKIP, "VIDEO 4" does not appear on the display.

Listening to the sound of the window/left picture

Press **AUDIO** in PIP or P&P mode.


The μ display appears above the window/left picture for a few seconds, indicating that the window/left picture sound is being received.

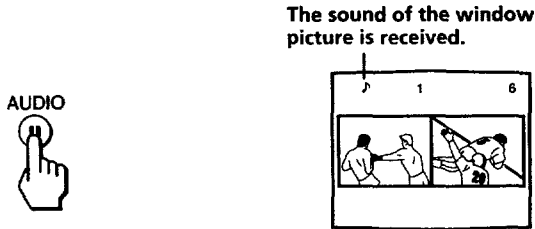

To restore the main picture sound, press **AUDIO** again. The μ display moves to the main picture channel number.

Changing TV channels in the window/left picture

Press **CH +/-** (yellow labelled button) in PIP or P&P mode.

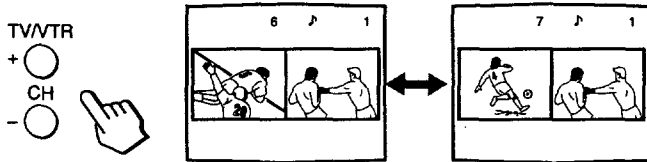

Changing the position of the window picture

Press **POSITION** in PIP mode.


Each time you press **POSITION**, the window picture will move counterclockwise on the screen.



Swapping the main/right and window/left pictures

Press **SWAP** in PIP or P&P mode.

Each time you press **SWAP**, the images and sound from the main/right and window/left pictures switch places with another.

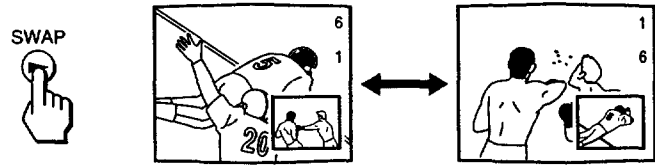

Note

- The channels being received through the AUX connector cannot be displayed as a window picture.


Watching multiple TV channels at one time (CH INDEX)

EN

You can display all the preset channels in sequence.

1 Press CH INDEX.

The main picture is displayed in the center with a pink frame and 12 window pictures are displayed around the main picture.

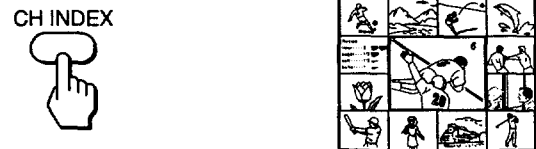

Each time you press **CH INDEX**, the 12 window pictures will rotate and a new picture will appear.

2 Press \uparrow , \leftarrow , \downarrow or \rightarrow to move the pink frame to the channel you want to watch, and press \oplus .

The selected channel appears on the screen.


To display eight favorite channels, press \oplus .

To return to the normal picture, press **PIP OFF**.

Freezing the picture

(FREEZE)

The FREEZE feature is useful when you want to write down an information such as a recipe from a cooking program, a displayed address, or a phone number.

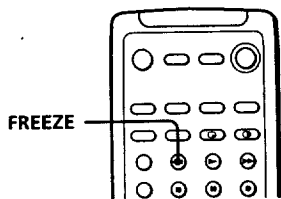


Press FREEZE.



The frozen picture differs depending on the current display mode.

Normal mode

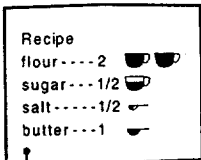


The current picture freezes.

PIP mode




The main picture freezes and the window picture disappears.

P&P mode

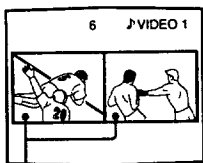

Both pictures freeze.

CH INDEX mode

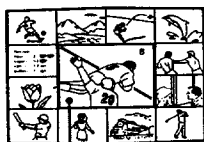


Only the main picture freezes.

To cancel the frozen picture, press FREEZE again.



Adjusting the picture (VIDEO)

When watching TV programs, you can adjust the picture to suit your taste. You can adjust the picture of video input(s) as well.

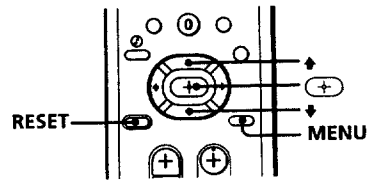

1 Press MENU.


2 Press \uparrow or \downarrow to select \square , and press \oplus .

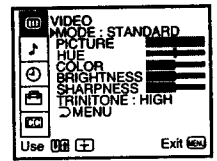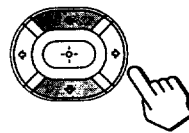



3 Select the item you want to adjust.

For example:

(1) To adjust the brightness, press \uparrow or \downarrow to move the cursor (\blacktriangleright) to BRIGHTNESS.

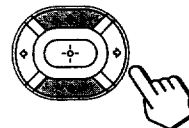


(2) Press \oplus .

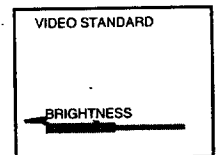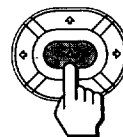



4 Adjust the selected item:

(1) Press ↑, ←, ↓, or → to adjust the item.

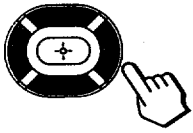

(2) Press (+).

The new setting appears in the VIDEO menu.

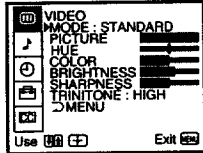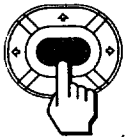

For details on each item, see "Description of adjustable items" below.

5 To adjust other items, repeat steps 3 and 4.

6 Press MENU to return to the original screen.

Description of adjustable items

| Item | Press ← or ↓ to | Press → or ↑ to |
|------------|--|---|
| PICTURE | Decrease picture contrast and give soft color. | Increase picture contrast and give vivid color. |
| HUE | Make picture tones become purplish. | Make picture tones become greenish. |
| COLOR | Decrease color intensity. | Increase color intensity. |
| BRIGHTNESS | Darken the picture. | Brighten the picture. |
| SHARPNESS | Soften the picture. | Sharpen the picture. |


To restore the factory settings

Press RESET after displaying and selecting the VIDEO menu.

All of the settings are restored to the factory settings.

Adjusting the color temperature (TRINITONE)

The TRINITONE feature controls the color temperature, permitting white balance preference adjustment without affecting skin tones.

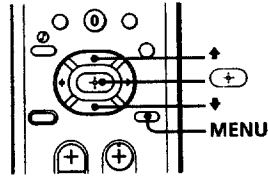


1 Press MENU.




2 Press ↑ or ↓ to select (III) and press (+).

EN

3 Press ↑ or ↓ to select TRINITONE and press (+).

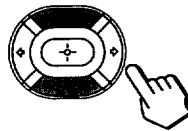

4 Press ↑ or ↓ to select NTSC STD, MEDIUM, or HIGH and press (+).

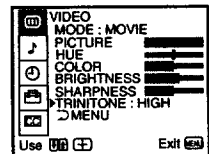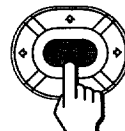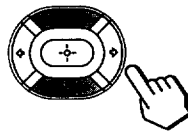


| Choose | To |
|----------|-------------------------|
| HIGH | a cool (bluish) white. |
| MEDIUM | a neutral white. |
| NTSC STD | a warm (reddish) white. |

Selecting the video mode (VIDEO)

The video mode feature allows you to choose four different modes of picture settings. Choose the one that best suits the type of program that you want to watch.

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select **III**, and press **+**.
- 3 Press **↑** or **↓** to select **MODE**, and press **+**.
- 4 Press **↑** or **↓** to select **VIVID**, **STANDARD**, **MOVIE**, or **SPORTS** mode, and press **+**.

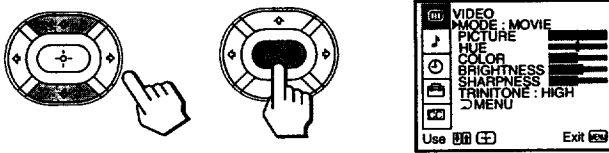

| Choose | To |
|----------|---|
| VIVID | Receive a highly contrasted, sharp picture. |
| STANDARD | Receive a standard picture. |
| MOVIE | Receive a finely detailed picture. |
| SPORTS | Receive a colorful, bright picture. |


- 5 Press **MENU** to return to the original screen.

Note


- The settings for these modes can be adjusted in the VIDEO menu.

Adjusting the sound (AUDIO)

You can adjust the quality of the TV sound to suit your taste. You can adjust the sound of the video input(s) as well.

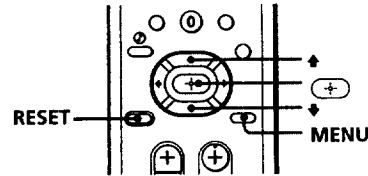

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select **♪**, and press **+**.

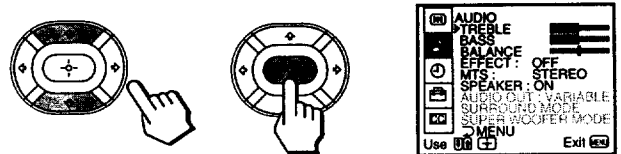


- 3 Select the item you want to adjust.
For example:

- (1) To adjust bass, press **↑** or **↓** to move the cursor (▶) to **BASS**.





- (2) Press **+**.

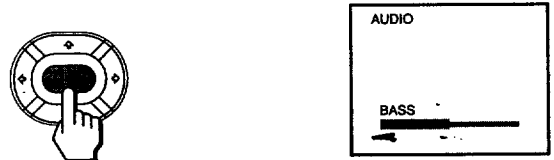

Using audio effect (EFFECT)


4 Adjust the selected item:

(1) Press \uparrow , \leftarrow , \downarrow , or \rightarrow to adjust the item.

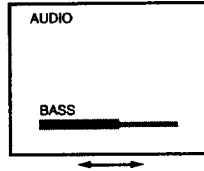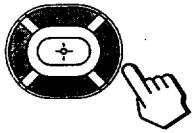


(2) Press \oplus .

The new setting appears in the AUDIO menu.

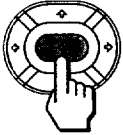

For details on each item, see "Description of adjustable items" below.

Using the Ⓜ (audio effect) button

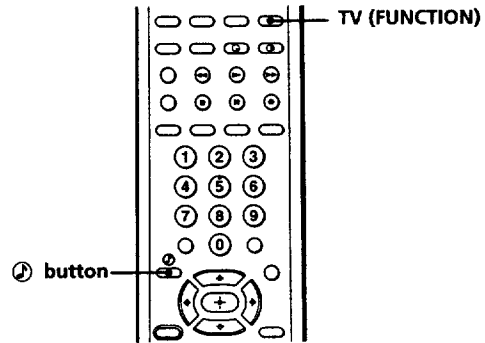


EN

1 Press TV (FUNCTION).

2 Press Ⓜ .

Each time you press the Ⓜ button, the display changes as follows:

 SRS \rightarrow 3D MONO \rightarrow EFFECT OFF



| Choose | To |
|------------|---|
| SRS | When the program's audio signal is stereo or encoded, SRS expands the material and embraces you with dynamic three-dimensional sound. |
| 3D MONO | Receive monaural sound with a surround-like effect. |
| EFFECT OFF | Cancel audio effect. |

5 To adjust other items, repeat steps 3 and 4.

6 Press MENU to return to the original screen.

Description of adjustable items

| Item | Press \downarrow or \leftarrow to | Press \uparrow or \rightarrow to |
|---------|---------------------------------------|---------------------------------------|
| TREBLE | Decrease the treble response. | Increase the treble response. |
| BASS | Decrease the bass response. | Increase the bass response. |
| BALANCE | Emphasize the left speaker's volume. | Emphasize the right speaker's volume. |

To restore the factory settings


Press RESET after displaying and selecting the AUDIO menu.


All of the settings are restored to the factory settings.


Note

- When SPEAKER (page 35) is OFF and AUDIO OUT (page 36) is in the FIXED condition, the volume, TREBLE, BASS, and BALANCE cannot be adjusted.


Using the menu to set audio effect

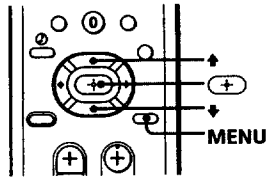

- 1 Press MENU.
- 2 Press ↑ or ↓ to select , and press (+).
- 3 Press ↑ or ↓ to select EFFECT, and press (+).

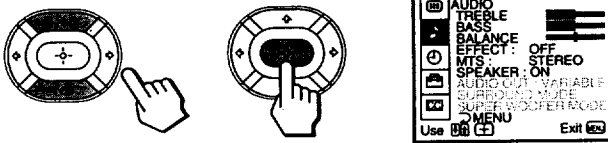


- 4 Press ↑ or ↓ to select SRS, 3D MONO or OFF, and press (+).

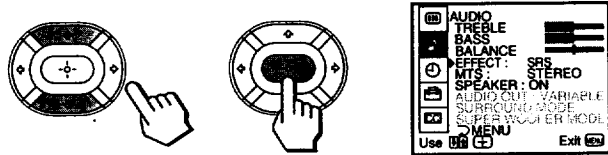


- 5 Press MENU to return to the original screen.

Selecting stereo or bilingual programs (MTS)

The Multichannel TV Sound (MTS) feature allows you to enjoy stereo sound or Second Audio Programs (SAP) of your choice. The initial setting is stereo sound (STEREO).

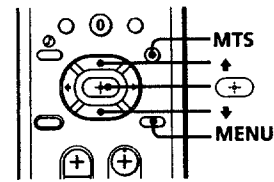

Press MTS repeatedly to select STEREO, SAP, or MONO.


STEREO → SAP → MONO


| Choose | To |
|--------|---|
| STEREO | Listen to stereo sound. The STEREO indicator on the projection TV lights up when a stereo broadcast is received. |
| SAP | Listen to bilingual programs. There is no sound when the SAP signal is not broadcasting. |
| MONO | Listen to monaural sound. Reduce noise during stereo broadcasts. |

Note

- Stereo and SAP sounds are subject to program sources.

To set MTS using the menu

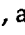
- 1 Press MENU.
- 2 Press ↑ or ↓ to select , and press (+).
- 3 Press ↑ or ↓ to select MTS, and press (+).
- 4 Press ↑ or ↓ to select STEREO, SAP, or MONO.
- 5 Press MENU to return to the original screen.

Setting the speaker switch (SPEAKER)

You may switch off the projection TV speakers when, for example, you want to listen to the sound through a stereo system.

If you connect an amplifier with Dolby Pro Logic decoder to the CENTER SPEAKER IN terminals, you can use the projection TV speakers as center speaker. After making the connection (page 15), set SPEAKER to CENTER.


If you connect the Sony SAVA series speaker system to the AUDIO (VAR/FIX) OUT connectors, you can take advantage of the speakers' surround sound and super woofer mode. After making the connections (page 16), set SPEAKER to SAVA SP, then adjust SURROUND MODE or SUPER WOOFER MODE.

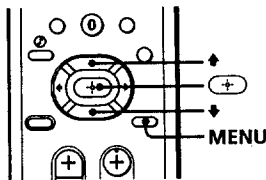


1 Press MENU.

2 Press ↑ or ↓ to select , and press (+).

3 Press ↑ or ↓ to select SPEAKER, and press (+).

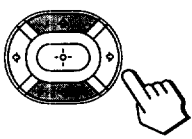

4 Press ↑ or ↓ to select ON, OFF, CENTER or SAVA SP, and press (+).

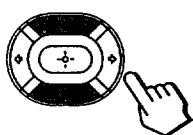

5 Press MENU to return to the original screen.


| Choose | To |
|---------|---|
| ON | Listen to the sound from the projection TV. |
| OFF | Turn off the projection TV speaker sound and listen to the projection TV's sound solely through the audio system speakers. |
| CENTER | Use the projection TV center speakers as the center speaker in another surround audio system. |
| SAVA SP | Turn off the projection TV speaker sound and listen to the projection TV's sound through the Sony SAVA series speaker system. You can adjust volume, muting, surround modes, and super woofer mode with the remote control supplied with the projection TV. |

To select surround sound or super woofer mode of the SAVA speaker system

After setting SPEAKER to SAVA SP, follow the procedure below.

Press ↑ or ↓ to select SURROUND MODE or SUPER WOOFER MODE, and press (+).

For details on each option, refer to the operating instructions of the speaker system.

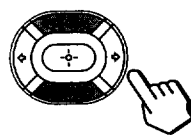


Note

- This feature is only for Sony SAVA speaker system with an operation capability for KP-48V75, KP-53V75, KP-53V75C, and KP-61V75.


EN

Setting audio out (AUDIO OUT)


You can change AUDIO OUT to VARIABLE or FIXED when SPEAKER is set to OFF.
AUDIO OUT is variable when SPEAKER is set to ON.

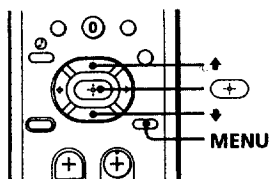

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select **♪**, and press **⊕**.
- 3 Press **↑** or **↓** to select **AUDIO OUT**, and press **⊕**.

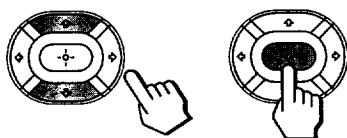

- 4 Press **↑** or **↓** to select **VARIABLE** or **FIXED**, and press **⊕**.

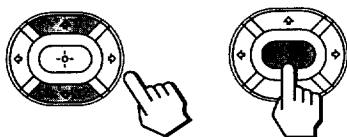

VARIABLE: Sound output varied according to the projection TV settings. You can adjust the volume, bass, treble, and balance.

FIXED: Sound output is always fixed to a certain level. The volume, bass, treble, and balance are also fixed to the factory settings.

- 5 Press **MENU** to return to the original screen.

Note

- If **AUDIO OUT** appears in gray, set **SPEAKER** to **OFF**.

Setting daylight saving time (DAYLIGHT SAVING)


If your area uses daylight saving time, change **DAYLIGHT SAVING** setting depending on the season, before setting the current time.

Daylight saving start




- After the first Sunday in April, set **DAYLIGHT SAVING** to **YES**. Current time setting (right column) automatically moves one hour ahead.

Daylight saving end




- After the last Sunday in October, set **DAYLIGHT SAVING** to **NO**. Current time setting automatically moves one hour back.

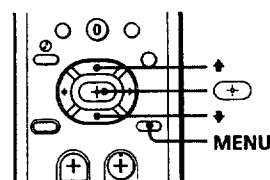

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select **⌚**, and press **⊕**.
- 3 Press **↑** or **↓** to select **DAYLIGHT SAVING**, and press **⊕**.

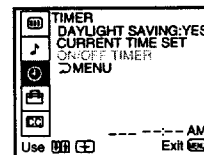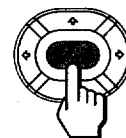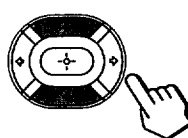

- 4 Press **↑** or **↓** to select **YES** or **NO**, and press **⊕**.

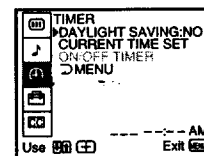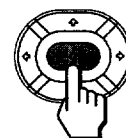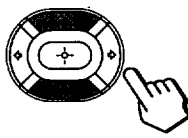


| Choose | To |
|--------|--------------------------------|
| YES | Set for daylight saving start. |
| NO | Set for daylight saving end. |

- 5 Press **MENU** to return to the original screen.

Setting the clock

(CURRENT TIME SET)

Setting the clock enables you to turn the projection TV on and off with the timer. Make sure to set daylight saving time first.

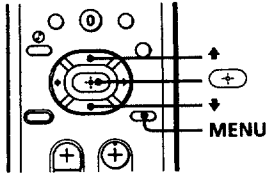

- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select \oplus , and press \odot .
- 3 Press \uparrow or \downarrow to select CURRENT TIME SET, and press \odot .




- 4 Make sure the cursor (\blacktriangleright) is to the left of "---- AM", and press \odot .




- 5 Set the current day of the week and time.

(1) Press \uparrow or \downarrow to set the day of the week, and press \odot .

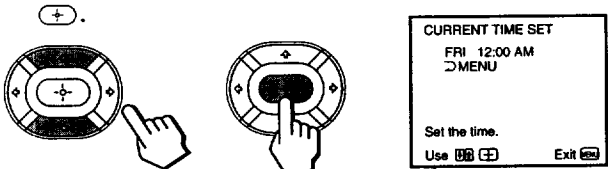

(2) Set the hour and minutes in the same way as in step (1). When you press \odot after setting the minutes, the clock starts.

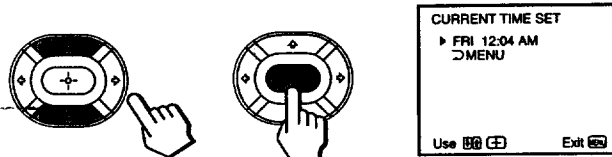


- 6 Press MENU to return to the original screen.


Setting the timer to turn the projection TV on and off

(ON/OFF TIMER)

You can set the projection TV to turn on and off at the times you specify. Make sure the clock is set correctly. If it is not, set the clock first (left column).

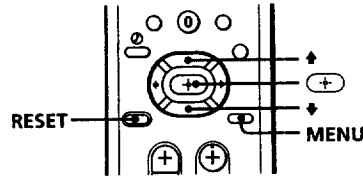

- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select \ominus , and press \odot .
- 3 Press \uparrow or \downarrow to select ON/OFF TIMER, and press \odot .


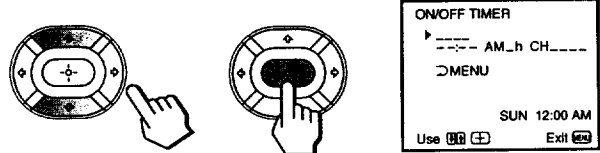


- 4 Press \odot and enter the ON/OFF TIMER setting.

(1) Press \uparrow or \downarrow to set the day(s), and press \odot .


Each time you press \uparrow or \downarrow , the days cycle as follows:

EVERY SUN-SAT \rightarrow EVERY MON-FRI \rightarrow
 SUNDAY \rightarrow ... \rightarrow SATURDAY \rightarrow EVERY
 SUNDAY \rightarrow ... \rightarrow EVERY SATURDAY

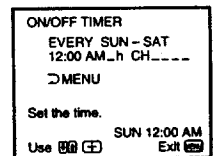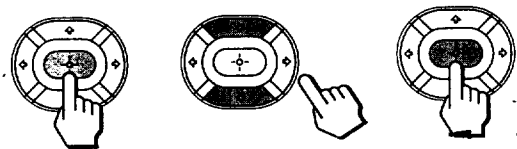


(continued)

- (2) Press \uparrow or \downarrow to set the time (hour then minutes) that you want to turn on the projection TV, and press \oplus .

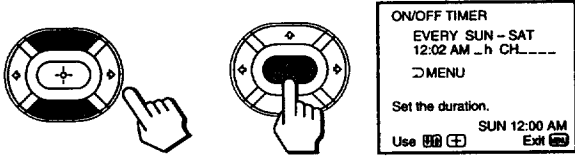


- (3) Press \uparrow or \downarrow to set the time duration, and press \oplus .

Each time you press \uparrow , the time duration increases by one hour up to a maximum of six hours.

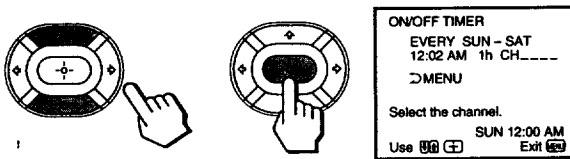

- (4) Press \uparrow or \downarrow to select the channel, and press \oplus .

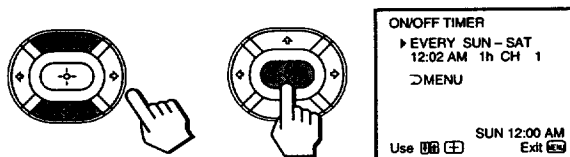

The TIMER/STANDBY indicator on the projection TV lights up.

- 5 To set the other program, press \oplus , and repeat step 4.**
- 6 Press MENU to return to the original screen.**

One minute before the projection TV turns off, the message "TV will turn off soon." is displayed on the screen.

To cancel the timer


In step 3 or 4, press RESET.

Note


- If you unplug the projection TV or a power interruption occurs, the ON/OFF TIMER setting will be erased. Reset the current time, then set the timer.

Customizing the channel names (CHANNEL CAPTION)


You can add a caption for up to 12 channels. This feature allows you to easily identify which channel you are watching. You can make your own caption.

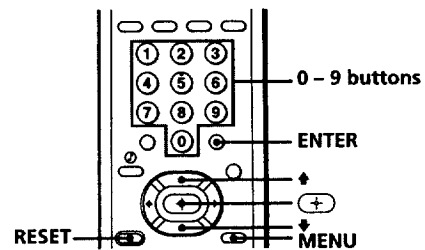


- 1 Press MENU.**
- 2 Press \uparrow or \downarrow to select [] , and press \oplus .**

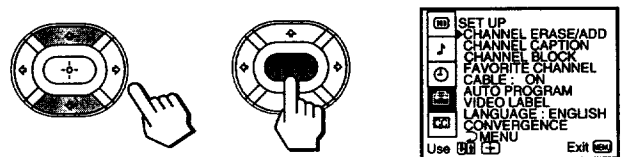

- 3 Press \uparrow or \downarrow to select CHANNEL CAPTION, and press \oplus .**

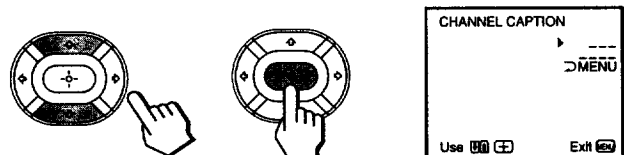

- 4 Press \oplus and press \uparrow or \downarrow to select the channel that you want to caption, and press \oplus .**

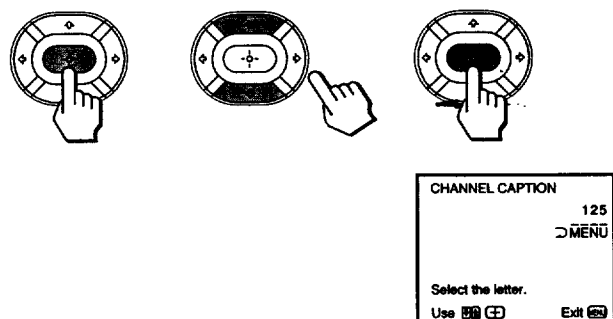


5 Enter the letters (up to four) to caption the channel:



(1) Press \uparrow or \downarrow to select the first letter.

Each time you press \uparrow or \downarrow , the letter changes as follows:

0...9 \leftrightarrow A...Z \leftrightarrow &, /, _ (blank space)

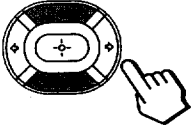

(2) Press \oplus .

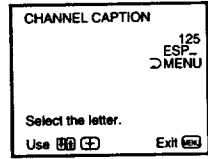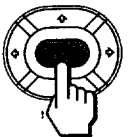

(3) Repeat steps (1) and (2) to select the remaining letters, and press \oplus .

6 Repeat steps 4 and 5 to caption other channels.

7 Press MENU to return to the original screen.


After you customize the channel, the channel caption appears green.

To erase a caption
In step 5, press RESET.

- Notes**
- If the CHANNEL CAPTION menu appears in gray, the projection TV is set to a video input, and you cannot select CHANNEL CAPTION. Press ANT so that a channel number appears.
 - If more than 90 seconds elapse after you press a button, the menu disappears automatically.
 - The channel caption feature is not available for the AUX input.




Blocking out a channel (CHANNEL BLOCK)

The channel block feature allows you to prevent children from watching unsuitable programs. You can block out two channels.


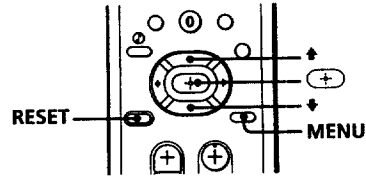


- 1 Press MENU.**
- 2 Press \uparrow or \downarrow to select Ⓜ , and press \oplus .**
- 3 Press \uparrow or \downarrow to select CHANNEL BLOCK, and press \oplus .**



EN

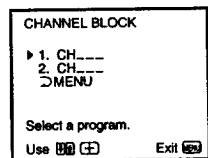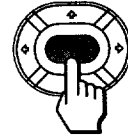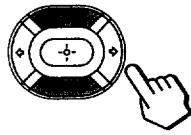

4 Press \uparrow or \downarrow to select program 1 or 2, and press \oplus .

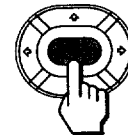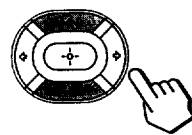


5 Press \uparrow or \downarrow to select the channel which you want to block out, and press \oplus .

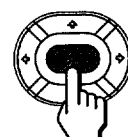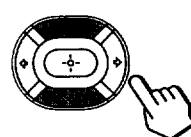

6 Press MENU to return to the original screen.

When you select the blocked channel, the message "BLOCKED" appears on the screen.

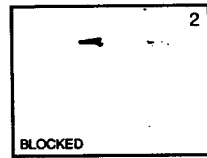


To cancel a CHANNEL BLOCK setting
In step 4 or 5, press RESET.


- Note**
- Once you use CHANNEL BLOCK, Caption Vision and XDS of the blocked channel and the selected channel output from MONITOR OUT are also blocked out.


Setting your favorite channels (FAVORITE CHANNEL)

The favorite channel feature allows your projection TV to memorize your favorite channels easily. If you set to AUTO, the last eight channels you selected with the 0-9 buttons are automatically set as your favorite channels. If you want to input your own selection of channels, set to MANUAL.


Setting your favorite channels

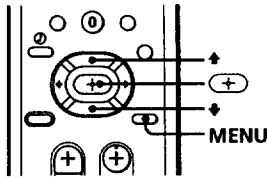

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select , and press **+**.
- 3 Press **↑** or **↓** to select **FAVORITE CHANNEL**, and press **+**.

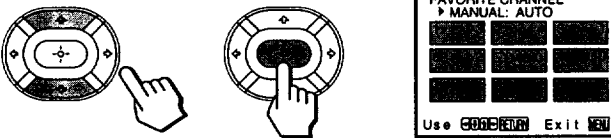


- 4 Press **+** and press **←** or **→** to select **AUTO** or **MANUAL**, and press **+**.

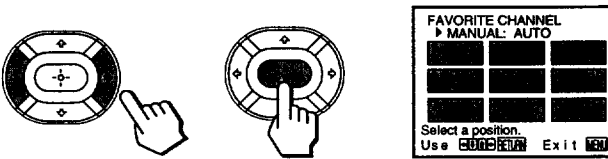


If you select **AUTO**, skip steps 5 to 7. The last eight channels you selected with the 0-9 buttons are automatically set as your favorite channels.

If you select **MANUAL**, the favorite channel numbers become white, indicating that favorite channels can be entered.

- 5 Press **↑**, **←**, **↓** or **→** to select a favorite channel number, and press **+**.

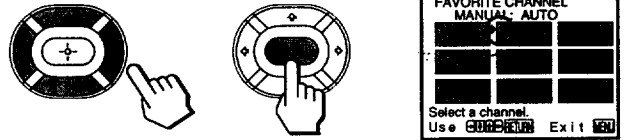

- 6 Press **↑** or **↓** to select the channel that you want to set as your favorite channel, and press **+**.

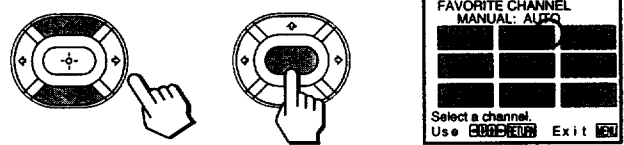


- 7 To set the other favorite channels, repeat steps 5 and 6.

- 8 Press **MENU** to return to the original screen.

Notes

- If more than 90 seconds elapse after you press another button, the menu disappears automatically.
- The favorite channel feature is not available for the AUX input.

Selecting your favorite channel

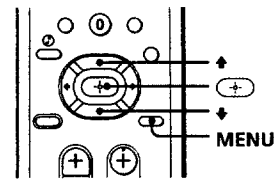


- 1 Press **+**.
The picture of the current channel is displayed in the center with a pink frame and the eight favorite channels are displayed around it.



- 2 Press **↑**, **←**, **↓** or **→** to move the pink frame to the channel you want to watch, and press **+**.


The selected channel appears on the screen.

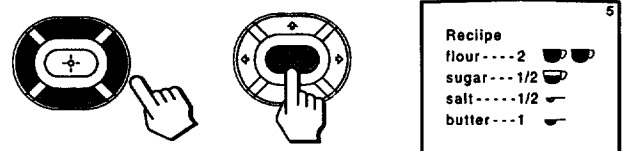

Setting video labels


(VIDEO LABEL)

The video label feature allows you to label each input mode so that you can easily identify the connected equipment. For example, you can label VIDEO 1 as VHS.

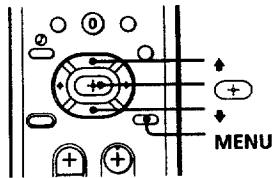


Each time you press \uparrow or \downarrow , the label changes as follows:

 
VIDEO 1




VIDEO 2

 

VIDEO 3

 

VIDEO 4

 



* The projection TV will skip the VIDEO 4 connection when you scan through video sources pressing the TV / VIDEO button.

EN




1 Press MENU.

2 Press \uparrow or \downarrow to select , and press \oplus .



3 Press \uparrow or \downarrow to select VIDEO LABEL, and press \oplus .

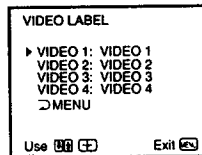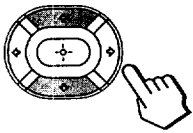

4 Press \uparrow or \downarrow to select the input mode you want to label, and press \oplus .

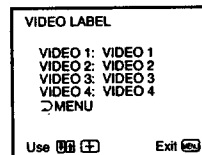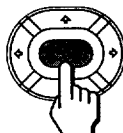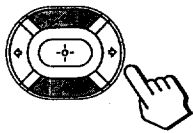

5 Press \uparrow or \downarrow to select the label, and press \oplus .

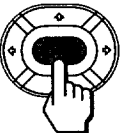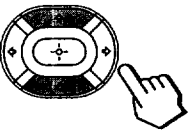


Note

- If more than 90 seconds elapse before you press another button, the menu disappears automatically.


Setting Caption Vision (CAPTION VISION)

Operating video equipment


Some programs are broadcast with Caption Vision. To display Caption Vision, select either CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3, or TEXT4 from the menu. CC1, CC2, CC3, or CC4 shows you on-screen version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1, TEXT2, TEXT3, or TEXT4 shows you on-screen information presented using either half or the whole screen. It is not usually related to the program.

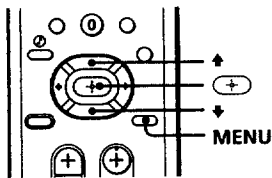

- 1 Press **MENU**.
- 2 Press **↑** or **↓** to select **CC**, and press **+**.

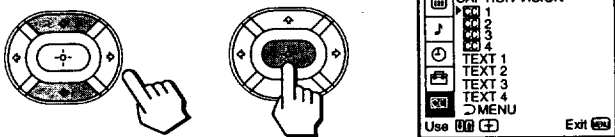

- 3 Press **↑** or **↓** to select the caption type, and press **+**.

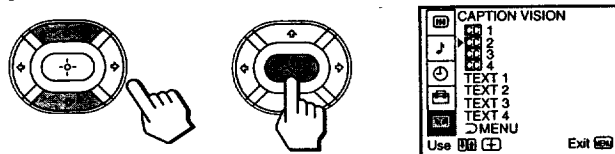

- 4 Press **MENU** to return to the original screen.

To display Caption Vision


Press **DISPLAY**. (See page 27 for details.)

Notes

- Poor reception of TV programs can cause errors in Caption Vision and XDS.
- Captions may appear with a white box or other errors instead of a certain word.
- XDS, Caption Vision, and the status display cannot be used at the same time.
- For details on XDS, see page 27.


You can use the supplied remote control to operate Sony or non-Sony video equipment that has an infrared remote sensor. For this operation, set the manufacturer's code number.

Setting the manufacturer's code

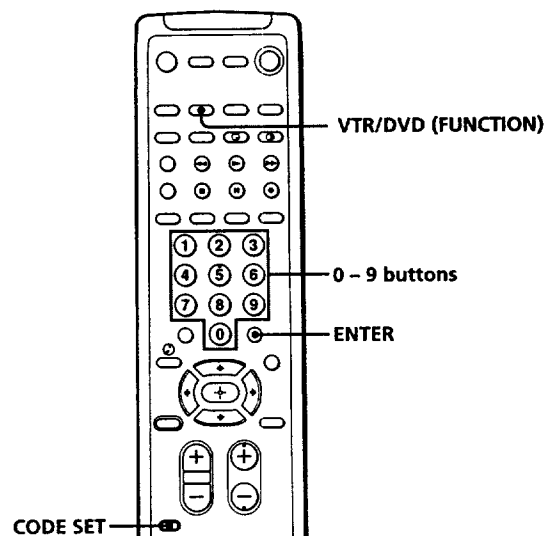

Press the **CODE SET**, **VTR/DVD (FUNCTION)**, and **0 - 9** buttons to enter the manufacturer's code number (see the chart on page 43), then press **ENTER**.

For example, to operate a Sony 8 mm VCR, press **CODE SET**, **VTR/DVD (FUNCTION)**, **3**, **0**, **2**, and **ENTER**.

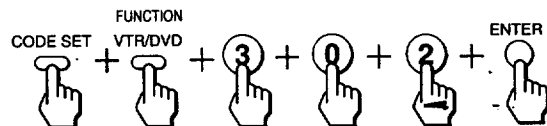

VCR manufacturer code numbers

| Manufacturer | Code number |
|---------------------------|--|
| Sony | 301, 302, 303 |
| Aiwa | 338 |
| Audio Dynamic | 314, 337 |
| Bell & Howell (M. Wards) | 330, 343 |
| Brocsonic | 319 |
| Canon | 309, 308 |
| Citizen | 332 |
| Craig | 315, 302, 332 |
| Curtis Mathis | 304, 338, 309 |
| Daewoo | 341, 312, 309 |
| DBX | 314, 336, 337 |
| Dimensia | 304 |
| Emerson | 319, 320, 316, 317, 318 |
| Fisher | 330, 334, 335, 333 |
| Funai | 338 |
| General Electric | 329, 304, 309 |
| Goldstar | 332 |
| Hitachi | 306, 304, 305 |
| Instant Replay | 309, 308 |
| JC Penny | 309, 305, 304, 330, 314, 336, 337 |
| JVC | 314, 336, 337 |
| Kenwood | 314, 336, 332, 337 |
| LXI (Sears) | 332, 305, 333, 334, 330, 335 |
| Magnavox | 308, 309 |
| Marantz | 314, 336, 337 |
| Marta | 332 |
| Memorex | 309, 335 |
| Minolta | 305, 304 |
| Mitsubishi/MGA | 323, 324, 325, 326 |
| Multitech | 325, 338, 321 |
| NEC | 314, 336, 337 |
| Olympic | 309, 308 |
| Panasonic | 308, 309, 306, 307 |
| Pentax | 305, 304 |
| Philco | 308, 309 |
| Philips | 308, 309 |
| Pioneer | 308 |
| Quasar | 308, 309 |
| RCA/PROSCAN | 304, 305, 308, 309, 311, 312, 313 |
| Realistic | 309, 330, 328, 335, 324, 338 |
| Sansui | 314 |
| Singer | 315 |
| Samsung | 322, 313, 321 |
| Sanyo | 330, 335 |
| Scott | 312, 313, 321, 335, 323, 324, 325, 326 |
| Sharp | 327, 328 |
| Shintom | 315 |
| Signature 2000 (M. Wards) | 338, 327 |
| Sylvania | 308, 309, 338 |
| Symphonic | 338 |
| Tashiro | 332 |
| Tatung | 314, 336, 337 |
| Teac | 314, 336, 338, 337 |
| Technics | 309, 308 |
| Toshiba | 312, 311 |
| Wards | 327, 328, 335, 331, 332 |
| Yamaha | 330, 314, 336, 337 |
| Zenith | 331 |

MDP manufacturer code numbers

| Manufacturer | Code number |
|--------------|-------------|
| Sony | 701 |
| Kenwood | 707 |
| Magnavox | 703 |
| Maranz | 702 |
| Mitsubishi | 702 |
| Panasonic | 704 |
| Philips | 703 |
| Pioneer | 702 |
| RCA | 702 |
| Sanyo | 706 |
| Sharp | 705 |
| Yamaha | 703 |

DVD manufacturer code numbers

| Manufacturer | Code number |
|--------------|-------------|
| Sony | 751 |


Notes

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. This is because your equipment may use a code that is not included with this remote control. In this case, please use the equipment's own remote control unit.
- The code numbers for Sony equipment are assigned at the factory as follows:

| | |
|--------------------|---|
| VHS VCR | 301 (preset code for the supplied remote control) |
| 8 mm VCR | 302 |
| Beta, ED Beta VCRs | 303 |
- Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code number may revert to the factory setting and must be reset.

EN

Operating video equipment

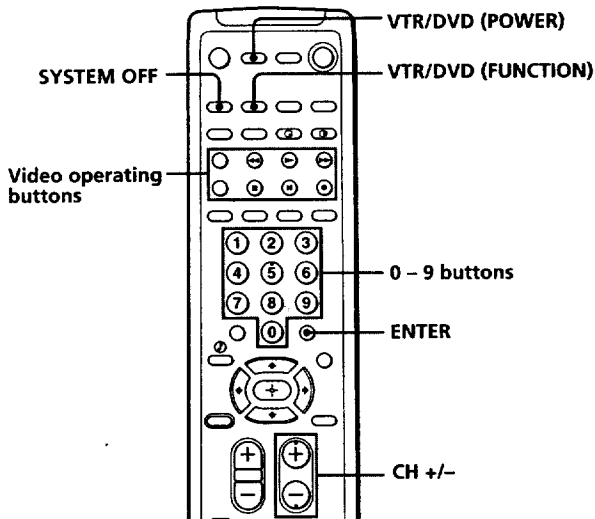

Use the video operating buttons on the remote control to operate the video equipment. Press VTR/DVD (FUNCTION) before operating the video equipment.

| Operating a VCR | Buttons on the remote control |
|---|---|
| To turn on or off | Press VTR/DVD (POWER). |
| To select a channel directly | Press the 0 - 9 buttons. |
| To change channels | Press CH +/-. |
| To record | Press ► while pressing ●. First release ►, then release ●. |
| To play | Press ►. |
| To stop | Press ■. |
| To fast forward | Press ►►. |
| To rewind the tape | Press ◀◀. |
| To pause | Press . To resume normal playback, press again. |
| To search the picture forward or backward | Press ►► or ◀◀ during playback. To resume normal playback, release the button. |
| To change input mode | Press TV/VTR. |

| Operating an MDP | Buttons on the remote control |
|--|---|
| To turn on or off | Press VTR/DVD (POWER). |
| To play | Press ►. |
| To stop | Press ■. |
| To pause | Press . To resume normal playback, press again. |
| To search the picture forward or backward | Keep pressing ►► or ◀◀ during playback. To resume normal playback, release the button. |
| To search the chapter forward and backward | Press CH +/-. |

| Operating an DVD | Buttons on the remote control |
|---|---|
| To turn on or off | Press VTR/DVD (POWER). |
| To play | Press ►. |
| To stop | Press ■. |
| To pause | Press . To resume normal playback, press again. |
| To search the picture forward or backward | Keep pressing ►► or ◀◀ during playback. To resume normal playback, release the button. |

Note

- If the video equipment does not have a certain function, the corresponding button on this remote control will not operate.

Turning off the system


You can turn off the projection TV and Sony equipment with the S-Link function, such as a VCR, together when you make the S-Link connection (see pages 17 and 18 for the connection).

Press SYSTEM OFF.




Operating a cable box or DBS receiver

You can program the supplied remote control to operate a cable box or DBS receiver. Follow the procedures below to set the manufacturer's code number in the remote control.

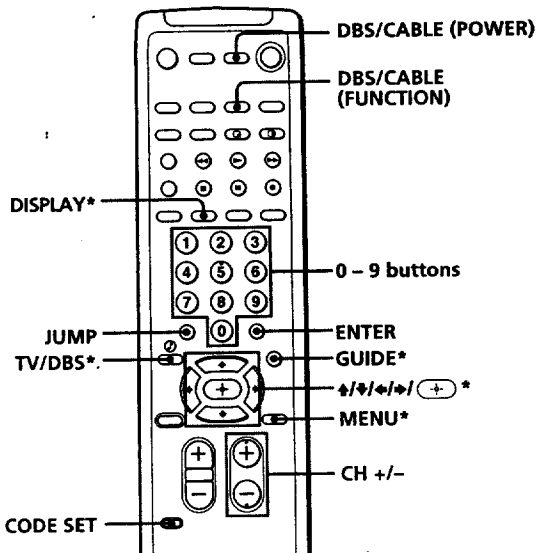


* The TV/DBS, GUIDE, DISPLAY, +/-, and MENU buttons can be used only with a DBS receiver.


- 1 Turn off the equipment you want to set up, and press **DBS/CABLE (FUNCTION)**.

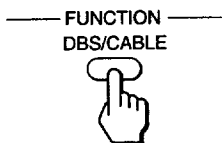

- 2 Press the **CODE SET**, **DBS/CABLE (FUNCTION)**, and **0 - 9** buttons to enter the manufacturer's code number (see the chart on the right column), then press **ENTER**. For example, to program your remote control to operate a Sony DBS receiver, press **CODE SET**, **DBS/CABLE (FUNCTION)**, **8**, **0**, **1**, and **ENTER**.

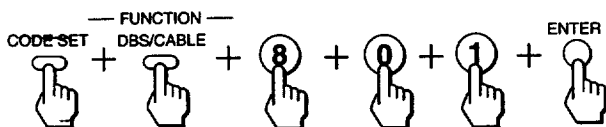

 - 3 Press **DBS/CABLE (POWER)** to turn on the cable box or DBS receiver.



- 4 Use the cable box/DBS control buttons to check if the code number works.

For example, to operate a cable box or DBS receiver, you can use the **DBS/CABLE (POWER)**, **JUMP**, **CH +/-**, **0 - 9** and **ENTER** buttons.

Note

- If the cable box or DBS receiver does not have a certain function, the corresponding button on this remote control will not operate.

To operate the projection TV

Press **TV (FUNCTION)**. Then use the projection TV control buttons to control the projection TV.

For more details on operating the cable box or DBS receiver

Refer to the operating instructions that come with the equipment.

If the remote control doesn't work

- First, try repeating the setup procedures using the other codes listed for your equipment.

Manufacturer code numbers (cable box)

| Manufacturer | Code number |
|--------------------|---|
| Hamlin/Regal | 222, 223, 224, 225, 226 |
| Jerrold/G. I. | 201, 202, 203, 204, 205, 206, 207, 208, 218 |
| Oak | 227, 228, 229 |
| Panasonic | 219, 220, 221 |
| Pioneer | 214, 215 |
| Scientific Atlanta | 209, 210, 211 |
| Tocom | 216, 217 |
| Zenith | 212, 213 |

Manufacturer code numbers (DBS receiver)

| Manufacturer | Code number |
|--------------|---|
| Sony | 801 (preset code for the supplied remote control) |
| RCA | 802 |

Notes

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this remote control and you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's own remote control unit.
- Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code numbers may revert to the factory setting and must be reset.

Troubleshooting

If the problem persists after trying the methods below, contact your nearest Sony dealer.

No picture (screen not lit), no sound

- ➔ Make sure the power cord is connected securely.
- ➔ Operate with the buttons on the projection TV.
- ➔ Insert the batteries in the remote control with the correct polarity.
- ➔ Replace the batteries with new ones if they are weak.
- ➔ Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video input pictures, set to VIDEO 1, 2, 3, or 4.
- ➔ Try another channel. It could be station trouble.
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)

Poor or no picture (screen lit), good sound

- ➔ Adjust PICTURE in the VIDEO menu. (page 30)
- ➔ Adjust BRIGHTNESS in the VIDEO menu. (page 30)
- ➔ Adjust convergence. (page 23)
- ➔ Check antenna/cable connections. (page 6)
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)
- ➔ Remove objects from the front of the projection TV.

Good picture, no sound

- ➔ Press MUTING so that "MUTING" disappears from the screen. (page 26)
- ➔ Check the MTS setting in the AUDIO menu. (page 34)
- ➔ Make sure SPEAKER is set to ON in the AUDIO menu. (page 35)
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)

No color

- ➔ Adjust the COLOR in the VIDEO menu. (page 31)
- ➔ Confirm that black and white program is not being broadcast.
- ➔ Perform AUTO SET UP again using the SETUP button to return to the factory preset condition. (page 21)

Only snow and noise appear on the screen

- ➔ Check the CABLE setting in the SET UP menu. (page 24)
- ➔ Check the antenna/cable connections. (page 6)
- ➔ Make sure the channel is broadcasting programs.
- ➔ Press ANT to change the input mode. (page 27)

Dotted lines or stripes

- ➔ Adjust the antenna.
- ➔ Move the projection TV away from noise sources such as cars, neon signs, and hair-dryers.

Double images or ghosts

- ➔ Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings).

Cannot operate menu

- ➔ If the item you want to choose appears in gray, you cannot select it. Press TV/VIDEO correctly.
- ➔ Check the CABLE setting in the SET UP menu. (page 24)

Cannot receive upper channels (UHF) when using an antenna

- ➔ Make sure CABLE is OFF in the SET UP menu. (page 24)
- ➔ Use AUTO PROGRAM to add receivable channels that are not presently in projection TV memory. (pages 21, 25)

Cannot receive any channels when using cable TV

- ➔ Make sure CABLE is ON in the SET UP menu. (page 24)
- ➔ Use AUTO PROGRAM to add receivable channels that are not presently in projection TV memory. (pages 21, 25)

Remote control does not operate

- ➔ Batteries could be weak. Replace the batteries. (page 20)
- ➔ Make sure the projection TV's power cord is connected securely to the wall outlet.
- ➔ Press TV (FUNCTION) when operating your projection TV.
- ➔ Are fluorescent lights too close to the projection TV? Move them at least 3-4 feet away from the projection TV.

Cannot gain enough volume when using a cable box

- ➔ Increase the volume at the cable box. Then press TV (FUNCTION) and adjust the projection TV's volume.

Projection TV malfunctions when using the S-Link function

- ➔ Make sure the projection TV's power cord is connected securely to the wall outlet.
- ➔ Check the S-Link connection. (pages 17, 18)

The projection TV needs to be cleaned

- ➔ Clean the projection TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.

Specifications

| | |
|--|---|
| Projection system | 3 picture tubes, 3 lenses, horizontal in-line system |
| Picture tube | 7 inch high-brightness monochrome tubes (6.3 raster size), with optical coupling and liquid cooling system |
| Projection lenses | High performance, large-diameter hybrid lens F1.1 |
| Screen size (measured diagonally) | |
| | KP-48V75 48 inches |
| | KP-53V75/53V75C 53 inches |
| | KP-61V75 61 inches |
| Television system | American TV standards |
| Channel coverage | VHF: 2 - 13 / UHF: 14 - 69 / CATV: 1 - 125 |
| Antenna | 75 ohm external antenna terminal for VHF/UHF |
| Inputs/output | VIDEO IN 1 VIDEO 2 INPUT VIDEO IN 3 S VIDEO (4-pin mini DIN): Y: 1 Vp-p, 75-ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal) 75 ohms VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync negative AUDIO (phono jacks): 500 mVrms (100% modulation) Impedance : 47 kilohms VIDEO IN 4 Y: 1 Vp-p, 75-ohms, sync negative Cb: 0.7 Vp-p, 75-ohms Cr: 0.7 Vp-p, 75-ohms AUDIO (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilohms |

TV OUT
MONITOR OUT
VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync negative
AUDIO (phono jacks) 500 mVrms (100% modulation), Impedance: 5 kilohms
AUDIO (VAR/FIX) OUT (phono jacks) 500 mVrms (100% modulation) Impedance: 5 kilohms

Speaker Full range speaker 100 mm (3.9 inches) diameter

Speaker output 15 W x 2
CENTER SPEAKER IN: 30 W x 1 (NORMAL), 60 W x 1 (MAX), 16 ohms

Power requirement
For KP-53V75C: 220 V AC, 50/60Hz
For other models: 120 V AC, 60 Hz

Power consumption
175 W
Standby mode: 2.5 W

| | Dimensions (W/H/D) | Mass |
|---------------------|---|--------------------------|
| KP-48V75 | 1,106 x 1,337 x 571 mm (43 ⁵ / ₈ x 52 ⁵ / ₈ x 22 ¹ / ₂ inches) | 70 kg (154 lbs 5 oz) |
| KP-53V75/ 53V75C | 1,218 x 1,413 x 614 mm (48 x 55 ⁵ / ₈ x 24 ¹ / ₄ inches) | 73 kg (161 lbs 2 oz) |
| KP-61V75 | 1,338 x 1,506 x 642 mm (52 ³ / ₄ x 59 ³ / ₈ x 25 ³ / ₈ inches) | 124 kg (273 lbs 9 oz) |

Supplied accessories
Remote control RM-Y903 (1)
Size AA (R6) battery (2)

Optional accessories
U/V mixer EAC-66
Connecting cables RK-74A, RK-G34, VMC-10HG, VMC-720M, VMC-810S/820S, YC-15V/30V

Design and specifications are subject to change without notice.

SRS (●)* (SOUND RETRIEVAL SYSTEM)


The SRS (●)* (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

Index to parts and controls


This section briefly describes the buttons and controls on the projection TV and on the remote control. For more information, refer to the pages next to each description.

Projection TV — Front

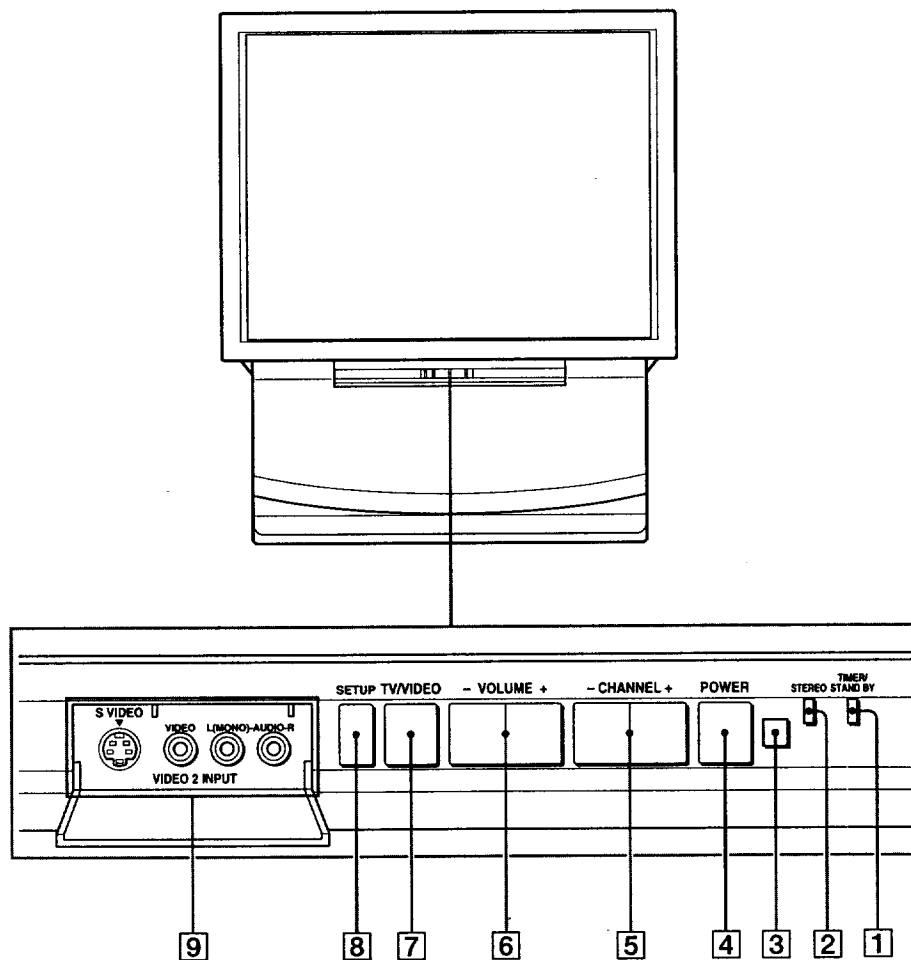

- | | | | |
|---|--|---|---|
| 1 | TIMER/STANDBY indicator (pages 26, 38) | 6 | VOLUME +/- buttons (page 21) |
| 2 | STEREO indicator (page 34) | 7 | TV/VIDEO button (page 21, 22) |
| 3 | Remote sensor | 8 | SETUP button (page 21) |
| 4 | POWER switch (page 21) | 9 | S VIDEO/VIDEO 2 INPUT (VIDEO/AUDIO L(MONO)/R) jacks (page 10) |
| 5 | CHANNEL +/- buttons (page 21) | | |

Remote control

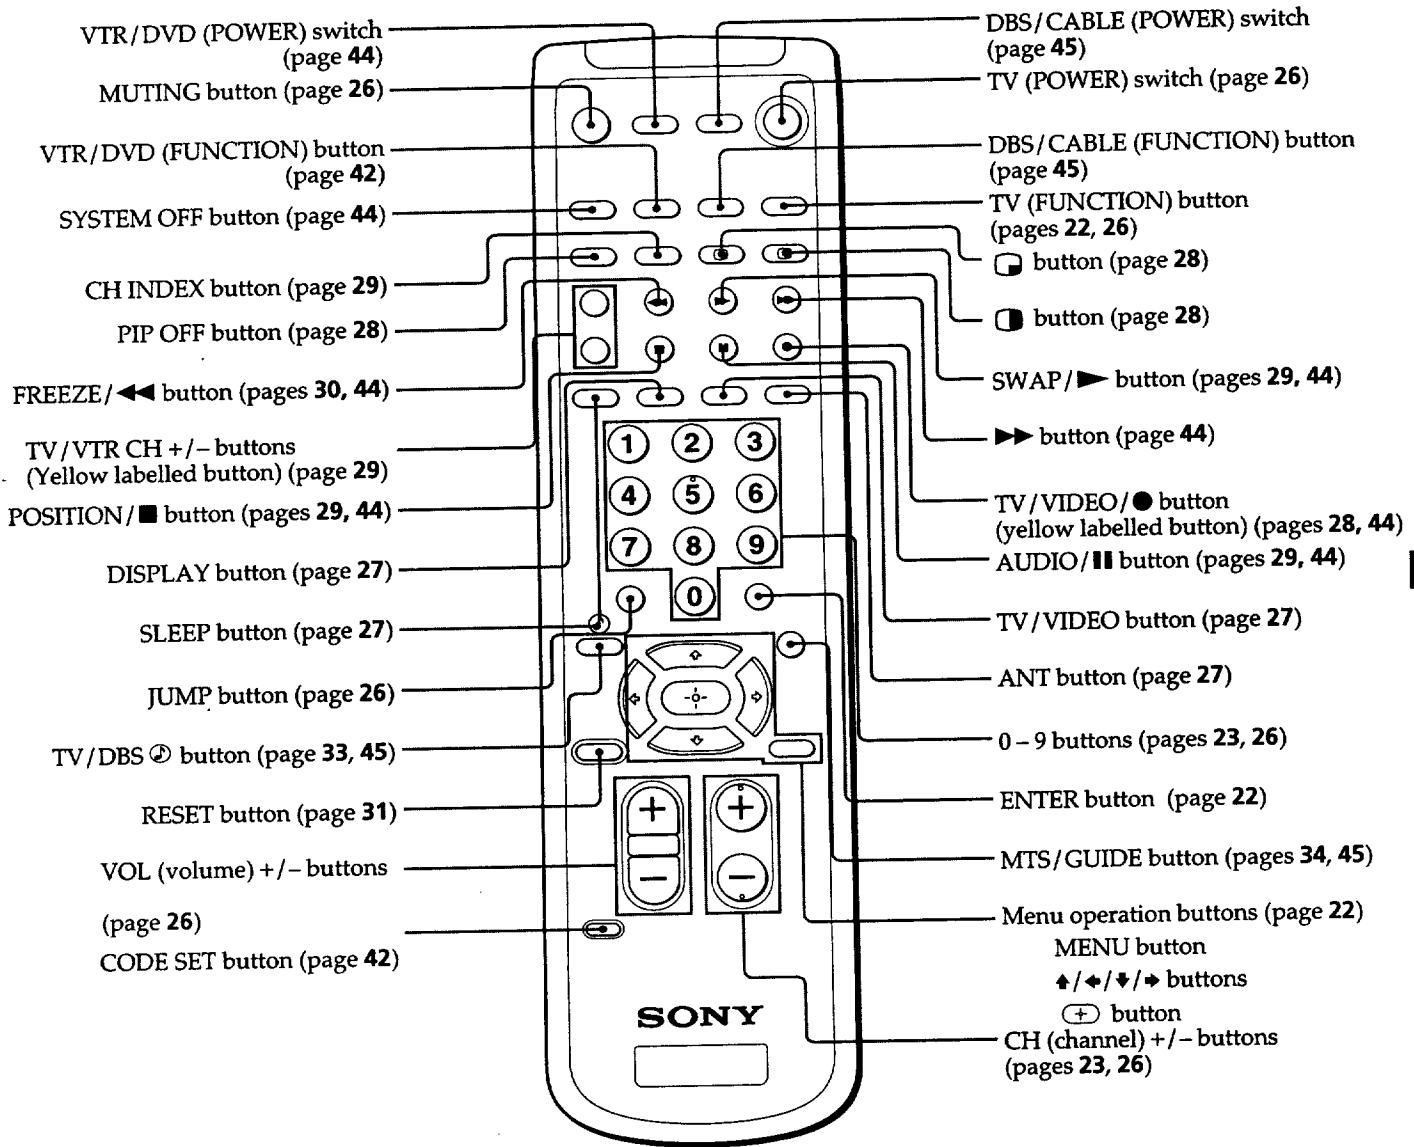

EN

Index

Adjusting
 the convergence 23
 the picture 30
 the sound 32

Antenna 6

Audio effect ② 33

Audio out 36

Auto program 25

Auto set up 21

AV receiver 11, 18

Battery 20

Cable box 6

Cable TV 24

Caption Vision 42

Changing the menu language 25

Channel block 39

Channel caption 38

Current time set 37

Daylight saving time 36

DBS 9, 45

DEMO 22

DVD 13, 14

EFFECT 33

Erase/Add 22

Favorite channel 40

Hookup
 with a DBS receiver 9
 with a VCR 7
 with an antenna 6
 with an audio system 10
 without a VCR 6

Language 25

MTS (Multichannel TV Sound) 34

On/off timer 37

P&P (Picture-and-Picture) 28

PIP (Picture-in-Picture) 28

Presetting channels 25

Remote control 20

S-Link 17, 18

SAP (Second Audio Program) 34

SAVA speaker 16, 35

Setting
 daylight saving time 36
 the clock 37

3D MONO mode 33

Sleep timer 27

STEREO indicator 34

SRS mode 33

Super woofer mode 35

Surround mode 35

TEXT 42

TIMER/STANDBY indicator 26, 38

Twin View™ 28

Video label 41

Video mode 32

Watching
 TV 26
 video tapes 27

XDS 27

Names of controls

⊕ button 22

□ (PIP) button 28

Ⓚ (P&P) button 28

⬆/⬅/⬇/➡ buttons 22

0-9 buttons 23, 26

ANT button 27

AUDIO button 29

AUDIO (VAR/FIX) OUT jacks 16

AUX antenna terminal 6

CHANNEL +/- buttons 21

CH (channel) +/- buttons 23, 26

CH INDEX button 29

CODE SET button 42

CONTROL S OUT jack 16, 19

CONVERTER antenna terminal 6

DBS/CABLE (FUNCTION) button 45

DBS/CABLE (POWER) switch 45

DISPLAY button 27

ENTER button 22

FREEZE button 30

GUIDE button 45

JUMP button 26

MENU button 22

MONITOR OUT jacks 12

MTS button 34

MUTING button 26

PIP OFF button 28

POSITION button 29

POWER switch 21

RESET button 31

SETUP button 21

S VIDEO input connector 8, 13

S VIDEO/VIDEO 2 INPUT (VIDEO/AUDIO L (MONO)/R) jacks 10

SLEEP button 27

SWAP button 29

SYSTEM OFF button 44

TV/ DBS ② button 33, 45

TV (FUNCTION) button 22, 26

TV (POWER) switch 26

TV/VIDEO button 27

TV/ VIDEO button (yellow labelled button) 28

TV/VTR CH +/- buttons (yellow labelled button) 29

VHF/UHF antenna terminal 6

VIDEO 1 IN jacks 7

VIDEO 2 INPUT jacks 10

VIDEO 3 IN jacks 7

VIDEO 4 IN jacks 7

VOLUME +/- buttons 21

VOL (volume) +/- buttons 26

VTR/DVD (FUNCTION) button 42

VTR/DVD (POWER) switch 44