



# SABBATH MODE FOR KITCHENAID BUILT-IN SINGLE OVENS

The Sabbath mode is an oven operation designed for the special needs of Orthodox Jews on the Sabbath or holy days. It provides a continuous untimed bake function.

**NOTE:** The Sabbath mode must be set before it can be activated and remains set until canceled.

## To SET the Sabbath mode:

1. Open the oven door.
2. Press CANCEL/OFF.
3. Press the Number Pads in the following order: 7, 8, 9, 6. You will hear tones while pressing the Number Pads.
4. Press START. "SAb ON" will appear in the display.

## To START a BAKE function:

1. Press BAKE.
2. Press the Number Pads to set the desired temperature from 170°F to 500°F.
3. Press START.
4. Press OVEN LIGHT on or off. It will remain in that position until the Sabbath mode is canceled.
5. Press and hold Number Pad 6 for 5 seconds. "SAb" will replace the temperature in the display.

## To START a TIMED BAKE function:

This allows you to start cooking immediately and stop cooking automatically for a predetermined length of time. The oven will shut off at the end of the preset time.

1. Press BAKE.
2. Press the Number Pads to set the desired temperature from 170°F to 500°F.
3. Press COOK TIME.
4. Press the Number Pads to set the desired cook time up to 9 hours 59 minutes.
5. Press START.
6. Press and hold Number Pad 6 for 5 seconds. "SAb" will replace the temperature in the display.

## To CHANGE the TEMPERATURE:

Select a temperature by pressing the corresponding Number Pad for 2 seconds. Each Number Pad is programmed for a specific set temperature:

NUMBER PAD	SET TEMPERATURE
1	170°F (77°C)
2	200°F (93°C)
3	250°F (121°C)
4	275°F (135°C)
5	300°F (149°C)
6	325°F (163°C)
7	350°F (177°C)
8	375°F (191°C)
9	400°F (204°C)
0	450°F (232°C)



**To STOP the Sabbath mode:**

Press and hold Number Pad 6 for 5 seconds.

**To CANCEL the Sabbath mode (OPTIONAL):**

Once the Sabbath mode is set, it is not necessary to cancel it.

1. Open the oven door.
2. Press CANCEL/OFF
3. Press the Number Pads in the following order: 7, 8, 9, 6
4. Press CANCEL/OFF. "SAb OFF" will appear in the display.

**Oven functions during the Sabbath mode:**

- The oven temperature display will show "SAb".
- No prompts, error messages, or temperature changes will be displayed.
- No tones will sound.
- The 0-9 and Start keypads will only work to change the oven preset temperature or to cancel. They must be pressed for 2 seconds.
- Opening and closing the oven door will have no affect on oven functions.
- The oven cavity light will remain either on or off.
- The preset temperature will remain the same prior to entering the Sabbath mode unless the preset temperature is changed. The preset temperature takes 15 to 20 seconds to change after the keypad has been pressed.
- After a new preset temperature is entered, the oven setting will not change until the previous preset temperature has been reached.
- The untimed bake function will continue until the Sabbath mode is stopped.
- The cooling fan will remain on for the duration of the Sabbath mode.
- If power failure occurs in bake or timed bake during the Sabbath mode, the oven will return to a default temperature setting of 350°F and reset to the bake mode only.

**MODELS KEBI141D, KEBI171D, and KEBI101D**

**Disregard all convection, dehydrating, and bread rising functions in Use and Care Guide 4450571 Rev. A.**

**These features are not available on your oven.**