




*We bring good things to life.*

# Important Information


## WARNING

To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.

**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## Cautions

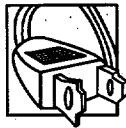

### CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

### ATTENTION:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Operate TV only on 120 volts, 60 Hz AC power (normal house power).

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

**CAUTION:** If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. Extended view-

## Note To Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you ever need them. The numbers are located on the back of the TV.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

# Table of Contents

<b>Important Information</b>	Warning, Product Registration	i
<b>Quick Guide to Your TV</b>	Startup	2-3
	Hook up your TV, Plug in the TV, Put Batteries in the Remote, Turn on the TV, Adjust Picture Tilt, Place Channels into Memory, Set the Time	
	Basic Tour of the Remote	4
	Button Layout and Functions	
	Menu Basics	5
	Colors, Menu Buttons, Moving through the Menus	
<b>Using Your TV and Remote</b>	With Remote Buttons	6-7
	With VCRs	8-10
	With a Satellite Receiver	11
	With a Cable Box	12-13
	With a Laserdisc Player	14
	With Audio Equipment	15
<b>Adjusting Your TV</b>	Overall Picture	16
	Picture Settings	17
	Color, Tint, Brightness, Sharpness, Autocolor, Picture Reset	
	Sound Settings	18-19
	Stereo, Expanded Stereo, SAP, Tone, Speakers	
<b>Using Advanced Features</b>	Placing Channels in Memory / Autoprogram	20
	Naming the Channels	21
	Setting the Sleep Timer	22
	Setting the Alarm Clock	23
	Selecting a Language	24
	Watching Closed Captioning	24
	Setting Your TV for Antenna or Cable	25
<b>References</b>	Front Panel Buttons	26
	Displays on the Screen	27
	Trouble Checks	28-29
	Limited Warranty	30
	Order Form for Parts	31-32
	Index	33


# Quick Guide to Your TV

## Startup


The steps below will get your TV connected and ready for watching.  
For more details, see the page numbers listed.

### 1. Hook up your TV


Details are in the  
*Connections Guide.*

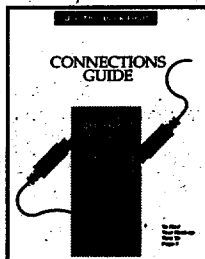

Hook up any antennas, cables or other equipment to your TV before you follow the steps below.

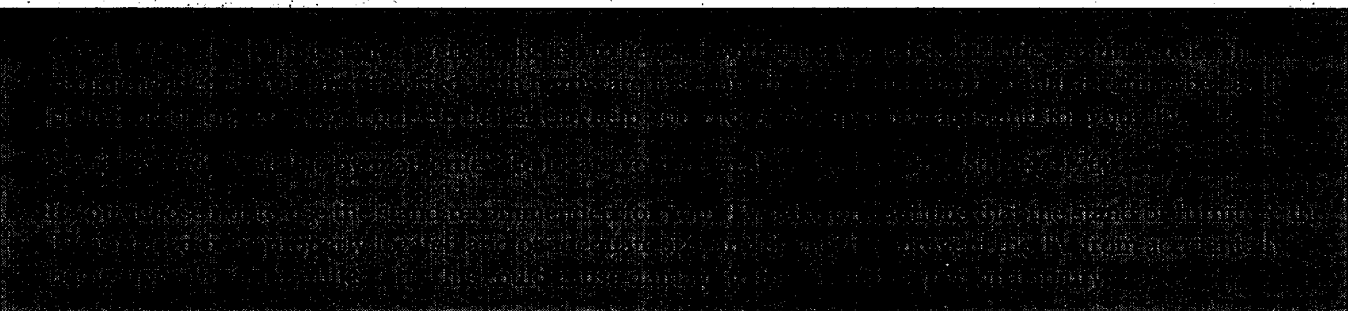


### 2. Plug in the TV

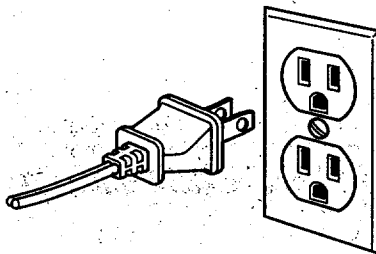


Plug the cord into the outlet, matching the wide and the small end of the plug with the outlet.

### 3. Put Batteries in the Remote

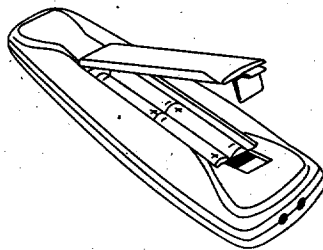

- A. Pull off the cover of the battery compartment.
- B. Place the four AAA batteries as shown, matching the + and - end of each battery in the compartment.
- C. Replace the cover.

### 4. Turn on the TV

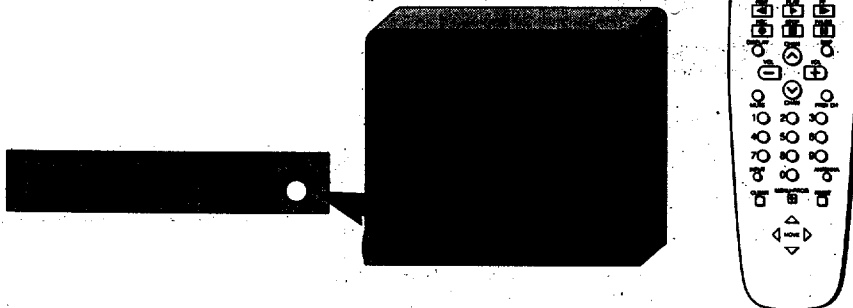

Press TV on the remote, or press POWER on the TV.


# Quick Guide to Your TV

## Startup

### 5. Adjust PICTURE TILT.

Picture tilt is used to correct a tilted picture from the effect of the Earth's magnetic field on a large picture tube. The PICTURE TILT STRENGTH and POLARITY switches on the back of the TV compensate for this effect. If the picture appears tilted, follow these steps to improve it.


You may need to reset the switches if the TV is moved or repositioned in the room.

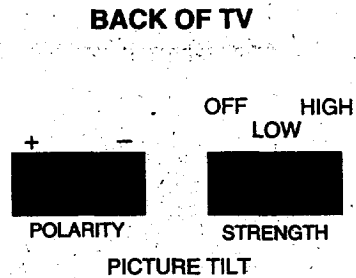

- Make sure STRENGTH switch is in the OFF position.
- Move STRENGTH switch to the LOW position. If this does not fully improve tilt, move STRENGTH switch to HIGH. This should correct tilt. If moving STRENGTH switch makes tilt worse, return it to OFF and go to the next step.
- Change the position of POLARITY switch. If this improves the tilt but does not fully improve it, move the STRENGTH switch to LOW or HIGH. This should correct tilt.


### 6. Place all available channels in memory (Autoprogram)

*Details for adding and deleting channels are on page 20.*

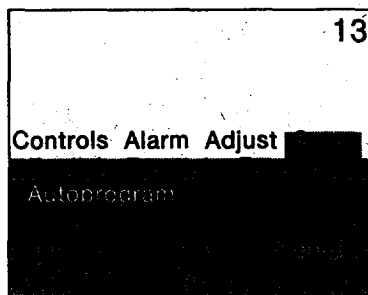

- Press MENU•PROG until the Setup menu is selected. This menu is white.
- Press MOVE ▼ to highlight Autoprogram.
- Press MOVE ► to start placing channels in the TV's memory.
- Wait until TV has cycled through all the channels and returns to original channel.

### 7. Set the Time

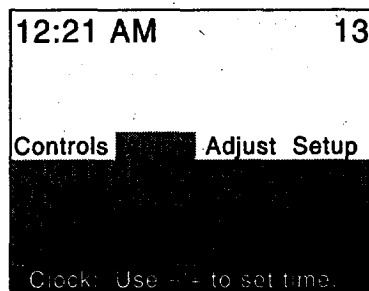


- Press MENU•PROG until the Alarm menu is selected. This menu is green.
- The Clock is automatically highlighted the first time you set it. If it is not, press MOVE ▼ to highlight it.
- Press MOVE ◀ to set the hour.
- Press MOVE ► to set the minutes.

# Quick Guide to Your TV

## Basic Tour of the Remote

Basic information about your remote is shown below. This will give you a general idea of how your remote works. *For more details, see pages 6-15.*

### TV Power Button

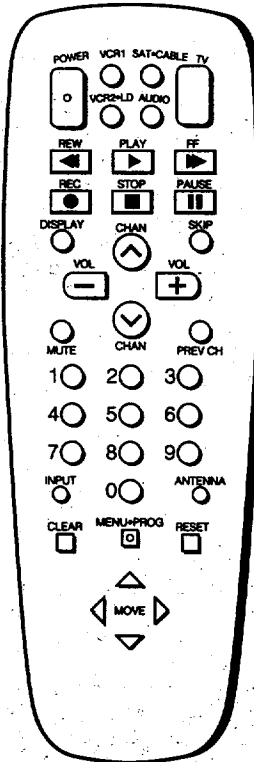

Turns the TV on.

Sets the remote to control the TV.

### Volume and Channel Controls


*Details are on page 6.*

Operates TV when remote is set to control the TV.

Operates the TV and advanced features.

### Component Buttons

*Details are on pages 8-15.*

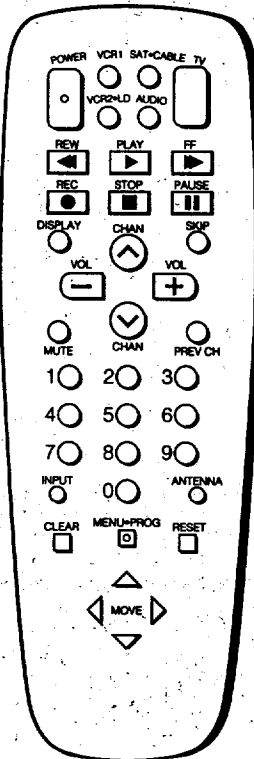

Controls components such as a VCR, laserdisc player, audio equipment, satellite receiver and a cable box.

### Menu Buttons

*See next page for details.*


Changes the menus and features on the screen.

# Quick Guide to Your TV

## Menu Basics

General information about using the on-screen menu system is shown below. Details on using the remote buttons are on pages 6-7. Many menu items are explained in detail in *Using the Advanced Features* starting on page 20.

### Colors


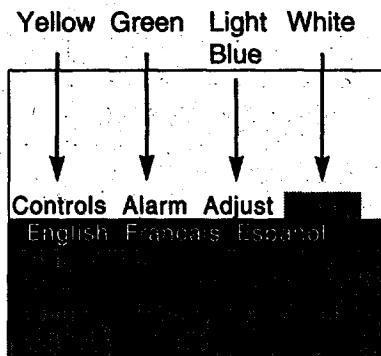


Press MENU•PROG repeatedly to see each of the four menu colors.


Each menu has a different color background as shown at the left.

### Menu Buttons

The menu buttons are used to adjust the features in the TV's menus. Both the menu buttons on the remote or the front of the TV will move through the menus. See "Moving through the Menus" below.

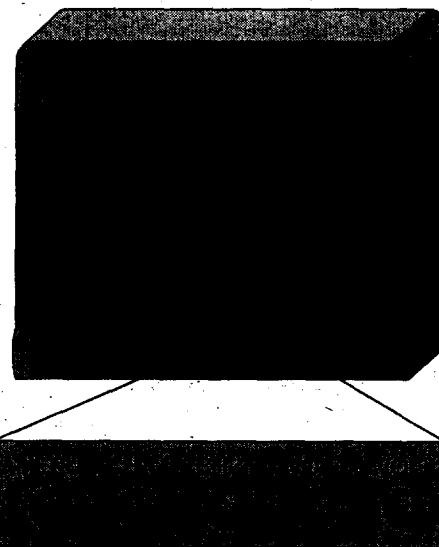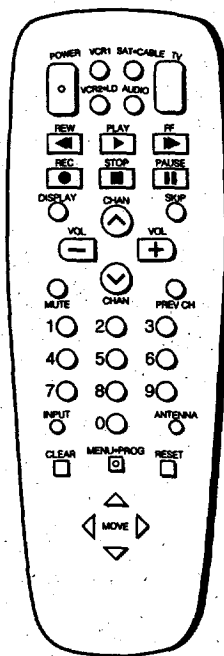


### Moving through the Menus

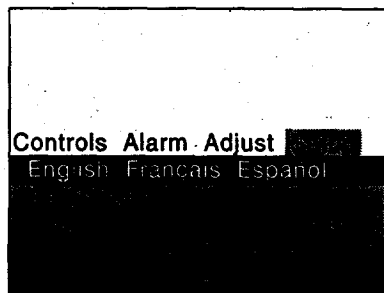

1. Press MENU•PROG on the remote or MENU on the front panel to move from menu to menu.
2. Press MOVE ▲ and ▼ on the remote or CHANNEL up and down (CHAN ^ and v) on the front panel to move up and down through the features in the menu.
3. Press MOVE ◀ and ▶ on the remote or VOLUME + and - on the front panel to move left and right on the menu lines.

# Using Your TV and Remote

## With Remote Buttons

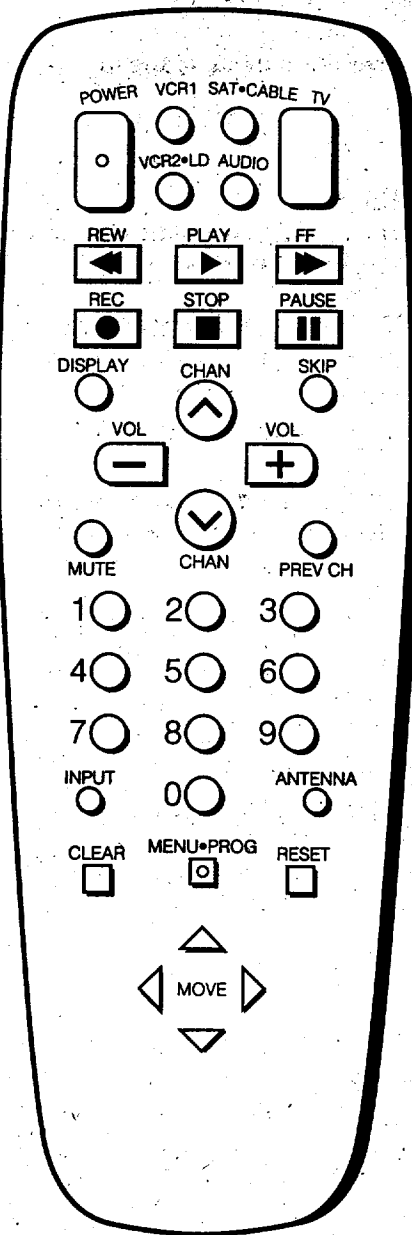

### POWER

Turns off the TV.

Turns off compatible components.

Turns on a component after a component button is pressed.

### AUDIO, VCR1, VCR2•LD, SAT•CABLE, TV

Sets the remote to control the component. VCR2•LD can only be programmed for one component: either a VCR or a Laserdisc Player.

*See Using the Remote with a VCR, Satellite Receiver, Cable Box, Laserdisc Player and Audio equipment on pages 8-15.*

### TV

Turns on the TV.

Shows the displays on the screen.

Sets the remote to control the TV.

*See Using the Remote with a VCR, Satellite Receiver, Cable Box, Laserdisc Player and Audio equipment on pages 8-15.*

### REW (Rewind)

Rewinds a tape or laserdisc.

Searches backward while tape or laserdisc is playing.

### PLAY

Plays tape or laserdisc.

### FF (Fast Forward)

Fast forwards a tape or laserdisc.

Searches forward while tape or laserdisc is playing.

### REC (Record)

Starts recording onto tape.

### STOP

Stops tape or laserdisc.

### PAUSE

Pauses tape or laserdisc.

### DISPLAY

Shows displays on the screen.

Clears menus from the screen.

### SKIP (Commercial Skip)

Allows you to scan other channels during commercials.

Each press adds 30 seconds. TV switches back to original channel when time runs out. Press CLEAR to cancel SKIP.

### CHAN ^ and v

(Channel up and down)

Scans up and down through channels in the TV's memory.

Moves through channels in VCR's memory.

### VOL + and -

(Volume up and down)

Raises and lowers sound.

### MUTE

Switches the TV sound on or off.

### PREV CH (Previous Channel)


Changes back and forth between two channels.

Select a channel and then select another. Press PREV CH to switch between the two channels.



# Using Your TV and Remote

## With Remote Buttons

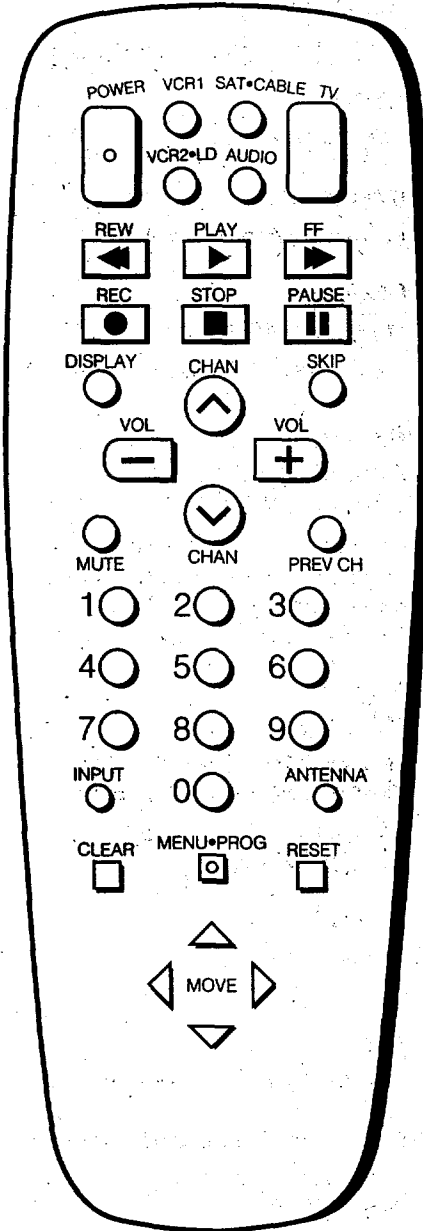

### Number Buttons (0-9)

Selects any channel number.

Two numbers must be pressed for each channel. Press 0 and 6 for channel 6. For three digit channels, press and hold 1 until 1- appears on the screen. Then press the other two numbers.

### INPUT

Switches between the TV channels and Video 00/S-VID 00.

### ANTENNA

Used as TV/VCR button when remote is set to control the VCR.

### CLEAR

Clears menus and displays from the screen.

Clears items from VCR timer programs and VCR's clock.

### MENU•PROG (Program)

Shows menus on the screen and moves from menu to menu.

Sets VCR clock and programs timer on VCR.

### RESET

Returns the picture adjustments to the original settings.

### MOVE ◀ and ▶ (left and right)

Moves left and right on a menu line. See *Menu Basics on page 5*.

Changes a feature setting.

### MOVE ▲ and ▼ (up and down)

Moves up and down menus. See *Menu Basics on page 5*.


# Using Your TV and Remote

## With VCRs: Programming the Remote

Refer to the Connection Book or the VCR's owners manual to hook up your VCRs. The remote may need to be programmed for your VCR, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### 1. Test the remote

### 2. Program the remote for your VCRs

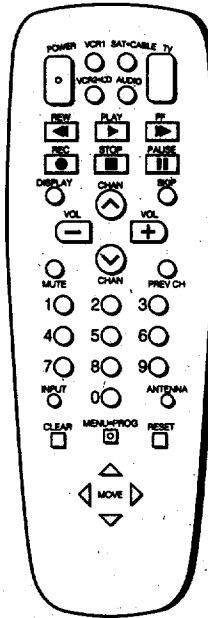

- A. Press VCR1 or VCR2•LD to turn the VCR on.
- B. Press the VCR buttons shown at the left. If your VCR does not work, program VCR1 or VCR2•LD with a VCR code from the list below.
- A. Point the remote at the VCR and hold VCR1.
- B. Enter the code for your brand from the code list below.
- C. Release VCR1.
- D. Press POWER. If nothing happens, try pressing VCR1 and then POWER.
- E. Repeat A–D with another code if the first one does not work or if a second VCR is connected.

### VCR Codes


Aiwa .....	15	Kenwood.....	02,14,16,30,46,47	.....	27,43,53
Akai .....	03,17,22,23,63,66	KLH .....	73	Samsung.....	07,13,22,32,42,48
Audio Dynamics.....	14,16	Lloyd's.....	15	Sansui .....	16,71
Broksonic .....	10	Logik.....	31	Sanyo .....	02,12
Candle .....	07,09,13,44,45,45,52	Magnavox.....	08,29,53,56	Scott .....	04,13,41,49,68
Canon .....	08,53	Marantz.....	02,08,14,16,29,30,44,46,61	Sears.....	02,05,09,12,18,19,35,43
Capehart.....	01	Marta .....	09	Sharp.....	06,24,27,39,45
Citizen .....	07,09,13,44,45,46,52	MEI .....	08	Shintom.....	17,26,31,55
Colortyme.....	14	Memorex.....	08,09,12,15	Sony .....	17,26,38
Craig .....	07,12	MGA .....	04,27	Sylvania.....	08,15,29,53,56
Curtis Mathes.....	00,07,08,14,15, 44,45,53,64,67	Midland.....	32	Symphonic.....	15
Daewoo .....	13,45,52,76	Minolta .....	05,35	Tandy .....	02,15
dbx .....	14,16	Mitsubishi .....	04,05,27,35,40	Tashiko.....	09
Dynatech.....	15	Montgomery Ward.....	06	Tatung .....	30
Electrohome.....	27	MTC.....	07,15	Teac.....	15,30
Emerson .....	08,09,10,13,15,20,23, 27,34,41,42,47	Multitech.....	07,15,31,32	Technics.....	08
Fisher .....	02,12,18,19,43,48,58	NEC .....	02,14,16,30,44,46,59,61,64	Teknika.....	08,09,15,21
Funai.....	15	Panasonic .....	08,53,75	Toshiba.....	05,13,19,48,49
GE .....	00,07,08,32,37	Pentax.....	05,35,44	Totevision .....	07,09
Goldstar.....	09,14,46,60	Pentax Resear .....	46	TMK.....	67
Harman Kardon.....	14	Philco.....	08,29,35,56	Unitech .....	07
Hitachi.....	05,15,35,36	Philips.....	08,29	Vector Research .....	14,16,44
Instant Replay .....	08	Pioneer .....	05,16,33	Victor .....	16
JCL .....	08	Portland.....	44,45,52	Video Concepts.....	14,16,44
JCPenney.....	02,05,07,08,14,16, 30,35,51,53	ProScan.....	00	Videosonic.....	07
JVC.....	02,14,16,30,46,74	Quartz.....	02	Wards .....	05,06,07,08,09,12,13,15, 25,31,35
		Quasar .....	08,53	Yamaha.....	02,14,16,30,46
		RCA .....	00,05,07,08,28,35,37,54,69	Zenith.....	11,17,26,72
		Radio Shack.....	02,06,08,09,12,15,19		

# Using Your TV and Remote

## With VCRs: Setting the VCR 1 Channel


The VCR 1 Channel works with VCR1 button on the remote. If the VCR 1 Channel is set, pressing VCR1 selects the channel to see the VCR picture. The VCR 1 Channel setting depends on which diagram you have used from the Connection Guide. If you want to turn this feature off, set the VCR 1 Channel to Disable. Refer to the chart below for your setting.

### 1. Select the Setup Menu

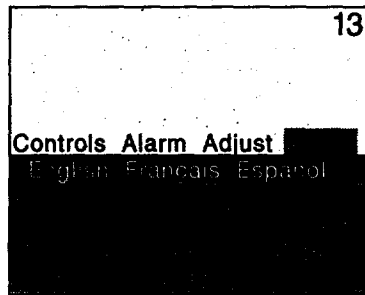


- A. Press TV to set the remote to control the TV.
- B. Press MENU•PROG to select the Setup menu. This menu is white.

### 2. Highlight VCR1 Channel

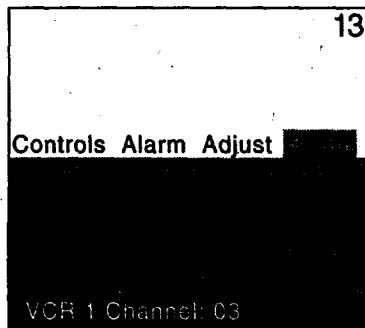

- A. Press MOVE ▼ to highlight the VCR 1 Channel.
- B. Press MOVE ► to highlight the channel.

### 3. Enter channel number

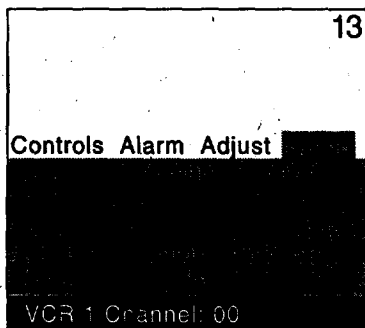

Enter channel 00, 03, or 04. Choose your setting from the chart below. Press CHANNEL down until "Disabled" is displayed to turn the feature off.


Diagram used from the Connection Guide:	Set VCR 1 Channel to:
1B, 1C, 2B, 2C, 3B, 3C, 4C, 5C	00
4B, 5B	3 or 4 (same as 3/4 switch)

# Using Your TV and Remote

## With VCRs: Basic Operation

If the remote operates your VCR, this page will show you how to use it for basic functions. See pages 6-7 for more details on buttons used with your VCR.

### Turn on the VCR

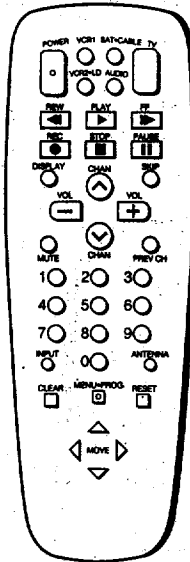


- Press channel 00, 03, or 04 on the TV to see what the VCR is doing.
- Press VCR1 or VCR2•LD to set the remote to control the VCR.
- Press POWER to turn on the VCR if it did not turn on when you pressed VCR1 or VCR2•LD.

### Turn off the VCR

- Press VCR1 or VCR2•LD to set the remote to control the VCR.
- Press POWER.

### Record one TV program and watch another

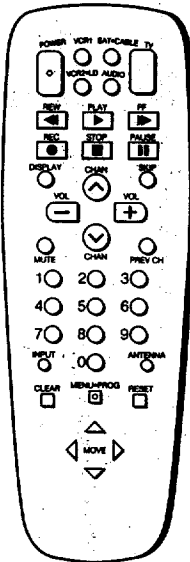

- Press VCR1 or VCR2•LD to set the remote to control the VCR.
- Tune the VCR to the channel you want to record using CHANNEL up or down or pressing two number buttons.
- Press RECORD to start recording.
- Press TV/VCR on the VCR.
- Press TV to set the remote to control the TV.
- Press CHANNEL up or down to change channels on the TV.
- To see the channel you are recording, tune the TV back to channel 00, 03, or 04.

### Watch a tape in your VCR

- Turn on VCR.
- Insert a tape in the VCR.
- Press PLAY to start the tape playing.
- Press STOP when you are finished.
- Press REW to rewind the tape.

# Using Your TV and Remote

## With a Satellite Receiver: Basic Operation

You may also be able to use the TV's remote with satellite receivers. Refer to your *Satellite Receiver owner's manual* to hook up your Satellite Receiver. The remote may need to be programmed for other brands of satellite receivers, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

Follow the instructions below for basic operation of your receiver. You may also want to experiment with other buttons on the remote to see if they work with your receiver.


### Program the remote for your Satellite Receiver

### Turn on the Satellite Receiver

### Turn off the Satellite Receiver

### Satellite Receiver Codes

Chaparral .....	80,81
Cheyenne .....	81
Drake .....	82,83
DSS .....	00
GE .....	00
General Instruments .....	92,93,94
ProScan .....	00
RCA .....	00
Realistic .....	84
Sierra I,II,III .....	81
STS1 .....	85
STS2 .....	86
STS3 .....	87
STS4 .....	88
Toshiba .....	89
Uniden .....	90
Video Cipher II .....	91

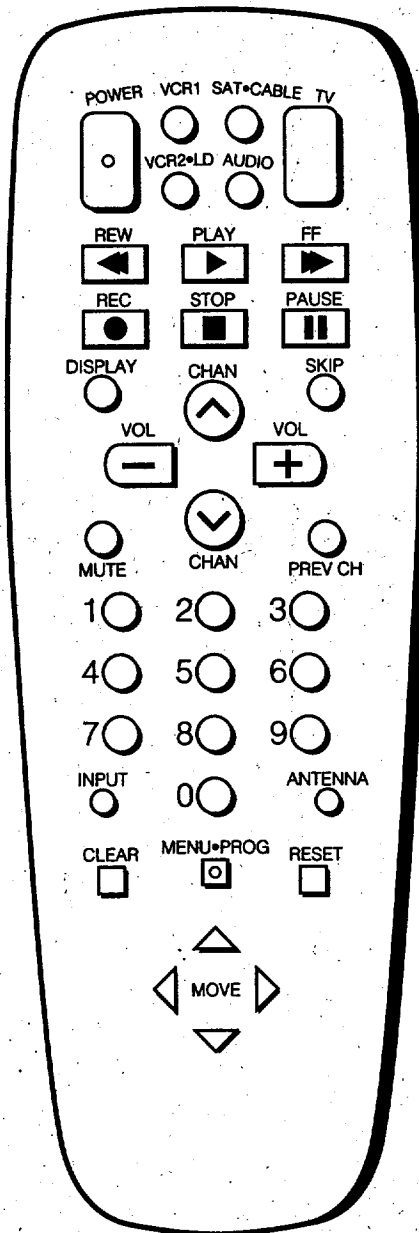

- Point the remote at the satellite receiver and hold SAT•CABLE.
- Enter the code for your brand from the code list below.
- Release SAT•CABLE.
- Press POWER. If nothing happens, try pressing SAT•CABLE and then POWER.

- Press SAT•CABLE to set the remote to control the satellite receiver.
- Press POWER to turn on the receiver if it did not turn on when you pressed SAT•CABLE.


- Press SAT•CABLE to set the remote to control the satellite receiver.
- Press POWER to turn off the receiver.

# Using Your TV and Remote

## With a Cable Box: Programming and Basic Operation

Refer to the Connection Book or contact your cable company to hook up your cable box. If you have a cable box with its own remote, then you may also be able to use the TV's remote with your cable box. This remote may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### Program the remote for your cable box

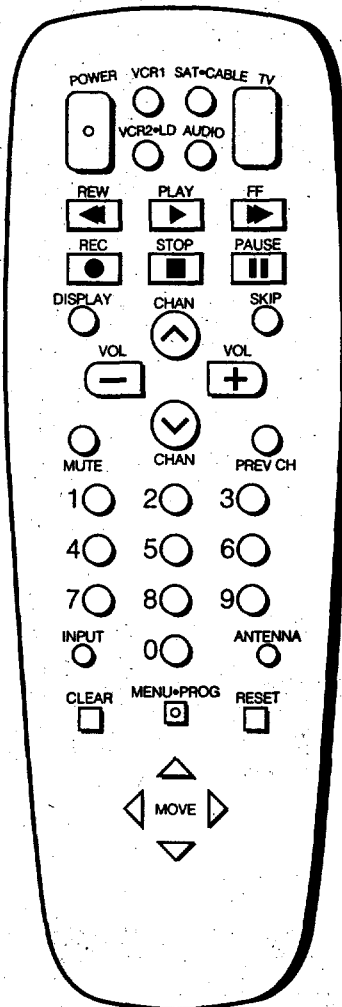

### Basic Operation:

#### Turn on the Cable Box

#### Turn off the Cable Box

- A. Point the remote at the cable box and hold SAT•CABLE.
- B. Enter the code numbers for your brand from the list below.
- C. Release SAT•CABLE.
- D. Press POWER to turn it on. If nothing happens, try pressing SAT•CABLE and then POWER.
- E. Repeat A-D with another code if the first one does not work.

- A. Tune TV to channel 02, 03, 04, 05, or 06—the cable box channel.
- B. Point remote at the cable box and press SAT•CABLE.
- C. Press POWER to turn it on.
- D. Press CHANNEL up or down to change channels on the cable box.

- A. Press SAT•CABLE.
- B. Press POWER to turn it off.

### Cable Box Codes


ABC.....22,46,53,54	NSC.....09	Sprucer.....27
Anvision.....07,08	Oak.....01,16,38	Starcom.....46
Cablestar.....07,08	Oak Sigma.....16	Stargate 2000.....58
Diamond.....56	Panasonic.....03,27,39,61	Sylvania.....11,59
Eagle.....07,08	Philips.....07,08,19,21,26,28,29,32,33,40,41	Teknika.....06
Eastern International.....02	Pioneer.....18,20,44	Texscan.....10,11,59
General Instrument.....46	Randtek.....07,08	Tocom.....17,21,49,50,55
GI 400.....04,05,15,23,24,25,30,36	RCA.....00,27	Unika.....31,32,41
Hamlin.....03,12,13,34,48	Regal.....03,12,13	Universal.....51,52,60
Hitachi.....37,43,46	Regency.....02,33	Viewstar.....07,08,19,21,26,28,29,32,33,40,41
Jerrold.....04,05,15,23,24,25,30,36,45,46,47,62,65	Samsung.....44	Warner Amex.....44
Macom.....37,43	Scientific Atlanta.....03,22,35,63,64	Zerith.....14,42,57,61
Magnavox.....07,08,19,21,26,28,29,32,33,40,41	Signature.....46	

# Using Your TV and Remote

## With a Cable Box: Setting the Cable Channel


The Cable Channel works with SAT•CABLE button on the remote. If the Cable Channel is set, pressing SAT•CABLE selects the channel to see cable channels. The Cable Channel setting depends on which channel your cable box must be on to see cable channels. The channels usually used are 02, 03, 04, 05 or 06. *Consult your cable company for more information.*

### 1. Select the Setup menu

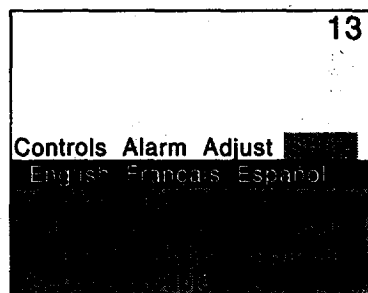


- A. Press TV to set the remote to control the TV.
- B. Press MENU•PROG to select the Setup menu. This menu is white.

### 2. Highlight Cable Channel

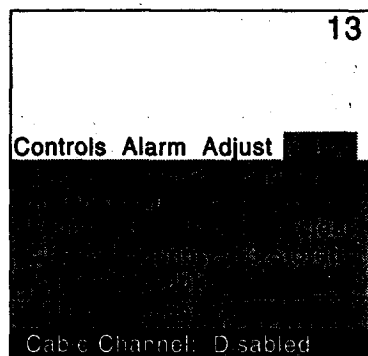

- A. Press MOVE ▼ to move down the menu until Cable Channel is highlighted.
- B. Press MOVE ► to underline the item.

### 3. Enter channel number

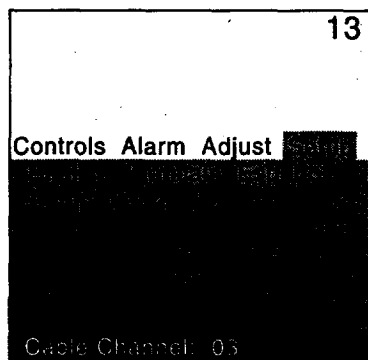

- Enter the number for your cable box, either 02, 03, 04, 05, or 06. Press MOVE ▲ or ▼ until "Disabled" is displayed to turn this feature off.


# Using Your TV and Remote

## With a Laserdisc Player: Programming and Basic Operation

Refer to your Laserdisc Player owner's manual to hook up your Laserdisc Player. The remote may need to be programmed for your laserdisc player, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### Program the remote for your Laserdisc Player

### Basic Operation

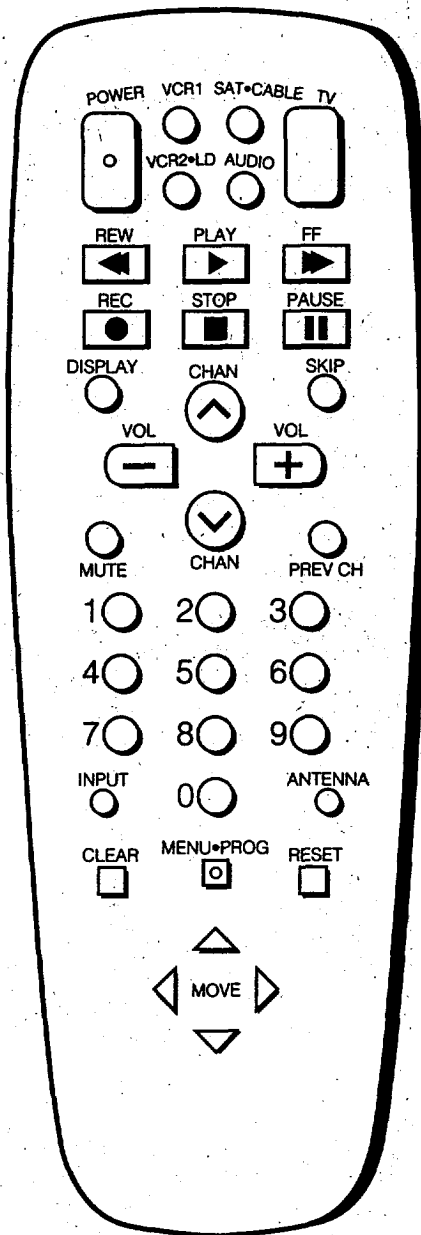

- A. Point the remote at the laserdisc player and hold VCR2•LD.
- B. Enter the code for your brand from the code list below.
- C. Release VCR2•LD.
- D. Press POWER. If nothing happens, try pressing VCR2•LD and then POWER.

- A. Tune TV to channel 00, 03, or 04.
- B. Point the remote at the laserdisc player and press VCR2•LD.
- C. Press POWER to turn it on.
- D. Use the buttons on the remote that relate to laserdisc player functions. Not all buttons highlighted may work with your laserdisc player.
- E. Press POWER to turn it off.

### Laserdisc Player Codes

Pioneer.....	33
ProScan.....	33
RCA.....	33




# Using Your TV and Remote

## With Audio Equipment: Programming and Basic Operation

Refer to the Connection Book or your Audio equipment owner's manual to hook up your audio equipment. Your remote controls some audio equipment such as a radio, CD player, tape player, turntable, or amplifier. The remote may need to be programmed for your equipment, but may not operate all models of the brands listed below. Use the codes below or on the sheet packed in with your remote.

### Program the remote for audio equipment

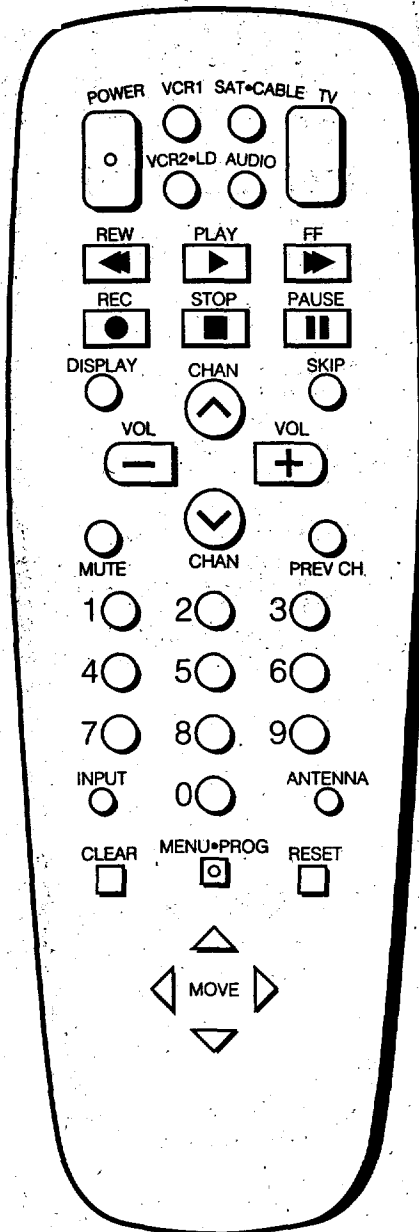

- A. Point the remote at the audio equipment and hold AUDIO.
- B. Enter the code from the code list.
- C. Release AUDIO.
- D. Press POWER to turn it on. If nothing happens, try pressing AUDIO and then POWER.
- E. Repeat A–D with another code if the first one does not work.

### Basic Operation

- A. Point the remote at the audio equipment and hold AUDIO.
- B. Press POWER to turn it on.
- C. Use the buttons on the remote that relate to audio functions. Not all buttons highlighted may work with your equipment.
- D. Turn the audio equipment off using the audio component's power off button.

### Audio Codes


RCA/ Dimensia	
AM/FM.....	03
CD.....	07
Tape.....	06
Phono.....	05
Aux.....	04

# Adjusting Your TV

## Overall Picture


Follow the steps below to lighten or darken the overall picture without changing the color levels.

### 1. Select the Controls Menu

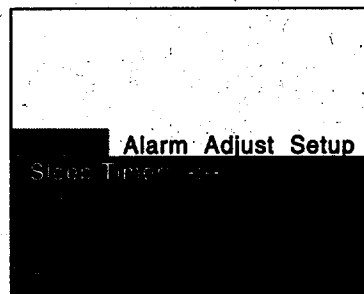


Press MENU•PROG to select the Controls menu. This menu is yellow.

### 2. Highlight Picture

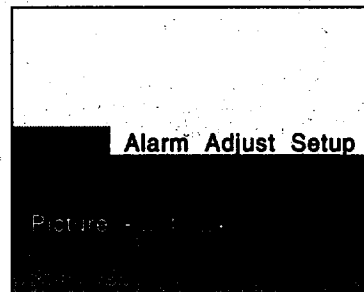

Press MOVE ▼ to highlight Picture.

### 3. Use MOVE ► and ◀ to adjust the Picture

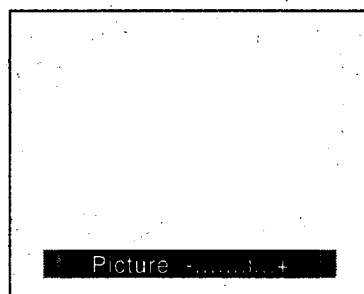

Press MOVE ► to lighten the picture.

OR


Press MOVE ◀ to darken the picture.

# Adjusting Your TV

## Picture Settings

Follow the steps below to change the picture on the screen to your personal setting. The chart at the bottom of the page explains your options.

### 1. Select the Adjust Menu

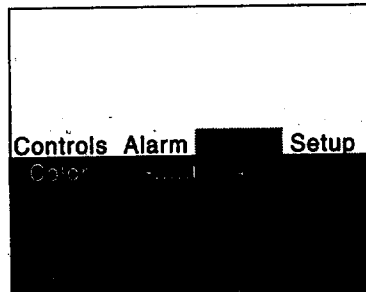


Press MENU•PROG repeatedly to select the Adjust menu. This menu is light blue.

### 2. Highlight item to change

Press MOVE ▼ to highlight the picture item you want to adjust.

### 3. Use MOVE ► or ◀ to adjust each item

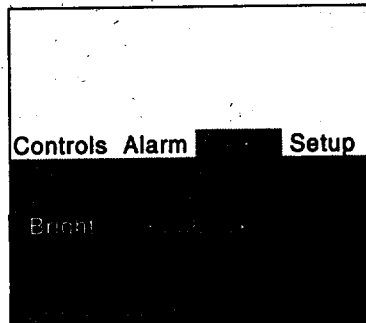

Press MOVE ► or ◀ to adjust each item.


	Press MOVE ► to:	Press MOVE ◀ to:
<b>Color</b>	Increase color richness	Lower color to black and white
<b>Tint</b>	Give red tint to skin color	Give green tint to skin color
<b>Bright (Brightness)</b>	Add more light to dark parts of the picture	Add more dark to light parts of the picture
<b>Sharp (Sharpness)</b>	Show cleaner, clearer images	Make picture more smooth
<b>Autocolor</b>	Turn on to keep Color and Tint in proper balance each time you change channels	Turn off for manual adjustment of Color and Tint
<b>Picture Reset</b>	Reset the picture back to the original settings	Reset the picture back to the original settings

# Adjusting Your TV

## Sound Settings: Stereo, Expanded Stereo, SAP and Tone

Follow these steps to adjust the Stereo, Expanded Stereo, SAP or Tone of your TV. SAP (Second Audio Program) is sometimes used to offer the program being watched in another language. The chart below explains your options.

### 1. Select the Controls Menu

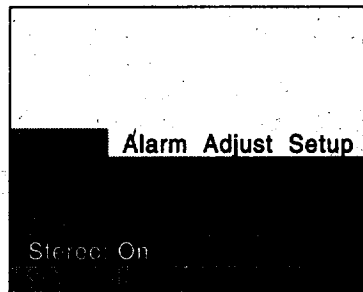


Press MENU•PROG to select the Controls menu. This menu is yellow.

### 2. Highlight item to change

Press MOVE ▼ to highlight the sound item you want to adjust.

### 3. Use MOVE ► or ◀ to adjust each item

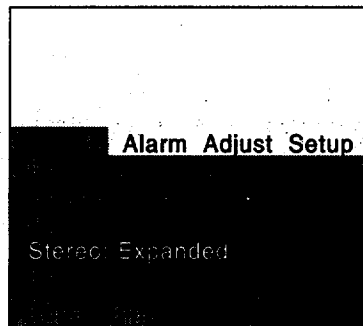

Press MOVE ► or ◀ to adjust each item.


<b>Stereo</b>	<b>On</b> Sound is automatically reproduced in stereo or mono, whichever the TV station is broadcasting.	<b>Off</b> Sound is reproduced in mono.	<b>Expanded</b> Expanded stereo adds greater width and dimension to stereo broadcasts creating a more spacious stereo sound effect.
<b>SAP</b>	<b>On</b> Sound is reproduced in another sound channel. If nothing happens, your broadcast may not have SAP.	<b>Off</b> Sound is reproduced in Stereo, Expanded Stereo or Mono, whichever is selected in the Stereo Menu Item.	
<b>Tone</b>	<b>High</b> High pitched sounds are louder.	<b>Low</b> Low pitched sounds are louder.	

# Adjusting Your TV

## Sound Settings: Speakers


Follow the steps below to turn the speakers on or off in your TV. The chart below explains your options.

### 1. Select the Setup Menu

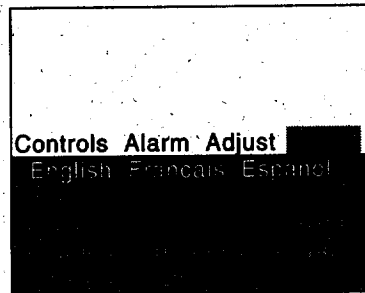


Press MENU•PROG repeatedly to select the Setup menu. This menu is white.

### 2. Highlight speakers

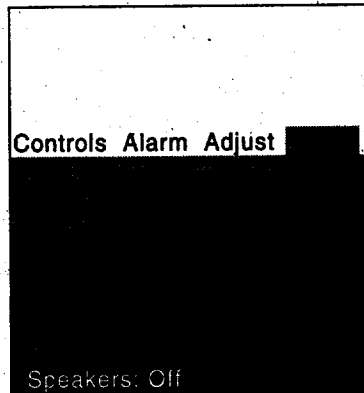

Press MOVE ▼ until Speakers is highlighted.

### 3. Turn Speakers on or off

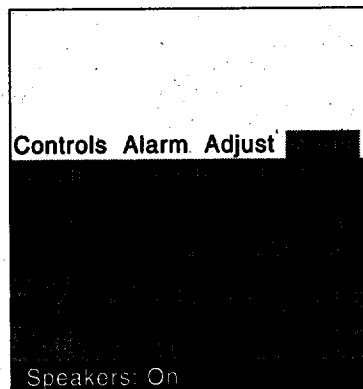

Press MOVE ► or ◀ to turn the speakers on or off.

Speakers	On	Off
	The sound comes from the TV's internal speakers.	No sound comes from the TV.



# Using Advanced Features

## Placing Channels in Memory (Autoprogramming)

Only channels 2-13 appear in the TV's memory when you first turn it on. The channels available in your area must be programmed into the TV's memory when you hook up your TV. Using CHANNEL up and down allows you to scan through these channels.



You may want to add or delete a few channels if some stations have weak signals or were off the air when the TV was programmed. Refer to the *Add or Delete Channels* section below.

### 1. Place channels in memory (Autoprogram)

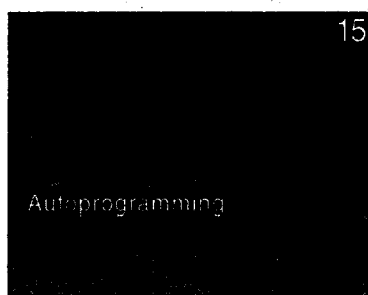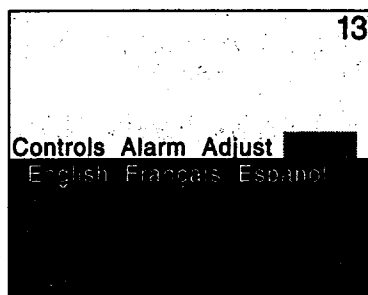

- A. Hook up an antenna, cable or components before you begin these steps or you will not be able to add channels into memory.
- B. Press MENU•PROG repeatedly to select the Setup Menu and highlight Autoprogram. This menu is white.
- C. Press MOVE ▼ to highlight Autoprogram.
- D. Press MOVE ► to start the TV adding all active channels into memory.
- E. Wait until the TV has cycled through all the channels and returns to the original channel.

### 2. Add or delete channels

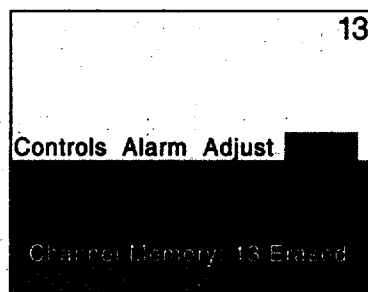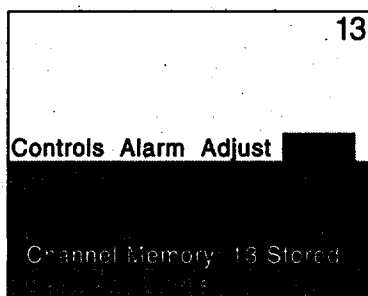



- A. Press MENU•PROG repeatedly to select the Setup menu. This menu is white.
- B. Press MOVE ▼ to highlight Channel Memory.
- C. Press MOVE ► to underline the channel number.
- D. Select the channel number you want to add or delete with the number buttons.
- E. Press MOVE ► to add or delete a channel (you will see Stored on the screen when added and Erased when deleted).
- F. Repeat D and E for more channels.

# Using Advanced Features

## Naming the Channels


You can name at least 20 channels with four characters in each name. Full appears beside Label when the memory is used up. Fixed appears when a channel number cannot be named. Below are the characters that can be used in a name.

### 1. Name a channel

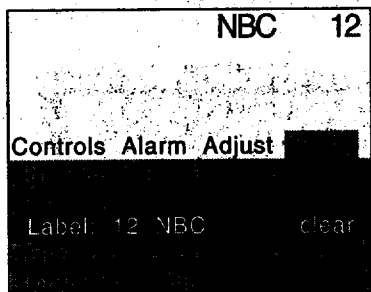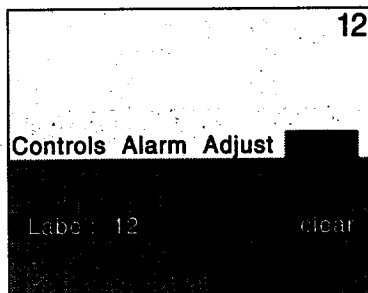

- Press MENU•PROG repeatedly to select the Setup menu. This menu is white.
- Press MOVE ▼ to highlight Label.
- Press MOVE ► to underline the channel number.
- Select the channel number with the number buttons.
- Press MOVE ► to underline the first character of the name.
- Choose the character using MOVE ▲ or ▼.
- Repeat E-F to complete the name.
- Press MOVE ◀ to move backward if you want to change an item.

### 2. Erase a name

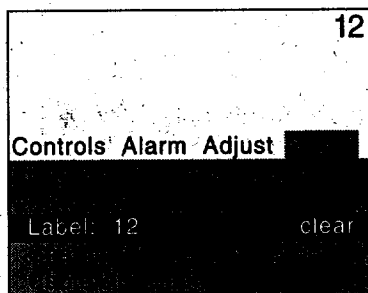

- Follow A and B above.
- Press MOVE ► until clear is underlined.
- Press MOVE ▲ or ▼ to clear the name.

### Character List


A B C D E F G H I J K L M N O P Q R S T U V W X Y Z &  
' ( ) á + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ blank space

# Using Advanced Features

## Setting the Sleep Timer

You can set your TV to turn itself off. If you're watching TV at night and fall asleep, the TV will turn off for you.


### 1. Set Sleep Timer

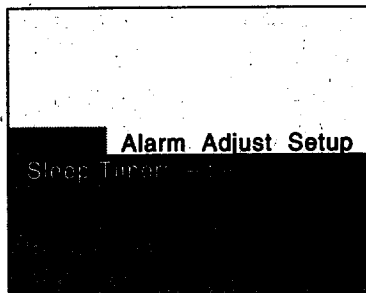


A. Press MENU•PROG to select the Controls menu and highlight Sleep Timer. This menu is yellow.

B. Press MOVE ► to enter the amount of time you want to watch TV before it shuts off. Each press equals 15 minutes.

C. Press MOVE ◀ to subtract time from the sleep timer.

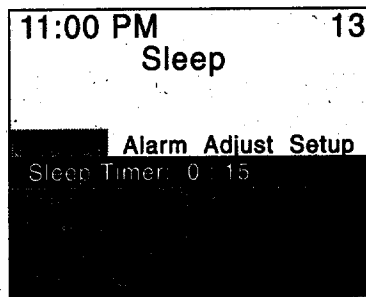


### 2. Add more time

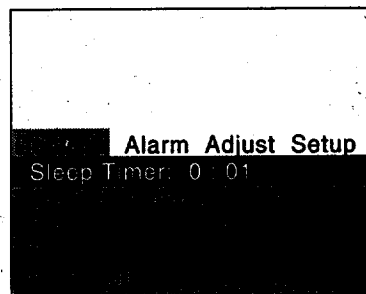

When 0:01 appears on the screen, the TV will shut off in one minute. Press MOVE ► to add more time.

### 3. Cancel the Timer

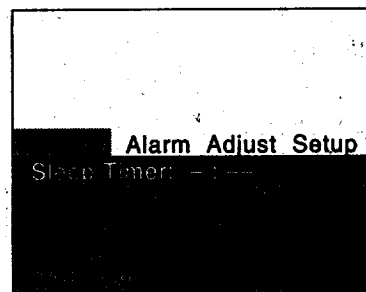

A. Press MENU•PROG to select the Controls menu and highlight Sleep Timer.

B. Press MOVE ◀ until the time reaches -




# Using Advanced Features

## Setting the Alarm Clock


The TV can be set to turn on each day like your alarm clock. You can set it to turn on to your favorite channel at a certain time. You can also set it to turn itself off again. The Alarm cannot be used until the clock is set.

### 1. Turn on the Alarm

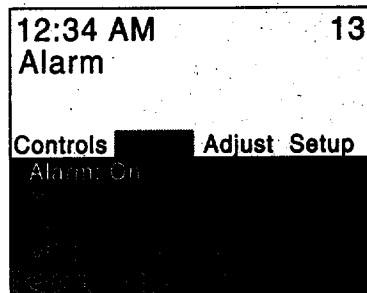


- A. Press MENU•PROG to select the Alarm menu and highlight Alarm. This menu is green.
- B. Press MOVE ► or ◀ to select On or Off.

### 2. Set the Alarm Channel

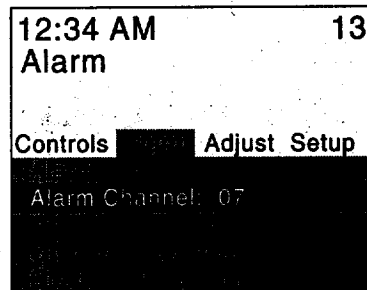


- A. Press MOVE ▼ to highlight the Alarm Channel.
- B. Press MOVE ► to highlight the channel number.
- C. Enter the channel that you want the TV to turn on to with the number buttons.

### 3. Set On and Off Times

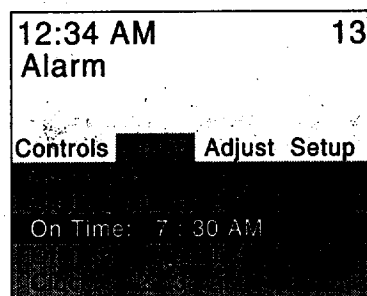

- A. Press MOVE ▼ to highlight the On or Off Time.
- B. Press MOVE ◀ to set the hour.
- C. Press MOVE ► to set the minutes.
- D. Press and hold MOVE ◀ to choose Disabled. This turns the TV only on or only off at a certain time each day.

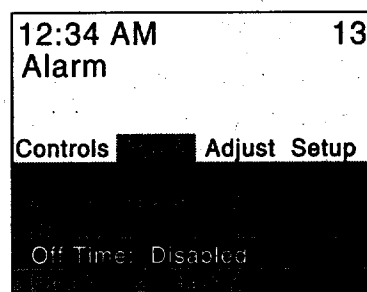


# Using Advanced Features

## Selecting a Language

The on-screen displays in this TV can be displayed in three languages: English, French, and Spanish. When you select a language, most of the displays will be shown on the screen in your preferred language.

### 1. Select the Setup menu

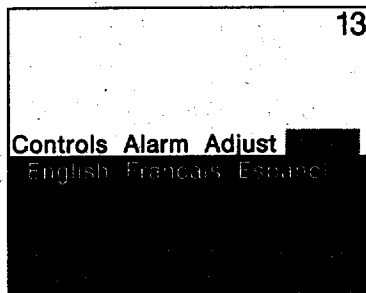

Press MENU•PROG repeatedly to select the Setup menu. This menu is white.


### 2. Select Language

Press MOVE ◀ or ▶ to select English, Français (French), or Español (Spanish).

## Watching Closed Captioning

Closed captioning displays the audio portion of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound. If you have turned Closed Captioning on and it does not appear on the screen, it is not available on the channel you are watching. This TV does not support the text mode. Text information typically consists of program information, weather bulletins, local activities, etc.

### 1. Select the Controls Menu

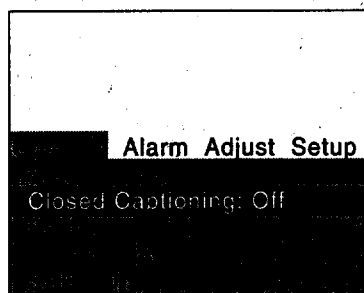


Press MENU•PROG to select the Controls menu. This menu is yellow.

### 2. Highlight Closed Captioning

Press MOVE ▼ to highlight Closed Captioning.

### 3. Select Setting

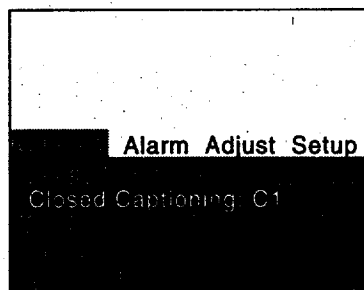


Press MOVE ◀ or ▶ to select Off, C1, or C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

# Using Advanced Features

## Setting Your TV for Antenna or Cable


Your TV automatically adjusts this feature when the TV places channels in memory (Autoprogram). Follow the steps below to change the setting as needed.

### 1. Select the Setup menu

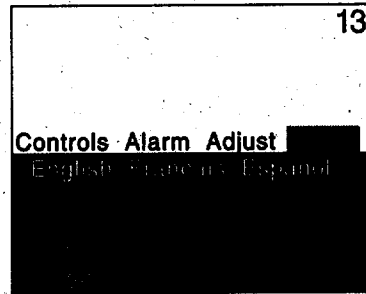


Press MENU•PROG repeatedly to select the Setup menu. This menu is white.

### 2. Highlight Cable/Air

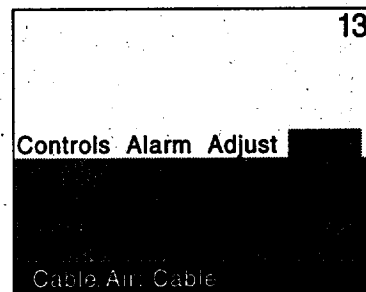

Press MOVE ▼ to highlight Cable/Air.

### 3. Select Cable or Air

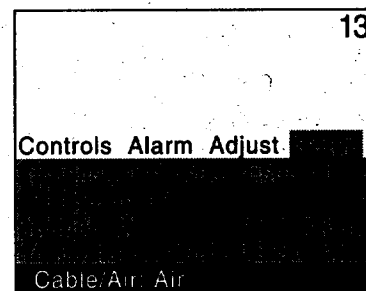


Press MOVE ◀ or ▶ to select Cable or Air. Select Cable if you have cable. Select Air if you have a home antenna connected to your TV.

# References

## Front Panel Buttons

The CHANNEL up and down and VOLUME + and - buttons not only change the channels and volume of the TV, but work like the MOVE buttons when you are in the TV menus. *For details on using buttons with menus, see Menu Basics on page 5.*

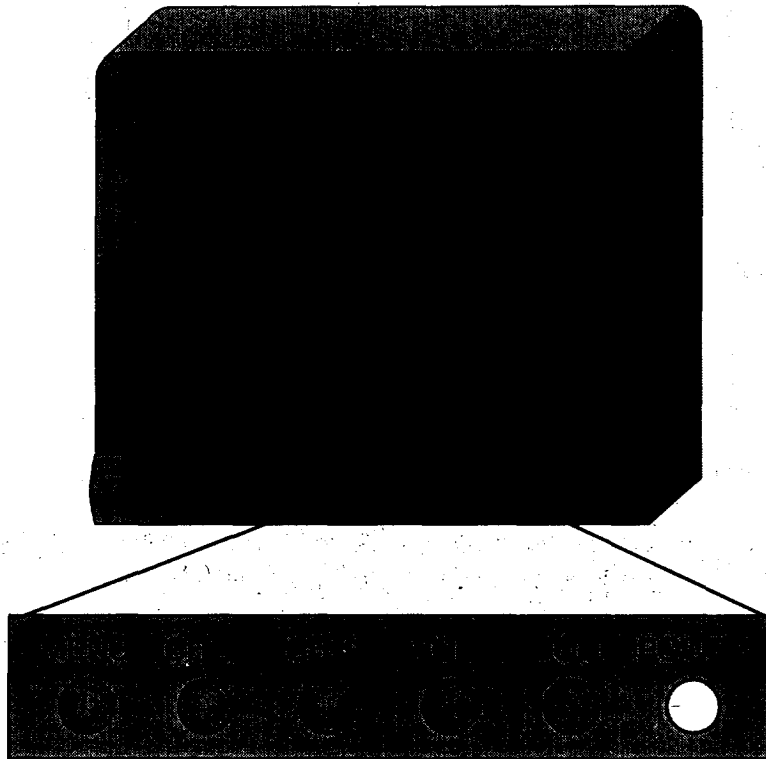

### **MENU**

Shows menus on screen.

Moves from menu to menu.

### **CH ^ and v**

Channel up and down.

Scans up and down through channels in the TV's memory.

Moves up and down menus.

### **VOL + and -**

Volume up and down

Raises and lowers sound.

Moves left and right on a menu line.

Changes a features setting.


### **POWER**

Turns the TV on or off.

# References

## Displays on the Screen

Your TV shows the settings of several features on the screen. To see what features have been set on your TV, press DISPLAY on the remote.

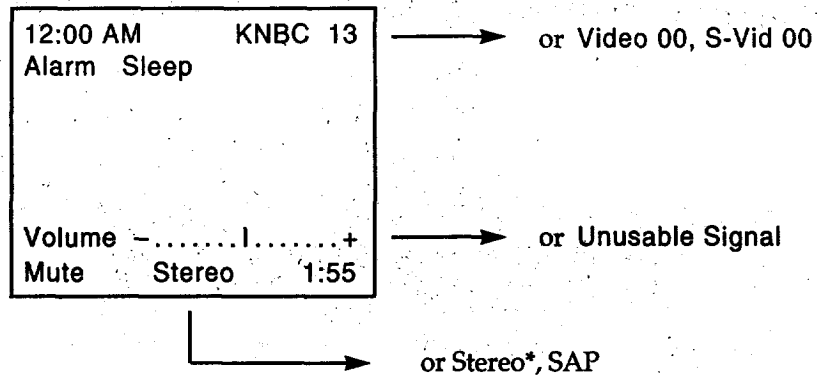

### Screen Display

**12:00 AM**

**KNBC**

**13**

**Video 00**

**S-Vid 00**

**Alarm**

**Sleep**

**Volume**

**Unusable Signal**

**Mute**

**Stereo**

**Stereo\***

**SAP**

**1:55**

### Description

Time of the clock. *Details are on page 3.*

Name you chose to describe the channel. *Details are on page 21.*

Channel number you are watching.

Indicates that a component is connected to the VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Indicates that a component connected to the S-VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.

Alarm clock is set to turn on or off. *Details are on page 23.*

Sleep Timer is set to turn off the TV. *Details are on page 22.*

Sound level of the TV.

No signal is coming in on video input channel 00.

There is no sound. *See MUTE button on page 6.*

The sound is being broadcast in stereo. *Details are on page 18.*

SAP is selected in the menu, but it is not available for the program being broadcast. *Details are on page 18.*

Secondary Audio Program. SAP is selected and it is available for the program being broadcast. *Details are on page 18.*

The time remaining for commercial skip. *Details are on page 6.*

# References

## Trouble Checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again. *For warranty information see page 30.*

### Trouble

### Checks and Adjustments

#### Power

TV will not turn on

Plug TV in.

Plug something else into the outlet to make sure it is working.

Make sure batteries in the remote are not dead.

Aim the remote at the TV and press TV.

Make sure batteries are placed in the remote the right way. *See batteries on page 2.*

Unplug TV for a few minutes and then turn it on again.

No picture, no sound but TV has power

Check antenna connections.

Check position of Cable/Air feature. *See page 27.*

Try another channel. Inactive channel may be tuned.

Make sure component connected to the VIDEO INPUT jacks is turned on if you choose channel 00.

Make sure TV is tuned to the same channel as the switch on back of VCR if watching a VCR.

Make sure TV/VCR button on VCR is in correct position when using VCR.

#### Picture

Blank screen or Unusable Signal appears on screen

Try another channel.

Scan the channels.

Picture poor, sound okay

Check antenna connections.

Adjust TV picture. *See pages 16-17.*

Make sure the component connected to the back of the TV is turned on.

# Reference

## Trouble Checks

### Trouble

### Checks and Adjustments

#### Remote

Remote lockup

Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote and reset it. Re-install the batteries and try remote again.

Buttons don't work when you press them.

Press TV to set the remote to control the TV. *See buttons on page 6-7.*

Works part or none of the time

Clear the path between the remote and TV of any objects.

Aim the remote at the component you are trying to control.

Press TV so remote will control TV.

Make sure batteries in the remote are not dead.

See if batteries are placed in remote correctly. *See batteries, page 2.*

Can't select certain channel

Press number buttons. Channel may not be in memory. *See Autoprogram on page 20.*

Make sure TV/VCR switch on VCR is in the TV position.

For numbers over 100, press and hold 1 until 1-- appears, then press the other two numbers.

Set Cable/Air feature to Cable for channels higher than 69. *See page 25.*

#### Sound

Noisy stereo reception

Turn Stereo off. The stereo broadcast may not be clear. *See page 18.*

Picture okay, no sound

Press VOLUME + or MUTE to restore sound.

Make sure TV speakers are on. *Details are on page 19.*

Picture okay, sound poor

Try another channel.

Try adjusting the Tone. *See page 18.*

Change Stereo to off. The stereo broadcast may not be clear. *See page 18.*

No stereo on stereo station

Make sure Stereo is turned on. *See page 18.*

#### TV Turns on or off

Turns off by itself

Check Sleep Timer. *See sleep timer on page 22.*

Wait 30 seconds and turn on again, a power surge may have occurred.

Check Alarm Off time. *See alarm clock on page 23.*

Turns on by itself

Check Alarm On Time. *See alarm clock on page 23.*

Check clock time. *See clock on page 3.*

Does not turn off at Alarm Time

Make sure alarm is turned on or off. *See alarm clock on page 23.*

Check clock time. *See clock on page 3.*

# References

## Limited Warranty

- What your warranty covers:** Any defect in material or workmanship.
- How long after your purchase:** 90 days for labor charges.  
One year for parts.  
Two years for picture tube.  
The warranty period for rental units begins with the first rental.
- What we will do:** Pay any Authorized GE Television Servicenter the labor charges to repair your television.  
Pay any Authorized GE Television Servicenter for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.
- How you get service:** For screen sizes of 20" and smaller: Take your GE television to any Authorized GE Television Servicenter.  
For screen sizes larger than 20": Request home service from any Authorized GE Television Servicenter.  
To identify your nearest Authorized GE Television Servicenter, ask your Dealer, look in the Yellow Pages, or call 1-800-447-1700.  
Show the service technician your evidence of purchase date.
- What your warranty *does not* cover:** Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your Dealer.)  
Installation and related adjustments.  
Signal reception problems not caused by your television.  
Damage from misuse or neglect.  
Acts of God, such as but not limited to lightning damage.  
Remote control batteries.  
A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.  
A television purchased or serviced outside the USA.
- What to do with the Product Registration Card:** Please complete and mail the Product Registration Card packed with your set. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
- How state law relates to this warranty:** This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
- If you purchased your product outside the United States:** This warranty does not apply. Contact your dealer for warranty information.




# References

## Order Form for Parts

### Remote # 233068

If your TV has the picture-in-picture feature, this is the remote that came packed with your TV. You can use the order form at the right to order it by mail.

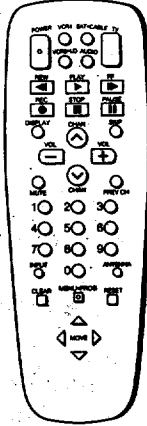

### Cleaner #AH035

To clean your TV cabinet, we recommend Murphy's® Oil Soap or Cleaner #AH035. You **should not** use cleaners such as Windex® with vinegar, Lenox® Furniture Polish spray or Heinz® Cleaning Vinegar to clean your TV cabinet. Using these cleaners will permanently mar the surface of the cabinet. Such damage is not covered under your purchase warranty.

Order Form Book No. 1507683A				
Part	Part Number	Price	Qty	Total
Cleaner	AH035	\$ 6.95		
Remote—CRK84B2	233068	\$39.95		

Total (\$10 Minimum Order) .....	\$ _____
Sales Tax .....	\$ _____
We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.	
Shipping, Handling, and Insurance .....	\$ <u>5.00</u>
Total Amount Enclosed .....	\$ _____

VISA or MasterCard preferred.  
 Money order or check must be in U.S. currency only.  
 No COD or CASH.




Detach Here

All specifications and descriptions of parts are subject to change without notice.


# References

## Order Form for Parts

**USE YOUR CREDIT CARD**

Copy complete account number 

Card expires:

Copy complete account number 

Copy Number above the name  
on your MasterCard

Card expires:

---

**AUTHORIZED SIGNATURE**

Prices are subject to change without notice.

**PLEASE**



Print or type your name and address.  
This will be your mailing label.

A complete and correct order will  
save you days of waiting.

Name: \_\_\_\_\_

Street: \_\_\_\_\_

\_\_\_\_\_ Apt: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_ Zip: \_\_\_\_\_

Make sure that both sides of this  
form have been filled out.

### U.S. and Canadian Orders

#### By Phone:

**1 - 800 - 338 - 0376**

Call this toll-free number between  
8AM and 8PM Eastern Standard Time  
and place your order using your Visa  
or MasterCard. **Use this number  
only to place an order for accessory  
items listed on this order form.**

#### By Mail:

Detach the information at the left and  
mail the payment to Thomson  
Consumer Electronics, Inc., at:

Video Accessories  
PO Box 8419  
Ronks, PA 17573

Most orders are shipped UPS within  
72 hours. If it is not possible to ship  
within 30 days, we will notify you.

**For more current information on  
these accessories, write to the  
following address:**

Video Accessories Customer Service  
Thomson Consumer Electronics, Inc.  
Distributor & Special Products  
2000 Clements Bridge Rd  
Deptford, NJ 08096-2088

### International Orders

This offer is valid only in the U.S. and  
Canada. Send your request for price  
quotation (not orders) to:

International Customer Service  
Thomson Consumer Electronics, Inc.  
Distributor & Special Products  
2000 Clements Bridge Rd  
Deptford, NJ 08096-2088 USA

**Detach Here**

# References

## Index

<b>A</b>	
Adding Channels to Memory.....	20
Adjust Menu	
Autocolor, Bright, Color, Picture	
Reset, Sharpness and Tint.....	17
Adjusting	
Picture/Settings.....	16,17
Sound Settings.....	18,19
Air or Cable Feature.....	27
Alarm Clock/Channel.....	23
Alarm Menu On/Off Time.....	23
Set Clock.....	3
ANTENNA Button.....	7
Antenna.....	27
Audio/Codes.....	7,15,18,19
AUDIO Button.....	7,15
Autocolor.....	17
Autoprogram.....	3,20
<b>C</b>	
CABLE/ANTENNA Jack.....	15
Cable Box/Codes.....	12,13
CABLE Button.....	7,12,13
Cable Channel.....	13
Cable or Air Feature.....	25
Cancelling Sleep Timer.....	22
Cautions.....	i
Channel Label.....	21
Channel Memory.....	3,20
CHANNEL Up/Down Buttons	
Remote.....	4,5,6
TV.....	26
Channels	
Adding/Deleting.....	20
Naming.....	21
Placing in Memory.....	3,20
Checks and Adjustments.....	28-29
Cleaner.....	31
CLEAR Button.....	6,7
Clock, setting.....	3,23
Closed Captioning.....	24
Color.....	17
Colors (Menus).....	5
Commercial Skip.....	6,27
Component Buttons.....	13
Contents.....	1
Controls	
TV Front Panel.....	26
Remote.....	6,7
<b>D</b>	
Delete Channels from Memory.....	20
DISPLAY Button.....	6,23
Displays (On-Screen).....	27
<b>E</b>	
Erase a Name.....	21
Erasing Channels.....	20
Expanded Stereo.....	18

<b>F</b>	
FF/Fast Forward Button.....	7
Front Panel Controls.....	4,26
<b>H</b>	
Hook up TV...Connections Guide	
<b>I</b>	
INPUT Button.....	7
<b>L</b>	
Languages.....	24
Laserdisc Player/Codes.....	14
Laserdisc Player Buttons.....	7,14
<b>M</b>	
Menus/Buttons/Colors.....	4,5
Mono.....	18
MOVE Button.....	2,5,7
MUTE Button.....	6
<b>N</b>	
Naming the Channels.....	21
Number Buttons.....	6
<b>O</b>	
On-Screen Displays.....	27
Order Form for Parts.....	31-32
<b>P</b>	
PAUSE Button.....	7,8,14
Picture.....	16,17
Adjustments/Settings.....	16,17
Picture Reset.....	17
Picture Tilt.....	3
Place Channels in Memory.....	3,20
PLAY Button.....	7,8,14,15
Plug in TV.....	2
POWER Button.....	2,6
PREV CH Button.....	6
Problem Solving.....	28-29
<b>R</b>	
REC/Record Button.....	7,15
References.....	26-33
Registration Card.....	i
Remote Control	
Batteries.....	2
Buttons.....	6,7
Order Form.....	31-32
Tour.....	4
With Components.....	7,8-15
RESET Button.....	6
REW/Rewind Button.....	7,8,14,15
<b>S</b>	
S-Vid 00 Display.....	27
Safety Information.....	i
SAP.....	18
Satellite Receiver.....	11

Service.....	30
Set Clock.....	3
Set Time.....	3
Setting Cable/Air.....	25
Setting the Cable Channel.....	12
Setting the Sleep Timer.....	22
Sharpness.....	17
SKIP.....	6
Sleep Timer.....	22
Sharpness.....	17
Sound/Speakers.....	18,19
Startup.....	2,3
Stereo.....	18
STOP Button.....	7,8,15
<b>T</b>	
Table of Contents.....	1
Time	
Alarm.....	23
Clock.....	3
Sleep Timer.....	22
Tilted Picture.....	3
Tint.....	17
Tone.....	18
Tour of the Remote.....	4
Trouble Checks.....	28-29
TV	
Buttons.....	4,6,26
Guide to.....	2,3,4
TV Button.....	3,4,6
<b>U</b>	
Unusable Signal Display.....	27
Using Advanced Features.....	20-25
Naming the Channels.....	21
Place Channels in Memory.....	20
Setting Cable or Air.....	25
Setting the Alarm Clock.....	23
Setting the Sleep Timer.....	22
Watching Closed Captioning.....	24
Using the Remote	
Audio Equipment.....	15
Laserdisc Player.....	14
Cable Box.....	12,13
VCR.....	8,9,10
<b>V</b>	
VCR	
Turn on/off.....	10
Record /watch a tape.....	10
VCR Buttons/Codes.....	7,8,9,10
VCR 1 Channel.....	8
VIDEO 00 Display.....	27
VOL + and - Buttons	
Remote.....	4,6
TV.....	26
<b>W</b>	
Warning.....	
Warranty.....	30



## CREATING A GREENER FUTURE

At Thomson Consumer Electronics we are dedicated to the preservation of our natural heritage and to a healthy and safe way of life for current and future generations. This is a global effort which encompasses every THOMSON facility throughout the world.

We believe that clean air, clean water, a protected earth, and healthy people are not only practical and desirable goals, but achievable ones as well. Our Corporate Environmental, Health and Safety Charter acknowledges our commitment to protect these precious assets and provides a challenging vision and guideline for conducting our business.

### THOMSON CONSUMER ELECTRONICS

Below are a few examples of Thomson's achievements in our efforts to preserve our natural resources.

### THE EARTH

Thomson reclaims millions of pounds of hazardous waste annually, diverting it from landfills.

Thomson treats millions of pounds of waste water sludge annually and renders it non-hazardous.

Thomson recycles over 50 million pounds of non-hazardous material annually that otherwise would have been treated as trash, an overall recovery rate of 50%.

Thomson globally recycles millions of pounds of broken television picture tube glass annually through both internal and external reclaim processes.

Thomson has also increased its usage of recycled materials for packaging of our products. For example, in the U.S. and Mexico our television plants use recycled content in our television cartons and instruction booklets. The inks used for the print on cartons and instruction booklets are soy based. For a free brochure regarding Thomson's Environmental Health and Safety Programs, write to Thomson Consumer Electronics' address below, attention Environmental Programs: INH340.

### THE AIR

Thomson has replaced solvent-based paints at many locations resulting in an 80% reduction in toxic air emissions for equivalent material used.

Thomson has eliminated the use of ozone-depleting substances at television manufacturing facilities around the world.

Thomson collects and returns over 1.5 million pounds of glass and furnace dust to the glass making process annually.

Thomson has launched worldwide energy savings programs which contribute to efforts to reduce air emissions from electrical generating facilities.

### THE WATER

Thomson recovers over 2 million pounds of fine glass particles from process water each year and recycles them back into its glass furnaces.

Thomson's state-of-the-art waste water treatment plants filter out over 26 million pounds of solids from process water each year.

Thomson's U.S. glass factory recycles 2,500 gallons of water per minute and cleans 2.6 million gallons of water per day.

Thomson is researching new processes and is developing new manufacturing equipment and technologies to further reduce large volume water use.

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

### THOMSON CONSUMER ELECTRONICS

10330 North Meridian Street  
Indianapolis, IN 46290

©1996 Thomson Consumer Electronics, Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Printed in USA  
TOCOM\*1507683A

The following materials were used in printing this publication:



**100%**  
Recycled Paper  
Minimum 50% Post Consumer

